

Adult Malibu - 3+2 Wardrobe

Assembly Instructions - Please keep for future reference

553/2724

555/9518

543/5041

560/9712

558/3924


531/3637

555/3057

544/0366

555/8722

557/1730

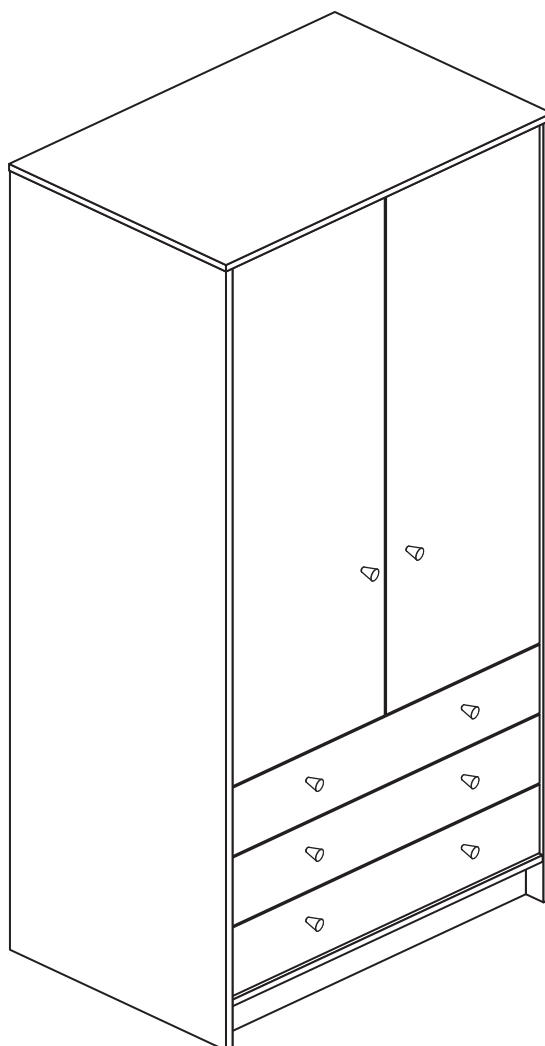

More help is available throughout this booklet by scanning
in the QR codes or typing in the links

Dimensions

Width - 74.8cm

Depth - 49.8cm

Height - 180.5cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Safety and Care Advice






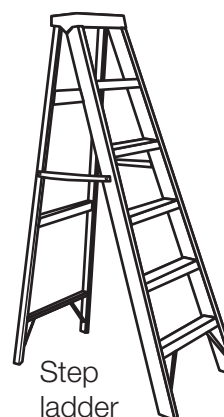




Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 50kgs. Please lift with care.
 - Check you have all the components and tools listed on pages 1 to 4.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Parts of the assembly will be easier with 2 people.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
 - We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- **Safety note:** To prevent possible overbalancing this unit **must be secured** to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
 - Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

 Rule	 Spirit level	 Eye protection (when using a hammer or drill)	 Cross-head screwdriver	 Electric drill (only use when drilling into walls)	 Step ladder
 Square	 Scissors	 Hammer	 Bradawl		

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below


When applicable, remove any protective film before use

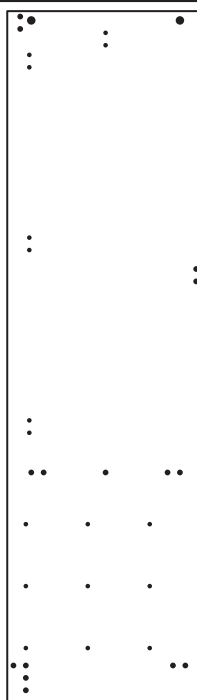

1 Left Side (DF6010)
(179 x 49.6cm)

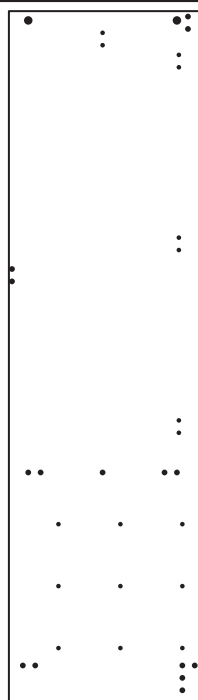

2 Right Side (DF6011)
(179 x 49.6cm)

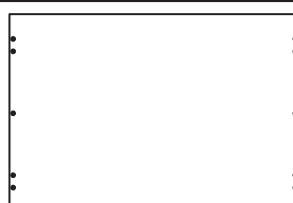


3 Top (DF6014)
(74.8 x 49.8cm)



4 Horizontal (DF5862)
(71.4 x 47.2cm)



5 Hanging Rail (FHR708)
(70.8cm long)



6 Plinth (DF5856)
(71.4 x 9.2cm) x 2




7 Cross Rail (DF5858)
(71.4 x 6cm) x 2



8 Back Rail (DF5866)
(71.4 x 9.2cm)



9 Drawer Front (DF5996)
(70.8 x 15.7cm) x 3



10 Drawer Back (WB665-130)
(66.5 x 13cm) x 3



11 Left Drawer Side (WB450-130LH)
(45 x 13cm) x 3




12 Right Drawer Side (WB450-130RH)
(45 x 13cm) x 3




13 Drawer Base (T676-447)
(67.6 x 44.7cm) x 3



14 Left Door (DF6012)
(119.6 x 35.25cm)

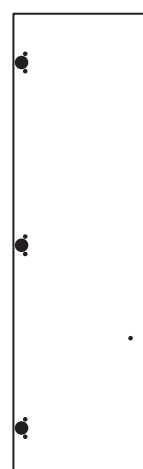

15 Right Door (DF6013)
(119.6 x 35.25cm)

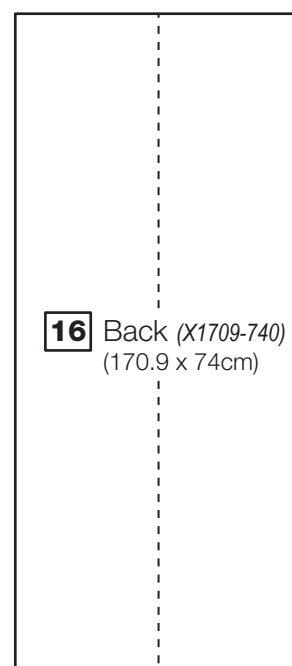

16 Back (X1709-740)
(170.9 x 74cm)



Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)







Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020












Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


Drawer Fittings Bag marked 'drw kit'

A  Quickfit dowel (F545) x 6	B  Large locking cam nut (F607) x 6	C  Knock-in Peg (F171GY) x 12
D  19mm Screw (F461) x 6	E  13mm Screw (F79) x 6	F  13mm Screw (F63) x 12

Main Fittings Bag

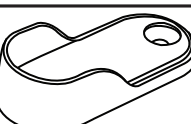A  Quickfit dowel (F545) x 14	B  Small locking cam nut (F607) x 14	D  19mm Screw (F461) x 2
F  13mm Screw (F63) x 6	G  13mm Screw (F52) x 4	H  9mm Screw (F73) x 18
I  Nail (F51) x 34	J  Plastic Nail (F91) x 5	K  Rail Holder (F891) x 2
L  Door Buffer (F137) x 4	M  Wooden dowel (F22) x 26	

Ruler - Use this ruler to help correctly identify the screws

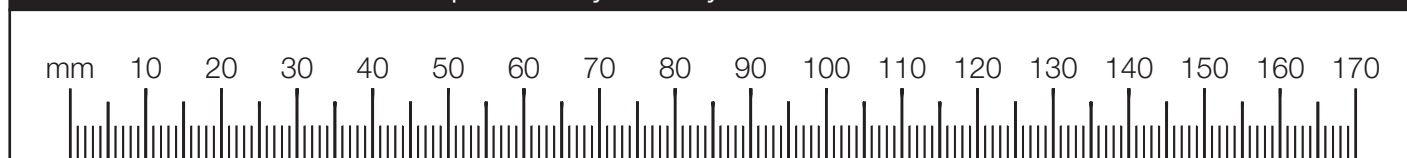

Components - Fittings


Individual Fittings Bags

N




Overbalance protector
kit (F474) x 1

O

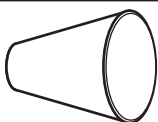

Handle (F418) x 8

P

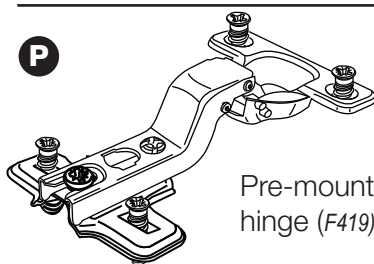


Pre-mounted
hinge (F419) x 6

Q



Drawer Brace (F427) x 3

R a



CL Runner (F608) x 3

R b



CR Runner (F609) x 3

R c



DL Runner (F610) x 3

R d



DR Runner (F611) x 3

Assembly Instructions

Step 1

Prepare the drawer sides

a: Insert a large locking cam nut **B** into the left drawer sides **11** and the right drawer sides **12**.

Note: The arrow on the locking cam nut **must** point towards the hole in the end of the panel.

b: Push 1 of the quickfit dowels **A** as far as it will go into the 6 left drawer sides **11** and the 6 right drawer sides **12**.


Note: Only the plastic thread of the quickfit dowel sticks out from the panel.

Use the Drawer Fittings Bag marked 'drw kit' for Steps 1 - 7



Standard Drawer Box Assembly

<https://www.youtube.com/watch?v=HclfJdkm-Lg>

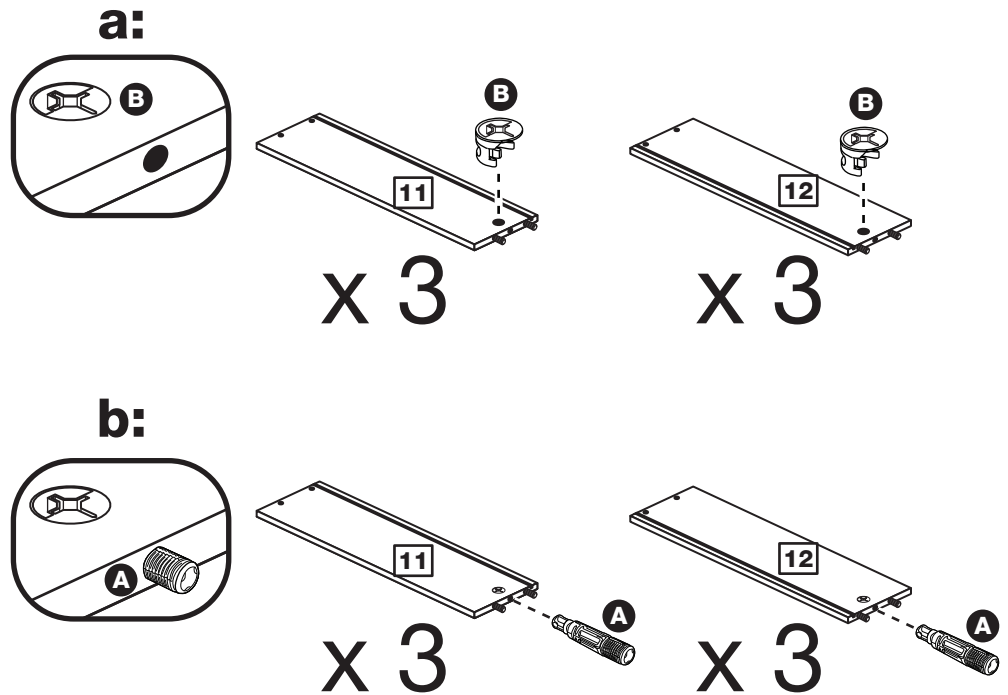


Step 2

Fit the drawer sides to the 3 drawer fronts

Push the left drawer sides **11** and right drawer sides **12** down onto the back of the 3 drawer fronts **9**.

Turn the large locking cam nuts **B** clockwise as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

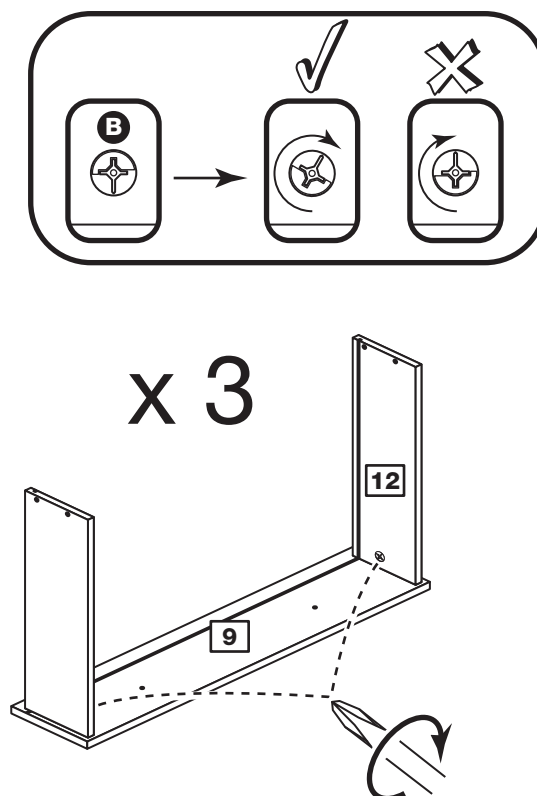


Assembly Instructions

Step 3

Fit the drawer bases

Slide a drawer base **13** down the grooves in the drawer sides **11** and **12** and down into the groove in the drawer front **9**.

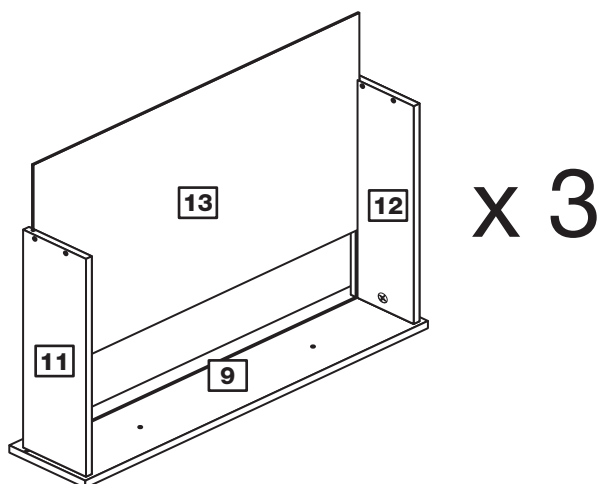


Step 4

Fit the drawer backs

Fit a drawer back **10** between the drawer sides **11** and **12**.

Make sure that the drawer base **13** fits into the groove in the drawer back **10**.


Hold the drawer back **10** in position and tap the knock-in pegs **C** through the holes in the drawer sides **11** and **12**.

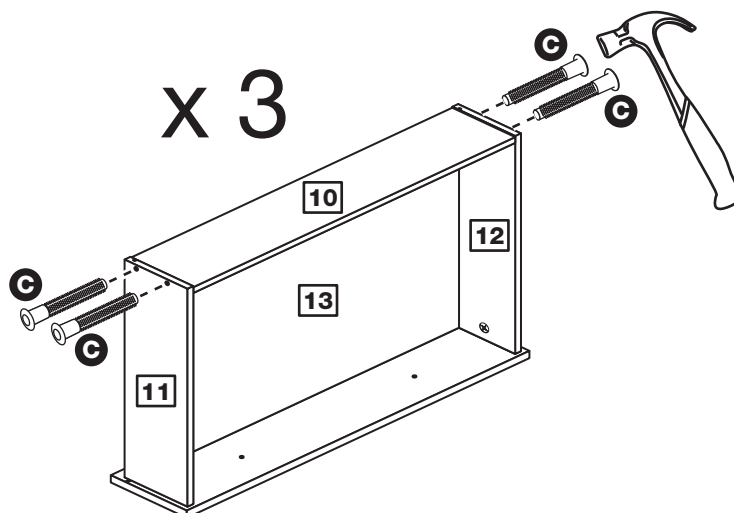

Step 5

Fit the handles

Attach 2 handles **O** to each drawer front **9** using screws **D**.

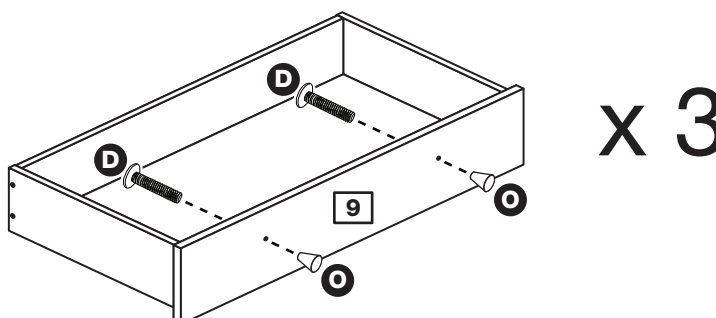


Assembly Instructions

Step 6

Fit the drawer braces

Turn the 3 drawer assemblies over and hook a drawer brace **Q** onto the bottom edge of the drawer back **10**.

Fix it to the drawer front and drawer back using 2 screws **E**.

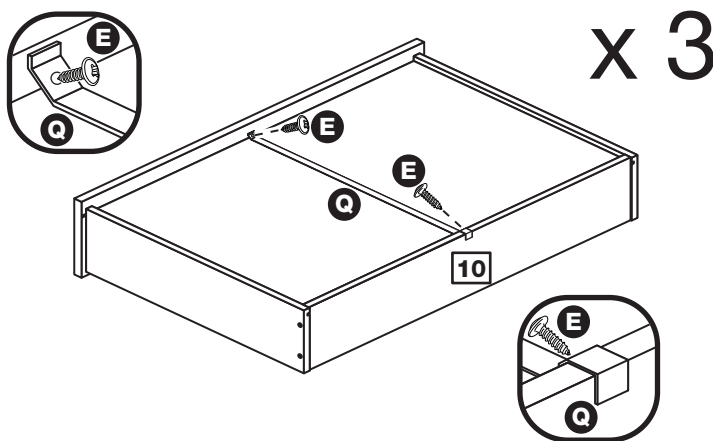

Step 7

Fit runners to the drawers

Fit the DL runner **Rc** to the bottom edge of the left drawer side **11**, as shown, making sure that it is pushed up against the back of the drawer front **9**. Use a bradawl to mark the fixing positions, then secure with 2 screws **F**.


Fit the DR runner **Rd** to the bottom edge of the right drawer side **12** using the same method.



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

Runners must be pushed up against the drawer front

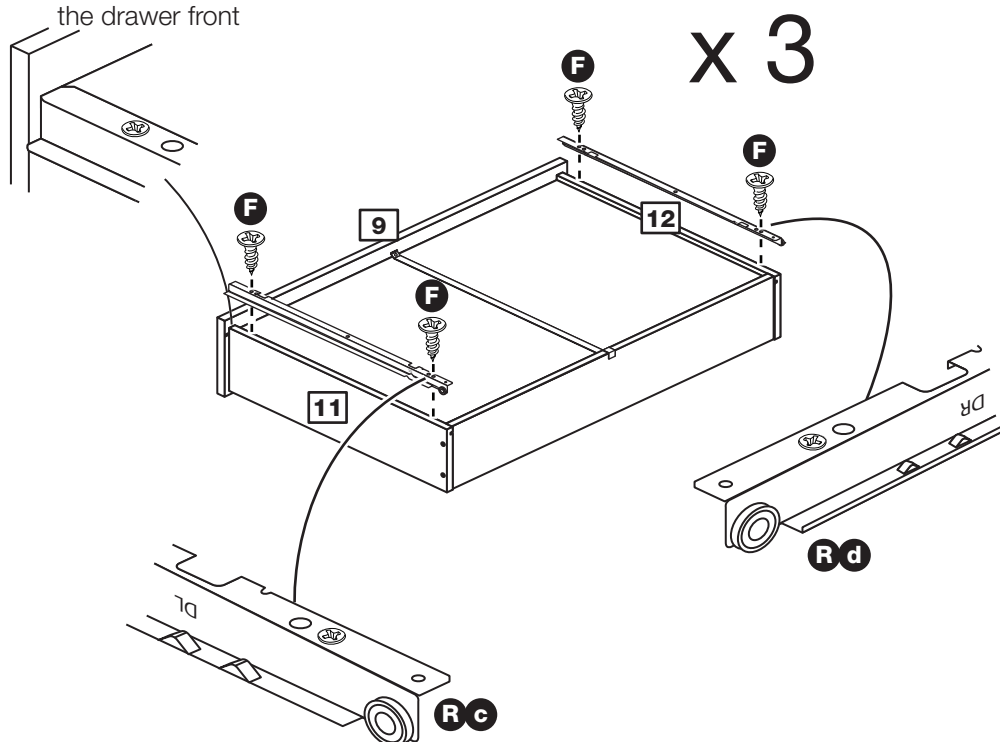

Assembly Instructions

Step 8

Prepare the left side

a: Fit 3 CL runners **R a** to the left side **1**.

The 1st screw **H** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

b: Fit a screw **F** into the hole at the top of the runner **R a**.

Fit a rail holder **K**, to the left side **1** using 2 screws **G**.

c: Insert 2 large locking cam nuts **B** into the left side **1**.

Push 2 of the quickfit dowels **A** as far as they will go into the left side **1**.

Tap 3 wooden dowels **M** into the left side **1**.






Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Use the Main Fittings Bag for Steps 8 - end



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

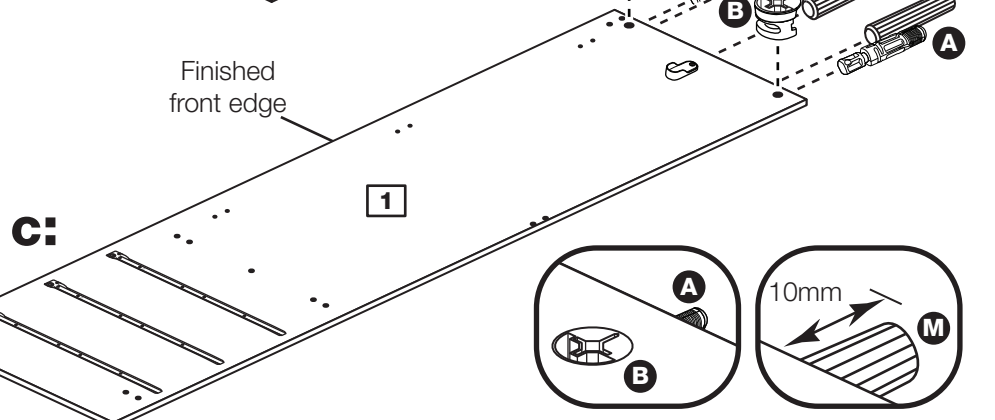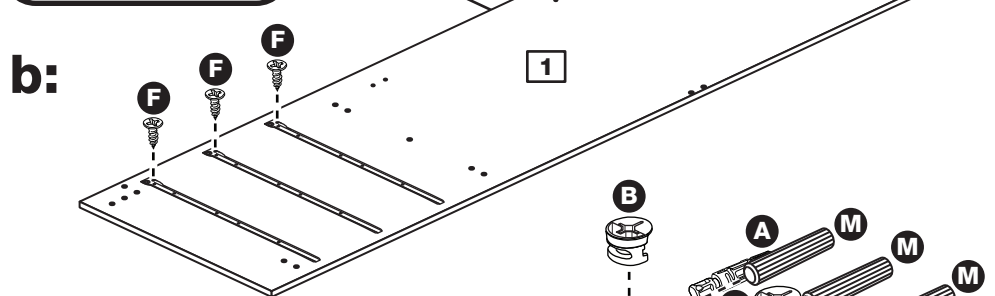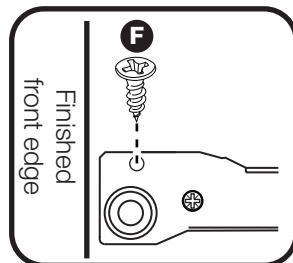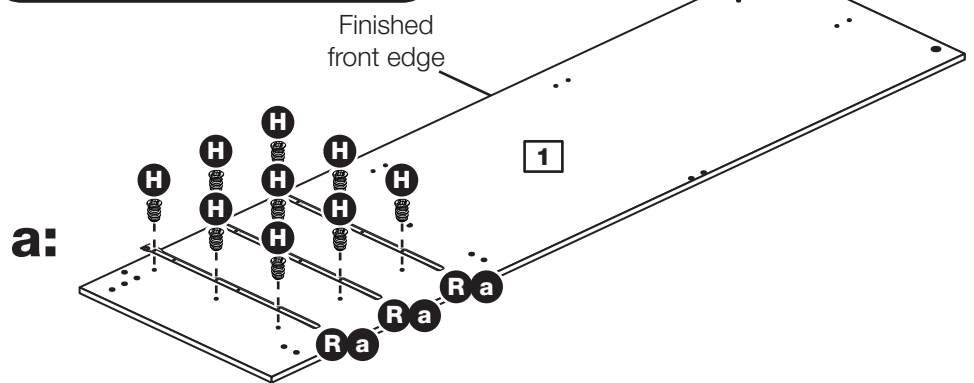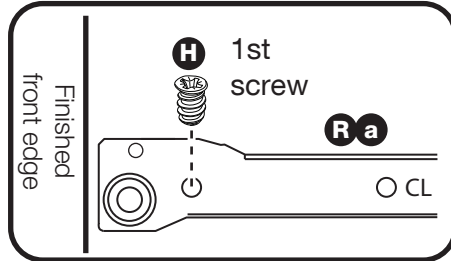

Assembly Instructions

Step 9

Prepare the right side

a: Fit 3 CR runners **R b** to the right side **2**.

The 1st screw **H** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.







b: Fit a screw **F** into the hole at the top of the runner **R b**.

Fit a rail holder **K**, to the right side **2** using 2 screws **G**.

c: Insert 2 large locking cam nuts **B** into the right side **2**.

Push 2 of the quickfit dowels **A** as far as they will go into the right side **2**.

Tap 3 wooden dowels **M** into the right side **2**.

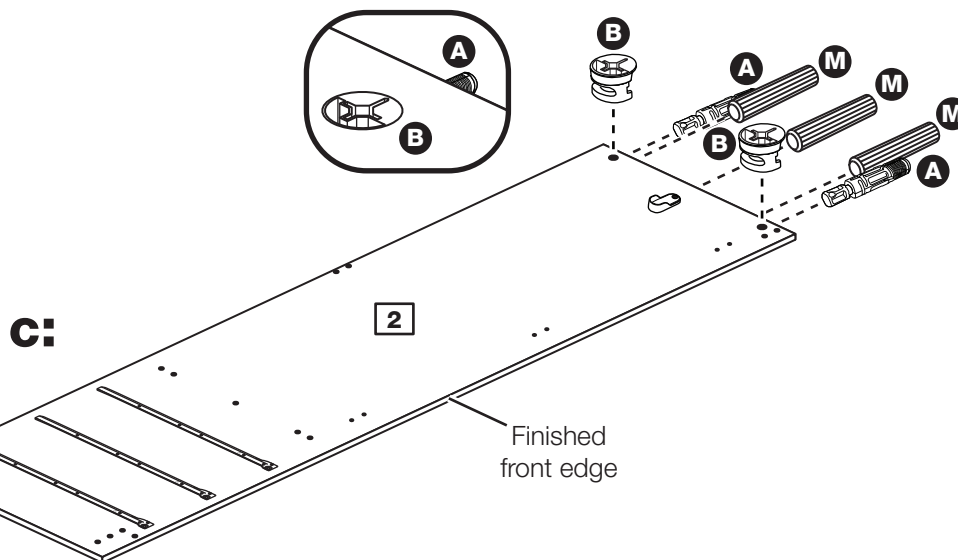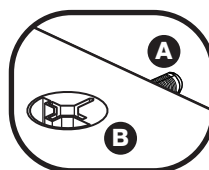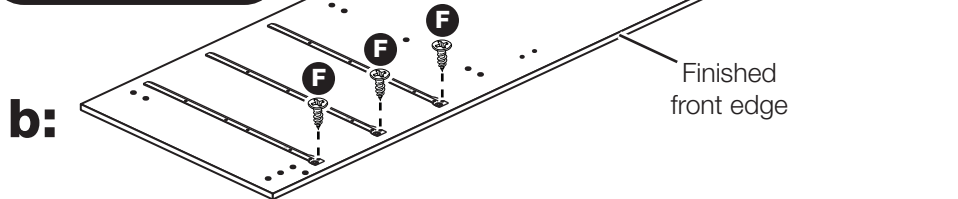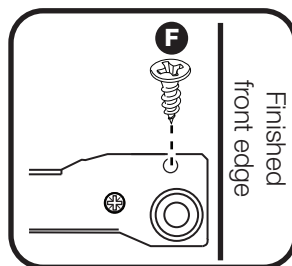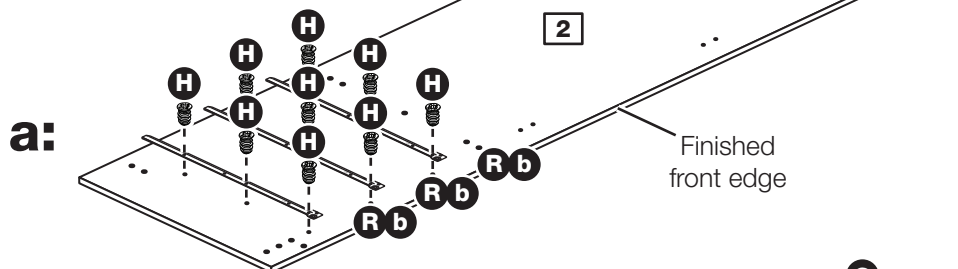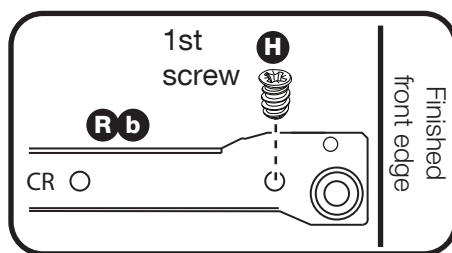

Assembly Instructions


Step 10

Prepare the horizontal

Insert 4 large locking cam nuts **B** into the horizontal **4**.

Push 4 of the quickfit dowels **A** as far as they will go into the horizontal **4**.

Tap 6 wooden dowels **M** into the horizontal **4**.

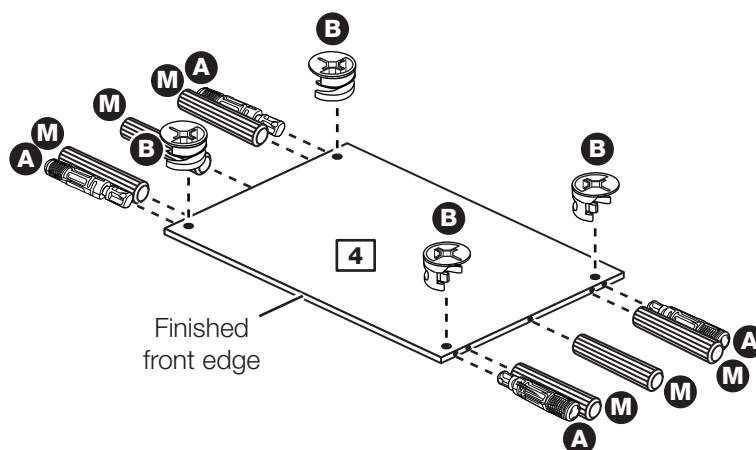

Step 11

Fit the horizontal to the right side

Push the horizontal **4** onto the right side **2**.


Turn the 2 large locking cam nuts **B** clockwise as far as it will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.



Carcase Assembly


<https://www.youtube.com/watch?v=9C7tgV5xnBE>

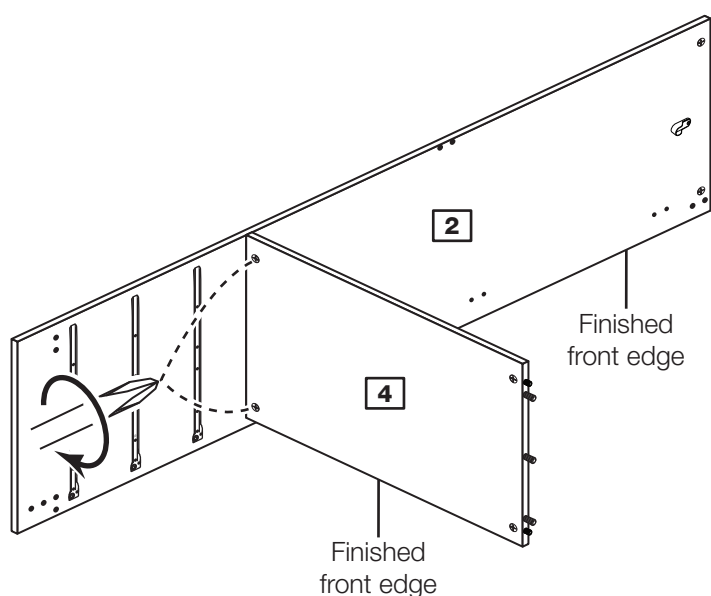

Step 12

Prepare the 2 cross rails

Tap 4 wooden dowels **M** into each of the 2 cross rails **7**.

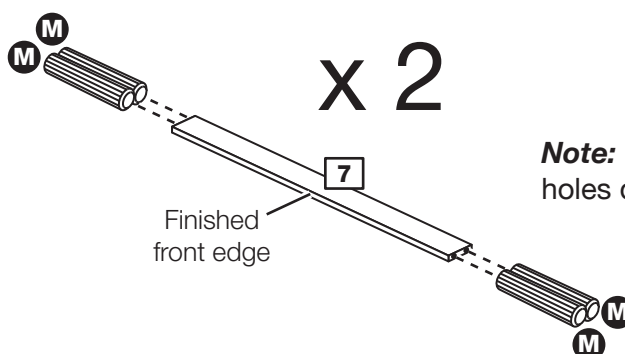


Note: The cross rails have no holes drilled on either surface

Assembly Instructions

Step 13

Fit the 2 cross rails to the right side

Push the 2 cross rails **7** onto the right side **2** as shown.

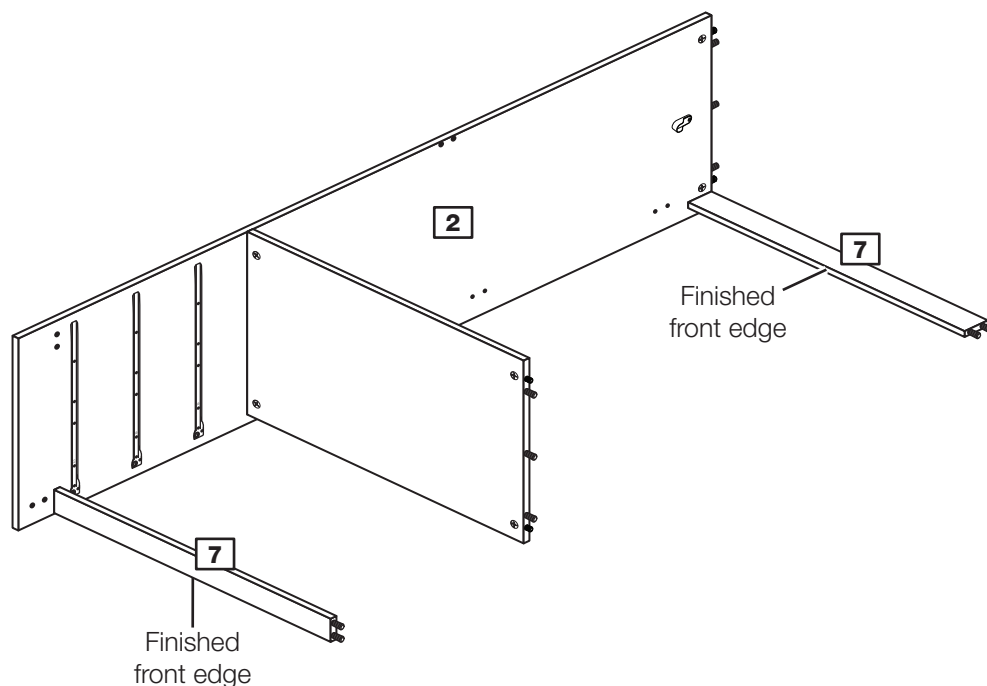


Step 14

Prepare the 2 plinths and the back rail


Insert 2 large locking cam nuts **B** into the each of the 2 plinths **6** and the back rail **8**.

Push 2 of the quickfit dowels **A** as far as they will go into the each of the 2 plinths **6** and the back rail **8**.

Tap 2 wooden dowels **M** into the each of the 2 plinths **6** and the back rail **8**.

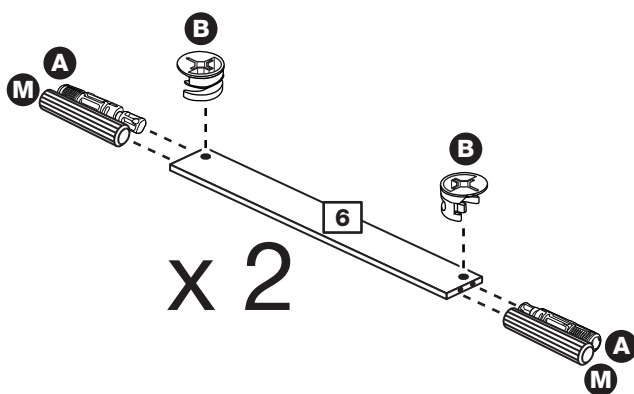

Note: The 2 plinths and the back rail are similar but, the back rail has a finished top edge

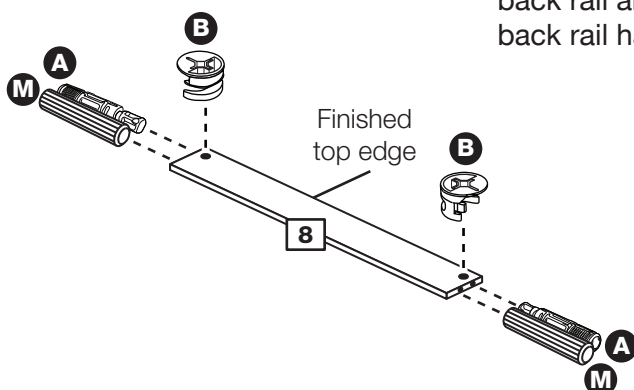

Assembly Instructions


Step 15

Fit the 2 plinths and the back rail

Push the 2 plinths **6** and the back rail **8** onto the right side **2**.

Turn the 3 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

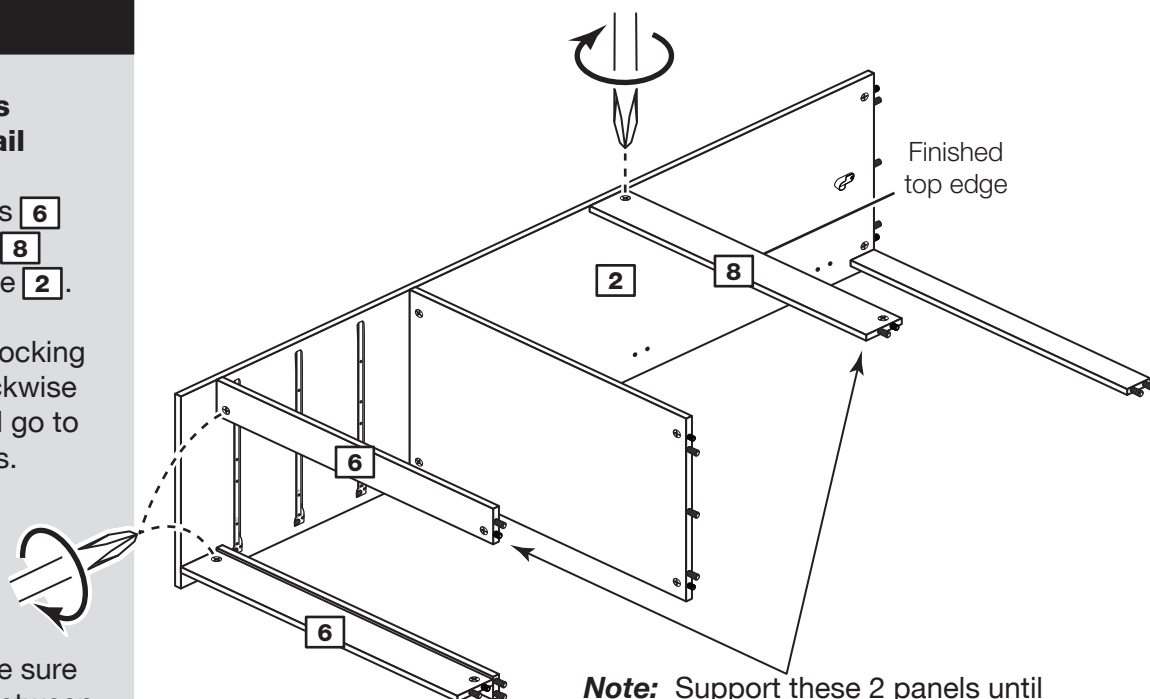


Step 16

Fit the left side

Push the left side **1** onto the assembly.

Turn the 5 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

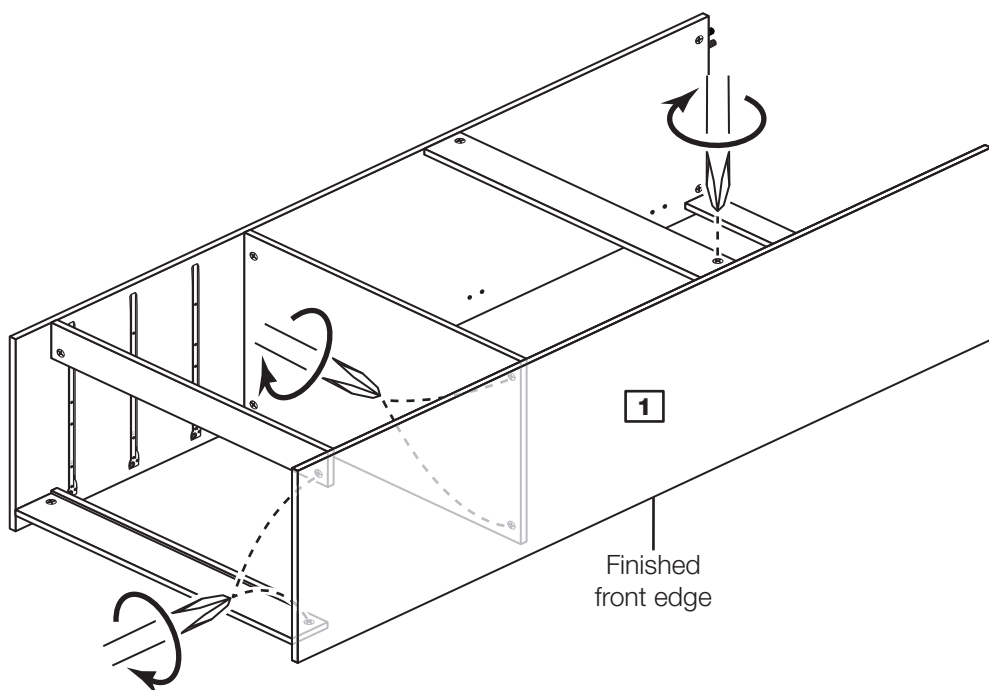

Assembly Instructions


Step 17

Fit the top

Push the top **3** onto the assembly.

Turn the 4 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

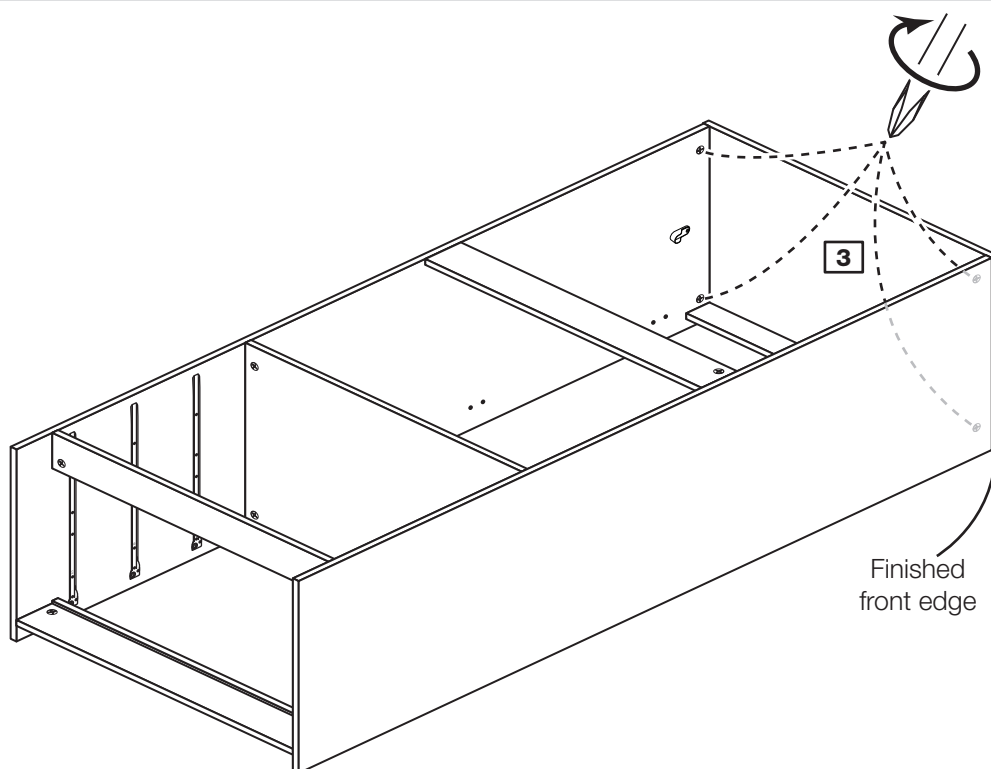

Step 18

Fit the back

a: Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

b: Place the back **16** onto the unit.

Nail **1** around the outside edges of the back **16**.



Note: Nails should be spaced about 150mm apart.



Squaring up a Robe and fitting the Back Panel

www.youtube.com/watch?v=udEKmXmPEW0

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

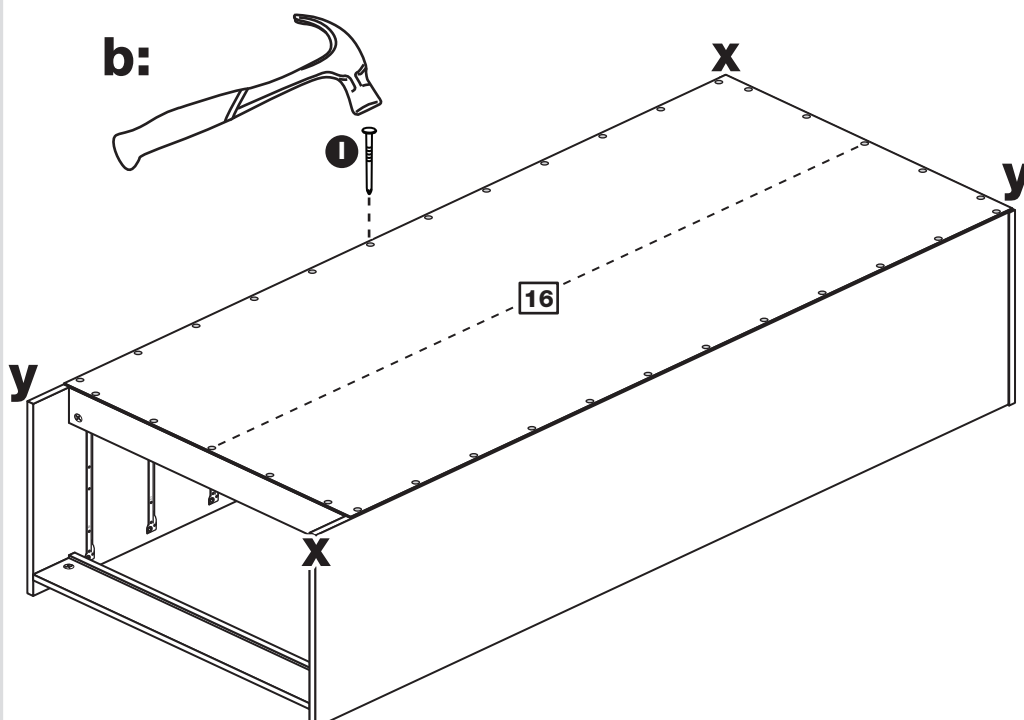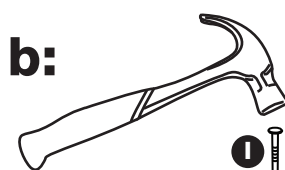


Assembly Instructions

Step 19

Fit the 5 plastic nails

Tap 2 plastic nails **J** into the bottom edge of each side **1** and **2**.

Tap the remaining plastic nail **J** into the bottom edge of the plinth **6** at the front of the unit.

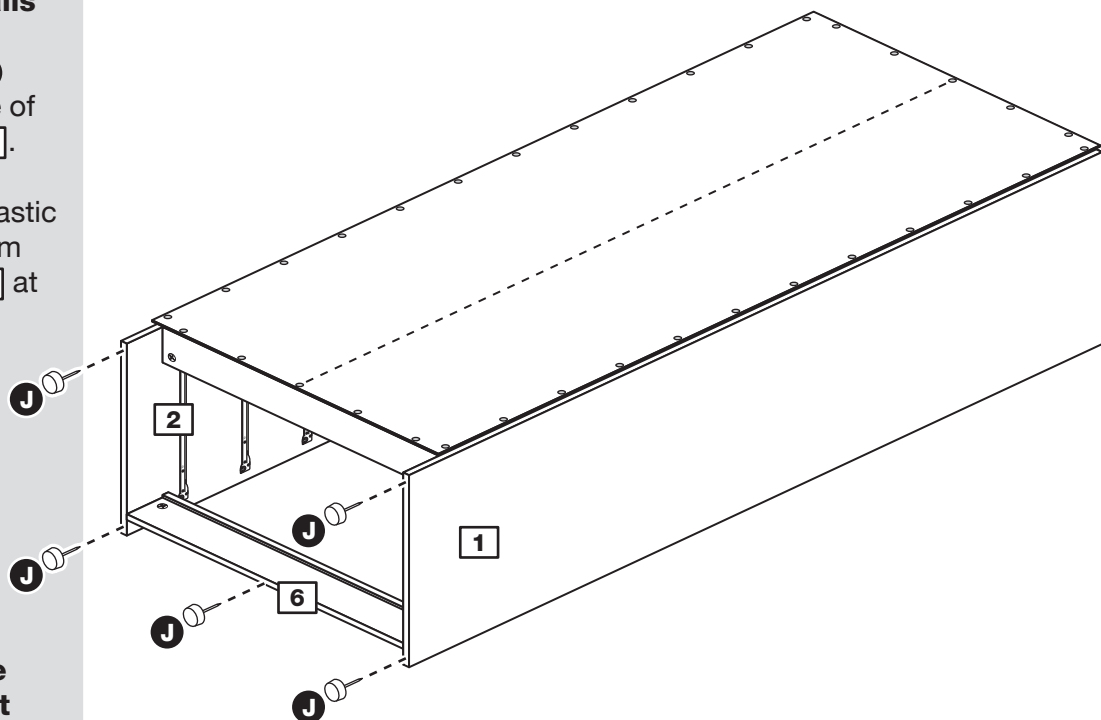

Carefully stand the unit up for the next step and place it in its final position in the room.



Warning: The unit is heavy. Lift with care.

Assembly Instructions

Step 20

Fit the overbalance protector kit


a: Before fitting the overbalance protector kit, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level.

a: To prevent possible overbalancing this unit **must be secured** to a suitable wall by fitting of the overbalance protector kit **N** to the unit, or an alternative fixing method of your choice.


Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

a:

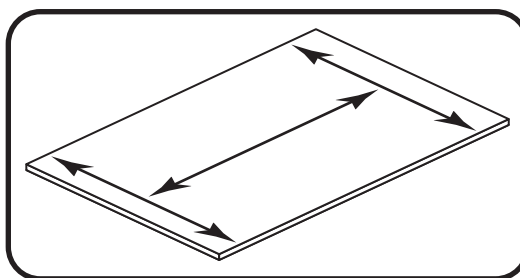

b:

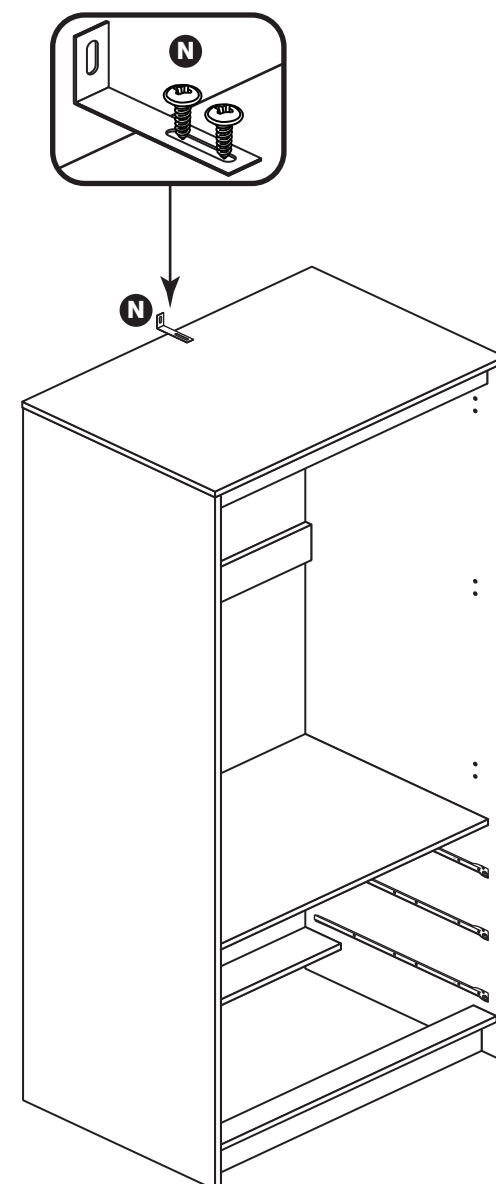

Assembly Instructions

Step 21

Fit the hanging rail and drawers




Push the hanging rail **5** into the rail holders **K** fitted to the side panels.

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

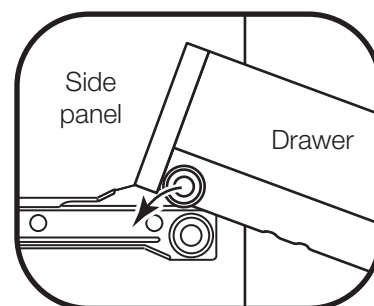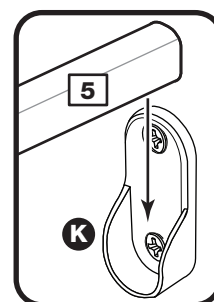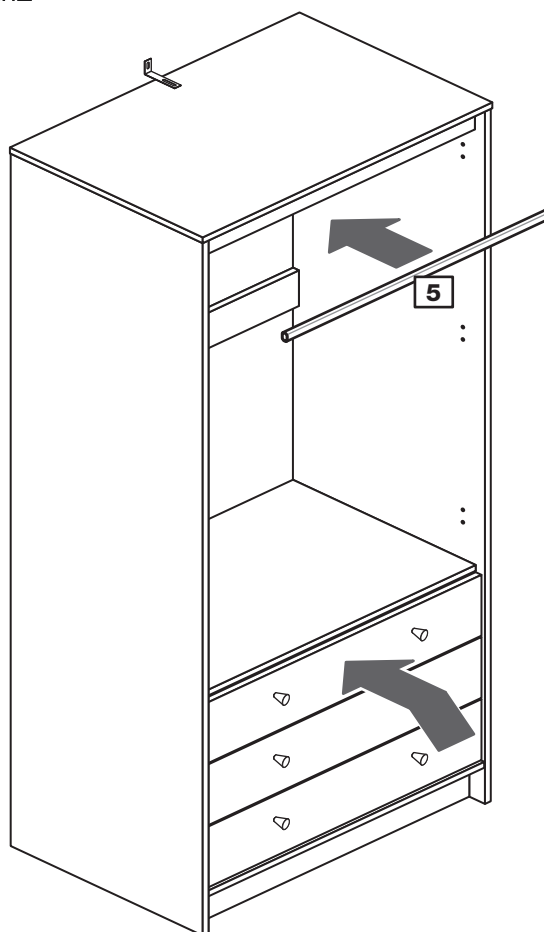

Step 22

Prepare the 2 doors



Push fit 3 hinges **P** into each door **14** and **15**.

Secure each hinge by tightening up its 2 screws.



Pre-mounted Hinge Fitting & Adjustment

<https://www.youtube.com/watch?v=b4NeCGnpjP8>

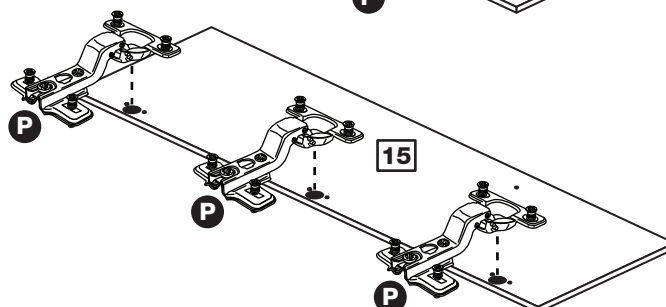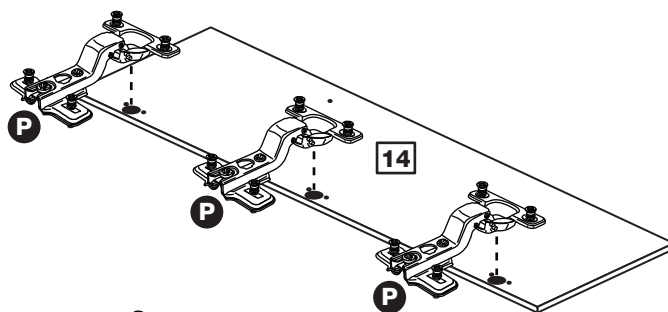

Assembly Instructions

Step 23

Fit the doors and the handles

2 people are needed here

Fit 1 door **14** and **15** at a time, by lining up the 2 screws in the top hinge **P** with the 2 holes at the top of the panel and push them in.

Working down the door, push in the other hinges.

When all of the hinges have been pushed into place, tighten the 2 screws on each hinge.

Attach a handle **O** to each door using screw **D**.




Warning: The doors are heavy. Lift with care.





Pre-mounted Hinge Fitting & Adjustment

<https://www.youtube.com/watch?v=b4NeCGnpjP8>

Press the screws into the holes in the panels

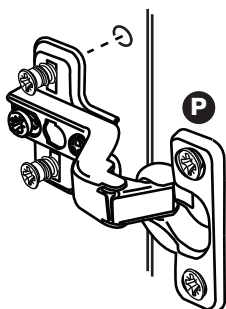

When the hinges have been pushed in, tighten up their screws

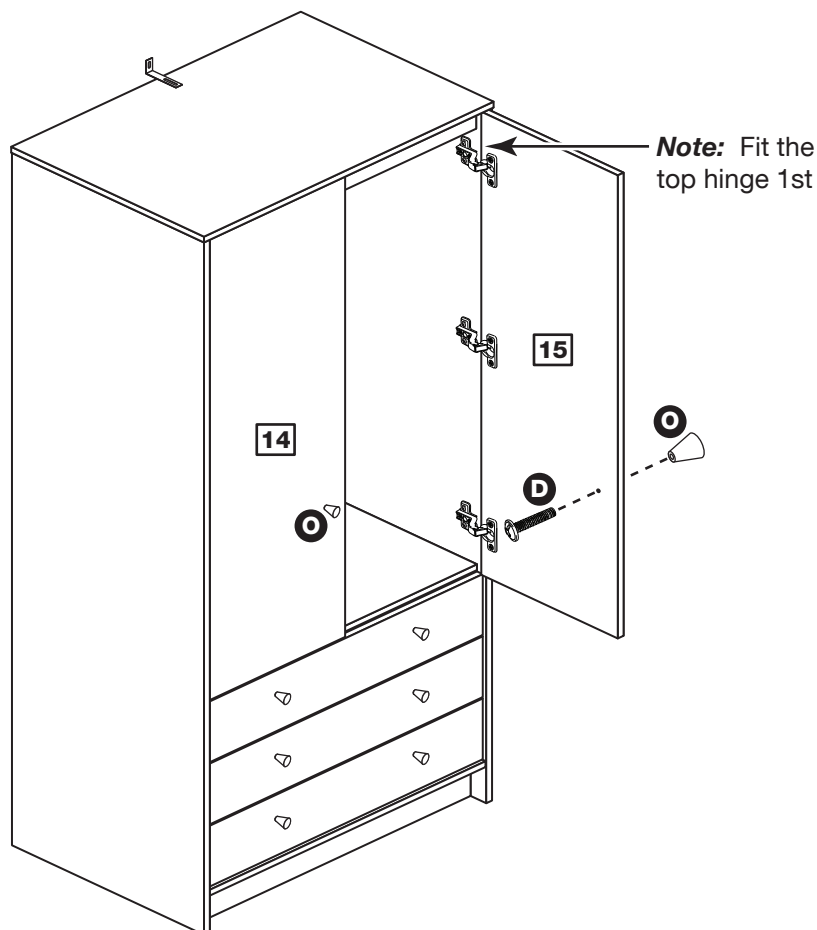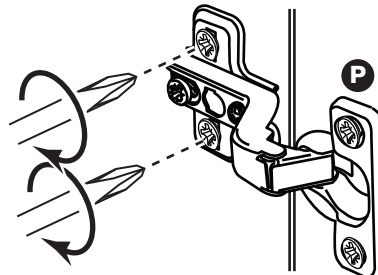

Assembly Instructions

Step 24

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.

Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.


d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.



Pre-mounted Hinge Fitting & Adjustment

<https://www.youtube.com/watch?v=b4NeCGnpjP8>

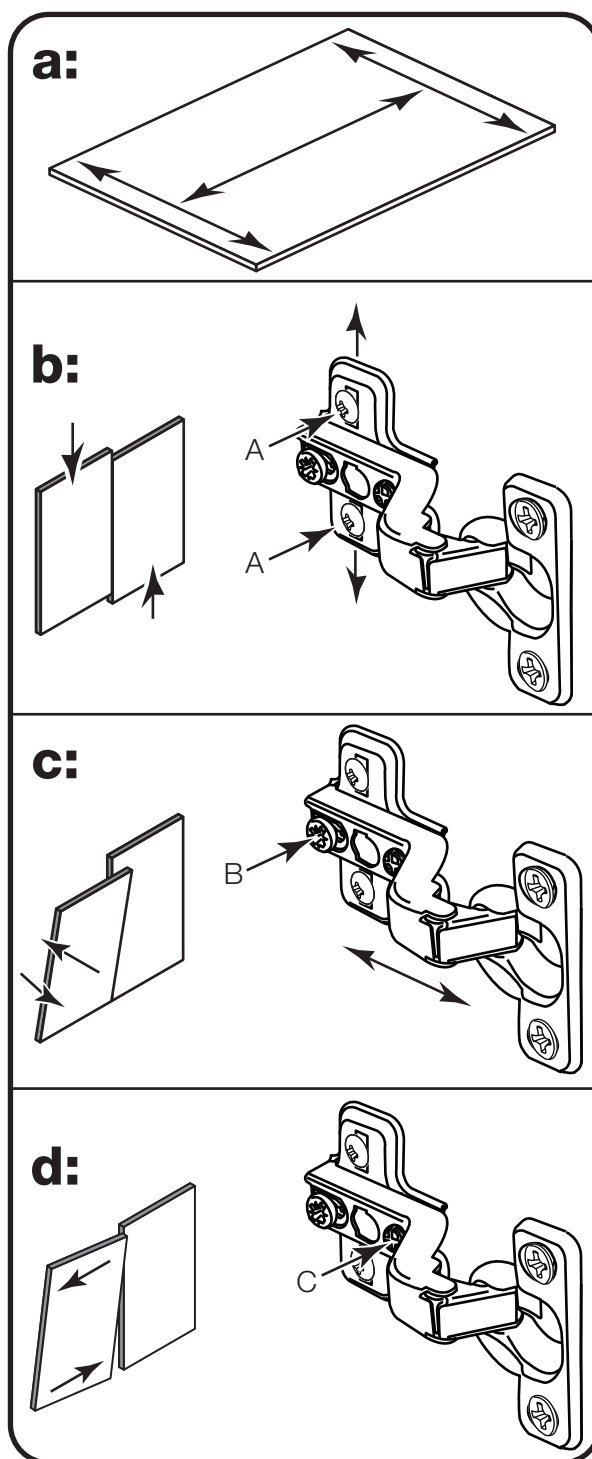


Assembly Instructions

Step 25

Fit the door buffers

Stick a door buffer **L** into the top and bottom corner of each of the 2 doors **14** and **15**.

Assembly is complete

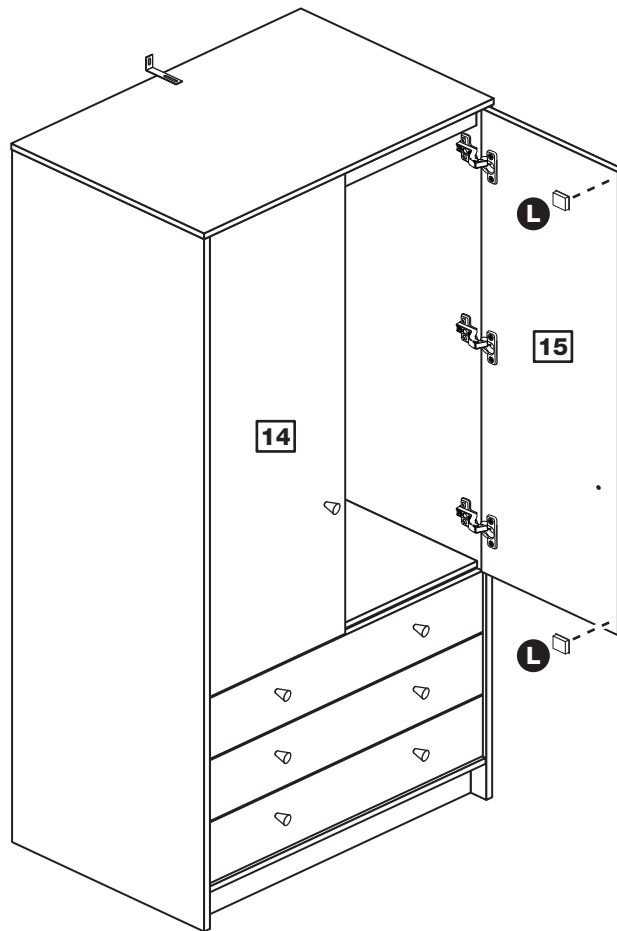

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020