


# Venice - Large Corner TV Unit

Assembly Instructions - Please keep for future reference

450/9071

459/9641

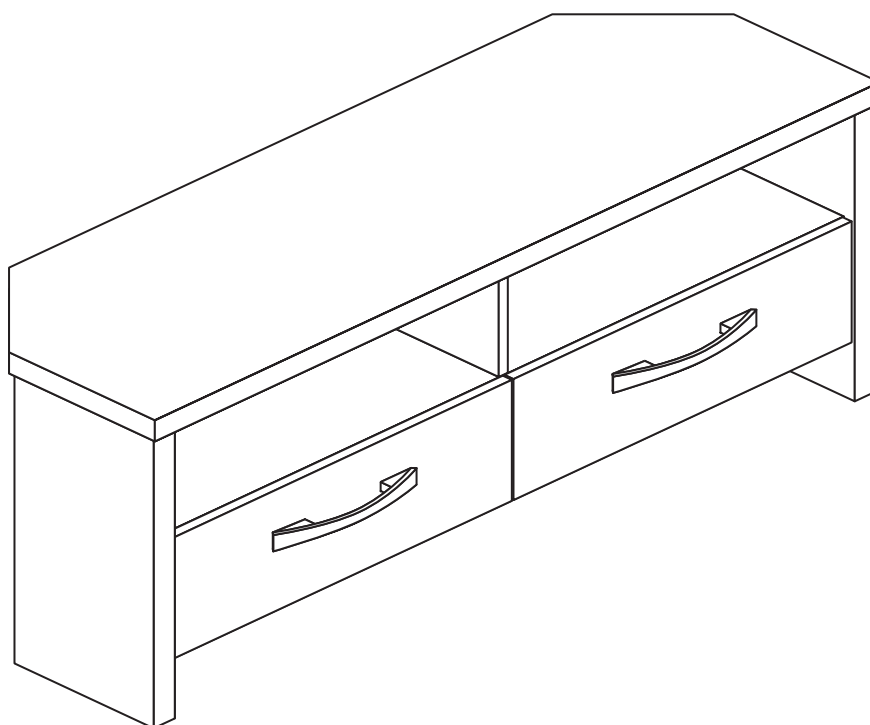

## Dimensions

Width - 119.8cm

Depth - 39.19cm

Height - 51.2cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 25kgs. Please lift with care.
  - Check you have all the components and tools listed on pages 1, 2 and 3.
  - Remove all fittings from the plastic bags and separate them into their groups.
  - Keep children and animals away from the work area, small parts could choke if swallowed.
  - Parts of the assembly will be easier with 2 people.
  - Make sure you have enough space to layout the parts before starting.
  - Do not stand or put weight on the product, this could cause damage.
  - Assemble the item as close to its final position (in the same room) as possible.
  - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
  - **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
  - Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Tools required



Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection  
(when using a hammer or drill)

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)  
Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below

When applicable, remove any protective film before use

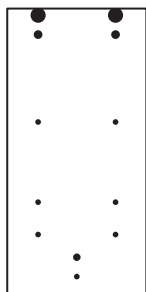


**1** Side (DF5748)  
(47.7 x 23mm) x 2

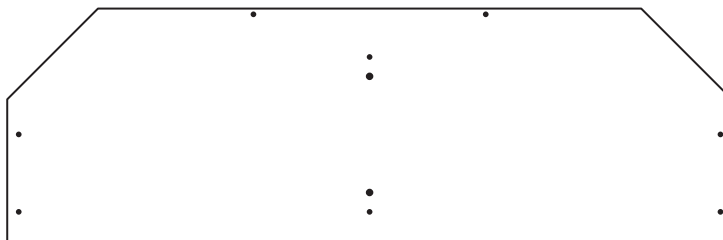


**2** Top (DF5746)  
(119.8 x 39.1cm)




**4** Top Divider (DF5755)  
(18 x 35.1cm)

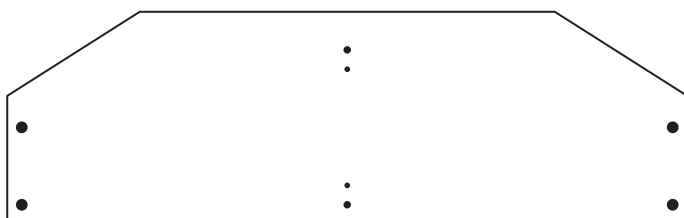

**3** Horizontal (DF5751)  
(112.4 x 35.2cm) x 2




**5** Lower Divider (DF5753)  
(17.1 x 35.1cm)

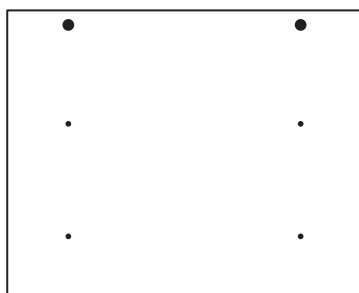


**6** Back (DF5749)  
(47.7 x 58.6cm)




**7** Plinth (DF5750)  
(112.4 x 9.6cm)

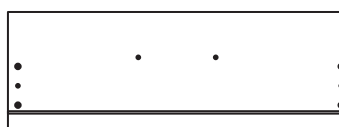


**8** Left Drawer Front (DF5752)  
(55.9 x 20cm)

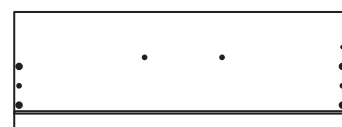

**9** Right Drawer Front (DF5754)  
(55.9 x 20cm)



**10** Left Drawer Side (W210-124LH)  
(21 x 12.4cm) x 2



**11** Right Drawer Side (W210-124RH)  
(21 x 12.4cm) x 2



**12** Drawer Back (W522-124)  
(52.2 x 12.4mm) x 2



**13** Drawer Base (T533-207)  
(53.3 x 20.7mm) x 2



# Components - Fittings










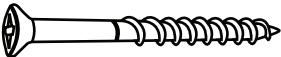




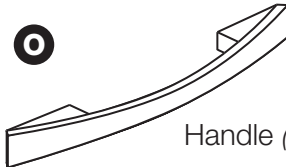

If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)

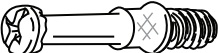Alternatively, call the Spares Helpline on: 0370 112 1928.

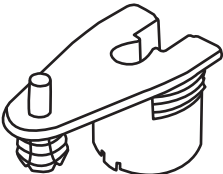
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<div><div>A</div></div> <div>Metal dowel (F901) x 18</div>	<div><div>B</div></div> <div>Small locking nut (F3) x 4</div>	<div><div>C</div></div> <div>Large locking nut (F900) x 14</div>
<div><div>D</div></div> <div>Hollow core locking nut (F892) x 4</div>	<div><div>E</div></div> <div>Small metal dowel (F893) x 4</div>	<div><div>F</div></div> <div>Knock-in Peg (F171GY) x 8</div>
<div><div>G</div></div> <div>Large wooden dowel (F40) x 2</div>	<div><div>H</div></div> <div>Wooden dowel (F22) x 6</div>	<div><div>I</div></div> <div>Wedgefix (F639) x 4</div>
<div><div>J</div></div> <div>45mm Screw (F65) x 4</div>	<div><div>K</div></div> <div>40mm Screw (F910) x 4</div>	<div><div>L</div></div> <div>19mm Screw (F461) x 4</div>
<div><div>M</div></div> <div>9mm Screw (F73) x 8</div>	<div><div>N</div></div> <div>9mm Screw (F74) x 4</div>	<div><div>O</div></div> <div>Handle (FBARH128) x 2</div>
<div><div>P</div></div> <div>Drawer runner (F307) x 4</div>		

Ruler - Use this ruler to help correctly identify the screws

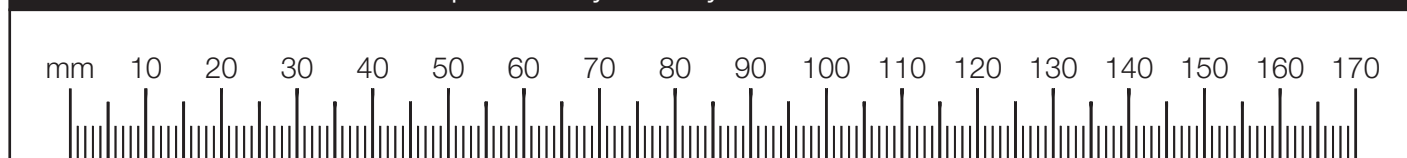


# Assembly Instructions

## Step 1

### Prepare the 2 drawer fronts

Screw 2 metal dowels **A** into each of the drawer fronts **8** and **9**.

**Note:** Tighten the metal dowels up fully against the panels.

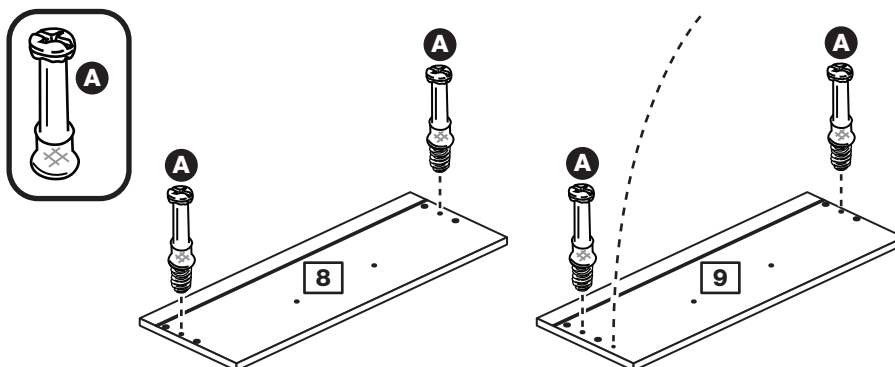


## Step 2

### Prepare the drawer sides

Insert a small locking nut **B** into the hole shown on the left drawer side **10** and the right drawer side **11**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

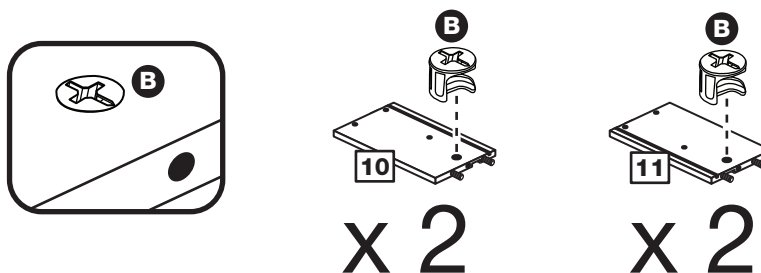


## Step 3

### Attach the drawer sides to the drawer fronts

Push a left drawer side **10** and a right drawer side **11** onto the back of each drawer front **8** and **9**.

Turn the small locking nuts **B** on the left drawer side **10** and right drawer side **11**.

**Note:** Turn the locking nuts **B** clockwise to secure panels - more than 1/2 a turn.

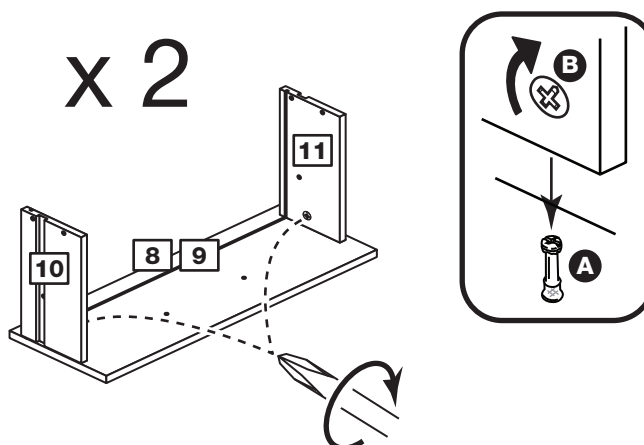


# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **13** down the grooves in the drawer sides **10** and **11** and down into the groove in the drawer front **8** and **9**.

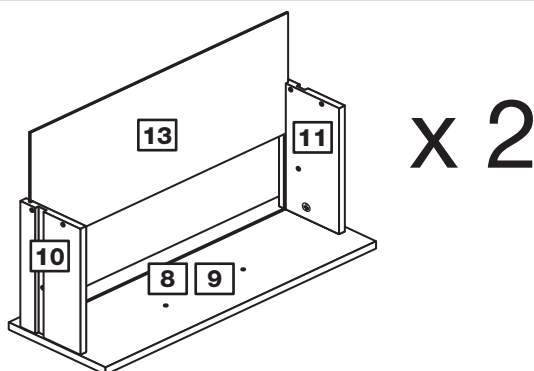


## Step 5

### Fit the drawer back

Fit the drawer back **12** between the drawer sides **10** and **11**.

Make sure that the drawer base **13** fits into the groove in the drawer back **12**.


Hold the drawer back **12** in position and tap the knock-in pegs **F** through the holes in the drawer sides **10** and **11**.

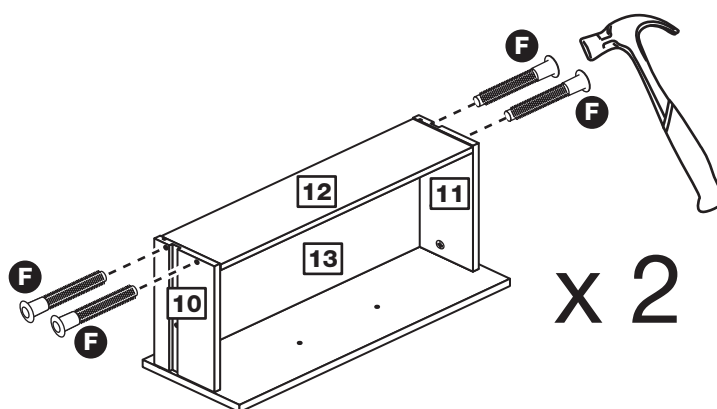

## Step 6

### Attach the handles


Attach a handle **O** to each of the drawer fronts **8** and **9** using screws **L**.

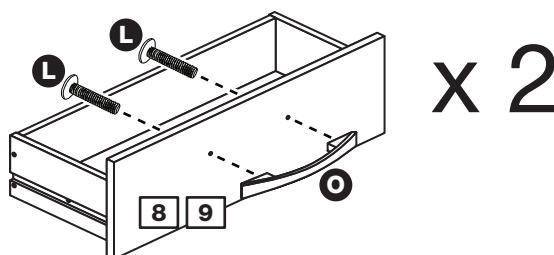

## Step 7

### Fit the wedgifixes

Turn the 2 drawer assemblies over and slide 4 wedgifixes **I** into the front and back grooves, as shown, and tighten up the screws.

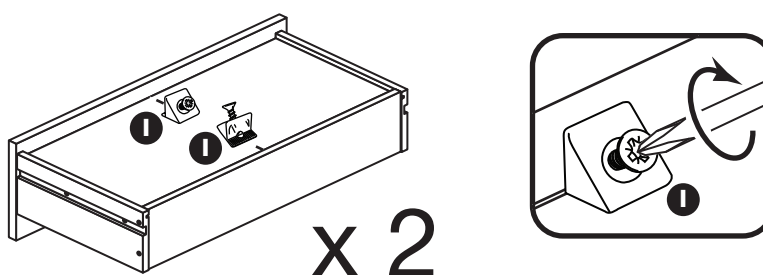

# Assembly Instructions


## Step 8

### Prepare the top

Screw 4 metal dowels **A** into the top **2**.

Screw 4 small metal dowels **E** into the holes on the top **2**.

**Note:** Tighten metal dowels up fully against the panels.

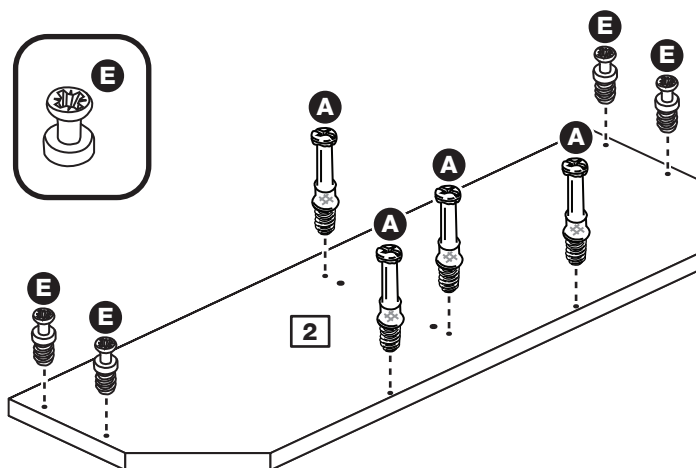

## Step 9




### Prepare the top divider

Insert 2 large locking nuts **C** into the top divider **4**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels **H** into the top divider **4**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

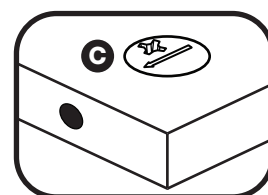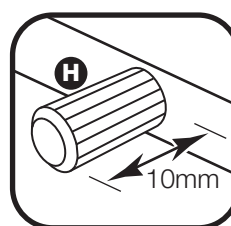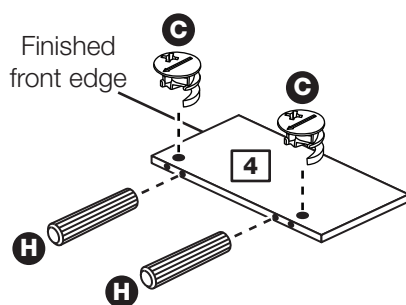


## Step 10

### Fit the top divider to the top

Push the top divider **4** onto the top **2**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the top divider **4**.

**Note:** Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

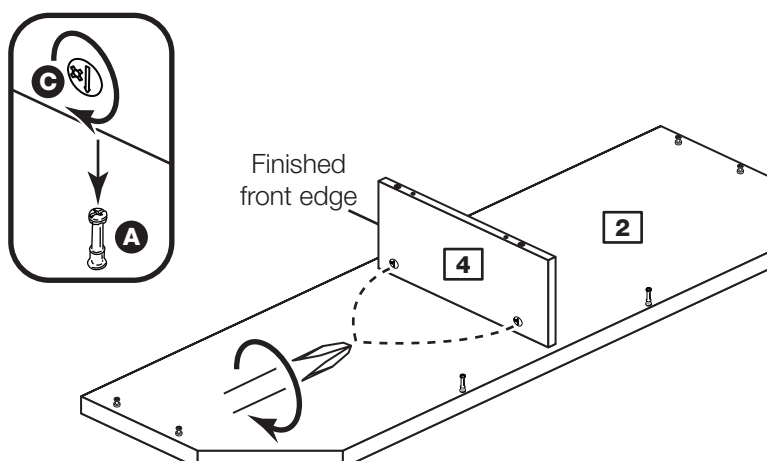


# Assembly Instructions

## Step 11

### Prepare the 2 horizontals


Insert 4 large locking nuts **C** into each of the 2 horizontals **3**.

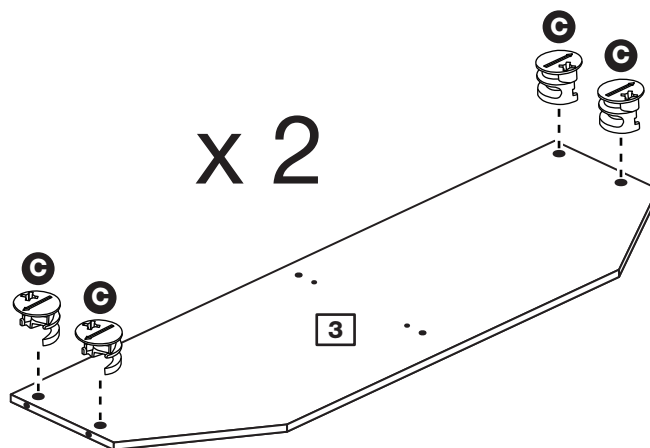

## Step 12

### Fit a horizontal


Attach a horizontal **3** to the top divider **4** using 2 screws **K**.

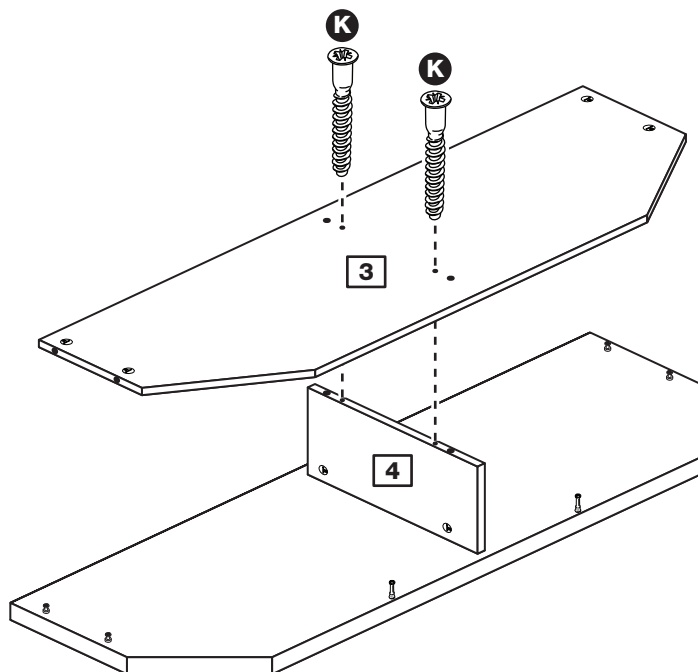

## Step 13

### Fit the 2 large wooden dowels

Gently tap the 2 large wooden dowels **G** through the horizontal **3** and into the top divider **4** until they "bottom out".

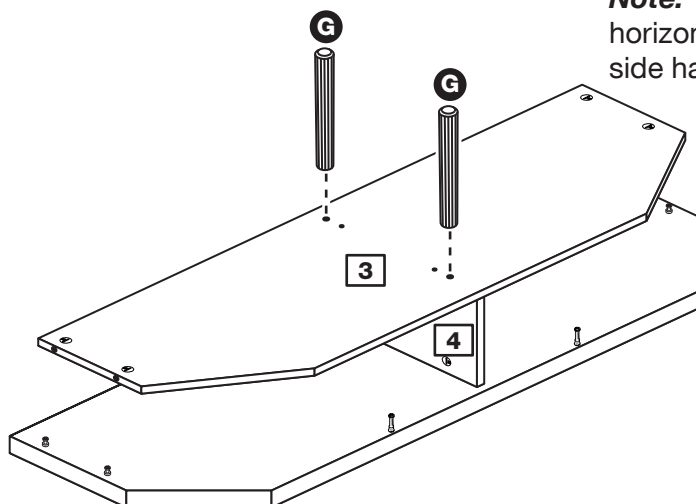

**Note:** Support the horizontal until the right side has been fitted.



# Assembly Instructions

## Step 14

### Prepare the right side

**a:** Place a runner **P** onto one of the sides **1**. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **M**.





**b:** Slide the runner **P** back the other way and fit the 2nd screw **M** into the corresponding hole in the side **1**.

**c:** Screw 5 metal dowels **B** into the side **1**.

Push 2 hollow core locking nuts **D** into the side **1**, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **D**.

**Note:** The pin should be tapped in flush with the top surface of the hollow core locking nut **D**.

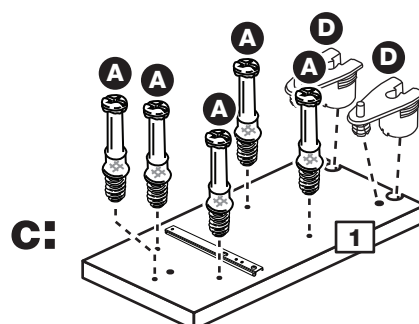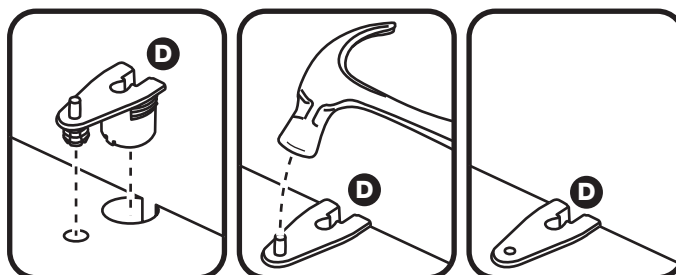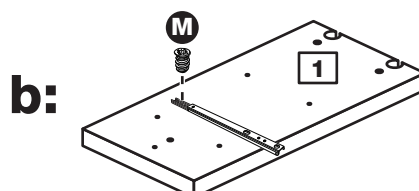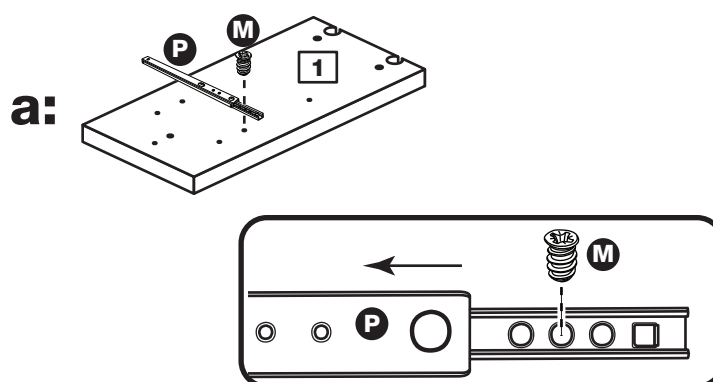

# Assembly Instructions

## Step 15


### Fit the right side

Push the right side **1** onto the top **2** and the horizontal **3**.

The 2 small metal dowels **E** fitted to the top **2** must slide into the top of the 2 hollow core locking nuts **D** fitted to the right side **1**.

Insert a screwdriver into the 2 hollow core locking nuts **D** and turn the nuts inside as far as they will go.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the horizontal **3**.

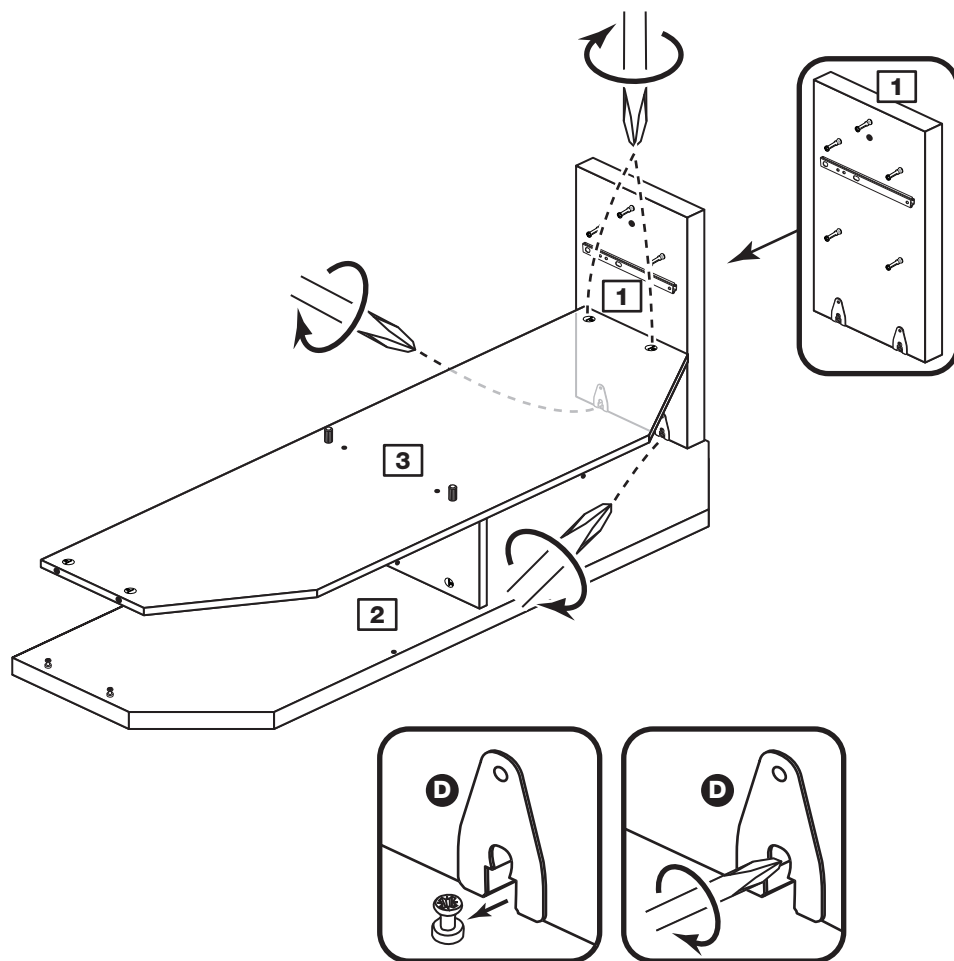

# Assembly Instructions

## Step 16

### Prepare the lower divider

**a:** Place a runner **P** onto the lower divider **5**. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **M**.





**b:** Slide the runner **P** back the other way and use the 2nd hole from the back to fit the 2nd screw **M**.

**c:** Tap 2 wooden dowels **H** into the lower divider **5**.




### Turn the divider over

**d:** Place a runner **M** onto the lower divider **5**. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **M**.

**e:** Slide the runner **P** back the other way and use the 2nd hole from the back to fit the 2nd screw **M**.

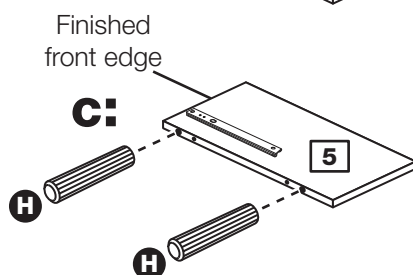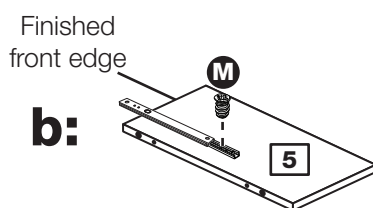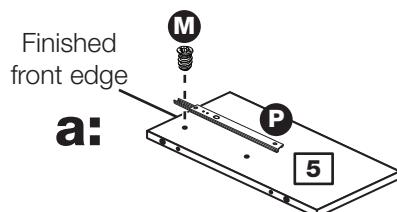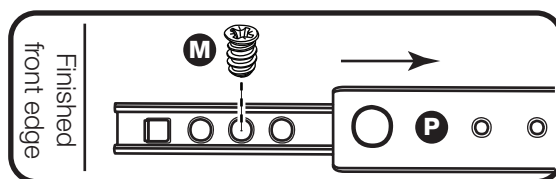

**Turn the divider over**

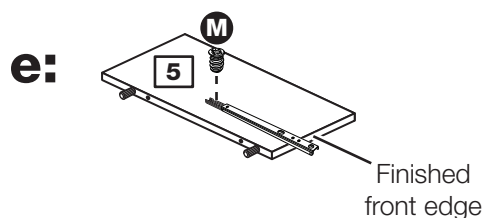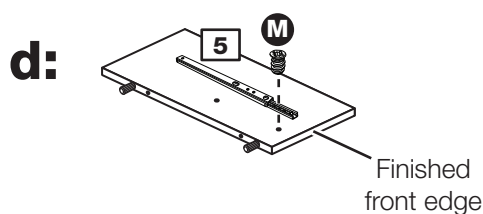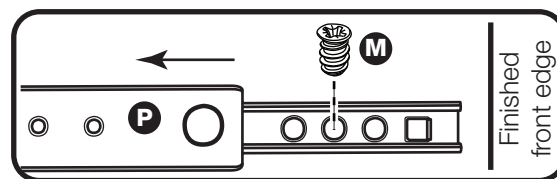


# Assembly Instructions

## Step 17

### Fit the lower divider

Push the lower divider **5** down onto the horizontal **3**.

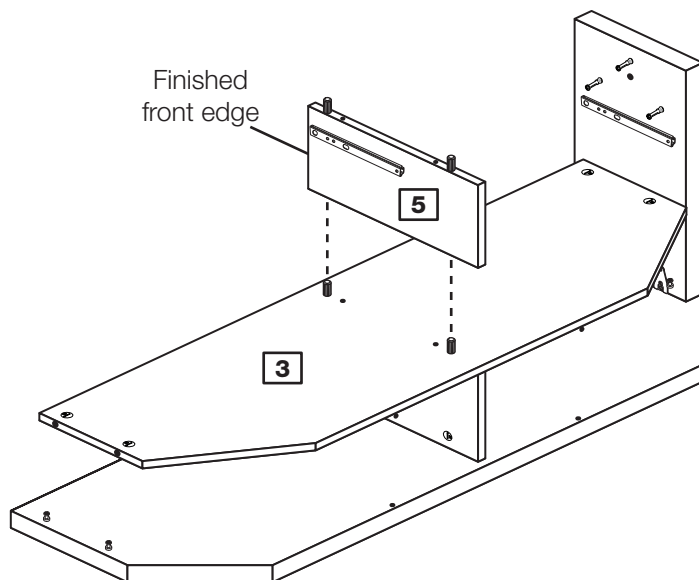


## Step 18

### Fit the other horizontal

Fit the horizontal **3** to the right side **1** and the lower divider **5**.

Attach the horizontal **3** to the lower divider **5** using 2 screws **K**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the horizontal **3**.

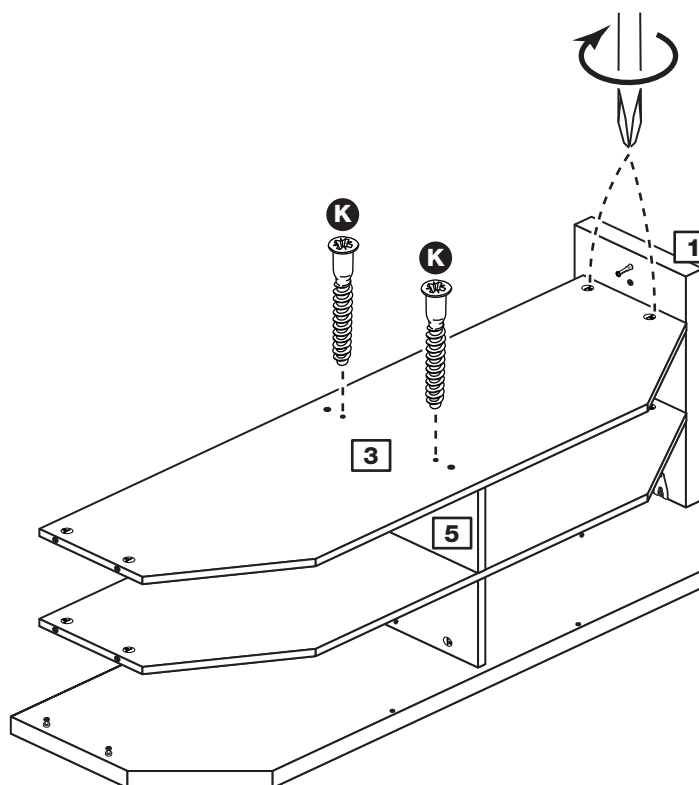


# Assembly Instructions

## Step 19

### Prepare the plinth

Insert 2 large locking nuts **C** into the plinth **7**.

Tap 2 wooden dowels **H** into the plinth **7**.

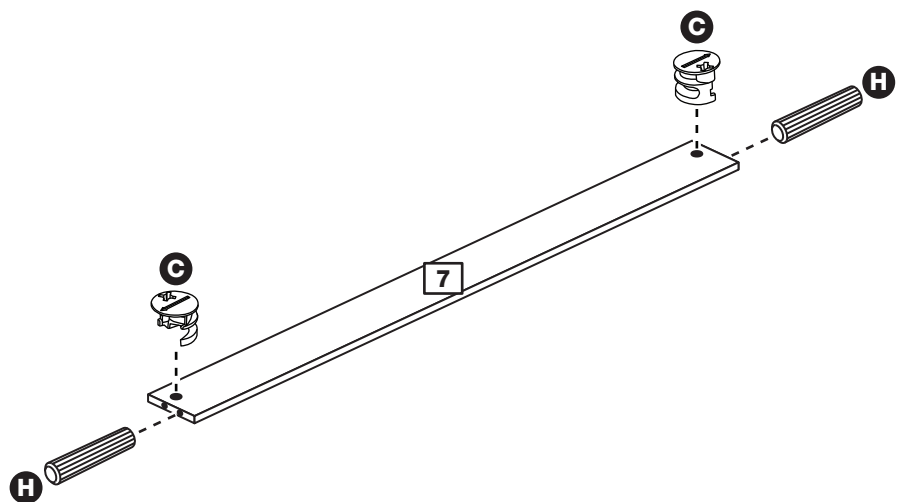


## Step 20

### Fit the plinth

Push the plinth **7** onto the right side **1**.

Use a screwdriver to tighten the large locking nut **C** fitted to the plinth **7**.


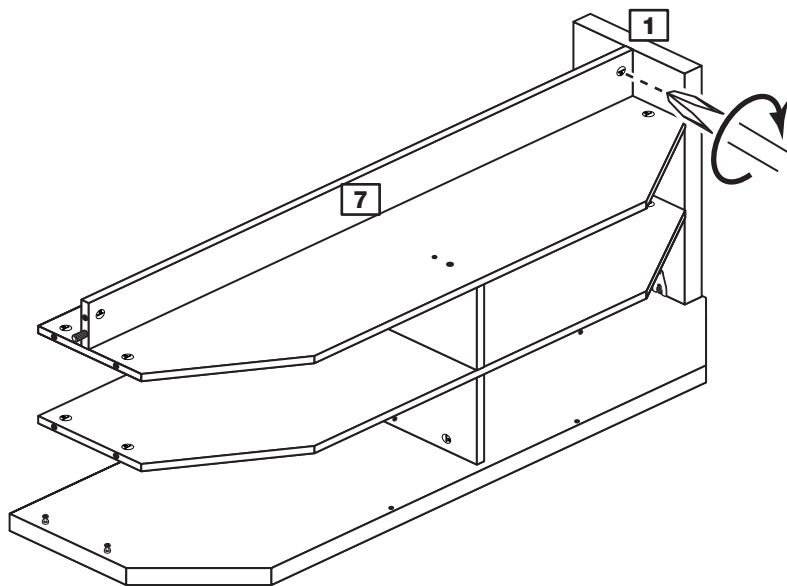


# Assembly Instructions


## Step 21

### Prepare the left side

**a:** Place a runner **P** onto one of the sides **1**. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **M**.

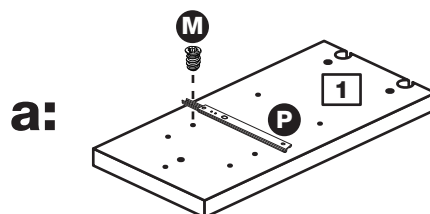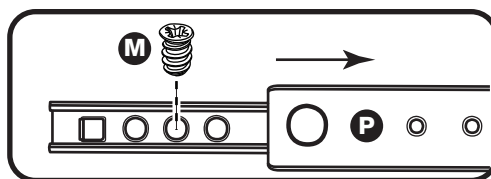

**b:** Slide the runner **P** back the other way and fit the 2nd screw **M** into the corresponding hole in the side **1**.


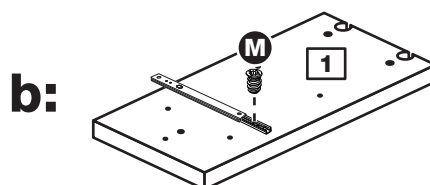


**c:** Screw 5 metal dowels **A** into the side **1**.

Push 2 hollow core locking nuts **D** into the side **1**, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **D**.

**Note:** The pin should be tapped in flush with the top surface of the hollow core locking nut **D**.

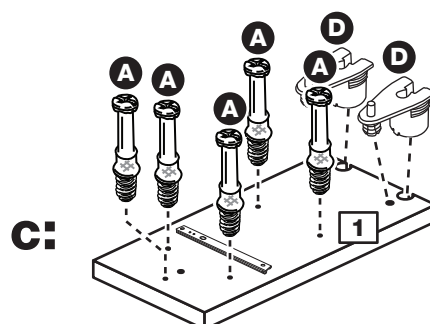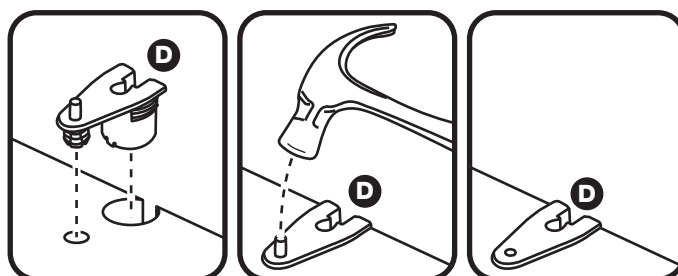

# Assembly Instructions


## Step 22

### Fit the left side

Push the left side **1** onto the assembly.

Use a screwdriver to turn the nuts inside the 2 hollow core locking nuts **D** fitted to the left side **1**.


Use a screwdriver to tighten the 5 large locking nuts **C** fitted to the horizontals **3** and the plinth **7**.

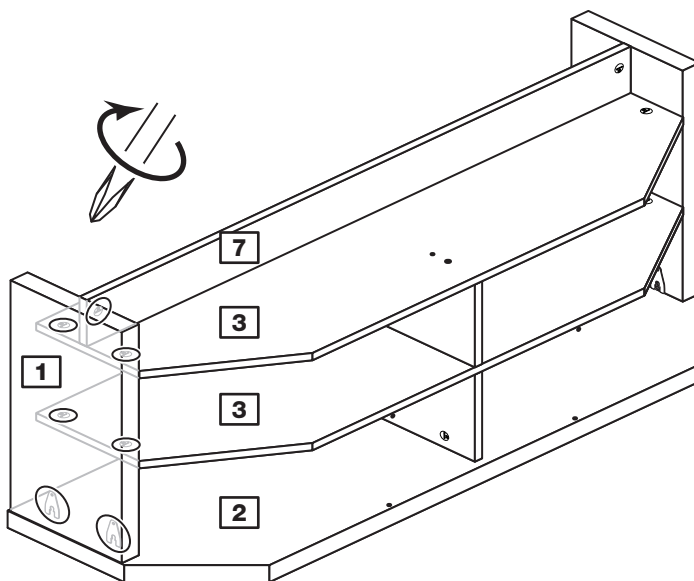

## Step 23

### Prepare the back

Insert 2 large locking nuts **C** into each of the back **6**.

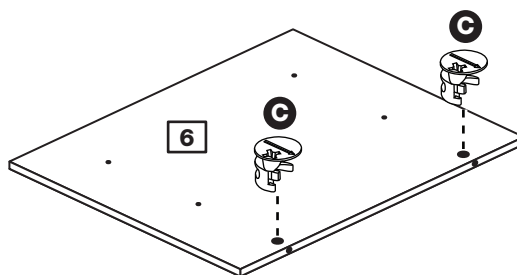


## Step 24

### Fit the back

Push the back **6** down onto the top **2**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the back **6**.

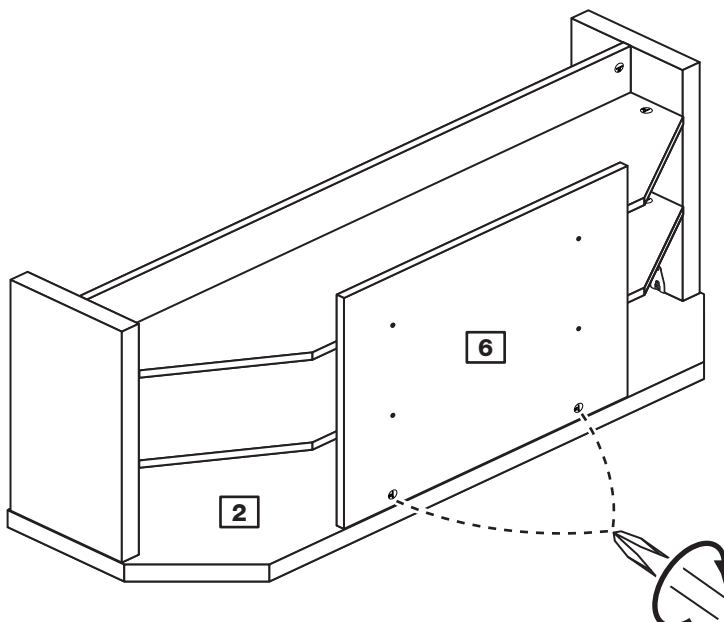

# Assembly Instructions

## Step 25


### Secure the back

Secure the back **6** to the 2 horizontals **3** using 4 screws **J**.

**Carefully stand the unit up for the next step.**



**Warning:** The unit is heavy. Lift with care.

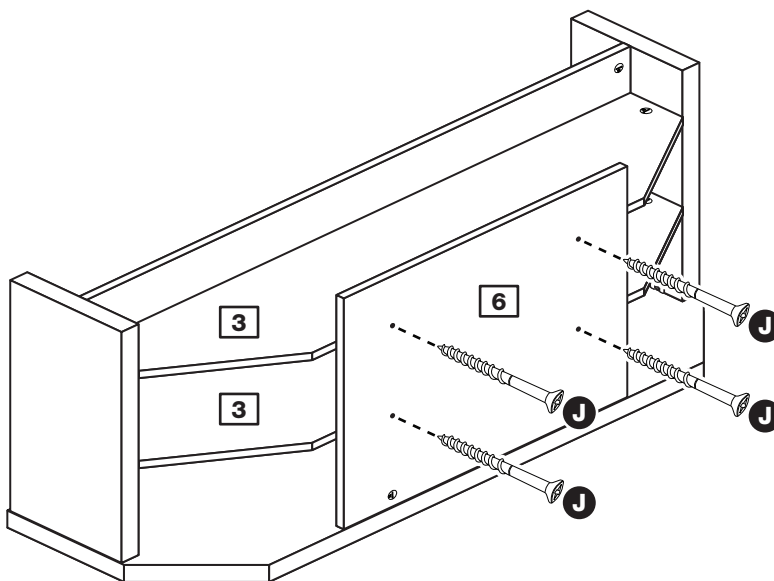

## Step 26

### Fit the drawers



Slide both the runners **P** forward and locate the drawer sides **10** and **11** between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners **P**.

Working from the inside of the drawer, insert 2 screws **N** through the drawer sides and out into the 2nd threaded hole in the runner.

**Note:** Do not overtighten the screws **N**. If they catch on the runner you may need to loosen them slightly.

**Assembly is complete**

**Remember:** The right drawer front has a small identification hole (refer back to Step 1).

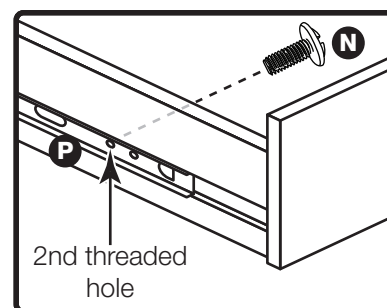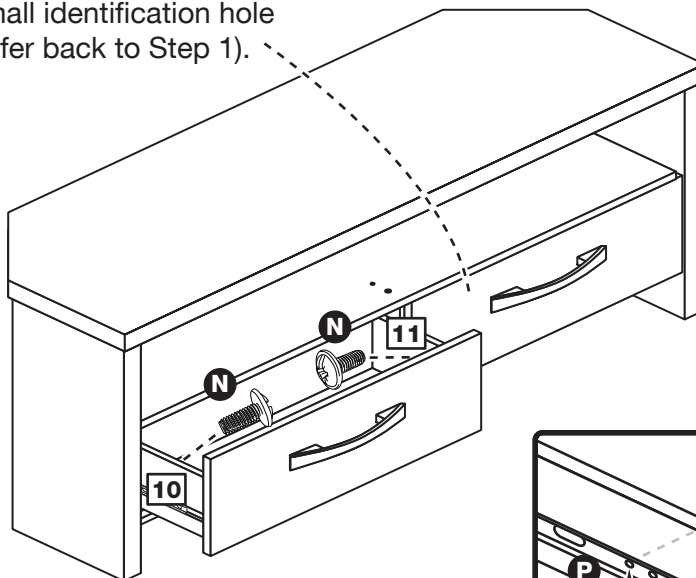

If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)  
Alternatively, call the Spares Helpline on: 0370 112 1928.  
For any other queries please contact the Customer Helpline on: 0345 640 2020