


# Sophia Dressing Table, Stool and Mirror -Table & Mirror

Assembly Instructions - Please keep for future reference

471/9160

457/7656

501/2921

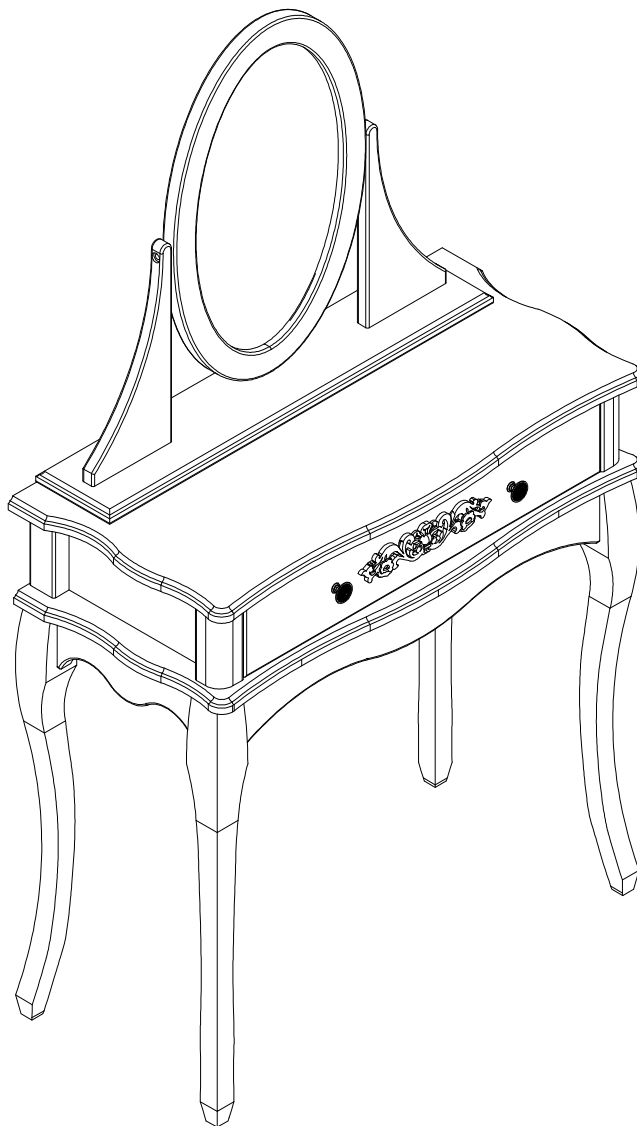

## Dimensions

Width - 80cm  
Depth - 38.5cm  
Height - 141.3cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**.  
For further assistance please visit <http://www.argos-support.co.uk/>.



## Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


### Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.


# Components - Panels

If you have damaged or missing componets, call the **Customer Helpline: 03456 400800**. For further assistance please visit <http://www.argos-support.co.uk/>


Please check you have all the panels listed below

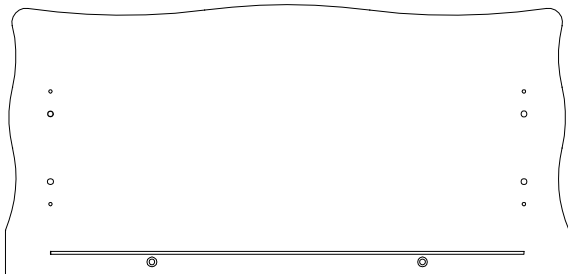


**1** Top ×1  
(80× 38.5cm)




**2** Side, left ×1  
(34.6× 12.6cm)




**3** Side, right ×1  
(34.6× 12.6cm)



**4** Drawer front ×1  
(65× 11.8cm)



**5** Drawer side, left ×1  
(30× 9.5cm)



**6** Drawer side, right ×1  
(30× 9.5cm)




**7** Drawer back ×1  
(60.5× 9.2cm)



**8** Drawer bottom ×1  
(61.6× 29.9cm)



**9** Drawer support rail ×1  
(28.8× 5.7cm)

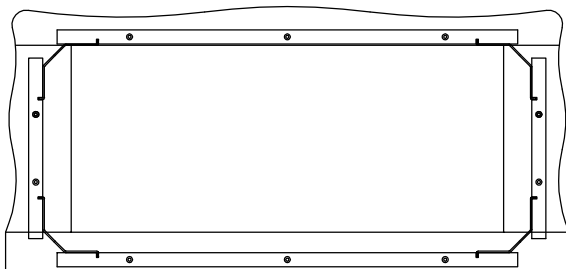


**10** Base fram ×1  
(79× 37.5cm)




**11** Back panel ×1  
(66.5× 13.7cm)




**12** Leg ×4  
(66.3× 5.6cm)

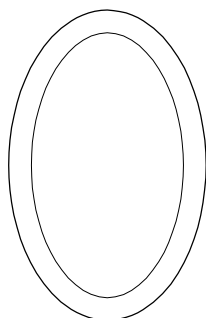

**13** Mirror ×1  
(55 × 35cm)

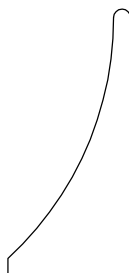

**14** Mirror post x 2  
(31.5 × 14.5cm)













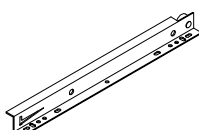








**15** Mirror base ×1  
(70× 13.5cm)




# Components - Fittings

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  Ø6×35mm Screw × 14	<b>B</b>  Ø6×20mm Washer × 8	<b>C</b>  Washer × 8
<b>D</b>  Allen Key × 1	<b>E</b>  Ø6×33.5/11mm Large locking pin × 8	<b>F</b>  Ø15×12mm Large locking nut × 8
<b>G</b>  Ø8×30mm Wooden dowel × 10	<b>H</b>  Handle × 2	<b>I</b>  Screw × 2
<b>J</b>  300mm Runner, outside left × 1	<b>K</b>  300mm Runner, inside left × 1	<b>L</b>  300mm Runner, outside right × 1
<b>M</b>  300mm Runner, inside right × 1	<b>N</b>  Ø3.5×15mm Screw × 14	<b>O</b>  Ø6×20/11mm Small locking pin × 5
<b>P</b>  Ø12×11mm Small locking nut × 5	<b>Q</b>  Ø3.5×25mm Screw × 6	<b>R</b>  Ø6×30mm Screw × 2
<b>S</b>  Ø6×18mm Washer × 2		


## Tools required



Phillips screwdriver  
(medium & large)




Rubber  
mallet



Flatblade screwdriver  
(medium)

**Ruler** - Use this ruler to help correctly identify the screws




# Assembly Instructions

## Step 1


### Fixing legs to Base frame

Fixing legs **12** to Base Frame **10** by using Screw **A** Washer **B** & **C** and turn Allen Key **D** clock wise to fix.

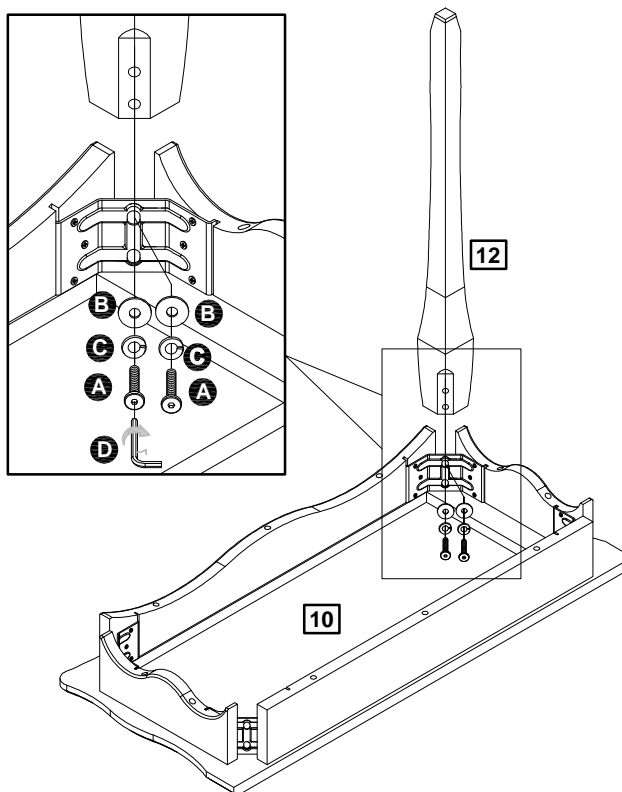

## Step 2

Repeat Step 1 to assemble the rest 3 legs.

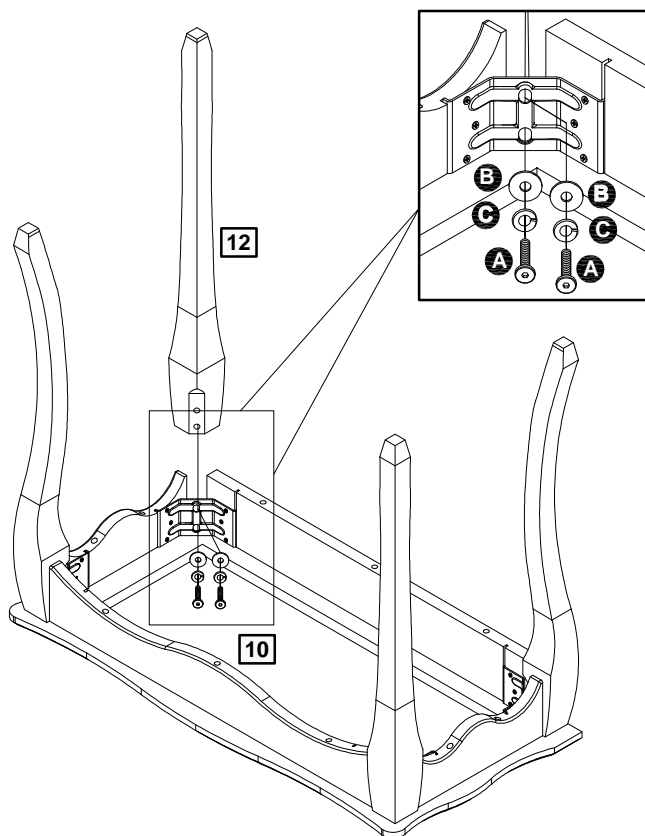

# Assembly Instructions


## Step 3

**a:** Insert Wooden dowel **G** to the Sides **2** and **3**.

**b:** Insert Large locking Pin **E** into Base frame **10**.


**Note:** Insert locking pin as shown.

**Do not over tighten.**

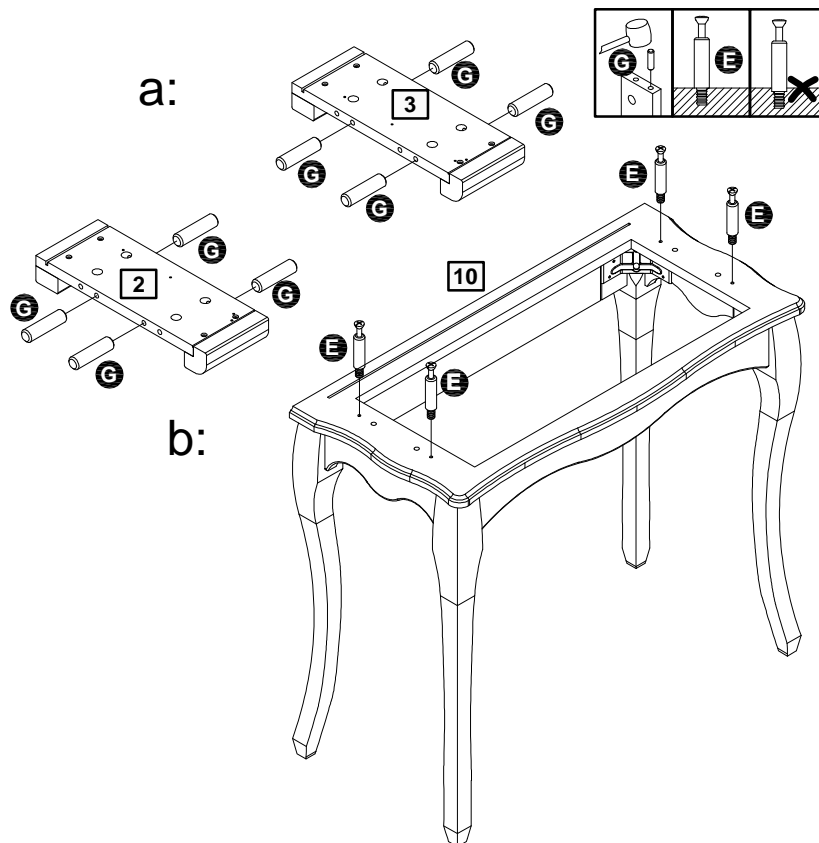

## Step 4


Attach Left Side **2** to the Base frame, insert Large locking Nut **F** into Left sides **2**, use screw driver to turn Locking nut clockwise to lock.

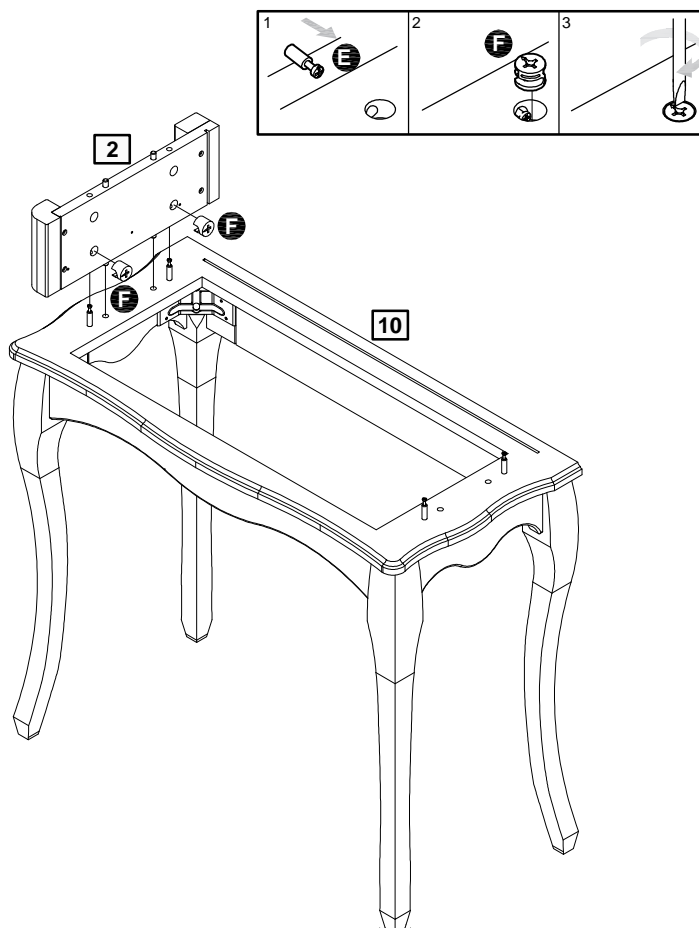

# Assembly Instructions


## Step 5

Fix Runner outside left **J**  
to Left Side **2** by  
Screws **N**.

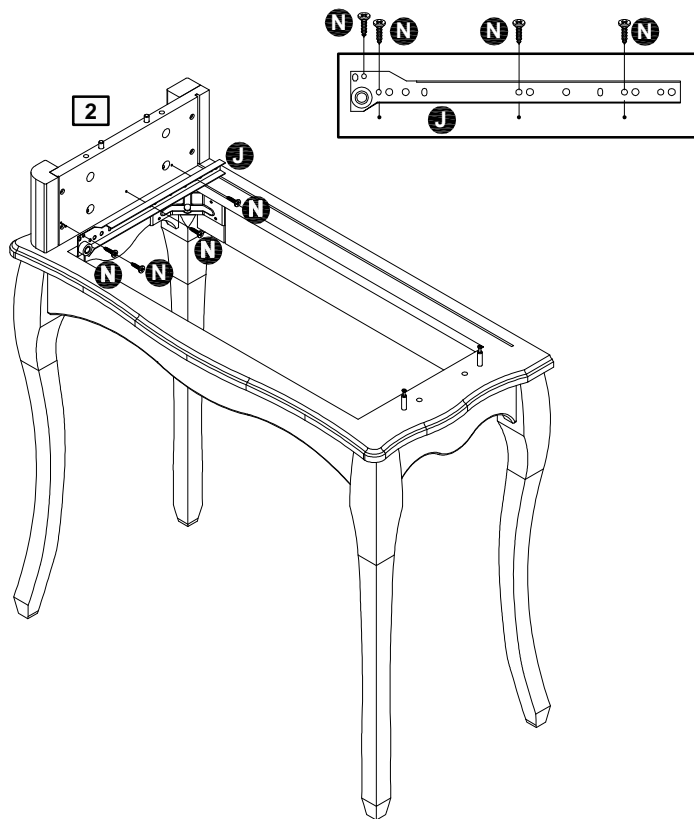

## Step 6


Repeat Step 4 to Right  
Side **3**.

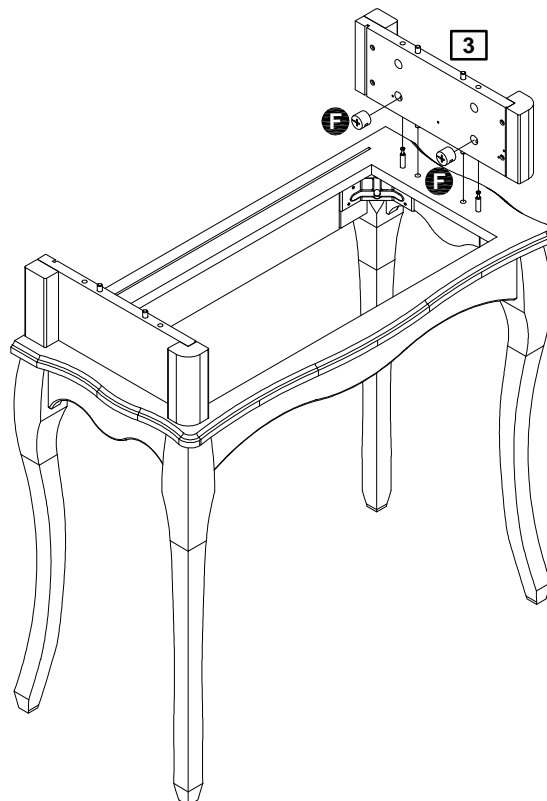

# Assembly Instructions


## Step 7

Repeat Step 5 to fix **L** Runner outside right to Right Side **3**.

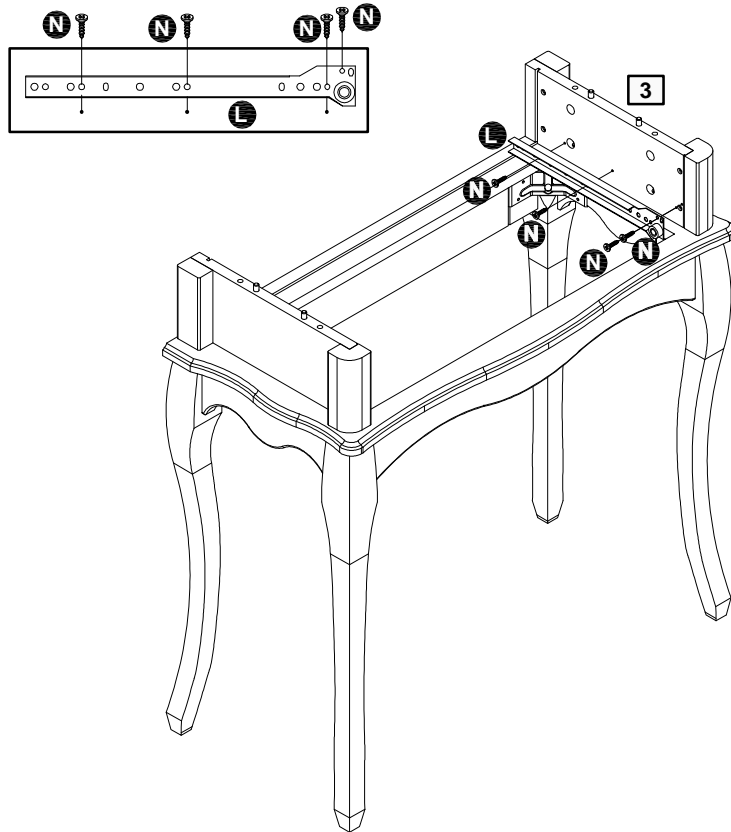

## Step 8

Slip the Back panel **11** to the grooves on the Sides.

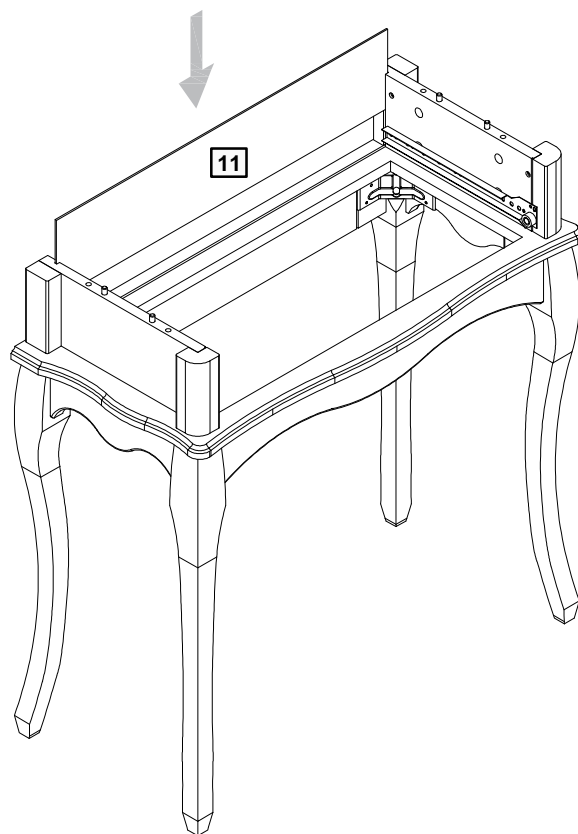




# Assembly Instructions

## Step 9

Insert Large locking Pin **E** into Top panel **1**.

**Note:** Insert locking pin as shown.


**Do not over tighten.**

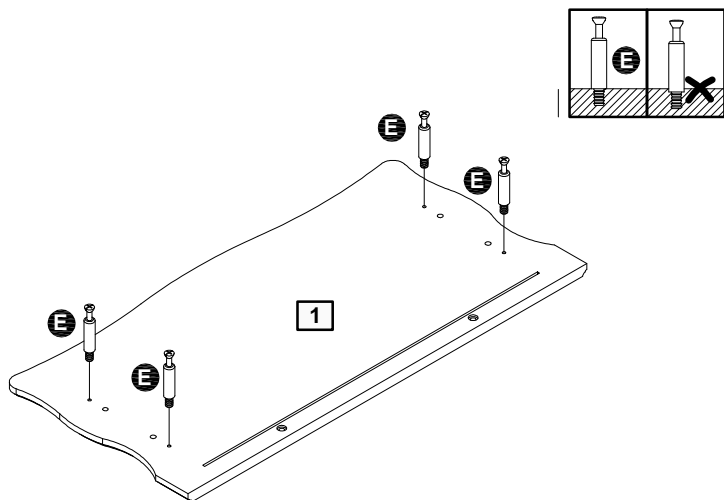

## Step 10

Attach Top panel **1** to the unit.

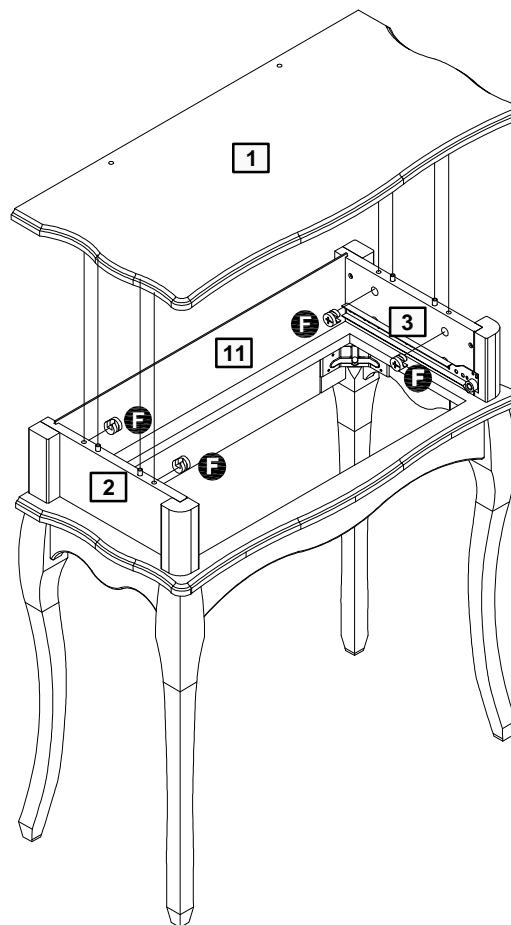

Insert Large locking nut **F** as show on picture and use screw driver to turn Large locking nut clockwise to lock.



# Assembly Instructions





## Step 11

### Assembling the drawer.


**a:** Insert 5 Small locking pin  into holes shown on back of Drawer front .


**Note:** Insert Locking pin as far as shown.



**Do not over tighten.**




**b:** Fix Drawer sides  and  and Drawer support rail  to Drawer front .



Insert Small locking nuts into Drawers Sides and Drawer support rail.



Use a screwdriver to turn locking nuts  clockwise to lock.

**c:** Slip Drawer base  into grooves on the Drawer walls.

**d:** Fix Drawer back  onto sides by using 6 Screws .

**e:** Fix Runner inside left  and Runer inside right  onto the underside of Drawer sides by using 6 Screws .



**f:** Fix Handle  by using Screw .

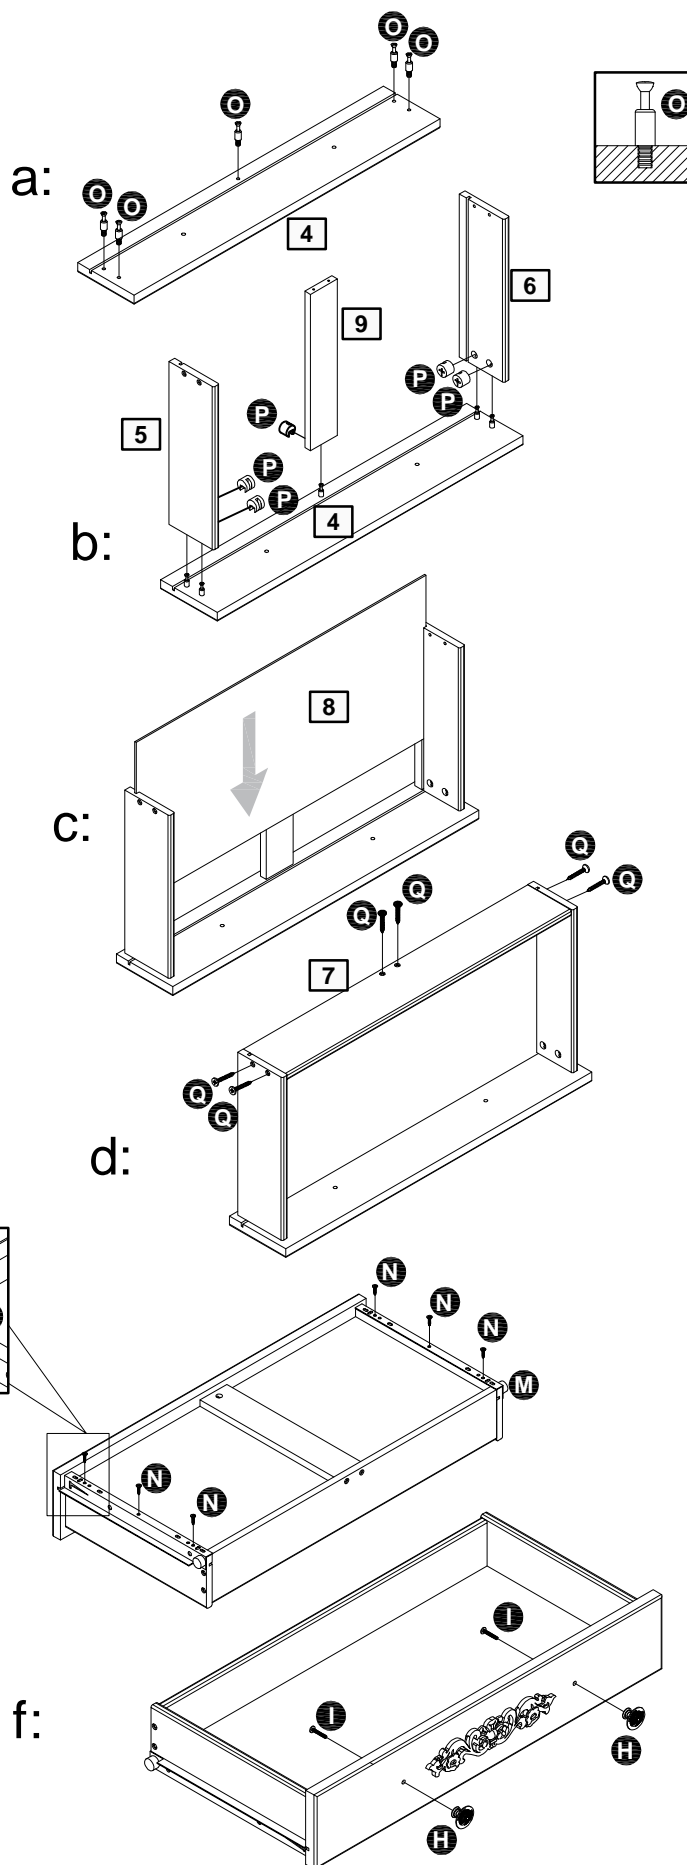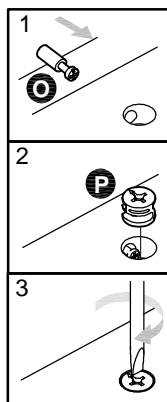

# Assembly Instructions

## Step 12

Inserting the drawer carefully.

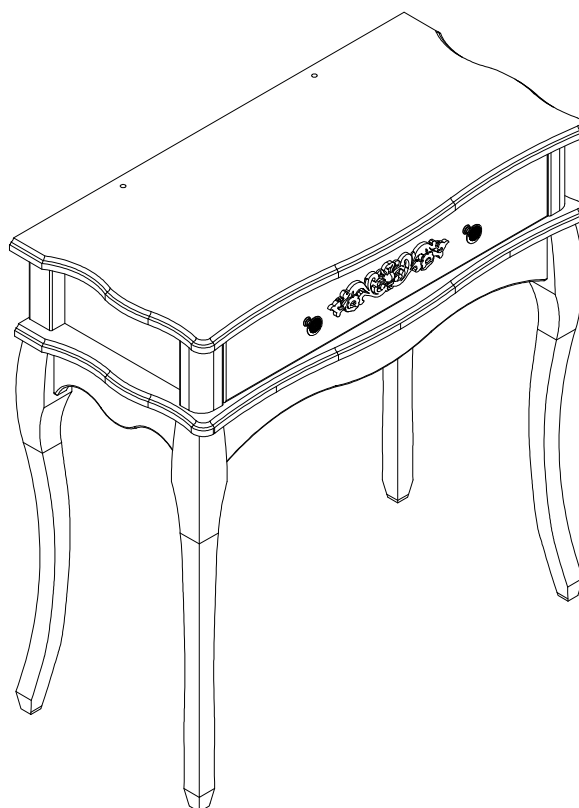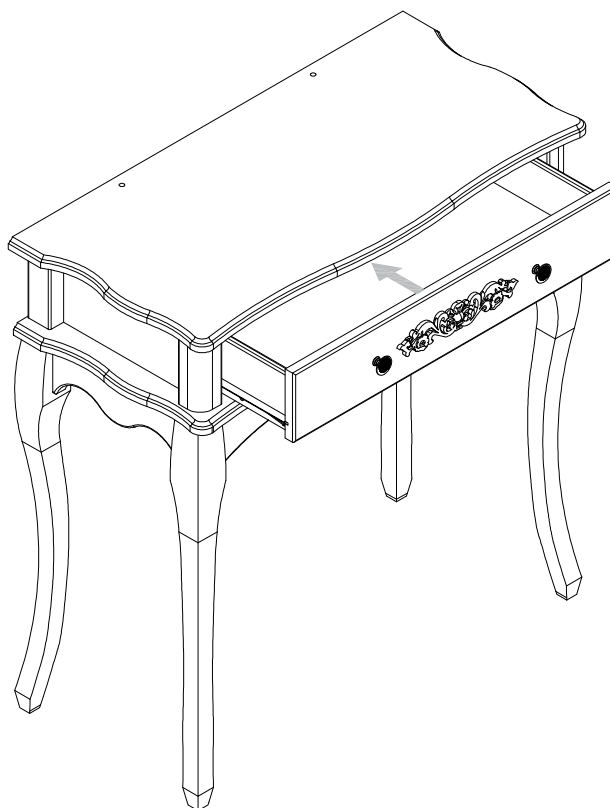


# Assembly Instructions

## Step 13

a. Insert Wooden dowels **G** into Mirror post **14** as show on picture.

b. Attach Mirror post to the Mirror **14** by Screw **A** and Washer **S** .



c. Attach Mirror post to Mirror base **15** by Screw **A** .

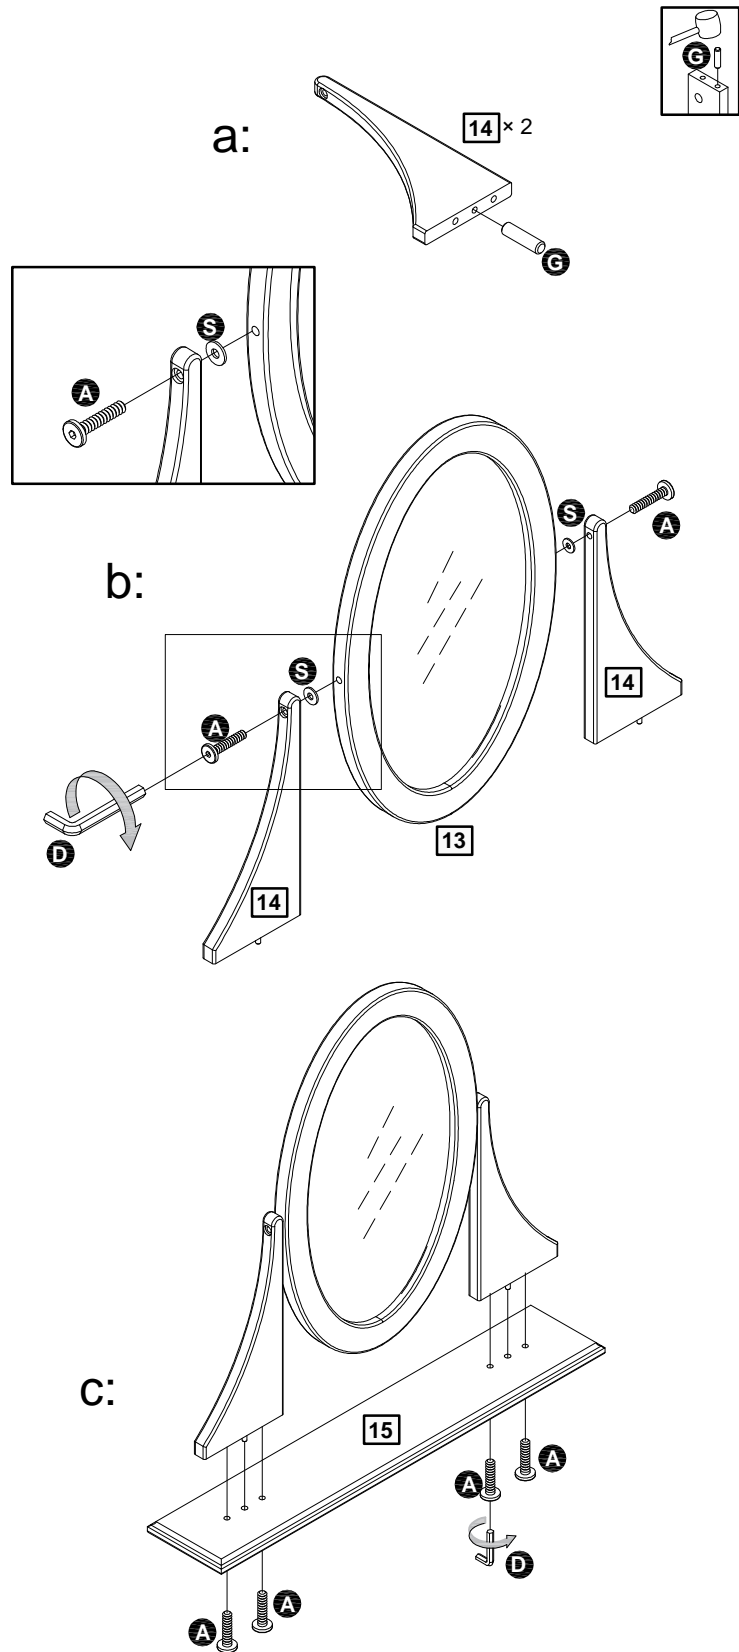

# Assembly Instructions

## Step 14

Put the mirror unit on the dressing table top panel and fix with Screw **R**.

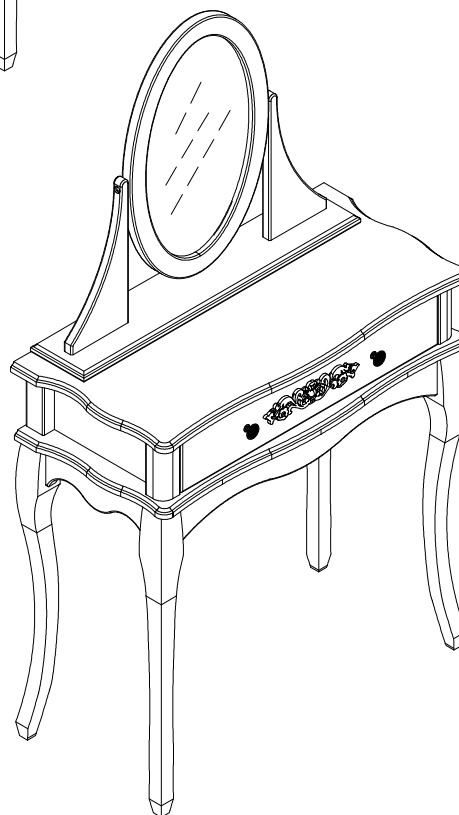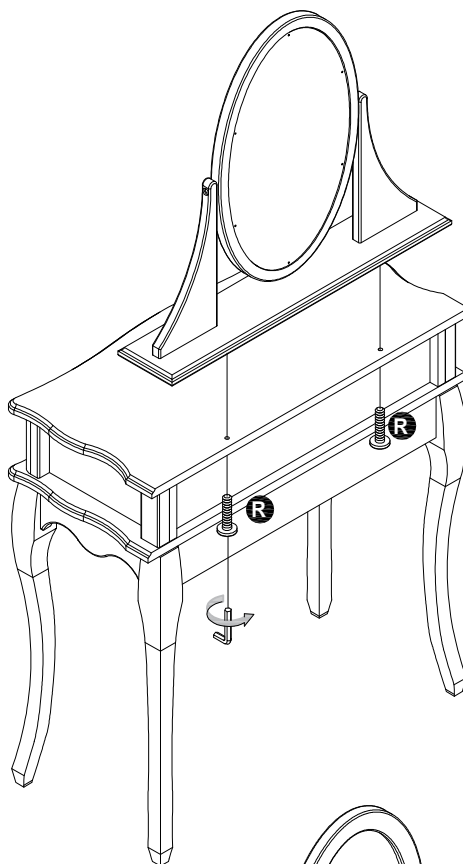

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**.  
For further assistance please visit <http://www.argos-support.co.uk/>