

Adult Malibu - 4 Drawer Wide Chest

Assembly Instructions - Please keep for future reference

540/9785

544/2364

541/3702

555/1190

549/9025


539/9077

544/0840

553/2889

544/7228

554/1533

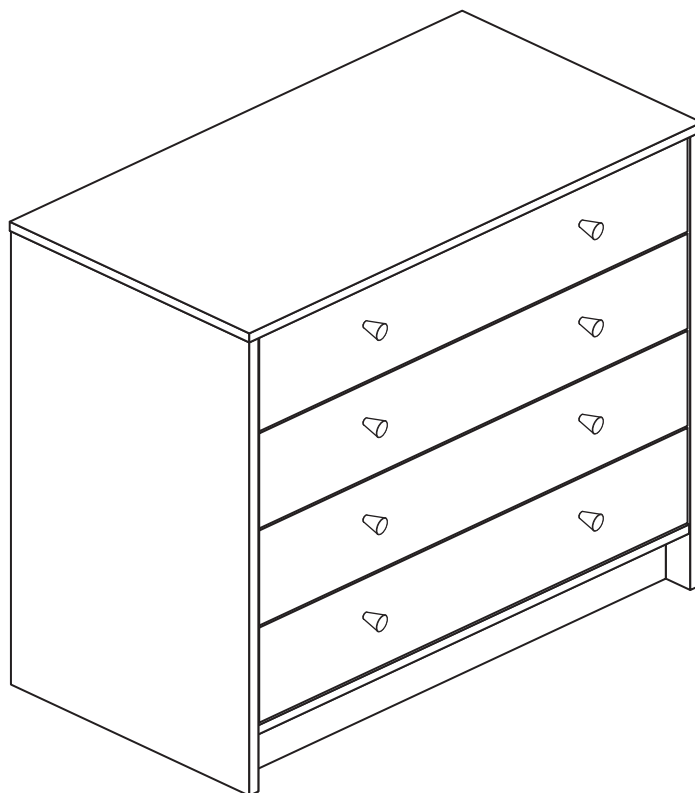

More help is available throughout this booklet by scanning
in the QR codes or typing in the links

Dimensions

Width - 74.8cm

Depth - 39.6cm

Height - 76.6cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 27kgs. Please lift with care.
- Check you have all the components and tools listed on pages 1, 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
 - We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- **Safety note:** To prevent possible overbalancing this unit **must be secured** to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required



Rule



Cross-head screwdriver




Scissors



Hammer




Eye protection
(when using a hammer or drill)

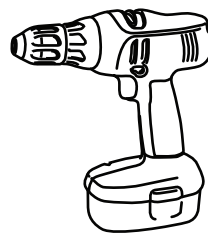

Electric drill
(do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws



Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below

When applicable, remove any protective film before use

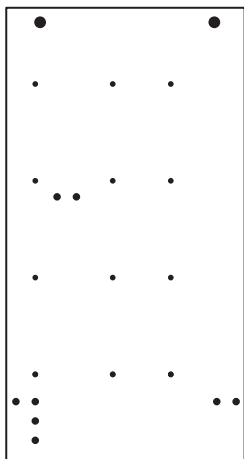

1 Left Side (DF7327)
(75.1 x 39.4cm)

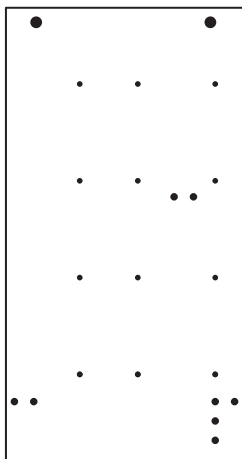


2 Right Side (DF7328)
(75.1 x 39.4cm)




3 Top (DF6008)
(74.8 x 39.6cm)



4 Plinth (DF5856)
(71.4 x 9.2cm)



5 Back Rail (DF5857)
(71.4 x 6cm) x 2



6 Cross Rail (DF5858)
(71.4 x 6cm)



7 Drawer Front (DF5996)
(70.8 x 15.7cm) x 4



8 Left Drawer Side (W350-130LH)
(35 x 13cm) x 4




9 Right Drawer Side (W350-130RH)
(35 x 13cm) x 4



10 Drawer Back (W665-130)
(66.5 x 13cm) x 4



11 Drawer Base (T676-347)
(67.6 x 34.7cm) x 4

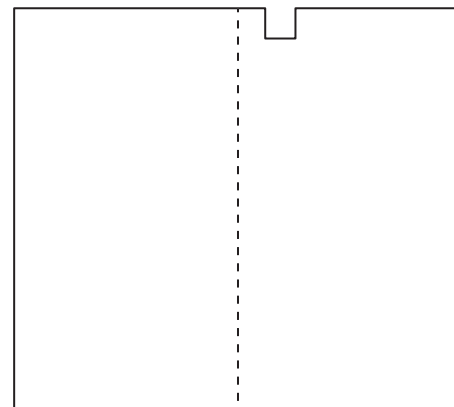

12 Back (X740-669)
(74 x 66.9cm)



Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)







Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020








Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.







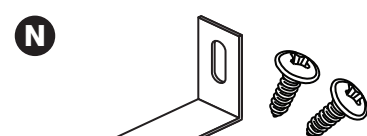
Drawer Fittings Bag marked 'drw kit'

A  Quickfit dowel (F545) x 8	B  Large locking cam nut (F607) x 8	C  Knock-in Peg (F171GY) x 16
D  19mm Screw (F461) x 8	E  13mm Screw (F79) x 8	F  13mm Screw (F63) x 16

Main Fittings Bag

<div><div>A</div><div></div><div>Quickfit dowel (F545) x 10</div></div>	<div><div>B</div><div></div><div>Locking nut (F607) x 10</div></div>	<div><div>F</div><div></div><div>13mm Screw (F63) x 8</div></div>	
<div><div>G</div><div></div><div>Wooden dowel (F22) x 14</div></div>	<div><div>H</div><div></div><div>9mm Screw (F73) x 24</div></div>	<div><div>I</div><div></div><div>Plastic Nail (F91) x 5</div></div>	<div><div>J</div><div></div><div>Nail (F51) x 25</div></div>

Individual Fittings Bags

K  336mm long Drawer Brace (F420) x 4	L  Handle (F418) x 8
<div data-bbox="183 1657 933 1691">350mm long</div> M a  CL Runner (F422) x 4 M b  CR Runner (F424) x 4 M c  DL Runner (F425) x 4 M d  DR Runner (F426) x 4	N  Overbalance protector kit (F474) x 1

Assembly Instructions

Step 1

Prepare the 4 pairs of drawer sides

a: Insert a large locking cam nut **B** into the left drawer sides **8** and the right drawer sides **9**.

Note: The arrow on the locking cam nut **must** point towards the hole in the end of the panel.







b: Push 1 of the quickfit dowels **A** as far as it will go into the left drawer sides **8** and the right drawer sides **9**.

Note: Only the plastic thread of the quickfit dowel sticks out from the panel.



Standard Drawer Box Assembly

<https://www.youtube.com/watch?v=HclfJdkm-Lg>

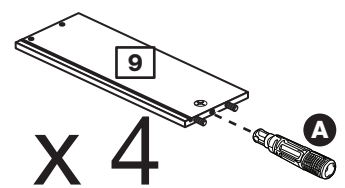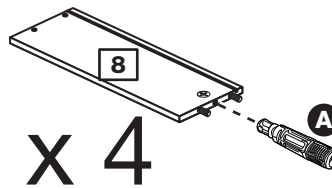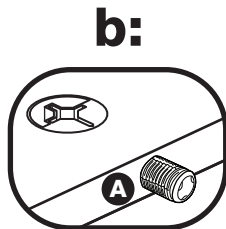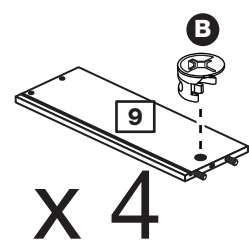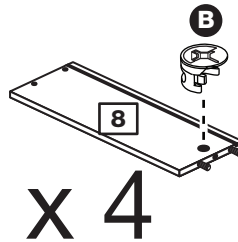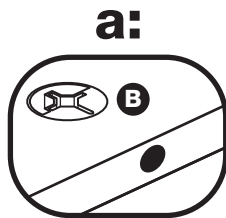



Step 2

Fit the drawer sides to the 4 drawer fronts

Push the left drawer sides **8** and right drawer sides **9** down onto the back of the 4 drawer fronts **7**.

Turn the large locking cam nuts **B** clockwise as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

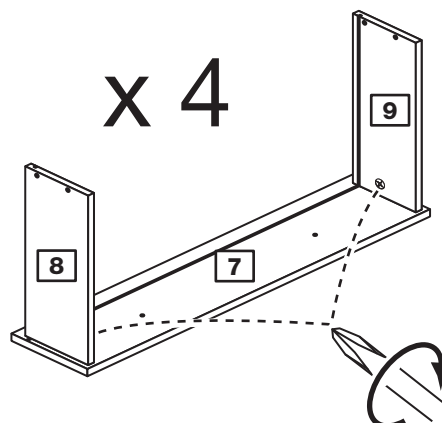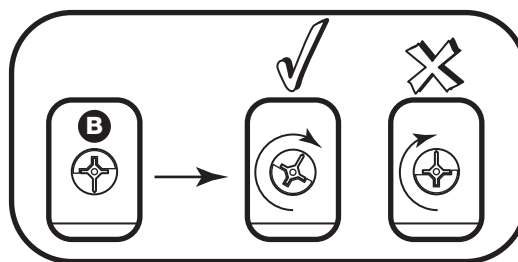


Assembly Instructions

Step 3

Fit the drawer bases

Slide a drawer base **11** down the grooves in the drawer sides **8** and **9** and down into the groove in the drawer front **7**.

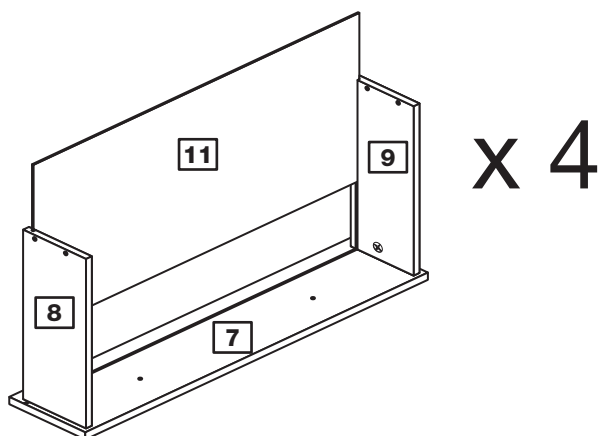


Step 4

Fit the drawer backs

Fit a drawer back **10** between the drawer sides **8** and **9**.

Make sure that the drawer base **11** fits into the groove in the drawer back **10**.


Hold the drawer back **10** in position and tap the knock-in pegs **C** through the holes in the drawer sides **8** and **9**.

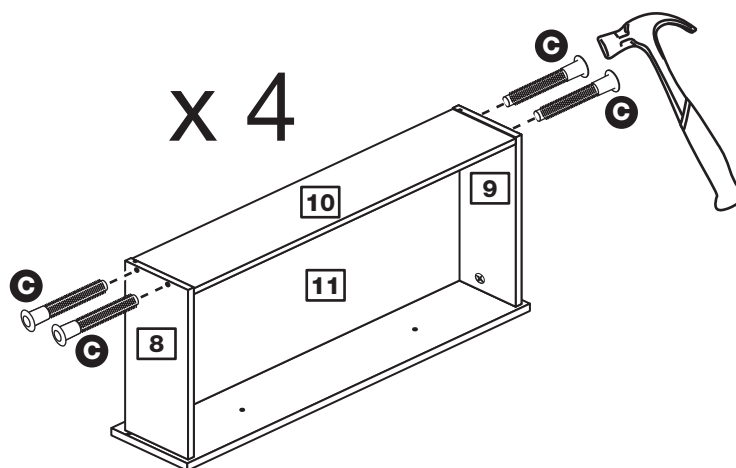

Step 5

Fit the handles

Attach 2 handles **L** to each drawer front **7** using screws **D**.

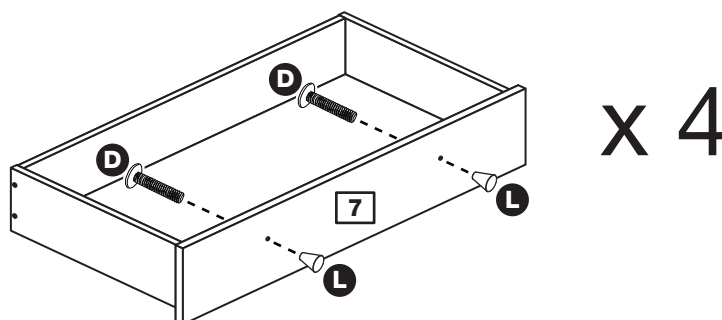


Assembly Instructions

Step 6


Fit the drawer braces

Turn the 4 drawer assemblies over and hook a drawer brace **K** onto the bottom edge of the drawer back **10**.

Fix it to the drawer front and drawer back using 2 screws **E**.

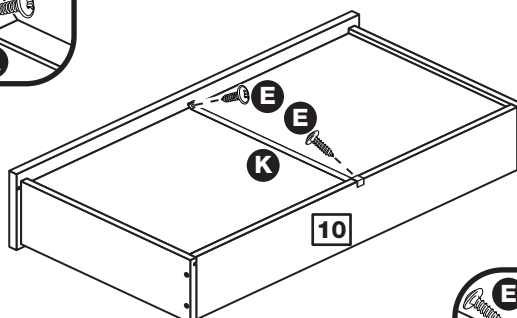

x 4

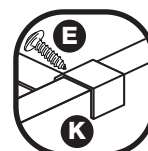

Important: Make sure that the drawer assembly is square before fitting the drawer brace.

Step 7

Fit runners to the drawers

Fit the DL runner **M_c** to the bottom edge of the left drawer side **8**, as shown, making sure that it is pushed up against the back of the drawer front **7**. Use a bradawl to mark the fixing positions, then secure with 2 screws **F**.


Fit the DR runner **M_d** to the bottom edge of the right drawer side **9** using the same method.



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMyl9h7Q>

Runners must be pushed up against the drawer front

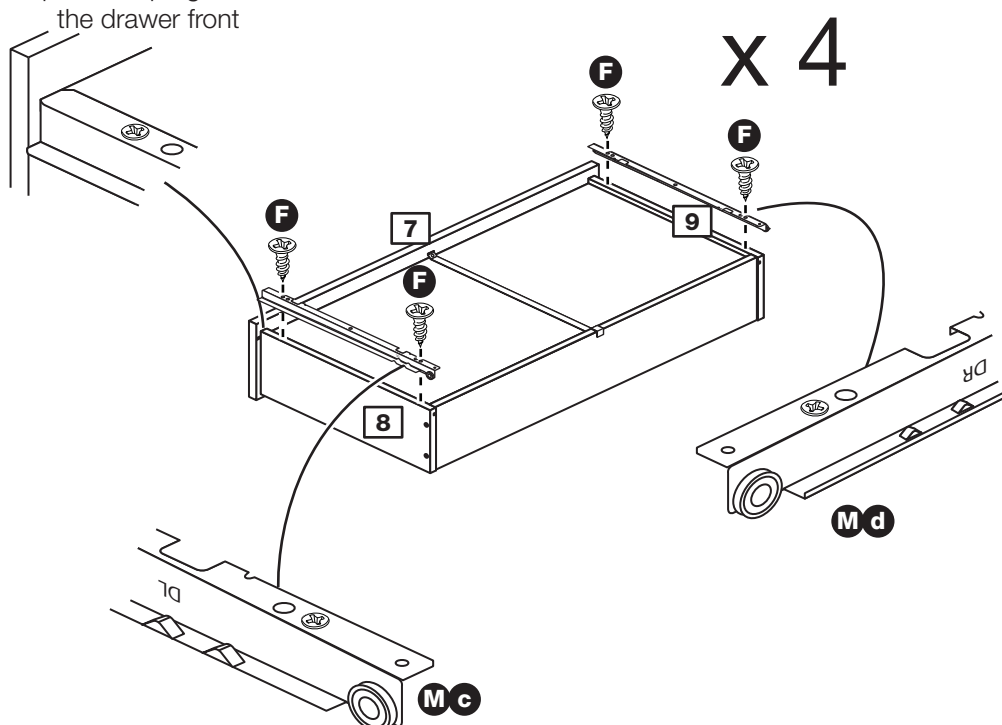

Assembly Instructions

Step 8

Prepare the left side

a: Fit 4 CL runners **Ma** to the left side **1**.

The 1st screw **H** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

b: Fit a screw **F** into the hole at the top of the runner **Ma**.

c: Insert 2 large locking cam nuts **B** into the left side **1**.

Push 2 of the quickfit dowels **A** as far as they will go into the left side **1**.

Tap 2 wooden dowels **G** into the left side **1**.






Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Use the Main Fittings Bag for Steps 8 - end



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMyl9h7Q>

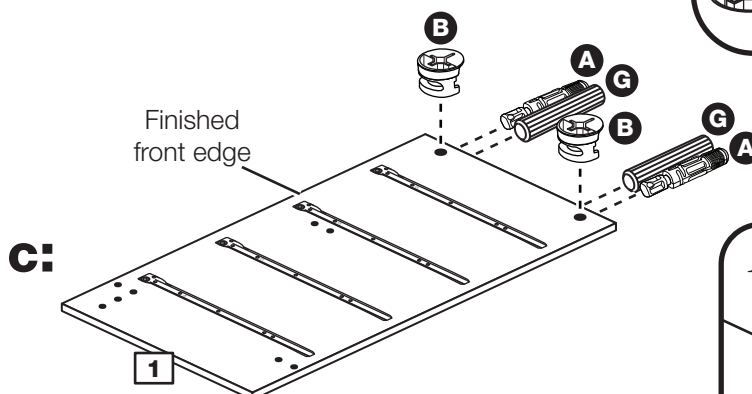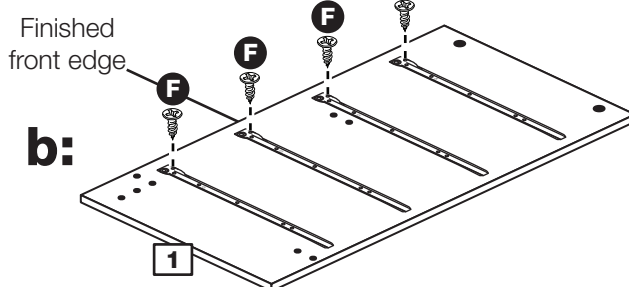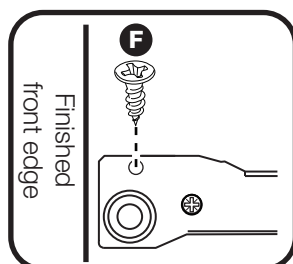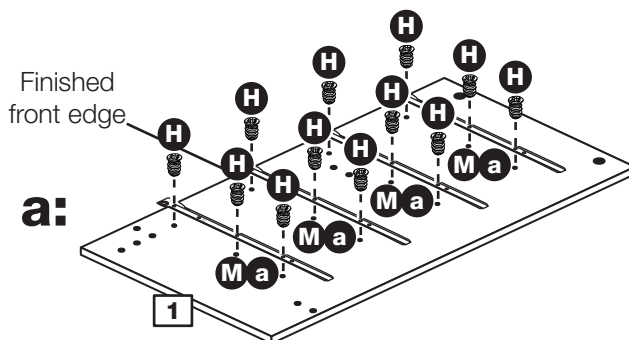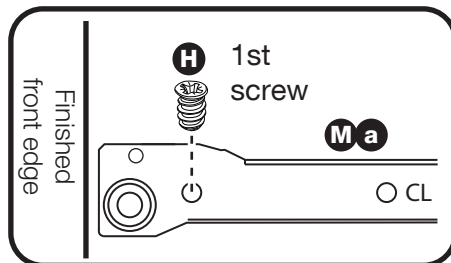

Assembly Instructions

Step 9

Prepare the right side

a: Fit 4 CR runners **M b** to the right side **2**.

The 1st screw **H** uses the 1st hole in from the front of the runner.






The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

b: Fit a screw **F** into the hole at the top of the runner **M b**.

c: Insert 2 large locking cam nuts **B** into the right side **2**.

Push 2 of the quickfit dowels **A** as far as they will go into the right side **2**.

Tap 2 wooden dowels **G** into the right side **2**.

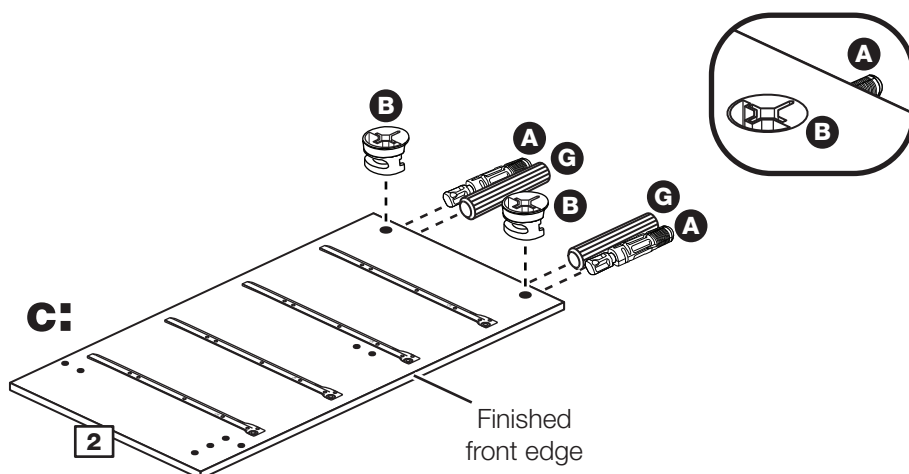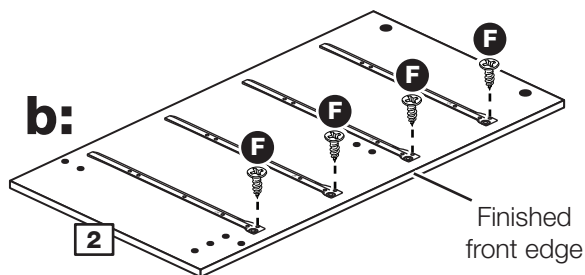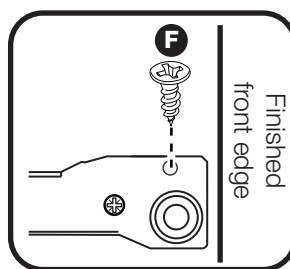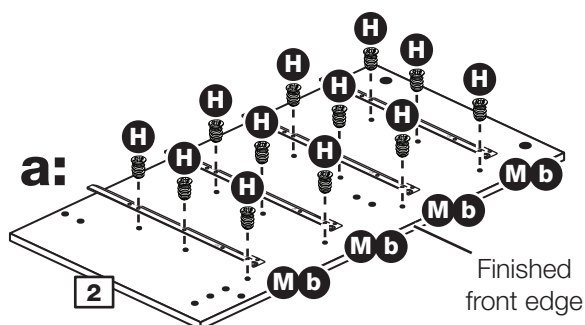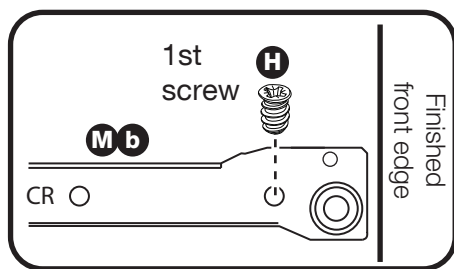


Assembly Instructions

Step 10

Prepare the cross rail


Tap 4 wooden dowels **G** into the cross rail **6**.

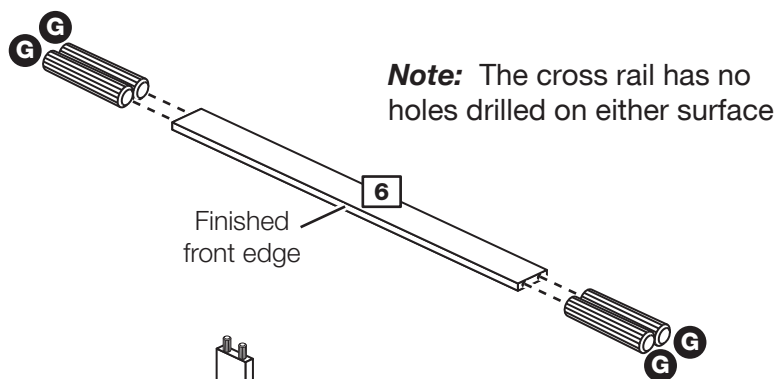

Step 11

Fit the cross rail onto the left side

Push the cross rail **6** down onto the left side **1**.

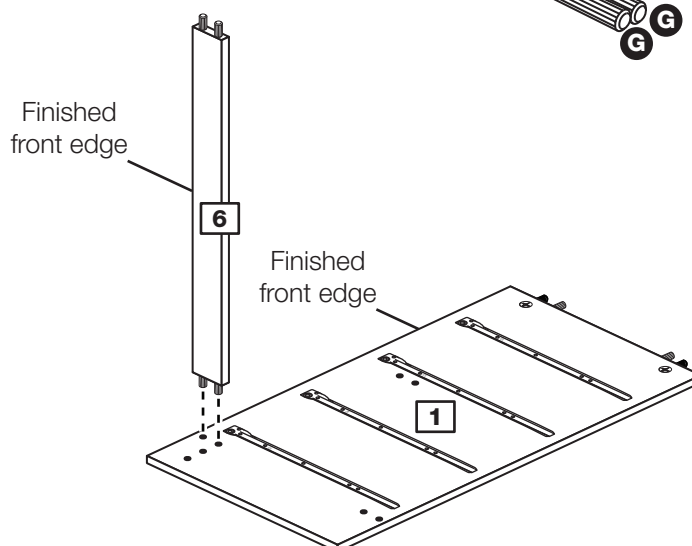


Step 12

Prepare the plinth

Insert 2 large locking cam nuts **B** into the plinth **4**.

Push 2 of the quickfit dowels **A** as far as they will go into the plinth **4**.

Tap 2 wooden dowels **G** into the plinth **4**.

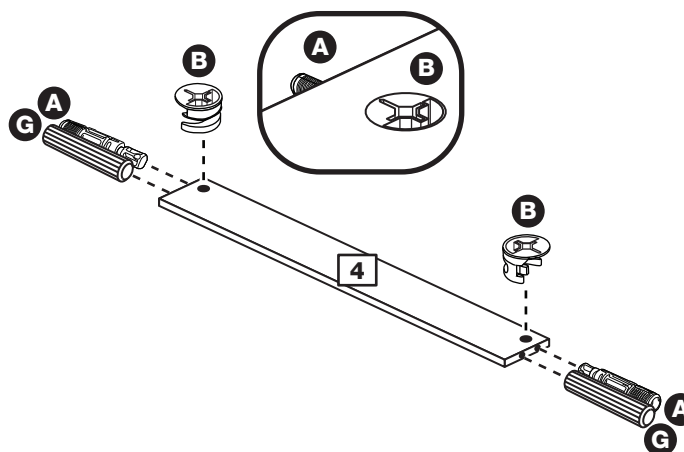


Step 13

Fit the plinth

Push the plinth **4** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise as far as it will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

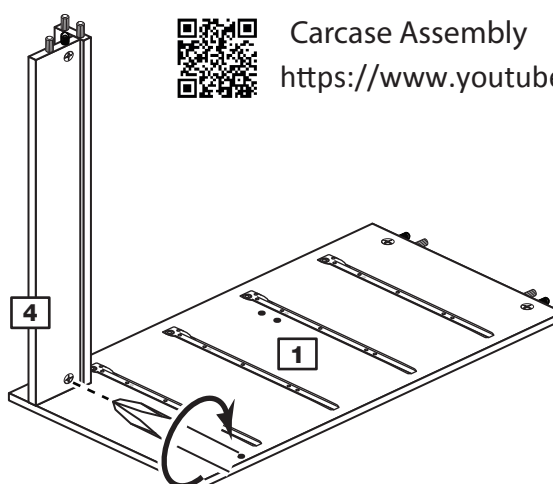

Carcase Assembly

<https://www.youtube.com/watch?v=9C7tgv5xnbE>

Assembly Instructions


Step 14

Prepare the 2 back rails

Insert 2 large locking cam nuts **B** into each of the back rails **5**.

Push 2 of the quickfit dowels **A** as far as they will go into each of the back rails **5**.

Tap 2 wooden dowels **G** into each of the back rails **5**.

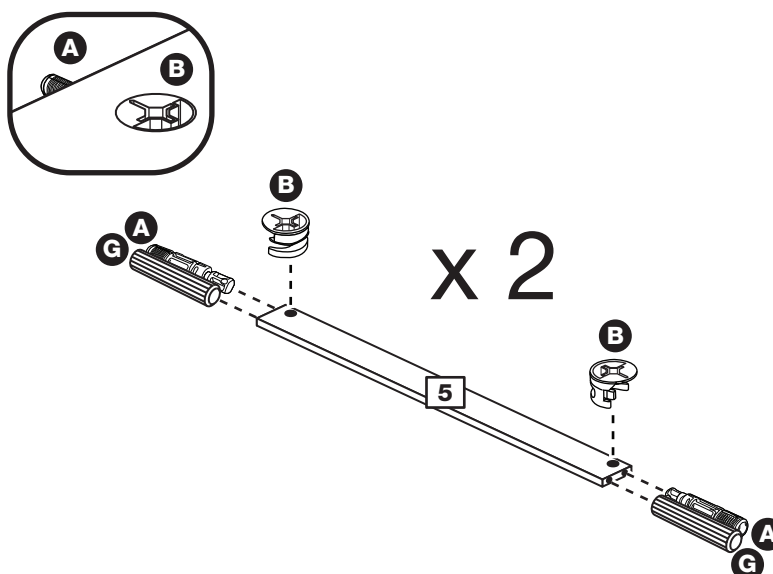


Step 15

Fit 1 of the back rails

Push a back rail **5** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise as far as it will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

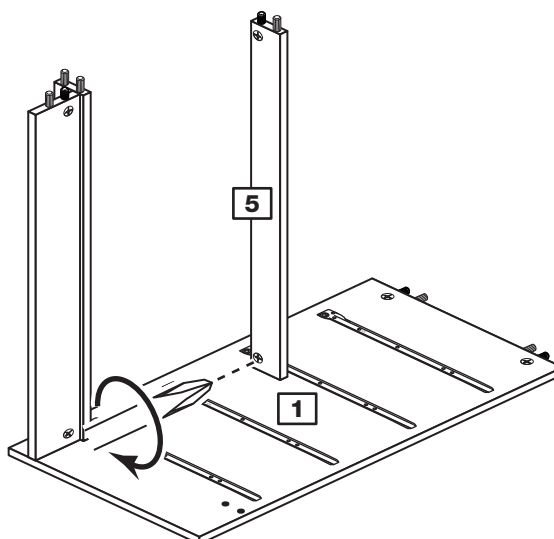


Step 16

Fit the other back rail

Push the back rail **5** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise as far as it will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

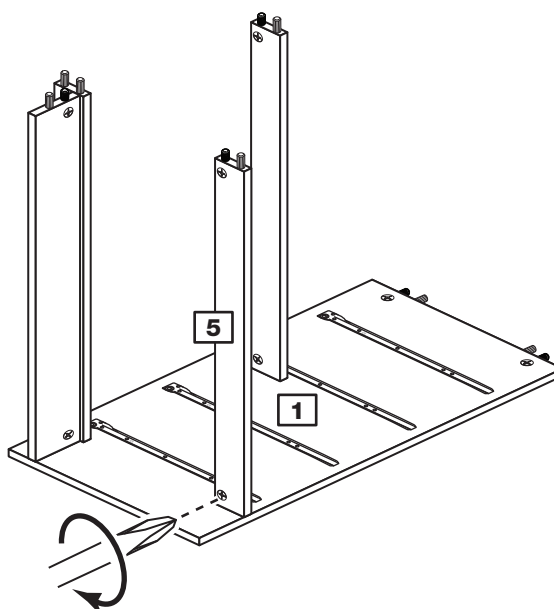

Assembly Instructions

Step 17

Fit the right side

Push the right side **2** down onto the assembly.


Turn the 3 large locking cam nuts **B** clockwise as far as it will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

Carefully stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

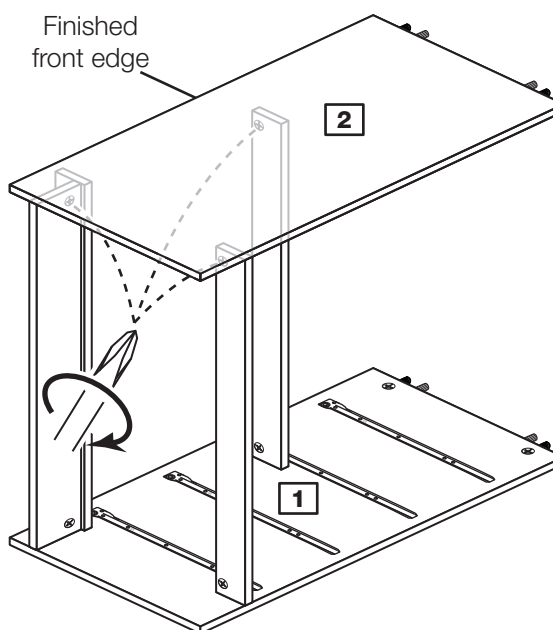

Step 18

Fit the top

Push the top **3** down onto the assembly.


Turn the 4 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

Carefully lay the unit down onto its front edges for the next step.



Warning: The unit is heavy. Lift with care.

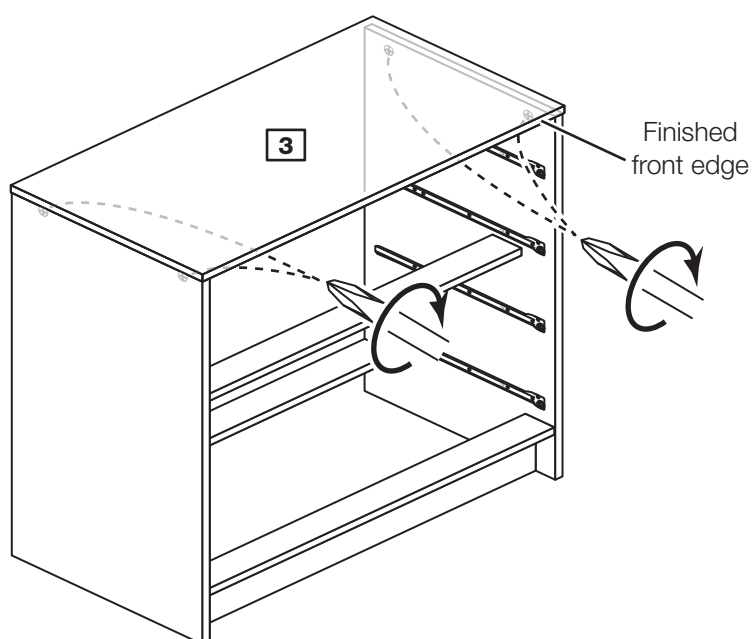

Assembly Instructions

Step 19



Squaring up a Chest and fitting the Back Panel

www.youtube.com/watch?v=Feal6541z7o

Fit the back


a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **12** onto the unit.

Nail **J** around the outside edges of the back **12**.

Note: Nails should be spaced out evenly.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

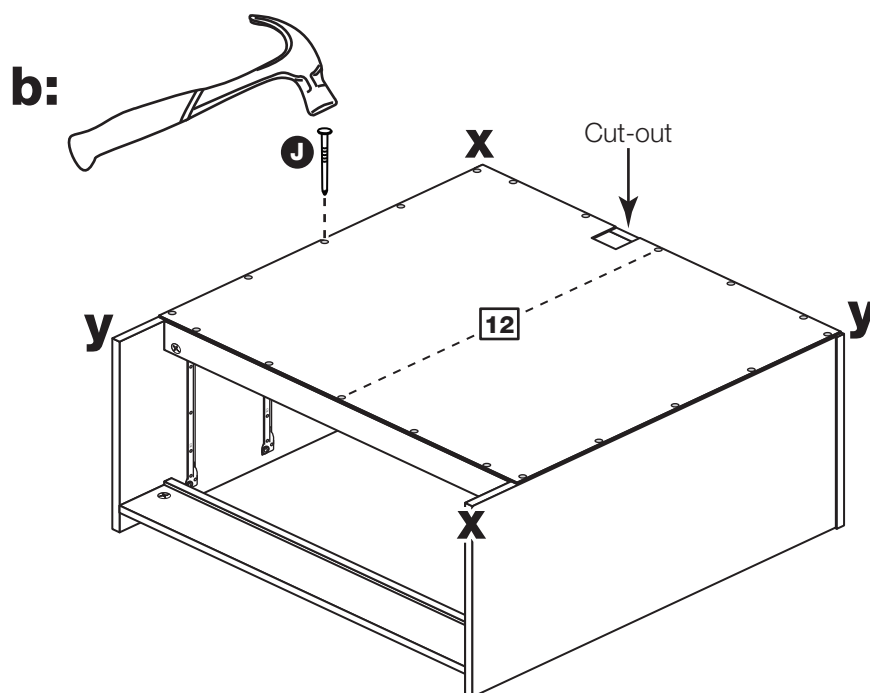

Step 20


Fit the 5 plastic nails

Tap 2 plastic nails **1** into the bottom edge of each of the sides **1** and **2** and 1 plastic nail into plinth **4**.

Carefully stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

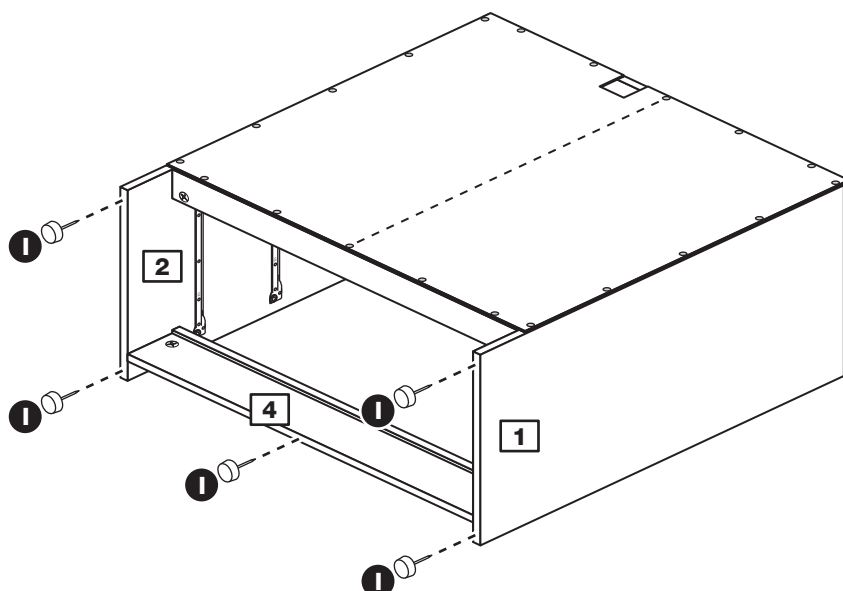

Assembly Instructions

Step 21

Fit the overbalance protector kit



a: Before fitting the overbalance protector kit, use a spirit level to check the top of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level.

To prevent possible overbalancing this unit **must be secured** to a suitable wall by fitting of the overbalance protector kit **N** to the unit, or an alternative fixing method of your choice.


Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

a:

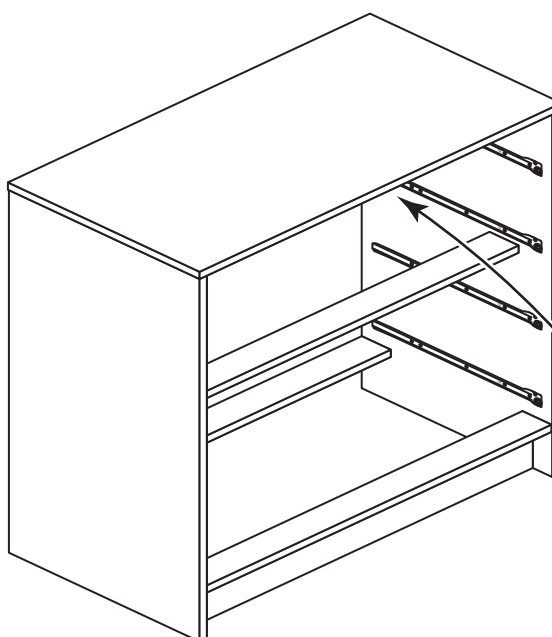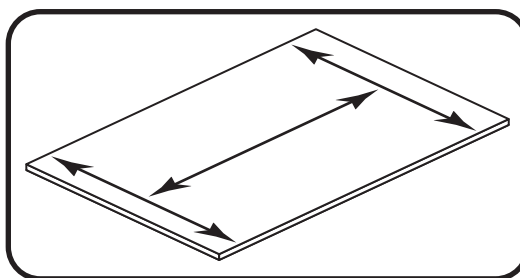

b:

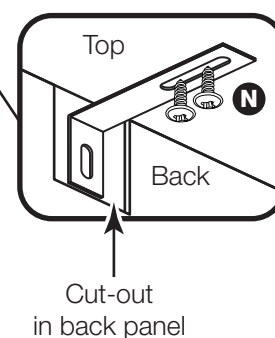

Assembly Instructions

Step 22





Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete

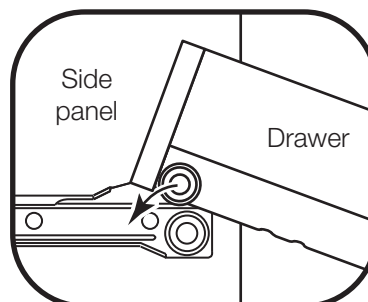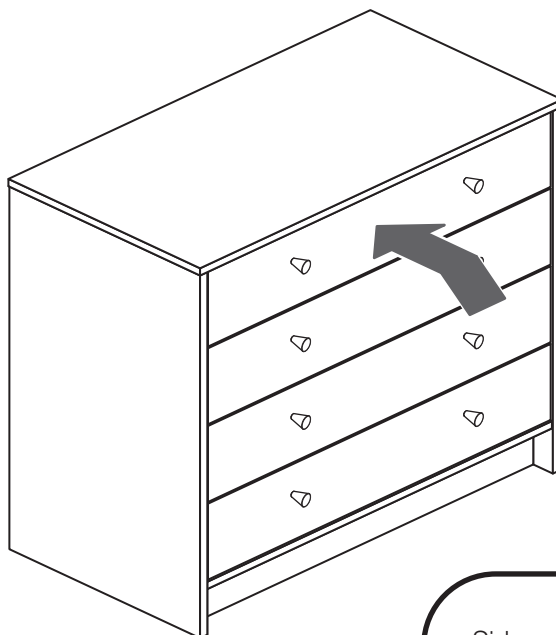

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

