

# Adult Malibu - Single Bedside

Assembly Instructions - Please keep for future reference


532/9717

555/1231

565/5814

565/6291

553/2803

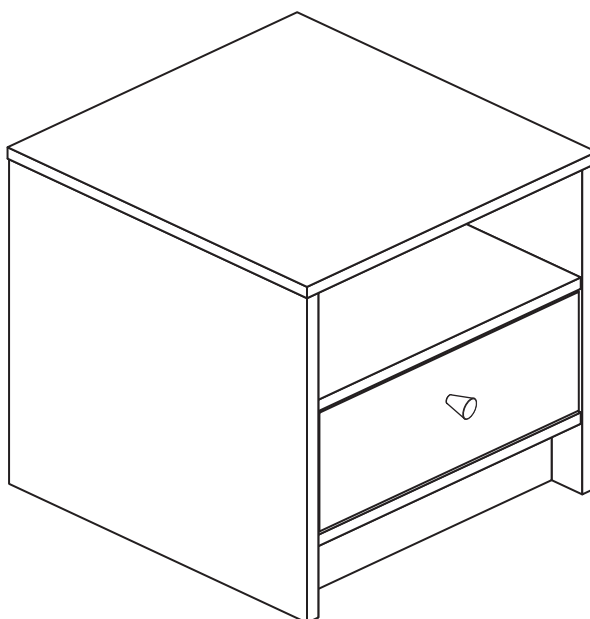

More help is available throughout this booklet by scanning  
in the QR codes or typing in the links

## Dimensions

Width - 38.3cm

Depth - 39.6cm

Height - 44.6cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk)  
or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 10kgs. Please lift with care.
  - Check you have all the components and tools listed on pages 2 and 3.
  - Remove all fittings from the plastic bags and separate them into their groups.
  - Keep children and animals away from the work area, small parts could choke if swallowed.
  - Parts of the assembly will be easier with 2 people.
  - Make sure you have enough space to layout the parts before starting.
  - Do not stand or put weight on the product, this could cause damage.
  - Assemble the item as close to its final position (in the same room) as possible.
  - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
  - **Safety note:** If there is any chance of this unit being pulled over by children etc. it **must be secured** to a wall using suitable fixings (not supplied).
  - Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels


If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below


When applicable, remove any protective film before use

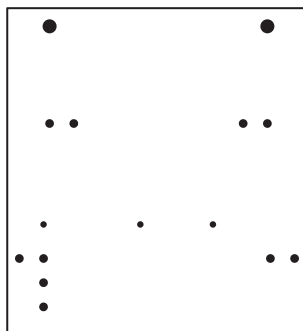


**1** Left Side (DF7343)  
(43.1 x 39.4cm)

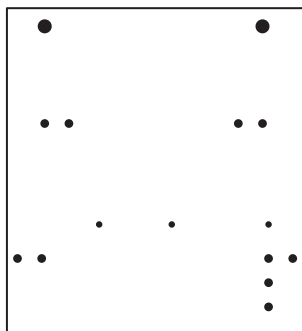


**2** Right Side (DF7344)  
(43.1 x 39.4cm)

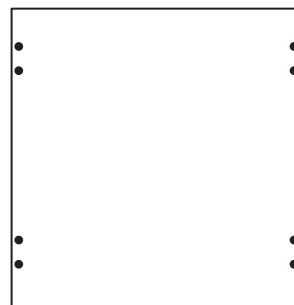


**3** Top (DF6020)  
(38.3 x 39.6cm)

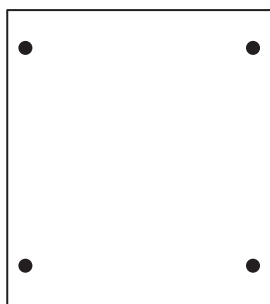


**4** Shelf (DF7345)  
(34.9 x 39.2cm)




**5** Plinth (DF6021)  
(34.9 x 9.2cm)




**6** Back Rail (DF6022)  
(34.9 x 6cm)




**7** Cross Rail (DF6023)  
(34.9 x 6cm)

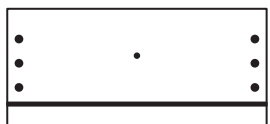

**8** Drawer Front (DF6025)  
(34.3 x 15.7cm)




**9** Left Drawer Side (W350-130LH)  
(35 x 13cm)




**10** Right Drawer Side (W350-130RH)  
(35 x 13cm)



**11** Drawer Back (W300-130)  
(30 x 13cm)



**12** Drawer Base (T311-347)  
(31.1 x 34.7cm)



**13** Back (X375-350)  
(37.5 x 35cm)



# Components - Fittings
















If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  Quickfit dowel (F545) x 14	<b>B</b>  Large locking cam nut (F607) x 14	<b>C</b>  Knock-in Peg (F171GY) x 4
<b>D</b>  19mm Screw (F461) x 1	<b>E</b>  Wedgefix (F639) x 2	<b>F</b>  13mm Screw (F63) x 6
<b>G</b>  Wooden dowel (F22) x 16	<b>H</b>  9mm Screw (F73) x 6	<b>I</b>  Plastic Nail (F91) x 4
<b>J</b>  Nail (F51) x 12	<b>K</b>  Handle (F418) x 1	
<div data-bbox="82 1276 726 1355"> <b>L a</b>  350mm long  CL Runner (F422) x 1 </div> <div data-bbox="82 1355 726 1433"> <b>L b</b>   CR Runner (F424) x 1 </div> <div data-bbox="82 1433 726 1512"> <b>L c</b>   DL Runner (F425) x 1 </div> <div data-bbox="82 1512 726 1590"> <b>L d</b>   DR Runner (F426) x 1 </div>		

## Tools required

Ruler - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1


### Prepare the drawer sides

**a:** Insert a large locking cam nut **B** into the left drawer side **9** and the right drawer side **10**.

**Note:** The arrow on the locking cam nut **must** point towards the hole in the end of the panel.

**b:** Push 1 of the quickfit dowels **A** as far as it will go into the left drawer side **9** and the right drawer side **10**.

**Note:** Only the plastic thread of the quickfit dowel sticks out from the panel.

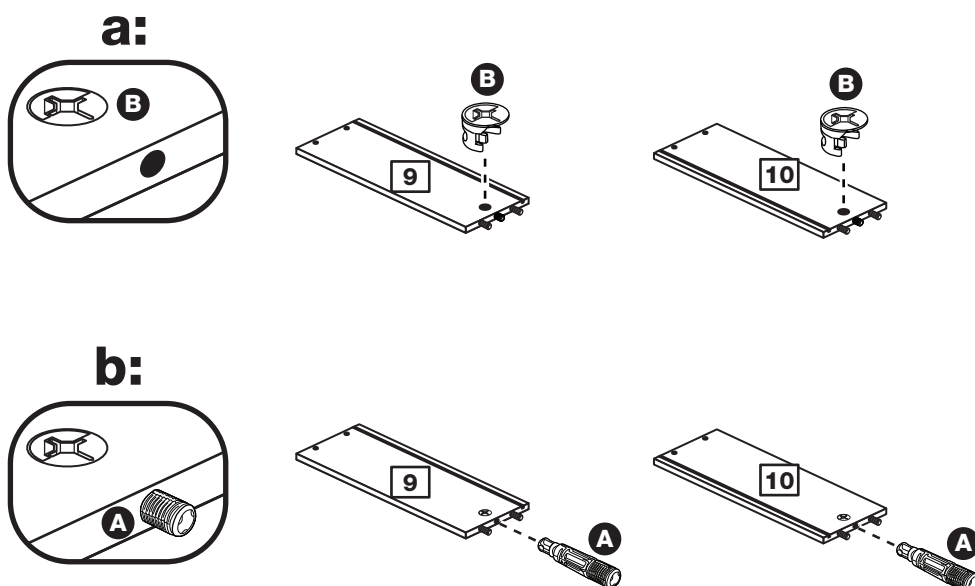


## Step 2

### Fit the drawer sides to the drawer front

Push the left drawer side **9** and right drawer side **10** down onto the back of the drawer front **8**.

Turn the large locking cam nuts **B** clockwise as far as they will go to secure the panels.

**Important:** Make sure there is no gap between the fitted panels.

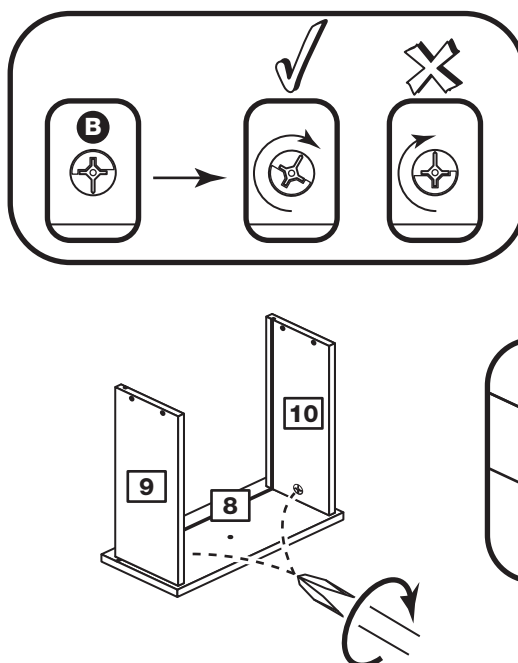


# Assembly Instructions

## Step 3

### Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

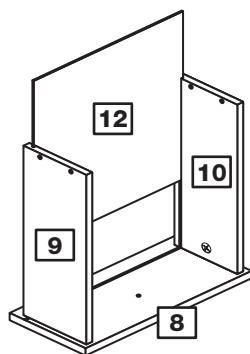


## Step 4

### Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**.

Make sure that the drawer base **12** fits into the groove in the drawer back **11**.


Hold the drawer back **11** in position and tap the knock-in pegs **C** through the holes in the drawer sides **9** and **10**.

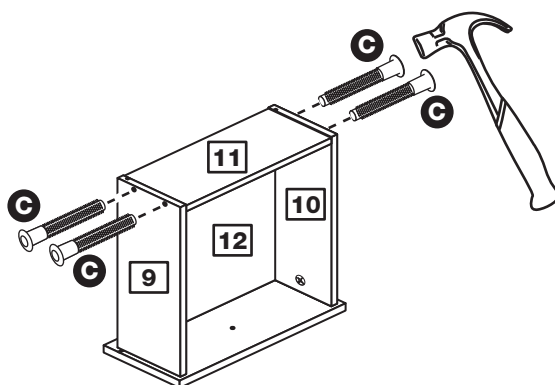

## Step 5

### Fit the handle

Attach the handle **K** to the drawer front **8** using screw **D**.


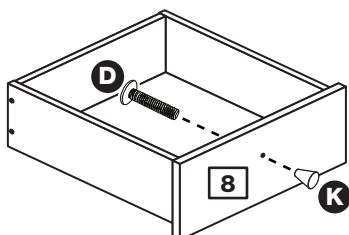


# Assembly Instructions

## Step 6

### Fit the wedgefixes

Turn the drawer assembly over and slide 2 wedgefixes **E** into the front and back grooves, as shown, and tighten up the screws.

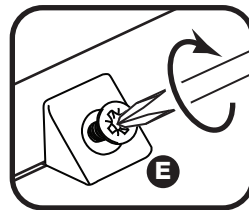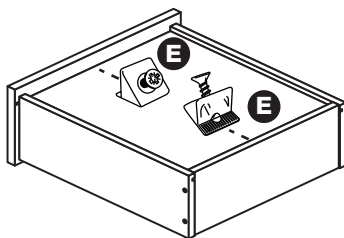

**Important:** Make sure that the drawer assembly is square before fitting the wedgefixes.

## Step 7

### Fit runners to the drawer

Fit the DL runner **Lc** to the bottom edge of the left drawer side **9**, as shown, making sure that it is pushed up against the back of the drawer front **8**. Use a bradawl to mark the fixing positions, then secure with 2 screws **F**.


Fit the DR runner **Ld** to the bottom edge of the right drawer side **10** using the same method.



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

Runners must be pushed up against the drawer front

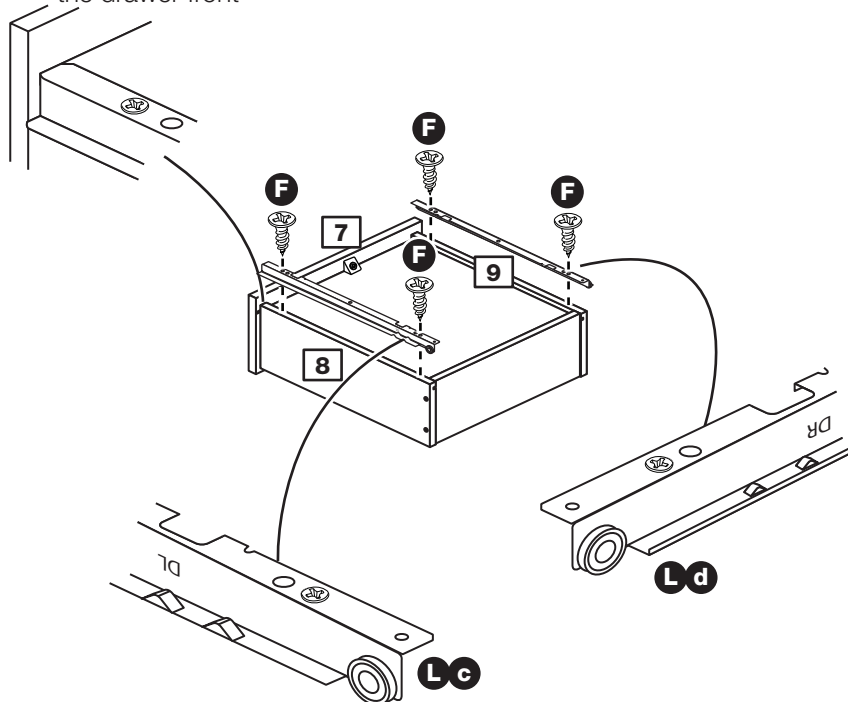

# Assembly Instructions

## Step 8

### Prepare the left side

**a:** Fit the CL runner **L a** to the left side **1**.

The 1st screw **H** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

**b:** Fit a screw **F** into the hole at the top of the runner **L a**.

**c:** Insert 2 large locking cam nuts **B** into the left side **1**.

Push 2 of the quickfit dowels **A** as far as they will go into the left side **1**.






Tap 2 wooden dowels **G** into the left side **1**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

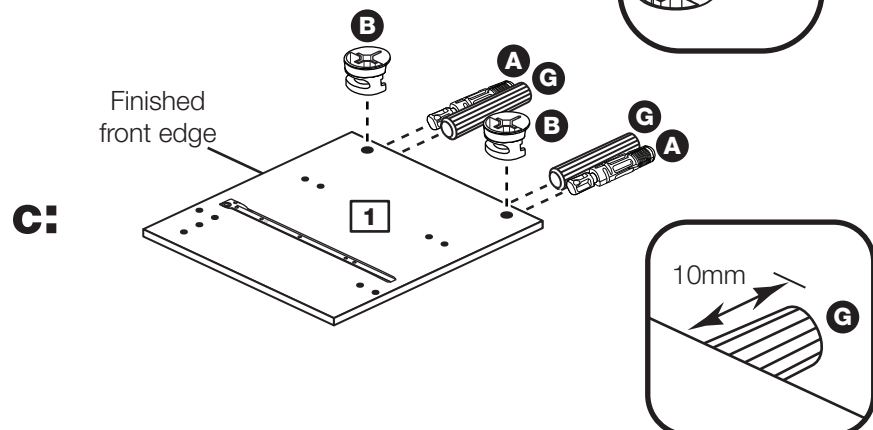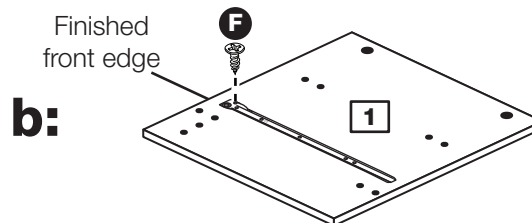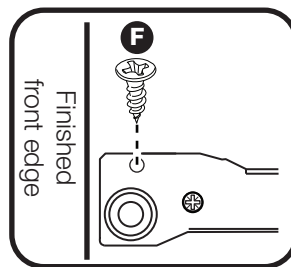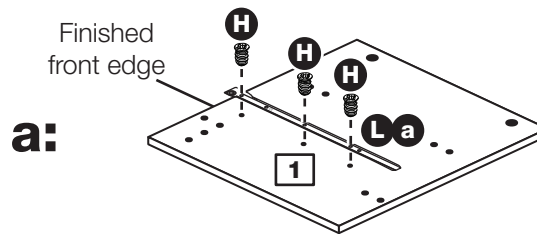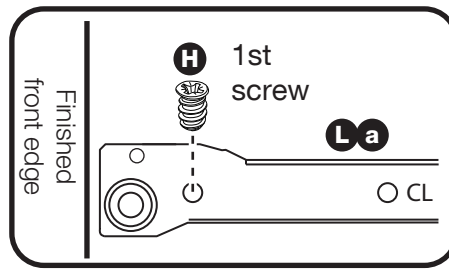



# Assembly Instructions

## Step 9

### Prepare the right side

**a:** Fit the CR runner **Lb** to the right side **2**.

The 1st screw **H** uses the 1st hole in from the front of the runner.






The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

**b:** Fit a screw **F** into the hole at the top of the runner **Lb**.

**c:** Insert 2 large locking cam nuts **B** into the right side **2**.

Push 2 of the quickfit dowels **A** as far as they will go into the right side **2**.

Tap 2 wooden dowels **G** into the right side **2**.

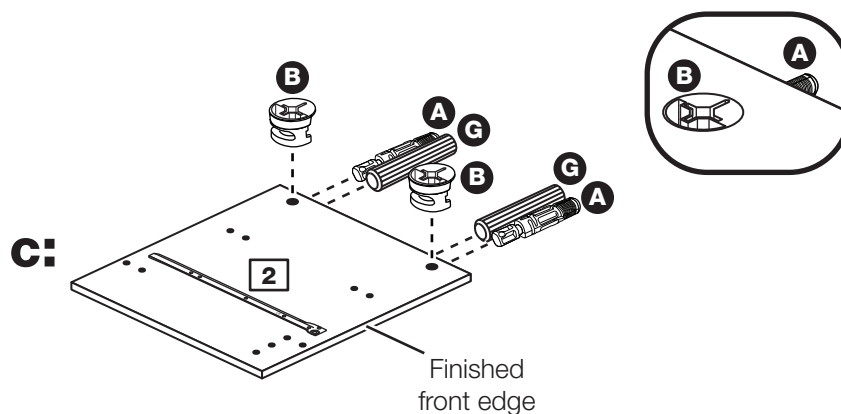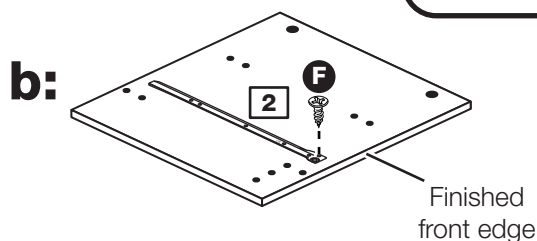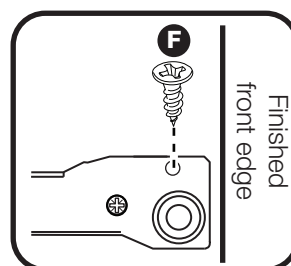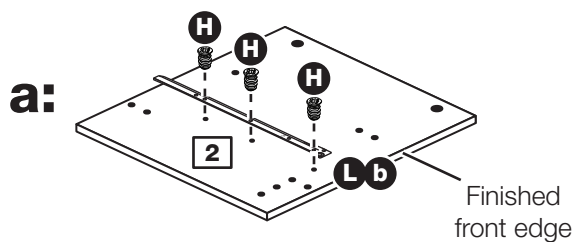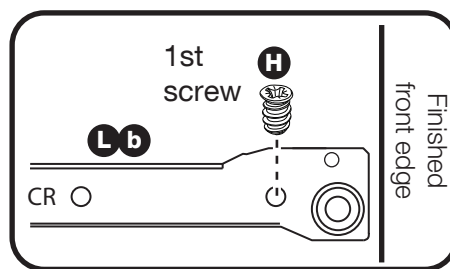

# Assembly Instructions


## Step 10

### Prepare the shelf

Insert 4 large locking cam nuts **B** into the shelf **4**.

Push 4 of the quickfit dowels **A** as far as they will go into the shelf **4**.

Tap 4 wooden dowels **G** into the shelf **4**.

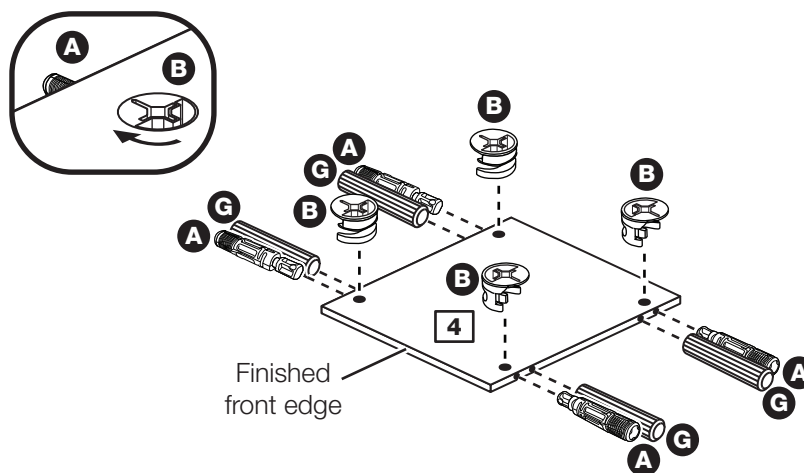

## Step 11

### Fit the shelf onto the left side

Push the shelf **4** down onto the left side **1**.


Turn the 2 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

**Important:** Make sure there is no gap between the fitted panels.



Carcase Assembly


<https://www.youtube.com/watch?v=9C7tgV5xnbE>

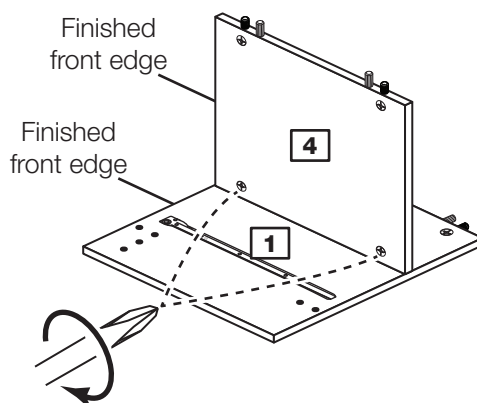

## Step 12

### Prepare the cross rail

Tap 4 wooden dowels **G** into the cross rail **7**.

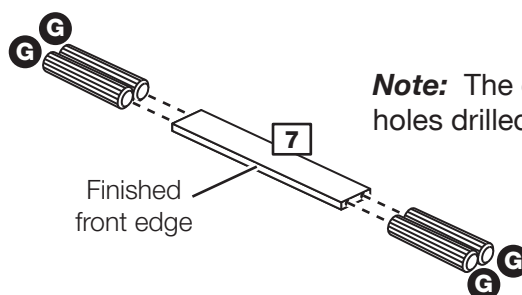


**Note:** The cross rail has no holes drilled on either surface

## Step 13

### Fit the cross rail onto the left side

Push the cross rail **7** down onto the left side **1**.

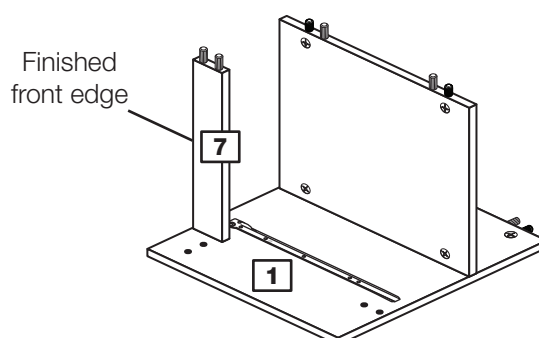

# Assembly Instructions


## Step 14

### Prepare the plinth

Insert 2 large locking cam nuts **B** into the plinth **5**.

Push 2 of the quickfit dowels **A** as far as they will go into the plinth **5**.

Tap 2 wooden dowels **G** into the plinth **5**.

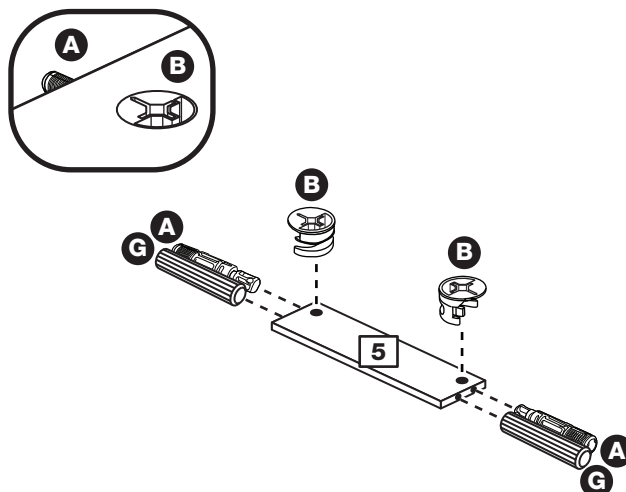


## Step 15

### Fit the plinth

Push the plinth **5** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise as far as they will go to secure the panels.

**Important:** Make sure there is no gap between the fitted panels.

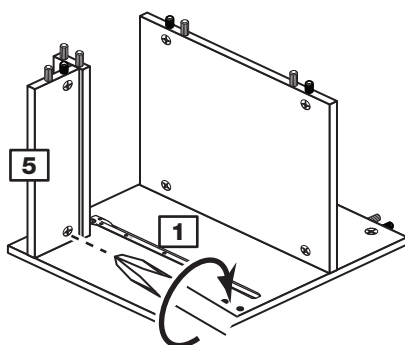


## Step 16

### Prepare the back rail

Insert 2 large locking cam nuts **B** into the back rail **6**.

Push 2 of the quickfit dowels **A** as far as they will go into the back rail **6**.

Tap 2 wooden dowels **G** into the back rail **6**.

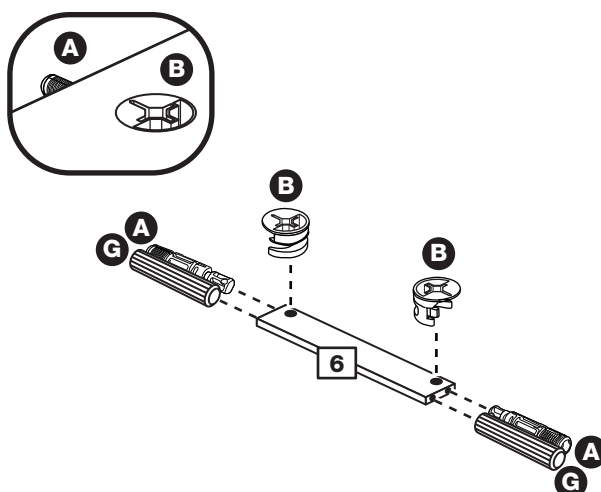

# Assembly Instructions


## Step 17

### Fit the back rail

Push the back rail **6** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise as far as they will go to secure the panels.

**Important:** Make sure there is no gap between the fitted panels.

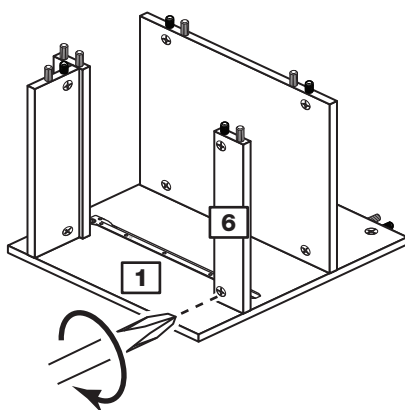

## Step 18


### Fit the right side

Push the right side **2** down onto the assembly.

Turn the 4 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

**Important:** Make sure there is no gap between the fitted panels.

**Carefully stand the unit up for the next step.**

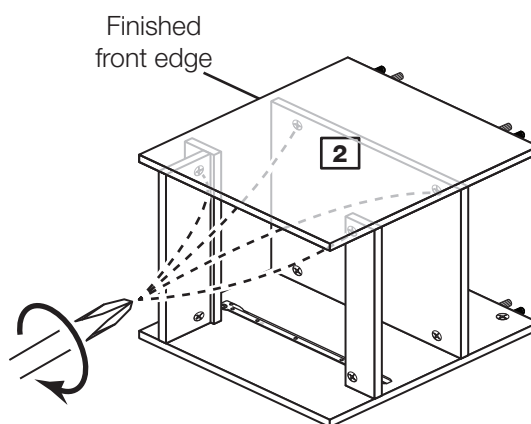


## Step 19

### Fit the top

Push the top **3** down onto the assembly.

Turn the 4 large locking cam nuts **B** clockwise as far as they will go to secure the panels.

**Important:** Make sure there is no gap between the fitted panels.

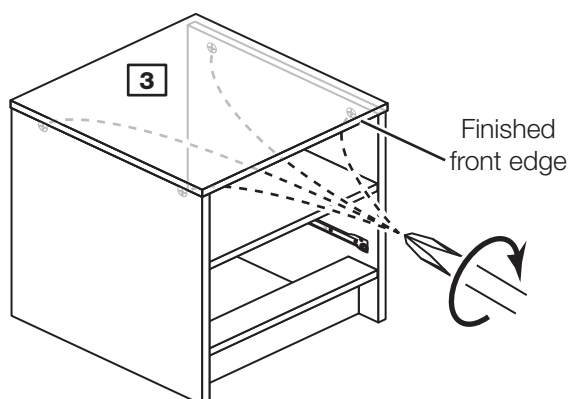

# Assembly Instructions

## Step 20

### Fit the back

**Carefully lay the unit down onto its front edges for this step.**

**a:** Square up the unit by making sure that measurement **x to x** equals **y to y**.

**b:** Place the back **13** onto the unit.

Nail **J** around the outside edges of the back **13**.


**Note:** Nails should be spaced out evenly.



Squaring up a Chest and fitting the Back Panel

[www.youtube.com/watch?v=Feal6541z7o](http://www.youtube.com/watch?v=Feal6541z7o)

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

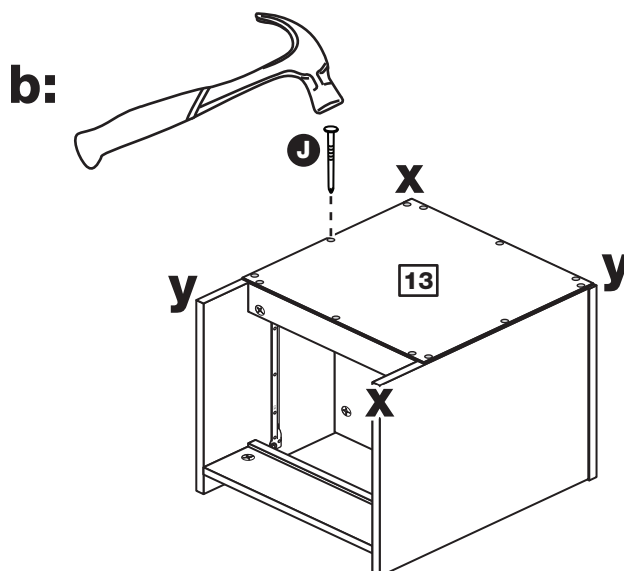


## Step 21

### Fit the 4 plastic nails

Tap 2 plastic nails **I** into the bottom edge of each of the sides **1** and **2**.

**Carefully stand the unit up for the next step.**

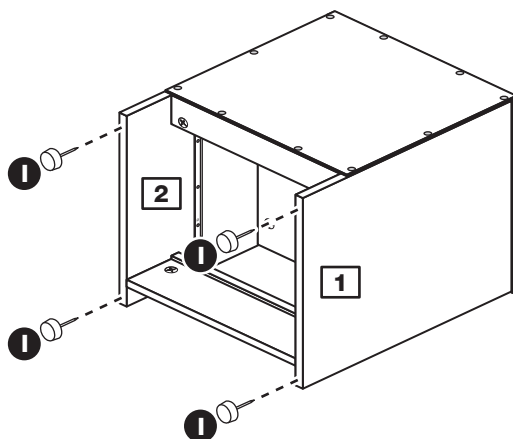

# Assembly Instructions

## Step 22

### Fit the drawer



Slide the wheels of the runners fitted to the drawer, over the wheels of the runners fitted to the side panels and push the drawer into position.

**Assembly is complete**



Fixing Bottom Mounter Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

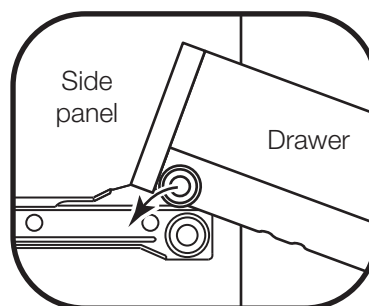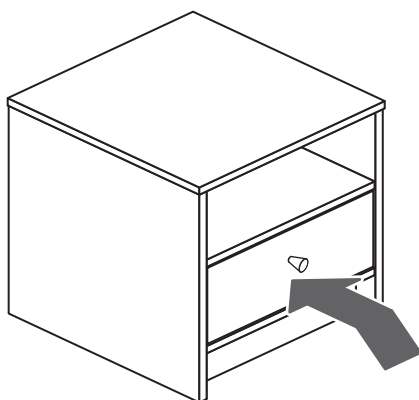

If you need help or have damaged or missing parts, please visit [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)  
Alternatively, call the Spares Helpline on: 0370 112 1928.  
For any other queries please contact the Customer Helpline on: 0345 640 2020



