


MADRID SPRING CUSHION CHAIR

Assembly Instructions - Please keep for future reference

6187862

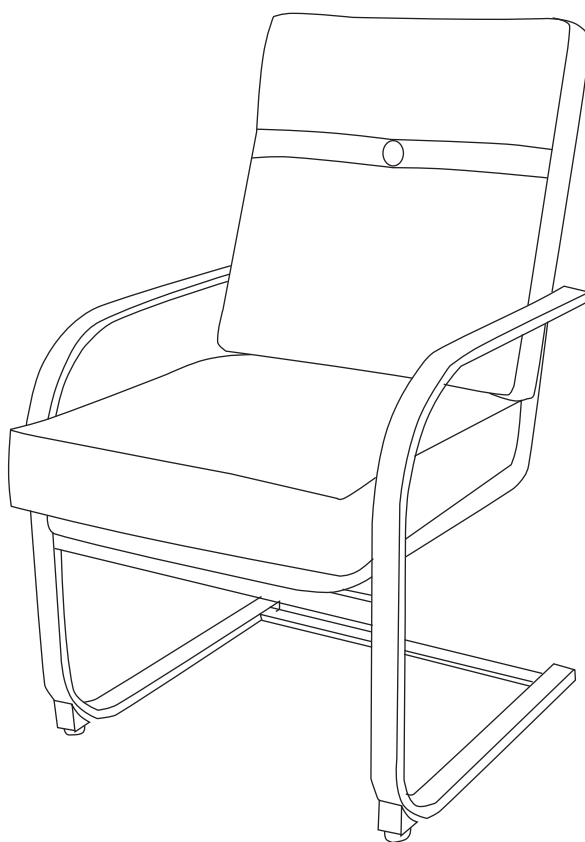

Dimensions

Width - 61.5cm
Depth - 73.5cm
Height - 91.5cm

Important - Read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456400800
For further assistance please visit <http://www.argos-support.co.uk/>



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the components during assembly, this could cause damage.
- Assembly on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- Do not stand on this chair.
- Warning: The unit weighs approximately 6 kgs. Please lift with care.







Care and maintenance

- Wash frame parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or other solvents on the frame parts.
- We recommend the use of furniture covers when not in use.
- Inspect and tighten all bolts and fasteners on a regular basis to ensure the proper performance and safety of your chair.
- In order to prolong the life and beauty of your chair, we recommend that it be stored in a dry and protected area when not in use .

Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly.


A  M6 x 10mm Bolt x 2	B  M6 x 15mm Bolt x 4	C  M6 x 35mm Bolt x 6
D  d6.5 x D13 x 1.0 Washer x 2	E  d6.5 x D10 x 1.6 Washer x 12	F  M6x1.0 Jam nut x 2

Components - Parts


Please check you have all the parts listed below

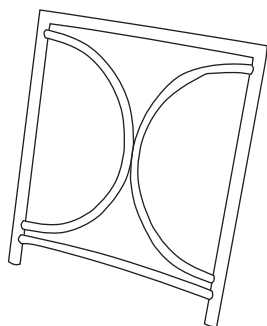


1 Back Assembly x 1

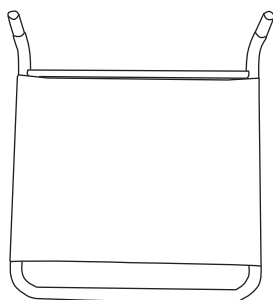

2 Seat Assembly x 1

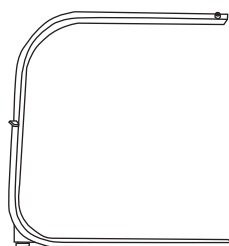

3 Right Leg x 1

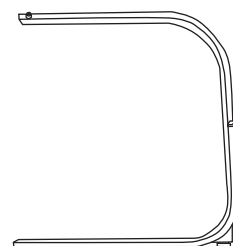


4 Left Leg x 1




5 Rear Support Brace x 1



6 Front Support Brace x 1

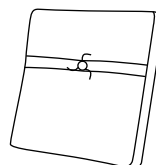

7 Back Cushion x 1



8 Seat Cushion x 1

Tools required




4mm Hex Key



Nut Wrench 10&13MM

Ruler - Use this ruler to help correctly identify the screws

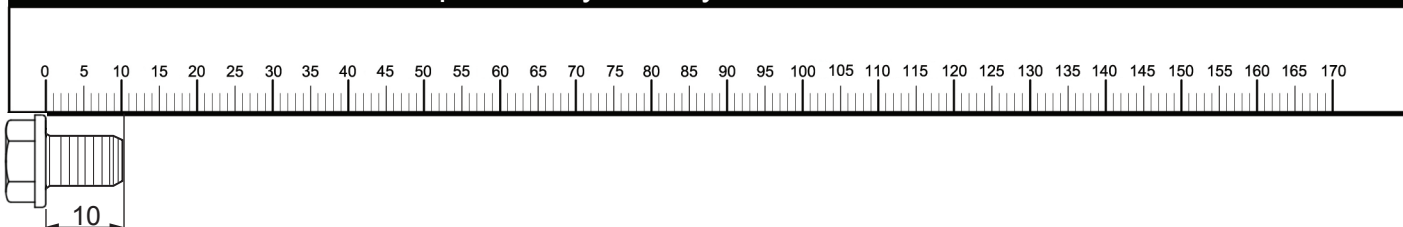


Assembly Instructions

Step 1

Insert the legs (**3** and **4**) to the rear support brace **5**, fix them by using bolts **A** and washers **E**. Keep the bolts loose.


Note:

The labels marked "L" and "R" on legs **3** and **4** should coincide with Step 1 to ensure proper assembly.

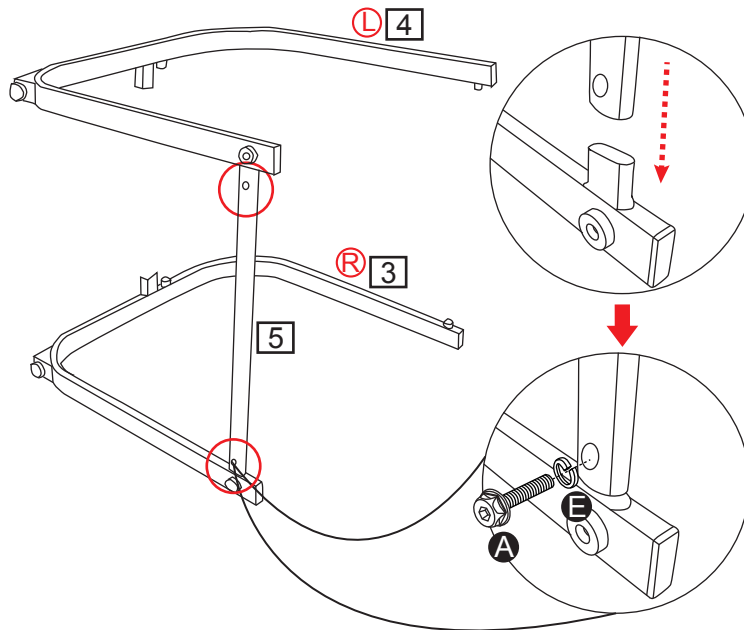

Step 2


Fix the front support brace **6** to the legs (**3** and **4**) by using bolts **B** and washers **E**. Keep the bolts loose.

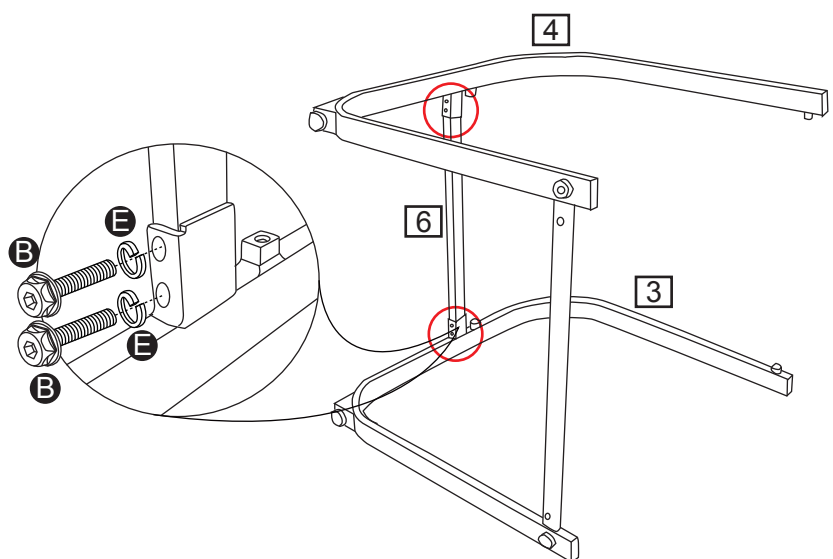

Assembly Instructions


Step 3

Insert the seat assembly **2** into the back assembly **1**. Make sure align the holes of them. Fix the them together by using bolts **C**, washers **D** and **E**, and plastic nuts **F**.

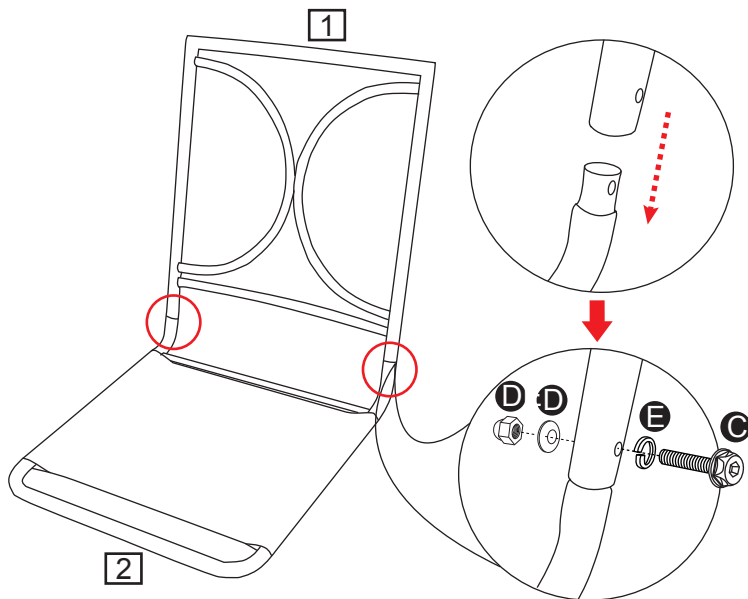

Step 4


Position the assemblies (**1** and **2**) onto the legs (**3** and **4**) and front support brace **6**.

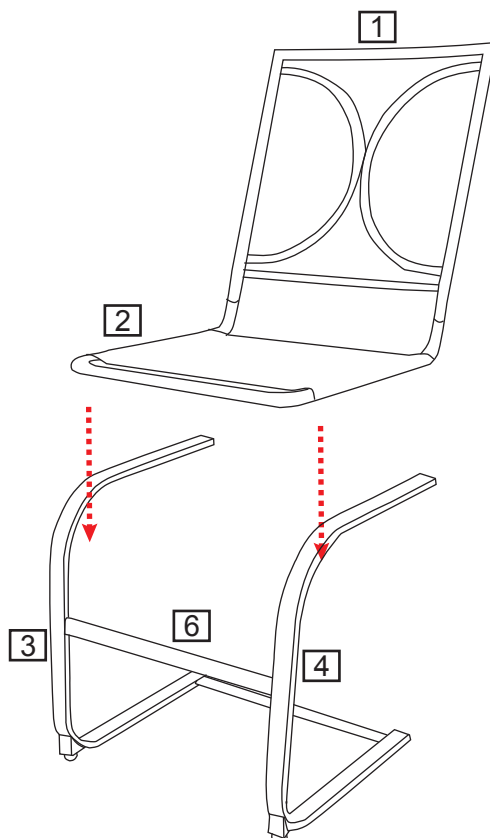

Assembly Instructions


Step 5

Fix the assemblies (1 and 2) to the legs (3 and 4) by using bolts (C) and washers (E). Make sure that all of the bolts have been tightened completely.

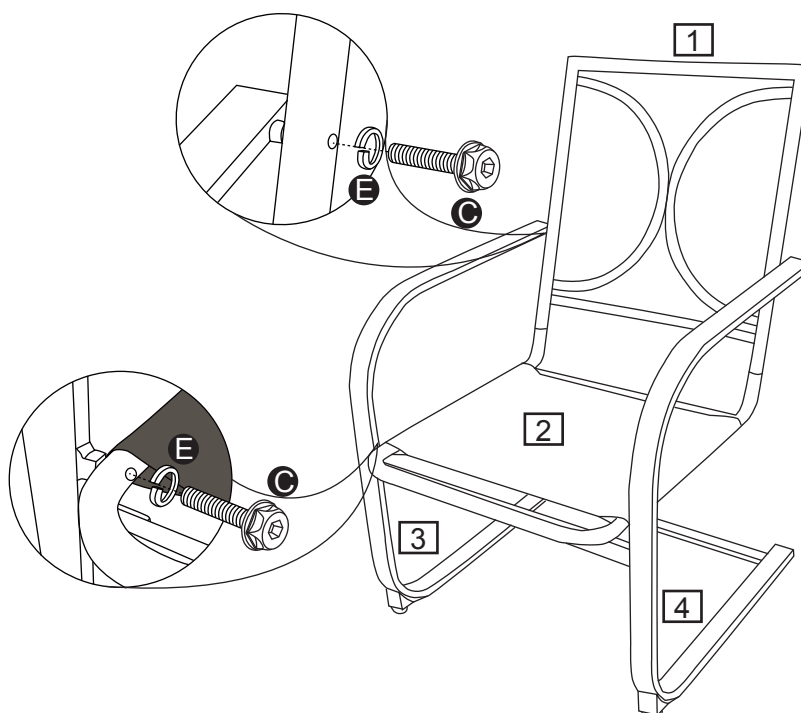

Step 6

Place the cushions (7 and 8) onto the chair. Secure the cushions to the chair by using the plastic clamps. You can adjust the leveler on the legs (3 and 4) to keep the chair even when it is not stable.

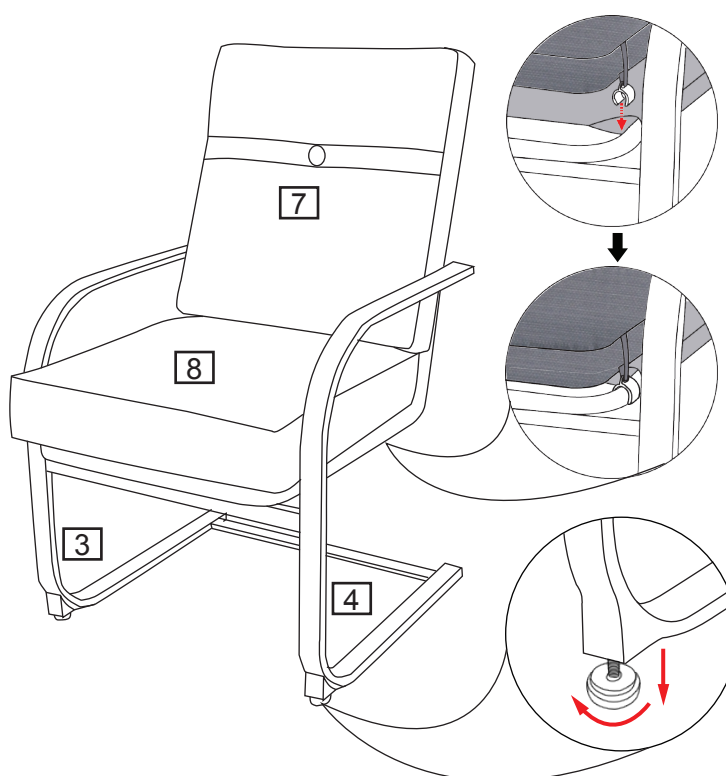

Assembly is completed.

If you need help or have damaged or missing parts, call the Customer Helpline: 03456400800

Retailer: Argos

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW