


Anderson - 2+2 Sideboard

Assembly Instructions - Please keep for future reference

609/5552

609/5538

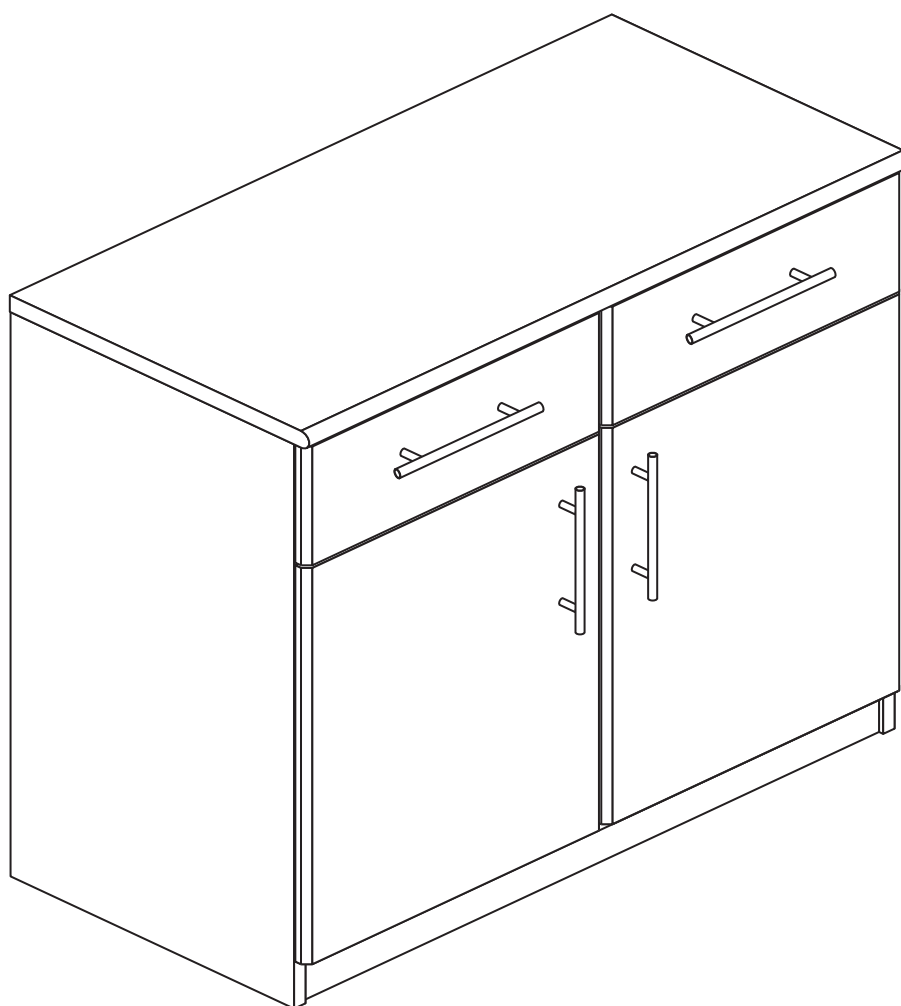

Dimensions

Width - 80cm

Depth - 40cm

Height - 77.5cm




**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 28kgs. Please lift with care.
 - Check you have all the components and tools listed on pages 2 and 3.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Parts of the assembly will be easier with 2 people.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
 - **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.
 - Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required



Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection
(when using a hammer or drill)




Electric drill
(do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below


Please check you have all the panels listed below

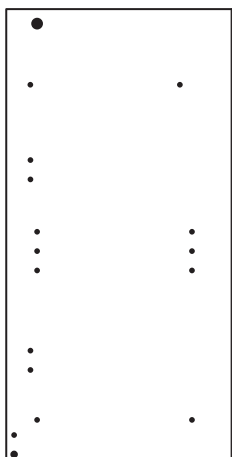

1 Left Side (D1524A)
(747 x 375mm)

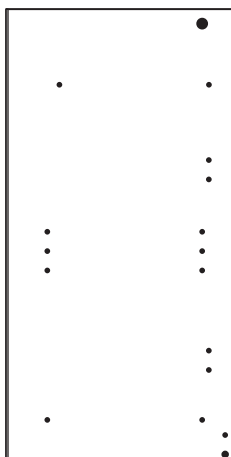

2 Right Side (D1525A)
(747 x 375mm)

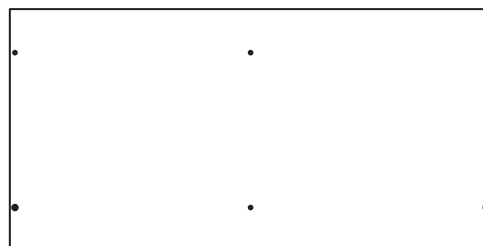


3 Top (D1526A)
(796 x 396mm)



4 Base (D1527A)
(762 x 371mm)




5 Divider (D1528A)
(150 x 371mm)




6 Plinth (D1532A)
(762 x 60mm)




7 Shelf (D1529A)
(763 x 368mm)



8 Drawer Front (D1531A)
(390 x 157mm) x 2




9 Left Drawer Side (W509LH)
(330 x 115mm) x 2




10 Right Drawer Side (W509RH)
(330 x 115mm) x 2




11 Drawer Back (W537)
(321 x 115mm) x 2



12 Drawer Base (T603)
(333 x 327mm) x 2

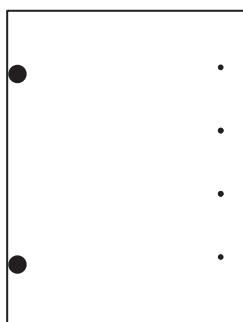

13 Door (D1530A)
(524 x 390mm) x 2

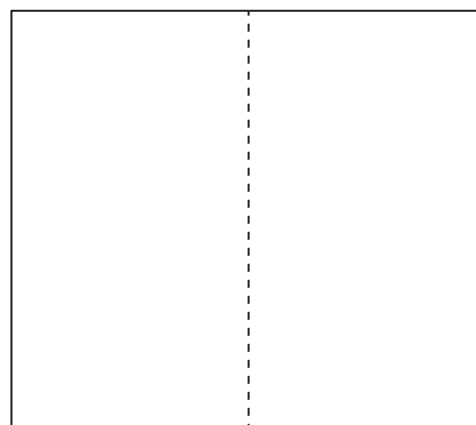

14 Back (X885)
(695 x 781mm)












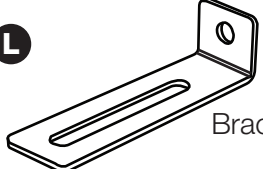

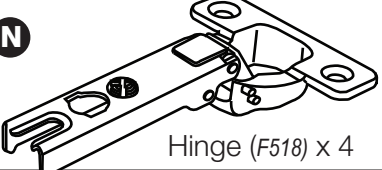








Components - Fittings


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

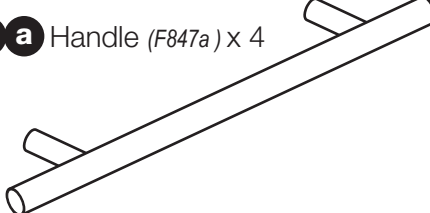A  Wooden dowel (F22) x 4	B  Metal dowel (F901) x 14	C  Nail holder (F149) x 1
D  Nail (F51) x 21	E  Large locking nut (F900) x 10	F  Small locking nut (F3) x 4
G  13mm Screw (F79) x 1	H  13mm Screw (F63) x 16	I  13mm Screw (F52) x 8
J  Shelf stud (F110) x 4	K  Knock-in Peg (F171) x 8	L  Bracket (F327) x 1
M  Hinge plate (F523) x 4	N  Hinge (F518) x 4	
O a  L Runner (F159) x 2		
O b  R Runner (F160) x 2		
O c  L Runner (F161) x 2		
O d  R Runner (F162) x 2		
<div data-bbox="82 1668 561 1899"> P a  Handle (F847a) x 4 </div> <div data-bbox="561 1668 1034 1899"> P b  Handle Screw (F847b) x 8 </div>		

Ruler - Use this ruler to help correctly identify the screws

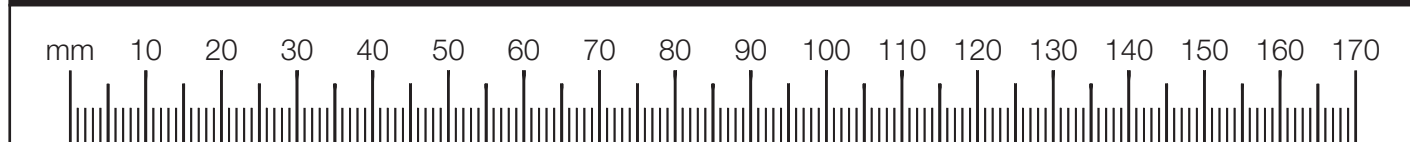

Assembly Instructions


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
 numbers below

Step 1

Prepare the drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **8**.

Note: Tighten metal dowels up fully against the panels.

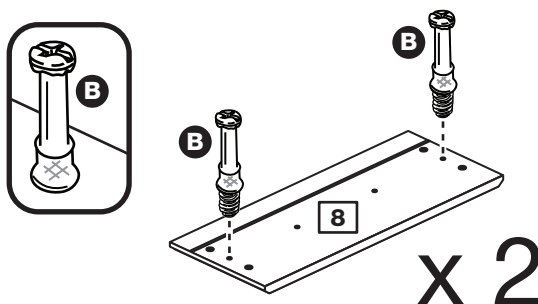


Step 2

Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and right drawer side **10**.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

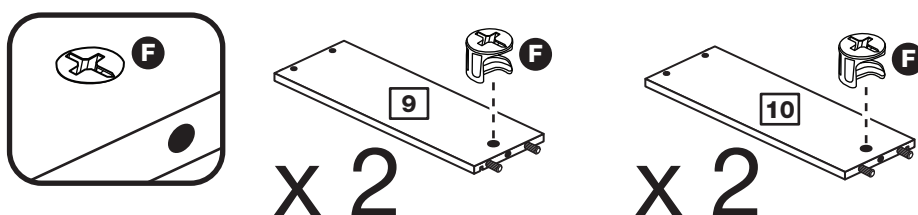

Step 3


Attach the drawer sides to the drawer front

Push the left drawer side **9** and right drawer side **10** onto the back of the drawer front **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

Note: Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

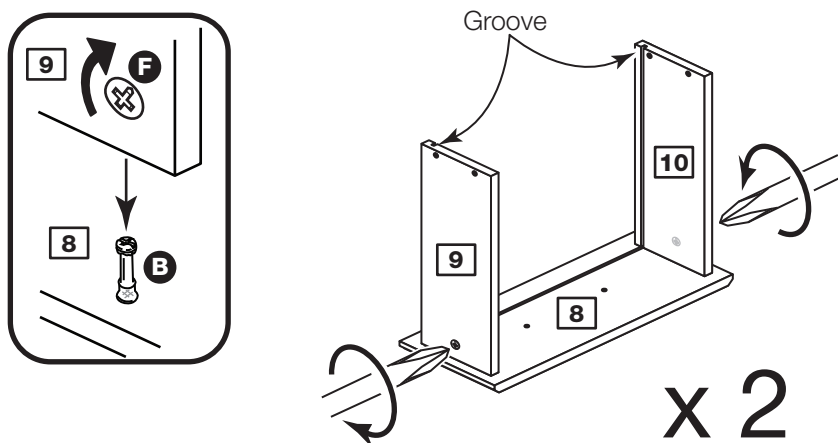


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

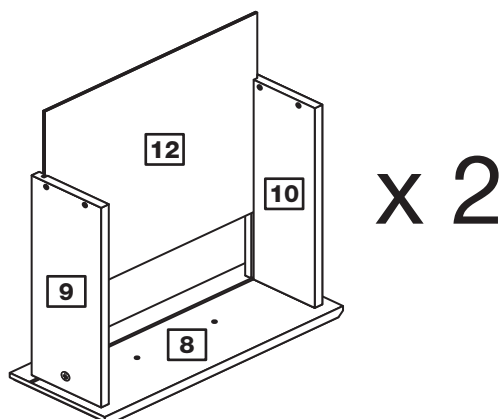


Step 5

Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**.

Make sure that the drawer base **12** fits into the groove in the drawer back **11**.


Hold the drawer back **11** in position and tap the knock-in pegs **K** through the holes in the drawer sides **9** and **10**.

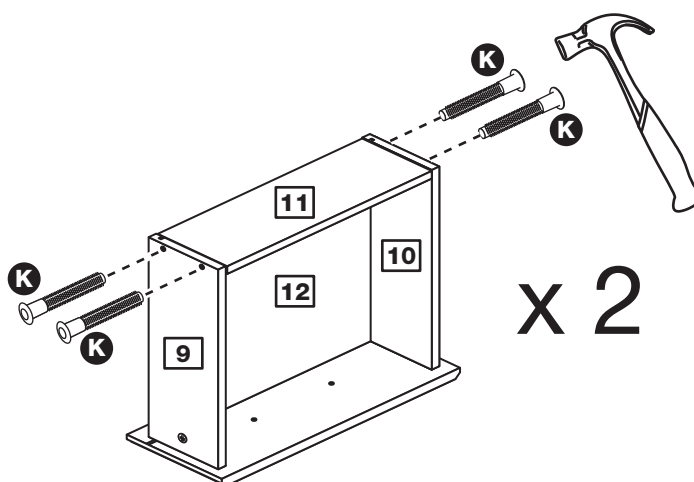

Step 6

Attach the handle

Attach a handle **Pa** to each drawer front **8** using 2 screws **Pb**.

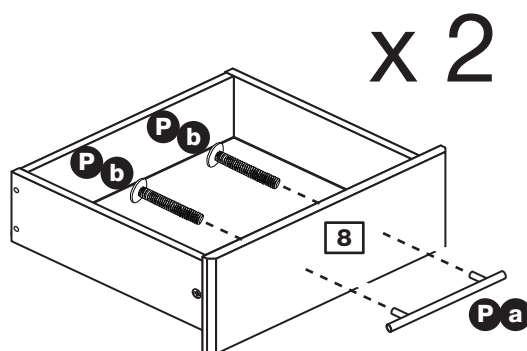


Assembly Instructions

Step 7

Fit runners to the drawers

Fit the runner **Oc** to the bottom edge of the left drawer side **9**, as shown, making sure that it is pushed up against the back of the drawer front **8**. Use a bradawl to mark the fixing positions, then secure with 2 screws **H**.

Fit the runner **Od** to the bottom edge of the right drawer side **10** using the same method.

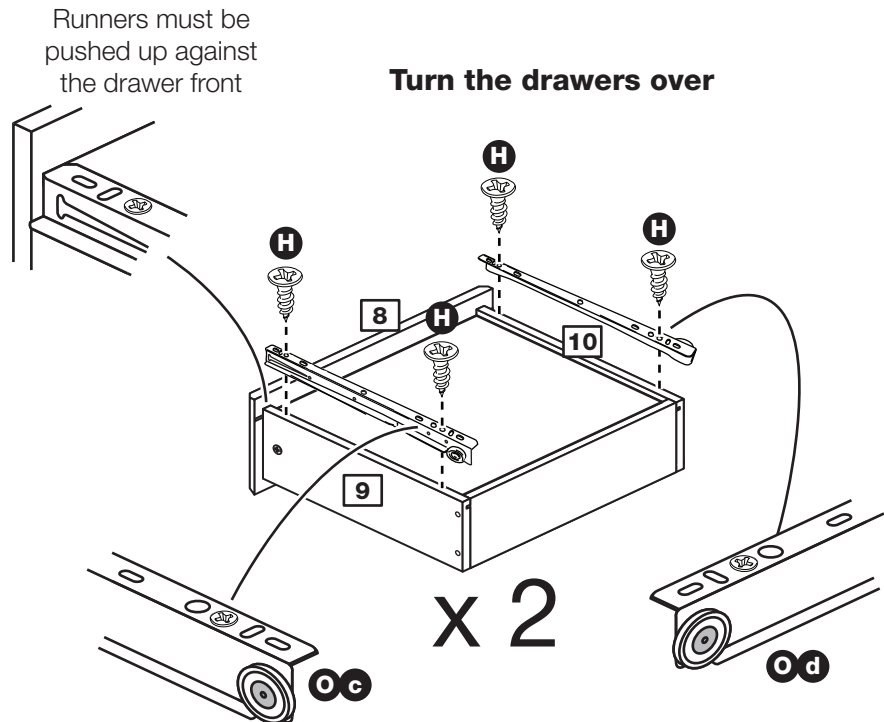

Step 8

Prepare the left side

Tap a wooden dowel **A** into the left side **1**.

Screw 3 metal dowels **B** into the left side **1**.


Insert a large locking nut **E** into the left side **1**.

Fit the runner **Oa** to the left side **1**.

The 1st screw **I** uses the 2nd hole in from the front of the runner **Oa**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.

Fit 2 hinge plates **M** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

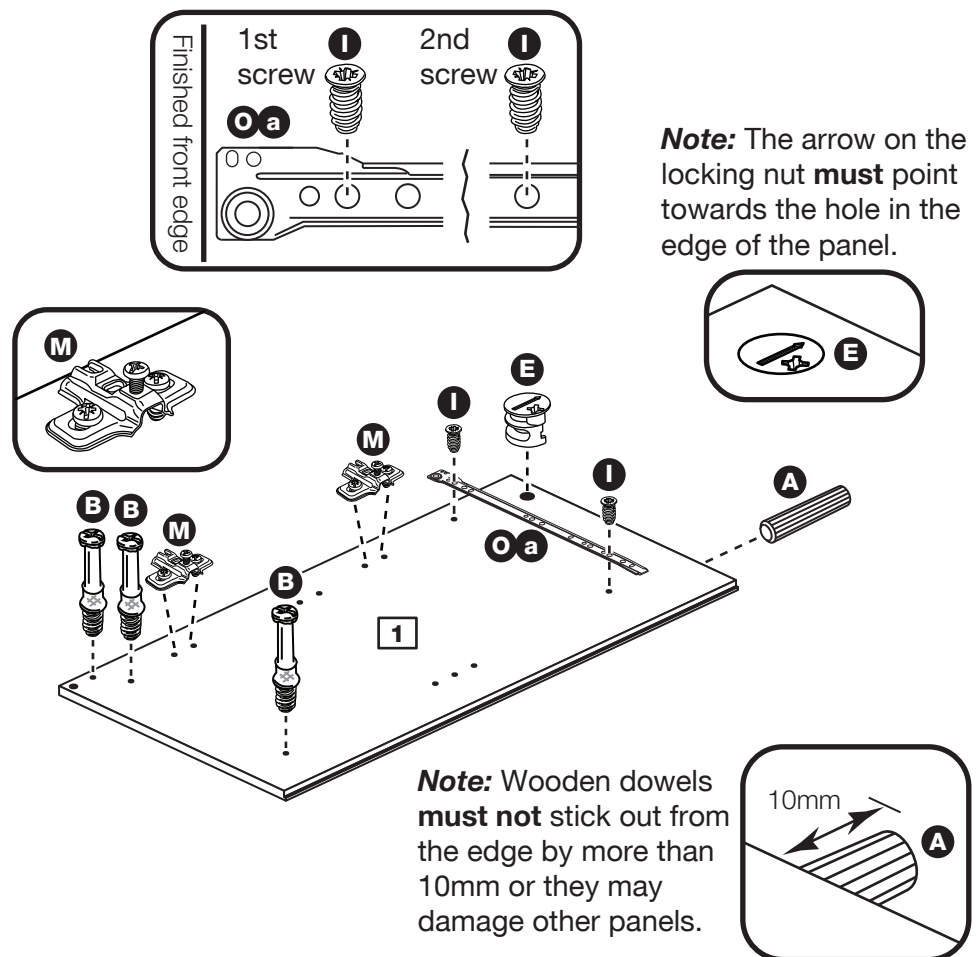

Assembly Instructions

Step 9

Prepare the right side

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.


Insert a large locking nut **E** into the right side **2**.

Fit the runner **O b** to the right side **2**.

The 1st screw **I** uses the 2nd hole in from the front of the runner **O b**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.


Fit 2 hinge plates **M** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

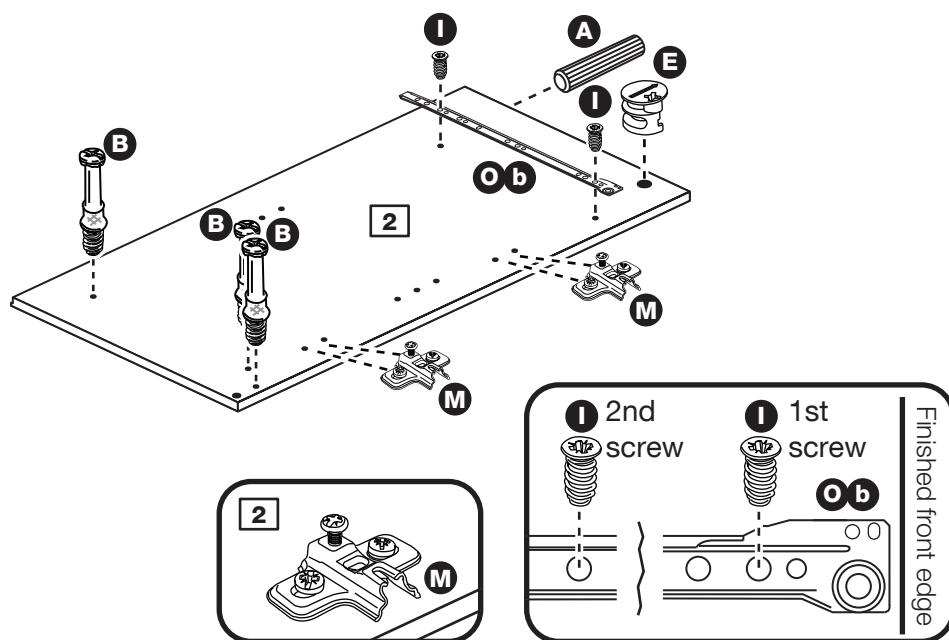

Step 10

Prepare the base

Insert 4 large locking nuts **E** into the base **4**.

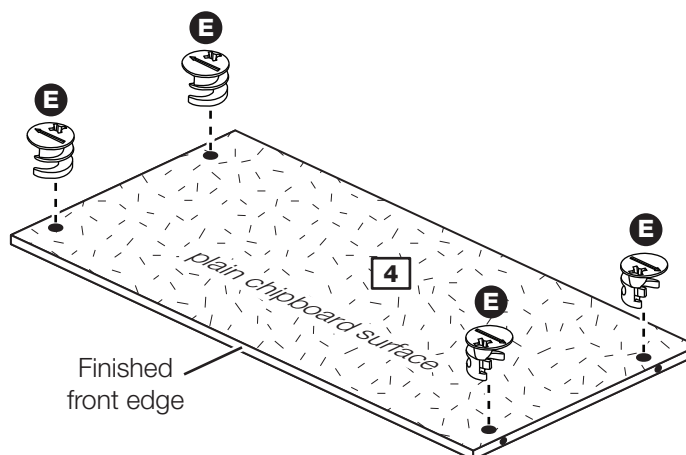

Assembly Instructions


Step 11

Join the right side and base

Push the base **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the base **4**.

Note: Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

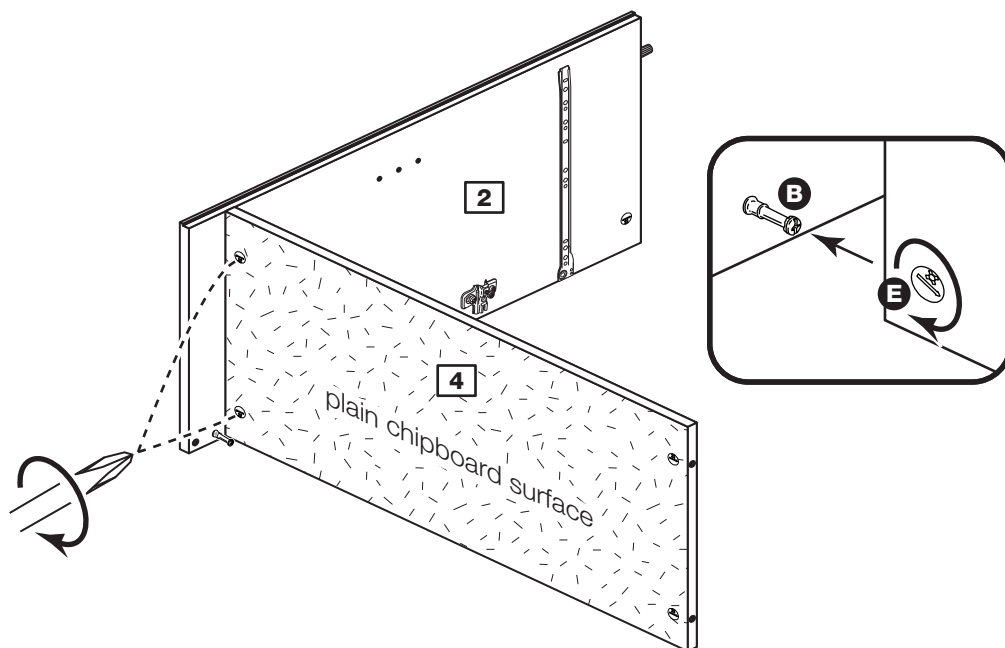


Step 12

Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **6**.

Insert 2 large locking nuts **E** into the plinth **6**.

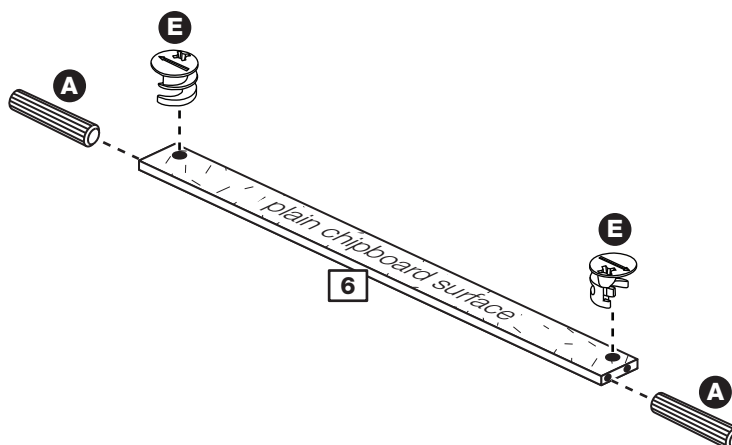


Step 13

Fit the plinth

Push the plinth **6** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **E** fitted to the plinth **6**.

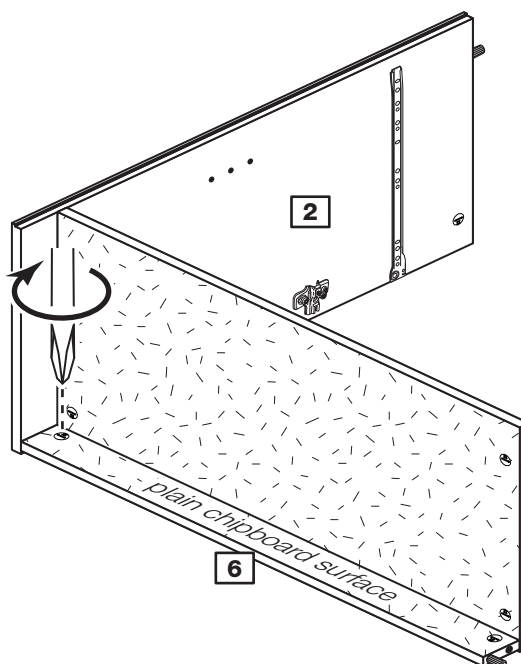


Assembly Instructions

Step 14

Fit the left side

Push the left side **1** onto the assembly.

Use a screwdriver to tighten the 3 large locking nuts **E** fitted to the base **4** and plinth **6**.

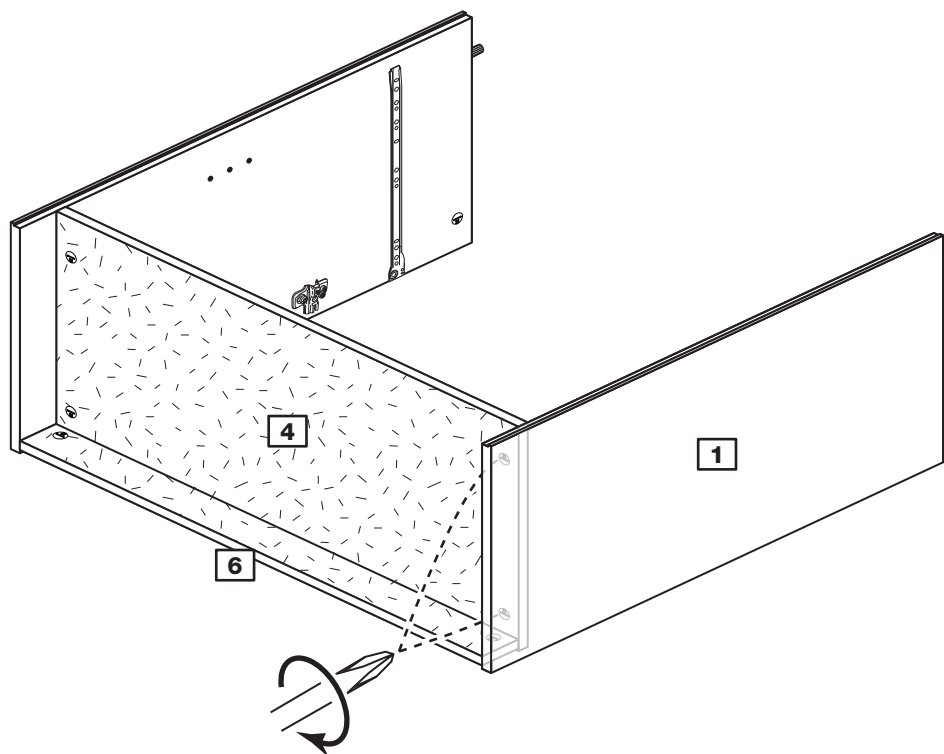


Step 15

Prepare the top

Screw 4 metal dowels **B** into the top **3**.

Fix the bracket **L**, flush to the back edge of the top **3** and 250mm in from the side, using screw **G**.

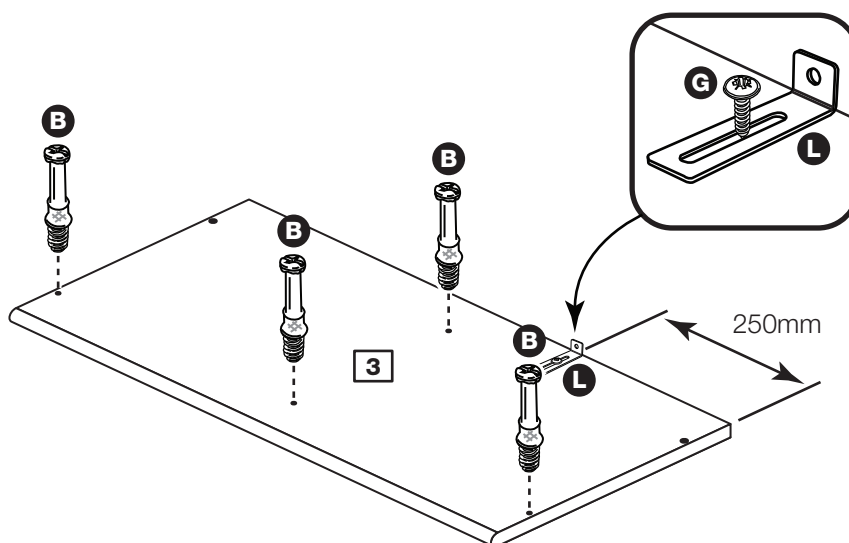

Assembly Instructions

Step 16

Prepare the divider

a: Insert 2 large locking nuts **E** into the divider **5**.

Note: The 2 holes for the large locking nuts may be drilled in either surface of the divider **5**.

b: Fit a runner **O b** to this surface of the divider **5**.


Note: Use the finished front edge to identify which runner to fit.

The 1st screw **I** uses the 2nd hole in from the front of the runner.


The 2nd screw **I** uses the hole that lines up with the other panel hole.

c: Turn the divider **5** over and fit the runner **O a** to the other surface.

a:

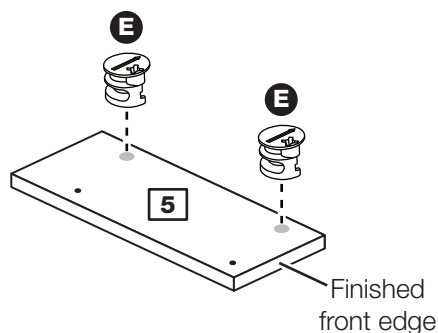


b:

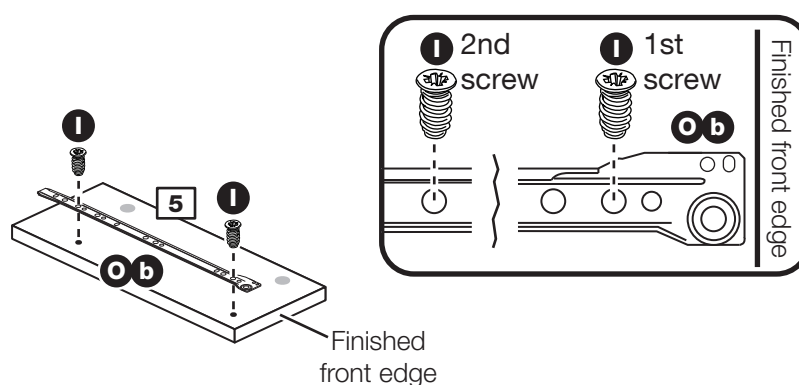

Turn the drawer divider over

c:

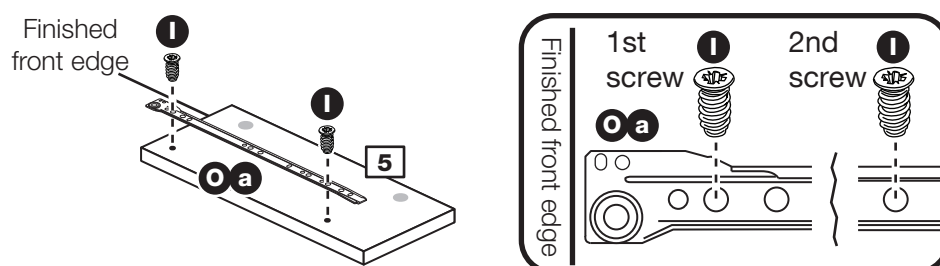

Assembly Instructions


Step 17

Fit the divider

Push the divider **5** onto the top **3**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the divider **5**.

Note: The 2 large locking nuts may be on either surface of the divider.

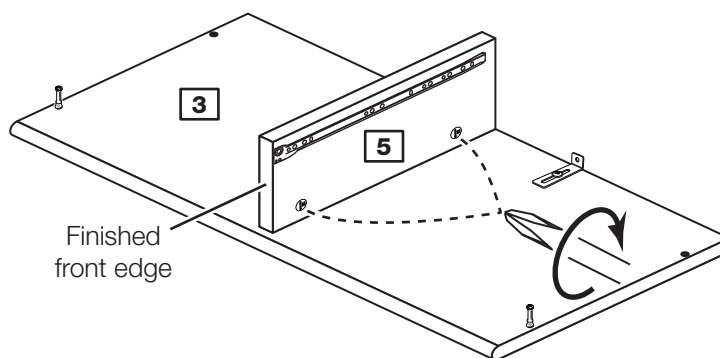


Step 18

Fit the top

Push the top **3** onto the side panels **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the side panels **1** and **2**.

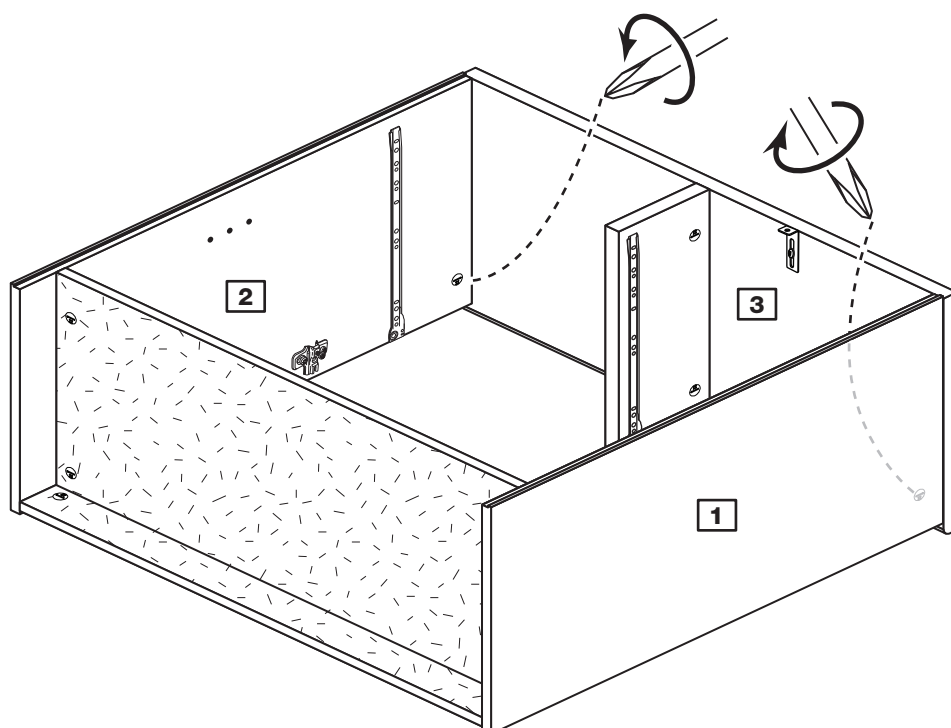

Assembly Instructions

Step 19

Fit back panel

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.


b: Place the back **14** down onto the unit, as shown.

Use the nail guide **C** to hold the nails **D** vertical and at the correct distance whilst you nail around the outside of the back **14**.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

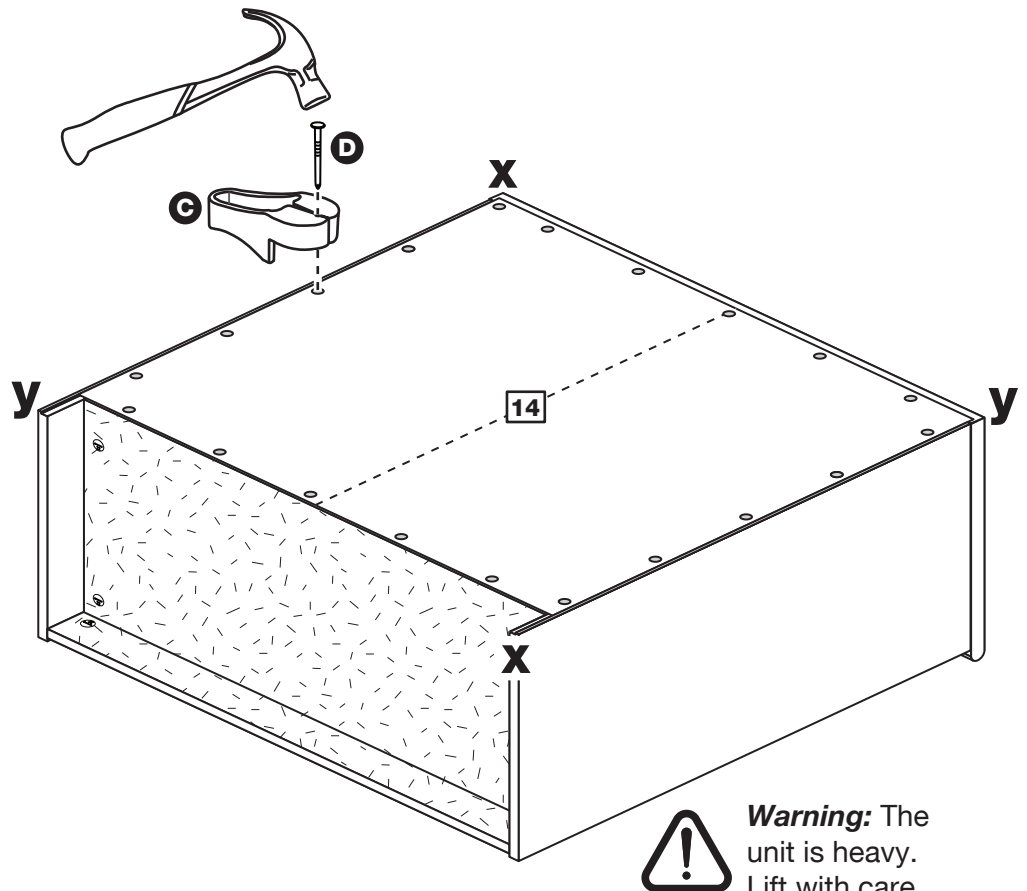

Step 20


Secure unit to a wall

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the metal bracket **L** fitted to the underside of the top **3**.

Fixings are not supplied as they will need to suit the wall type, and the length of Screw will depend on the distance of the back of the Unit to the wall.



Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

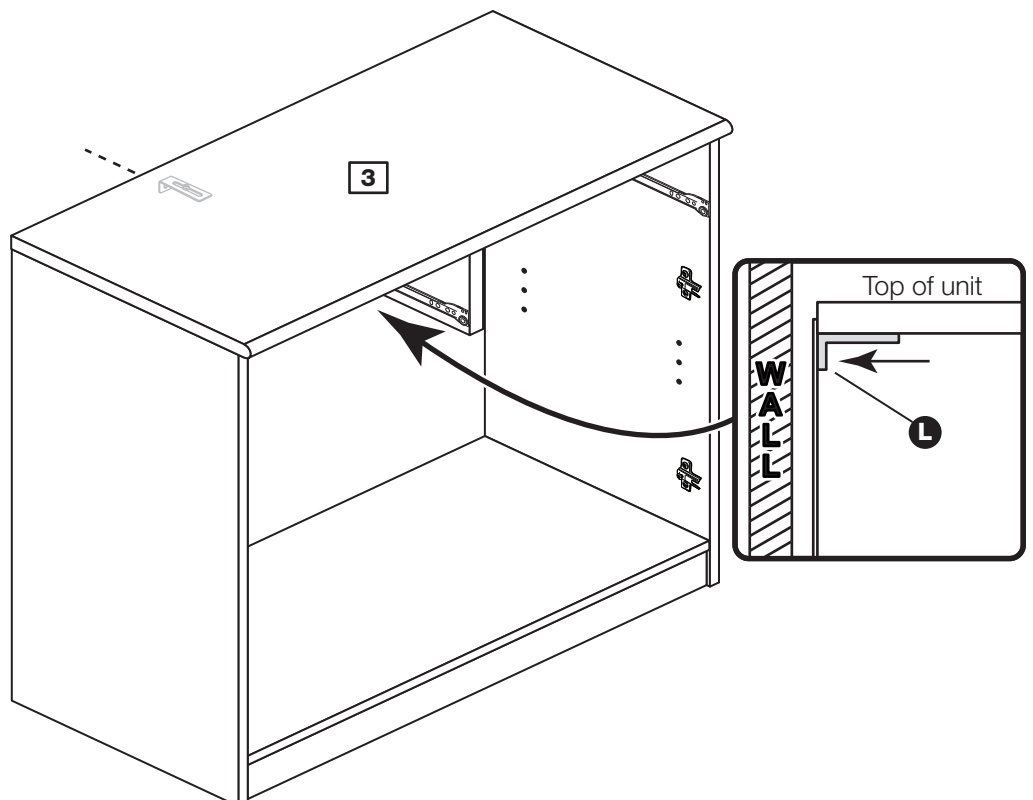


Assembly Instructions

Step 21

Fit the shelf

Insert 4 shelf studs **J** at the required height.

Lower the shelf **7** down onto the shelf studs **J**.

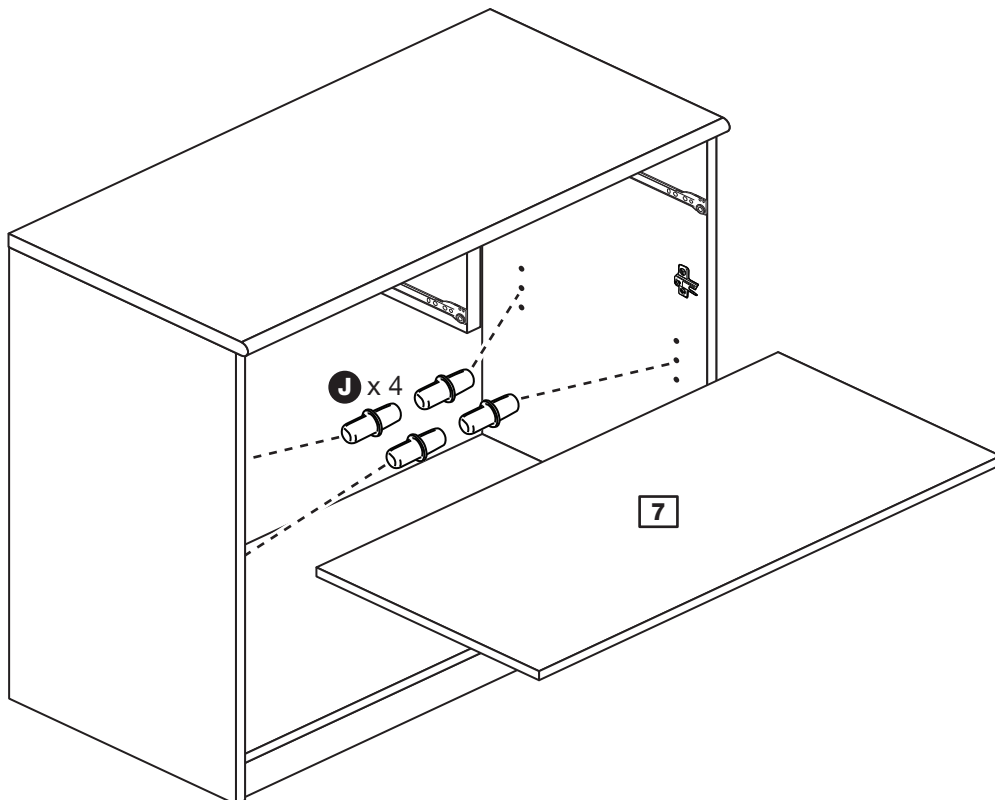


Step 22

Prepare the 2 doors

Push fit 2 hinges **N** into each of the doors **13**.

Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

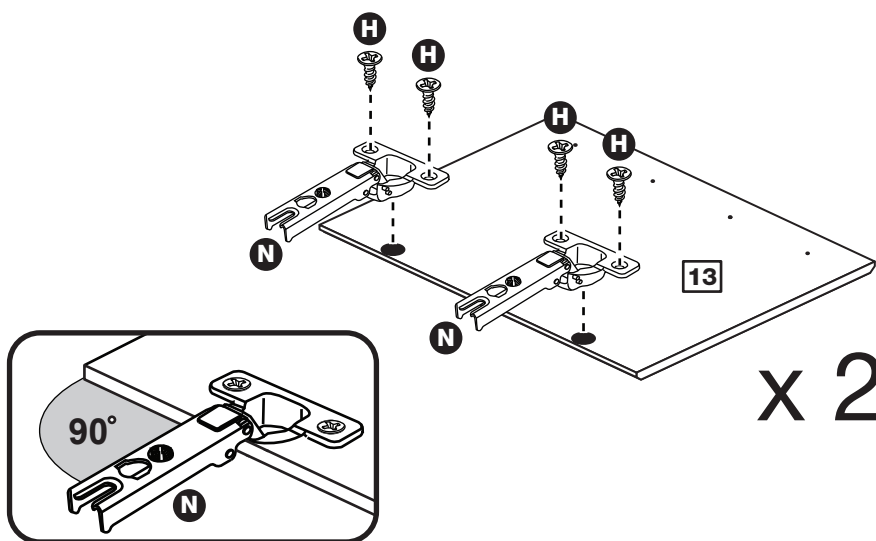

Assembly Instructions

Step 23

Drill the handle holes in the door

Important: Please follow these instructions carefully.

Lay the doors **13** down onto a smooth surface.

Important: Check that the holes and hinges are in the same place as the diagrams.

Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.


Using the pilot hole in the rear face of the door **13**, drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door **13** over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.


IMPORTANT

You will need to drill the doors to suit the handles supplied

This will be the left door

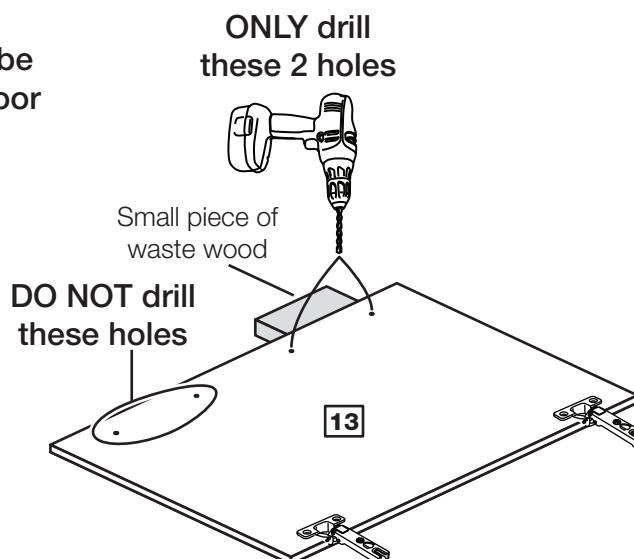

This will be the right door

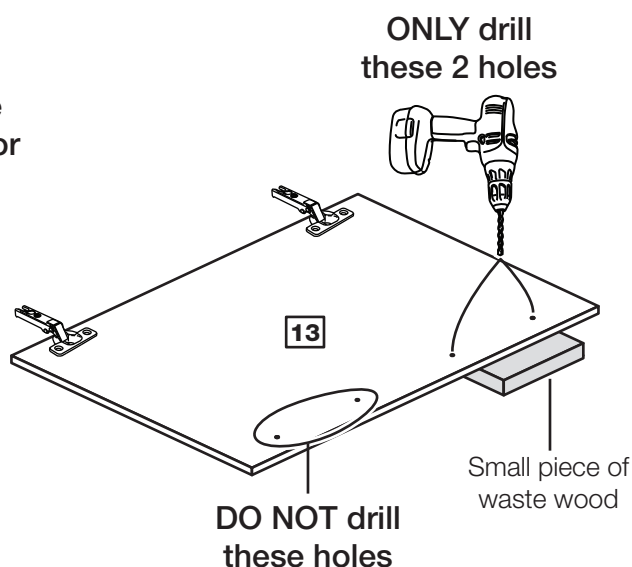

Assembly Instructions

Step 24

Fit doors and handles

Note: The easiest way to attach each door **13** is to fit the top hinge first, then align and fit the other hinge.



a: Push the hinge **N** onto the front part of the hinge plate **M**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **N** FLAT against the hinge plate **M** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **N** must be flat against the hinge plate **M** prior to any adjustment.

d: The hinge **N** must NOT be AT AN ANGLE to the hinge plate **M** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **Pa** to each door **13** using 2 screws **Pb**.

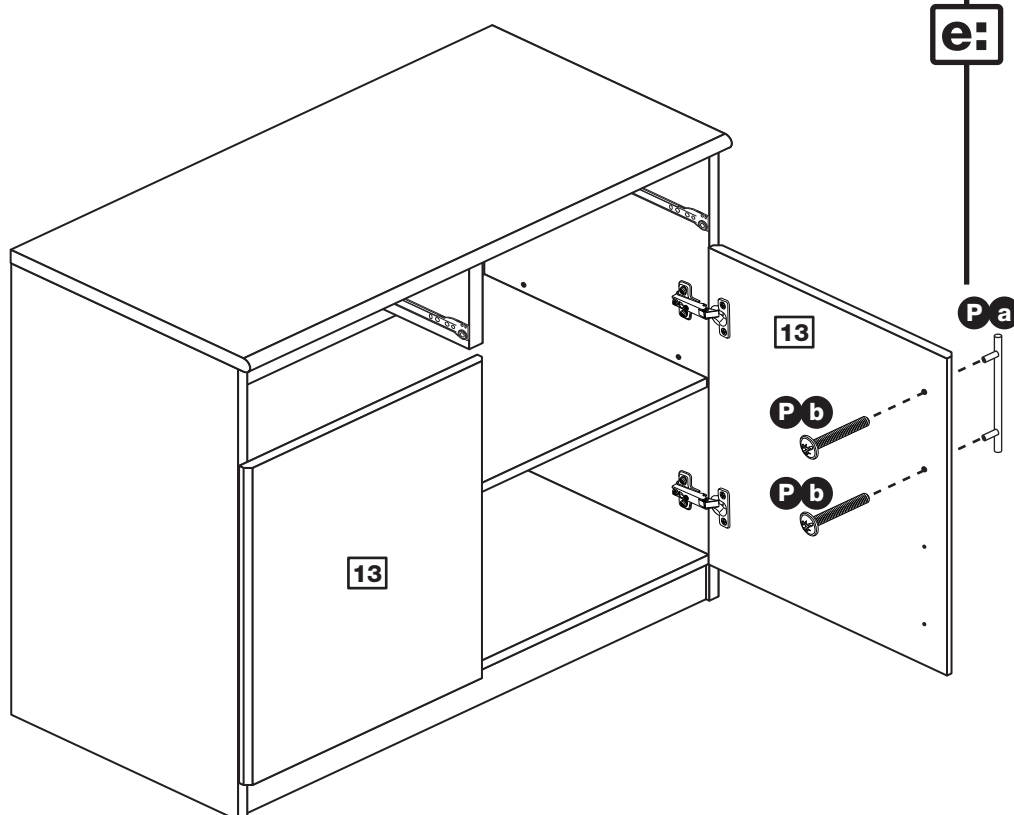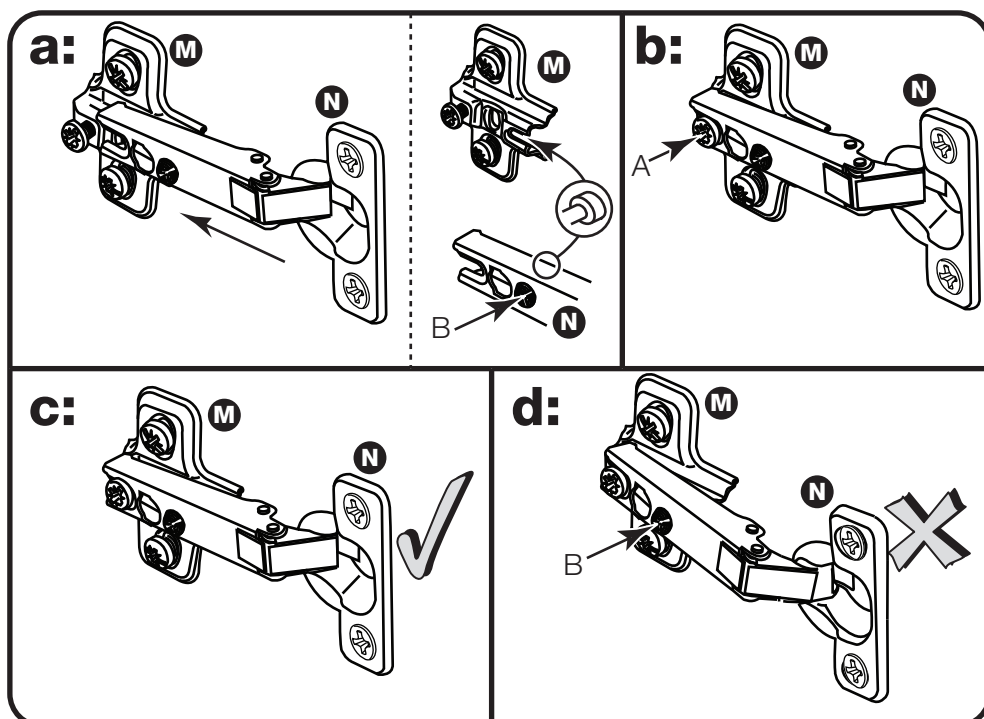

Assembly Instructions

Step 25

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.

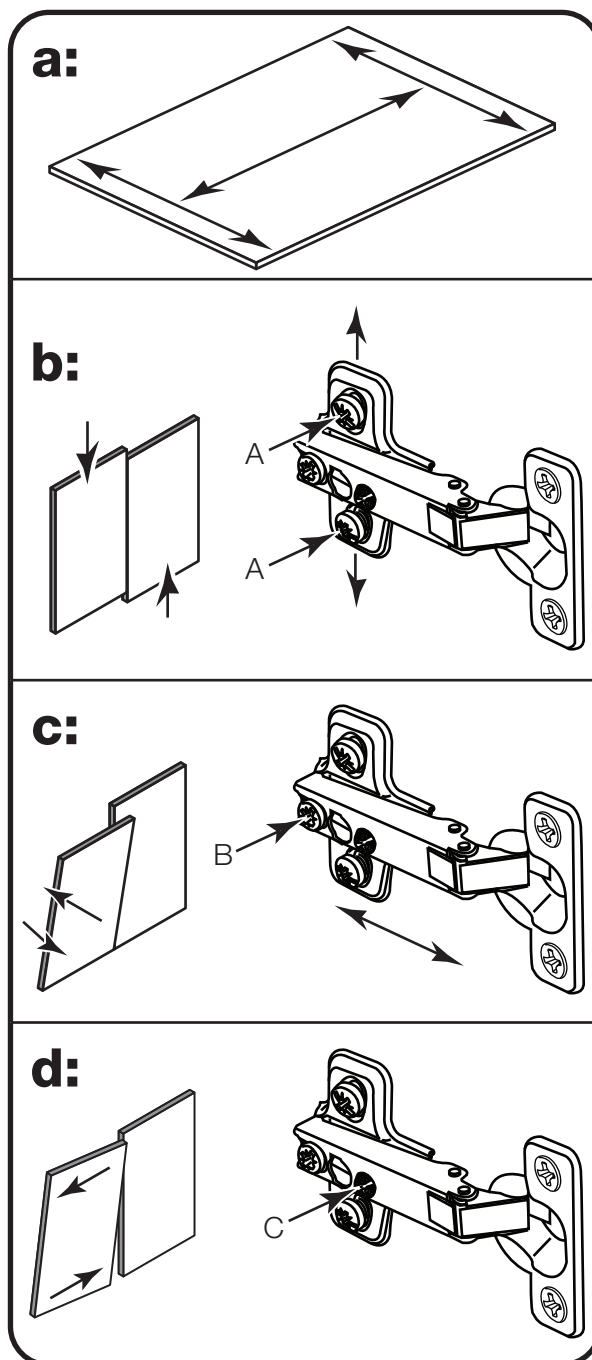

Assembly Instructions

Step 26



Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete



Warning: The unit is heavy. Lift with care.

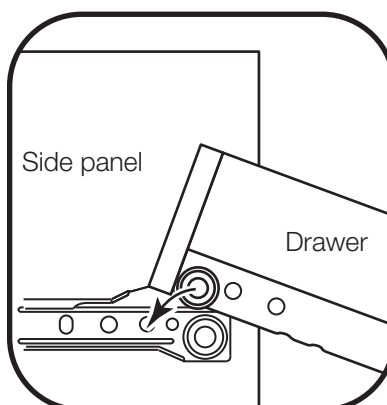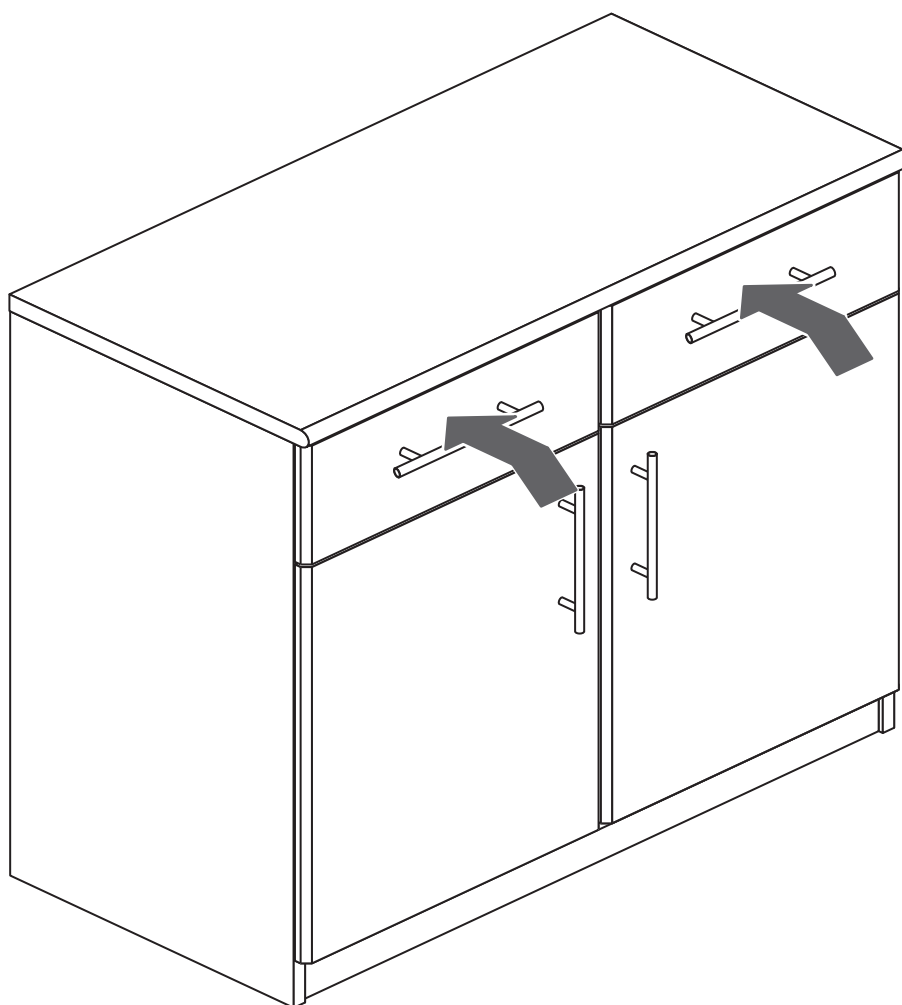

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800** and quote the reference numbers on the component pages.


Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Anderson - 2+2 Sideboard

Assembly Instructions - Please keep for future reference

609/5552

609/5538

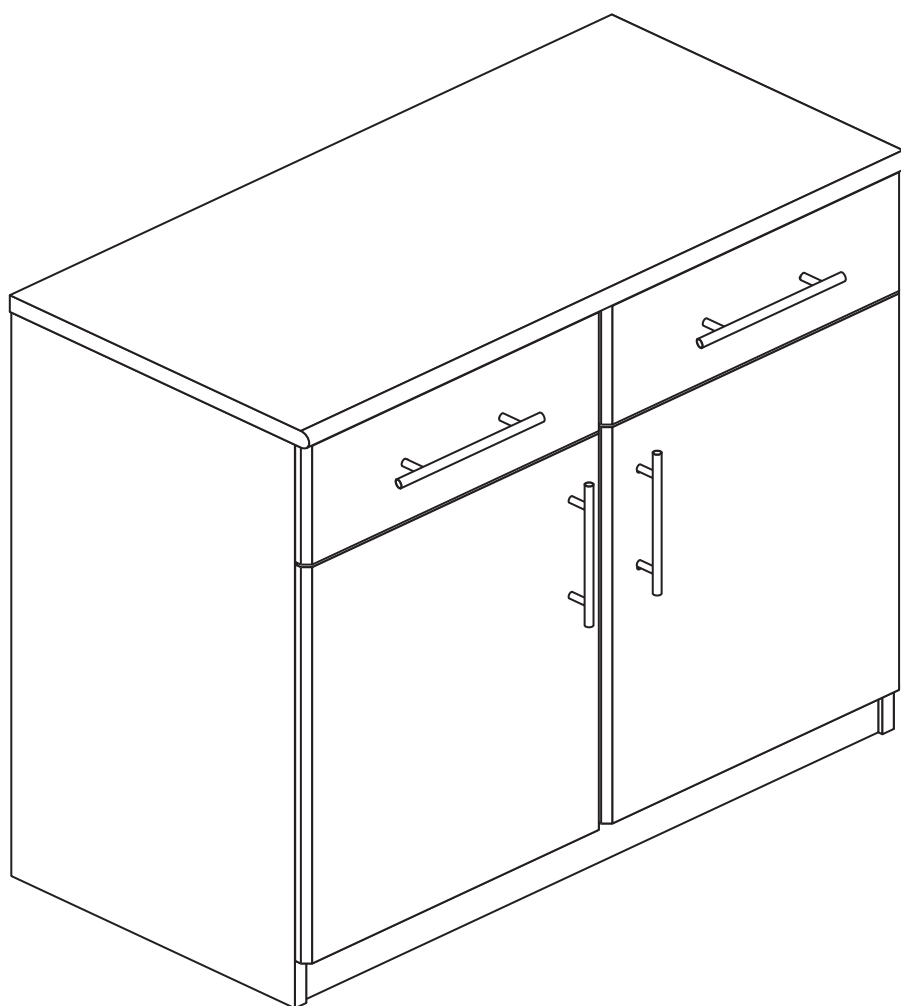

Dimensions

Width - 80cm

Depth - 40cm

Height - 77.5cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 28kgs. Please lift with care.
 - Check you have all the components and tools listed on pages 2 and 3.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Parts of the assembly will be easier with 2 people.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
-
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
 - **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.
 - Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required



Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection
(when using a hammer or drill)




Electric drill
(do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below


Please check you have all the panels listed below

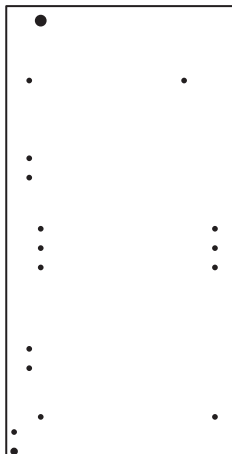

1 Left Side (D2182A)
(747 x 375mm)

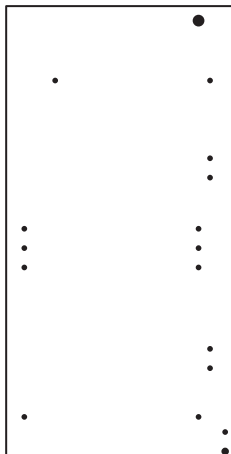


2 Right Side (D2183A)
(747 x 375mm)

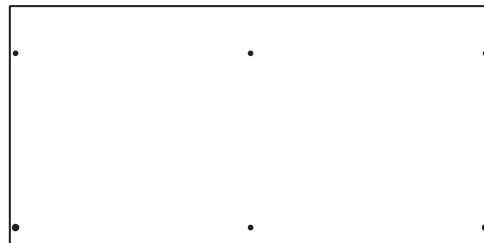

3 Top (D2184A)
(796 x 396mm)



4 Base (D2185A)
(762 x 374mm)




5 Divider (D2260A)
(150 x 374mm)



6 Plinth (D2265A)
(762 x 60mm)



7 Shelf (D2261A)
(762 x 368mm)



8 Drawer Front (D2263A)
(390 x 157mm) x 2



9 Left Drawer Side (W509LH)
(330 x 115mm) x 2




10 Right Drawer Side (W509RH)
(330 x 115mm) x 2




11 Drawer Back (W537)
(321 x 115mm) x 2



12 Drawer Base (T603)
(333 x 327mm) x 2

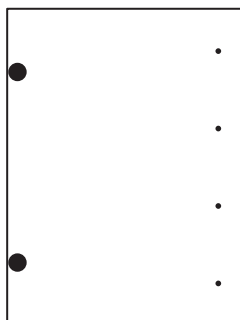

13 Door (D2262A)
(524 x 390mm) x 2

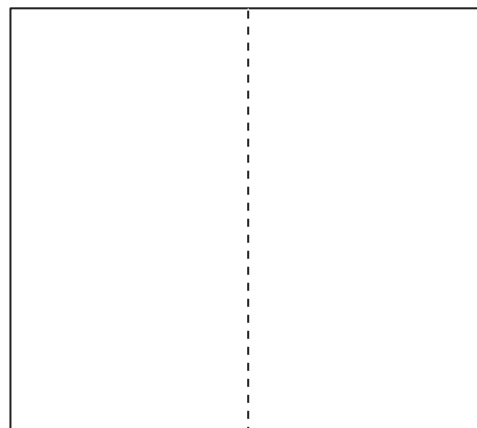

14 Back (X786-705)
(786 x 705mm)












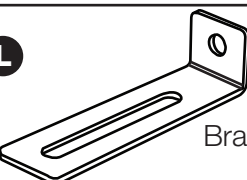
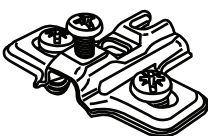
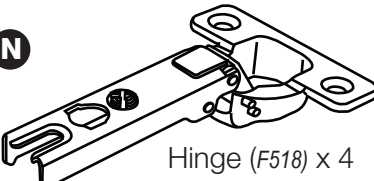








Components - Fittings


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

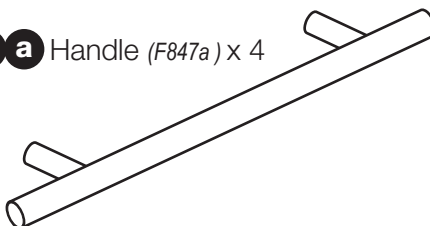A  Wooden dowel (F22) x 4	B  Metal dowel (F901) x 14	C  Nail holder (F149) x 1
D  Nail (F51) x 21	E  Large locking nut (F900) x 10	F  Small locking nut (F3) x 4
G  13mm Screw (F79) x 1	H  13mm Screw (F63) x 16	I  13mm Screw (F52) x 8
J  Shelf stud (F110) x 4	K  Knock-in Peg (F171) x 8	L  Bracket (F327) x 1
M  Hinge plate (F523) x 4	N  Hinge (F518) x 4	
O a  L Runner (F159) x 2		
O b  R Runner (F160) x 2		
O c  L Runner (F161) x 2		
O d  R Runner (F162) x 2		
<div> <div data-bbox="82 1668 561 1897"> P a  Handle (F847a) x 4 </div> <div data-bbox="561 1668 1034 1897"> P b  Handle Screw (F847b) x 8 </div> </div>		

Ruler - Use this ruler to help correctly identify the screws

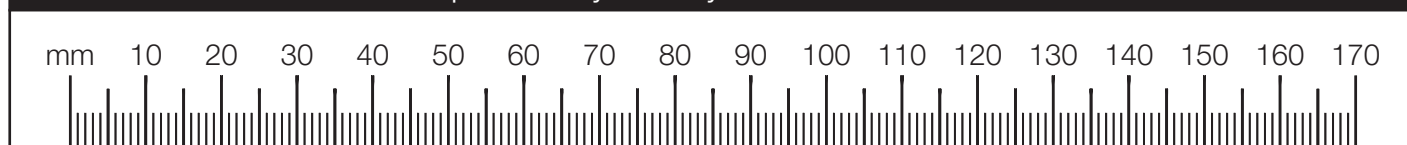

Assembly Instructions


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below

Step 1

Prepare the drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **8**.

Note: Tighten metal dowels up fully against the panels.

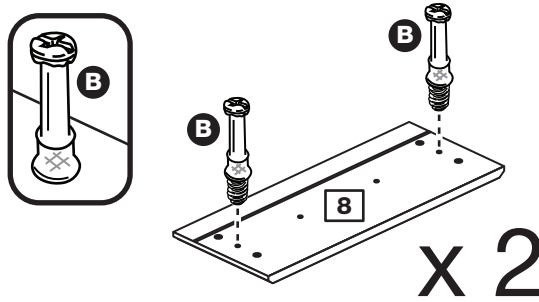


Step 2

Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and right drawer side **10**.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

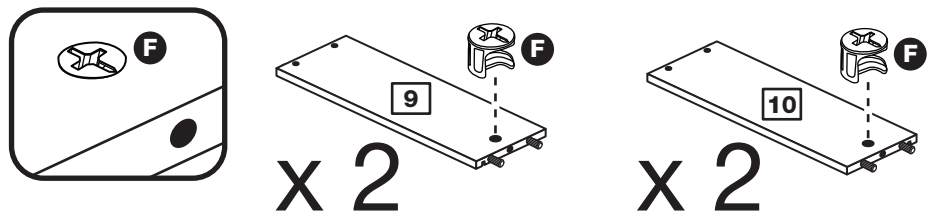


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side **9** and right drawer side **10** onto the back of the drawer front **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

Note: Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

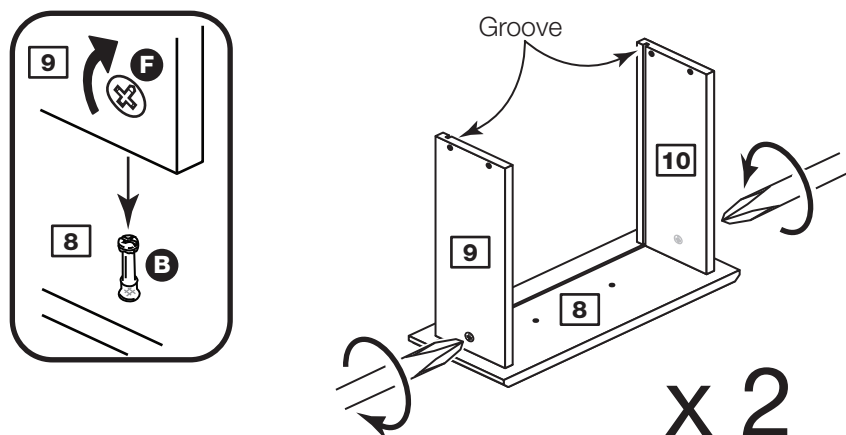


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

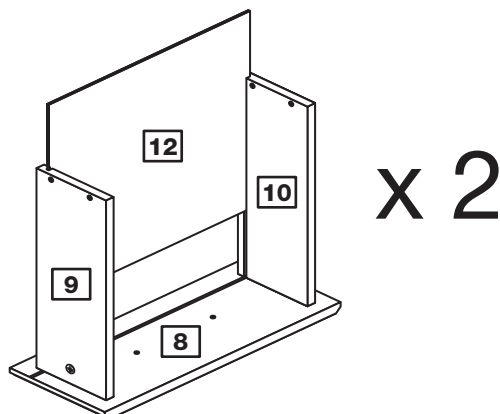


Step 5

Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**.

Make sure that the drawer base **12** fits into the groove in the drawer back **11**.


Hold the drawer back **11** in position and tap the knock-in pegs **K** through the holes in the drawer sides **9** and **10**.

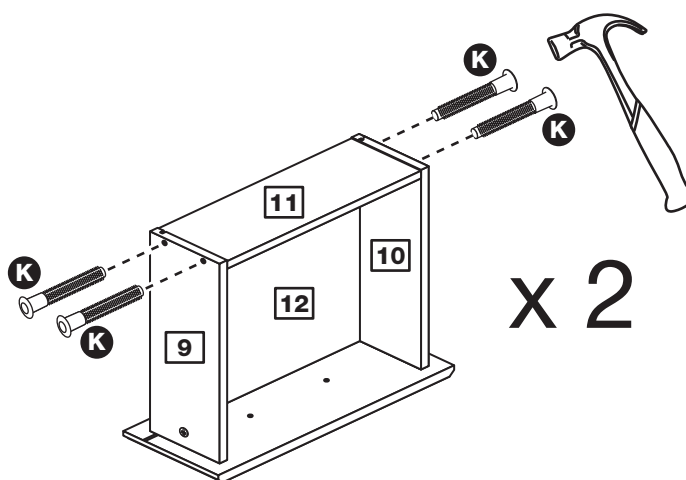

Step 6

Attach the handle

Attach a handle **P a** to each drawer front **8** using 2 screws **P b**.

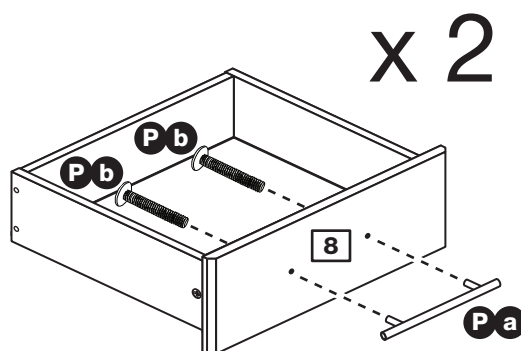


Assembly Instructions

Step 7

Fit runners to the drawers

Fit the runner **Oc** to the bottom edge of the left drawer side **9**, as shown, making sure that it is pushed up against the back of the drawer front **8**. Use a bradawl to mark the fixing positions, then secure with 2 screws **H**.

Fit the runner **Od** to the bottom edge of the right drawer side **10** using the same method.

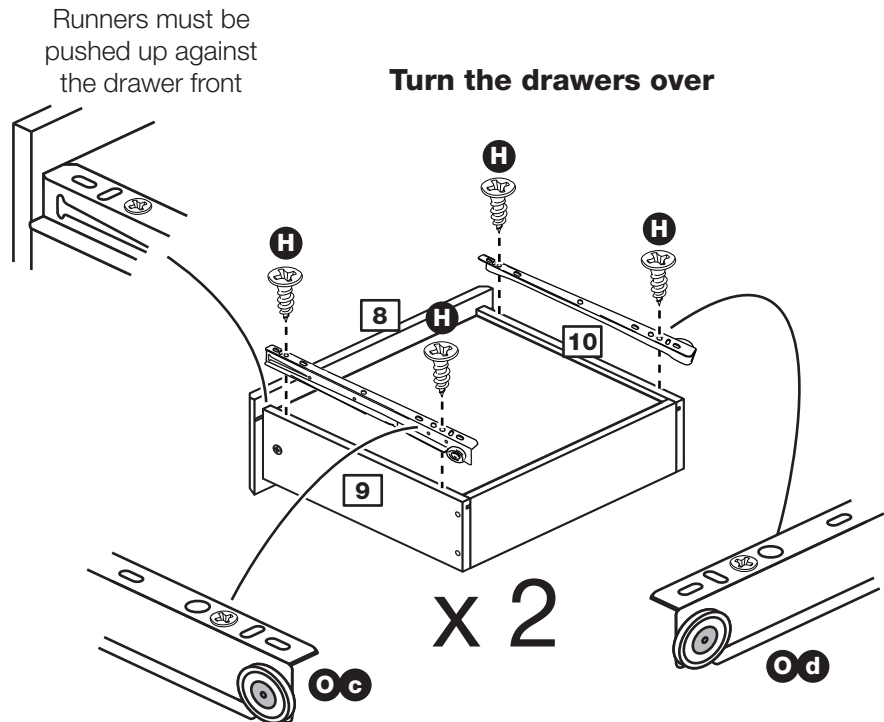

Step 8

Prepare the left side

Tap a wooden dowel **A** into the left side **1**.

Screw 3 metal dowels **B** into the left side **1**.


Insert a large locking nut **E** into the left side **1**.

Fit the runner **Oa** to the left side **1**.


The 1st screw **I** uses the 2nd hole from the front of the runner **Oa**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.

Fit 2 hinge plates **M** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

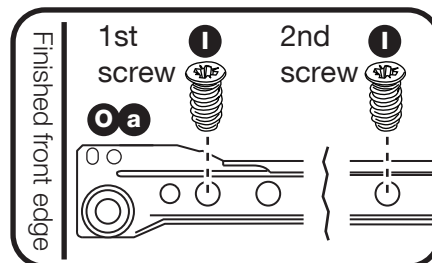

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

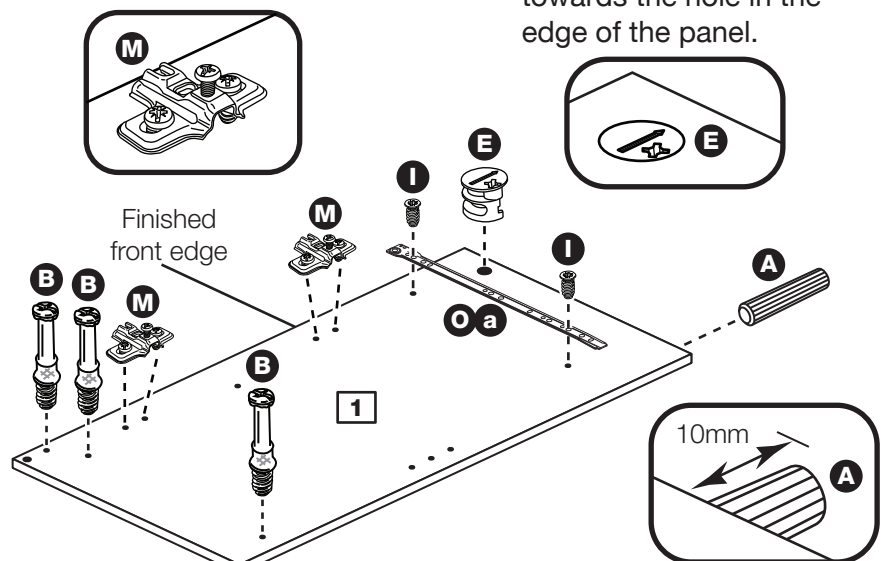

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Assembly Instructions

Step 9

Prepare the right side

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.




Insert a large locking nut **E** into the right side **2**.

Fit the runner **O b** to the right side **2**.

The 1st screw **I** uses the 2nd hole in from the front of the runner **O b**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.


Fit 2 hinge plates **M** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

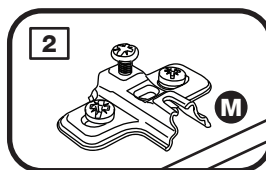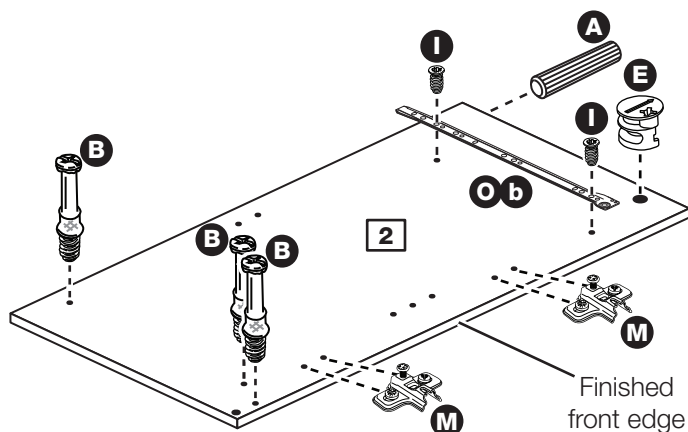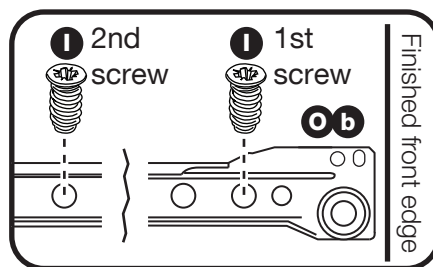

Step 10

Prepare the base

Insert 4 large locking nuts **E** into the base **4**.

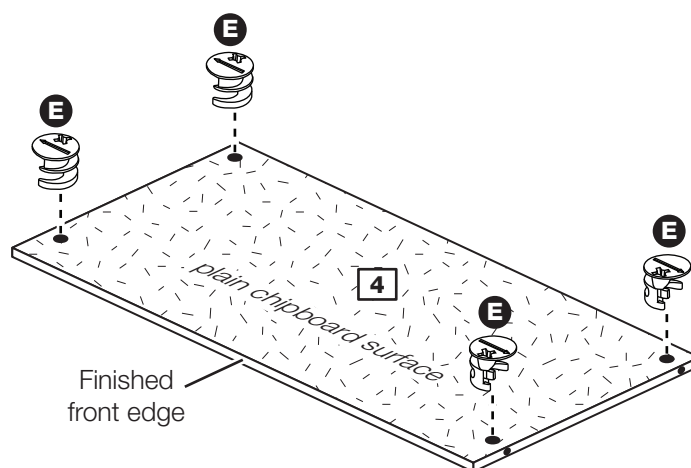

Assembly Instructions


Step 11

Join the right side and base

Push the base **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the base **4**.

Note: Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

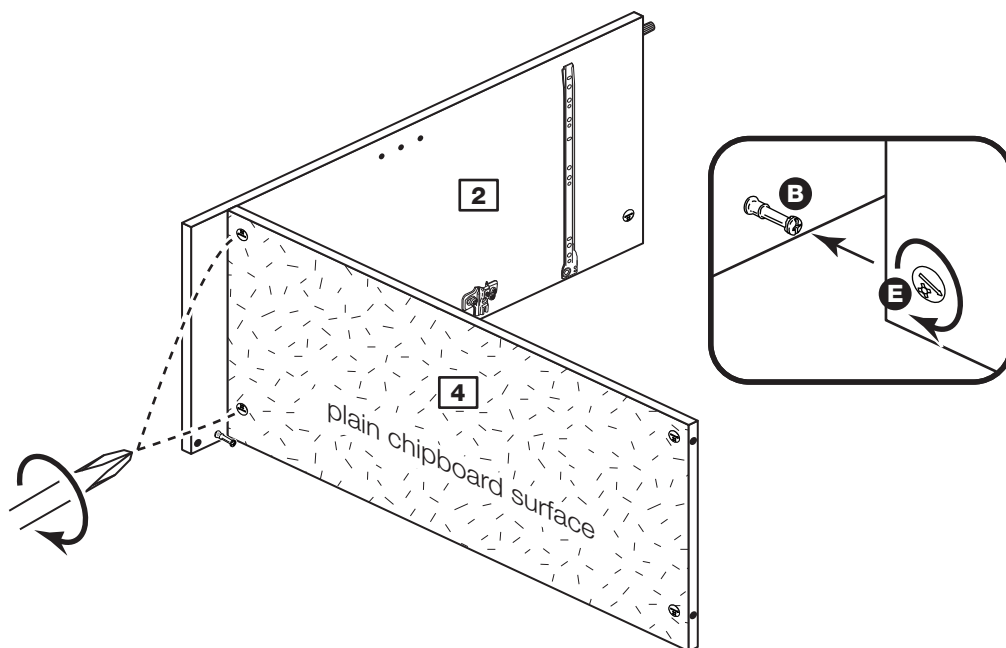


Step 12

Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **6**.

Insert 2 large locking nuts **E** into the plinth **6**.

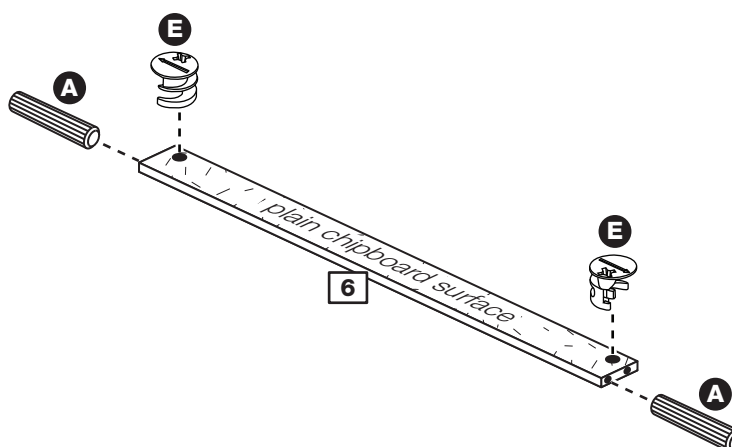


Step 13

Fit the plinth

Push the plinth **6** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **E** fitted to the plinth **6**.

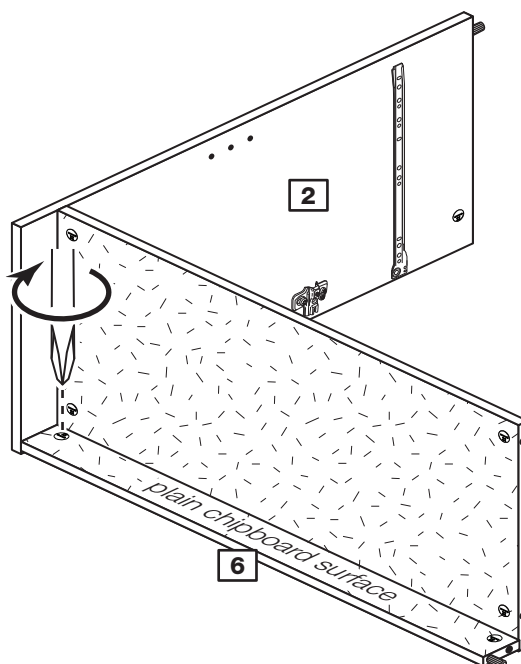


Assembly Instructions

Step 14

Fit the left side

Push the left side **1** onto the assembly.

Use a screwdriver to tighten the 3 large locking nuts **E** fitted to the base **4** and plinth **6**.

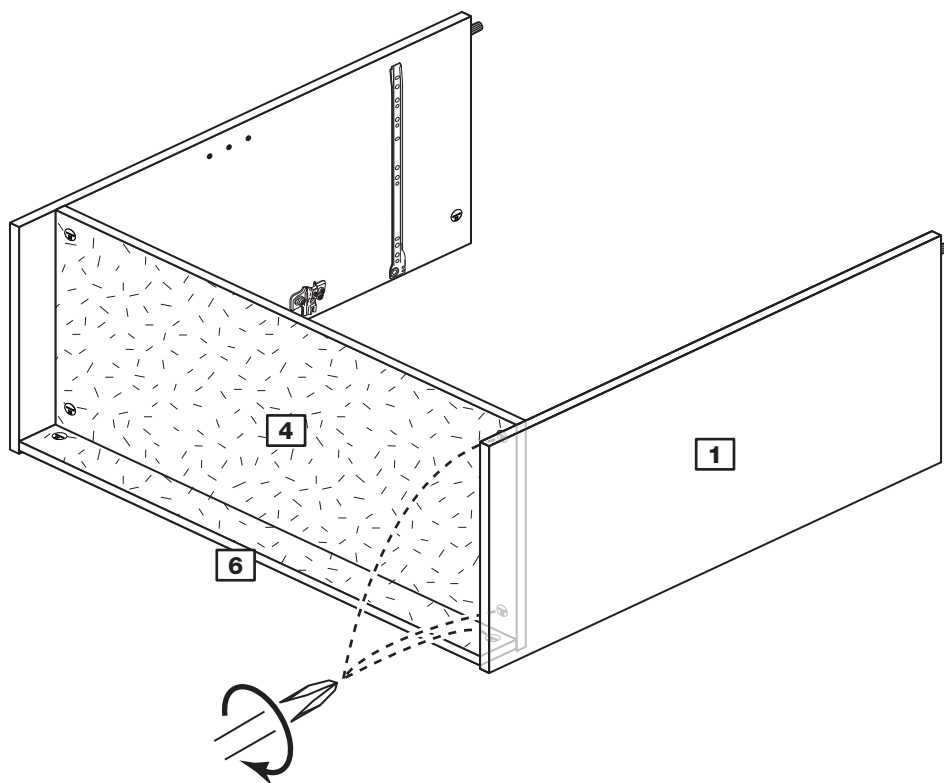


Step 15

Prepare the top

Screw 4 metal dowels **B** into the top **3**.

Fix the bracket **L**, flush to the back edge of the top **3** and 250mm in from the side, using screw **G**.

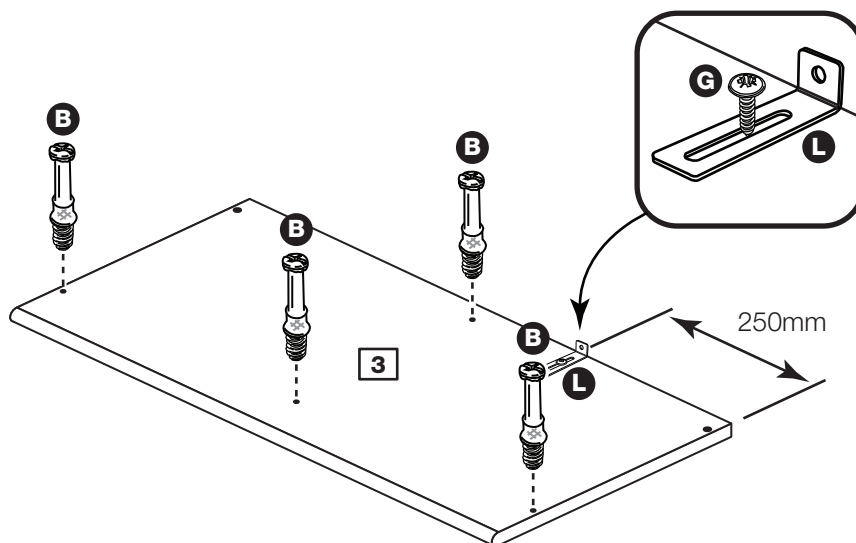

Assembly Instructions

Step 16

Prepare the divider

a: Insert 2 large locking nuts **E** into the divider **5**.

Note: The 2 holes for the large locking nuts may be drilled in either surface of the divider **5**.

b: Fit a runner **O b** to this surface of the divider **5**.


Note: Use the finished front edge to identify which runner to fit.

The 1st screw **I** uses the 2nd hole in from the front of the runner.


The 2nd screw **I** uses the hole that lines up with the other panel hole.

c: Turn the divider **5** over and fit the runner **O a** to the other surface.

a:

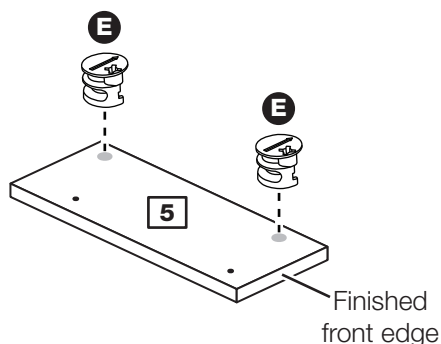


b:

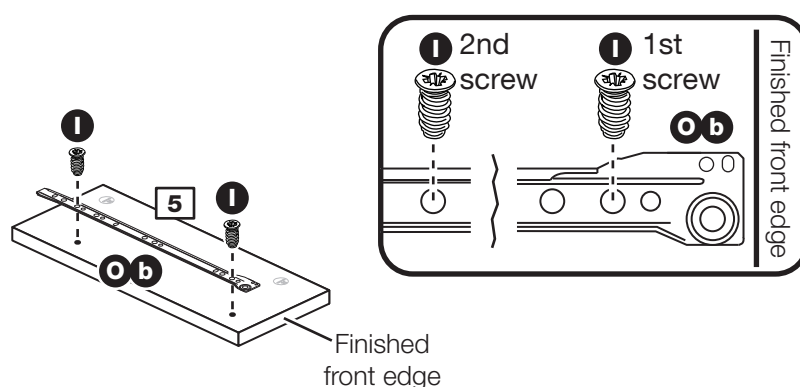

Turn the drawer divider over

c:

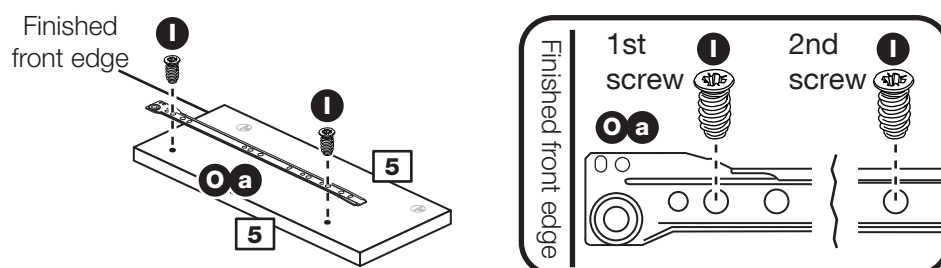

Assembly Instructions


Step 17

Fit the divider

Push the divider **5** onto the top **3**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the divider **5**.

Note: The 2 large locking nuts may be on either surface of the divider.

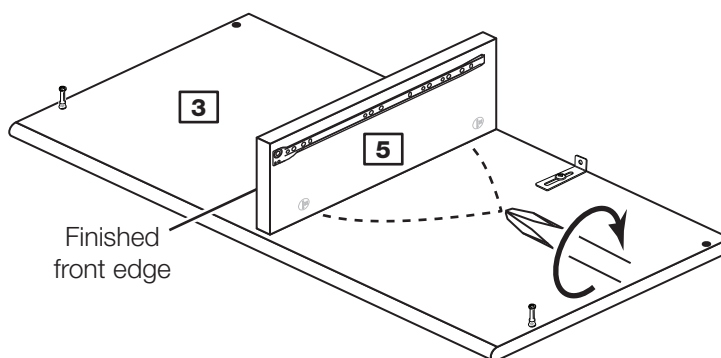


Step 18

Fit the top

Push the top **3** onto the side panels **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the side panels **1** and **2**.

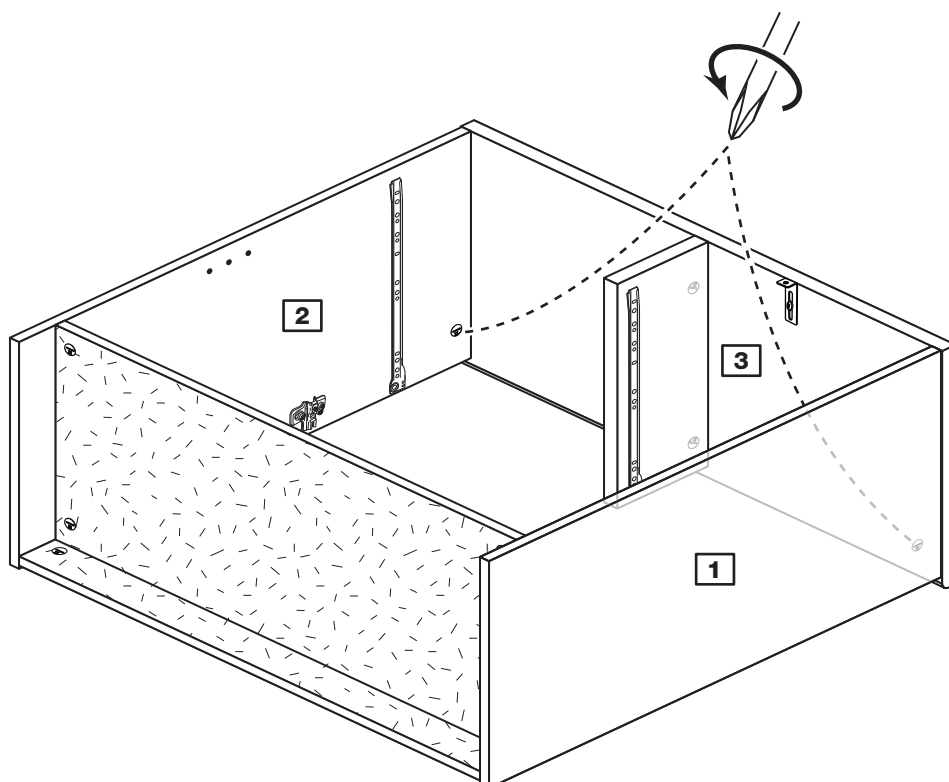

Assembly Instructions

Step 19

Fit back panel

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.


b: Place the back **14** down onto the unit, as shown.

Use the nail guide **C** to hold the nails **D** vertical and at the correct distance whilst you nail around the outside of the back **14**.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

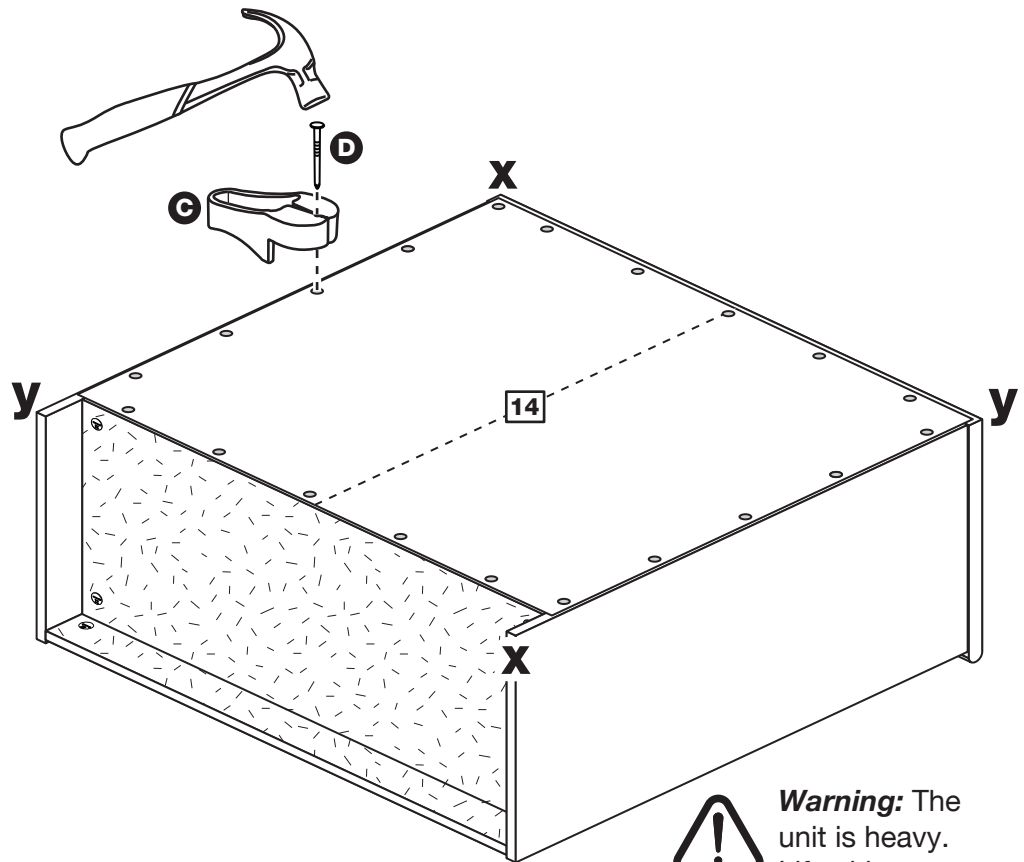

Warning: The unit is heavy. Lift with care.

Step 20


Secure unit to a wall

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the metal bracket **L** fitted to the underside of the top **3**.

Fixings are not supplied as they will need to suit the wall type, and the length of Screw will depend on the distance of the back of the Unit to the wall.



Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

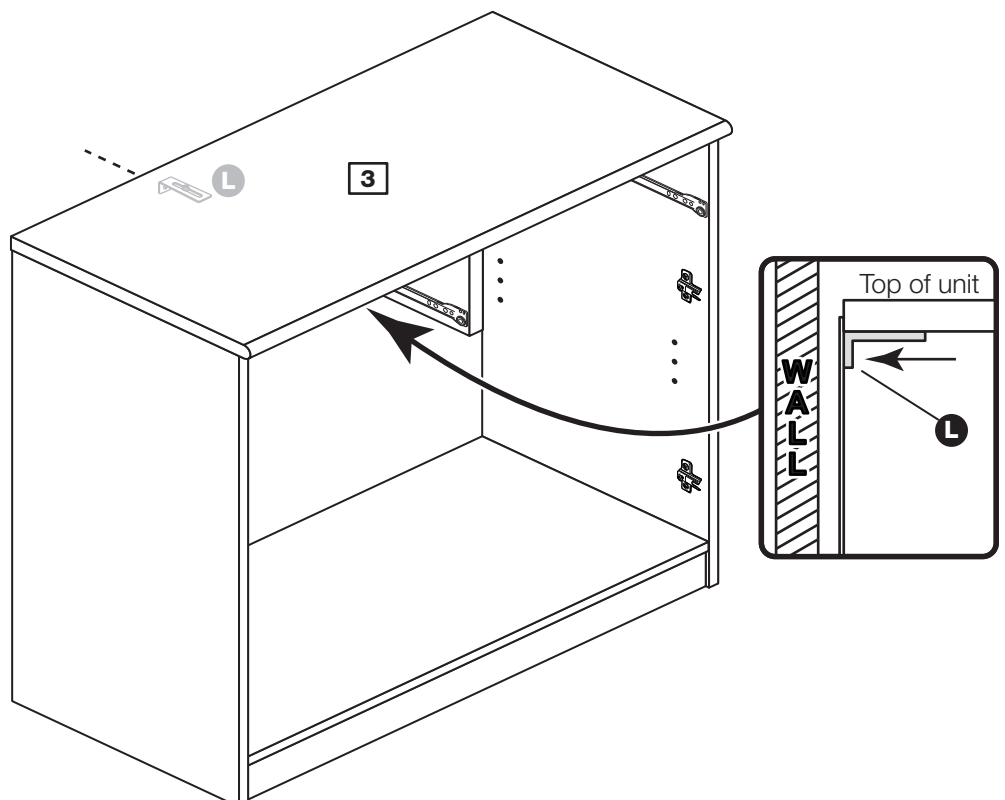


Assembly Instructions

Step 21

Fit the shelf

Insert 4 shelf studs **J** at the required height.

Lower the shelf **7** down onto the shelf studs **J**.

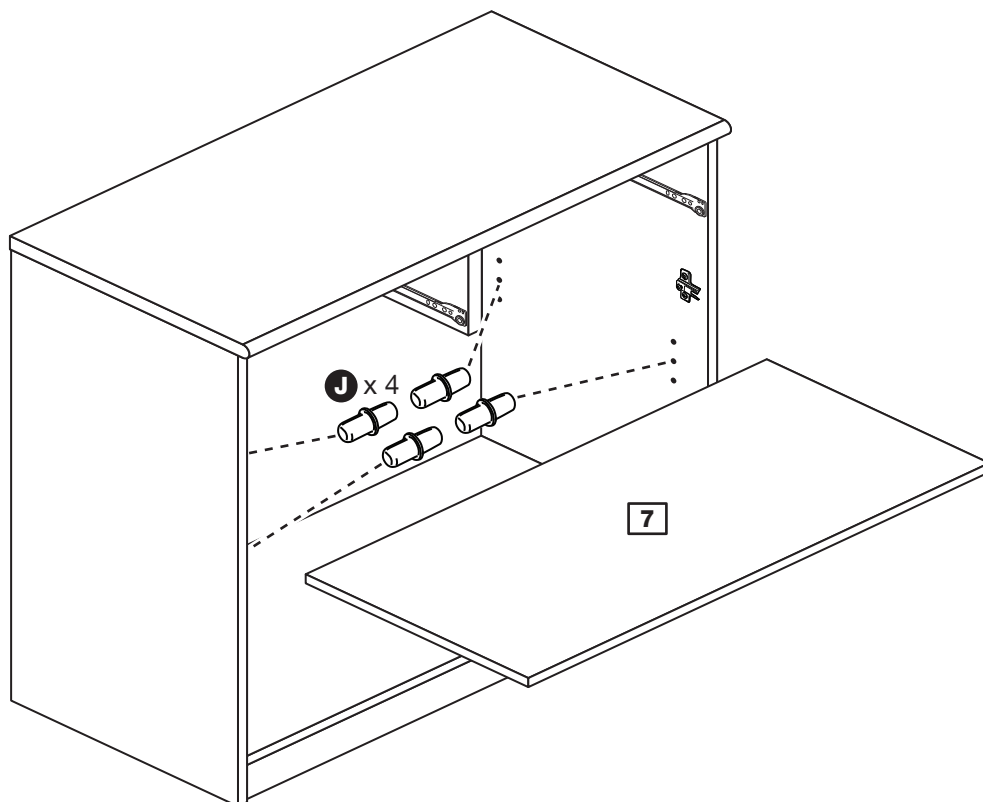


Step 22

Prepare the 2 doors

Push fit 2 hinges **N** into each of the doors **13**.

Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

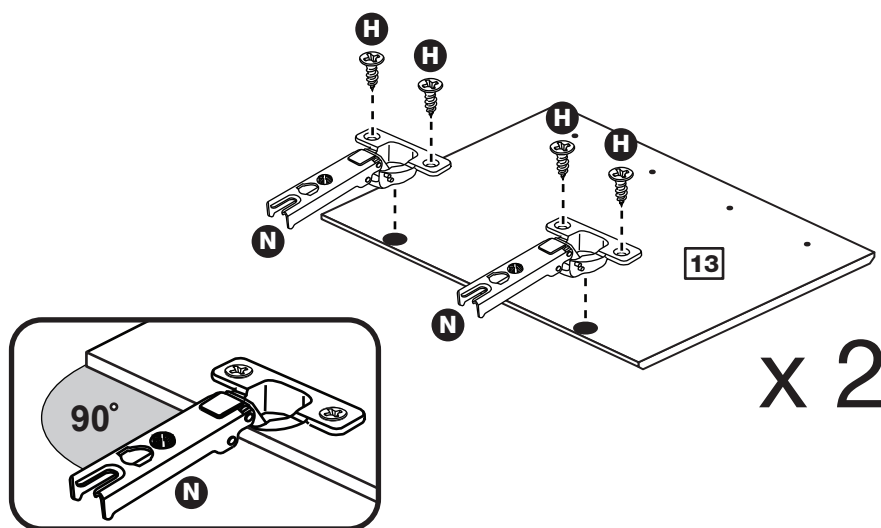

Assembly Instructions

Step 23

Drill the handle holes in the door

Important: Please follow these instructions carefully.

Lay the doors **13** down onto a smooth surface.

Important: Check that the holes and hinges are in the same place as the diagrams.

Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.


Using the pilot hole in the rear face of the door **13**, drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door **13** over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.


IMPORTANT

You will need to drill the doors to suit the handles supplied

You will need to drill 1 door as shown in this diagram

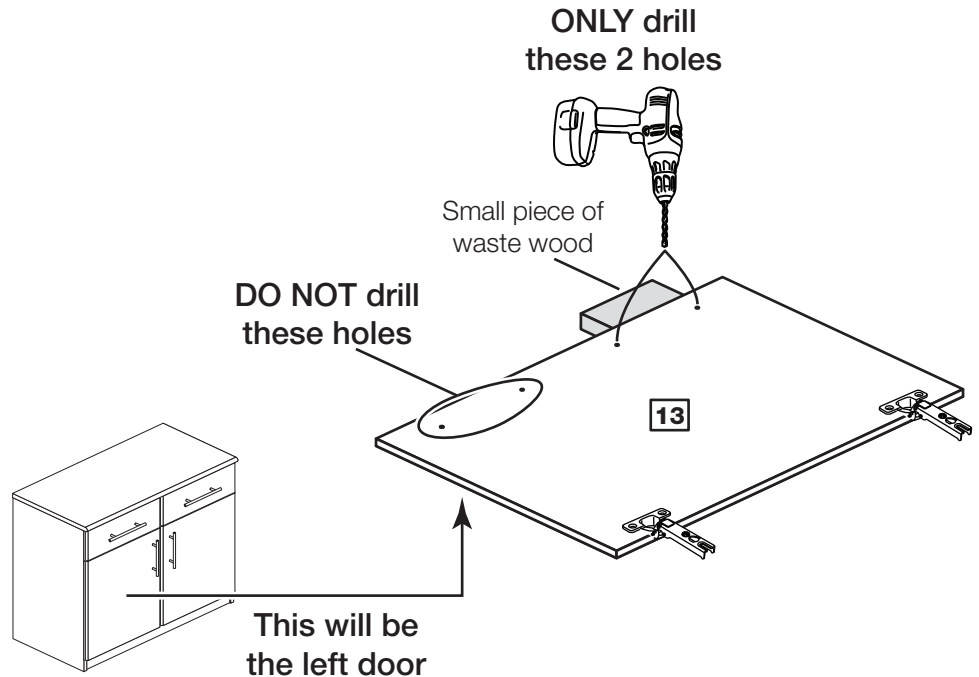

You will need to drill 1 door as shown in this diagram

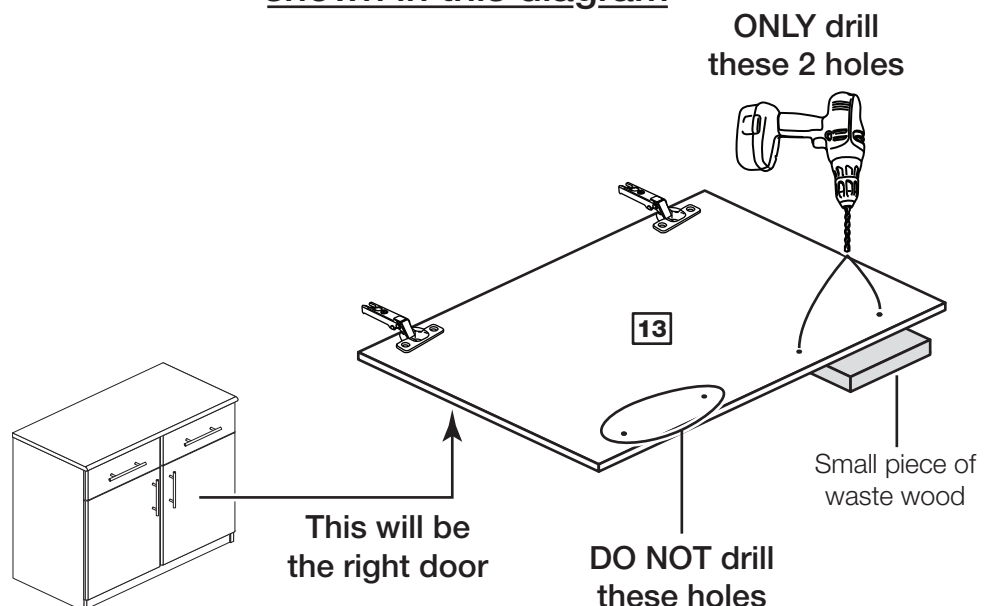

Assembly Instructions

Step 24

Fit doors and handles

Note: The easiest way to attach each door **13** is to fit the top hinge first, then align and fit the other hinge.



a: Push the hinge **N** onto the front part of the hinge plate **M**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **N** FLAT against the hinge plate **M** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **N** must be flat against the hinge plate **M** prior to any adjustment.

d: The hinge **N** must NOT be AT AN ANGLE to the hinge plate **M** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **P a** to each door **13** using 2 screws **P b**.

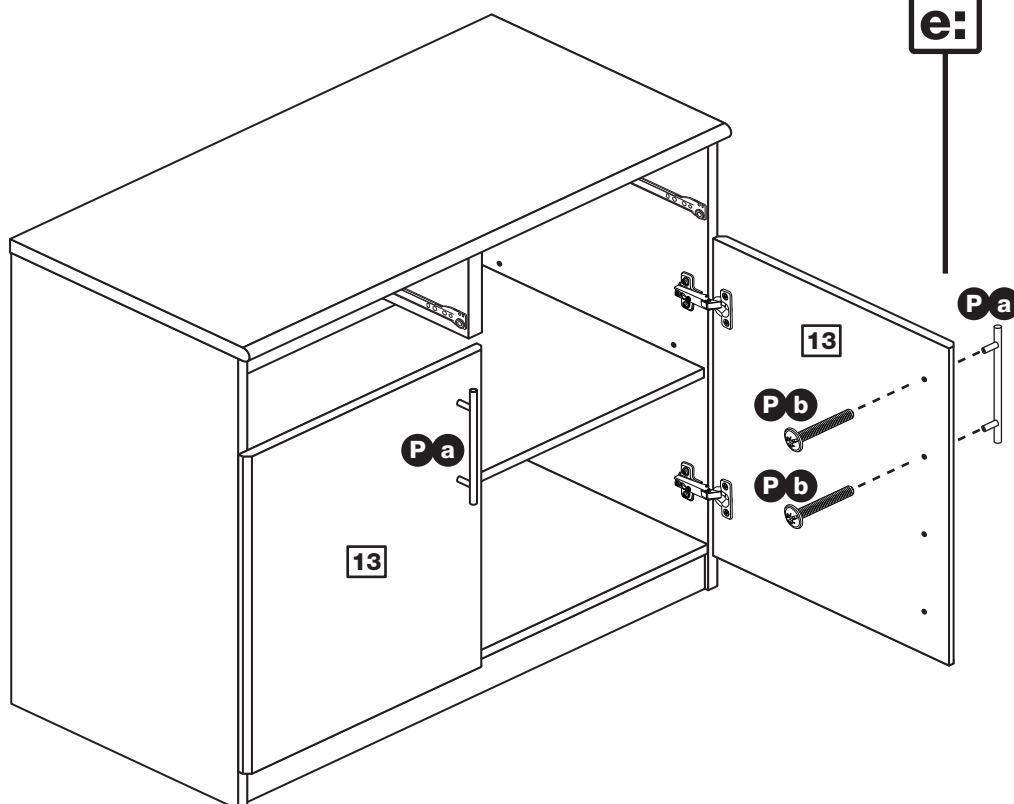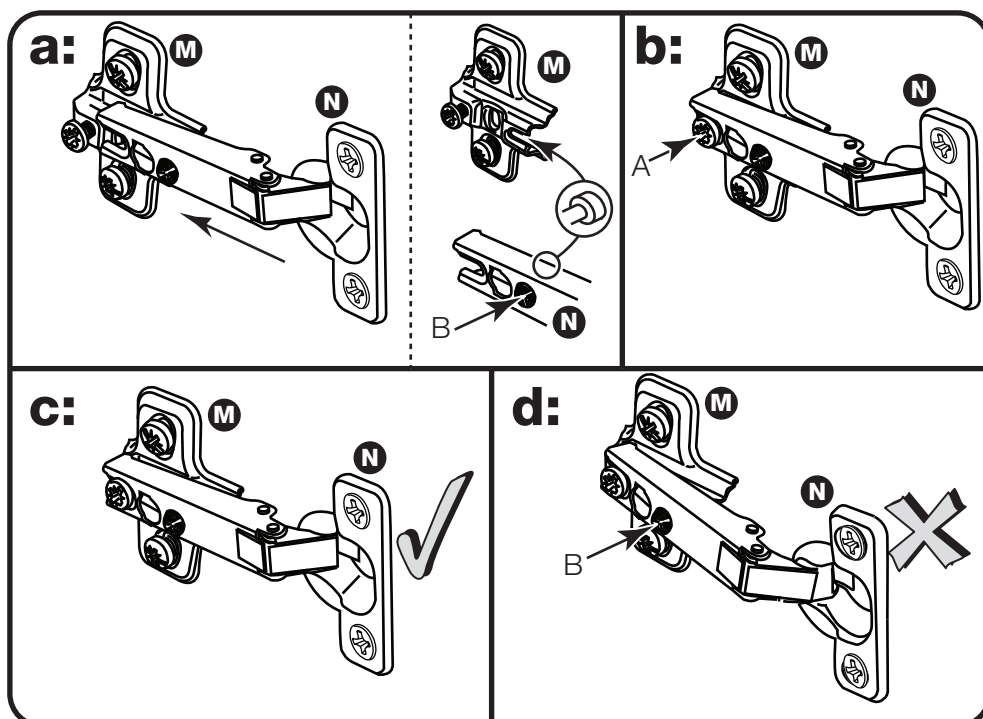

Assembly Instructions

Step 25

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.

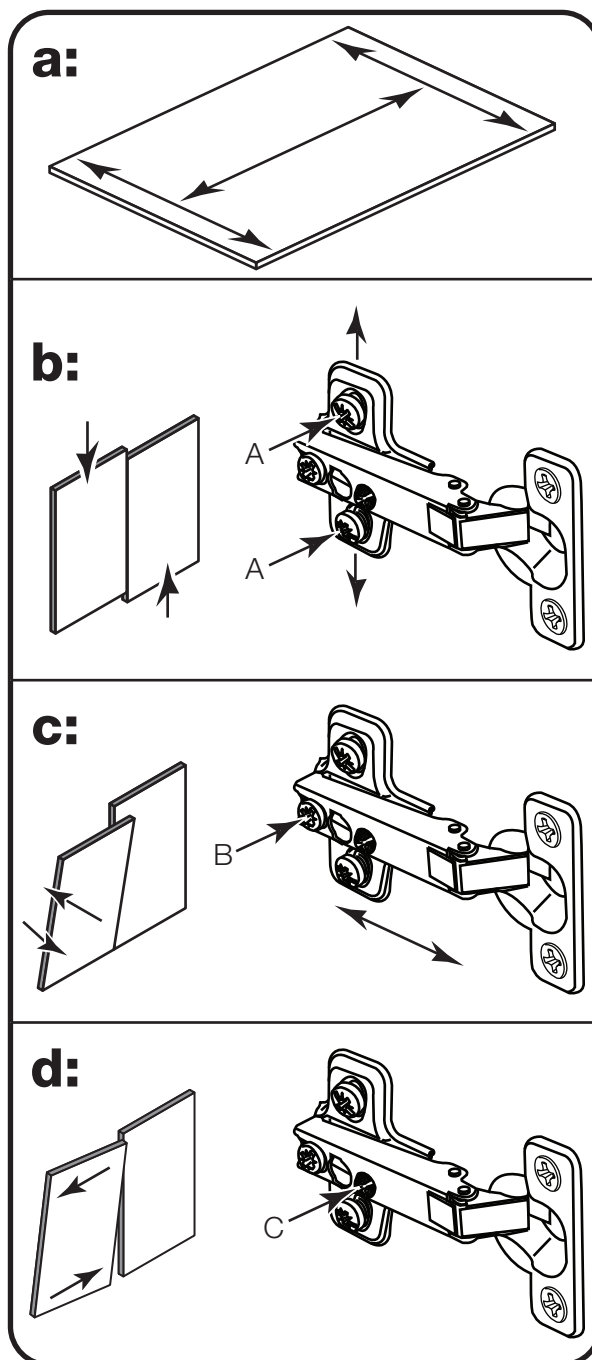

Assembly Instructions

Step 26



Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete



Warning: The unit is heavy. Lift with care.

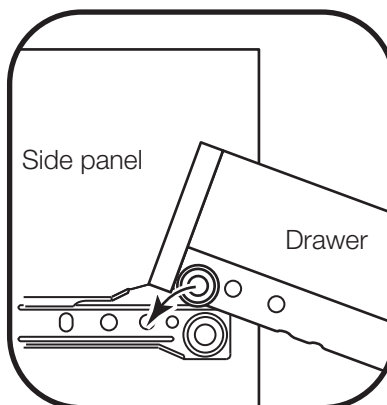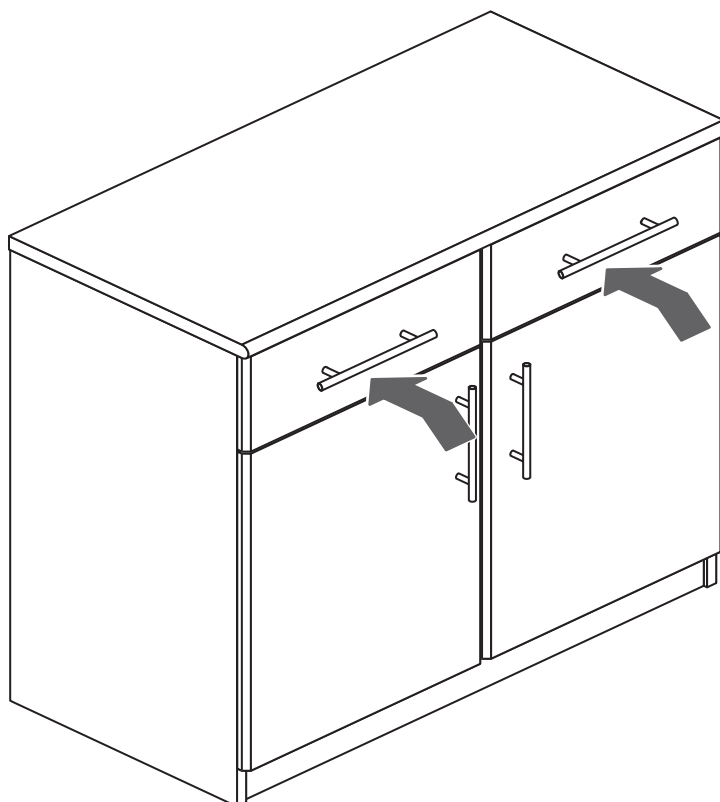

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800** and quote the reference numbers on the component pages.


Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Anderson - 2+2 Sideboard

Assembly Instructions - Please keep for future reference

609/5552

609/5538

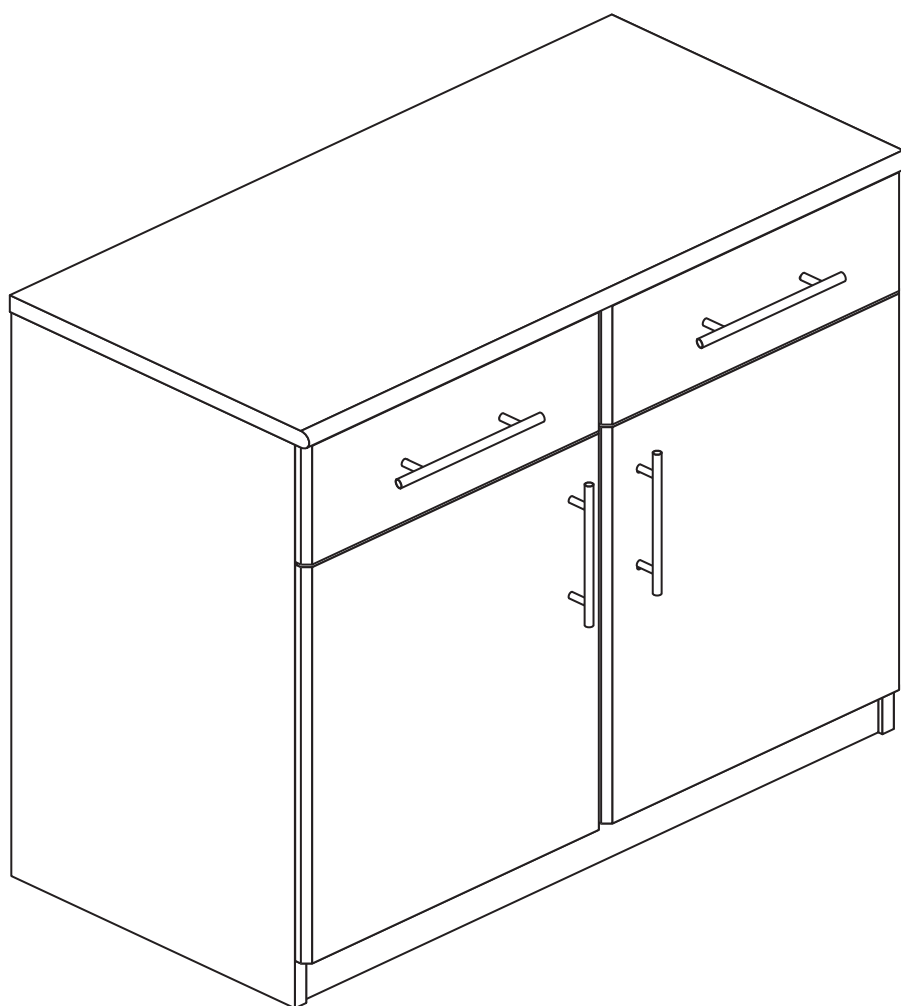

Dimensions

Width - 80cm

Depth - 40cm

Height - 77.5cm




**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Safety and Care Advice


Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 28kgs. Please lift with care.
 - Check you have all the components and tools listed on pages 2 and 3.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Parts of the assembly will be easier with 2 people.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
 - **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.
 - Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

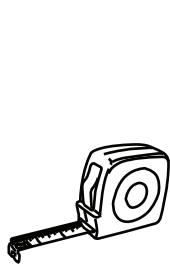

Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection
(when using a hammer or drill)




Electric drill
(do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below


Please check you have all the panels listed below

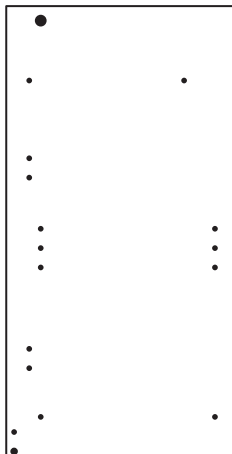


1 Left Side (D2182A)
(747 x 375mm)

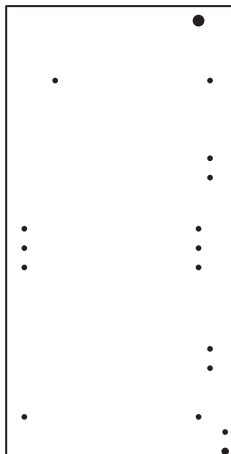

2 Right Side (D2183A)
(747 x 375mm)

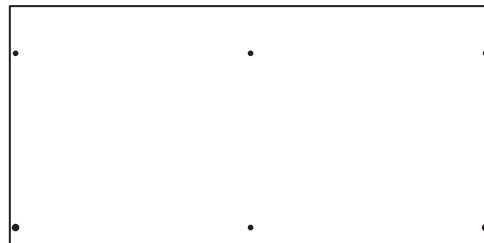

3 Top (D2184A)
(796 x 396mm)

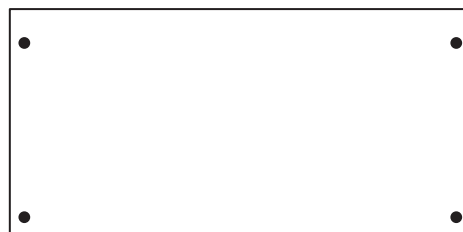

4 Base (D2185A)
(762 x 374mm)




5 Divider (D2260A)
(150 x 374mm)



6 Plinth (D2265A)
(762 x 60mm)



7 Shelf (D2261A)
(762 x 368mm)



8 Drawer Front (D2263A)
(390 x 157mm) x 2



9 Left Drawer Side (W509LH)
(330 x 115mm) x 2




10 Right Drawer Side (W509RH)
(330 x 115mm) x 2




11 Drawer Back (W537)
(321 x 115mm) x 2



12 Drawer Base (T603)
(333 x 327mm) x 2

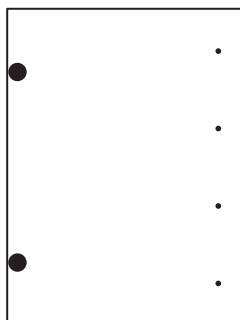

13 Door (D2262A)
(524 x 390mm) x 2

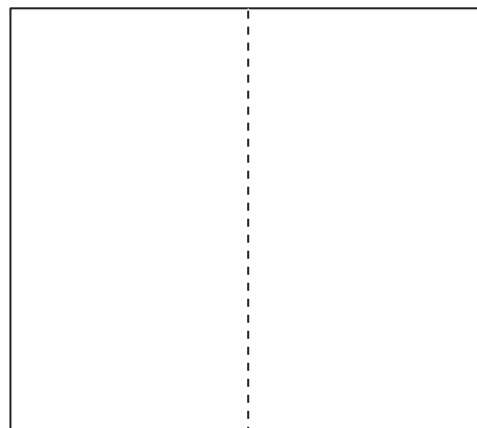

14 Back (X786-705)
(786 x 705mm)



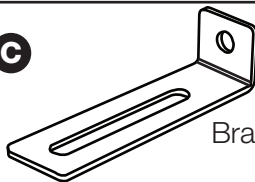








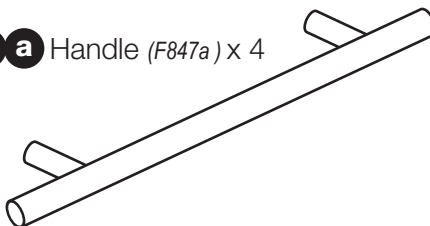


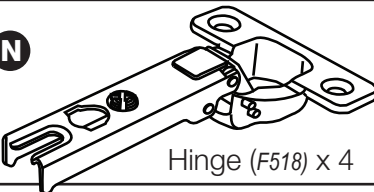






Components - Fittings


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel (F22) x 4	B  Metal dowel (F901) x 14	C  Bracket (F327) x 1
D  Nail (F51) x 21	E  Large locking nut (F900) x 10	F  Small locking nut (F3) x 4
G  13mm Screw (F79) x 1	H  13mm Screw (F63) x 16	I  13mm Screw (F52) x 8
J  Shelf stud (F110) x 4	K  Knock-in Peg (F171) x 8	
L a  Handle (F847a) x 4		L b  Handle Screw (F847b) x 8
M  Hinge plate (F523) x 4	N  Hinge (F518) x 4	
O a  L Runner (F159) x 2		
O b  R Runner (F160) x 2		
O c  L Runner (F161) x 2		
O d  R Runner (F162) x 2		

Ruler - Use this ruler to help correctly identify the screws

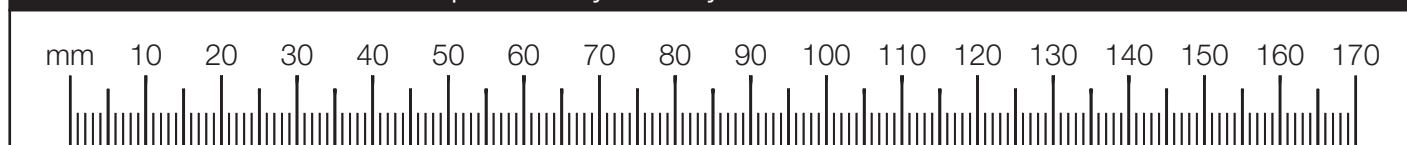

Assembly Instructions


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
 numbers below

Step 1

Prepare the drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **8**.

Note: Tighten metal dowels up fully against the panels.

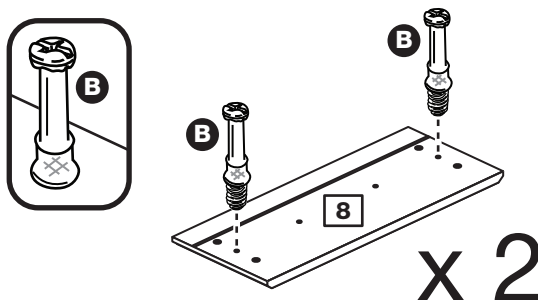


Step 2

Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and right drawer side **10**.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

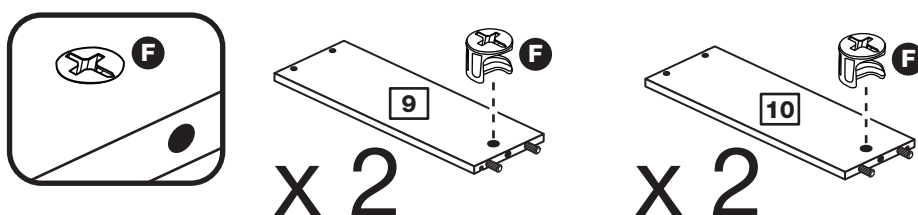

Step 3


Attach the drawer sides to the drawer front

Push the left drawer side **9** and right drawer side **10** onto the back of the drawer front **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

Note: Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

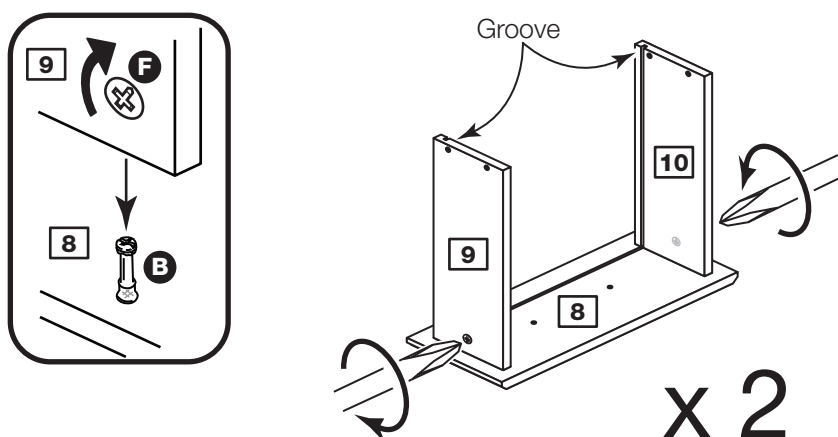


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

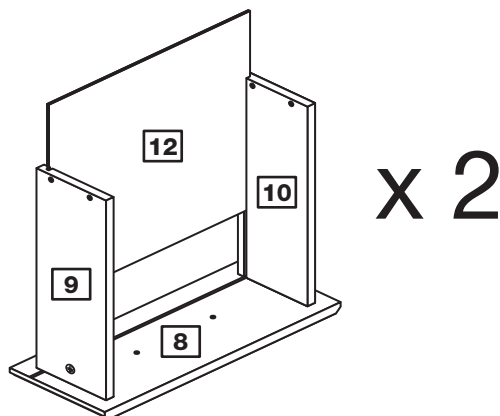


Step 5

Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**.

Make sure that the drawer base **12** fits into the groove in the drawer back **11**.


Hold the drawer back **11** in position and tap the knock-in pegs **K** through the holes in the drawer sides **9** and **10**.

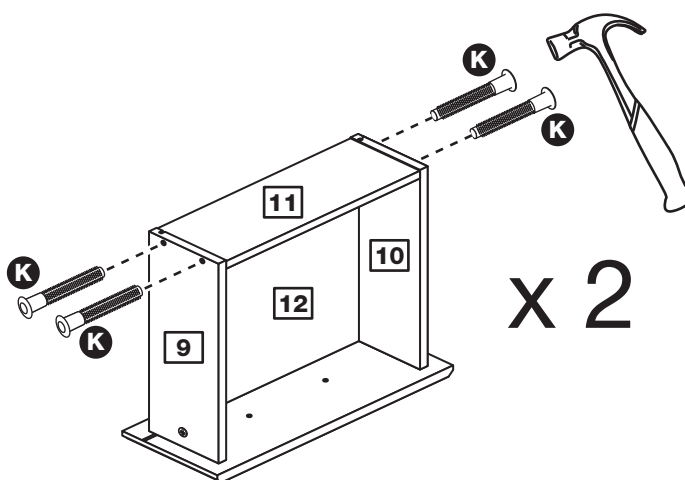

Step 6

Attach the handle

Attach a handle **La** to each drawer front **8** using 2 screws **Lb**.

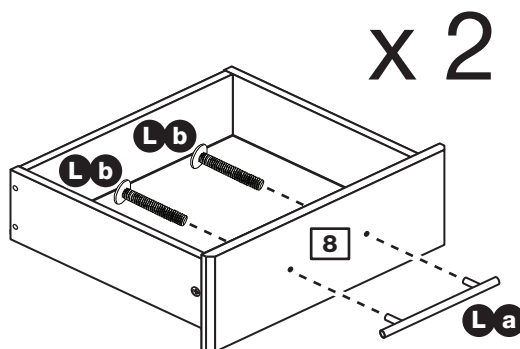


Assembly Instructions

Step 7

Fit runners to the drawers

Fit the runner **Oc** to the bottom edge of the left drawer side **9**, as shown, making sure that it is pushed up against the back of the drawer front **8**. Use a bradawl to mark the fixing positions, then secure with 2 screws **H**.

Fit the runner **Od** to the bottom edge of the right drawer side **10** using the same method.

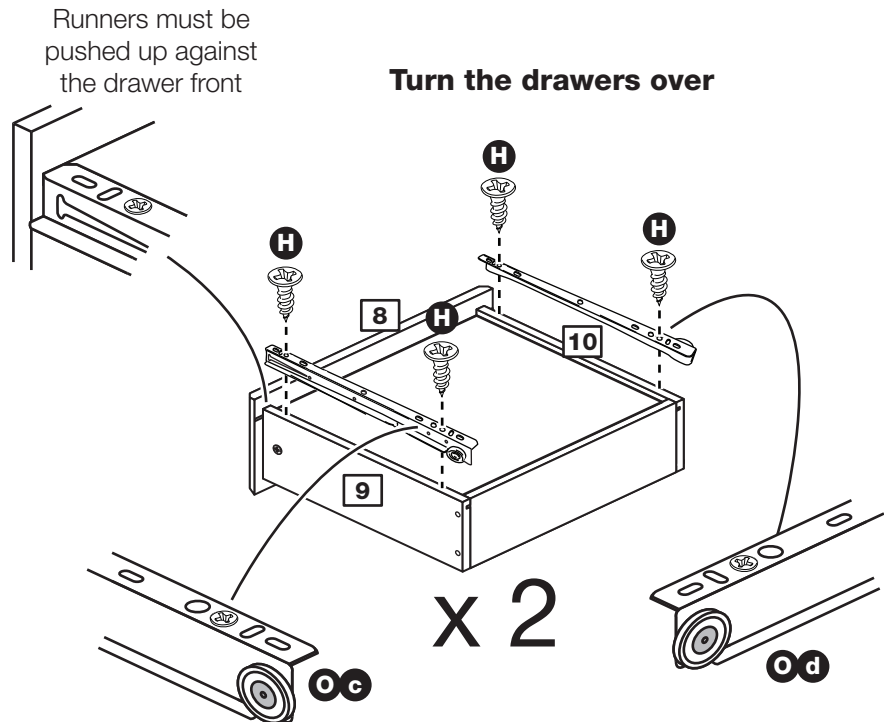

Step 8

Prepare the left side

Tap a wooden dowel **A** into the left side **1**.

Screw 3 metal dowels **B** into the left side **1**.


Insert a large locking nut **E** into the left side **1**.

Fit the runner **Oa** to the left side **1**.


The 1st screw **I** uses the 2nd hole from the front of the runner **Oa**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.

Fit 2 hinge plates **M** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

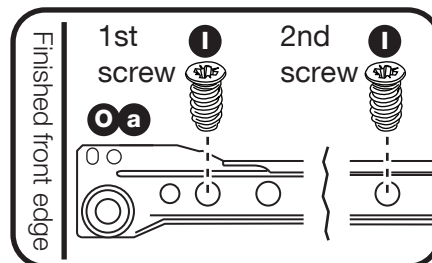

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

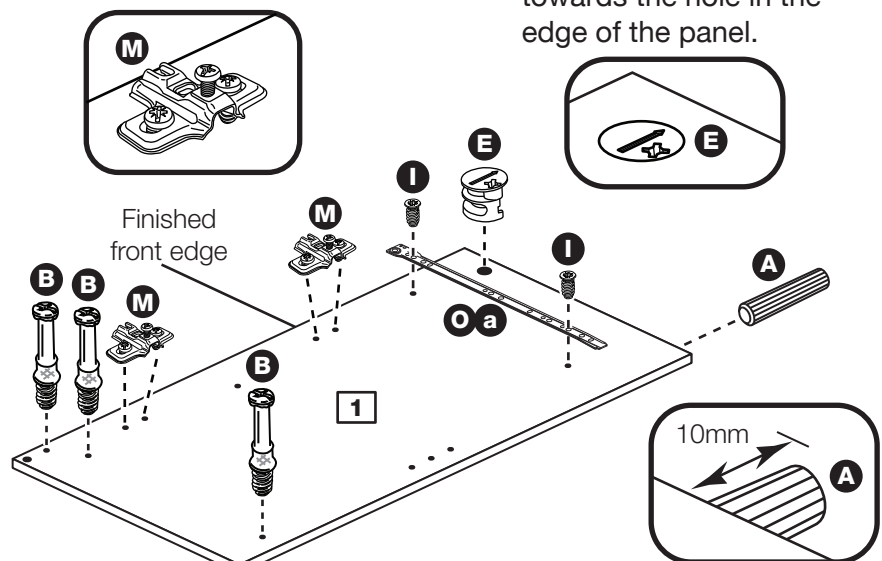

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Assembly Instructions

Step 9

Prepare the right side

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.


Insert a large locking nut **E** into the right side **2**.

Fit the runner **O b** to the right side **2**.

The 1st screw **I** uses the 2nd hole in from the front of the runner **O b**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.


Fit 2 hinge plates **M** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

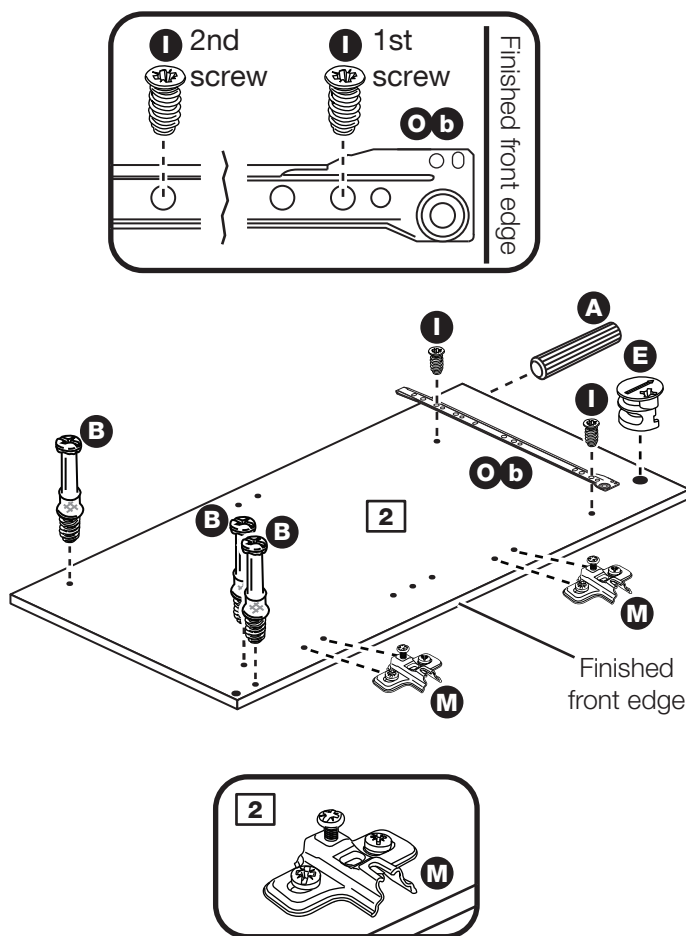

Step 10

Prepare the base

Insert 4 large locking nuts **E** into the base **4**.

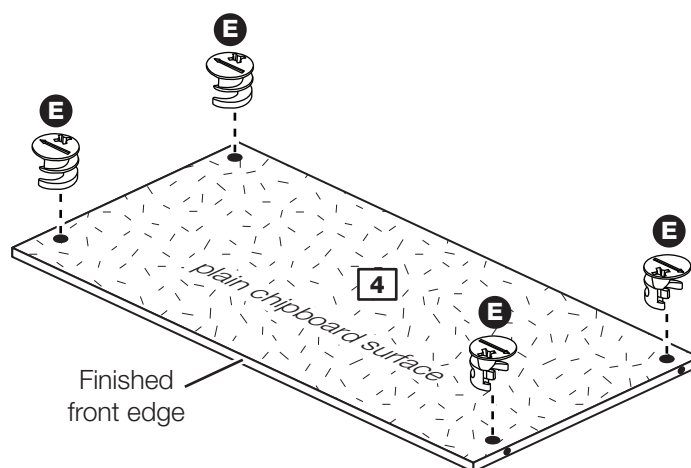

Assembly Instructions


Step 11

Join the right side and base

Push the base **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the base **4**.

Note: Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

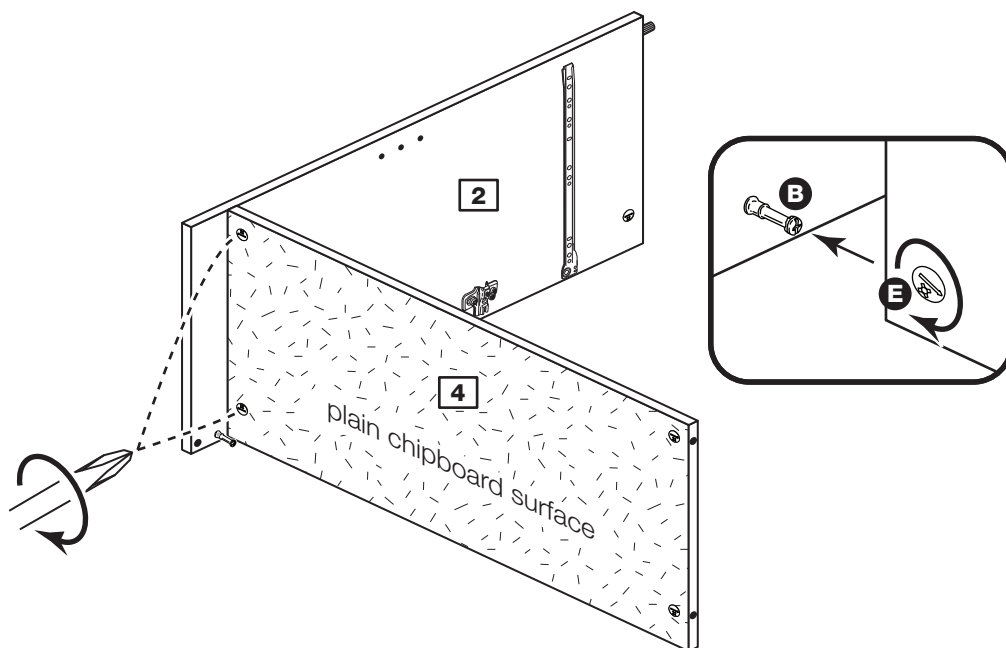


Step 12

Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **6**.

Insert 2 large locking nuts **E** into the plinth **6**.

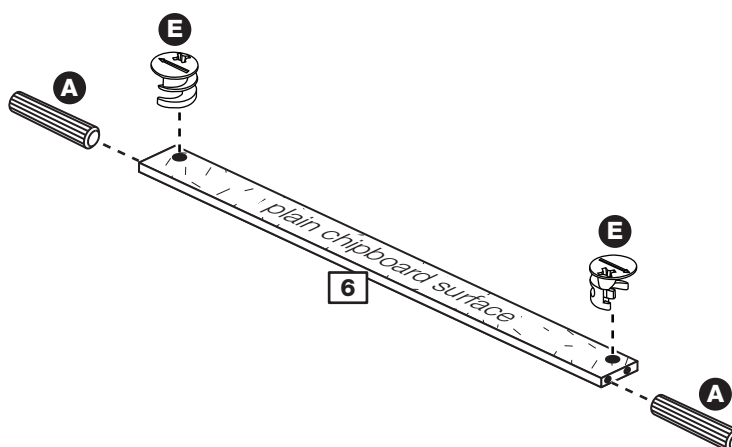


Step 13

Fit the plinth

Push the plinth **6** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **E** fitted to the plinth **6**.

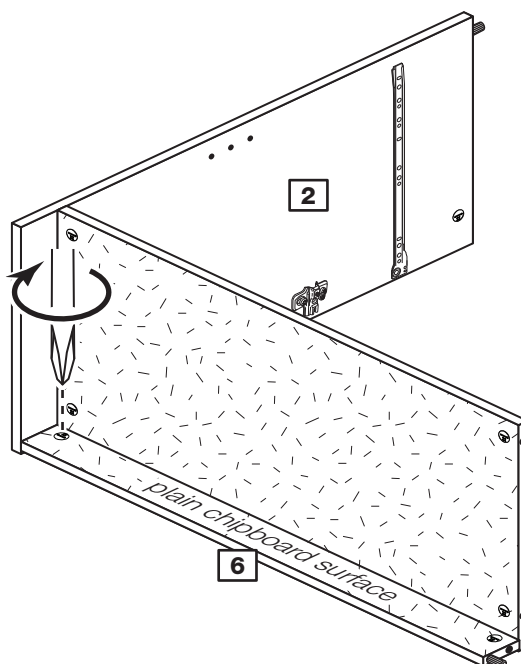


Assembly Instructions

Step 14

Fit the left side

Push the left side **1** onto the assembly.

Use a screwdriver to tighten the 3 large locking nuts **E** fitted to the base **4** and plinth **6**.

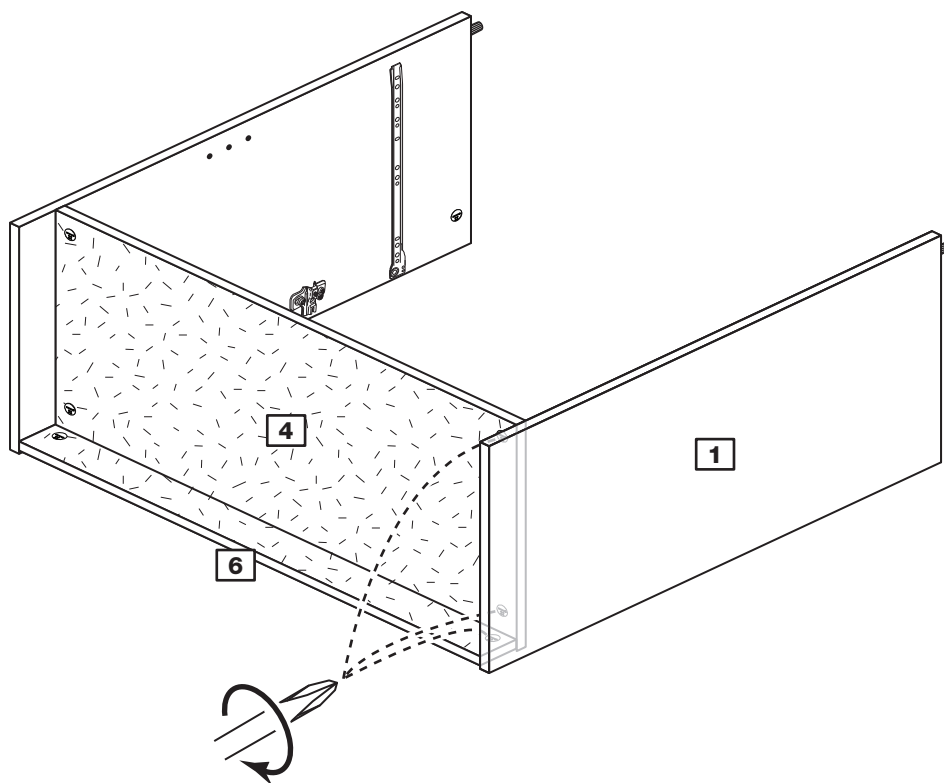


Step 15

Prepare the top

Screw 4 metal dowels **B** into the top **3**.

Fix the bracket **C**, flush to the back edge of the top **3** and 250mm in from the side, using screw **G**.

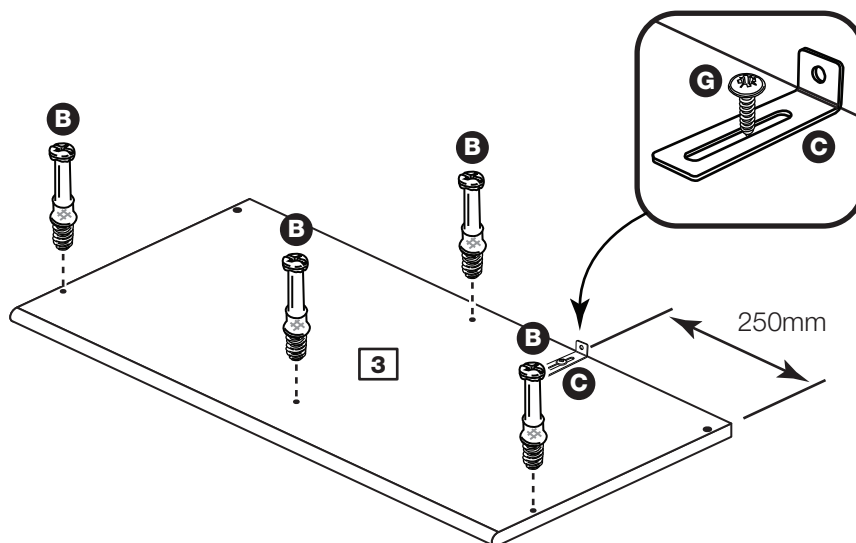

Assembly Instructions

Step 16

Prepare the divider

a: Insert 2 large locking nuts **E** into the divider **5**.

Note: The 2 holes for the large locking nuts may be drilled in either surface of the divider **5**.

b: Fit a runner **O b** to this surface of the divider **5**.


Note: Use the finished front edge to identify which runner to fit.

The 1st screw **I** uses the 2nd hole in from the front of the runner.


The 2nd screw **I** uses the hole that lines up with the other panel hole.

c: Turn the divider **5** over and fit the runner **O a** to the other surface.

a:

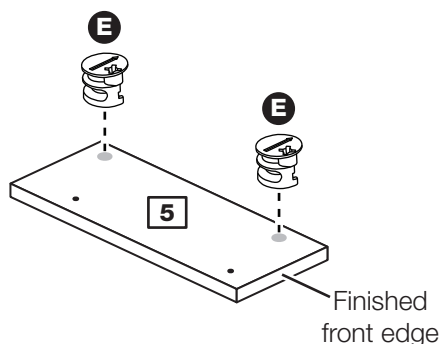


b:

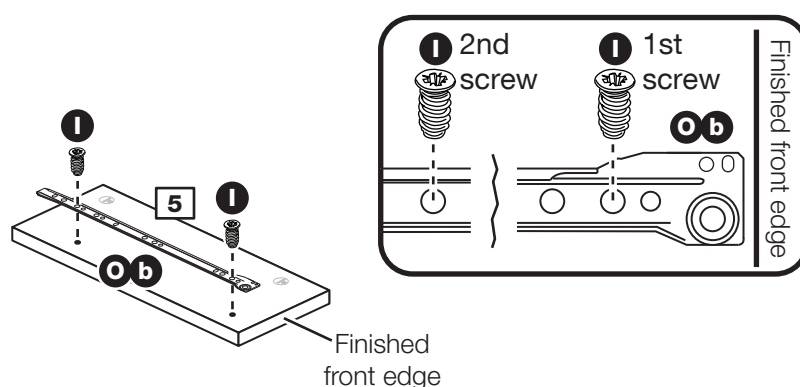

Turn the drawer divider over

c:

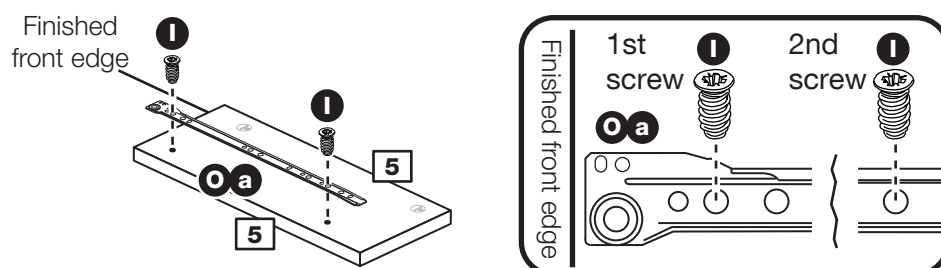

Assembly Instructions


Step 17

Fit the divider

Push the divider **5** onto the top **3**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the divider **5**.

Note: The 2 large locking nuts may be on either surface of the divider.

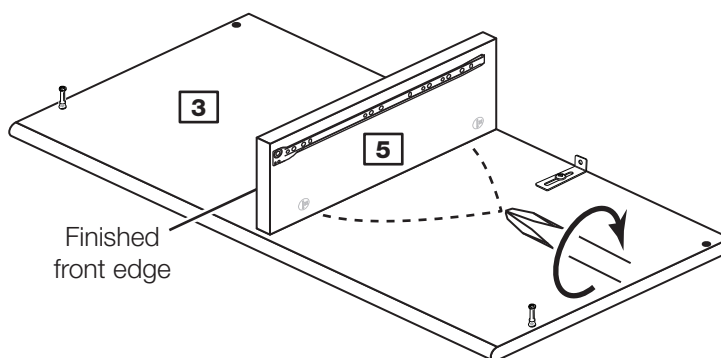


Step 18

Fit the top

Push the top **3** onto the side panels **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the side panels **1** and **2**.

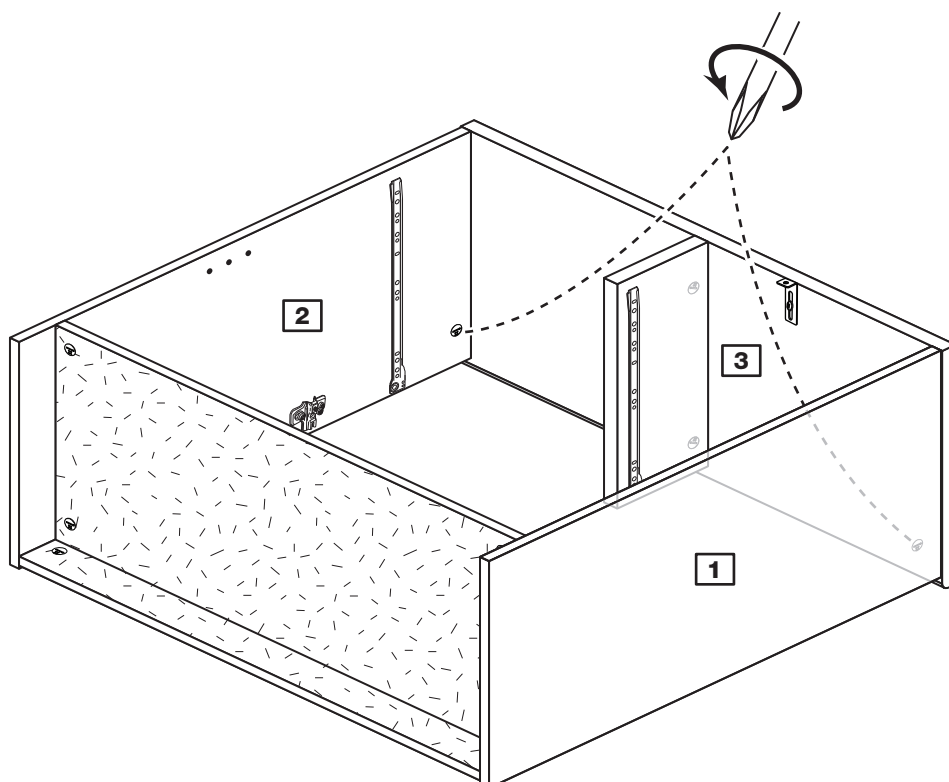

Assembly Instructions

Step 19

Fit back panel

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.


b: Place the back **14** down onto the unit, as shown.

Nail **D** around the outside edges of the back **14**.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

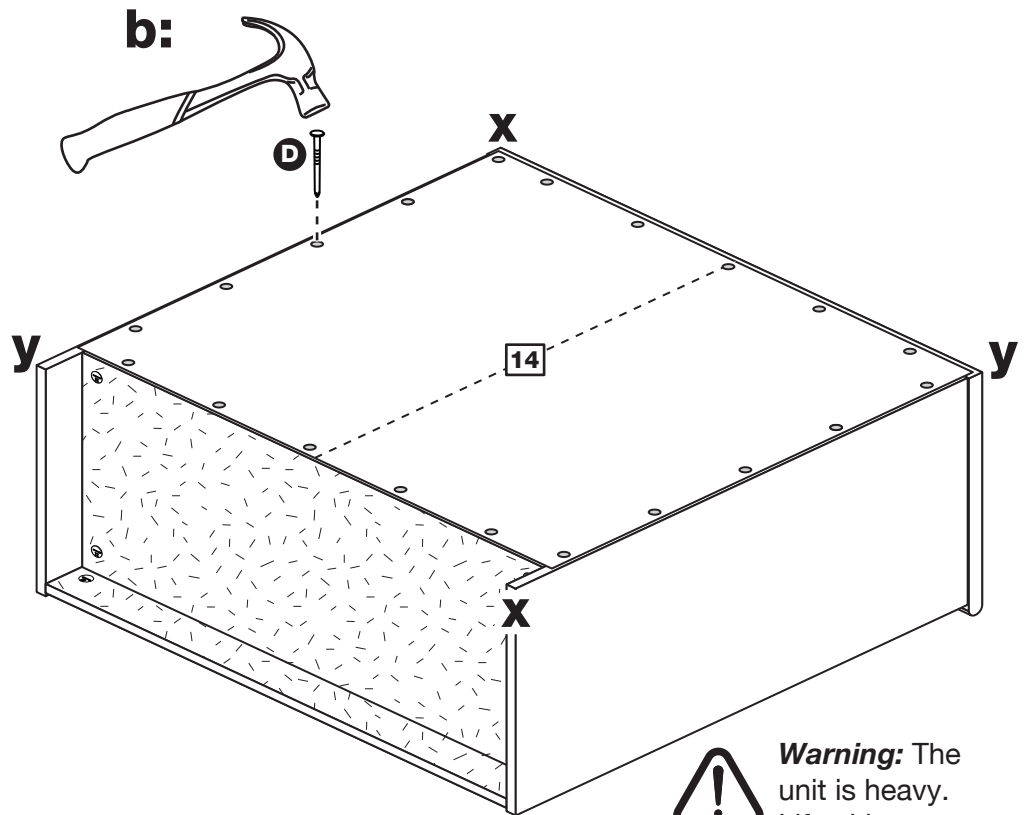

Warning: The unit is heavy. Lift with care.

Step 20


Secure unit to a wall

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the metal bracket **C** fitted to the underside of the top **3**.

Fixings are not supplied as they will need to suit the wall type, and the length of Screw will depend on the distance of the back of the Unit to the wall.



Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

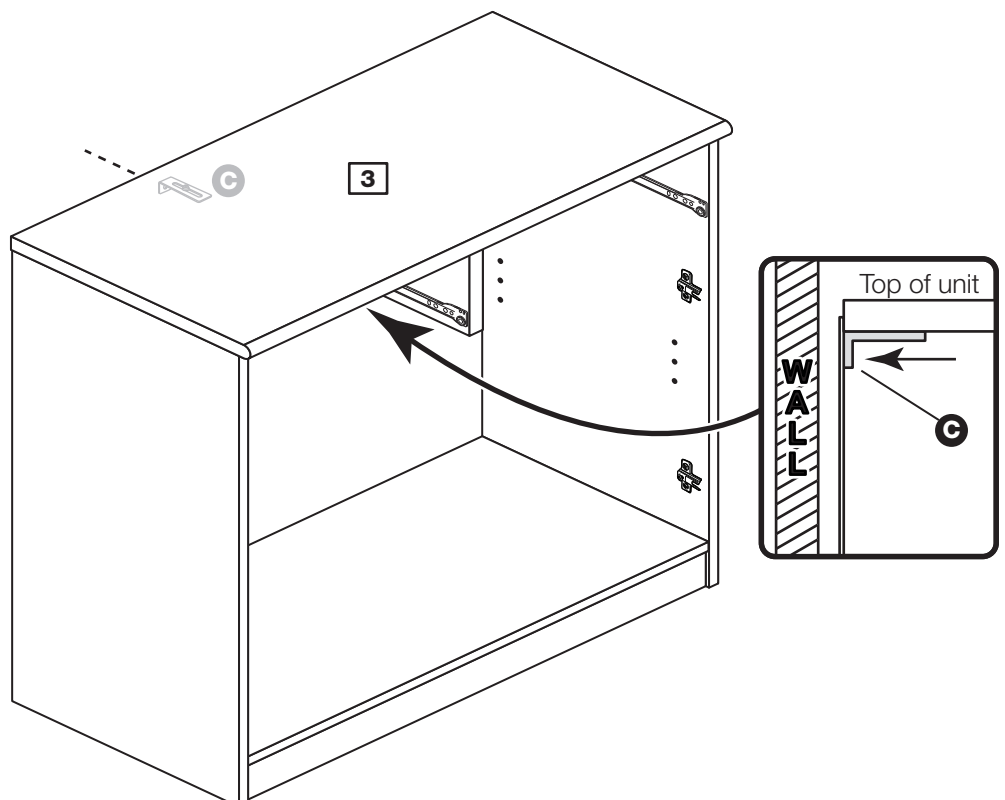


Assembly Instructions

Step 21

Fit the shelf

Insert 4 shelf studs **J** at the required height.

Lower the shelf **7** down onto the shelf studs **J**.

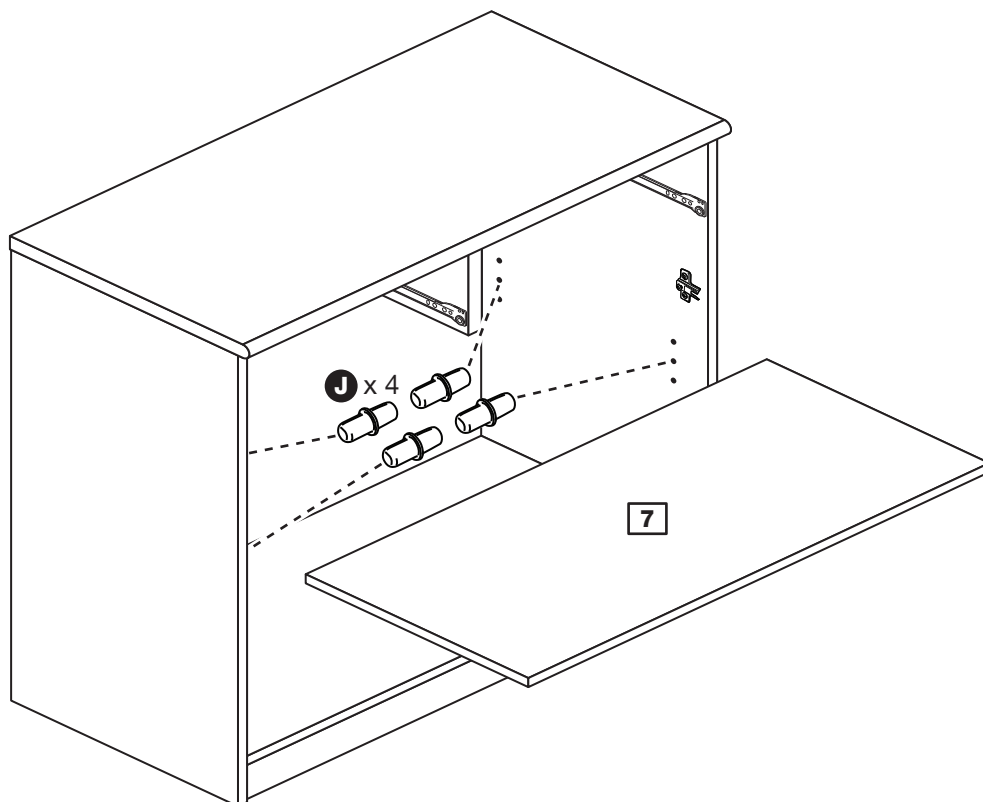


Step 22

Prepare the 2 doors

Push fit 2 hinges **N** into each of the doors **13**.

Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

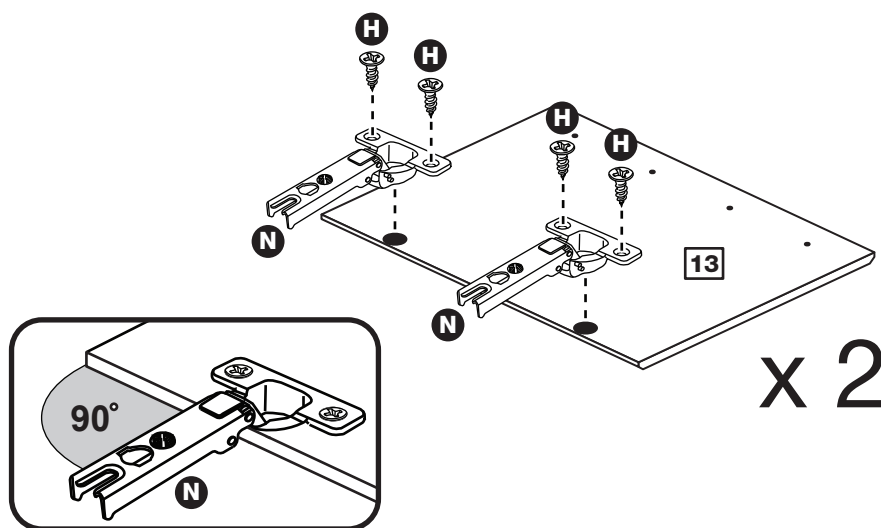

Assembly Instructions

Step 23

Drill the handle holes in the door

Important: Please follow these instructions carefully.

Lay the doors **13** down onto a smooth surface.

Important: Check that the holes and hinges are in the same place as the diagrams.

Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.


Using the pilot hole in the rear face of the door **13**, drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door **13** over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.


IMPORTANT

You will need to drill the doors to suit the handles supplied

You will need to drill 1 door as shown in this diagram

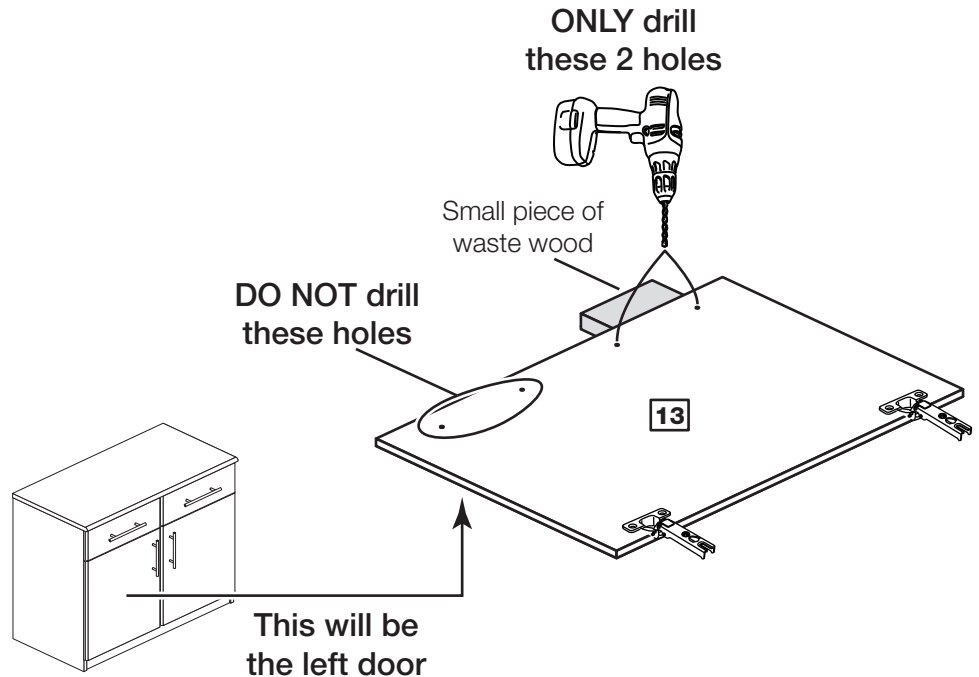

You will need to drill 1 door as shown in this diagram

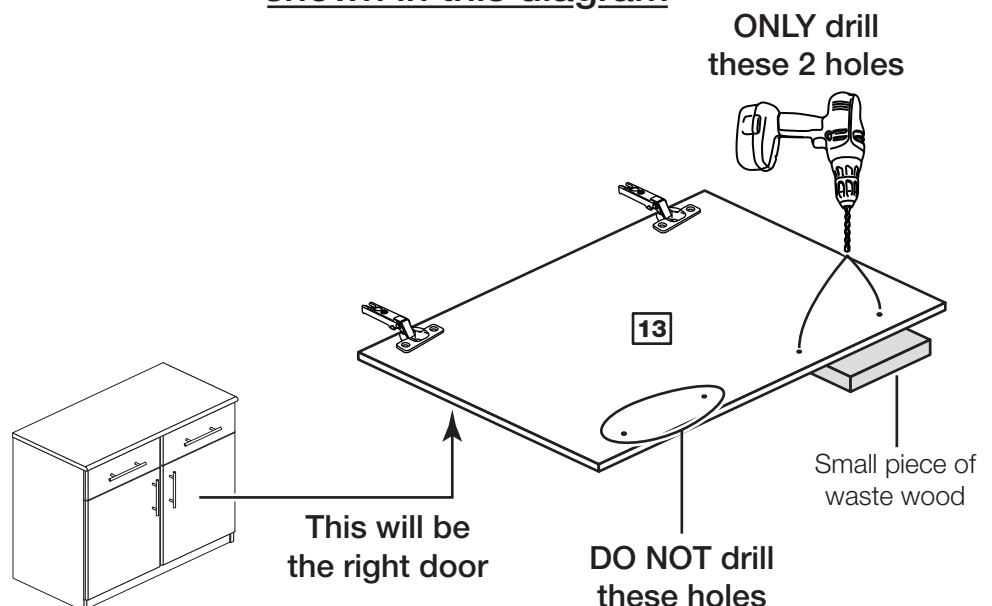

Assembly Instructions

Step 24

Fit doors and handles

Note: The easiest way to attach each door **13** is to fit the top hinge first, then align and fit the other hinge.



a: Push the hinge **N** onto the front part of the hinge plate **M**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **N** FLAT against the hinge plate **M** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **N** must be flat against the hinge plate **M** prior to any adjustment.

d: The hinge **N** must NOT be AT AN ANGLE to the hinge plate **M** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **L a** to each door **13** using 2 screws **L b**.

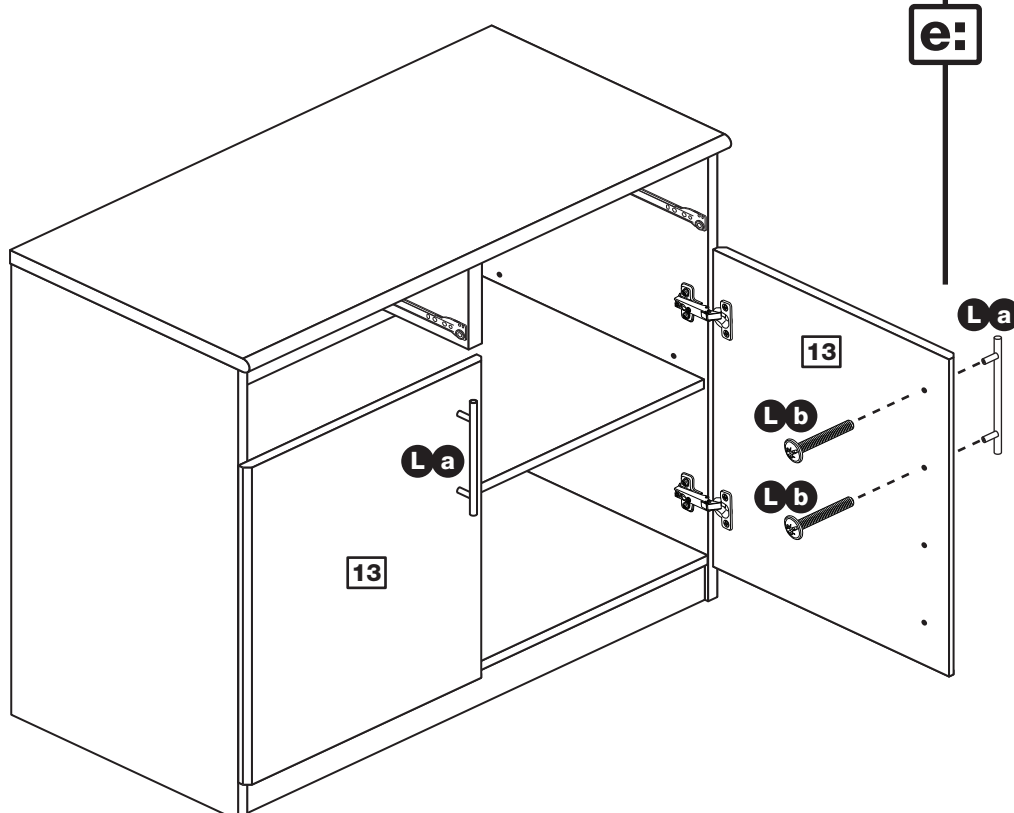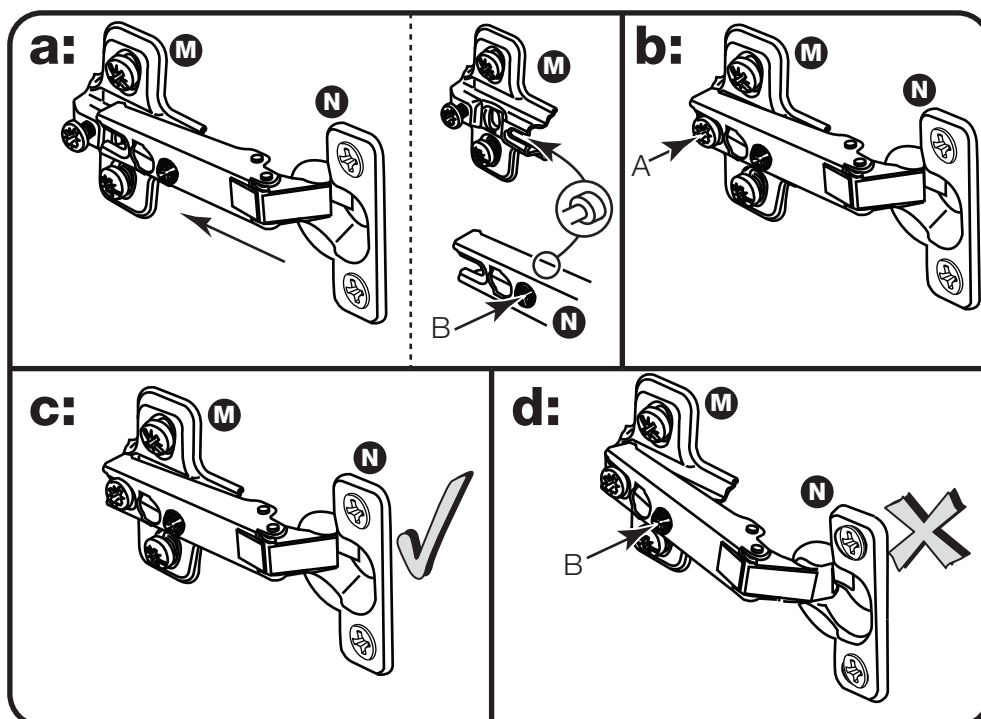

Assembly Instructions

Step 25

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.

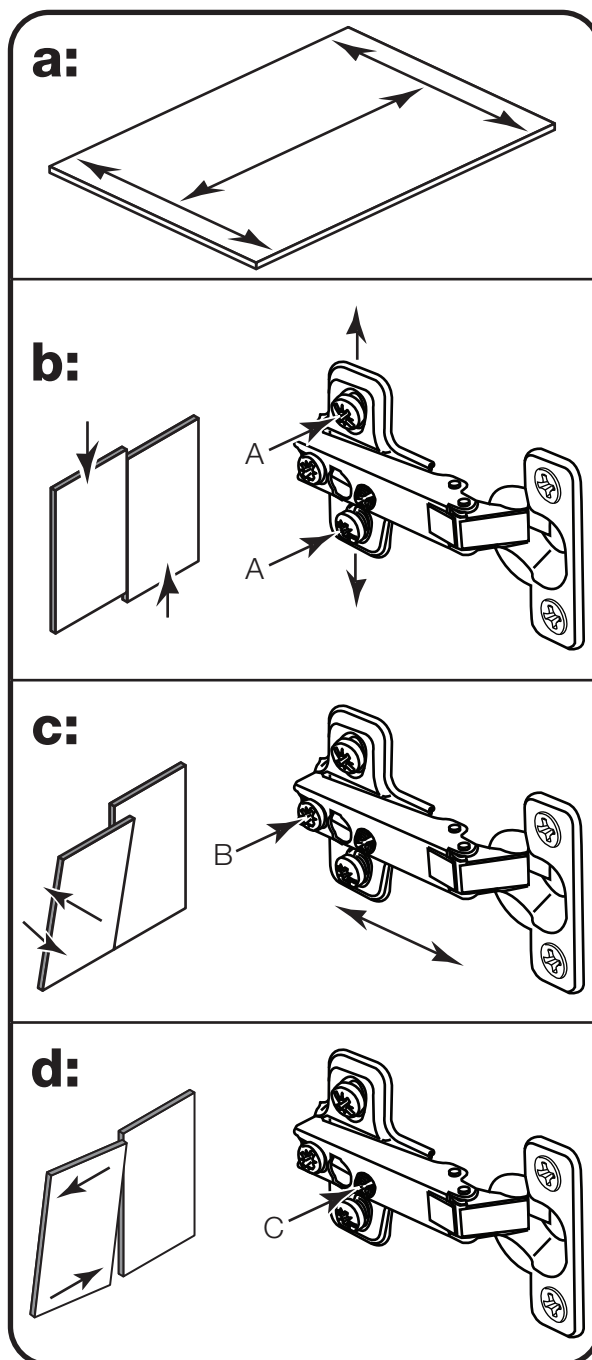

Assembly Instructions

Step 26



Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete



Warning: The unit is heavy. Lift with care.

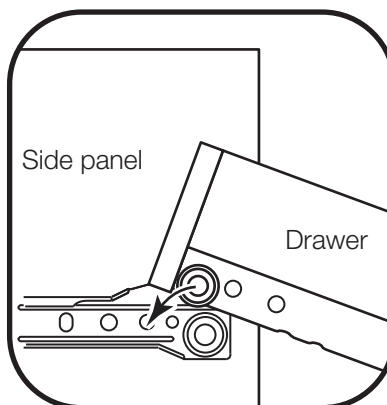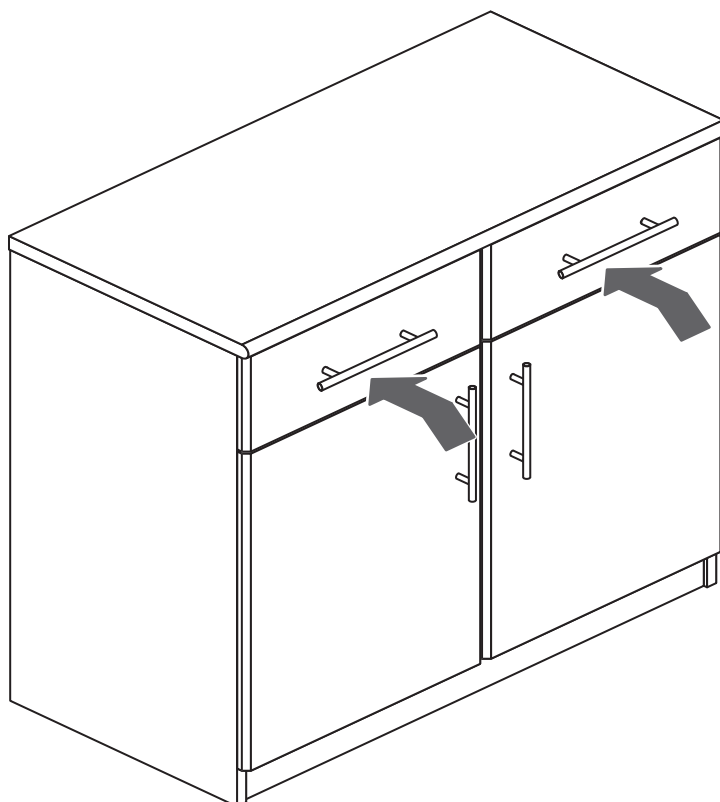

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800** and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW


Anderson - 2+2 Sideboard

Assembly Instructions - Please keep for future reference

289/8533

609/5538

412/7714

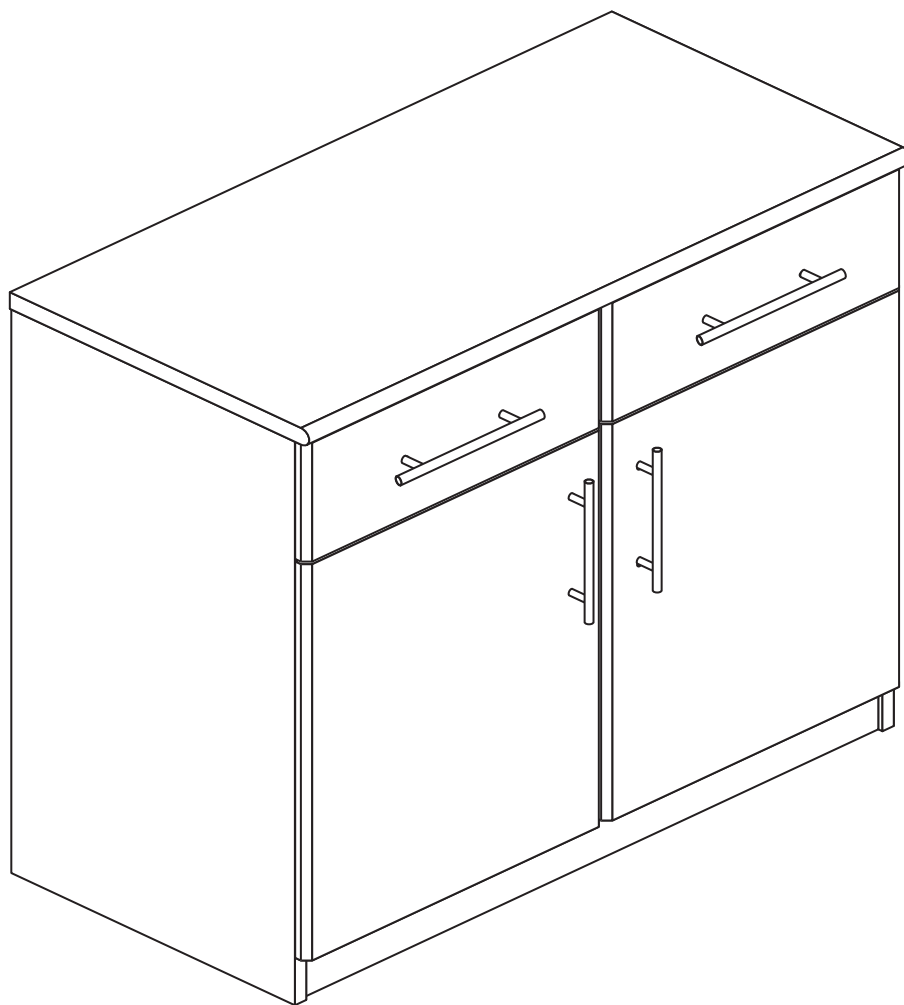

Dimensions

Width - 80cm

Depth - 40cm

Height - 77.5cm




**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Safety and Care Advice


Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 28kgs. Please lift with care.
 - Check you have all the components and tools listed on pages 2 and 3.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Parts of the assembly will be easier with 2 people.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
 - **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
 - Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

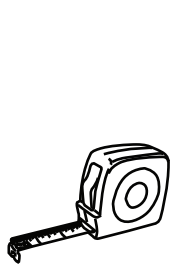

Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection
(when using a hammer or drill)




Electric drill
(do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below


Please check you have all the panels listed below

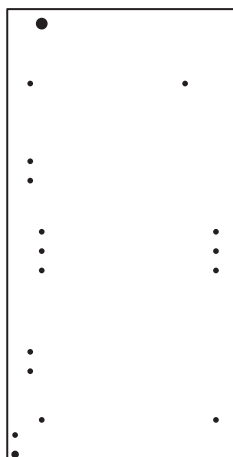


1 Left Side (D2182A)
(747 x 375mm)

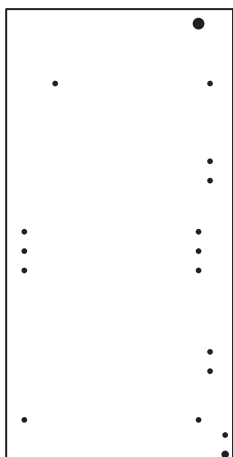


2 Right Side (D2183A)
(747 x 375mm)

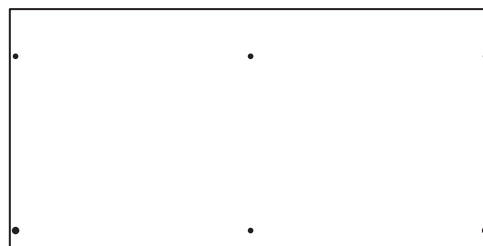

3 Top (D2184A)
(796 x 396mm)

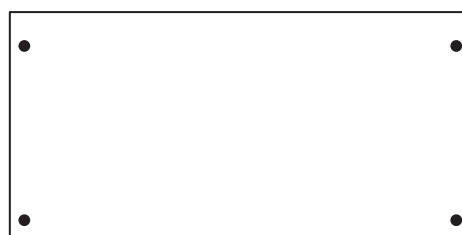

4 Base (D2185A)
(762 x 374mm)




5 Divider (D2260A)
(150 x 374mm)



6 Plinth (D2265A)
(762 x 60mm)



7 Shelf (D2261A)
(762 x 368mm)



8 Drawer Front (D2263A)
(390 x 157mm) x 2




9 Left Drawer Side (W509LH)
(330 x 115mm) x 2




10 Right Drawer Side (W509RH)
(330 x 115mm) x 2




11 Drawer Back (W537)
(321 x 115mm) x 2



12 Drawer Base (T603)
(333 x 327mm) x 2

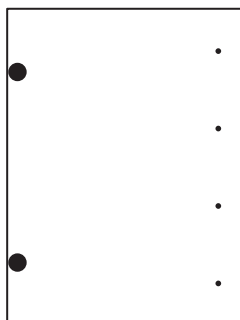

13 Door (D2262A)
(524 x 390mm) x 2

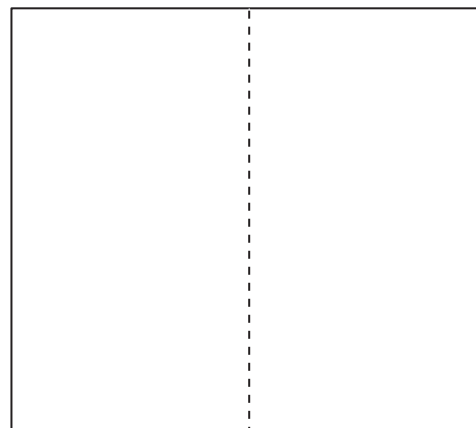

14 Back (X786-705)
(786 x 705mm)












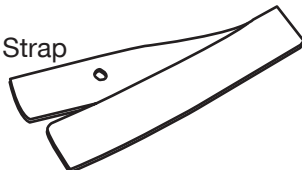










Components - Fittings


If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below

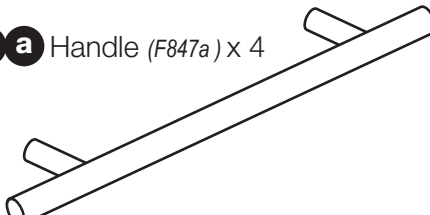Please check you have all the fittings listed below

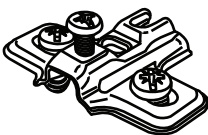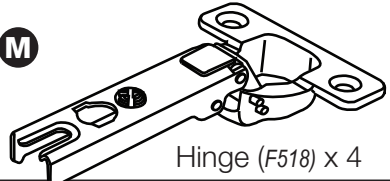Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel (F22) x 4	B  Metal dowel (F901) x 14	C  Knock-in Peg (F171) x 8
D  Nail (F51) x 21	E  Large locking nut (F900) x 10	F  Small locking nut (F3) x 4
G  Shelf stud (F110) x 4	H  13mm Screw (F63) x 16	I  13mm Screw (F52) x 8
J a  Handle (F847a) x 4	J b  Handle Screw (F847b) x 8	K  Strap  Screw  Washer x 2 Overbalance protector kit (F269) x 1
L  Hinge plate (F523) x 4	M  Hinge (F518) x 4	
N a  L Runner (F159) x 2 N b  R Runner (F160) x 2 N c  L Runner (F161) x 2 N d  R Runner (F162) x 2		

Ruler - Use this ruler to help correctly identify the screws

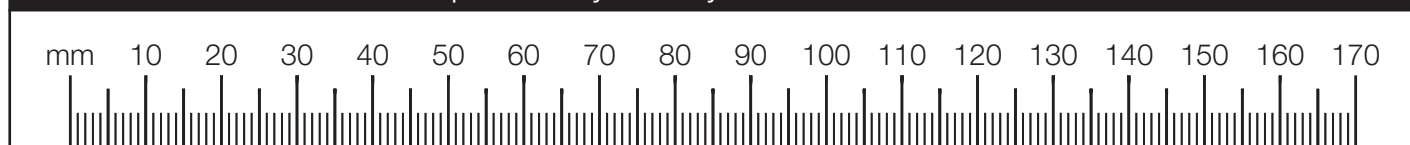

Assembly Instructions


If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below

Step 1

Prepare the drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **8**.

Note: Tighten metal dowels up fully against the panels.

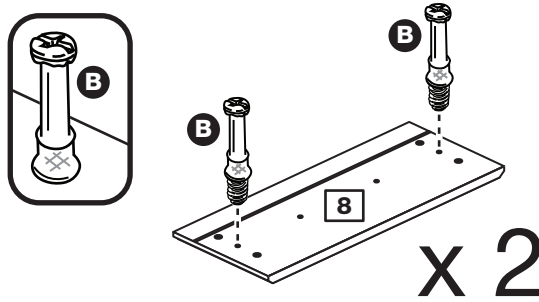


Step 2

Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and right drawer side **10**.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

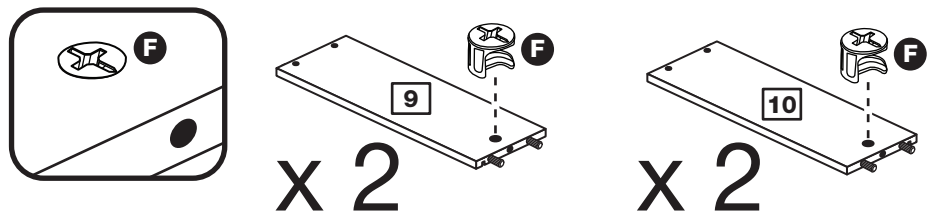


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side **9** and right drawer side **10** onto the back of the drawer front **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

Note: Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

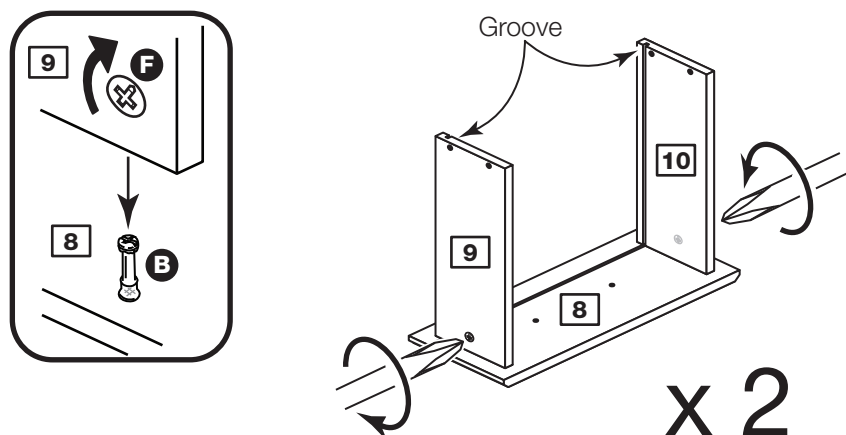


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

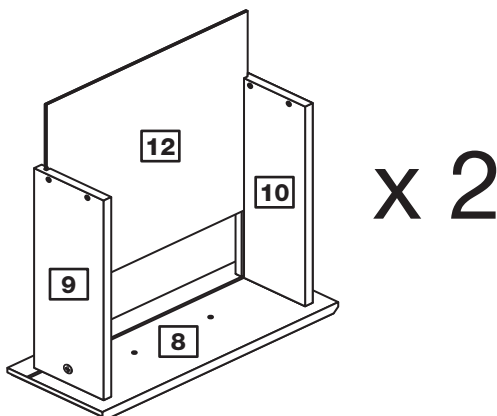


Step 5

Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**.

Make sure that the drawer base **12** fits into the groove in the drawer back **11**.


Hold the drawer back **11** in position and tap the knock-in pegs **C** through the holes in the drawer sides **9** and **10**.

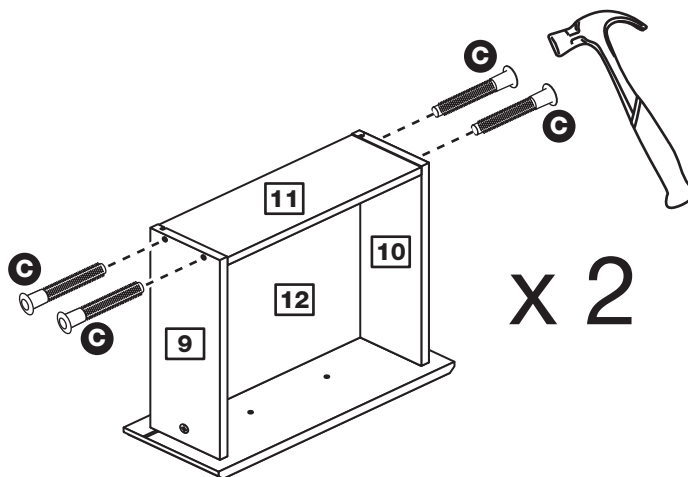

Step 6

Attach the handle

Attach a handle **J a** to each drawer front **8** using 2 screws **J b**.

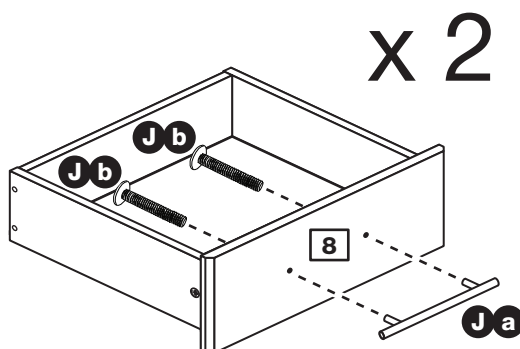


Assembly Instructions

Step 7

Fit runners to the drawers

Fit the runner **Nc** to the bottom edge of the left drawer side **9**, as shown, making sure that it is pushed up against the back of the drawer front **8**. Use a bradawl to mark the fixing positions, then secure with 2 screws **H**.

Fit the runner **Nd** to the bottom edge of the right drawer side **10** using the same method.

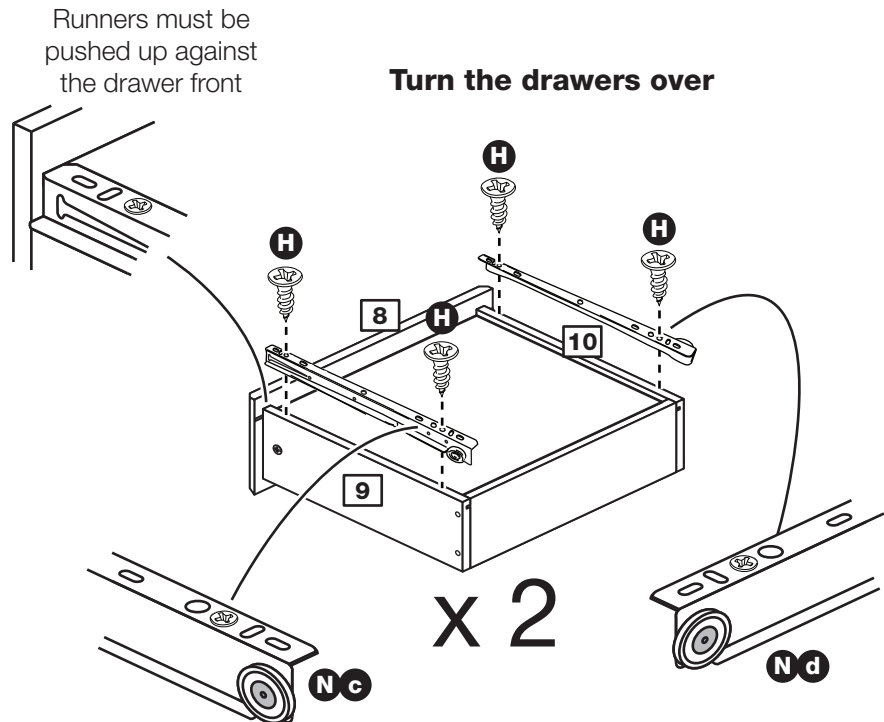

Step 8

Prepare the left side

Tap a wooden dowel **A** into the left side **1**.

Screw 3 metal dowels **B** into the left side **1**.


Insert a large locking nut **E** into the left side **1**.

Fit the runner **Na** to the left side **1**.


The 1st screw **I** uses the 2nd hole from the front of the runner **Na**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.

Fit 2 hinge plates **L** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

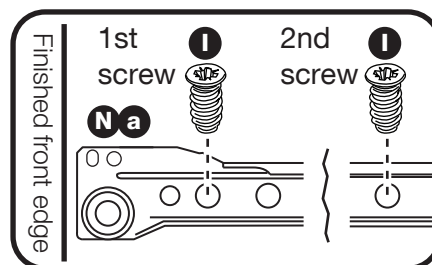

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

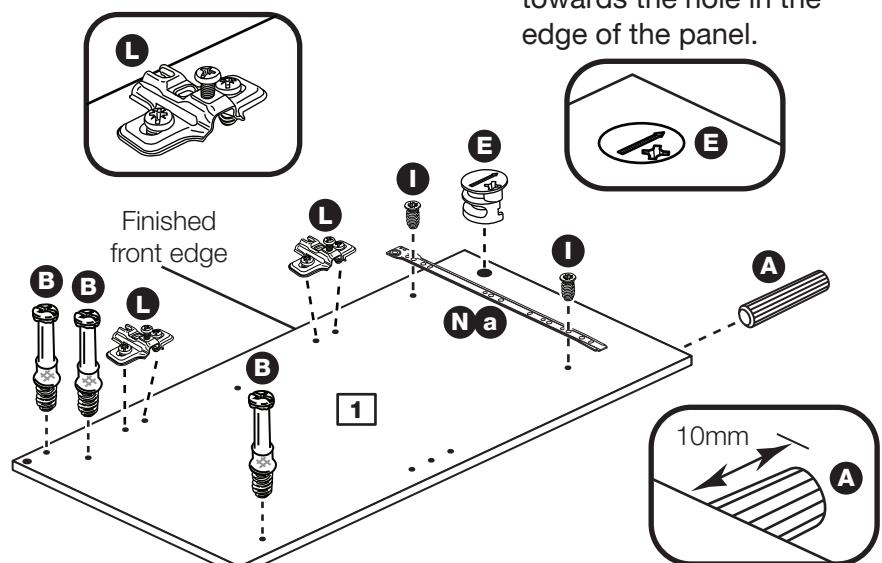

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Assembly Instructions

Step 9

Prepare the right side

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.




Insert a large locking nut **E** into the right side **2**.

Fit the runner **Nb** to the right side **2**.

The 1st screw **I** uses the 2nd hole in from the front of the runner **Nb**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.


Fit 2 hinge plates **L** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

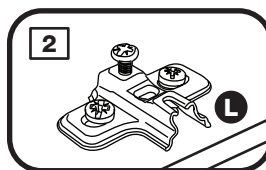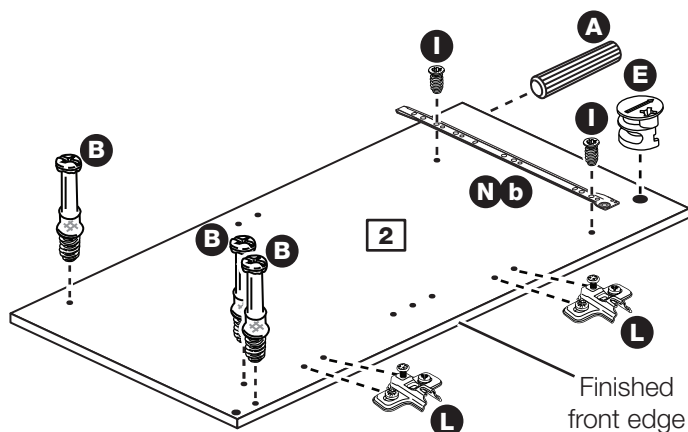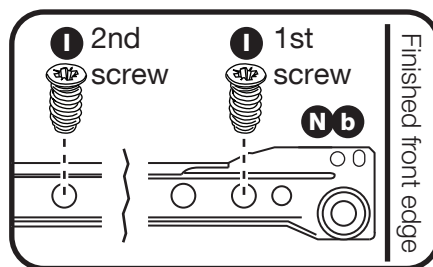

Step 10

Prepare the base

Insert 4 large locking nuts **E** into the base **4**.

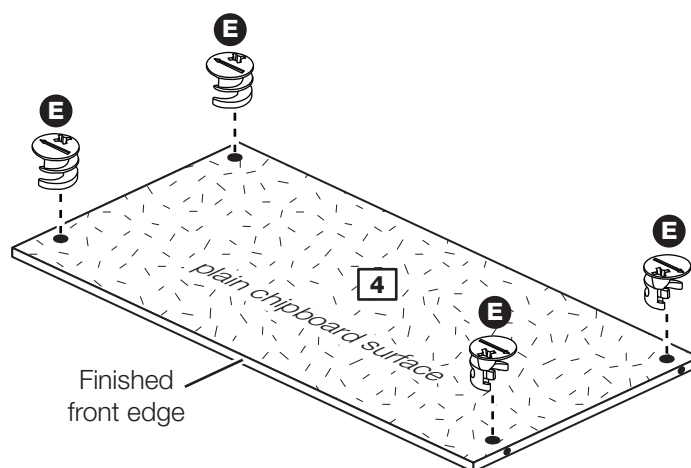

Assembly Instructions


Step 11

Join the right side and base

Push the base **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the base **4**.

Note: Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

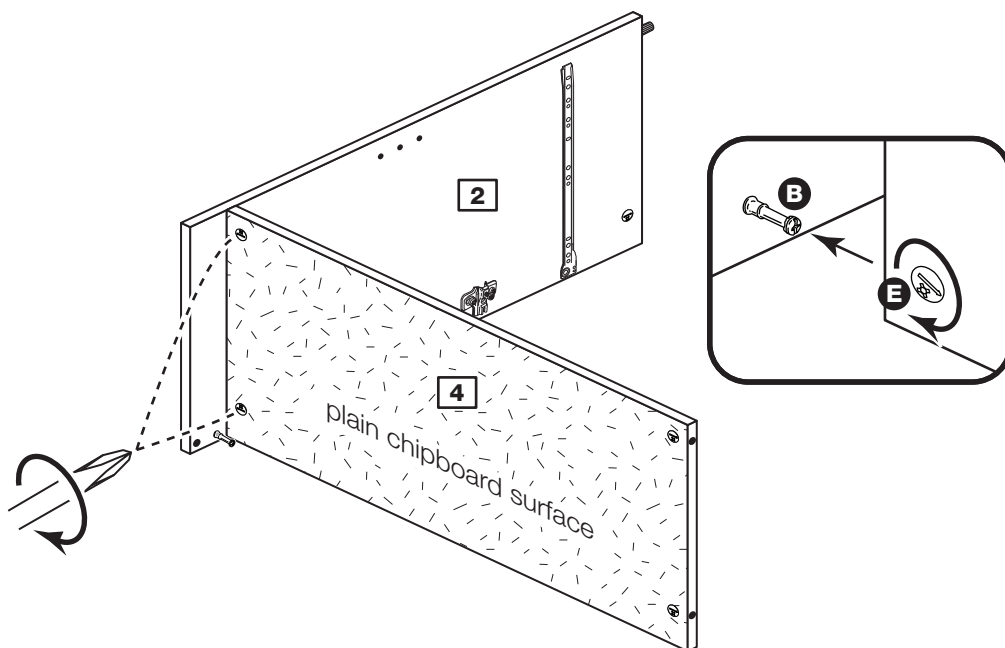


Step 12

Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **6**.

Insert 2 large locking nuts **E** into the plinth **6**.

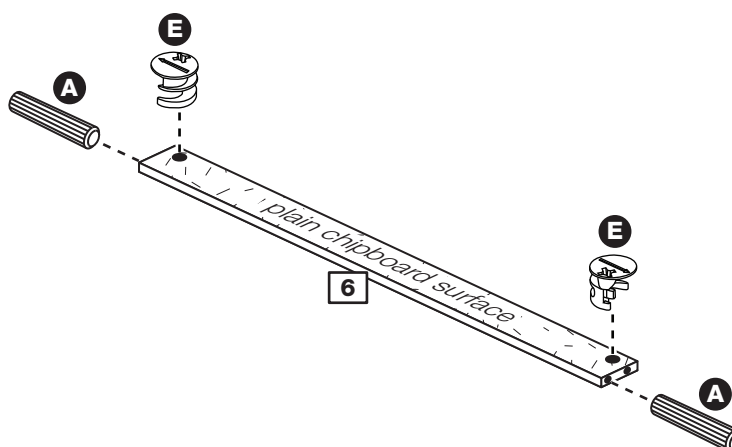


Step 13

Fit the plinth

Push the plinth **6** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **E** fitted to the plinth **6**.

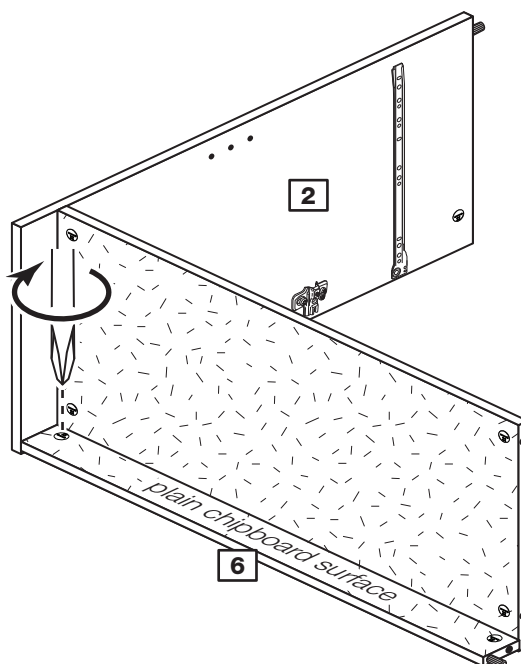


Assembly Instructions

Step 14

Fit the left side

Push the left side **1** onto the assembly.


Use a screwdriver to tighten the 3 large locking nuts **E** fitted to the base **4** and plinth **6**.

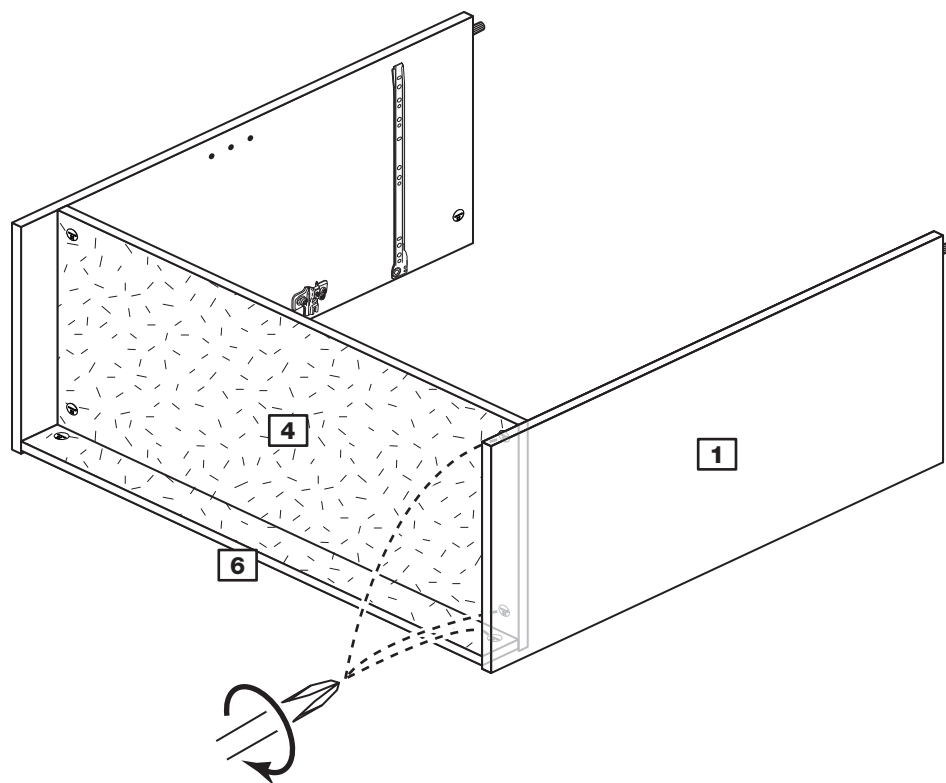

Step 15

Prepare the top

Screw 4 metal dowels **B** into the top **3**.

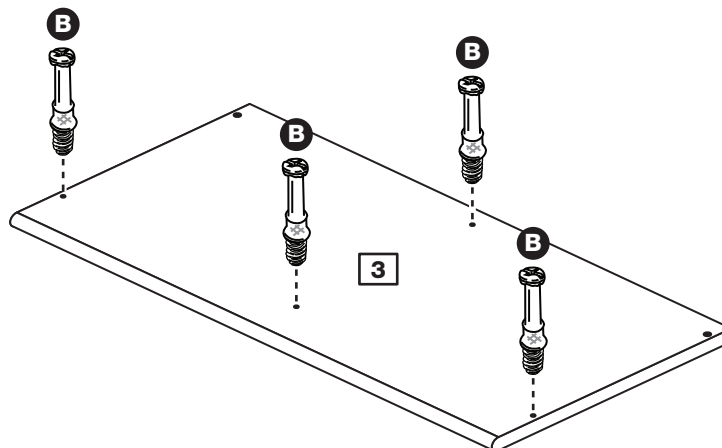

Assembly Instructions

Step 16

Prepare the divider

a: Insert 2 large locking nuts **E** into the divider **5**.

Note: The 2 holes for the large locking nuts may be drilled in either surface of the divider **5**.

b: Fit a runner **Nb** to this surface of the divider **5**.


Note: Use the finished front edge to identify which runner to fit.

The 1st screw **I** uses the 2nd hole in from the front of the runner.


The 2nd screw **I** uses the hole that lines up with the other panel hole.

c: Turn the divider **5** over and fit the runner **Na** to the other surface.

a:

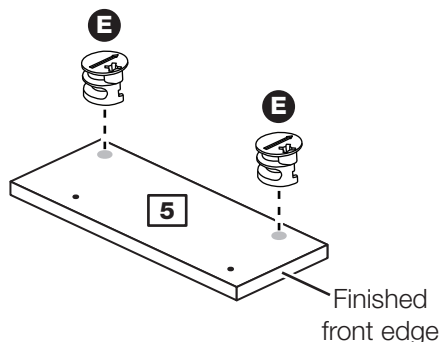


b:

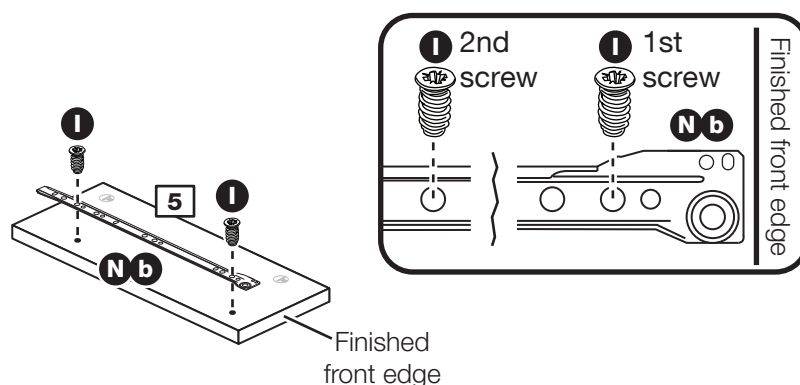

Turn the drawer divider over

c:

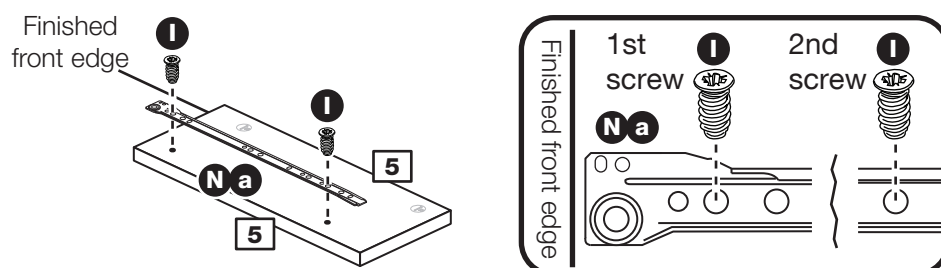

Assembly Instructions


Step 17

Fit the divider

Push the divider **5** onto the top **3**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the divider **5**.

Note: The 2 large locking nuts may be on either surface of the divider.

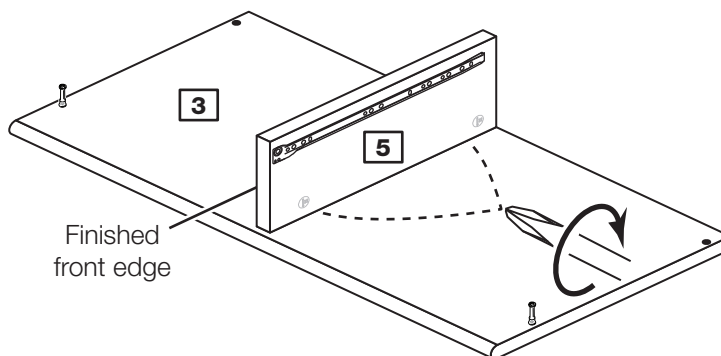


Step 18

Fit the top

Push the top **3** onto the side panels **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the side panels **1** and **2**.

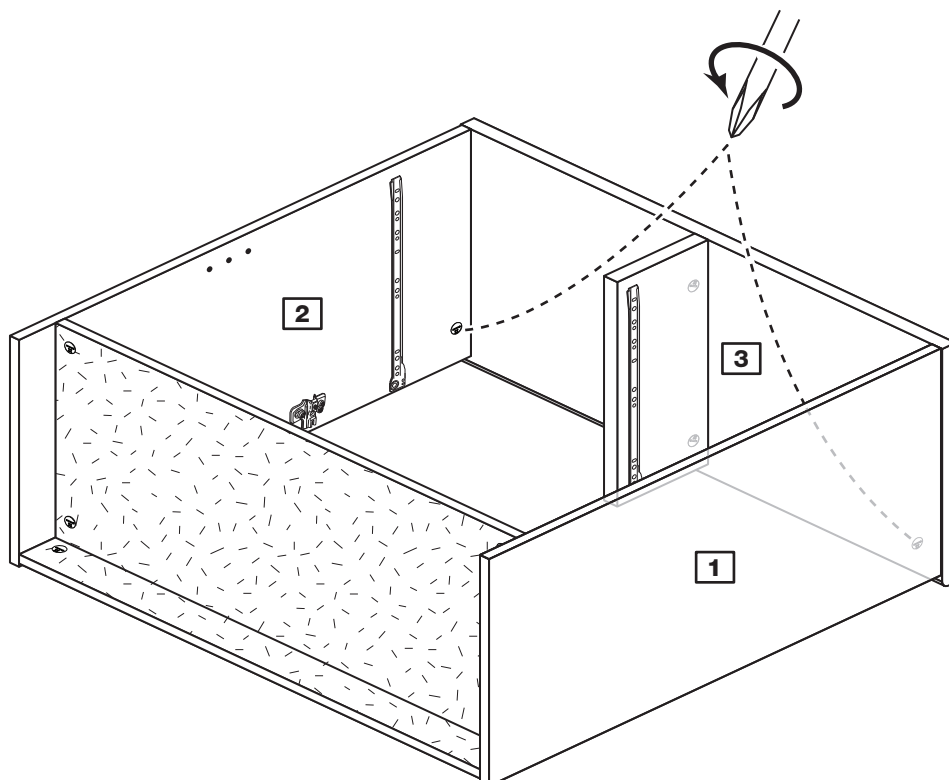

Assembly Instructions

Step 19

Fit back panel

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **14** down onto the unit, as shown.

Nail **D** around the outside edges of the back **14**.


Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

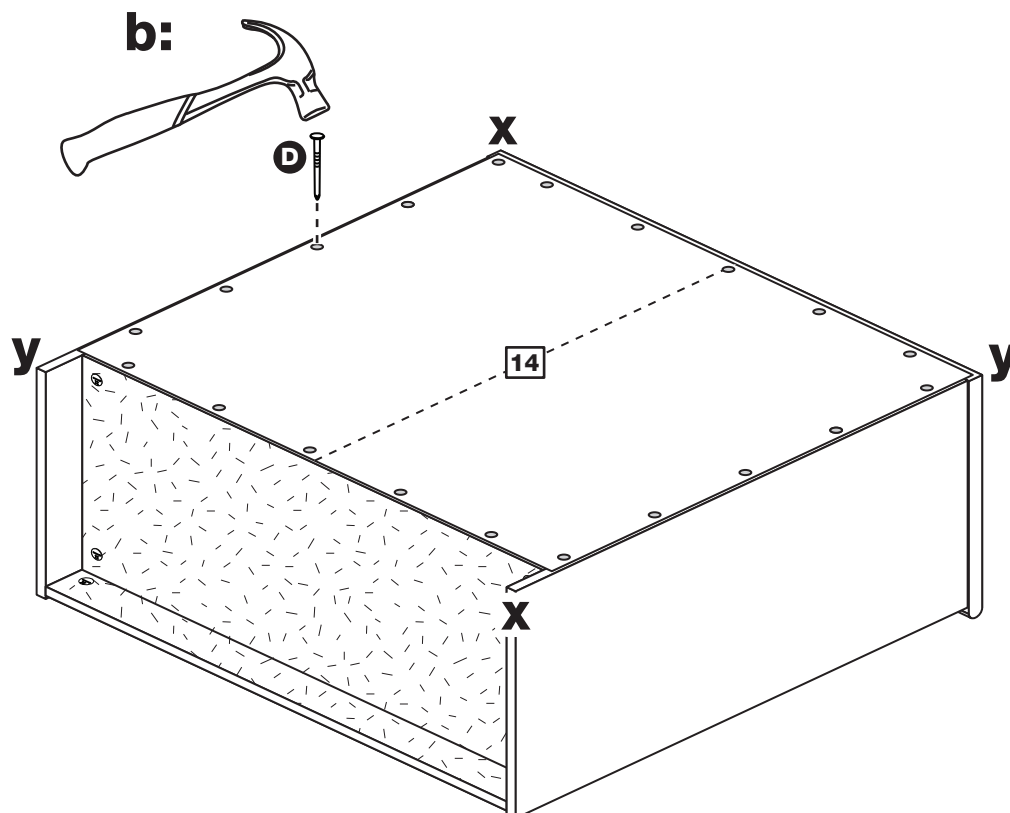


Assembly Instructions

Step 20

Fit the shelf

Insert 4 shelf studs **G** at the required height.

Lower the shelf **7** down onto the shelf studs **G**.

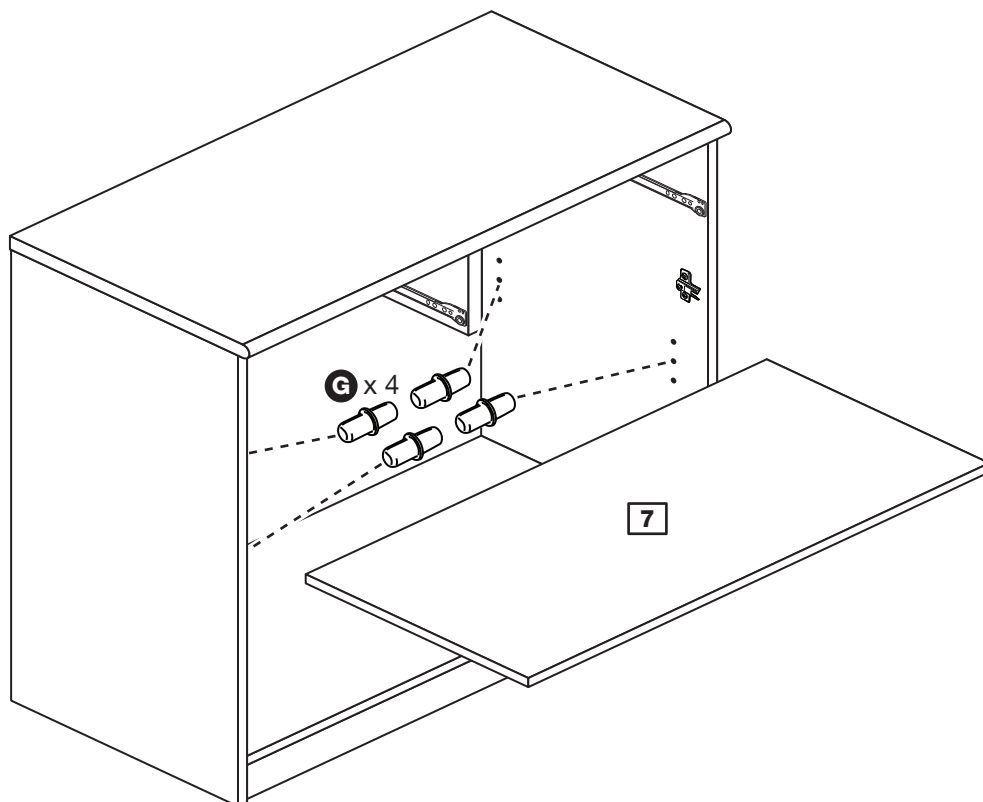


Step 21

Prepare the 2 doors

Push fit 2 hinges **M** into each of the doors **13**.

Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

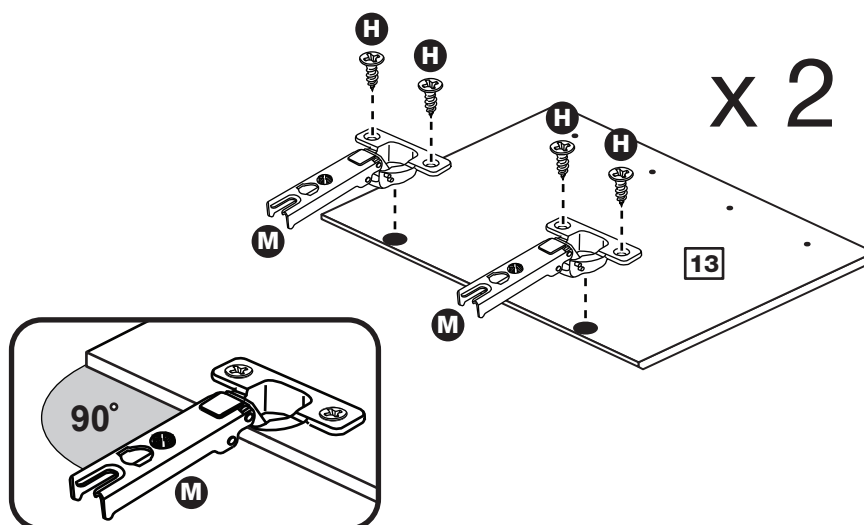

Assembly Instructions

Step 22

Drill the handle holes in the door

Important: Please follow these instructions carefully.

Lay the doors **13** down onto a smooth surface.

Important: Check that the holes and hinges are in the same place as the diagrams.

Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.


Using the pilot hole in the rear face of the door **13**, drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door **13** over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.


IMPORTANT

You will need to drill the doors to suit the handles supplied

You will need to drill 1 door as shown in this diagram

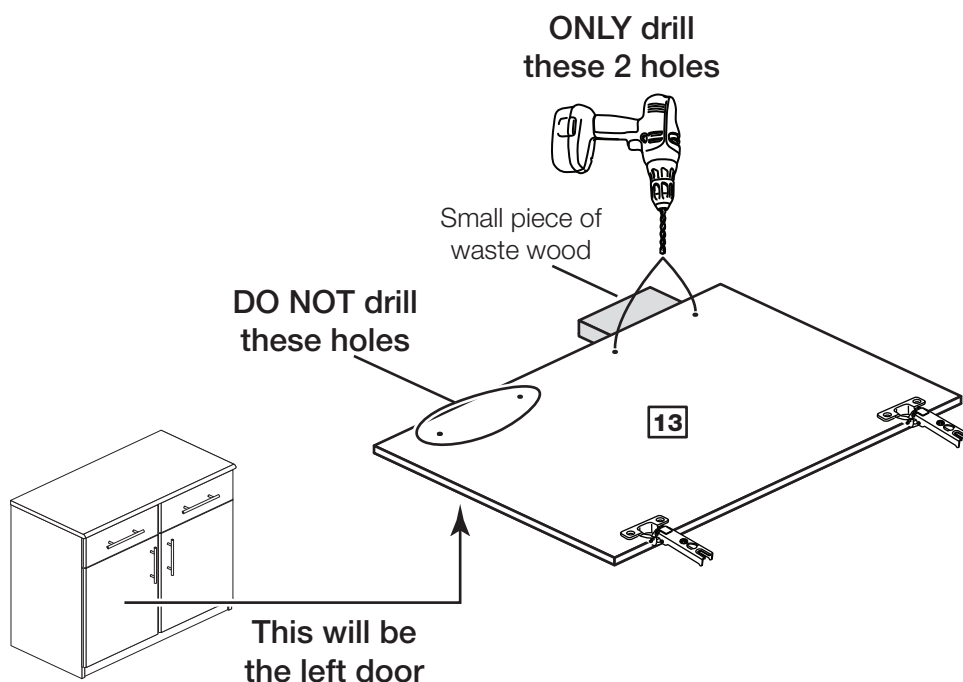

You will need to drill 1 door as shown in this diagram

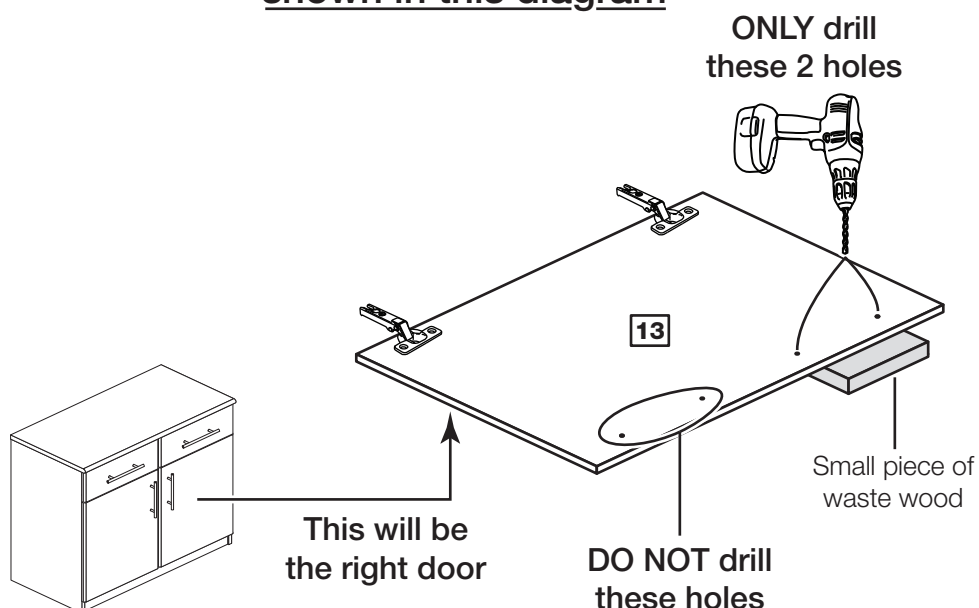

Assembly Instructions

Step 23

Fit doors and handles

Note: The easiest way to attach each door **13** is to fit the top hinge first, then align and fit the other hinge.



a: Push the hinge **M** onto the front part of the hinge plate **L**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **M** FLAT against the hinge plate **L** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **M** must be flat against the hinge plate **L** prior to any adjustment.

d: The hinge **M** must NOT be AT AN ANGLE to the hinge plate **L** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **J a** to each door **13** using 2 screws **J b**.

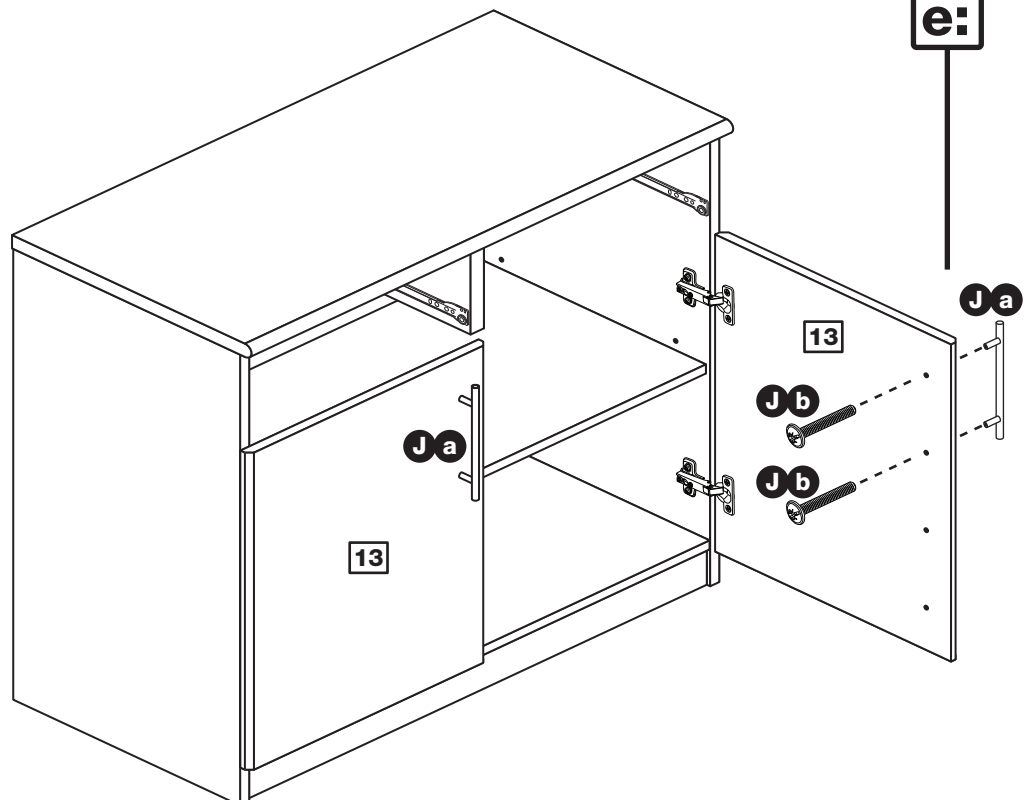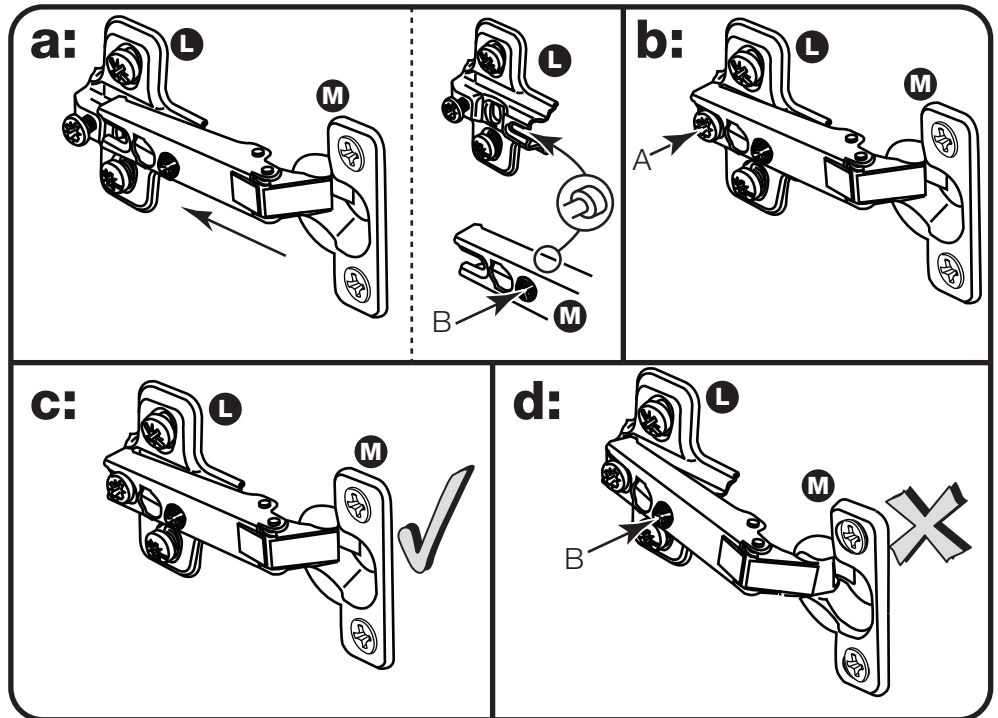

Assembly Instructions

Step 24

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.


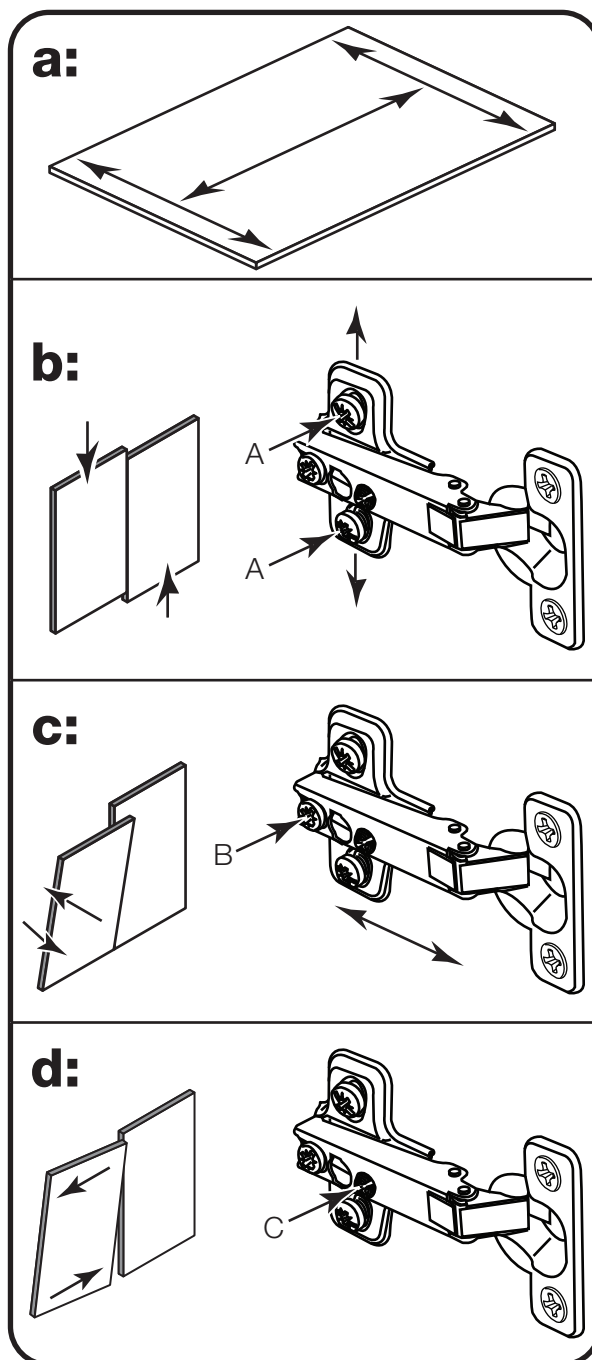


Assembly Instructions

Step 25

Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

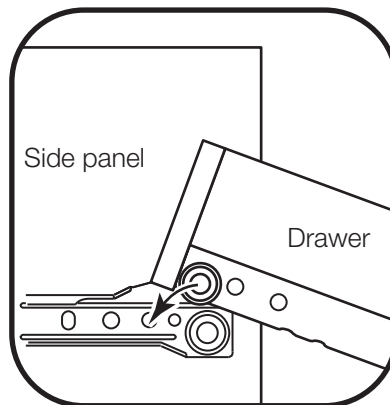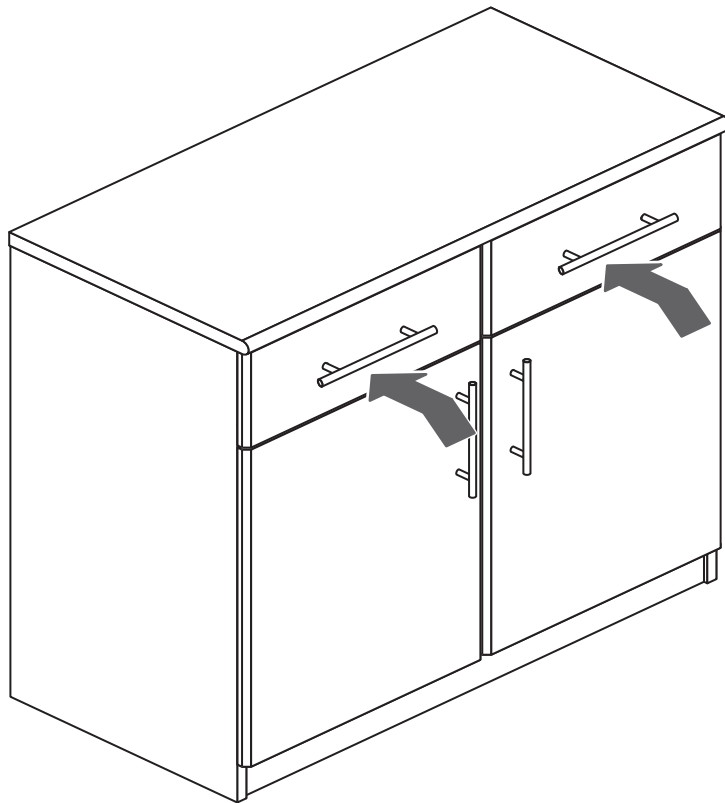

Assembly Instructions

Step 26

Fit the overbalance protector kit



To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit **(K)** to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete

Example

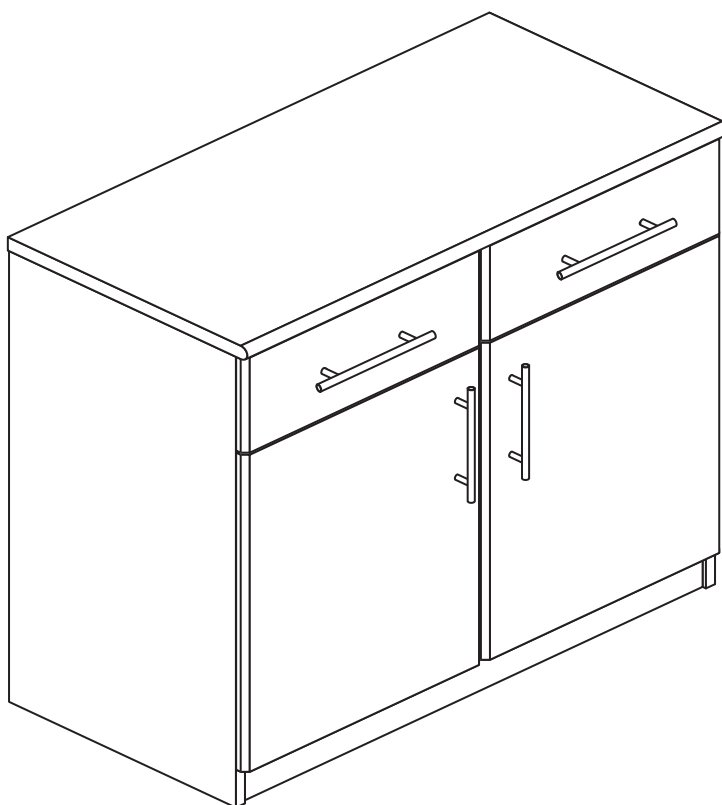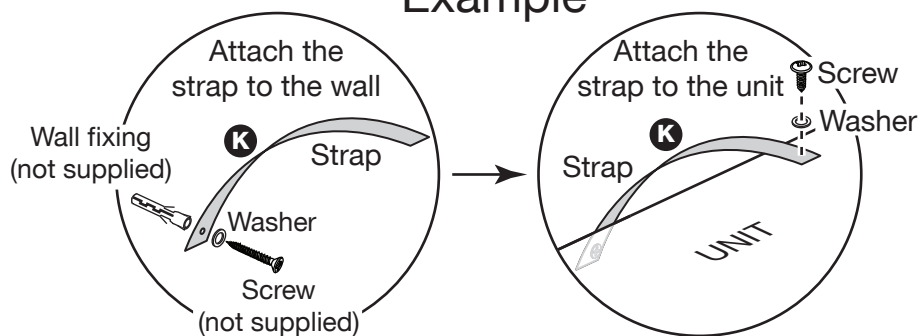

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

