


CUGGL BEDRAIL NATURAL  
CUGGL BEDRAIL BLUE  
CUGGL BEDRAIL PINK

707/7768  
706/2326  
702/7079

**IMPORTANT! KEEP THE INSTRUCTION FOR FURTHER REFERENCE**

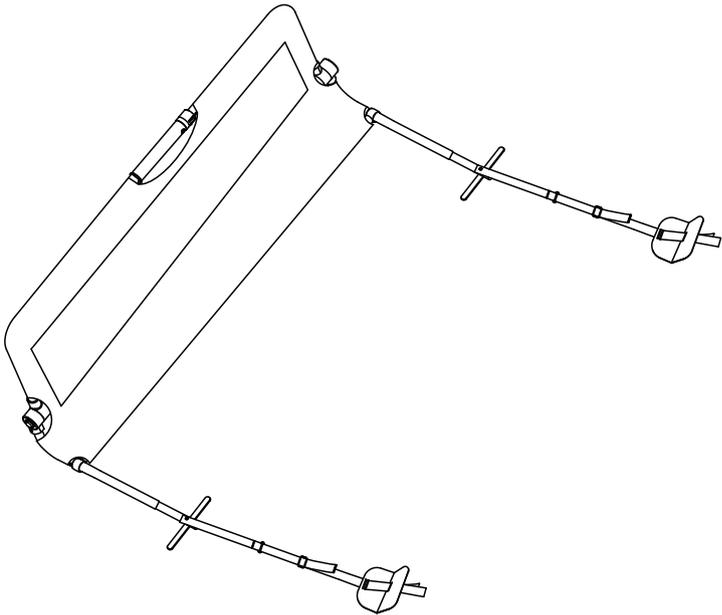

**Important**


Age: 18 months - 5 years

**Important** – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

# Exploded diagram for single bedrail

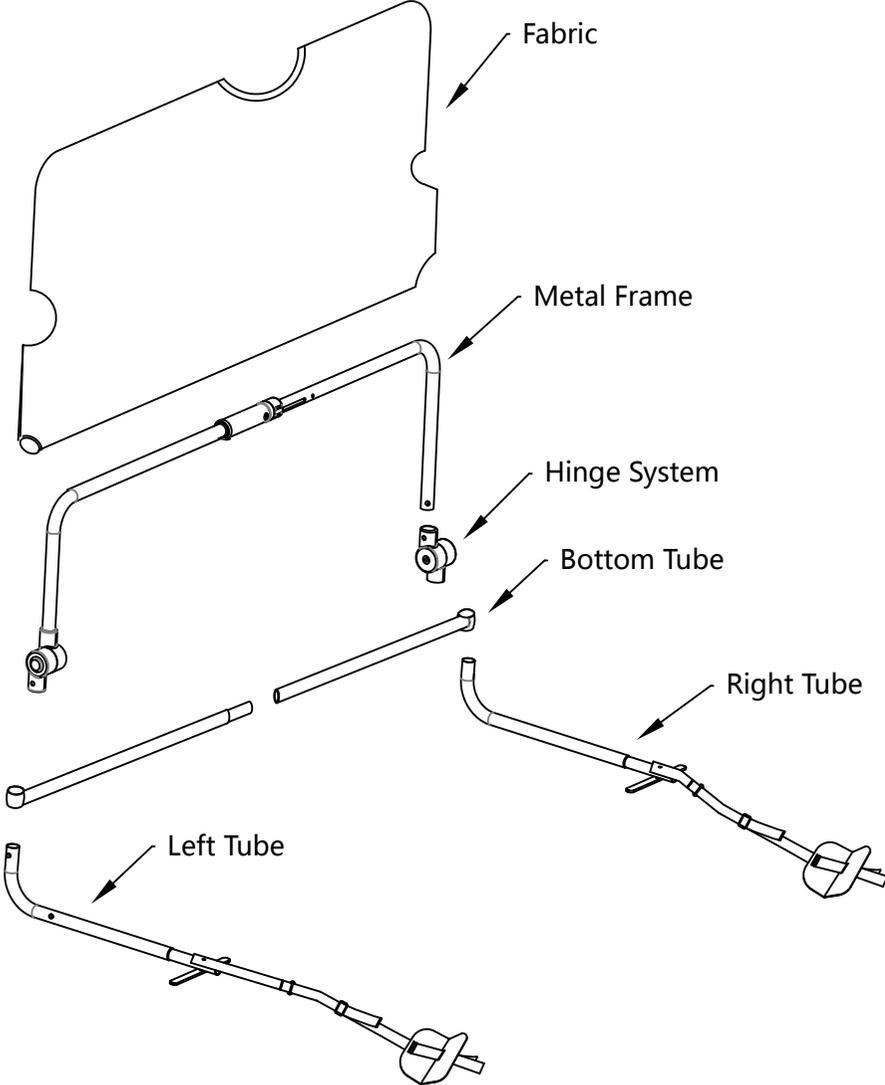

# WARNING!

It is recommended only to use the bedrail for children between 18 months and 5 years.

Only use the bedrail when the child is able to climb in and out of bed unaided.

The bedrail should not be used as a substitute for a cot, as it cannot provide the same level of safety as a cot.

Once the bedrail is in locked position or when placed in the fitted position, it should touch the side of the mattress.

The bedrail is fixed to the bed or to the mattress, the bedrail should not be used unless the fixings are in place and securely attached to both the bed and/or the mattress and the bedrail.

This bedrail is designed to fit most divan or slatted style single beds with a separate mattress.

The length of the mattress must be between 150-200cm, with the width being 75cm-90cm, the thickness of the mattress must be between 8cm-23cm.

Once fitted in place, the bedrail should be checked to ensure that it is properly fitted and secure.


The bedrail should be periodically checked for its general condition with particular reference to the security of any locking mechanism and/or hinges that are used on the product.

Additional and replacement parts should be obtained only from the manufacture.

Complies to BS 7922:2001+A1:2009

Please check all the parts listed below:

- A - Metal Frame + Fabric X 1
- B - Left tube ( B1 ) X 1& right tube ( B2 ) X 1
- C - Bottom tube ( C1 & C2 ) X 1
- D - Right hinge system X 1

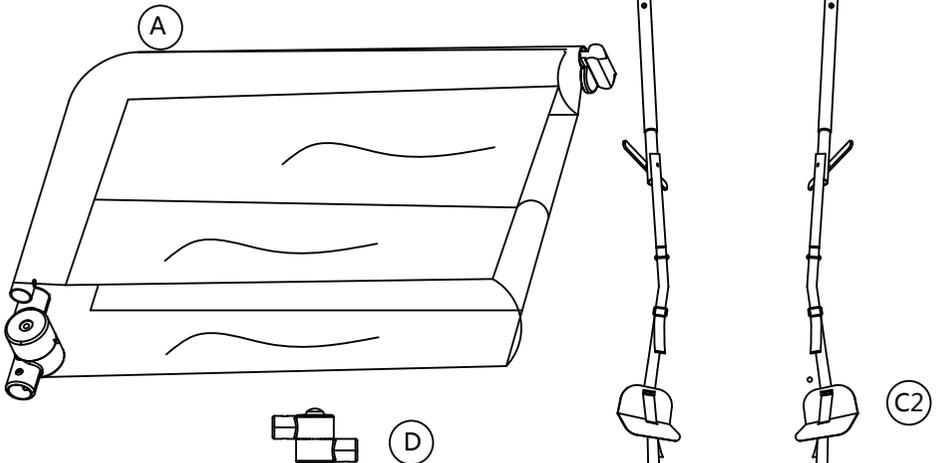

# Assembling Your Bedrail

Step 1: Unfold the bedrail, slide the plastic in place and lock it.  
( See figure 1 )

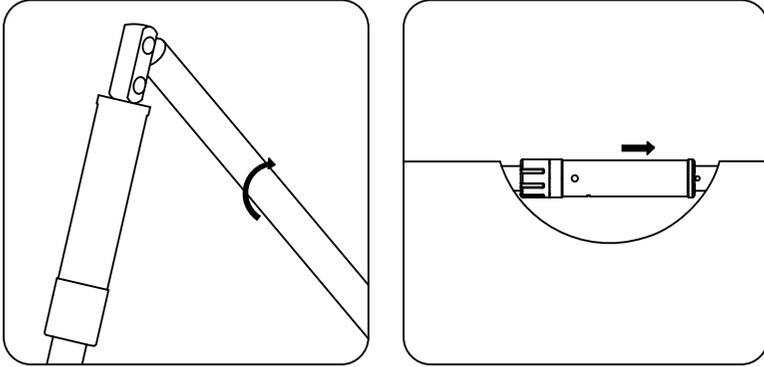


Figure1

Step 2: Fixed the bottom tube ( C1 & C2 ) together, and then get through the fabric. ( See figure 2 )

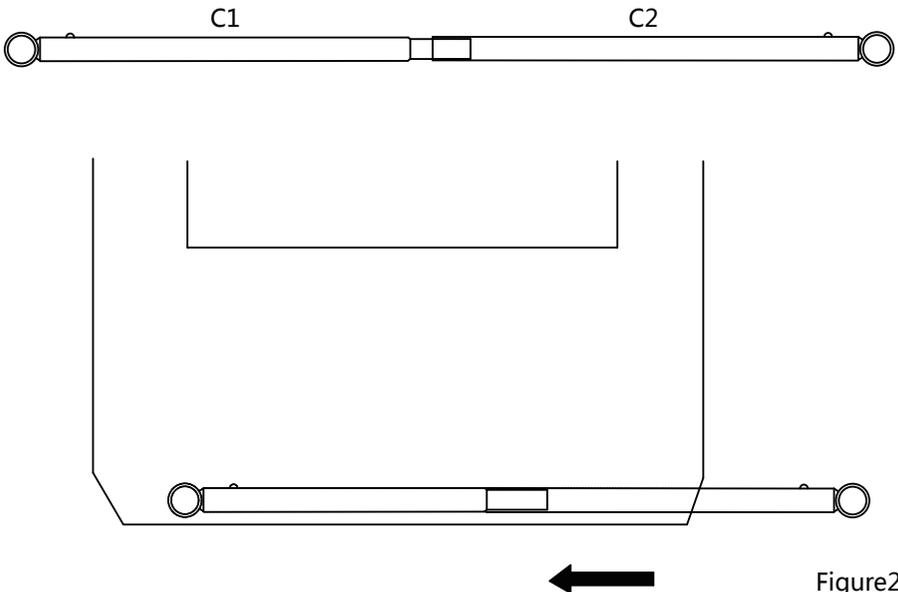


Figure2

Step 3: Put the left tube ( B1 ) into the connected plastic, then get through the fabric and assemble the B1 to left hinge system till the button locked in place. ( See figure 3 )

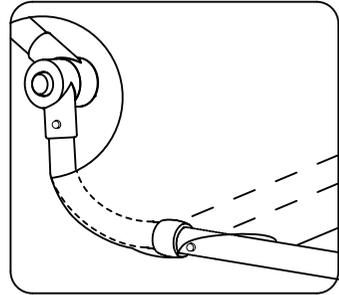
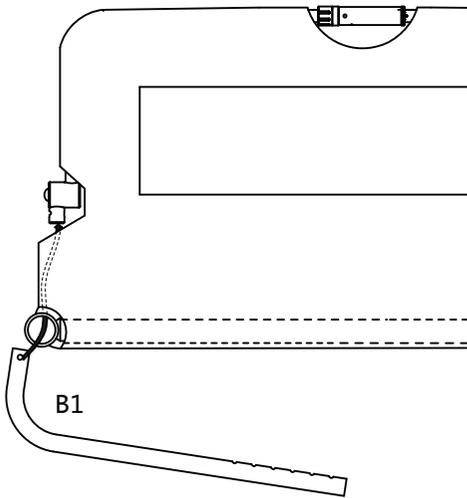


Figure3

Step 4: Fix the right hinge system ( D ) to bedrail till button locked in place. Put the right tube ( B2 ) into the connected plastic, then get through the fabric and assemble the B2 to right hinge system till button locked in place. ( See figure 4 )

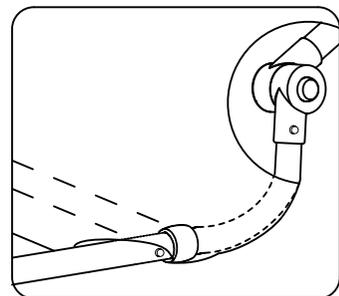
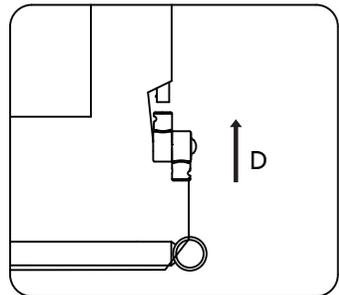
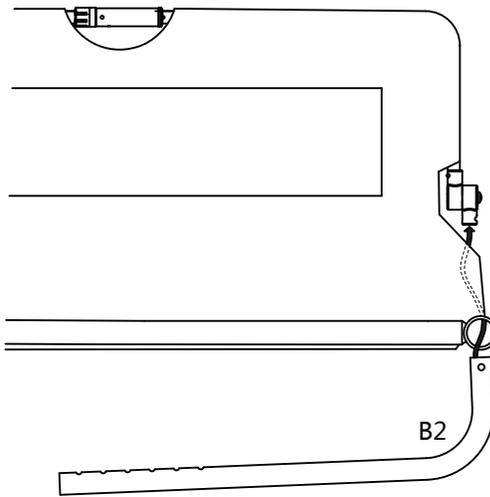


Figure4

Step 5: Slide the plastic behind button. ( See figure 5 )

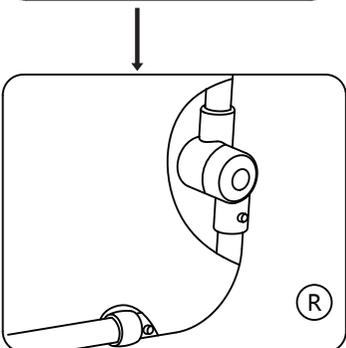
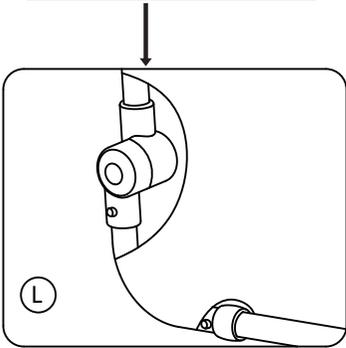
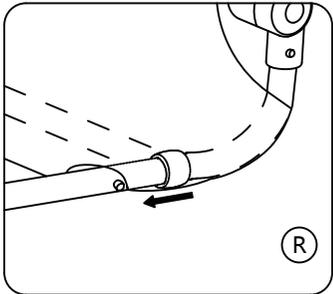
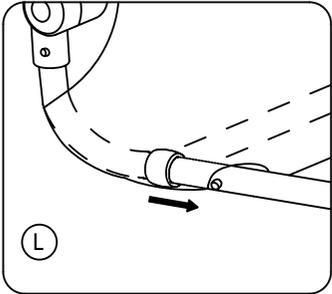
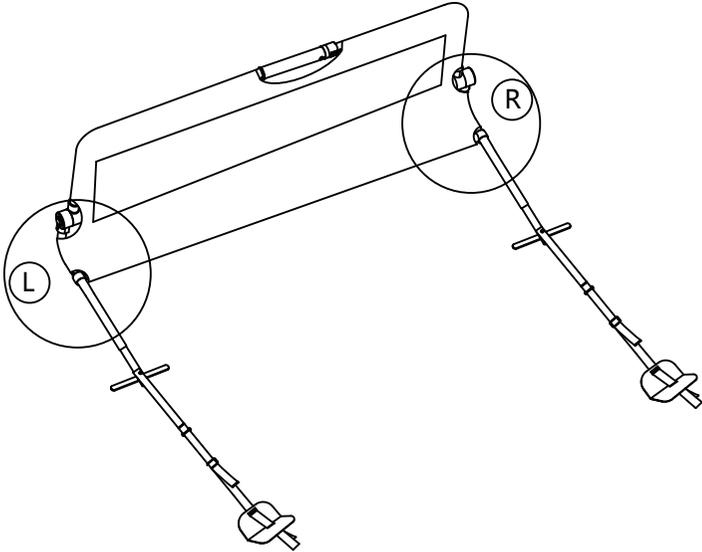


Figure5

# Installing Your Bedrail

Step 1: Adjust the straps length according to the width.

Be careful: to let the straps in flat and straight, not twist.  
( See figure 6 )

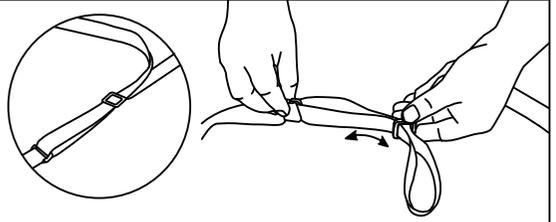


Figure6

Put on the mattress, make the steel plate in place as stopper against the mattress and bed.  
( See figure 7 )

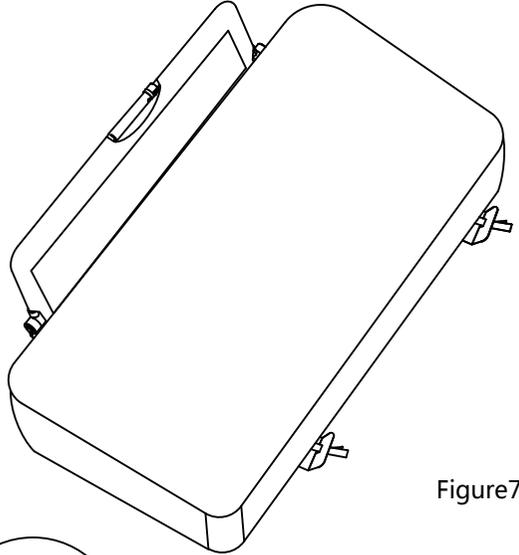


Figure7

Pull back the strap ( lower one ) at the end of the steel plate.  
( See figure 8 )

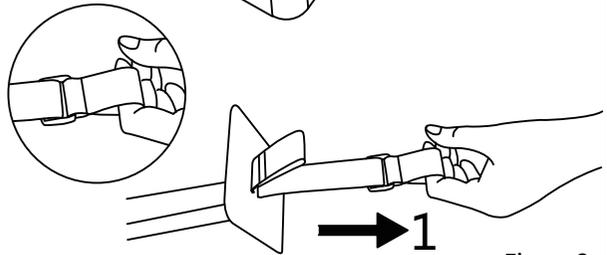


Figure8

Pull up the strap end ( the upper one ) to tighten and lock the steel plate to make sure no movement space against the mattress and bed.  
( See figure 9 )

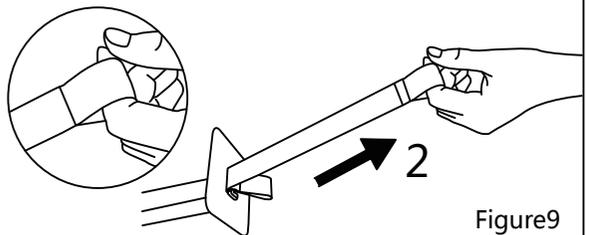


Figure9

Step 2: **WARNING:** To prevent the risk of strangulation it is essential to ensure that when the bedrail is fitted into position, there is a gap of at least 250 mm ( 10in ), between each end of the bed and the corresponding end of the bedrail.

The bedrail should not be used on a sleeping surface that is more than 600 mm ( 23.6in ) from the floor. ( See figure 10 )

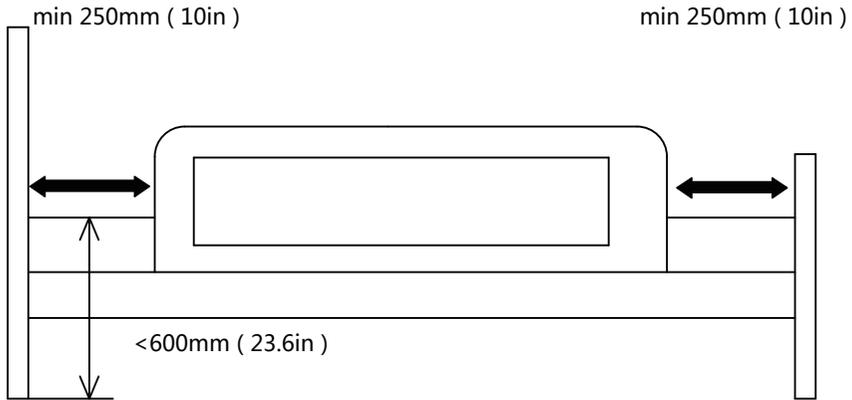


Figure10

Step 3: Press the button at the same time and lay down the upper part of the bedrail when it is not in use. ( See figure 11 )

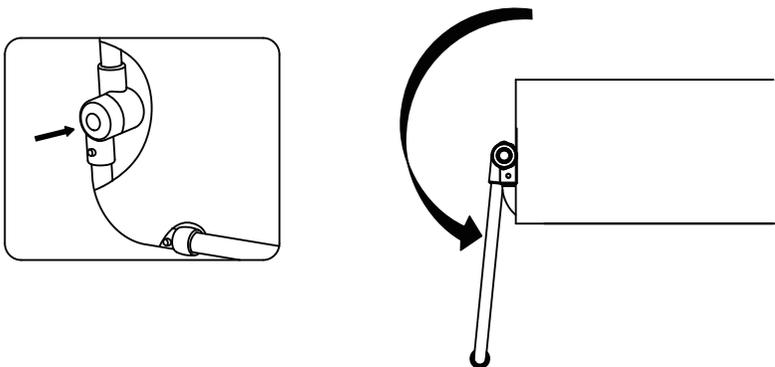


Figure11

# Folding Your Bedrail for Storing

Step 1: Remove the left/right tube

Press the upper button in place and then remove the left/right tube from hinge. Press the under button in place and then remove them from bottom tube.

( See figure 12 )

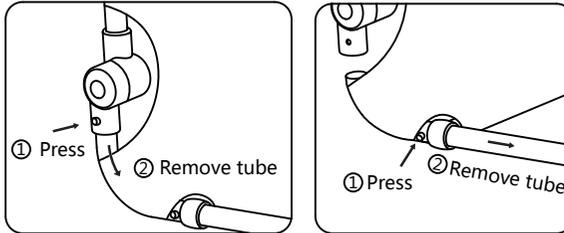


Figure12

Step 2: Take off the bottom tube from fabric. ( See figure13 )

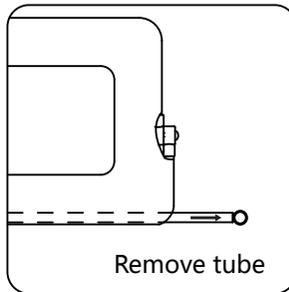


Figure13

Step 3: Slide the plastics as the arrow mark till the two tubes are separated, and then fold the bedrail for storing. ( See figure 14 )

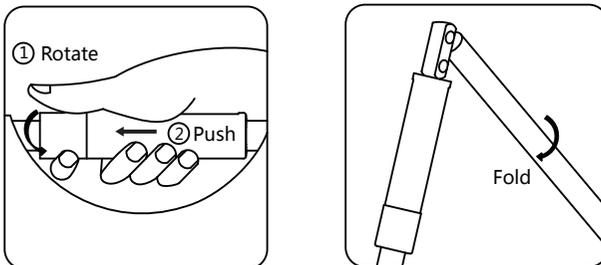


Figure14

# Care & Maintenance

Fabric composition: 100% Polyester.

Periodically check the bedrail for signs of damage, wear and/or for missing components.

Do not use if any part is missing, worn or damaged.


Check the bedrail regularly to make sure all hardware and mountings are tight and secure.

Never clean with abrasives, ammonia based, bleach based cleaners.

Make sure it is dry and clean storing.

Proper cleaning of bedrail can be done by sponging it with warm water and mild detergent.

Once you want to clean your fabric, please refer to the step1 and step 2 on page 8 and then take off the fabric from the metal frame as the arrow. ( See figure15 )

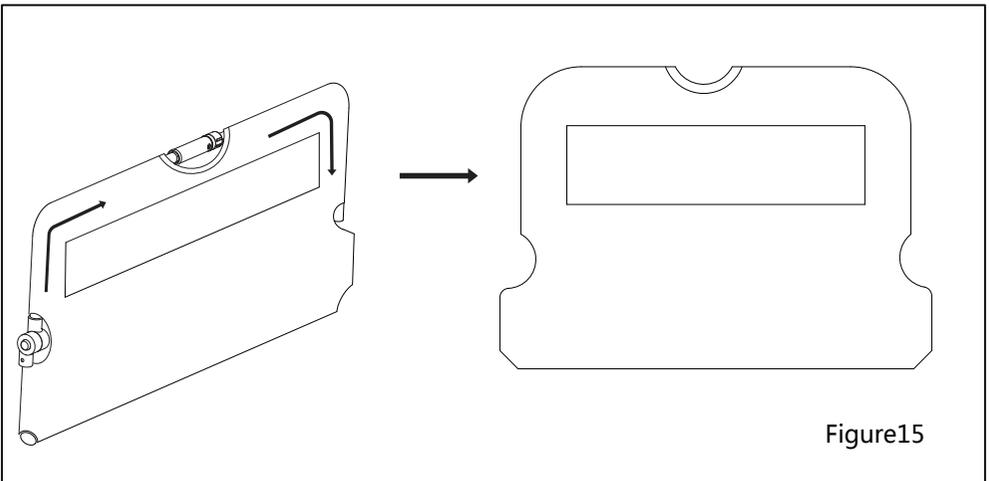

**ARGOS**  
**489-499 Avebury Boulevard.**  
**Central Milton Keynes MK9 2 NW.**

Please keep all the relevant information for future reference.