


ASSEMBLY INSTRUCTIONS



carlton™

POLE ASSEMBLY

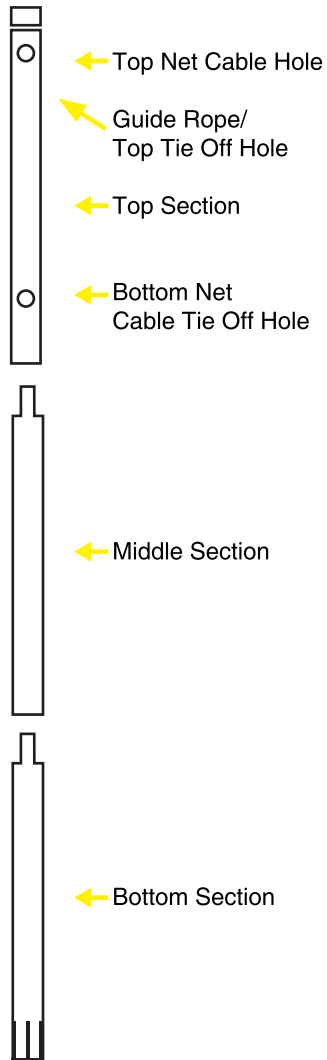


NET ATTACHMENT

TOP NET CABLE

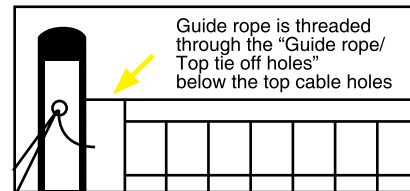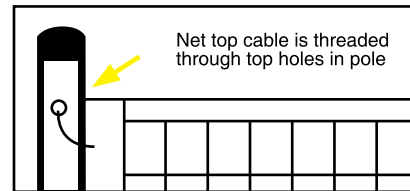


BOTTOM NET CABLE

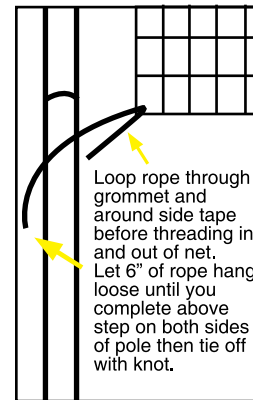

SET UP

Drive bottom pole section into ground, using cushioning between driving tool and post section. Insert middle section into bottom section and top section into middle section. Stretch net between holes on both posts. Start bottom cable on one side and thread through bottom grommet and weave in and out of net until you reach the other side. Once you have reached other pole thread through grommet and tie off to pole - see "Bottom New Cable"

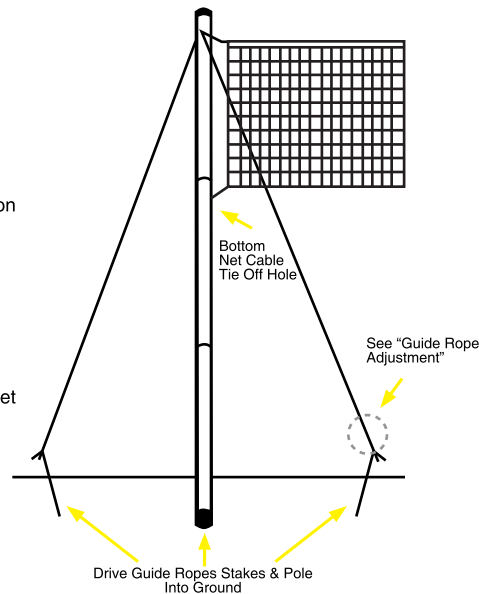

GUIDE ROPE ADJUSTMENT

1. To start, make a loop near the end of the guide rope.
2. Bring loop around in full circle.
3. Loop should now be pulled through opening loop that was just made to create a knot.
4. Slip the end of the rope stake (stake should be in ground) and back through the loop. Pull the rope until tension is adequate.
5. Now tie a loop knot (or any knot will do) to secure guide rope. To set tension, pull loop knot loose and adjust.

