



Airsprung®

# Love your divan

A quick guide to making  
the most of your divan

For the love of sleep

**REMOVE ALL PLASTIC PACKAGING AND DO  
YOUR BEST TO RECYCLE!  
AVOID THE RISK OF SUFFOCATION, KEEP ALL  
PLASTIC BAGS AWAY FROM CHILDREN**

# Hello new divan!

We hope you're really pleased with your new divan which has been lovingly made by one of the UK's most well-known and respected bed makers.



Please read the following guide carefully to ensure your bed is nice and stable and sits evenly.

## DOUBLE DIVAN ASSEMBLY

A double divan comes in two parts which must be properly joined so that they don't move apart.

Stand the two divan halves on their sides and push together.

You will have a set of plastic 'U' clips in the bag with the castors / glides. Line up the undersides and attach them as shown.

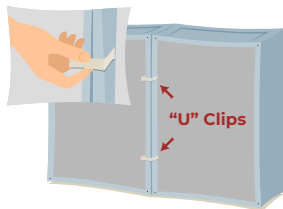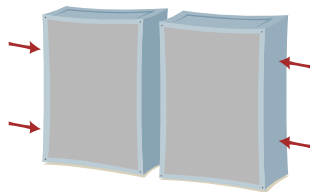

## CASTORS, GLIDES & FEET

All components in the fixing bags need to be fitted to the underside of your divan base. Depending on the model, you will have one of the following:

### Castors (a) or Glides (b)

Insert a castor / glide into each socket and gently tap into place using a mallet\*. It must be fully inserted or it may fall out when the divan base is turned over. When fully inserted it will be hard to pull back out again as the lug on the stem shown in the diagram clicks past the corresponding narrow part of the socket.

### Screw Fix Leg (c)


Simply locate the fixing holes in the underside of the divan base marked with a sticker,

insert the leg into each location and screw clockwise to tighten (be careful not to over tighten).

### Plastic Feet (d)


Where plastic feet are supplied, the insertion locations are marked with a sticker. Remove the sticker and insert the plastic foot in the hole found underneath, (these are inserted directly into the wooden frame as no metal sockets are required) and gently tap into place using a mallet\*.

**\*NOTE: Do not use a metal hammer to insert the castors, glides or plastic feet, as this will damage them.**

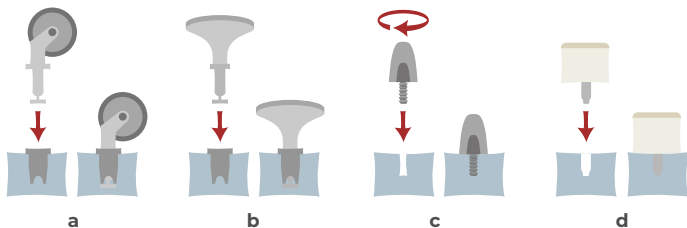


## HEADBOARD ATTACHMENT

Locate the headboard fixing holes (found at either end of the divan base) marked with a sticker and carefully pierce the fabric with scissors.



Insert the headboard bolts into the hole and loosely tighten allowing space to slide the headboard strut over it. Once the headboard is in position, fully tighten the bolt by hand, but do not over tighten.

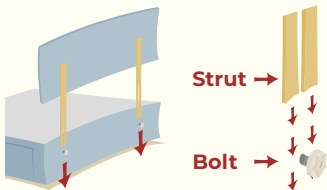

## DIVAN BASE CARE

Don't sit or lie on a base without a mattress in place as this may damage it.

Please do not overload the drawers. They have been designed to hold bed linen, clothing etc and have a limit of 15kg per drawer. Excessive weight can damage the drawer which can restrict its free movement, whilst over-filling may cause it to jam.

### Maintenance

Best to check headboards, castors or legs from time to

time as they may work loose. Make sure castors run freely and we recommend you protect your carpet or floor surfaces where the castors/glides/feet make contact.

### Cleaning

The surface may be lightly sponged with a weak solution of soap and water.

Detergents or chemical cleaners are a definite no-no and should be avoided to prevent potential damage to the covering material.



A copy of this guide can be downloaded from our website by either zapping the QR code which will take you directly there, or visiting [airsprungbeds.co.uk/divancare](https://airsprungbeds.co.uk/divancare)

**Airsprung**<sup>®</sup>

*For the love of sleep*

OK754H