


Triple Modular Metal Frame Wardrobe

Assembly Instructions - Please keep for future reference

9049691

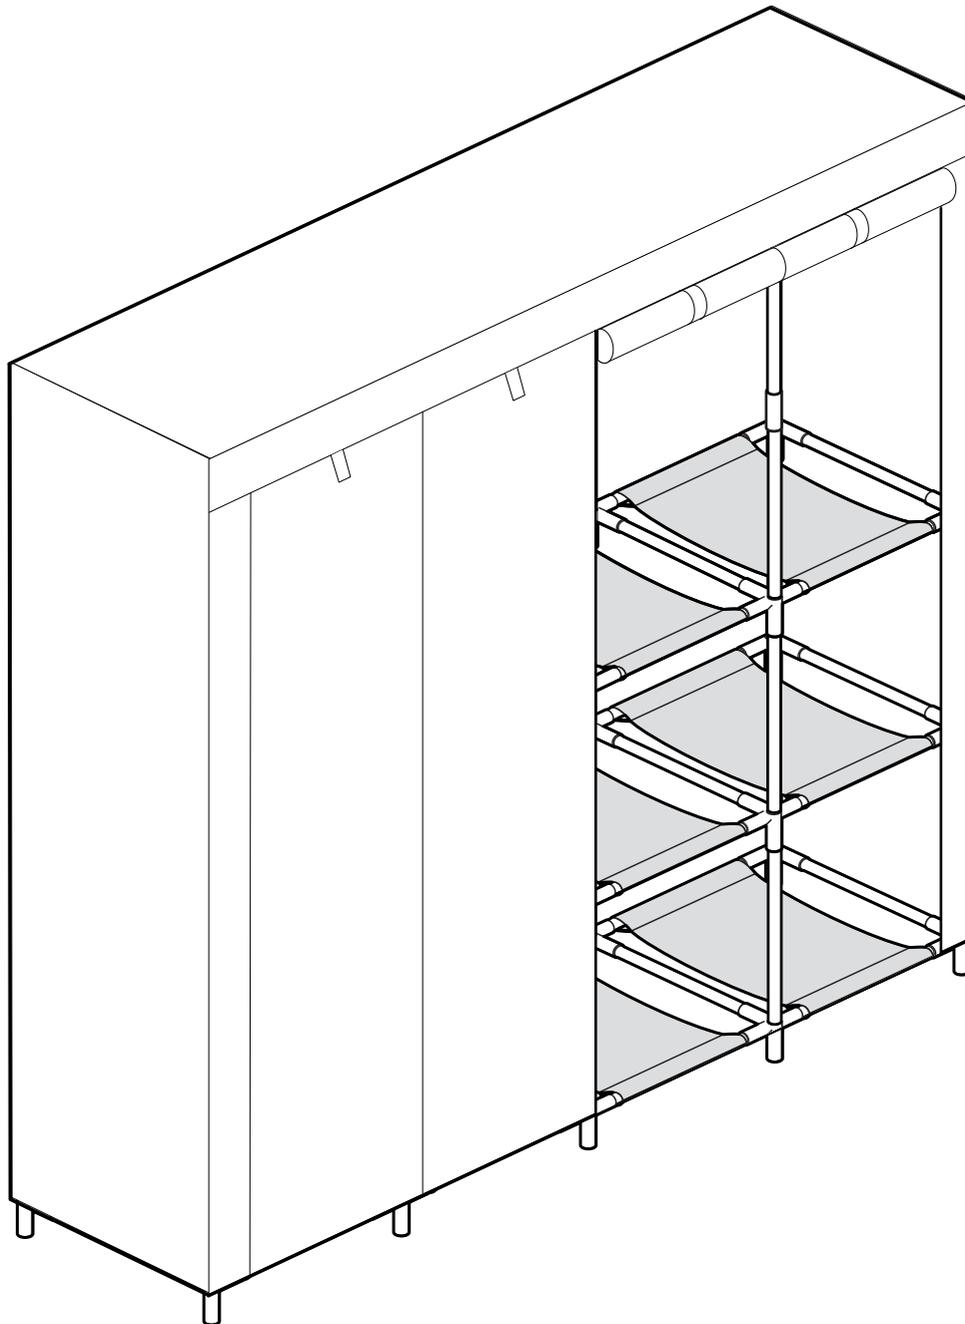

Dimensions

Width - 174cm

Depth - 46cm

Height - 169cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product as this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the panels listed below




1 Corner joint x 20




2 Middle joint x 20




3 Straight joint x 14

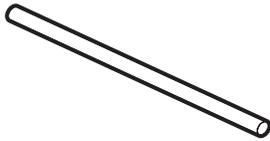


4 Metal tube x 85

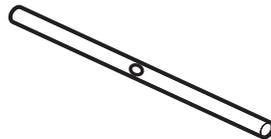

5 Metal tube x 2

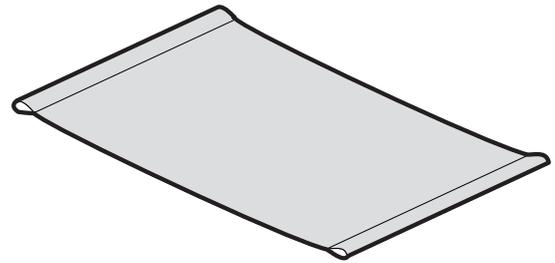


6 Fabric shelf x 10

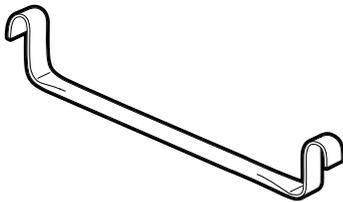

7 Clothes rail x 6

8 Wardrobe cover x 1

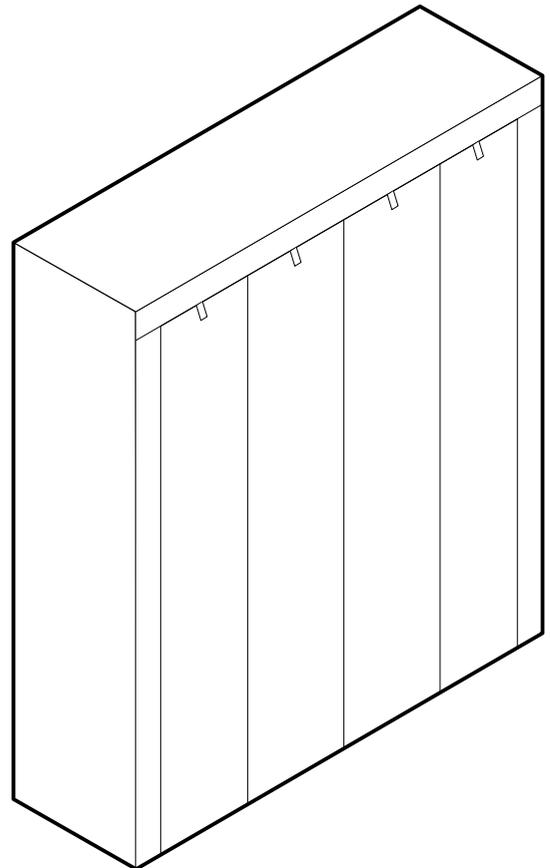

9 Wall plug x 2




10 Wall screw x 2

Assembly Instructions


Step 1

Push in 3x **4** Metal tubes into 2x **1** Corner joints as shown.

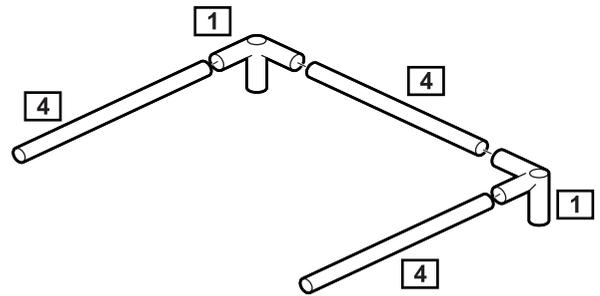


Step 2

Slide on 1x **6** Fabric shelf as shown.

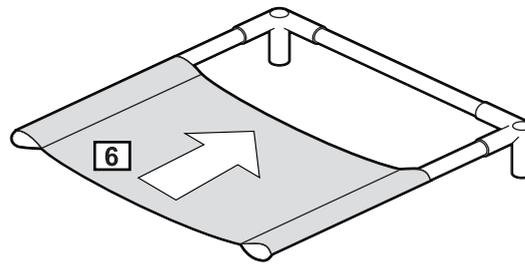



Step 3

Using 2x **1** Corner joints, 6x **2** Middle joints and 6x **10** Metal tubes pushed through 3x **6** Fabric shelves, add on to the shelf section already constructed in **Step 1 & 2**

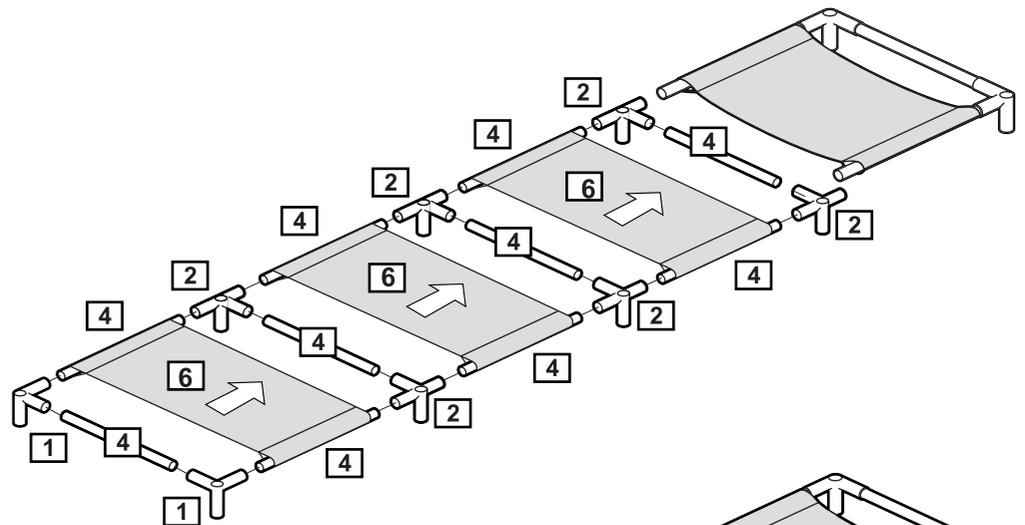

Step 4


Repeat **Steps 1-3** so you have 2 complete identical shelf sections as shown.

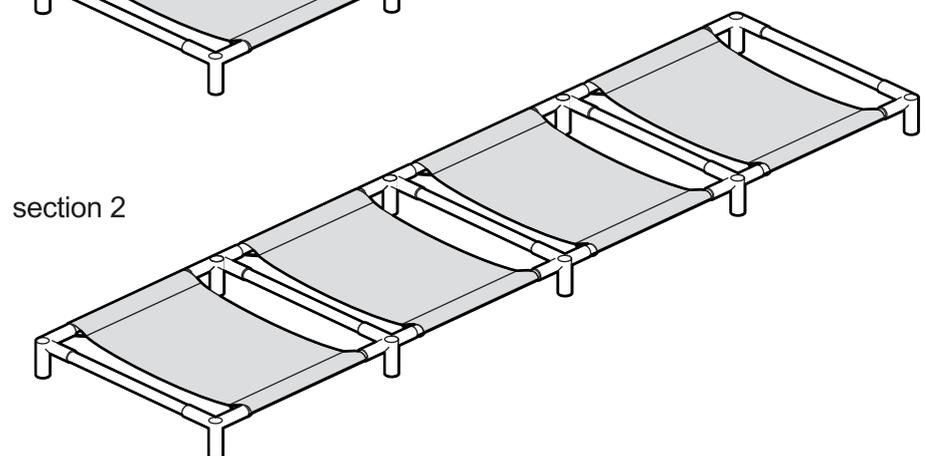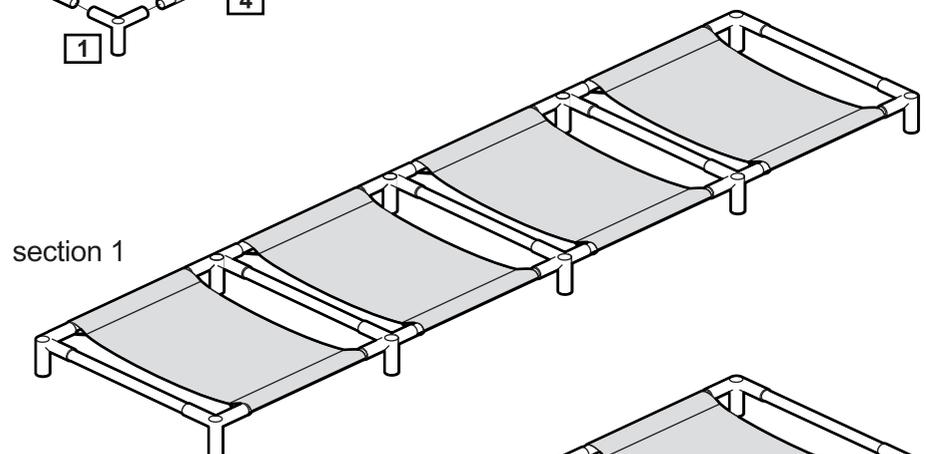

Assembly Instructions


Step 5

Taking the two sections already completed connect using 10x **4** Metal tubes.

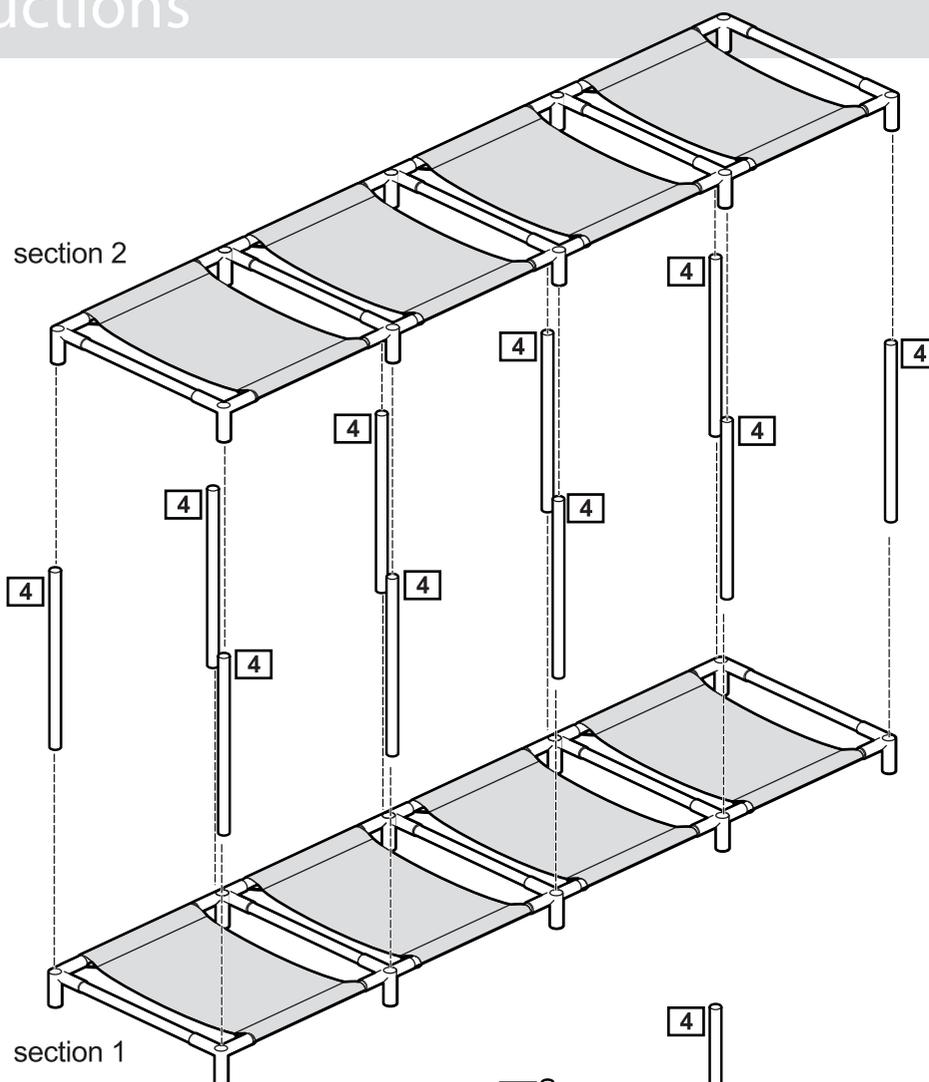

Step 6

Push in 10 x **4** Metal tubes into the assembly as shown.

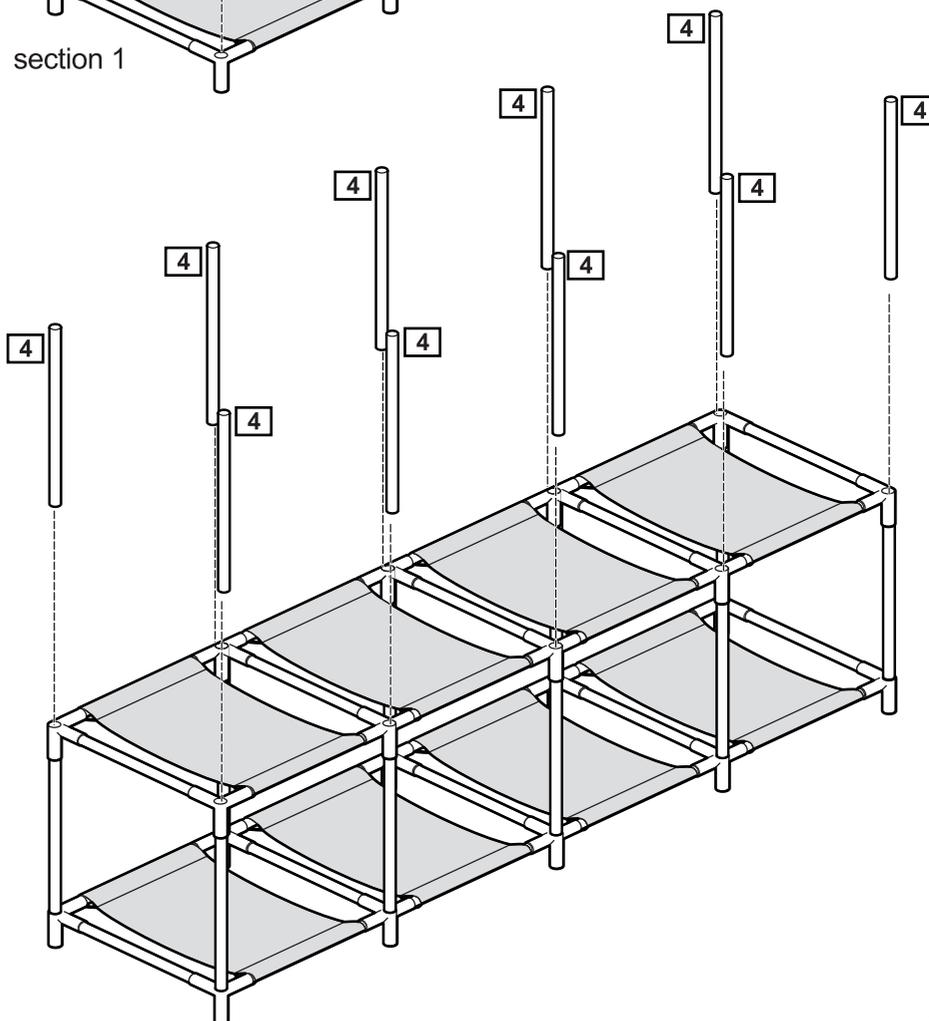


Assembly Instructions



Step 7

Leave the built assembly to one side.

Assembly so far

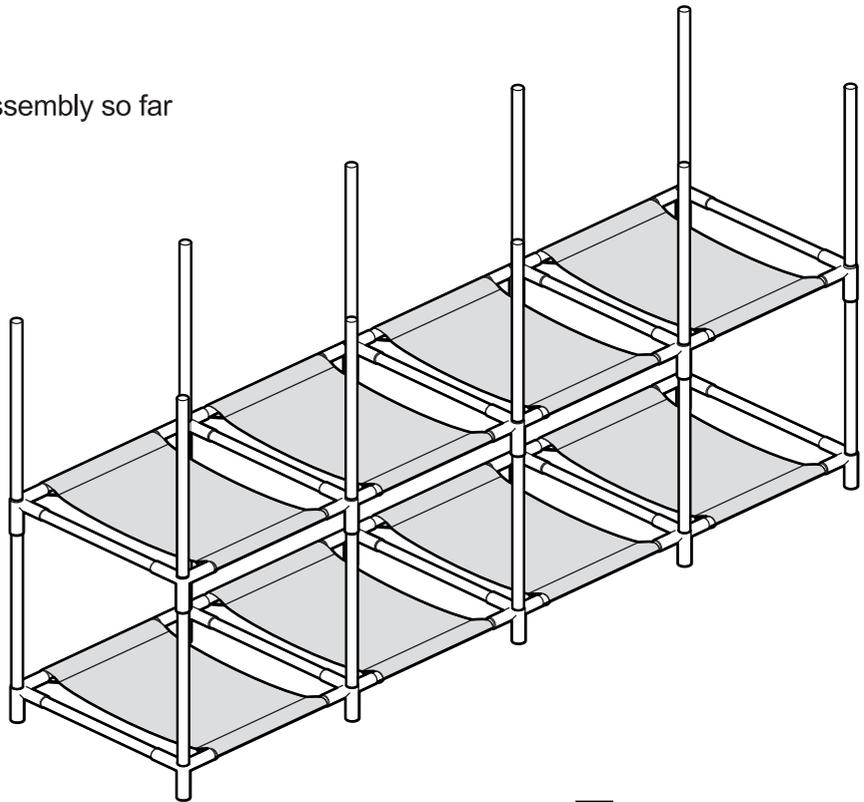


Using 4x **1** Corner joints
2x **2** Middle joints and
7x **4** Metal tubes pushed
through 2x **6** Fabric shelves,
push all components together
as shown.

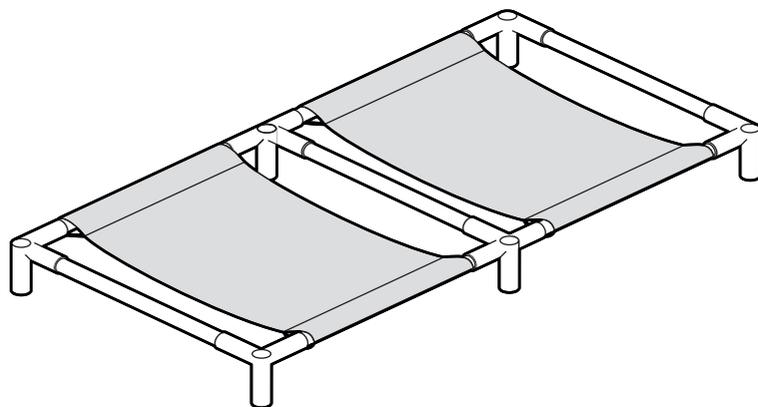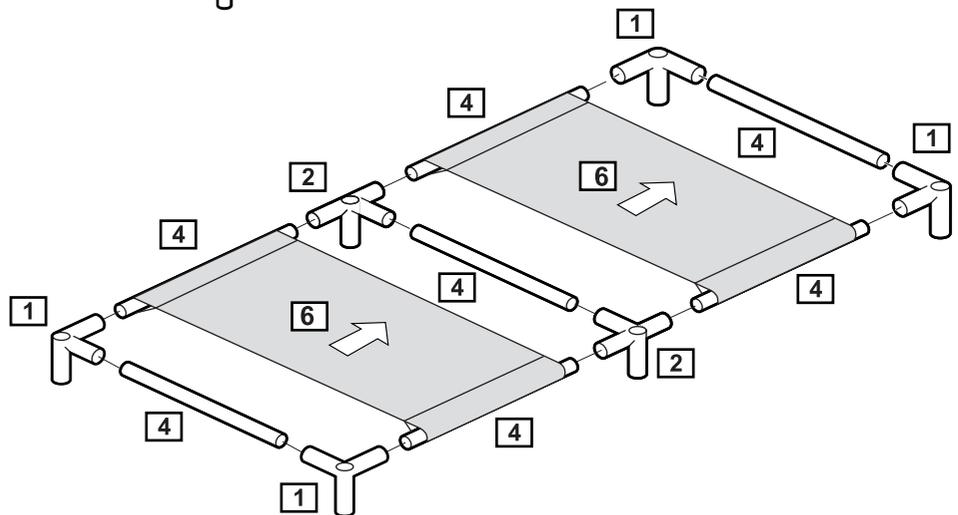


Assembly Instructions

Step 8

Push the new shelf section onto the assembly already built as shown.

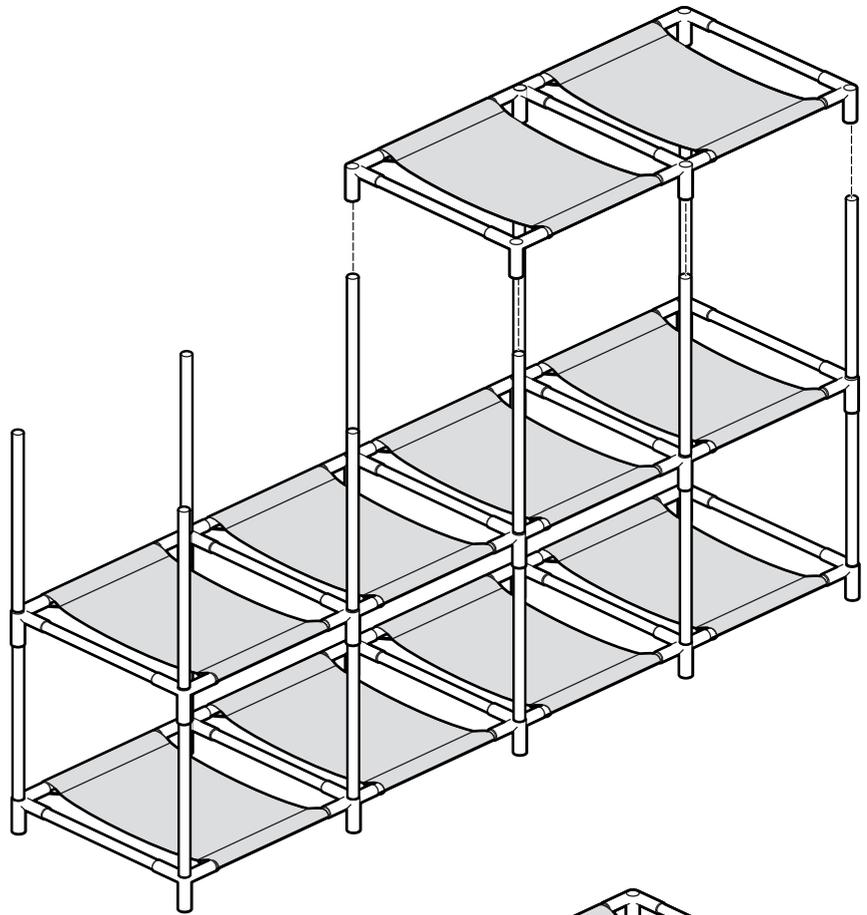


Assembly so far

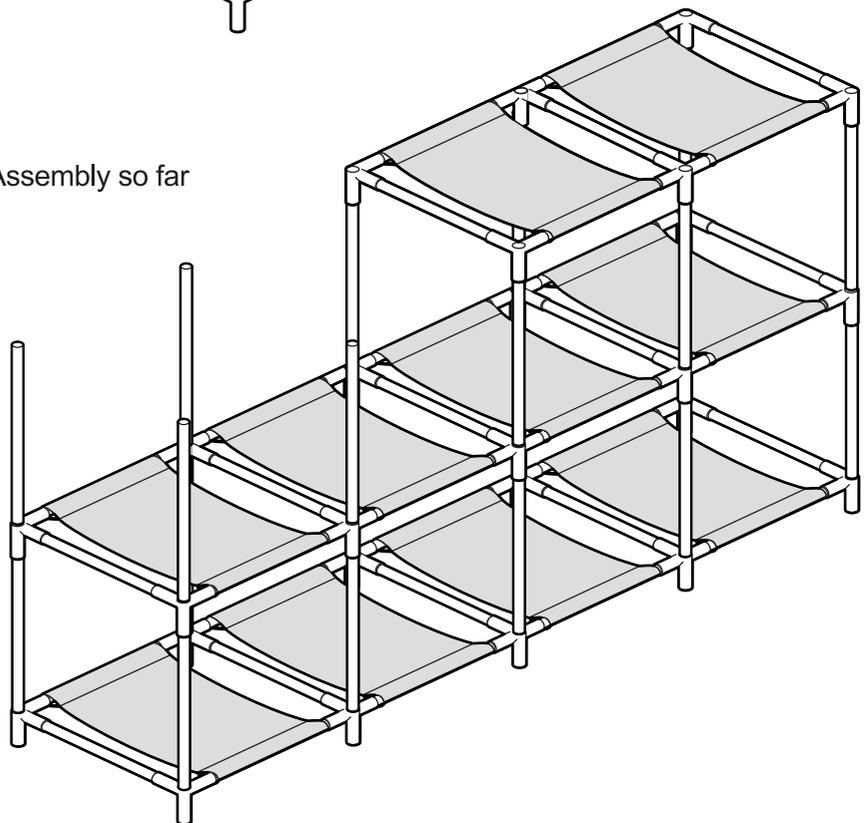


Assembly Instructions

Step 9

Using 4x **3** Straight joints
10x **4** Metal tubes
push all components together
as shown.

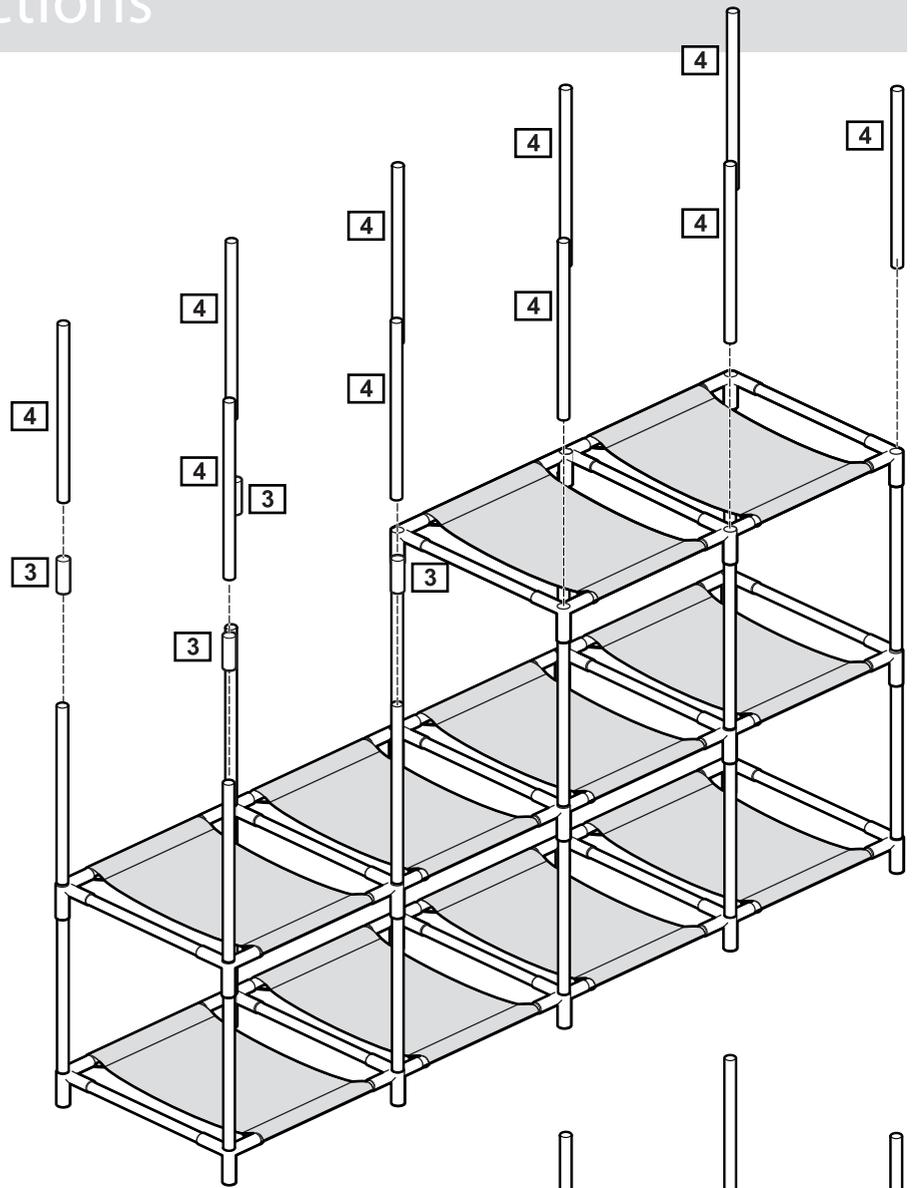

Assembly so far

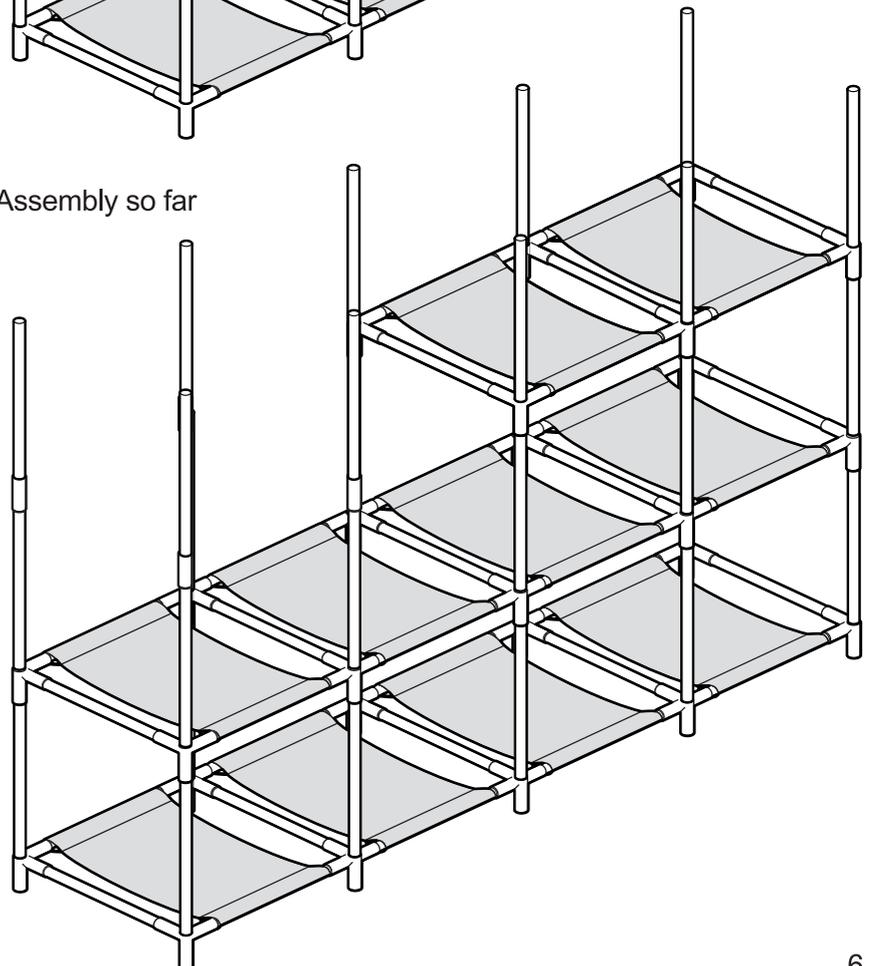


Assembly Instructions


Step 10

Using 10x **3** Straight joints
8 x **4** Metal tubes
push all components together
as shown.

Push in 2 x **5** metal
tubes with holes
in the middle into the
rear left and right
corner joint. These will
be used to mount to the
wall.

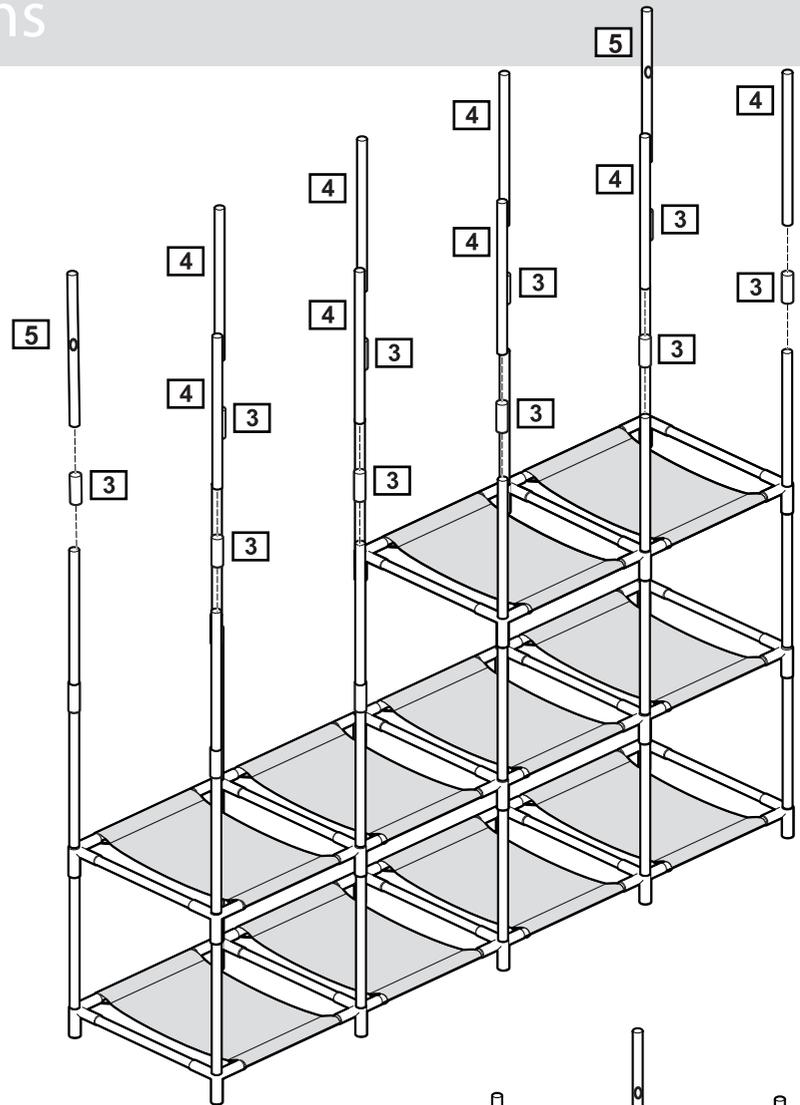


Assembly so far

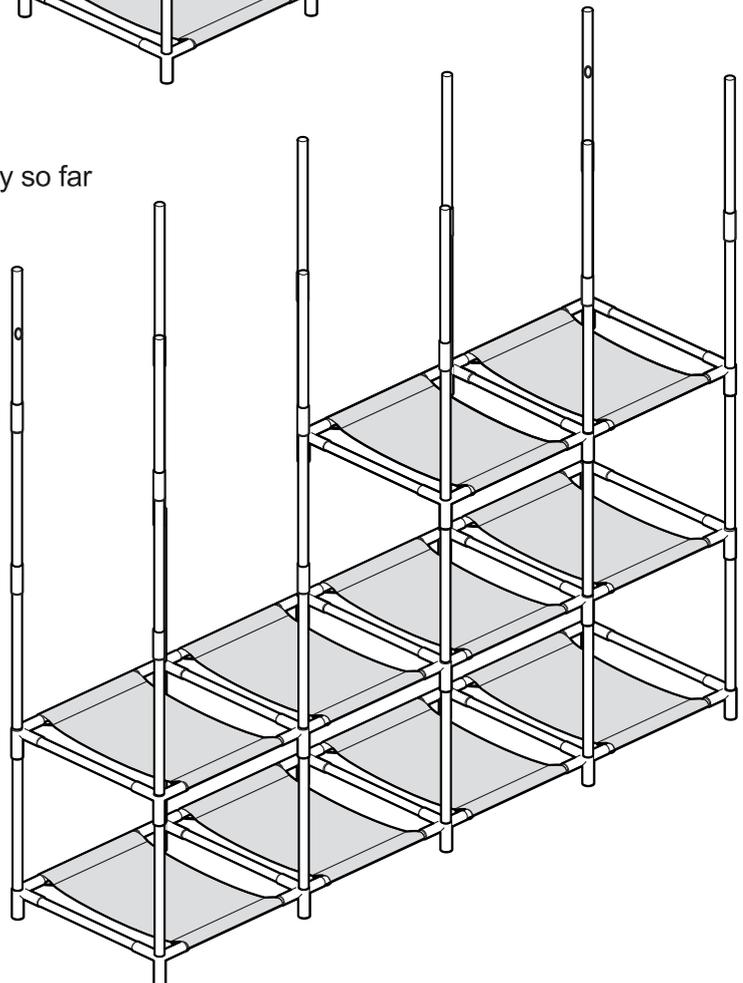

Assembly Instructions

Step 11

Using 4x **1** Corner joints
6x **2** Middle joints
13x **4** Metal tubes
push all components together
and add to top of assembly
as shown.

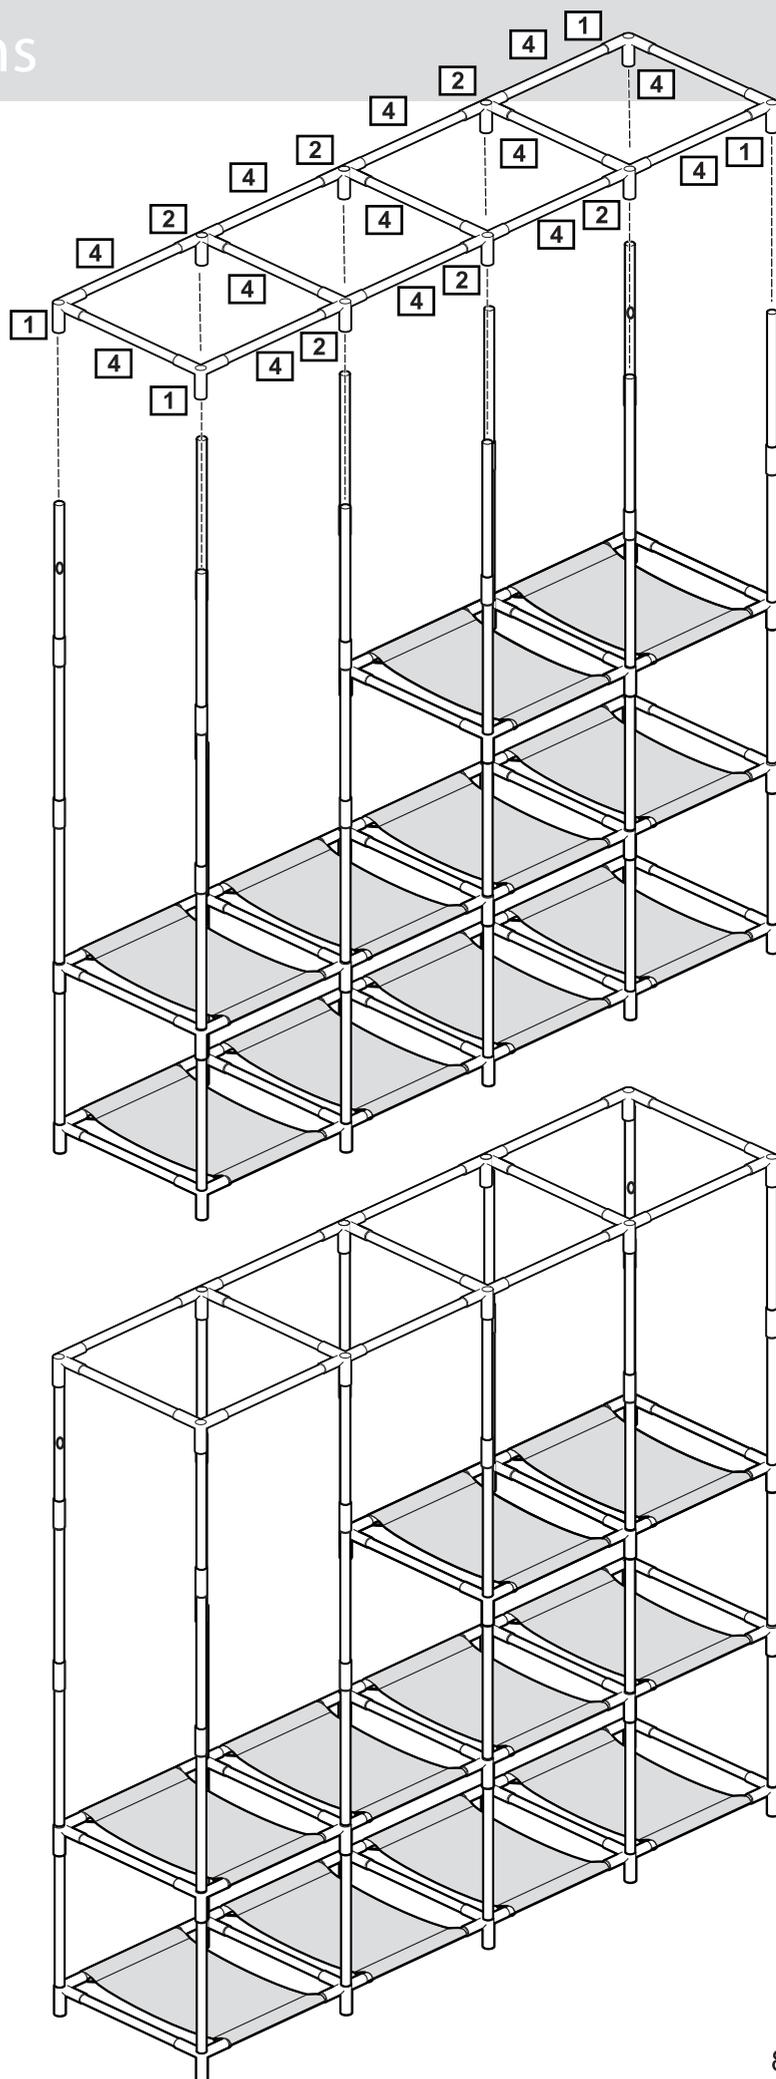


Assembly Instructions

Step 12

Using 4x **7** Clothes rail position as shown


Note: This assembly is adjustable using the components supplied and can be erected in different ways to meet storage needs.

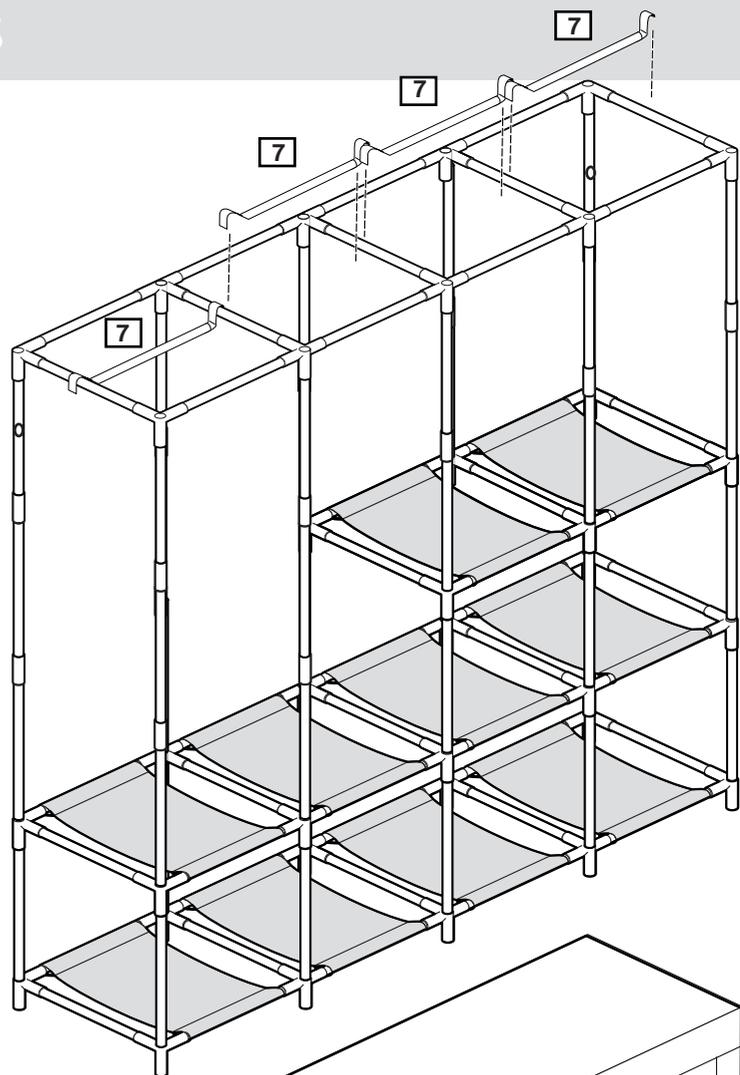

Step 13

Using 1x **8** Wardrobe cover, drape the cover over the assembly and pull it downwards as shown.

Note: Take care not to tear the fabric when covering the frame.

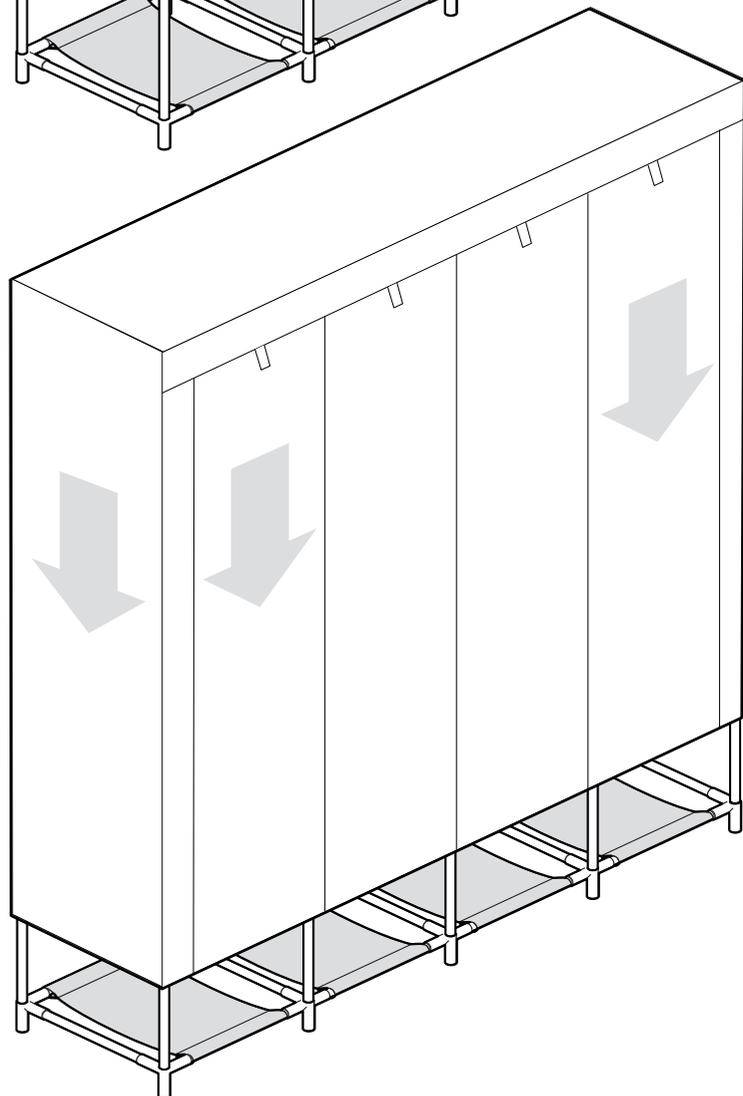

Assembly Instructions



Step 14

To secure the unit.
Drill 2 x holes into the wall that you wish the unit to stand against.
The holes must line up with the holes in metal tubes **5**. 2 x Wall screw **10** will locate into these holes.

Once the holes have been drilled push 2 x wall plug **9** into the holes you have created.

Locate wall screws through holes in 2 x metal tubes **5**, through 2 x holes in the wardrobe cover and into the wall plugs in the wall as shown.

Tighten with a Phillips head screwdriver

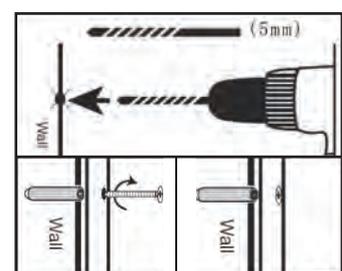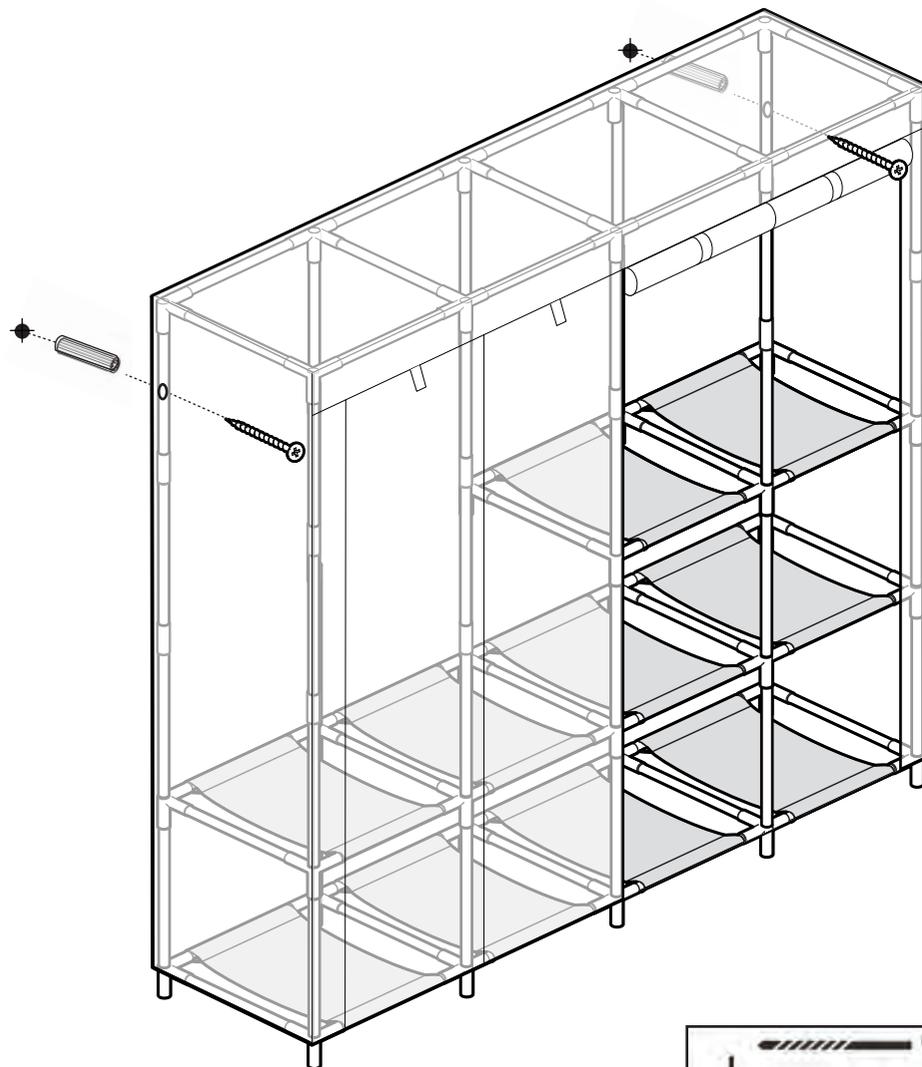

Assembly complete