

# Wrap it

## How to Vinyl Wrap Kitchen Doors

Before



After



Tools for the job

- \* d-c-fix® application kit (with craft knife and smoother)
- \* Tape measure

- \* Scissors
- \* Pencil
- \* Ruler

- \* Screwdriver
- \* Household cleaner and cloth
- \* Hairdryer

### STEP 1

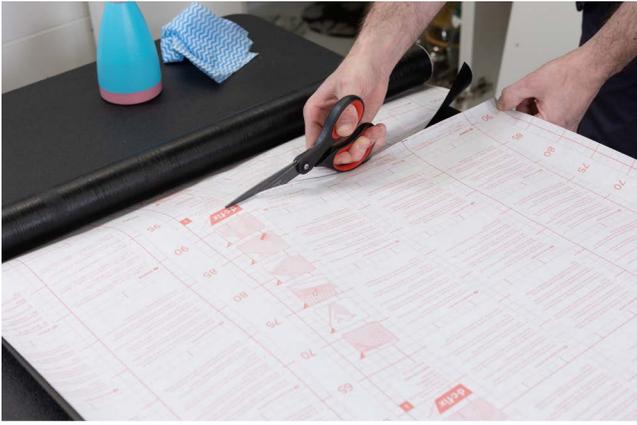


Remove doors and handles and clean thoroughly

### STEP 2



Measure

**STEP 3**

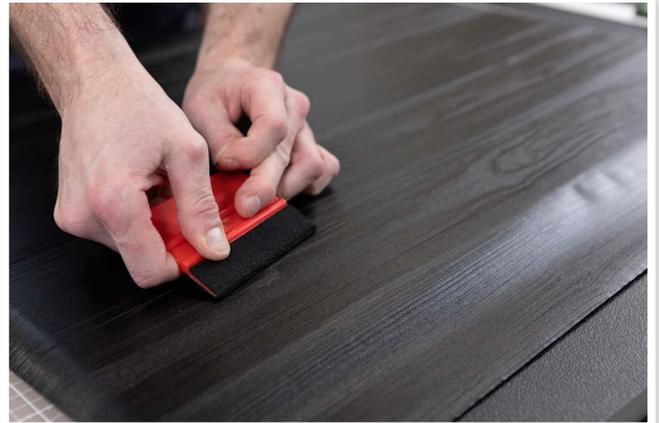
Cut to size allowing enough overhang to wrap around the edges (at least 3cm each side).

**STEP 4**

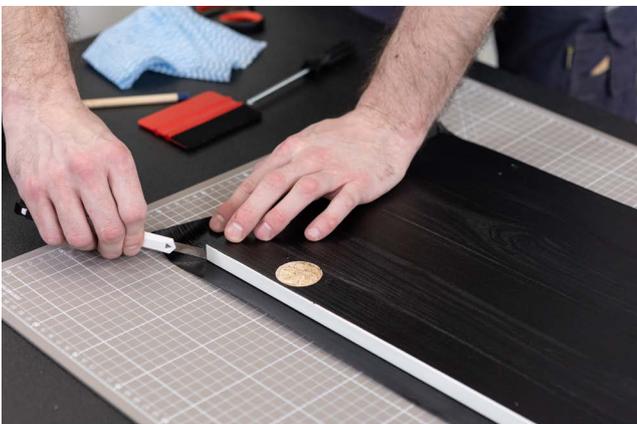
Peel back a section of backing paper

**STEP 5**

Smooth into place moving from the centre to the edges

**STEP 6**

Prick any air bubbles with a pin and smooth out to the edge

**STEP 7**

For neat corners cut a diagonal line into the corner

**STEP 8**

Smooth one of the flaps around the corner of the door

**STEP 9**



Trim away excess film

**STEP 10**



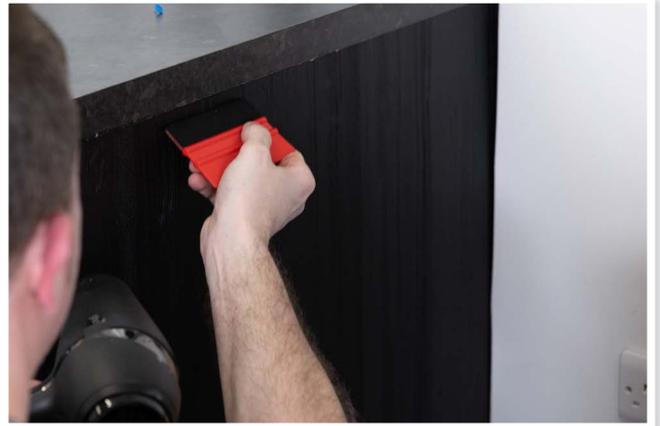
Fold the second flap around the corner and trim away excess film

**STEP 11**



Use a hairdryer to help secure the film around the corners and edges

**STEP 12**



Cover sides of the units

**STEP 13**



Cover plinths

**STEP 14**



Replace doors and handles



## Tips!

- Use a d-c-fix® application kit containing felt smoother (to eliminate creases and bubbles without damaging the vinyl) and craft knife (with snap-off blade for easy, neat trimming). All available on our website.
- Applying heat from a hairdryer can soften the adhesive, making it more pliable for wrapping around curved edges. This can also help when it comes to removing the film once it's been stuck down for a while.
- Spray glossy surfaces with water to help the film glide into place and minimise air bubbles.
- For shaker style doors, apply the film in sections to cover the 4 sides and centre panel instead of one piece. Overlap each section by 2mm and use a hairdryer to seal joins.
- Depending on your preference, either cover the inside of the door to match the outside or trim edges neatly with a craft knife.

