



Instructions by Time4Sleep Products

**Sanderson Upholstered Day Bed Including Underbed Frame**


Assembly instructions for Sanderson Upholstered Day Bed Including Underbed Frame by Time4Sleep

**Product Information**

**Sanderson Upholstered Day Bed Including Underbed Frame**

**Description**

If you're looking to create a multi functioning space, then our Sanderson Day bed may be a great option. The under bed can simply be rolled out to create an extra bed perfect for occasional use. Upholstered in different fabrics the day bed will work well in a number of different design schemes. Please note that the bed is designed to take a standard single mattress and that the mattress should not exceed 17cm in height.

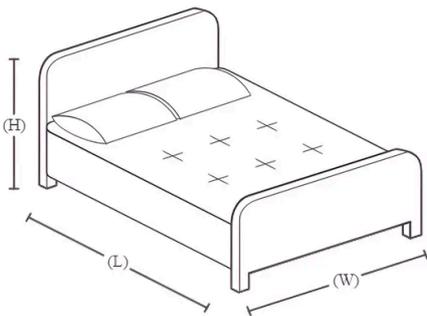

**Product specifications**

	<b>Single</b>
Width	214 cm
Length	103 cm
Height	82.7 cm

**SKU**

San30Oat, San30Navy, San30Olive, San30Cream, San30Grey



## Tools

1 - Allen Key (M5 x 70mm)

1



2 - Allen Key (M4 x 65mm)

1



3 - CSK (M4 x 32mm)

72



4 - JCBC (M6 x 50)

4



5 - Spring Washer

4



6 - Flat Washer

4



7 - Roller

6



8 - CSK (M4 x 16mm)

24



9 - JCBB (M8 x 20)

16



## Parts

A - Arms (A1 & A2)

2 piece(s)



B - Back Panel

1 piece(s)



C - Slats

15 piece(s)



D - Front Side Rail (PU)

1 piece(s)



E - Back Side Rail

1 piece(s)



F - Trundle Front Panel (PU)

1 piece(s)



G - Trundle Back Panel

1 piece(s)



H - Trundle Side Panel

2 piece(s)



I - Trundle Slats

15 piece(s)




J - Wooden Block

4 piece(s)




Steps (7)

1. Attach Side Rails and Arms

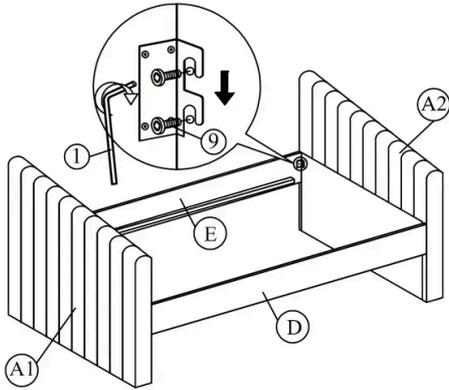

Attach side rail (D) & (E) to arms (A) by pushing the bracket down to fit it.


2. Attach Back Panel

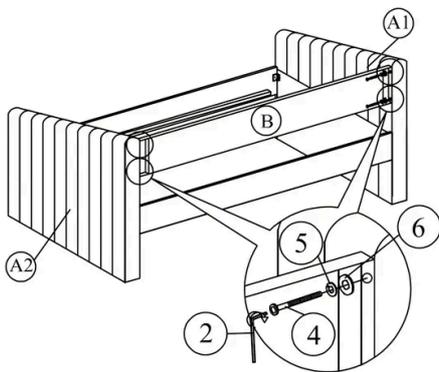

Attach the Back Panel (B) to the arm (A) as shown.



### 3. Install the Slats

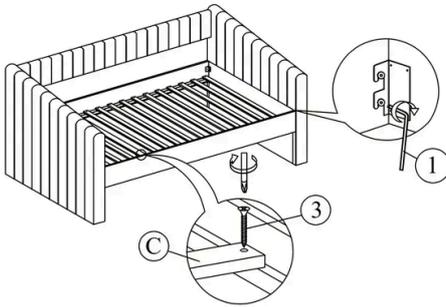


Tighten the 4 Corner with Allen Key (1).

Install the slats to side rail. Tighten the slats with CSK screw (3).


The distance of the slats should be sufficient to obtain desirable bed stability.

### 4. Assemble Trundle Panels

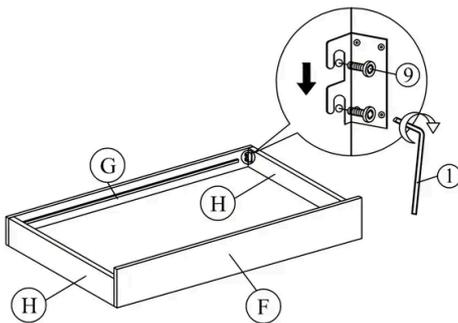

Attach trundle side panel (H) and trundle front panel (F) to trundle back panel (G) by pushing the bracket down to fit it.


### 5. Attach the Rollers

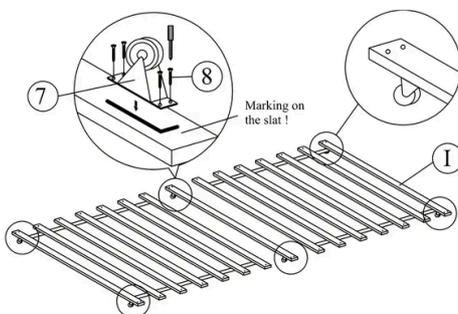

Affix the roller (7) to the slat (I) follow the marking on the slat (I).




## 6. Install the Trundle Bed Slats

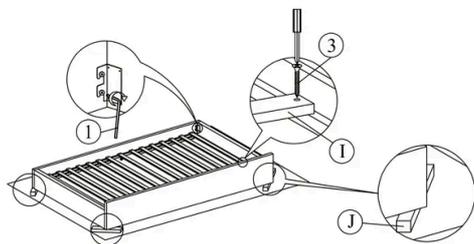

Place the wooden blocks (J) at the corner of the trundle and fix the slat (I) to the trundle at (F) & (G).

## 7. Insert Trundle Bed

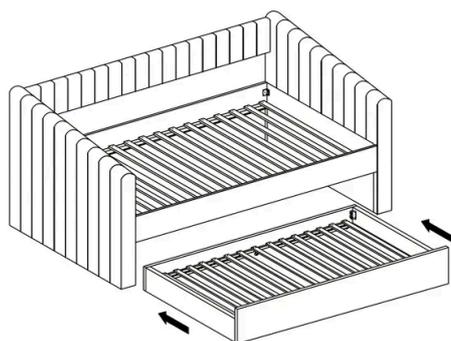

Assembly is complete

Need Help? Call 01484 500 560 or email [hello@time4sleep.co.uk](mailto:hello@time4sleep.co.uk) - please include your order number if you have one!



### Instructions by Time4Sleep Products

Sanderson Upholstered Day Bed Including Underbed Frame