



Instructions by Time4Sleep Products

**Valencia Upholstered Ottoman Bed Frame**


Assembly instructions for Valencia Upholstered Ottoman Bed Frame by Time4Sleep.

**Product Information**

**Valencia Upholstered Ottoman Bed Frame**

**Description**

Invite luxury into your home with the Valencia Stone Ottoman Bed Frame. A modern ottoman bed that allows functionality without compromising on style. The slatted Ottoman base can be easily raised with the assistance of the gas lift struts to reveal a class leading level of fabric lined storage. Designed for comfort and support, the sprung slatted base of this bed base offers excellent mattress support whilst the flexible slats also enhance ventilation and helps to promoting air circulation to keep your mattress fresh and hygienic.

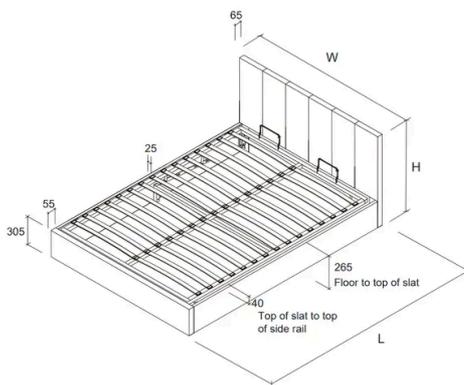

**Product specifications**

	<b>Compact Double</b>	<b>Double</b>	<b>King Size</b>
Width	127 cm	144 cm	157 cm
Length	203 cm	203 cm	213 cm
Height	104 cm	104 cm	104cm
Foot End Height	30 cm	30 cm	30 cm

**SKU**

ValOtt40Stone, ValOtt46Stone, ValOtt50Stone,  
ValOtt40Cloud, ValOtt46Cloud, ValOtt50Cloud,  
ValOtt46Fog, ValOtt50Fog

**Before you start**



**Instructions by Time4Sleep Products**

Valencia Upholstered Ottoman Bed Frame

- Please read this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.
- Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.
- Please ensure that the packaging is disposed of in a safe environmentally friendly way.
- **Caution:** There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid danger of choking.

### Care & Maintenance

In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.

### General Hints & Tips

- Two person assembly
- Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight.

### Warnings

- Before moving the slat frame, place the mattress on the slats. Without a mattress in place, the speed of movement is quick and may cause injury so great care is needed.
- Carefully lower the frame with the fabric hand-strap (10) ensuring the frame sides are aligned with the side panels; there should be an even gap on each side.
- If not aligned, check bed is still square and if it is, but gaps are still not even, re-align.
- Depending on the weight of the mattress, the rising speed will vary so be careful until you get used to the speed.
- Always use the hand-strap to lift or lower the frame - keep fingers well away from the moving parts.
- When fully assembled and the mattress in position, please raise & lower the ottoman 4/5 times to ensure the gas pistons are fully lubricated.
- You must ensure that the mattress is on the bed frame before operating the lift mechanism Failure to do so could result in injury.
- Keep hands clear of the mechanism when opening or closing the ottoman.
- Beware of entrapment – Never reach in through the mechanism to access the storage area.
- Always ensure that the ottoman is FULLY opened before accessing the storage area.

### Important when operating





- Use caution when operating, always use the handle when lifting.
- This bed uses a pressurised mechanism.
- To be operated by adults only Please ensure that children and pets are kept away from the bed when operating the lift mechanism.
- Keep children and pets away from the storage area.
- Do not overload the internal storage base.
- Do not stand inside the internal storage area of the bed.
- Before removing the mattress secure the frame to ensure it does not open unexpectedly.
- Do not attempt to lie on the mattress when the ottoman is in the raised position.
- When lifting the ottoman remove all bedding except the fitted sheet.

#### Weight limits:

- **Double:** Min weight: 10 kg / Max weight: 40 kg
- **King:** Min weight: 15 kg / Max weight: 45 kg



**Tools**

A - Bolt sets (M8x20mm) 12 

B - Bolt sets (M8x35mm) 20 

C - Bolt sets (M8x50mm) 12 

E - Bolt sets (M6x45mm) 4 

F - Bolt sets (M6x20mm) 12 

G - Flat washer 12 

H - Spring washer 12 

J - Nut 16 

K - Angle Brackets - LH 2 

L - Angle Brackets - RH 2 

M - Allen Key for M8 bolts 1 


O - Allen Key for M6 bolts 1 

P - Spanner for M8 nuts 1 



Parts

1	Headboard	1 piece(s)
2	Footboard	1 piece(s)
3	Side Rail - LH	1 piece(s)
4	Side Rail - RH	1 piece(s)
5	Lift Mechanism - LH	1 piece(s)
6	Lift Mechanism - RH	1 piece(s)
7	Spacer Rails for Lift Mechanism	2 piece(s)
8	'U' Shape Cross Bar	1 piece(s)
9	Angled Corner Brackets	2 piece(s)
10	Metal Slat Frame - End Rails	2 piece(s)
11	Fabric Hand Strap	1 piece(s)
12	Metal Slat Frame - Side Rails	3 piece(s)
13	Mattress Stoppers	2 piece(s)

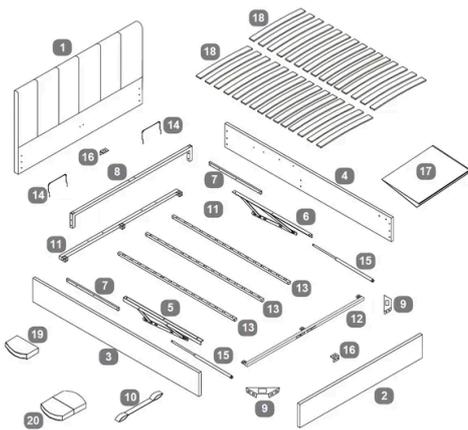


---


14	Gas Lift Pistons	2 piece(s)
15	Fabric Base Cover	1 piece(s)
16	"L" Shape Slat Frame Support Brackets	2 piece(s)
17	Wooden Slats (28 for Double, 30 for King)	28 piece(s)
18	Single Plastic Caps (28 for Double, 30 for King)	28 piece(s)
19	Double Plastic Caps (14 for Double, 15 for King)	14 piece(s)

---

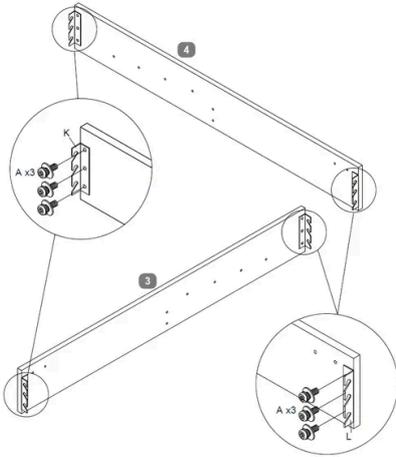

**Steps (12)****1. Attach Angle Brackets to Side Rails**

1. Position each Left Side Rail (3) and Right Side Rail (4) on a flat surface.
2. Align the Angle Brackets (K, L) with the pre-drilled holes on both ends of the side rails.
3. Secure each bracket using 3x Bolt Sets (A) on each side.
4. Tighten the bolts securely with the Allen Key (M).

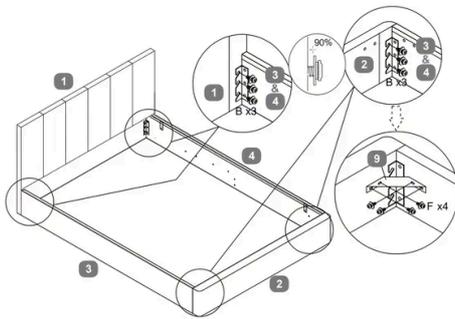**2. Assemble Bed Frame and Corner Brackets****Assemble Bed Frame**

1. Position the Headboard (1) and Footboard (2) upright at each end of the assembled side rails.
2. Align the pre-drilled holes of the side rails with the headboard and footboard brackets.
3. Secure each corner using 3x Bolt Sets (B) per bracket (total of 4 brackets).
4. Tighten all bolts securely with the Allen Key (M).

**Attach Corner Brackets**




1. At each corner where the Side Rails (3 & 4) meet the Footboard (2), attach the Angled Corner Brackets (9) using 4x Bolt Sets (F).
2. Tighten all bolts securely with the Allen Key (O).




### 3. Install the Frame Support Brackets and Cross Rail

1. Attach the "L" Shape Frame Support Brackets (16) to the Headboard (1) and Footboard (2) using 2x Bolt Sets (F) per bracket.
2. Secure the "U" Shape Cross Bar (8) to the Side Rails (3 & 4) using 2x Bolt Sets (E) on each end.
3. Tighten all bolts securely with the Allen Key (O).

**Important:** Make certain the bed is squared up as shown in the diagram, then tighten all bed assembly bolts 100%.

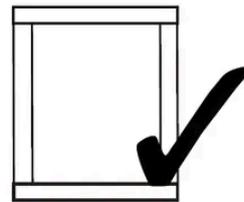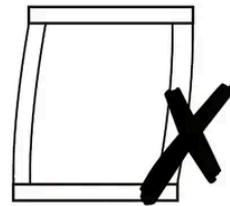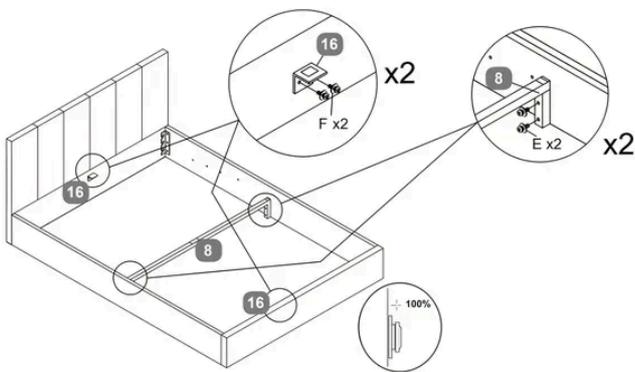


### 4. Install the Lift Mechanisms and Corner Brackets

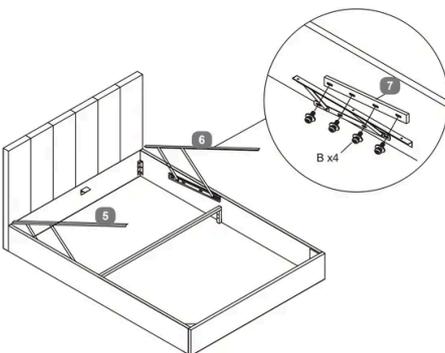

1. Position the Spacer Rails (7) along the inner sides of the Side Rails (3 & 4).
2. Place the Lift Mechanisms (5 & 6) on top of the spacer rails, aligning the holes with the pre-drilled slots on the side rails.
3. Secure both the Spacer Rails (7) and Lift Mechanisms (5 & 6) in place using 4x Bolt Sets (B) per side.
4. Tighten all bolts securely with the Allen Key (M).





## 5. Install the Gas Lift Pistons

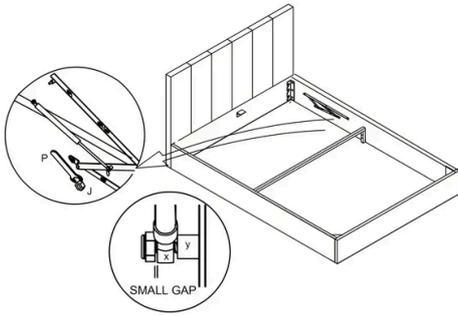

1. Slide the Gas Lift Piston Stem (x) onto the Axle (y) as shown.
2. Secure the piston in place using the Flange Lock-Nut (J).
3. Use the Spanner (P) to tighten the nut. Do not over-tighten.
4. Leave a small gap to ensure the piston stem can move freely, as indicated in the diagram.


## 6. Place the Fabric Base Cover

1. Lay the Fabric Base Cover (15) flat inside the storage compartment of the bed frame.
2. Adjust the cover so it fits neatly within the frame and sits flush against the edges.

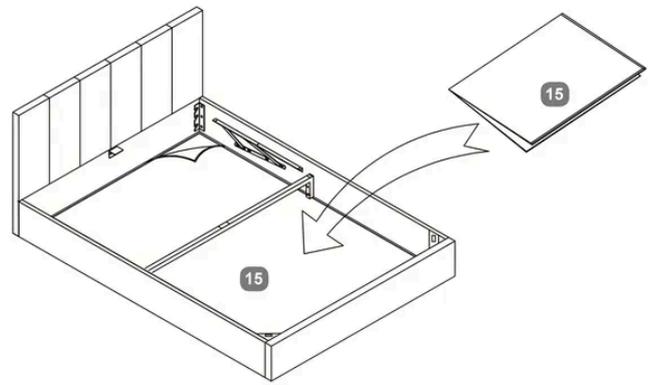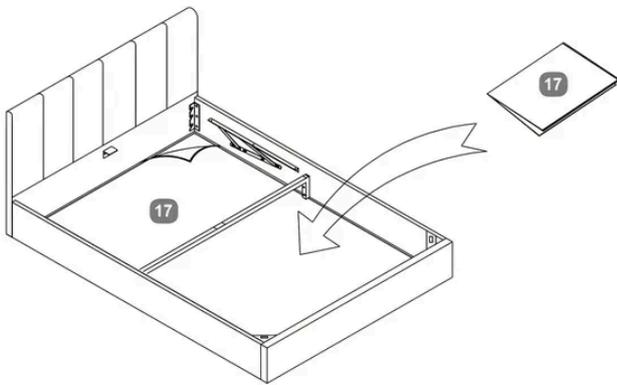



## 7. Assemble the Slat Frame Structure

1. Lay out the Metal Slat Frame End Rails (10) and Side Rails (12) as shown.
2. Ensure that the split joints in the End Rails (10) point upwards.
3. Position the Side Rails (12) so that the slat cap holes are facing downward, touching the floor. Only the 13 marked holes by the line should be visible from above.
4. Slide the Side Rails (12) into the End Rails (10) as shown in the diagram.
5. Secure all joints using Bolt Sets (C), Flat Washers (G), Spring Washers (H), and Nuts (J).
6. Tighten all bolts using the Allen Key (M) and Spanner (P).

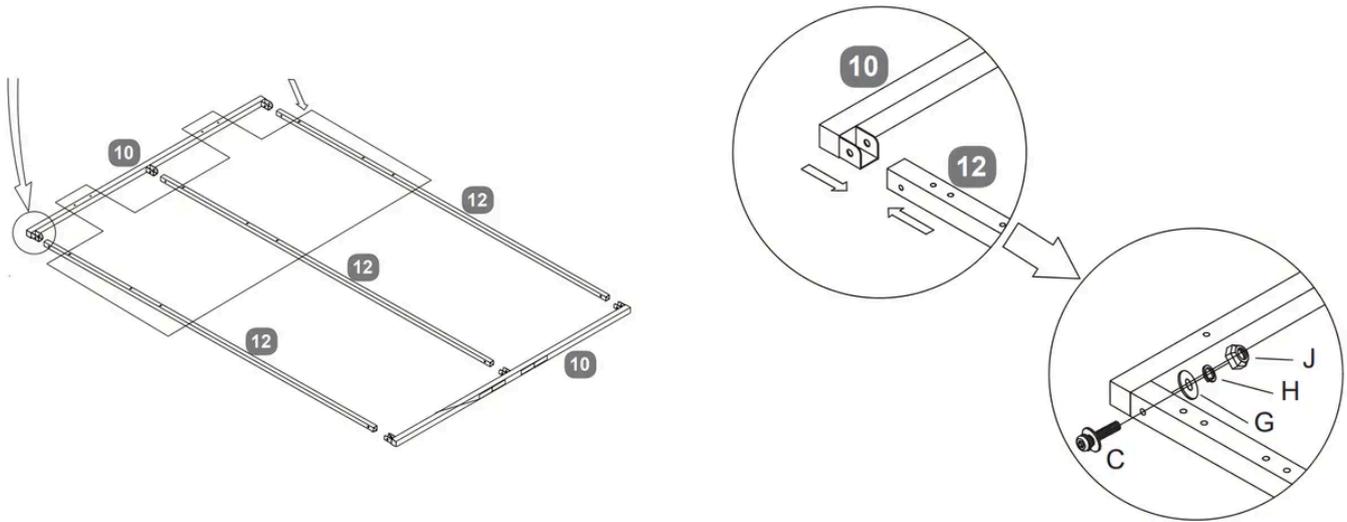





## 8. Install the Slats

1. After assembling the slat frame, turn it over so the slat cap holes face upwards.
2. Take the Wooden Slats (17) and attach a Single Plastic Cap (18) to each end.
3. For central slats, insert a Double Plastic Cap (19) in the middle.
4. Push each slat with caps firmly into the pre-drilled holes in the frame as shown.
5. Secure the Mattress Stoppers (13) at the designated positions.
6. Attach the Fabric Hand Strap (11) to the center rail.

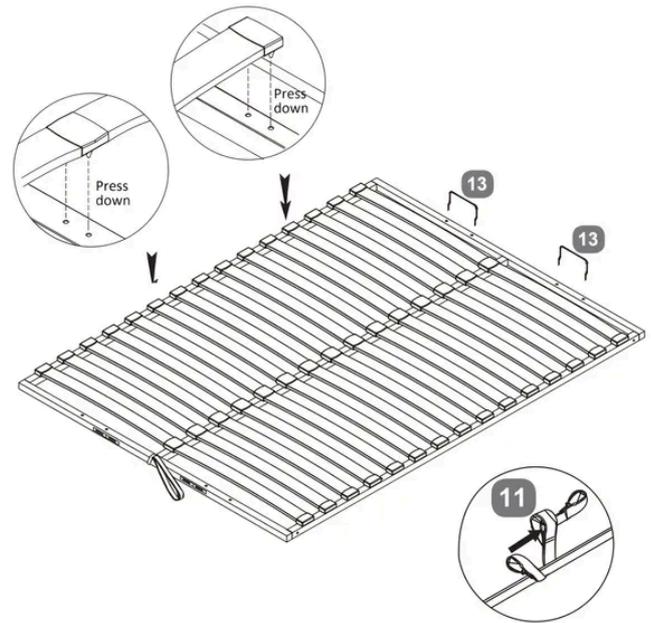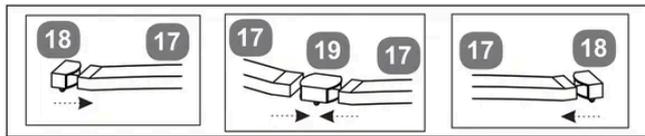


### 9. Secure the Slat Frame to the Lift Mechanism

1. Position the slat frame onto the lift mechanism arms.
2. Loosely fit 3x Bolt Sets (C), Washer (G), Spring Washer (H) and Nut (J) on each side.
3. Carefully hold the frame down and align it so that there are even gaps on both sides.
4. Once aligned, tighten all bolts 90% using the Allen Key (M) and Spanner (P).

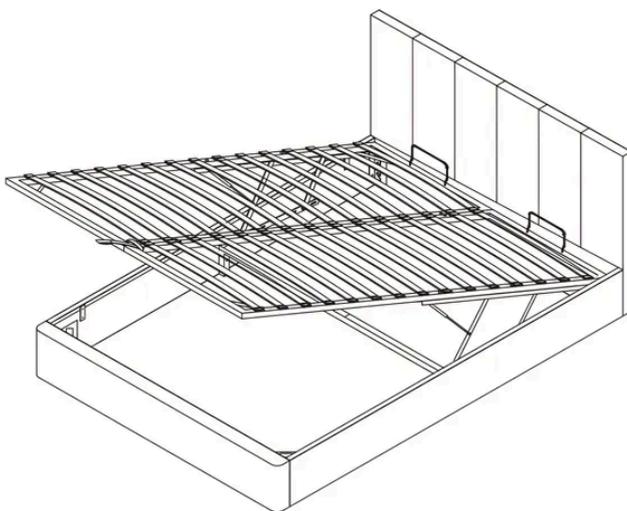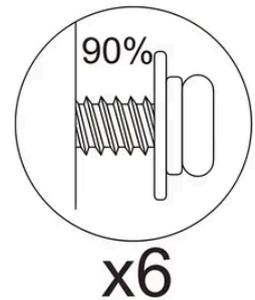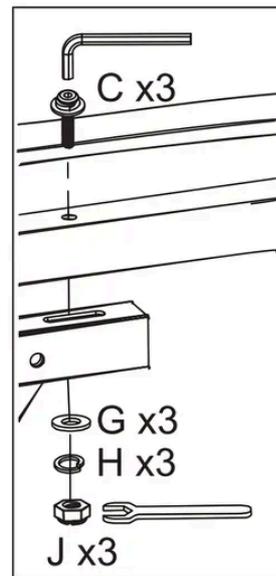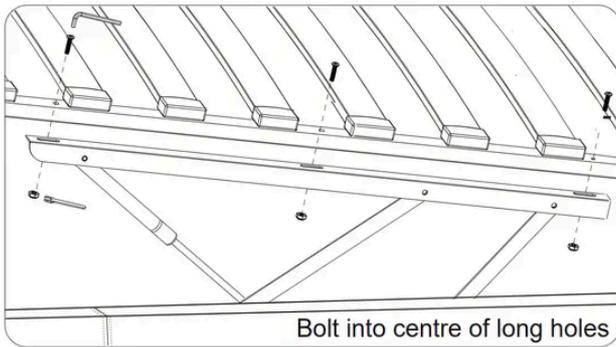

## 10. Alignment Check

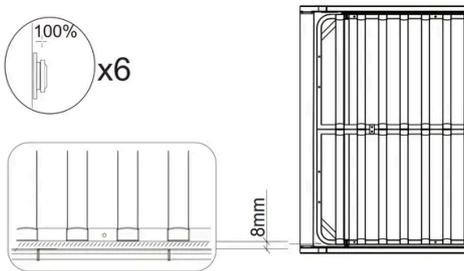


1. Ensure a uniform 8mm gap between the bed frame and slat mechanism.
2. Tighten six fixings to 100% for stability.
3. Verify the top-down alignment of the slatted base before placing the mattress.

## 11. Attach the Gas Lift Cylinder

1. Slide the Gas Lift Cylinder Stem (x) onto the Axle (y) as shown.
2. Secure it using the Flange Lock-Nut (J).
3. Tighten the nut with the Spanner (P)—do not over-tighten.
4. Leave a small gap to ensure the cylinder stem can move freely, as indicated in the sketch.



### Important:

Be cautious about what you store under the bed. Ensure that stored items, such as suitcases or boxes, do not touch the slats. The maximum storage height is 195mm to prevent damage.

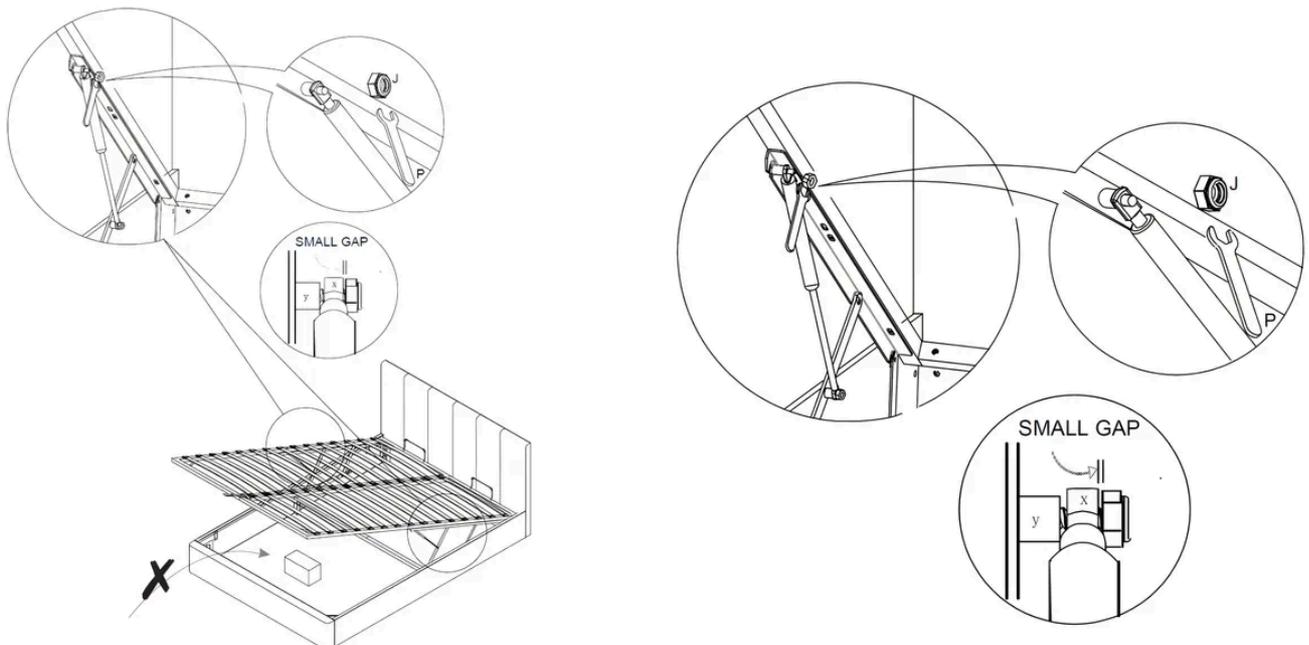

## 12. Final Check

- Verify that all slats are securely fastened and evenly spaced.
- Check for any loose connections and tighten the screws if necessary.

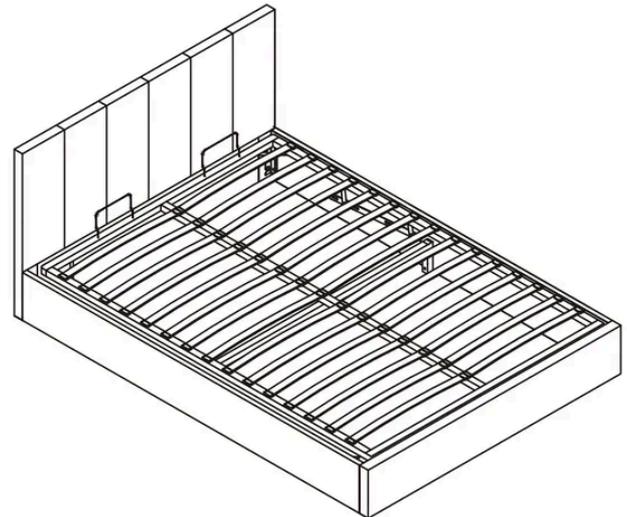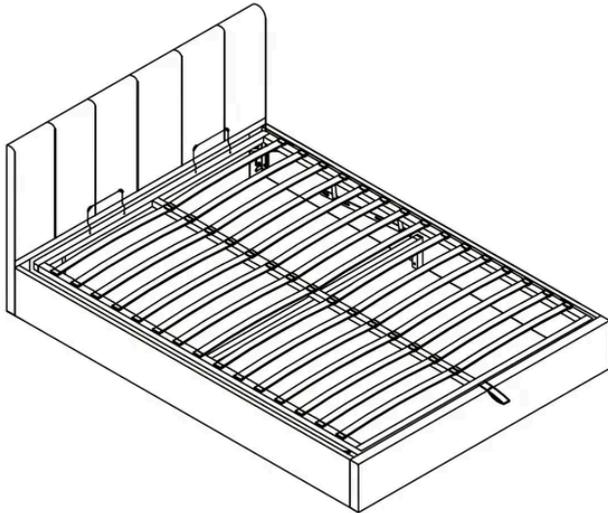

Need Help? Call 01484 500 560 or email [hello@time4sleep.co.uk](mailto:hello@time4sleep.co.uk) - please include your order number if you have one!



### Instructions by Time4Sleep Products

Valencia Upholstered Ottoman Bed Frame