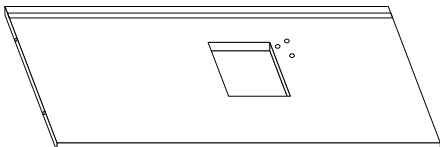
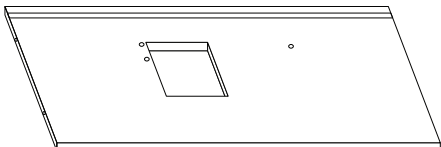



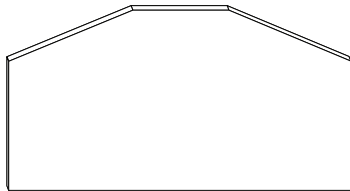




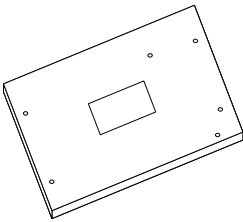

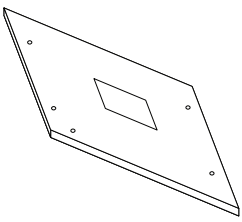






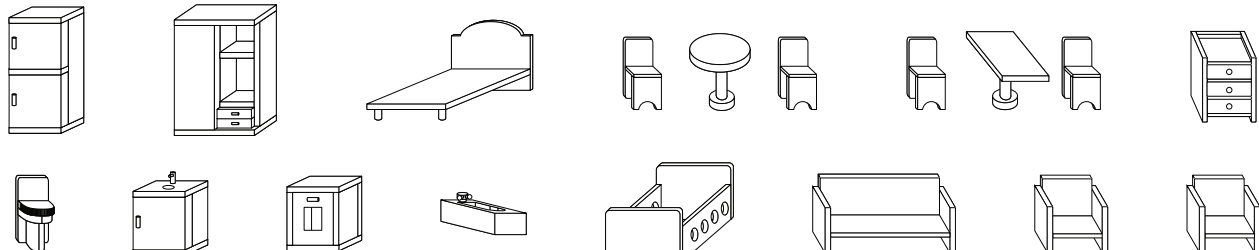
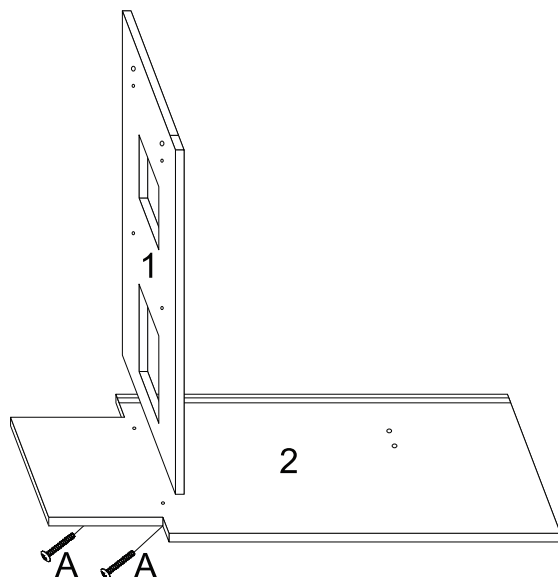
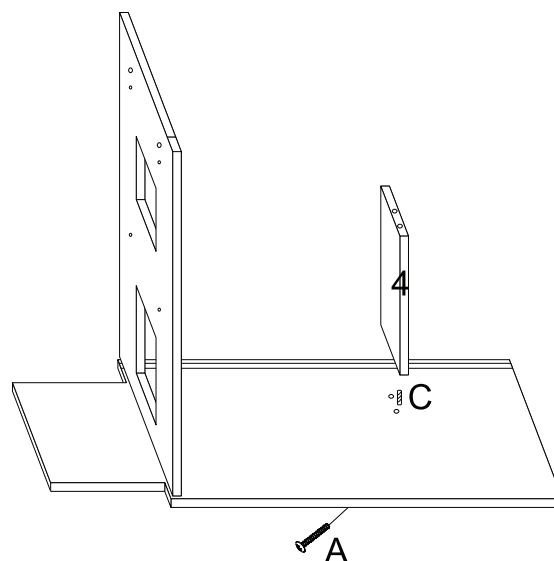
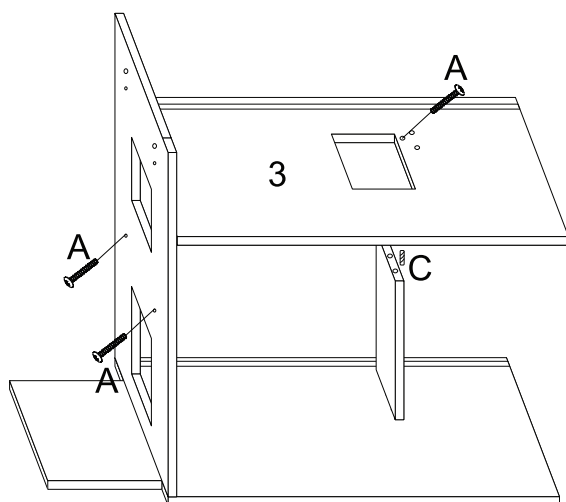

1: 1PC	2: 1PC		4: 1PC	5: 1PC
				
	3: 1PC		6: 1PC	
				
7: 1PC			10: 1PC	12: 1PC
				
8: 1PC			13: 1PC	14: 1PC
				
15: 1PC	16: 1PC	17: 1PC	18: 1PC	
				
20: 2PCS				
4X40mm 		6X10mm  		5X30mm 
A: 22PCS		B: 4PCS		C: 8PCS
D: 6PCS				
				

Step ①


Use A screw to lock No.2 panel on No.1 panel.

Step ②

Insert C(wooden dowel) in No.4 panel bottom, joint it to No.2 panel, use A screw to No.4 panel on No.2 panel.


Step ③

Insert C(wooden dowel) in No.4 panel top, joint it to No.3 panel, use A screw to lock No.3 panel on No.1 and 4 panel.

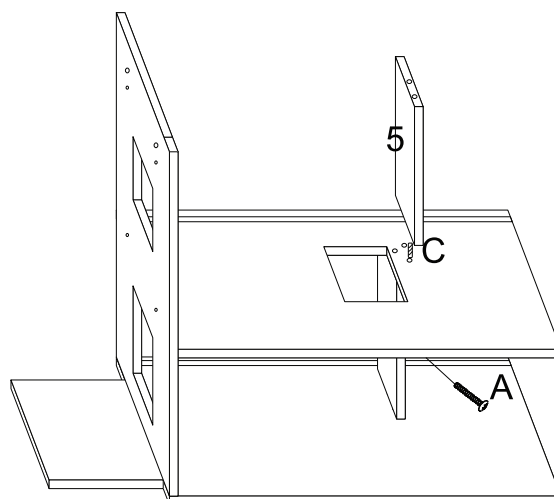Step ④


Insert C(wooden dowel) in No.5 panel bottom, joint it to No.3 panel, use A screw to lock No.5 panel on No.3 panel.

Step 5

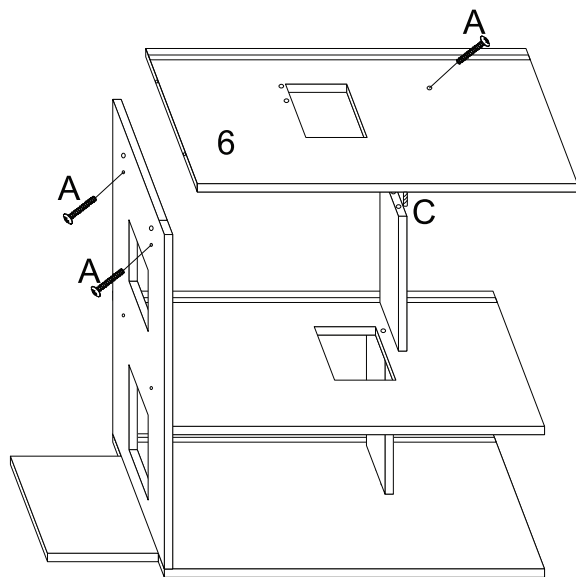


Insert C(wooden dowel) in No.5 panel top, joint it to No.6 panel, use A screw to lock No.6 panel on No.1 and 5 panel.

Step 6

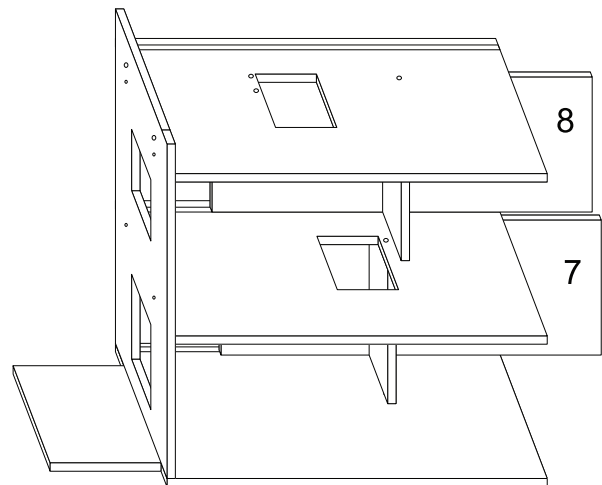


Insert No.7 and 8 panel in backside groove.

Step 7

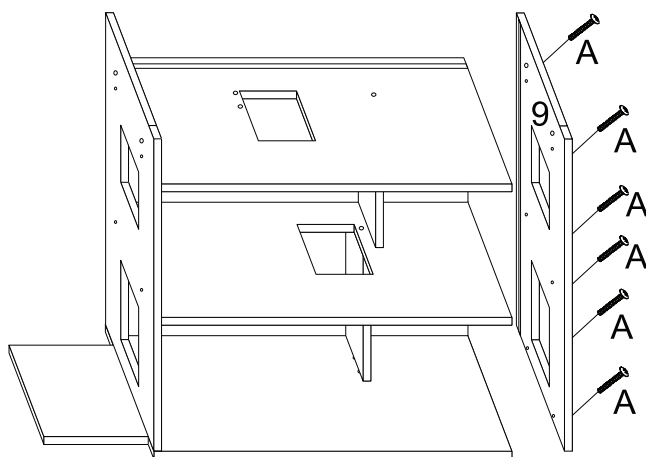


Use A screw to lock No.9 panel, on leftside all boards.

Step 8

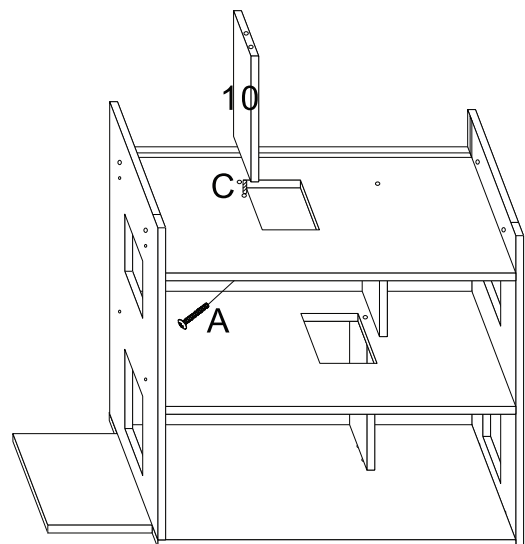


Insert C(woode dowel) in No.10 panel bottom, joint it to No.6 panel, use A screw to lock No.10 panel on No.6 panel.

Step 9

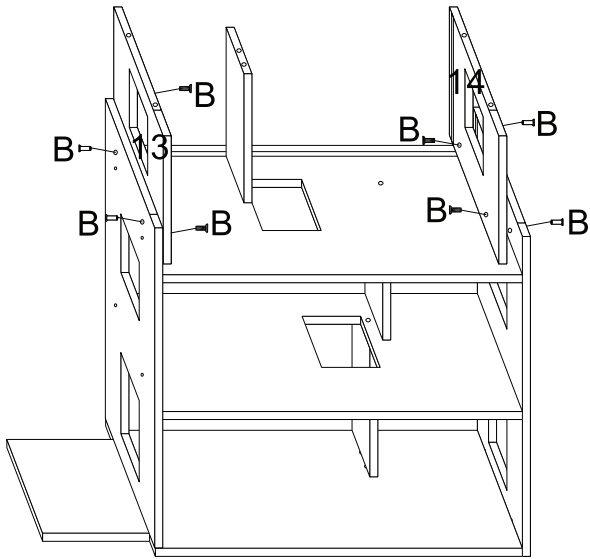


Insert B(female) in No.13 and 14 panel, use B(male) to across No.1 and 9 panel, to lock No.13 and 14 panel.

Step 10

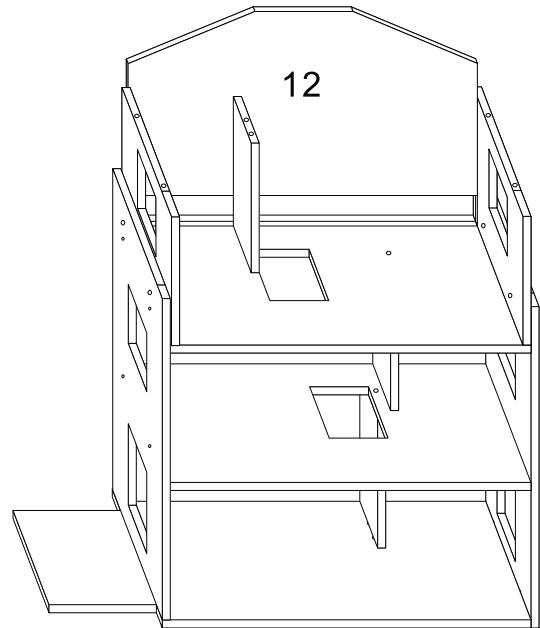


Insert No.12 panel in top backside groove.

Step 11

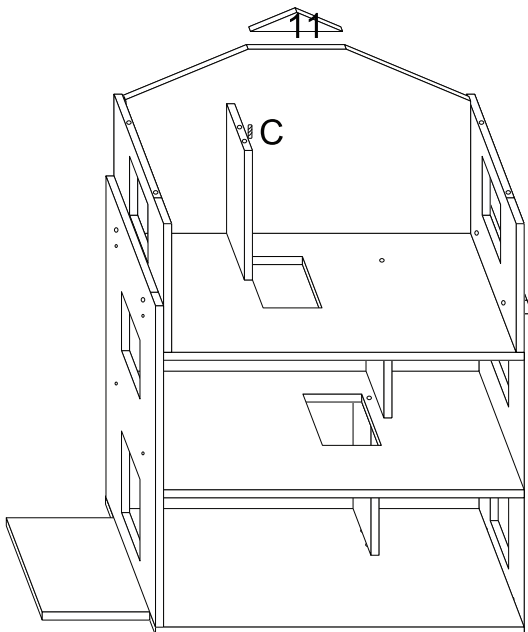


Insert C(wooden dowel) in No.10 panel top, put No.11 panel on No.12 panel top.

Step 12

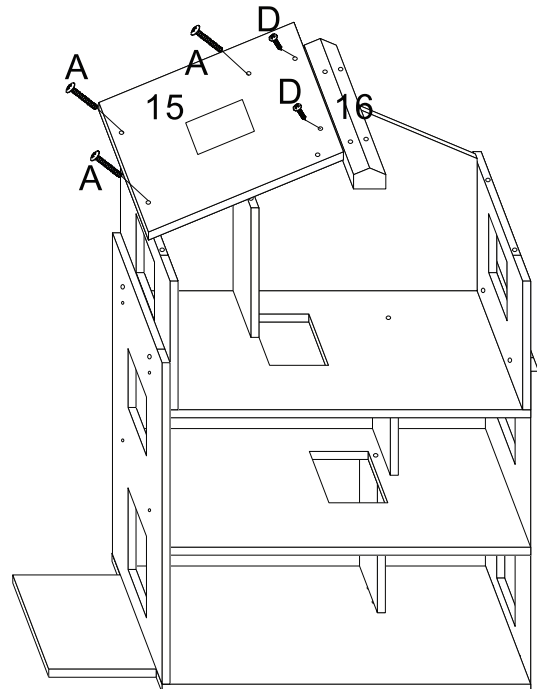


Put No.16 panel on No.11 panel, then use D screw to lock No.16 panel on No.15 panel, joint No.10 panel to No.15 panel, use A screw to lock No.15 panel on No.10 and 13 panel.

Step 13

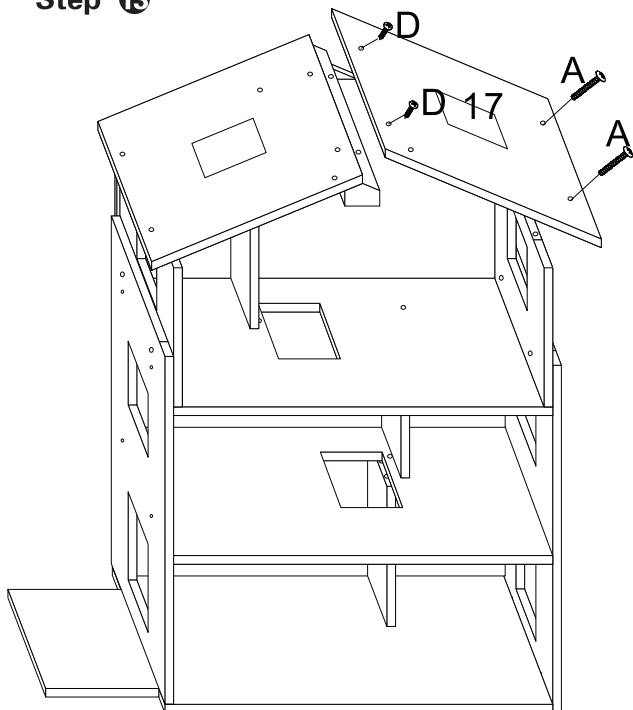


Use D screw to lock No.17 panel on No.16 panel, use A screw to lock No.17 panel on No.14 panel.

Step 14

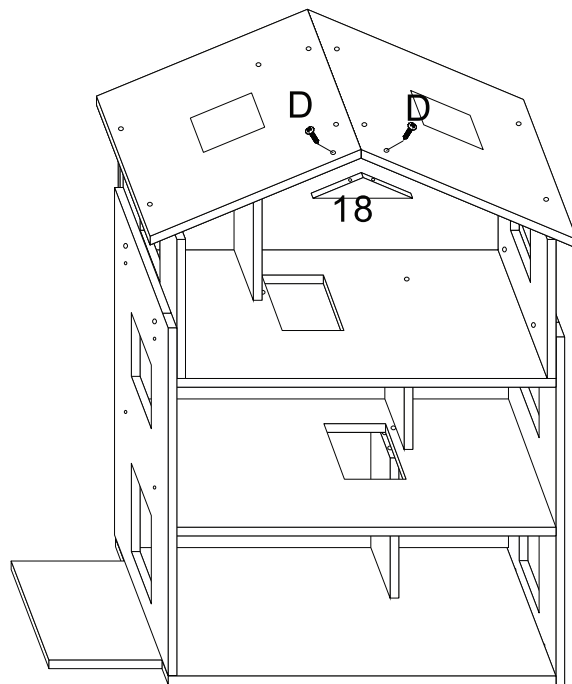


Use D screw to lock No.18 panel on No.15 and 17 panel.

Step 15

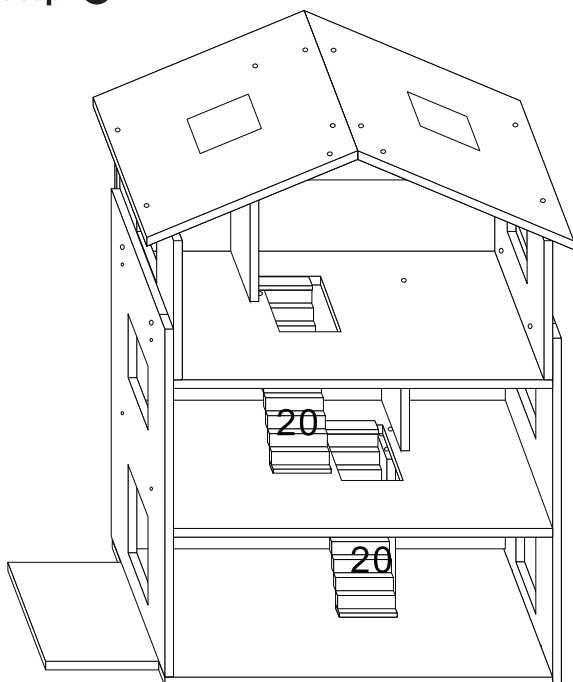

Put No.20(downstair) 2pcs.

Step 16

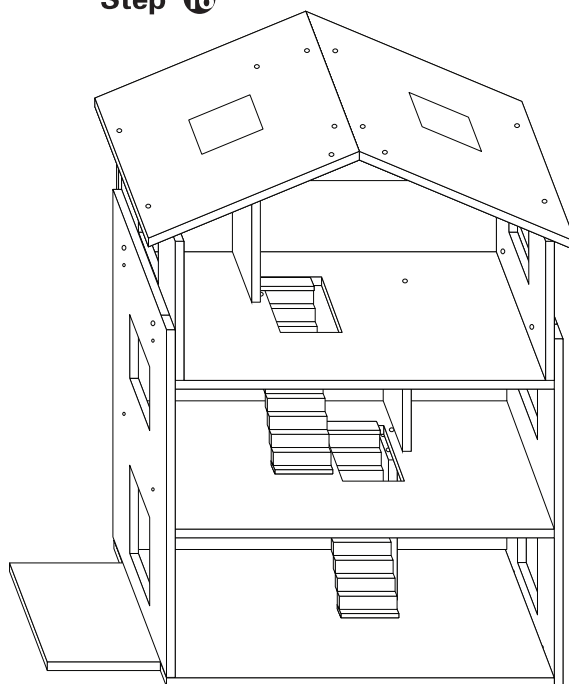

Finish the product assembly.
Attention: according to your taste,
put all furnitures in doll house.