


# Mia Daybed & Drw. White

Assembly Instructions - Please keep for future reference

8042572

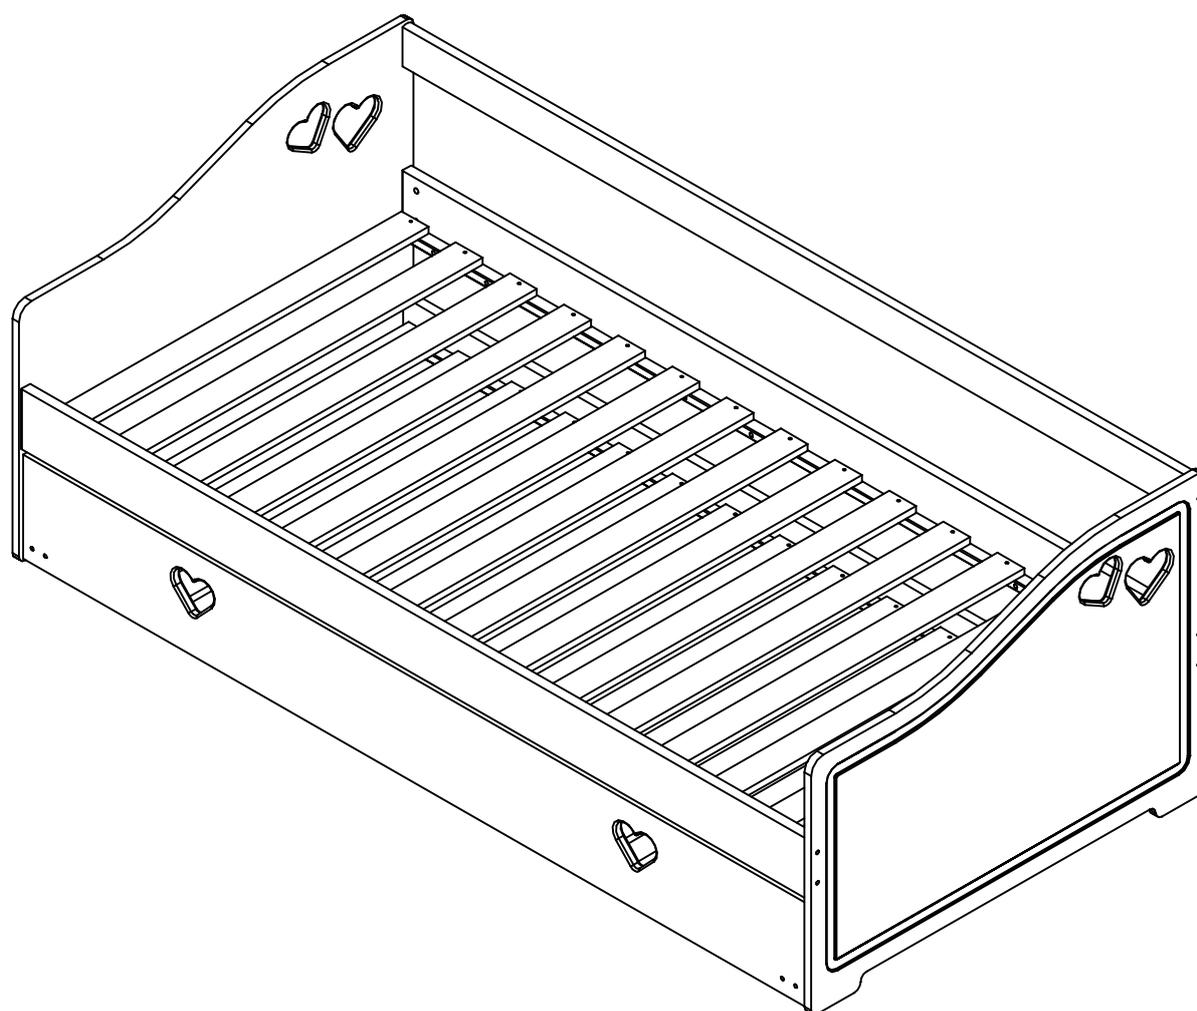

## Dimensions

Length - 193,2cm

Depth - 95,4cm

Height - 68cm

Weight - 47,3kg

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline:**

**0045 7668 8055** or e-mail: [order@flexa.dk](mailto:order@flexa.dk)



# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

80-27904-20      Singlebed

## IMPORTANT! KEEP FOR FUTURE REFERENCE

PLEASE DISPOSE OF PACKAGING MATERIAL.  
PLASTIC BAGS CAN BE DANGEROUS TO YOUNG CHILDREN

**WARNING!** Not suitable for children under 4 years.

**WARNING!** Do not place this child's bed near heat sources, windows and other furniture.

**WARNING!** Do not use this child's bed if any of the parts are broken, torn or missing.

**WARNING!** Once assembled, this bed must not be disassembled. Screws must not be removed once inserted.

This child's bed is to be used with a 1900mm x 900mm mattress.

Suitable for over 4 years old to adults.

All assembly fixings should be checked periodically and re-tightened where necessary.

Children are likely to play, bounce, jump and climb on beds, therefore the child's bed should not be placed too close to other furniture or windows, blind cords, curtain pulls or other strings or cords, and should be placed either tight to any wall or have a gap of 300mm between the wall and the side of the bed.

Always place the side of the bed with the safety rail against a wall.

Any additional or replacement parts should only be obtained from the manufacturer or distributor.

This product complies to standard BS8509: 2008+A1:2011

## WARNING

**YOUR CHILDREN'S SAFETY  
IS YOUR RESPONSIBILITY**

### CARE AND MAINTENANCE

To clean use a damp cloth, avoiding the use of strong detergents or abrasives.



# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

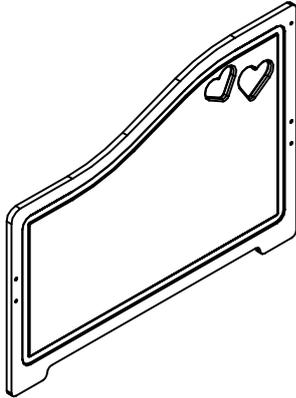


**1** End panel Right x1  
(95,4x68,0x1,6cm)  
No. 4301-1609541-40

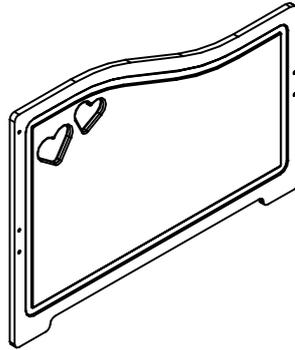


**2** End panel Left x1  
(95,4x68,0x1,6cm)  
No. 4301-1609542-40

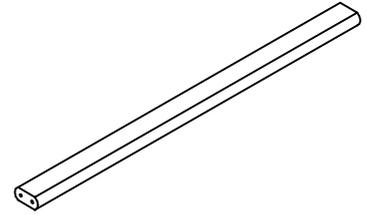


**3** Distance piece x2  
(90,0x6,5x3,1cm)  
No. 12-03109001

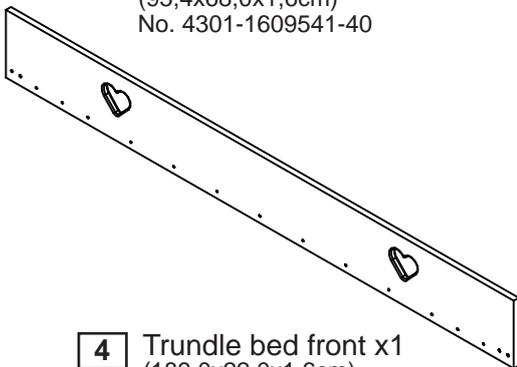


**4** Trundle bed front x1  
(189,0x22,0x1,6cm)  
No. 4301-1618901-40

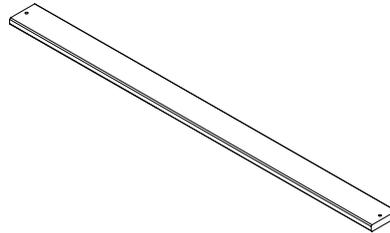


**5** Slat x28 (89,7x6,5x1,5cm)  
No. 12-01508971

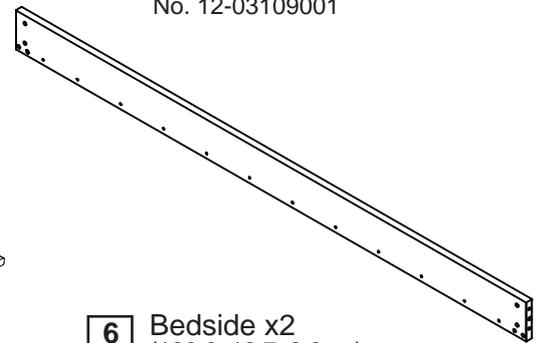


**6** Bedside x2  
(190,0x12,7x2,2cm)  
No. 4301-2219001-40

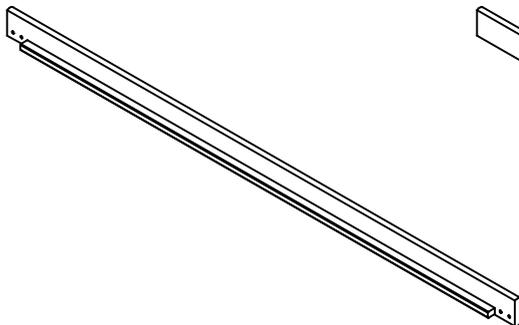


**7** Trundle back x1  
(189,0x8,9x2,0cm)  
No. 1331-18901

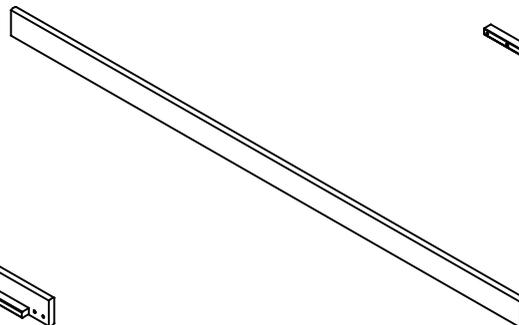

**8** Back rail x1  
(190,0x8,9x2,0cm)  
No. 12-02019002-40

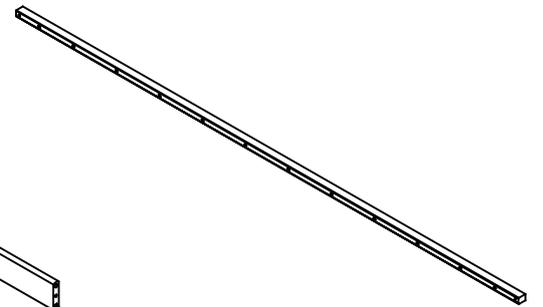

**9** List x2  
(187,0x2,6x2,0cm)  
No. 12-02018704



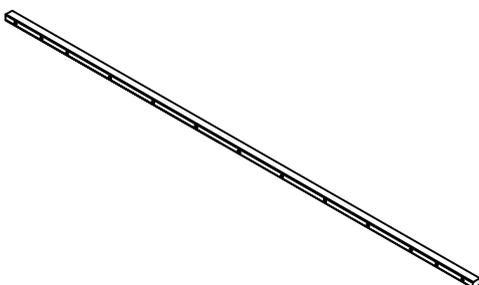


**10** List x1  
(174,0x2,6x2,0cm)  
No. 12-02017402

# Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

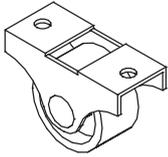
<p><b>A</b>  No. 3913-06070 M6x70mm Connecting bolt x10</p>	<p><b>B</b>  No. 3922-06014 M6 ø10x14mm Barrel nut x10</p>	<p><b>C</b>  No. 3901-40030 4,0x30mm Chipboard screw x56</p>
<p><b>D</b>  No. 3901-45040 4,5x40mm Chipboard screw x4</p>	<p><b>E</b>  No. 3902-35016 3,5x16mm Chipboard screw x8</p>	<p><b>F</b>  No. 3908-70040 7,0x40mm Confirmat screw x37</p>
<p><b>G</b>  No. 3909-63060 6,3x60mm Assembly screw x8</p>	<p><b>H</b>  No. 3930-10040 10x40mm Dowel x8</p>	<p><b>i</b>  No. 4005-034 ø14mm Felt pad x4</p>
<p><b>J</b>  No. 4003-002 ø26mm Castor x4</p>		

## Tools required


Phillips  
screwdriver  
(medium)



Flatblade  
screwdriver  
(medium)




Allen key  
4mm incl.  
No. 4033-002

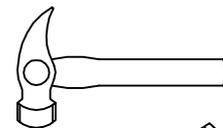

Small  
hammer



Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)


# Assembly Instructions

## Step 1

Insert the dowels **H** into the holes in bed sides **6** and back rail **8**.

It may be necessary to tap the dowels in very gently with a small hammer.


Attach the lists **9** to the bed sides **6** using screws **F** and **D**.

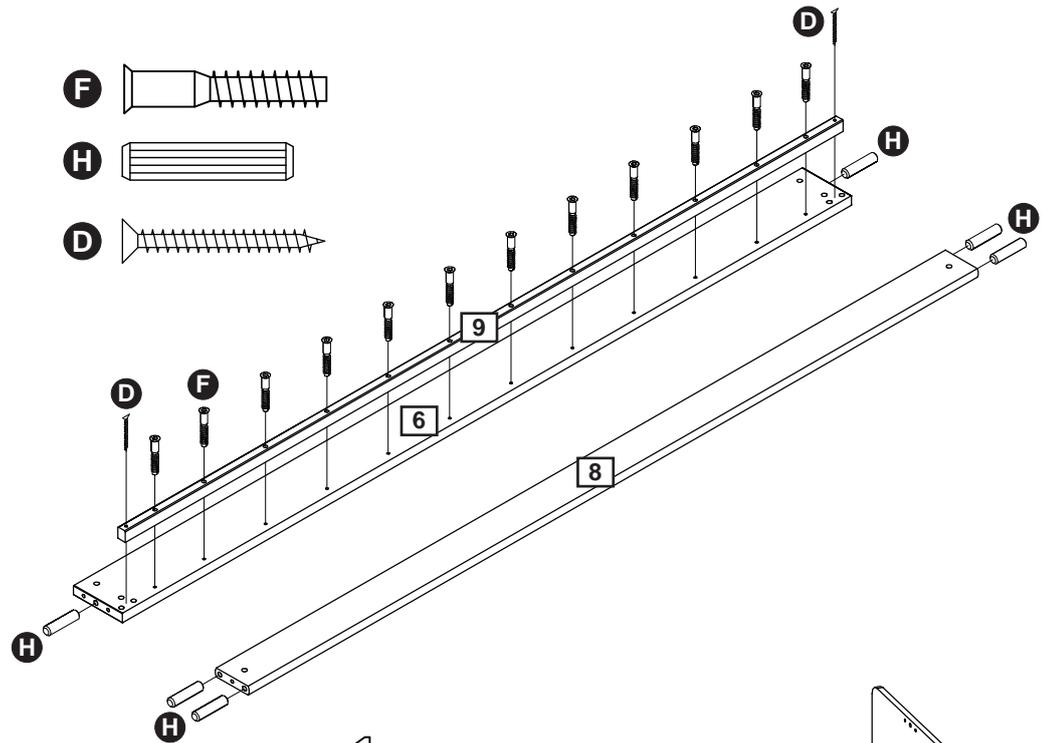

## Step 2

Attach the bedside **6** and back rail **8** to the endpanels **1** and **2** by placing the dowels into the holes in the end panels.


Insert barrel nuts **B** into the holes in bedside **6** and back rail **8**. Attach endpanels **1** and **2** using bolts **A**. Note that the holes for the barrel nuts on the back rail should be facing out.

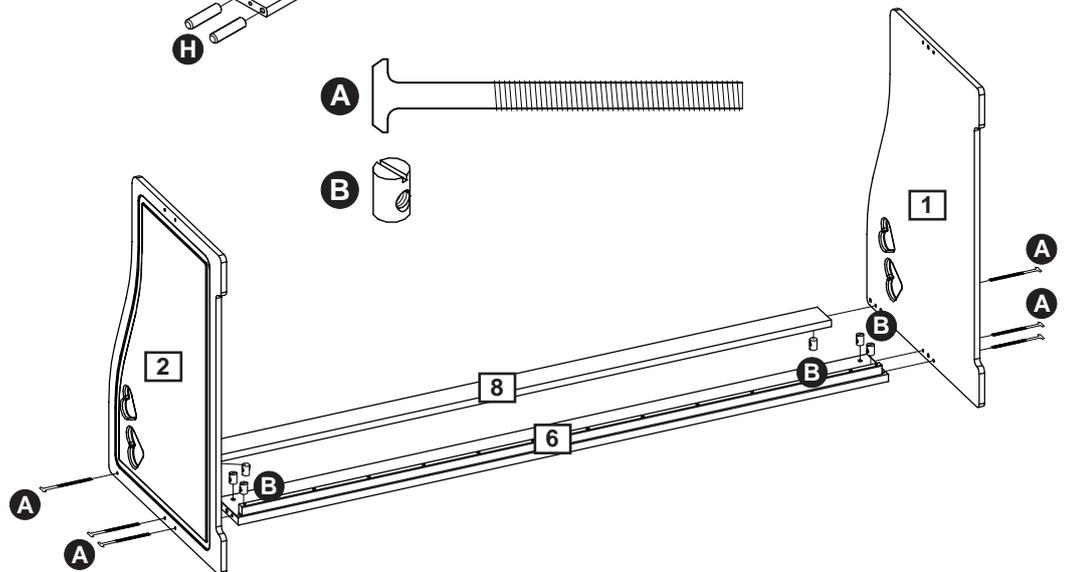

## Step 3

Attach the second bedside **6** to the endpanels **1** and **2** by placing the dowels into the holes in the end panels.

Insert barrel nuts **B** into the holes in bedside **6**. Attach endpanels **1** and **2** using bolts **A**.

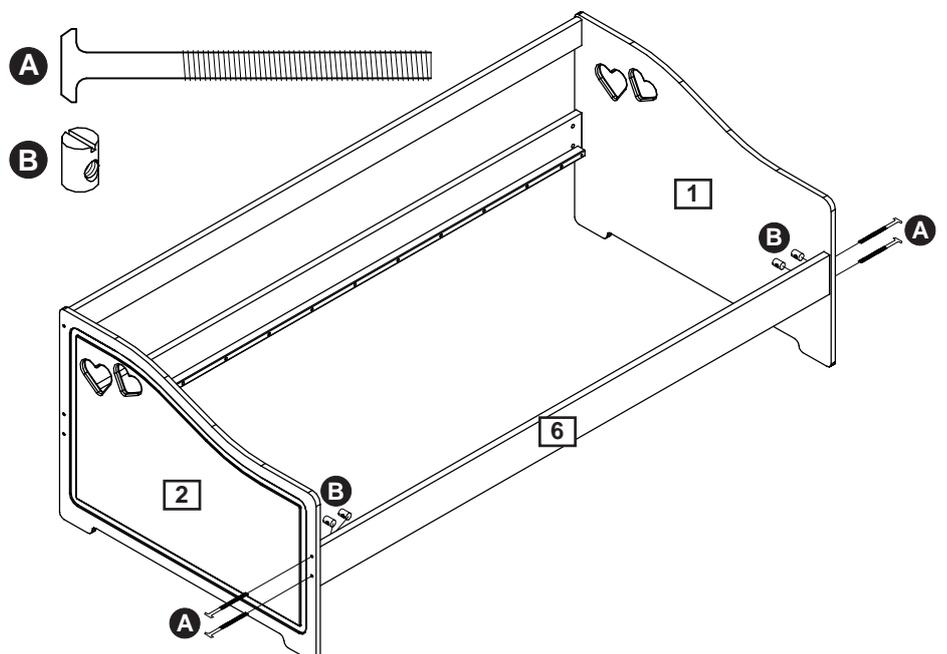


# Assembly Instructions

## Step 4

Place two slats **5** in the ends of the bed, against the end panels. Fasten with four chipboard screws **C**.

Place one slat **5** in the middle of the bed. Follow the measurements.


Push the bedsides **6** together whilst attaching middle slat **5** to the bed with two chipboard screws **C**.

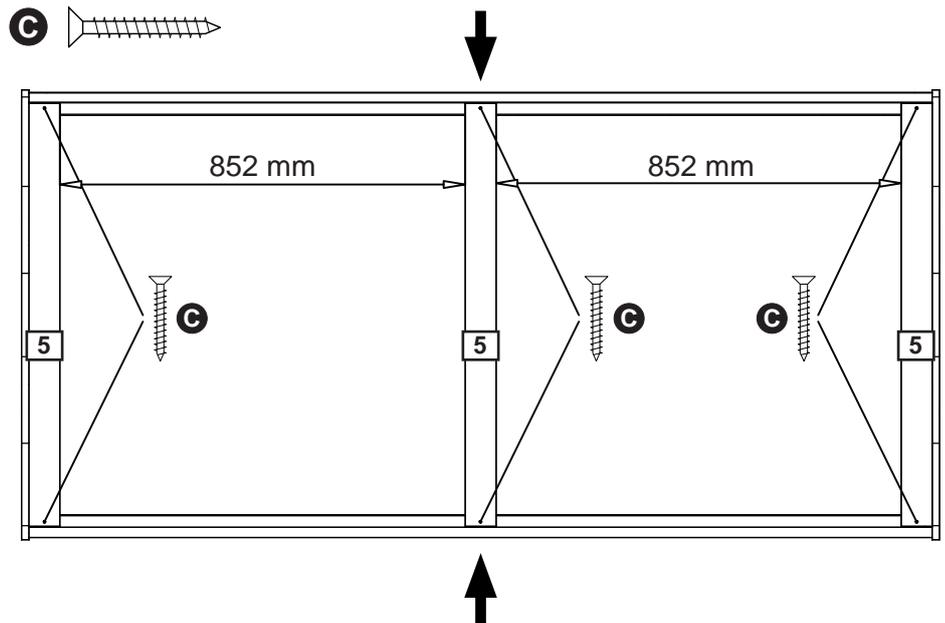

## Step 5

Position the remaining twelve slats **5** in the bed with an approximate distance of 66 mm between each.


Fasten each slat with two screws **C**.

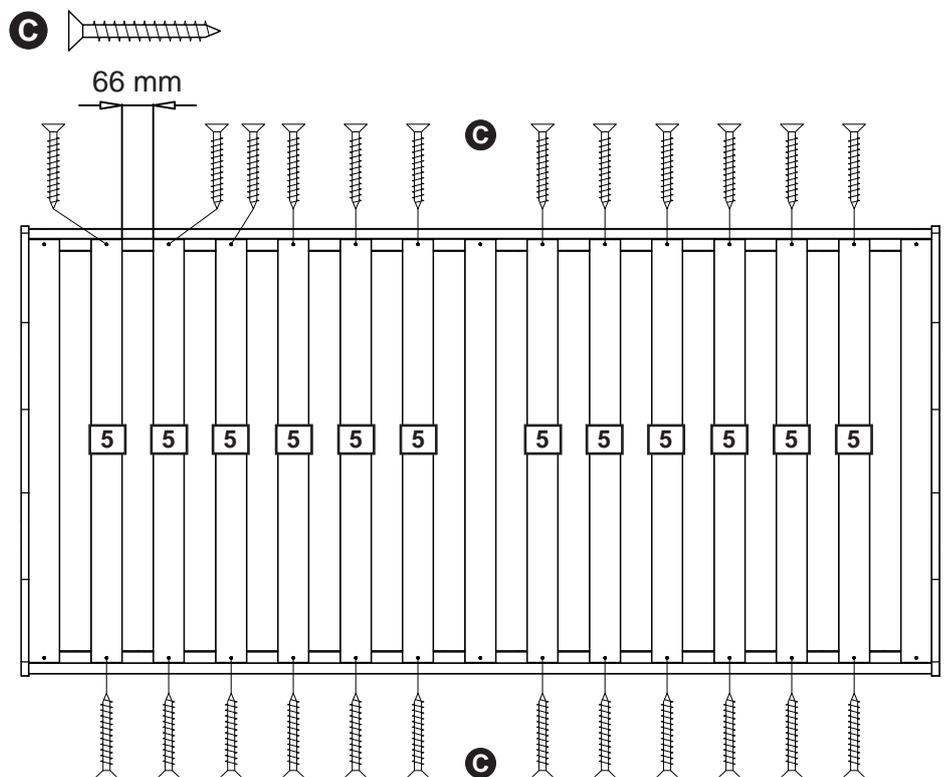

# Assembly Instructions

## Step 6


Attach the list **10** to the trundle front **4** using screws **F**.

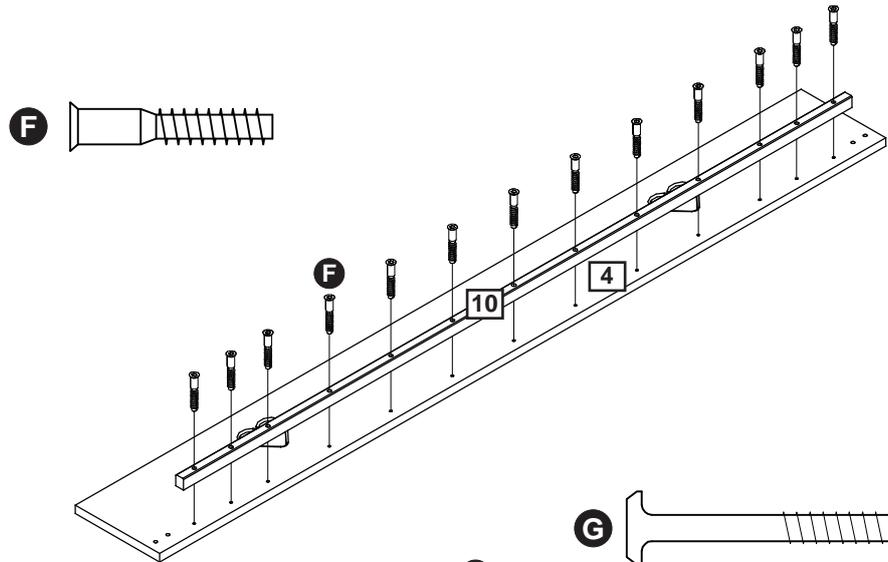

## Step 7


Attach the trundle front **4** and back **7** to the distance pieces **3** using screws **G**.

Place felt pads **i** to the ends of the trundle back **7**.

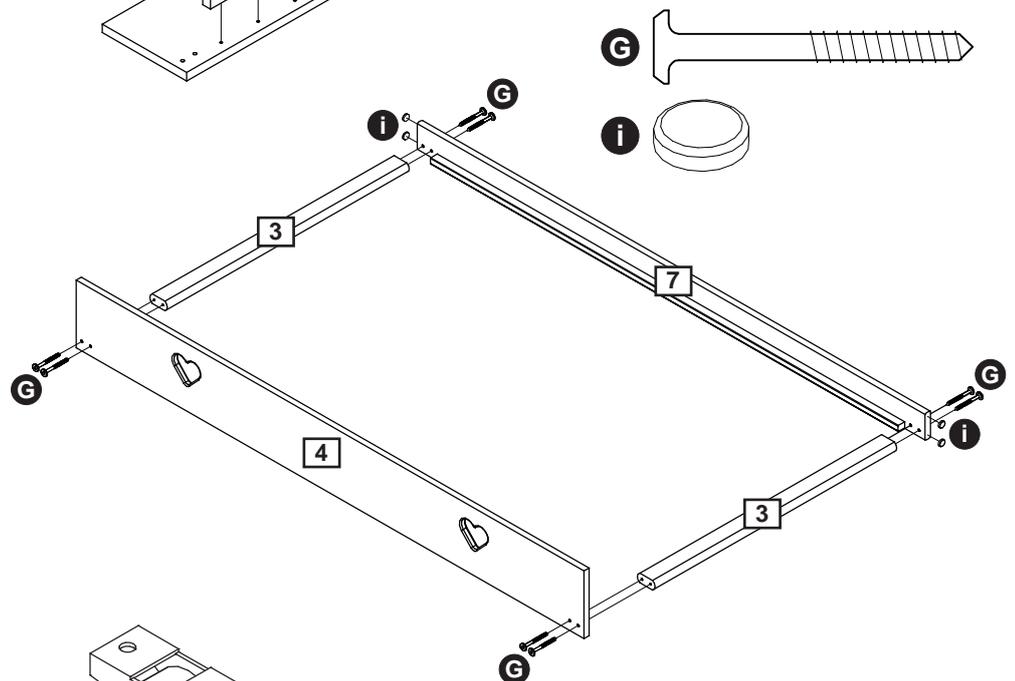

## Step 8

Attach castors **J** to the distance pieces **3** using screws **E**.

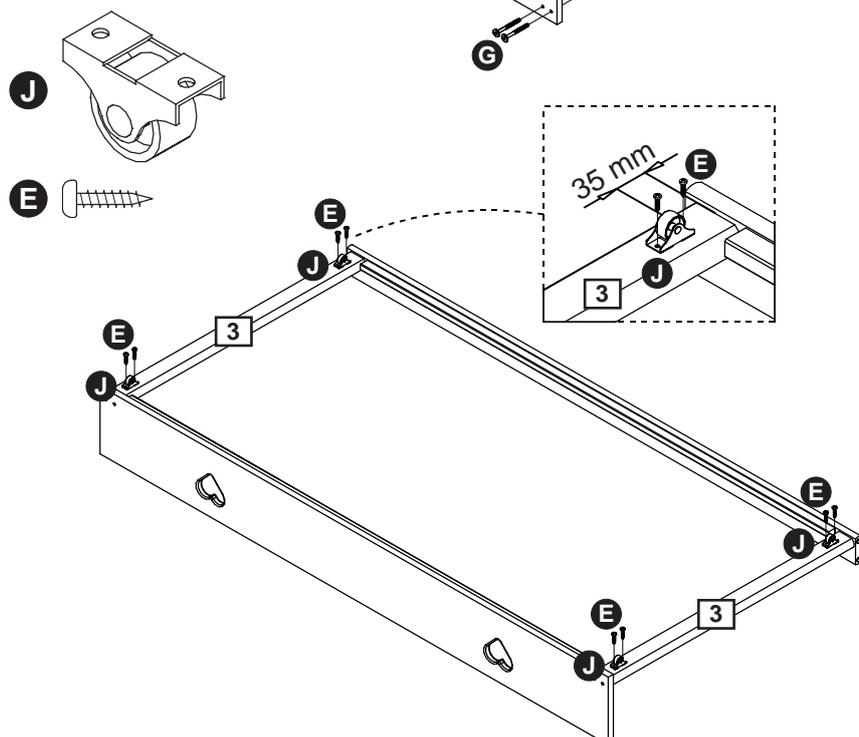


# Assembly Instructions

## Step 9

Position slats **5** in the bed with an approximate distance of 64 mm between each and 130mm from the edge of the distance piece **3**.

Fasten each slat with two screws **C**

**Assembly is complete.**

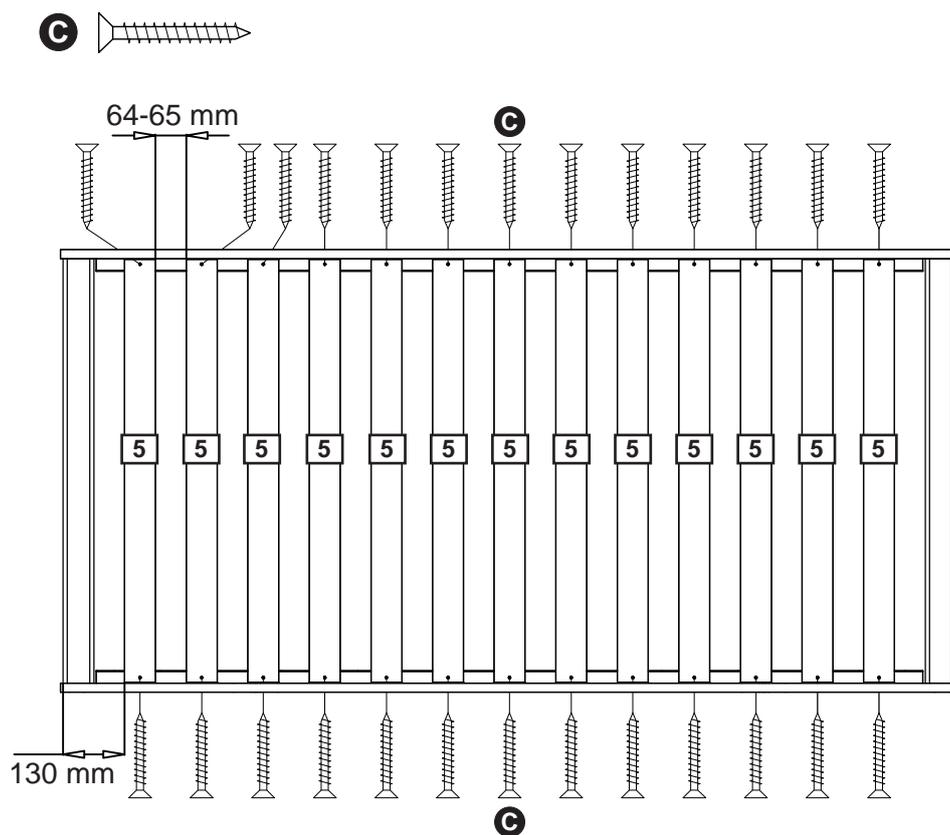

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**  
E-mail: [order@flexa.dk](mailto:order@flexa.dk)