

Love Your Divan

Care Instructions



Please retain this leaflet for future reference




DOUBLE DIVAN ASSEMBLY

In the case of double divans, the two parts of the bed need to be properly attached so that they do not move apart. Depending on the model you have, you will have a set of one of the following items in the bag with the castors/glides.


Either

Plastic "U" clips

1. Stand the two divan halves on their sides and push together.

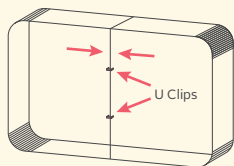


2. Line up the undersides and attach "U" clips as shown.

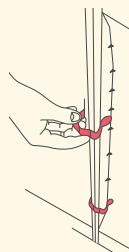


Or

Metal Linking Plates


1. Remove the bolts from each divan half.

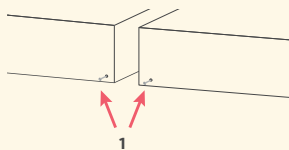

2. Push the two base halves together.



3. Locate a link plate over one bolt hole on one of the divan halves. Then insert the bolt through the link plate into the bolt hole and tighten the bolt.
4. Locate a link plate over the second bolt hole on the second divan half and tighten the second bolt. Repeat operation for the other side.

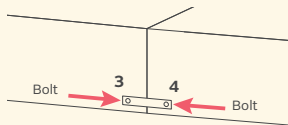


CASTORS, GLIDES & FEET

Please read the instructions contained in this leaflet carefully to ensure your bed sits evenly and remains stable.

All components in the fixing bags need to be fitted to the underside of your divan base. Depending on the model, you will have one of the following sets:

- Castors with metal stems
- Glides with metal stems
- Screw fix glide
- Plastic feet

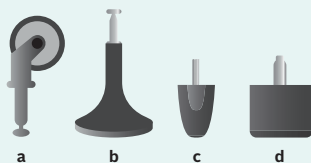

Castor or Glide Fittings


Insert a castor (a) / glide (b) into each socket (1) and gently tap into place using a mallet. It must be fully inserted (2) or it may fall out when the divan base is turned over. When fully inserted it will be hard to pull back out again as the lug on the stem shown in the diagram clicks past the corresponding narrow part of the socket.

Some Divan Bases may have a screw fix glide (c), simply locate the fixing holes in the underside of the divan base, insert the glides into each location and screw clockwise to tighten (be careful not to over tighten).

Plastic Feet

Where plastic feet (d) are supplied the insertion locations are marked with a sticker. Remove the sticker and insert the plastic foot in the hole found underneath, (these are inserted directly into the wooden frame as no metal sockets are required) and gently tap into place using a mallet.

Note: Do not use a metal hammer to insert the castors, glides or plastic feet, as this will damage them.

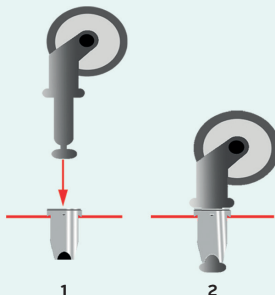

DIVAN BASE CARE

Remove all plastic packaging, and dispose of it safely. To avoid the risk of suffocation, keep all plastic away from children.

Drawers

Please do not overload the drawers. The drawers in storage divans have been designed primarily to hold bed linen, clothing etc and have a limit of 15kg per drawer.

Excessive weight can cause distortion or damage to the drawer which in turn can restrict its free movement, whilst over-filling may cause it to jam.

Maintenance

Regular checks of headboards, castors or legs are recommended as they stand considerable strain and may work loose. Make sure castors run freely and we recommend you protect your carpet or floor surfaces where the legs/castors make contact.


Cleaning

In the event of soiling, the divan may be lightly sponged with a weak solution of soap and water.

Never use detergents or chemical cleaners on your divan fabric. These can adversely affect the covering material.

Headboard Attachment

1. Locate the headboard fixing holes (found at either end) marked with a sticker and carefully pierce the fabric with scissors.
2. Insert the headboard bolt through the plastic washer into the hole and loosely tighten allowing space to slide the headboard strut between. Once the headboard is in position, fully tighten the bolt, but do not over tighten.

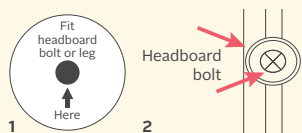

For details of the 12 month warranty please refer to the mattress care instructions.

Airsprung Beds, Canal Road, Trowbridge, Wiltshire, BA14 8RQ

OK754H

