


HYGENA GRANITE TOP KITCHEN TROLLEY

Assembly Instructions - Please keep for future reference

842/6404

hygena

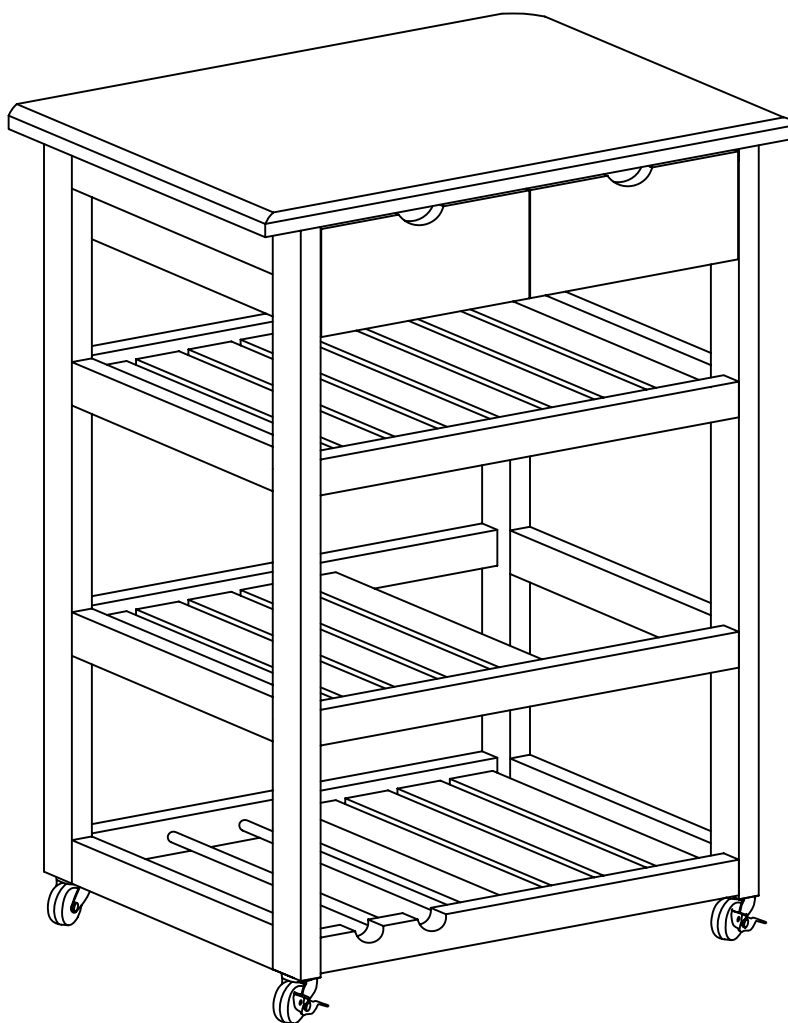

Dimensions

Width - 49cm
Depth - 40cm
Height - 79.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws.**

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components

If you have damaged or missing components,
call the **Customer Helpline:08456 400800**


Please check you have all the components listed below

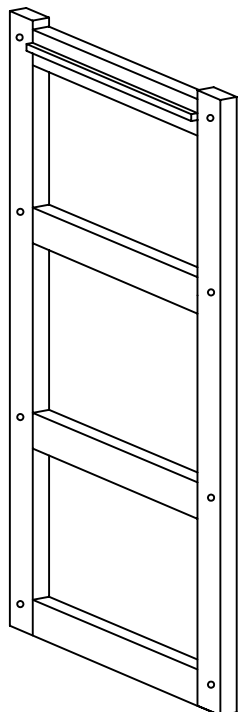


1 Side frame x 2
(71.5 x 37cm)

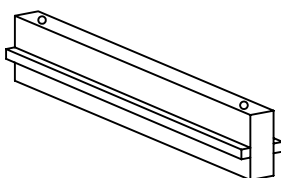


4 Middle drawer divider
(33 x 4cm)

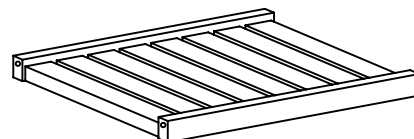


8 The 1st tier
(35.6 x 36cm)

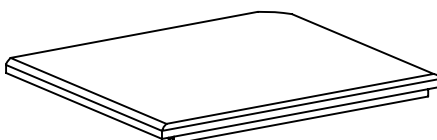


5 Top
(49 x 40cm)

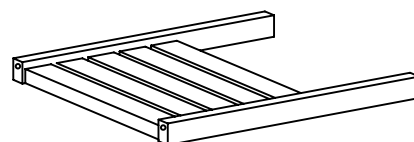


9 The 2nd tier
(35.6 x 36cm)

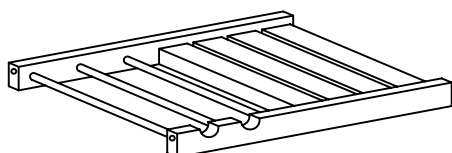


2 The 3rd tier
(35.6 x 36cm)

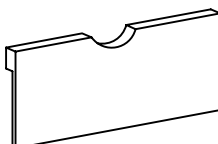


6 Left drawer front
(17.6 x 9cm)

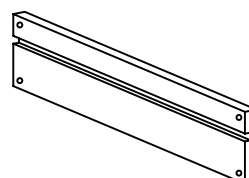

10 Left & right drawer sides x 4
(34 x 7cm)

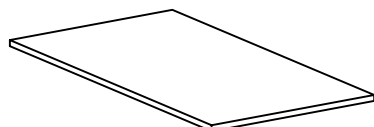

3 Drawer base x 2
(32.3 x 14.5cm)

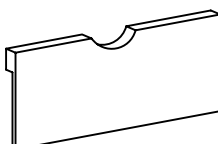

7 Right drawer front
(17.6 x 9cm)











11 Drawer back x 2
(13.7 x 7cm)



Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

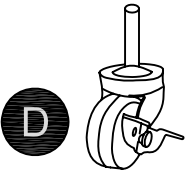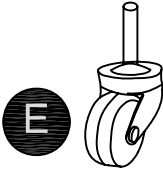 <p>A</p> <p>Metal screw x 16 pcs: 65mm</p>	 <p>B</p> <p>Metal screw x 16 pcs: 25mm</p>	 <p>C</p> <p>The plastic stopper x 2 pcs</p>
 <p>D</p> <p>Castor with stopper x 2 pcs</p>	 <p>E</p> <p>Castor without stopper x 2 pcs</p>	 <p>F</p> <p>Metal screw x 2 pcs: 40mm</p>
 <p>G</p> <p>Allen Key x 1 pc</p>	 <p>H</p> <p>Metal screw for the plastic stopper x 2 pcs: 10mm</p>	

Tools required



Phillips screwdriver
(medium & large)




Ruler/tape
measure



Flatblade screwdriver
(medium)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Attaching side frame

a: Lay down side frame **1**, screw the 3rd tier **2**, the 1st tier **8** and the 2nd tier **9** one by one using screw **A** and allen key **G**

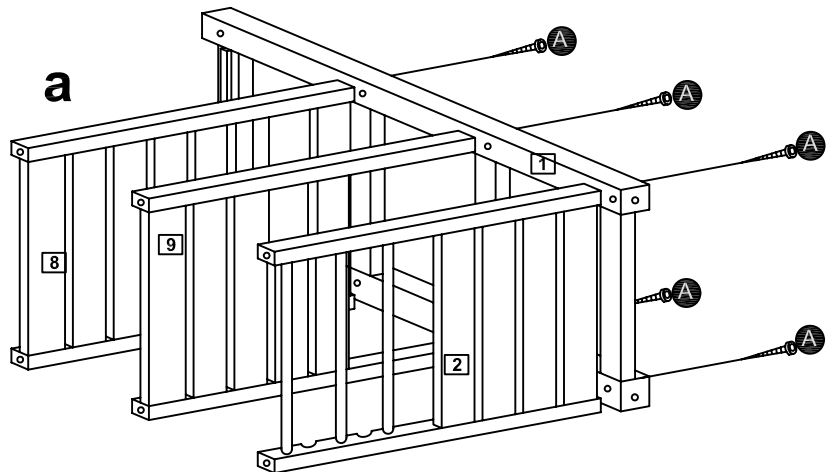

b: Repeat with right side frame **1**

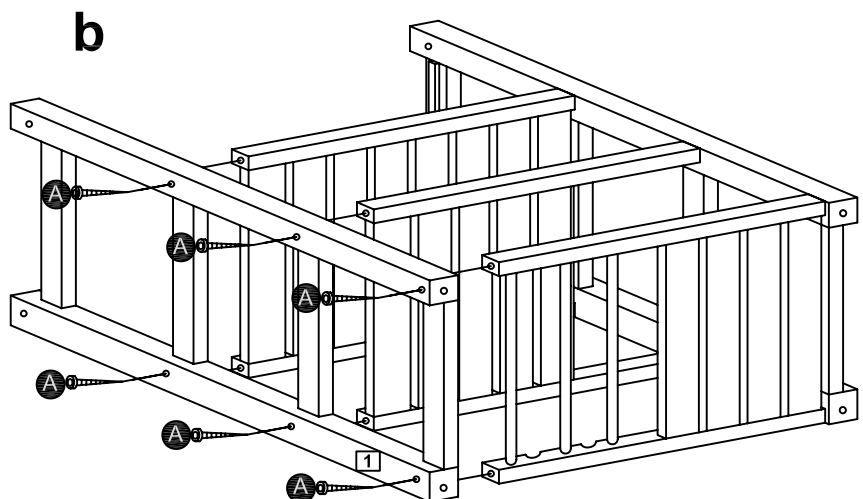


Assembly Instructions

Step 2

Attaching castors


Upside down the trolley, insert castors **D** & **E** into underside of frame **1** as shown

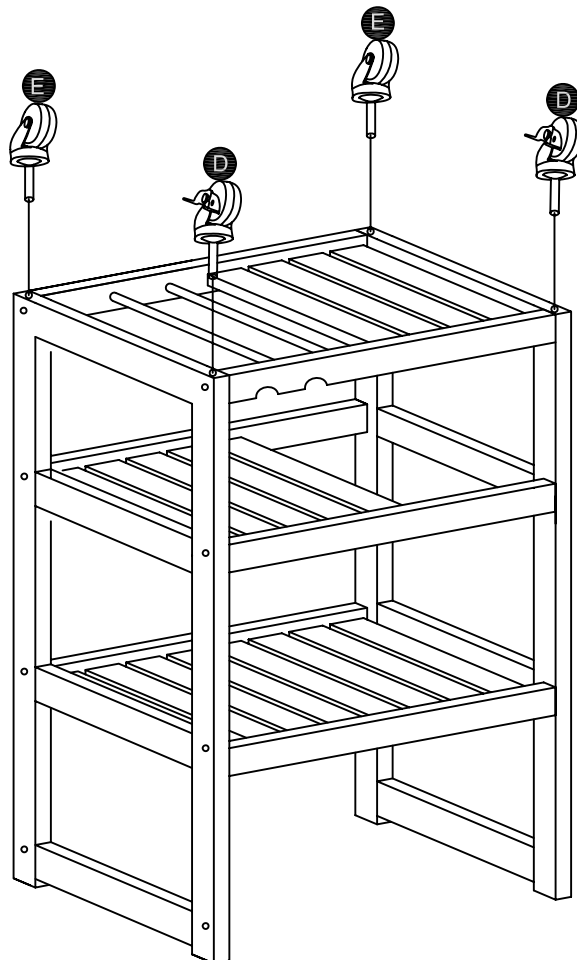

Step 3


Attaching top panel

a: Attach plastic stopper **C** to top panel **5** using screw **H**

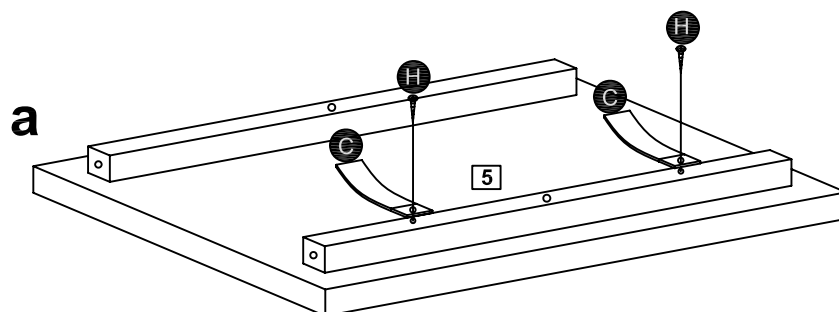


Assembly Instructions

b: Screw middle drawer divider [4] into top panel [5] using screw [F]

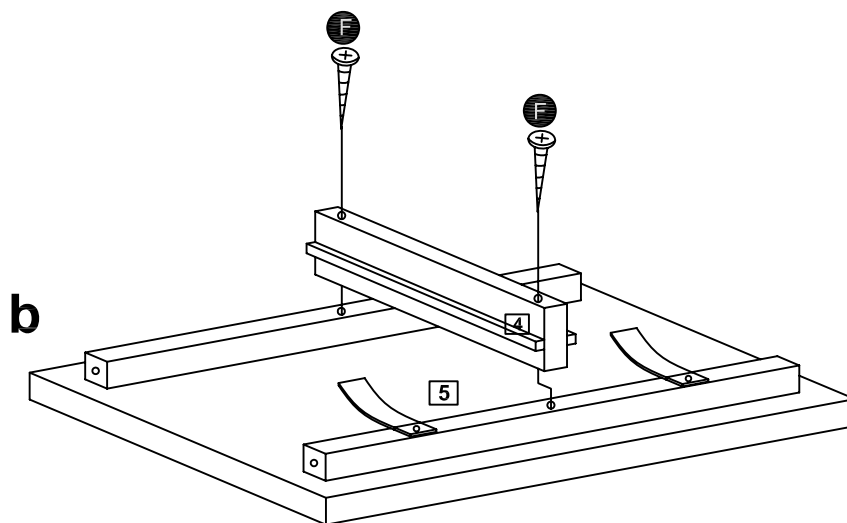

c: Position top panel [5] as shown, screw them using screw [A] and allen key [G]

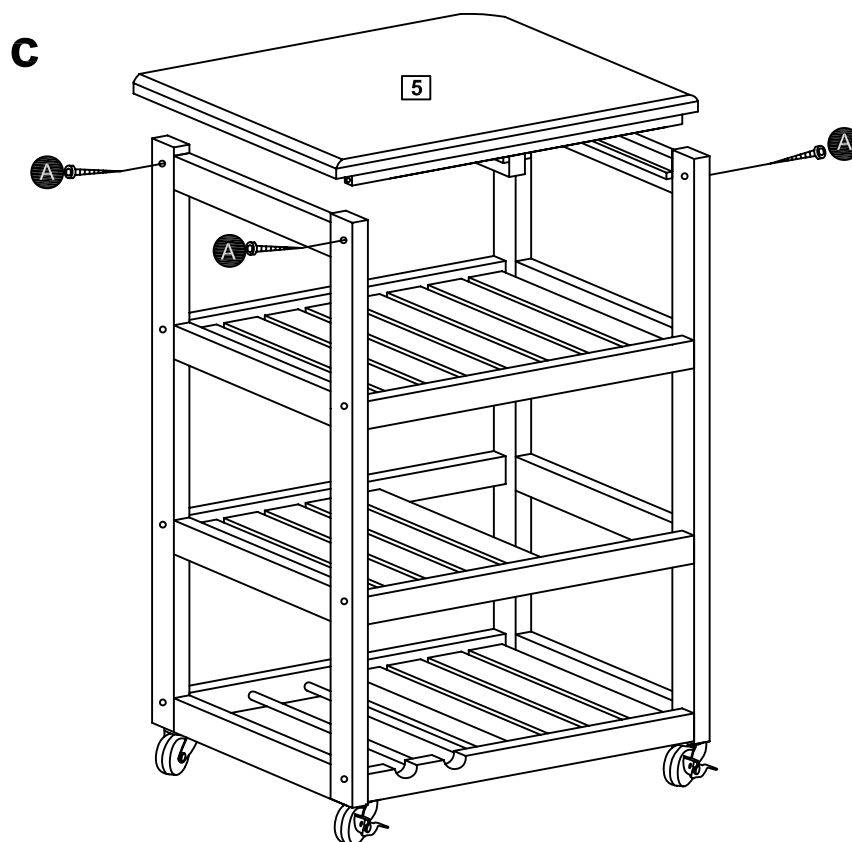


Assembly Instructions


Step 4

Drawer assembly


a: Fix drawer sides **10** to drawer back **11** using screw **B**

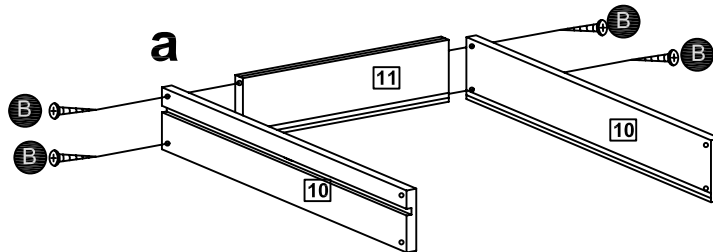


b: Slide drawer base **3** into the groove

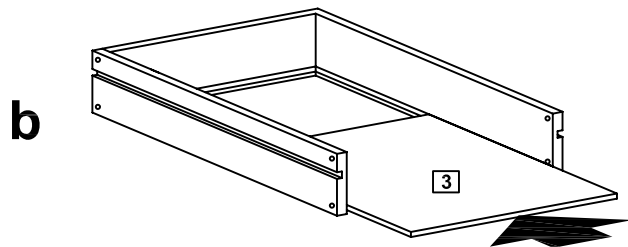

c: Screw right drawer front **7** using screw **B**

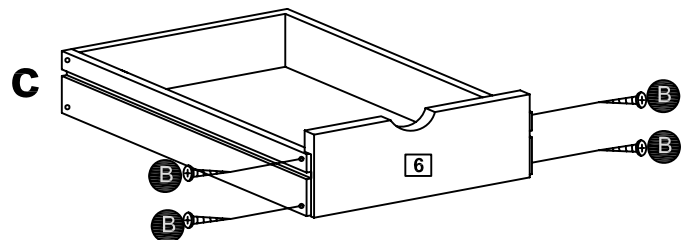

d: Repeat with left drawer

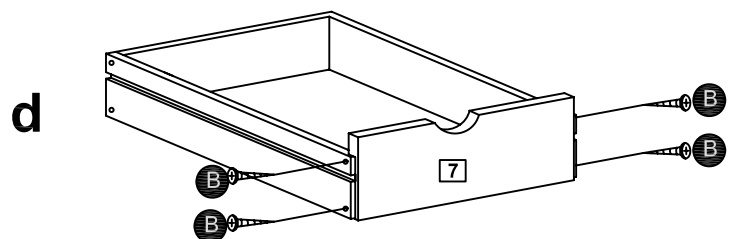

Assembly Instructions

Step 5

Insert drawer into the trolley

