

# LENI METAL STORAGE MIRROR

**Assembly Instructions** - Please keep for future reference

LENI-MR-AW16-A

## Dimensions

Width – 30 cm

Depth – 39 cm

Height – 147.5cm



**Important – Please read these instructions before assembly**

If you need help or have damaged or missing parts, email:  
[customerservices@habitat.co.uk](mailto:customerservices@habitat.co.uk) or call: 0344 499 4686

habitat 




# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

Dust regularly with clean dry cloth.

The use of furniture polishes or sprays is not necessary or recommended.

Wipe mirror occasionally with damp cloth.

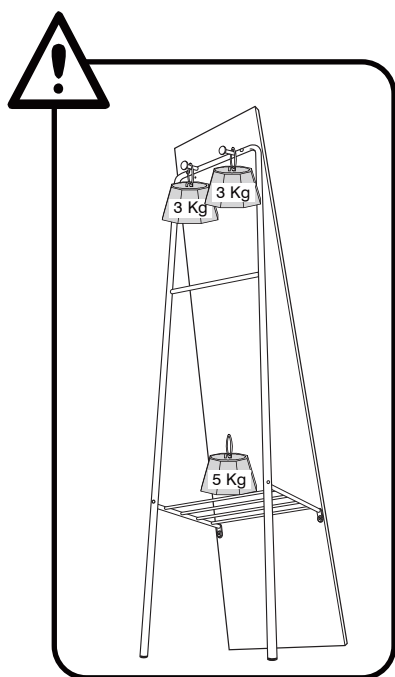

Please take care to distribute weight evenly so as not to accidentally topple mirror.

## General information

If for any reason you should have problems with your Habitat product, please contact the store from which you purchased it.

Please retain your receipt as proof of purchase.

If you have any comments or suggestions regarding this product, assembly instructions or service

received, please contact the store or Habitat Head Office via its web site: [www.habitat.co.uk](http://www.habitat.co.uk)

or write directly to: Habitat Retail Ltd.  
489-499 Avebury Boulevard,  
Milton Keynes MK9 2NW


# Components - Panels

If you need help or have damaged or missing parts, email: [customerservices@habitat.co.uk](mailto:customerservices@habitat.co.uk) or call: 0344 499 4686

Please check you have all the panels listed below




**Note:** There are 'Batch Code' labels where shown on the indicated items, these should be retained.

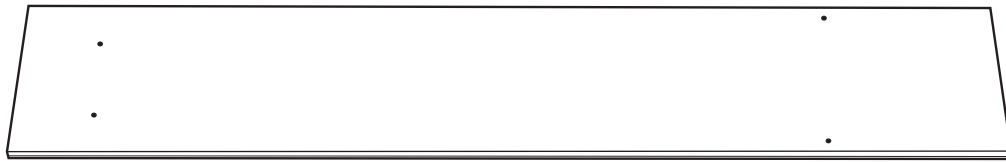


① 1PC



② 1PC



③ 1PC



④ 2PCS




⑤ 2PCS

# Components - Fittings

Please check you have all the fixings listed below

**Note:** The quantities below are the correct amount to complete the assembly.  
In some cases more fittings may be supplied than are required.

**Ruler** – To help correctly identify the fixings



22 mm Allen screws x 6 PCS




15.5 mm Allen screw x 2 PCS



Allen key x 1 PC

# Assembly Instructions


## Step 1




**A x 2 PCS**



**C x 1 PC**

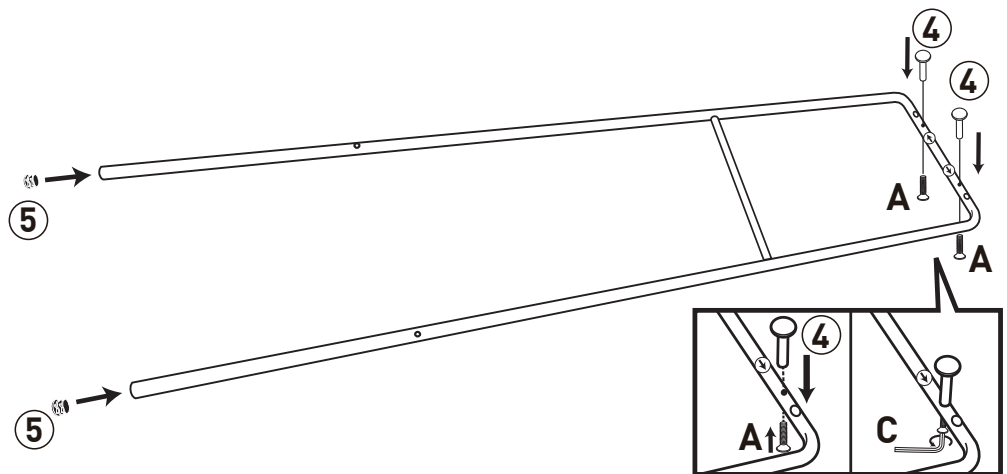


## Step 2




**B x 2 PCS**



**C x 1 PC**

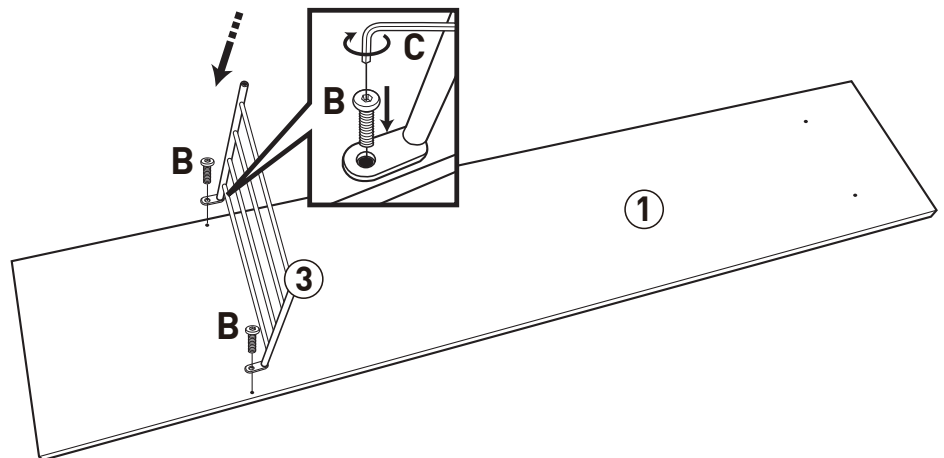


## Step 3



**A x 4 PCS**



**C x 1 PC**

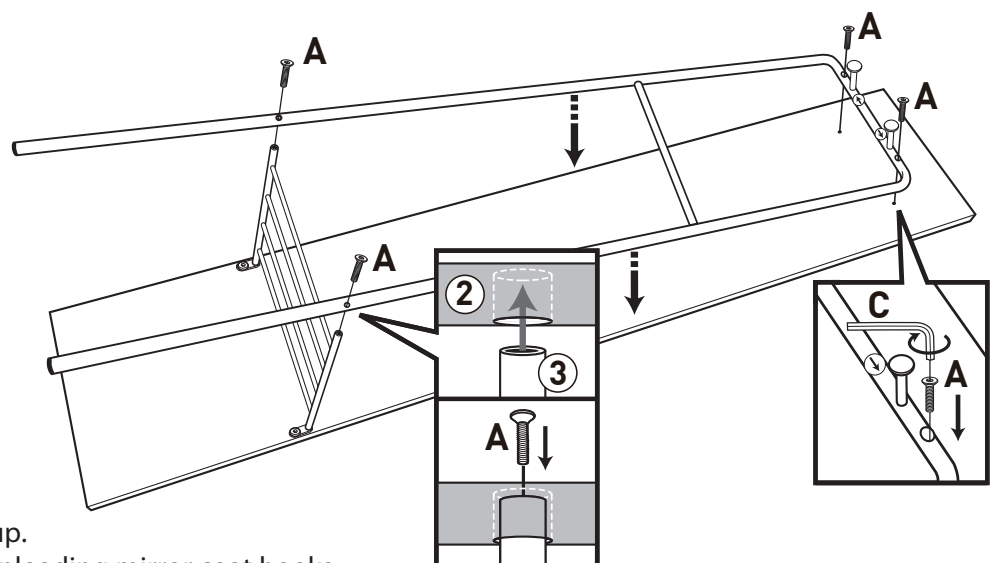

Take care when standing mirror up.  
Always take care when loading/unloading mirror coat hooks.