
FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS

Thank you for purchasing the FINN SLIM BEDSIDE TABLE.
Please read the instructions carefully to ensure safe operation of the product.

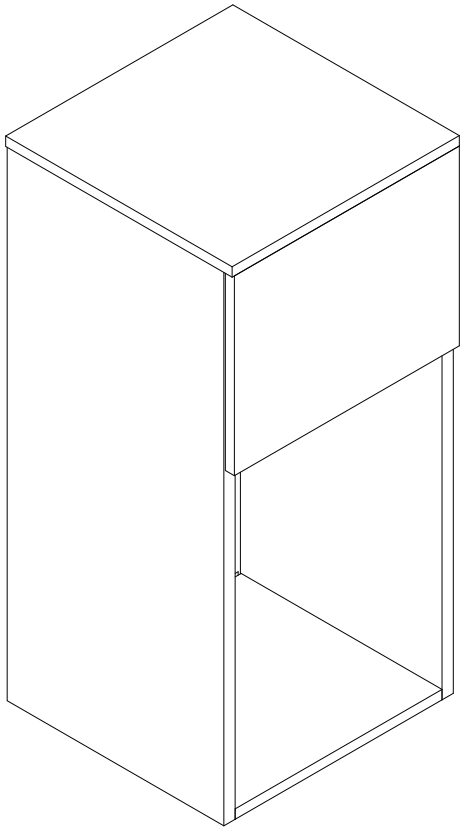


Size:L30x30xH65cm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.


Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required

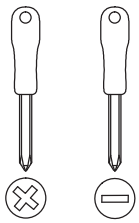





1 Hour
Set Up

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
Check the pack and make sure you have all the parts listed.
Ensure that this product is fully assembled as illustrated before use.
Check all screws or bolts are tightened and inspect regularly
This product should only be used on firm, level ground.
Keep small parts out of reach of children.
Make sure the legs remain in contact with the ground.
Tools not included.

WARNINGS


DO NOT use power tools to construct this product.
DO NOT use this product if parts are missing, damaged or worn.
DO NOT stand on the product.
DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are used to prevent such items damaging your table top
We recommend the use of the wall strap provided for safety reasons. If in doubt please consult a qualified tradesperson.
Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.










FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS

PART LIST

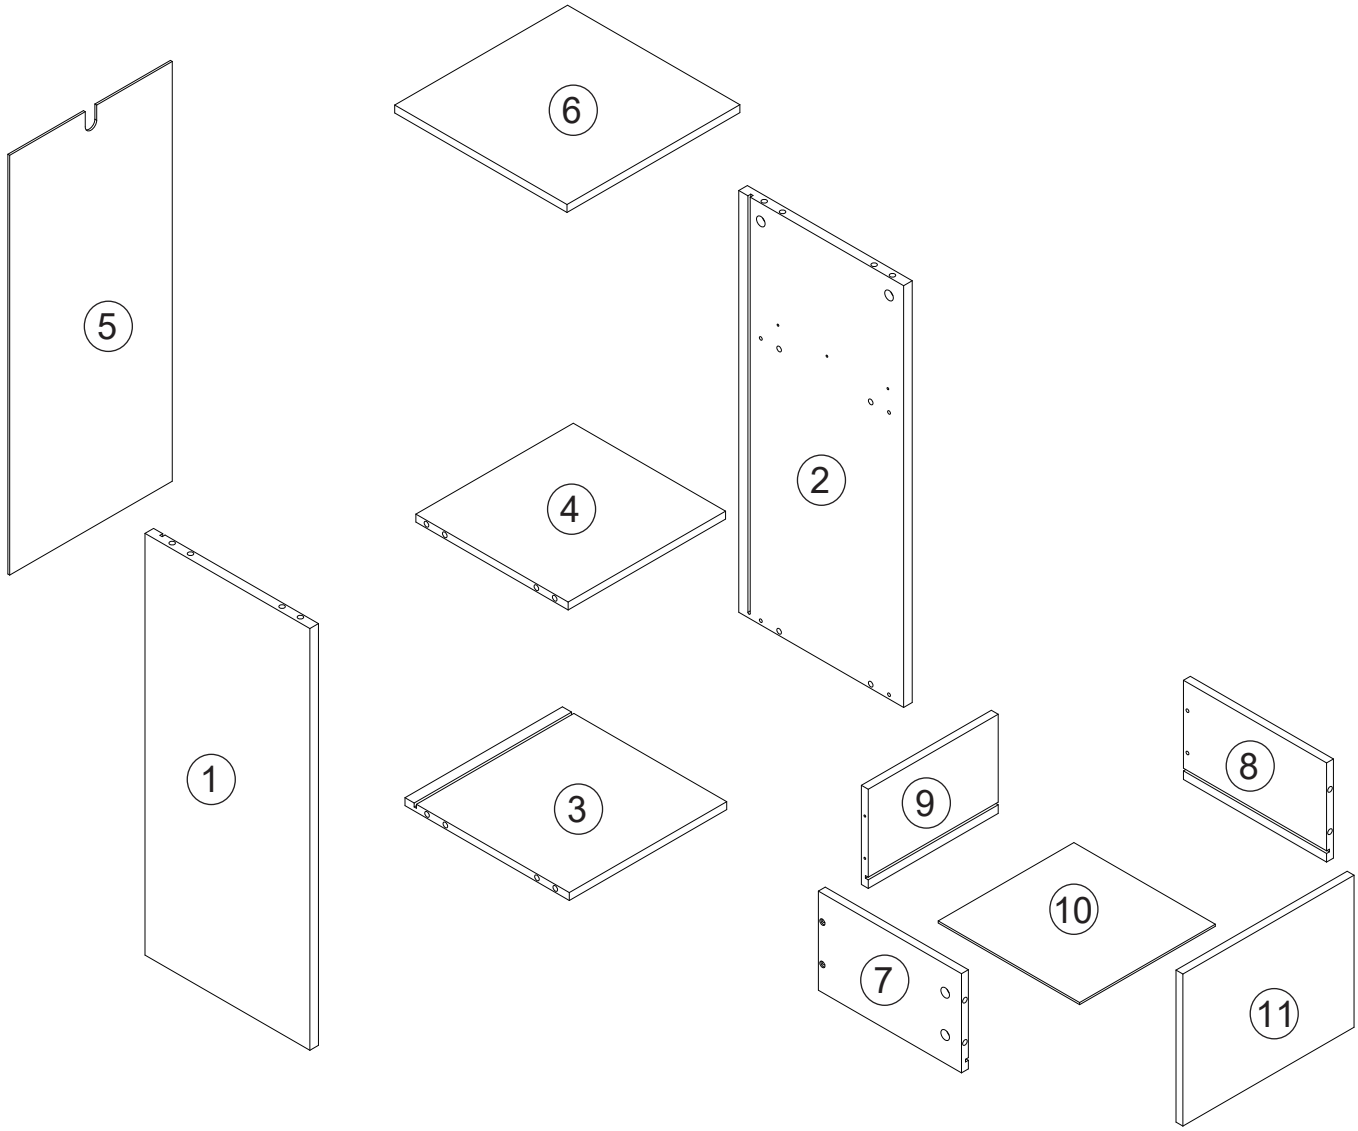












FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS

HARDWARE LIST

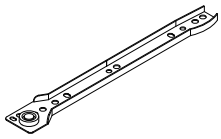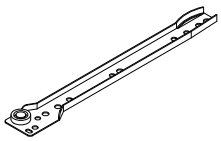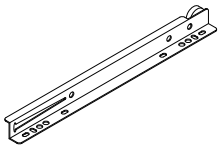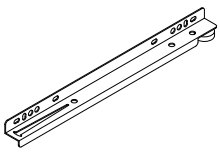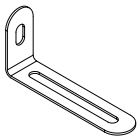
Ax14  Screw M3.5x12mm	Bx12  Wood dowel M6x30mm	Cx16  Cam bolt M6x35mm	Dx16  Cam M15x9.5mm
Ex1  Drawer silder	Fx1  Drawer silder	Gx1  Drawer silder	Hx1  Drawer silder
Jx5  Screw M4x30mm	Kx1  Bracket	Lx1  Wall plug	Mx6  Screw M3x12mm
Nx6  Back clip			

FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS


PART LIST

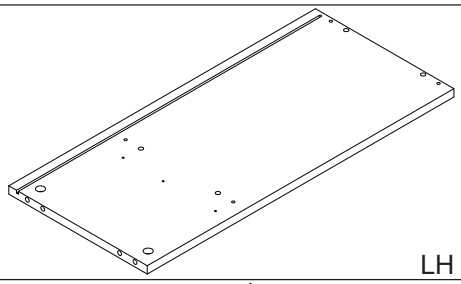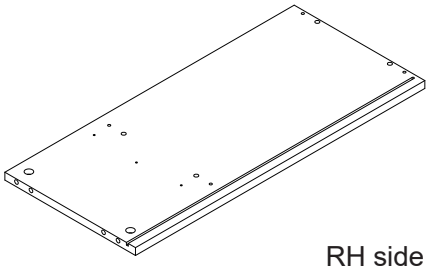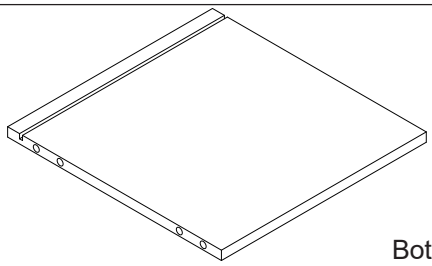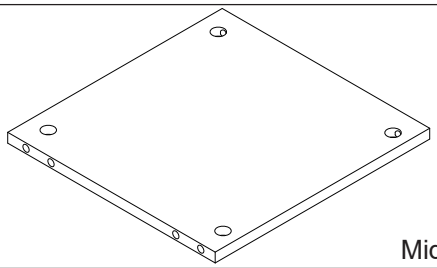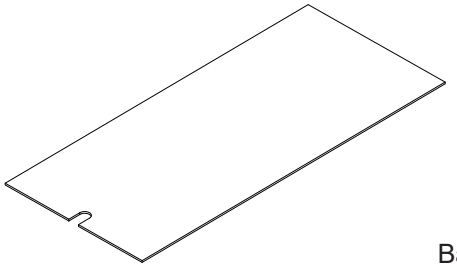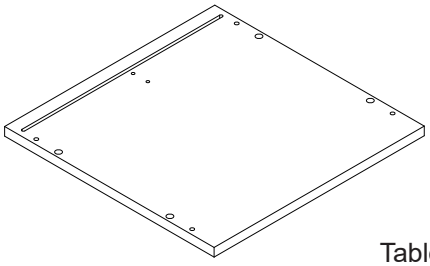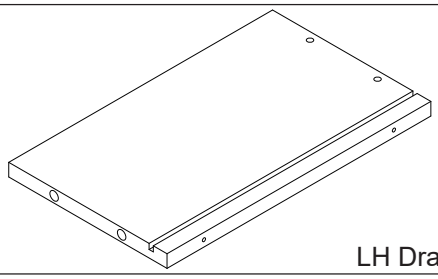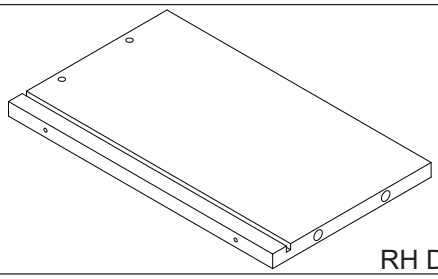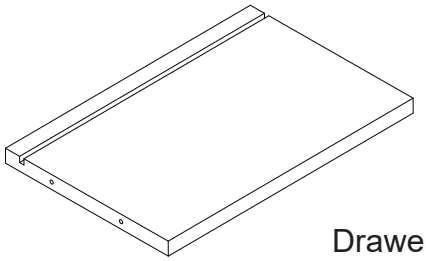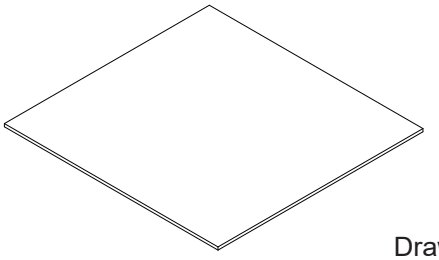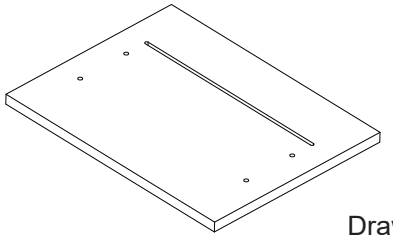① x1  LH side panel	② x1  RH side panel
③ x1  Bottom panel	④ x1  Middle panel
⑤ x1  Back panel	⑥ x1  Table top panel
⑦ x1  LH Drawer side	⑧ x1  RH Drawer side
⑨ x1  Drawer back	⑩ x1  Drawer bottom
⑪ x1  Drawer front	


Instruction For Fastening CAM-BOLT AND CAM-LOCK

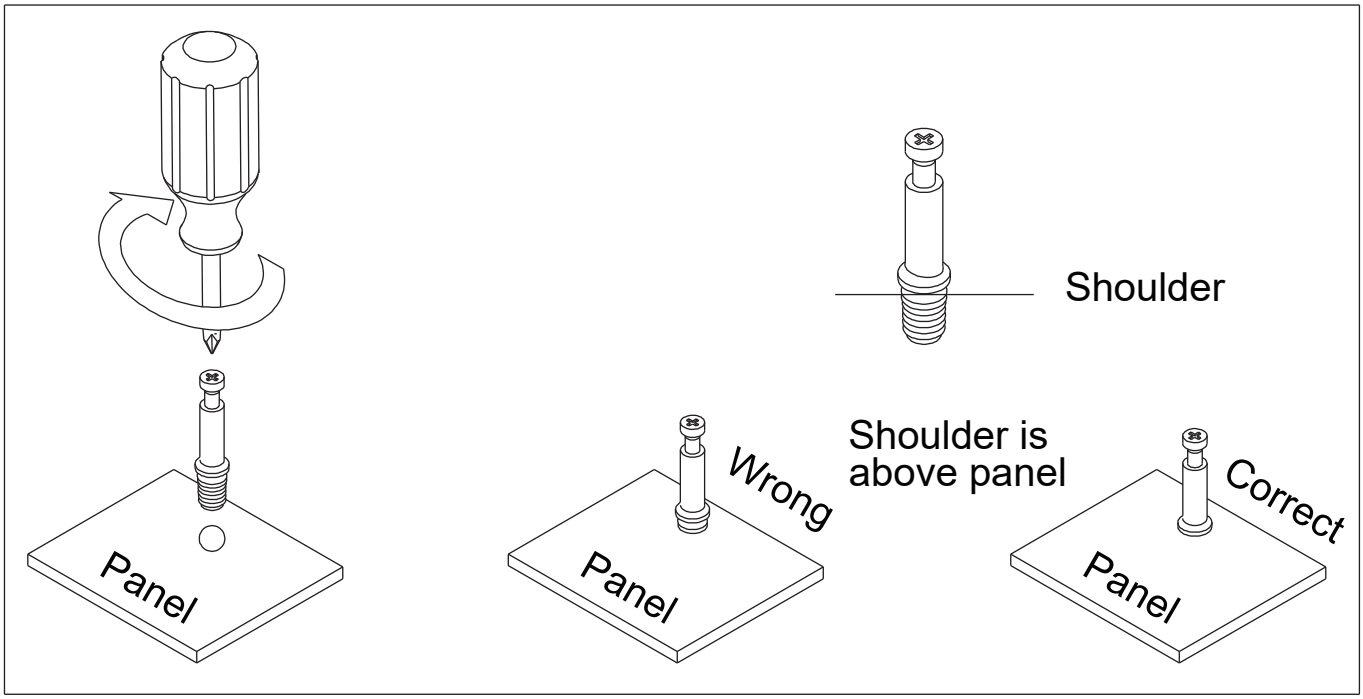

Attach the Cam-bolt to the specific pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flush (on the same level) with panel. Do not over-tighten or under-tighten.

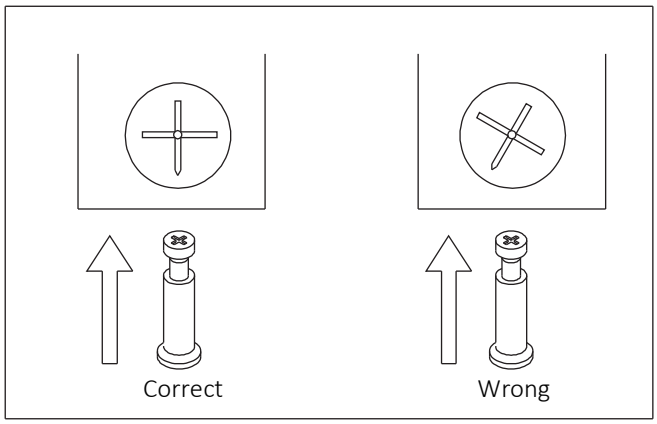


Align the arrow of the Cam-lock to the Cam-bolt head and insert the Cam-lock.

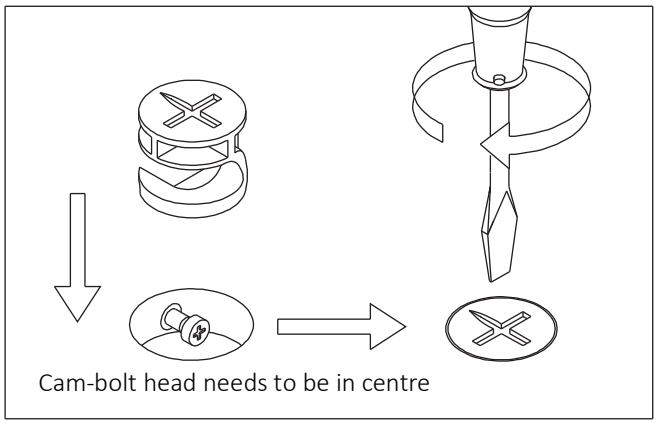

Use a Flat Screwdriver or Phillips Screwdriver to turn the Cam-lock clockwise one half a turn so it locks onto the head of the Cam-lock. Turn only until it is snug. Over-tightening could damage Cam-lock or/and Cam-bolt.

FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS


STEP 1

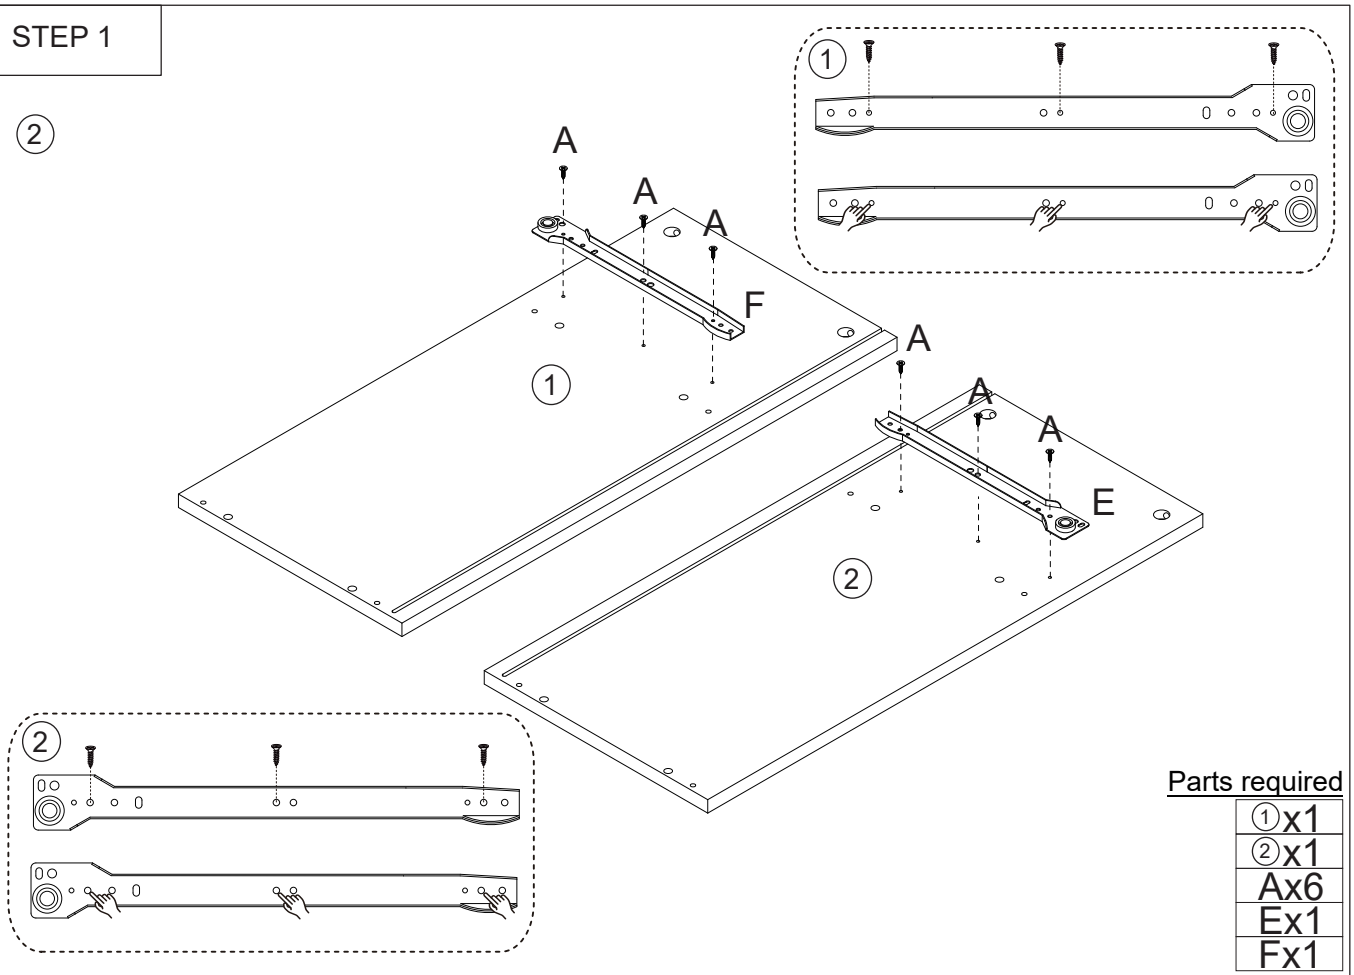

Parts required

①x1
②x1
Ax6
Ex1
Fx1

STEP 2

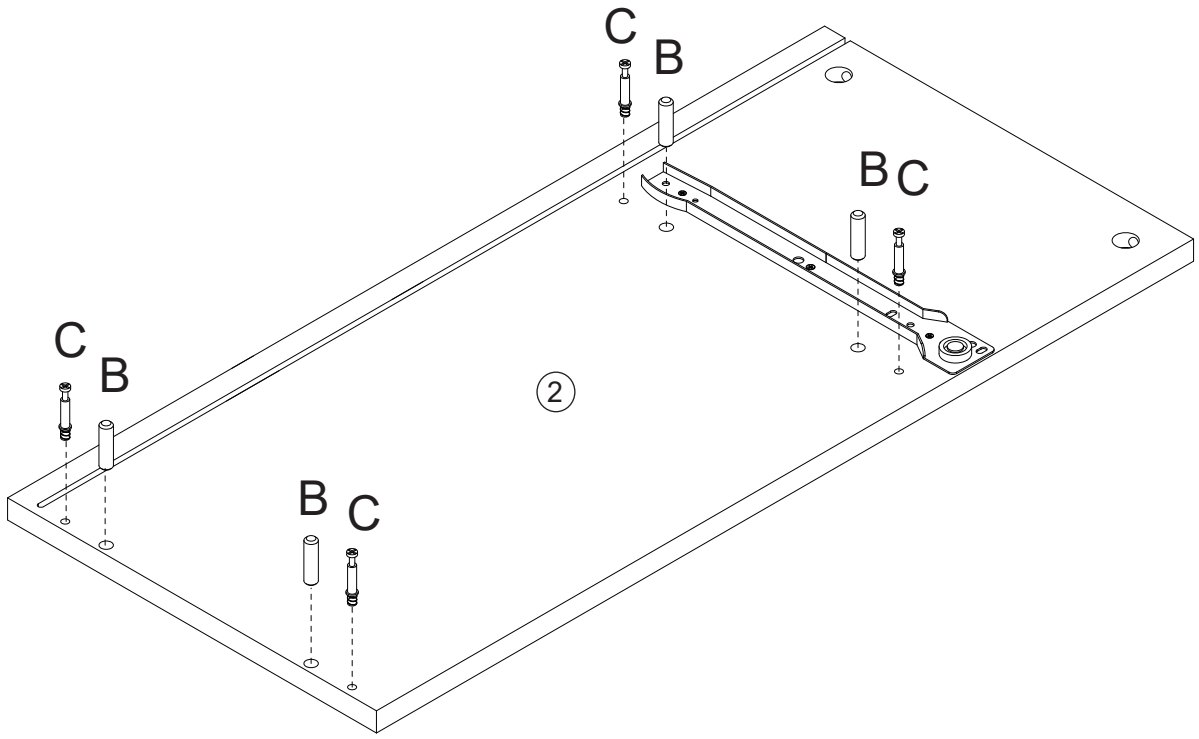


Parts required

Bx4
Cx4

FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS


STEP 3

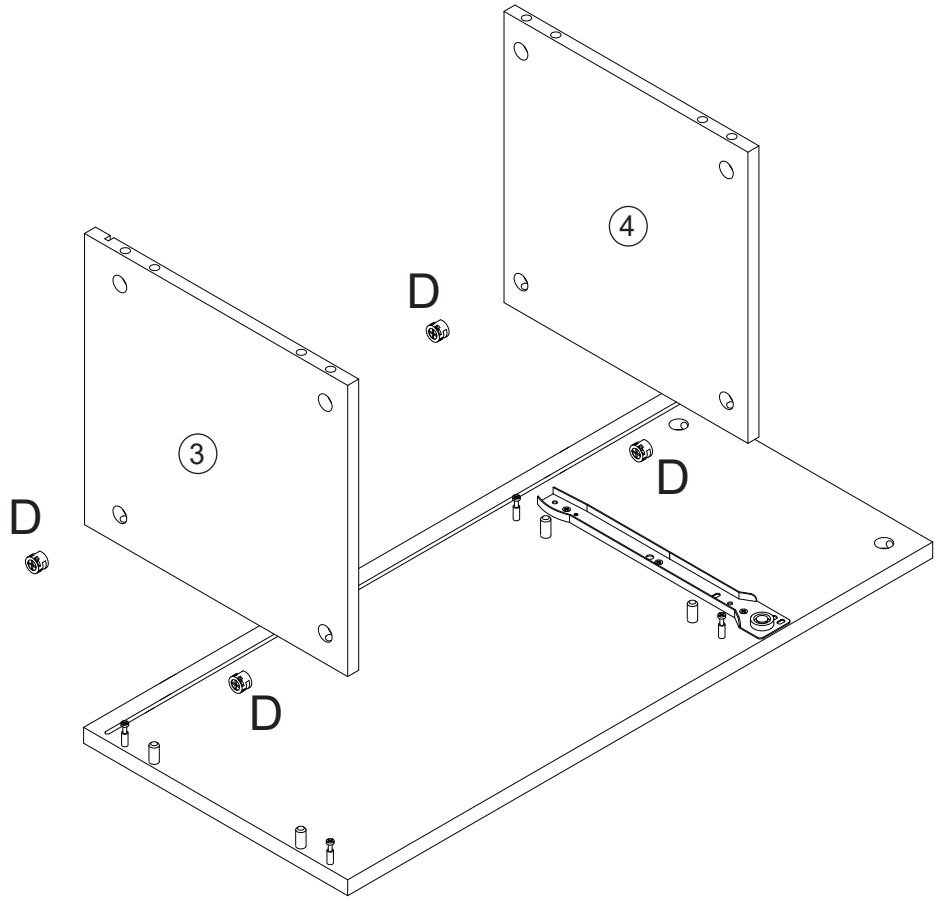

Parts required

③x1
④x1
Dx4

STEP 4

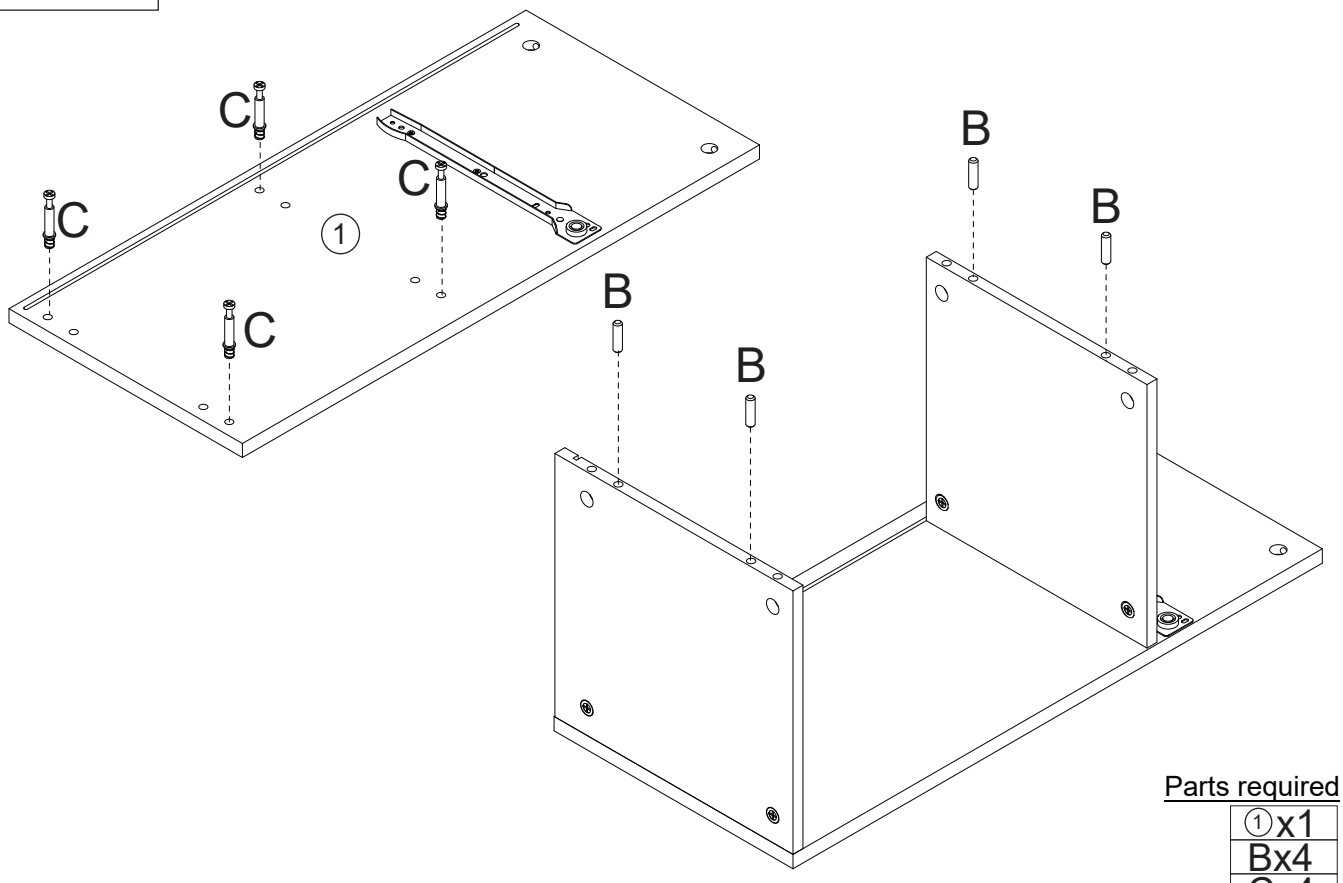


Parts required

①x1
Bx4
Cx4

FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS


STEP 5

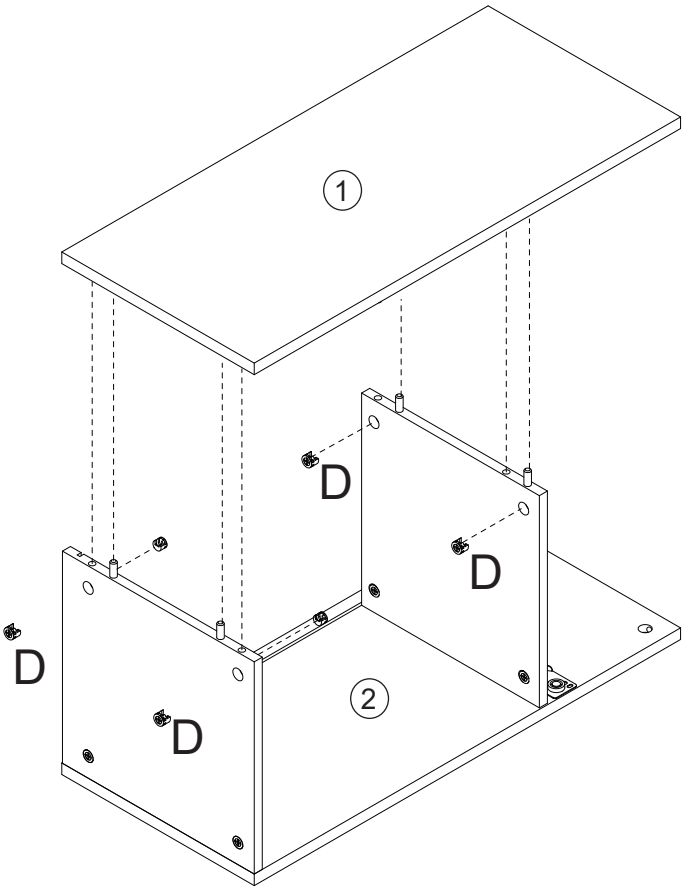

Parts required

②x1
Dx4


STEP 6

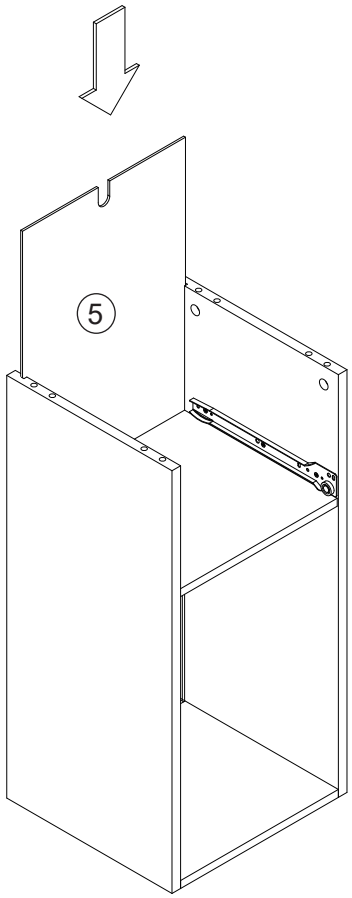


Parts required

⑤x1

STEP 7

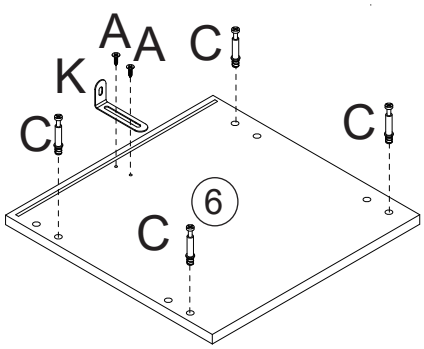


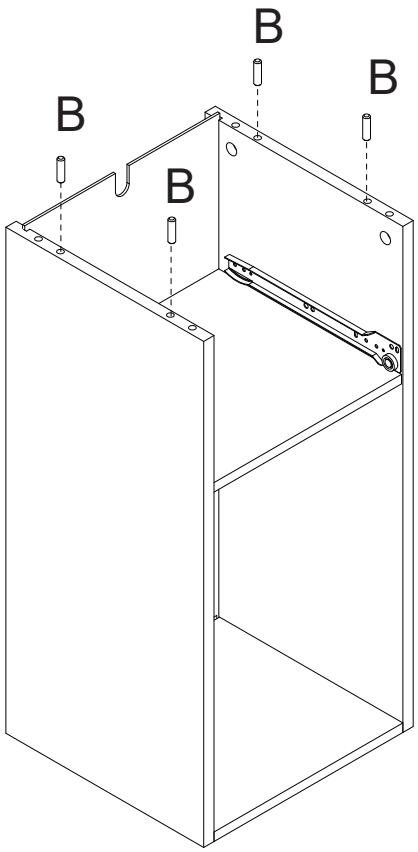

Parts required

⑥x1
Ax2
Kx1
Bx4
Cx4

STEP 8

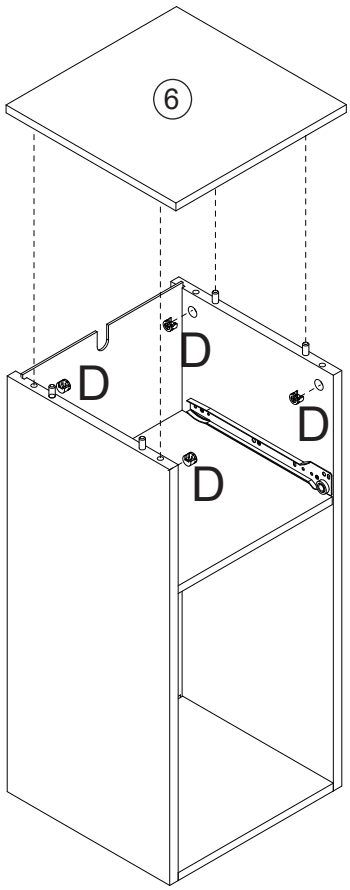


Parts required

⑥x1
Dx4

FINN SLIM BEDSIDE TABLE ASSEMBLY INSTRUCTIONS


STEP 9

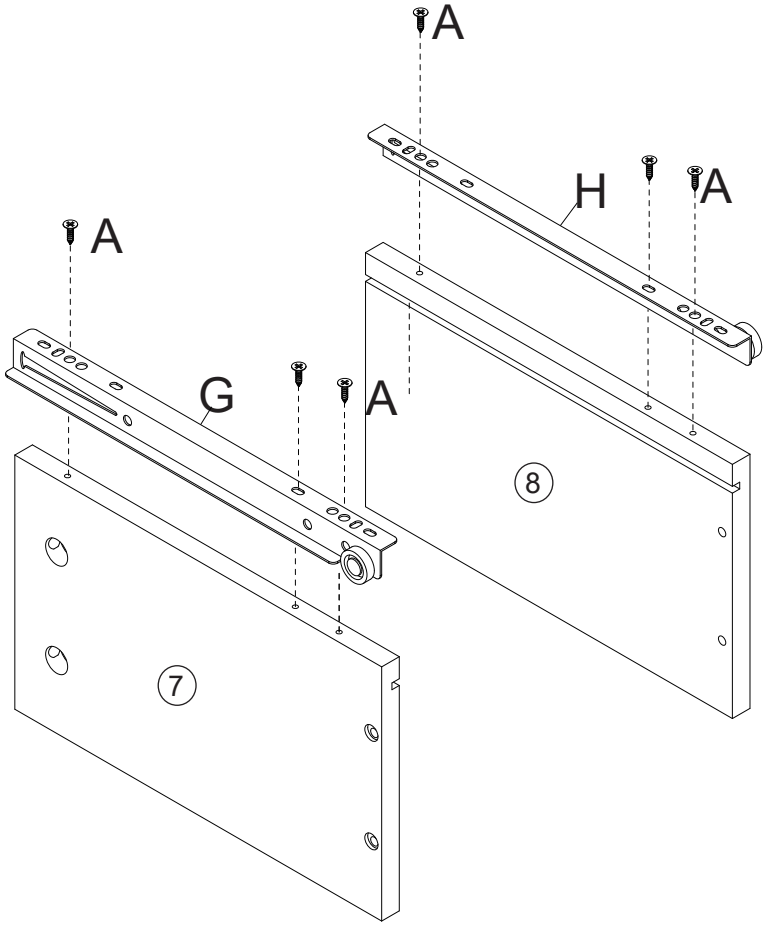

Parts required

⑦x1
⑧x1
Ax6
Gx1
Hx1


STEP 10

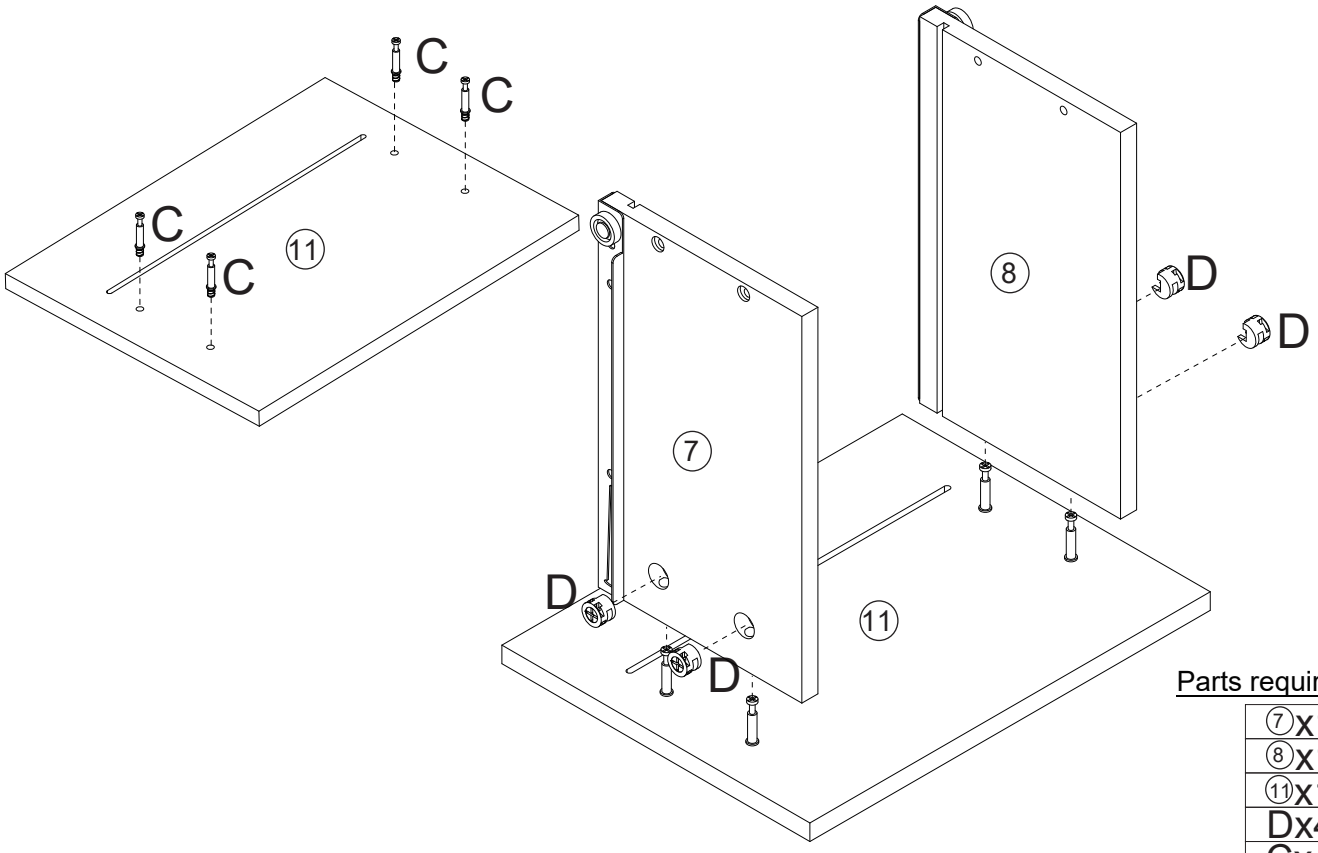


Parts required

⑦x1
⑧x1
⑪x1
Dx4
Cx4

STEP 11

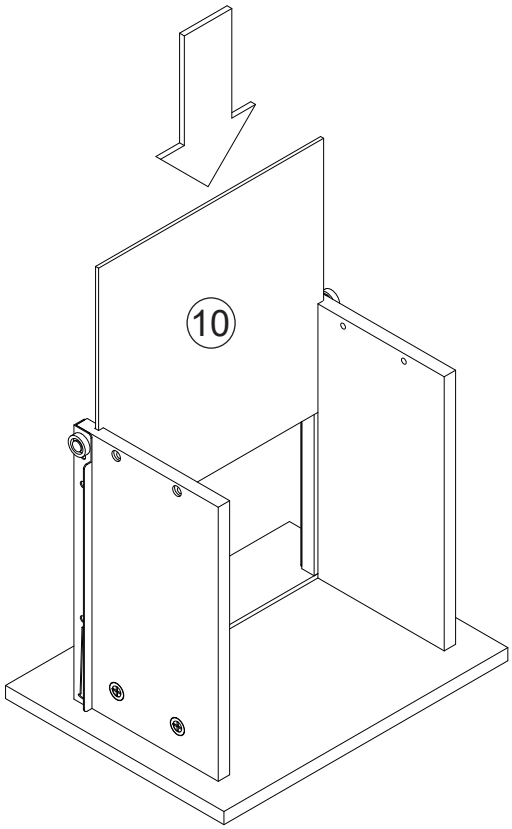


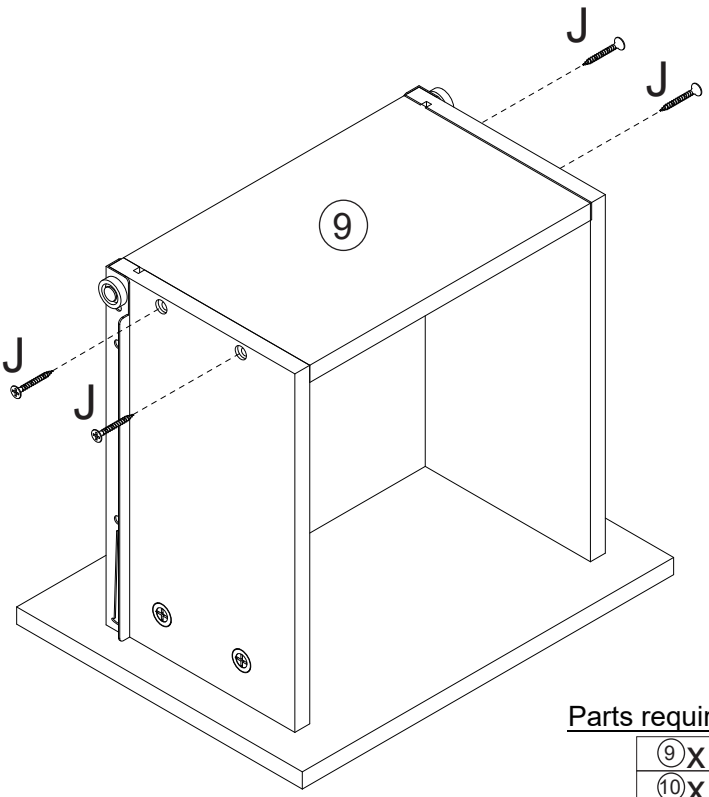


Parts required

⑨x1
⑩x1
Jx4

STEP 12

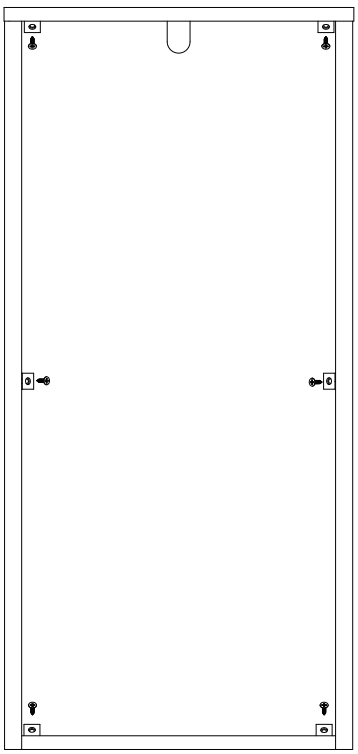


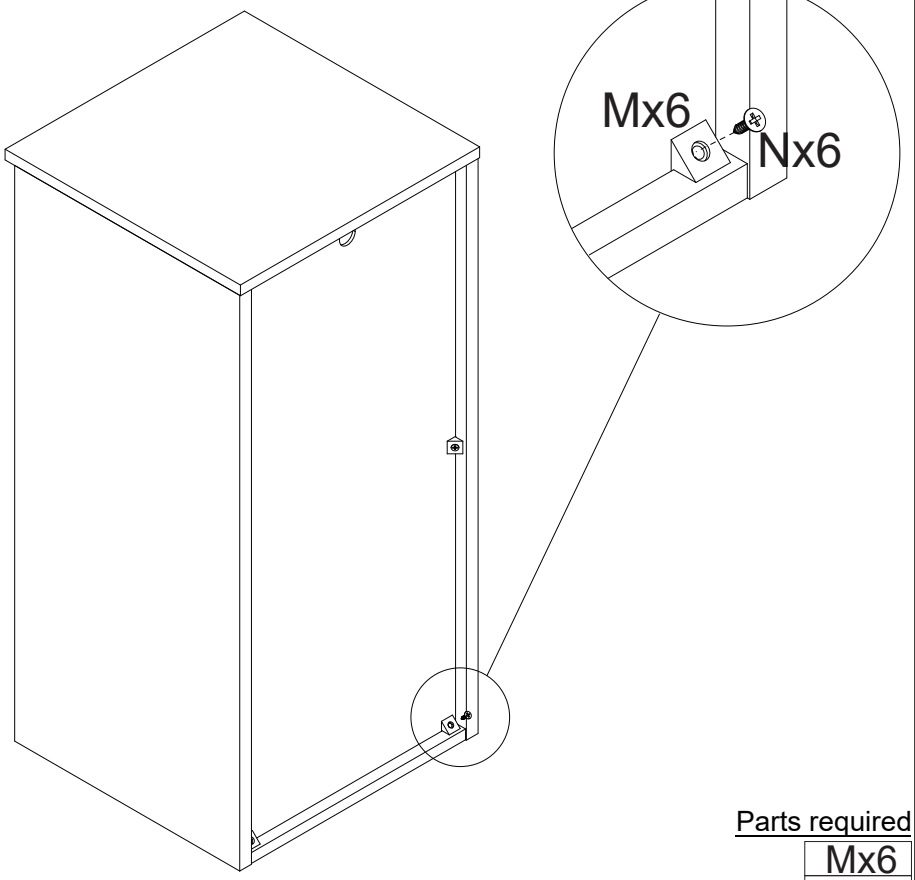

Parts required

Mx6
Nx6

STEP 13

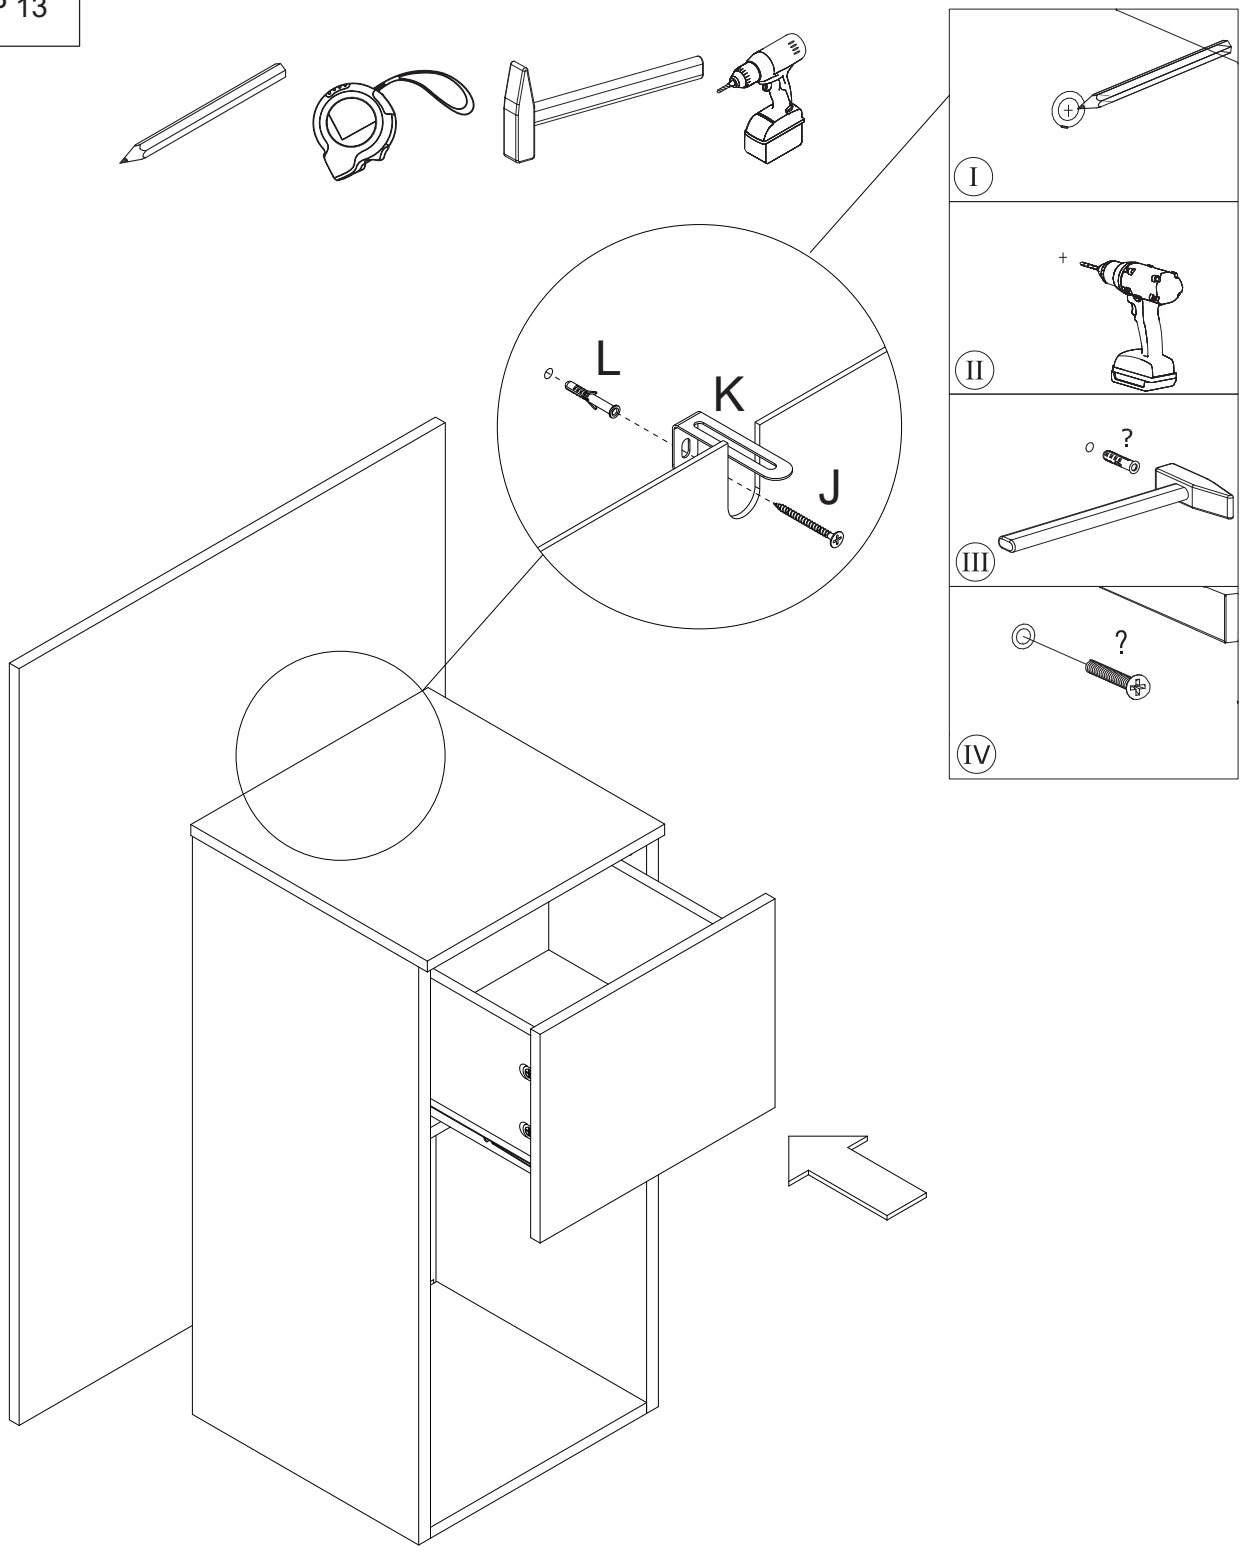


Note:The wall fixing plug supplied with this product is suitable for solid and brick wall.
For hollow and stud type walls fixing devices suitable for these types of walls must be obtained separately. Please ensure the fixing is safe and secure before use and that area to be drilled is free from hidden wires,water and gas pipes

Parts required


Jx1
Kx1
Lx1

Complete Assembly

Your FINN SLIM BEDSIDE TABLE is now completely assembled.
Periodically check to ensure that the components are in their proper position and free from damage.

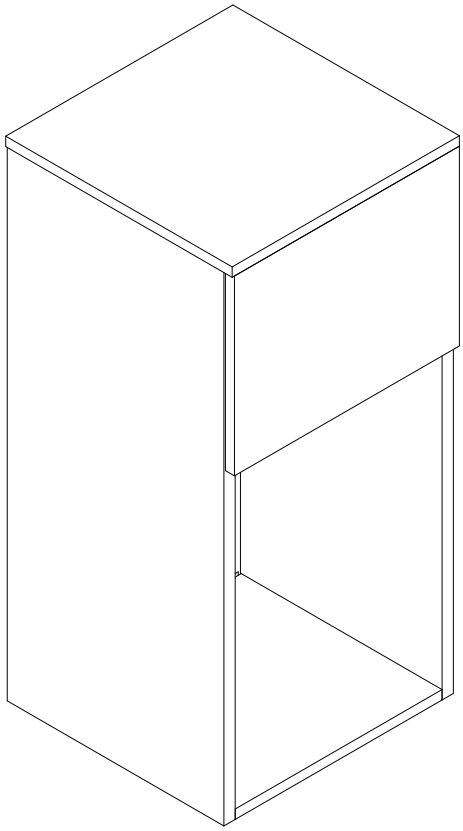

Keep instructions for future reference.

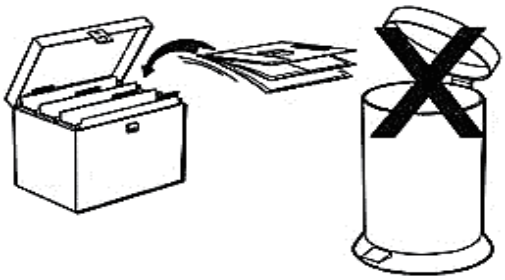

Supplied by : GFW THE FURNITURE WAREHOUSE
Waterside Distribution Centre
Waterside Business Park
Johnson Road Lancashire
BB3 3RT
www.gfwlimited.co.uk

Represented by:
Authorised Rep Compliance Ltd
71 Lower Baggot Street
Dublin
D02 P593
Ireland
www.arccompliance.com