


GOLBAL PROCUREMENT AND MARKETING LIMITED

BODEN SIDEBORD

Assembly instruction- Please keep for future reference

SID3DWOAK

SID3DWWHT

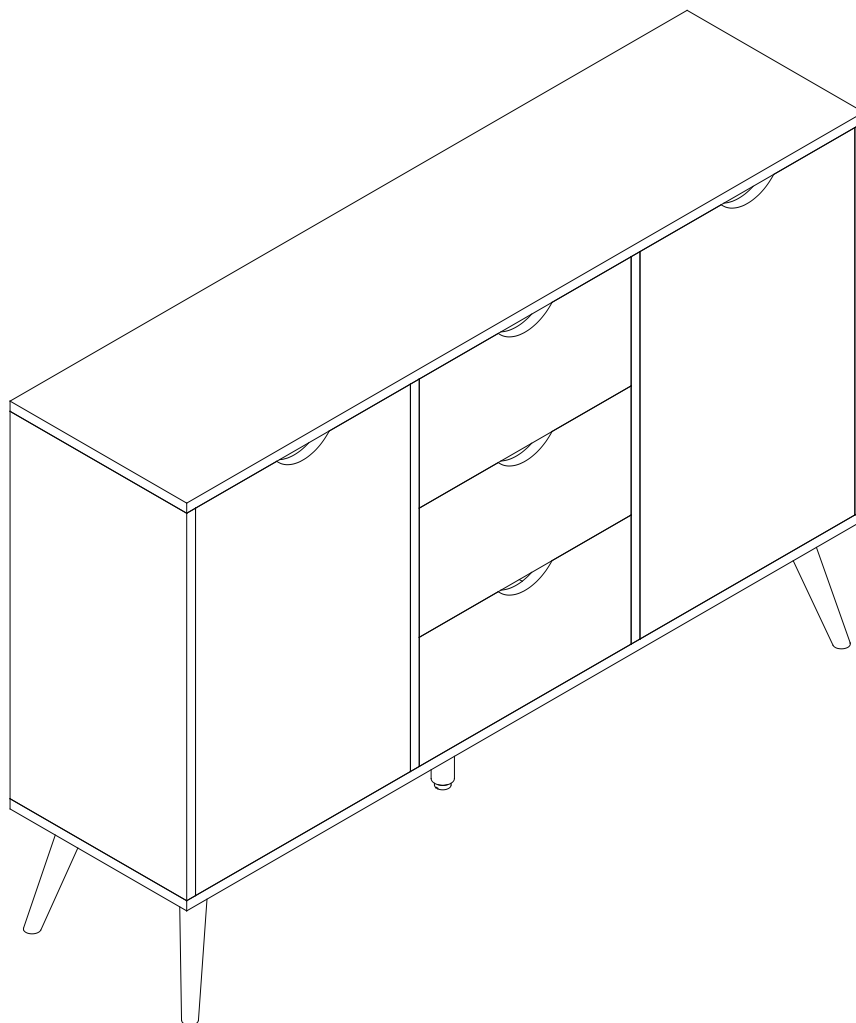

Dimensions	No. People	Assembly Time	OW#
Width: 119 cm Depth: 30 cm Height: 85 cm		60 mins (approx)	SID3DWOAK SID3DWWHT

thank you

For purchasing this
GPM Limited
product

Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Safety and Care Advice

Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2,3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screw, as this could damage the unit. only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you are unhappy with the product and wish to return it, please following the retailer's returns procedure.

Components - Panels

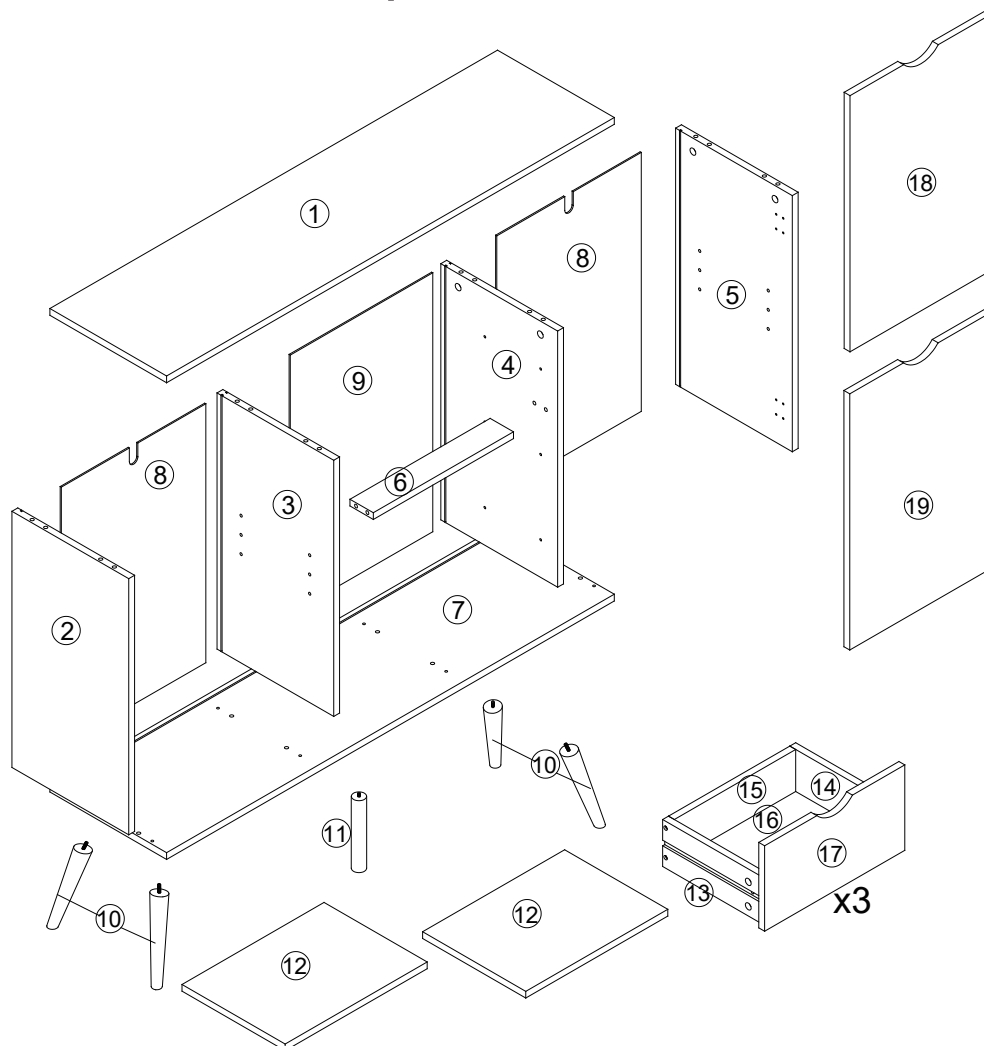

Components - Panels

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.

Part No	Description	Qty	Thickness (mm)
1	Top Panel	1	15 mm
2	Left Side Panel	1	15 mm
3	Left Middle Vertical Panel	1	15 mm
4	Right Middle Vertical Panel	1	15 mm
5	Right Side Panel	1	15 mm
6	Support Bar	1	15mm
7	Bottom Panel	1	15 mm
8	Left And Right Back Panel	2	3 mm
9	Middle Back Panel	1	3 mm
10	Wood Leg	4	35 mm
11	Wood Leg	1	35 mm
12	Shelf Panel	2	12 mm
13	Drawer Left Side Panel	3	12 mm
14	Drawer Right Side Panel	3	12 mm
15	Drawer Back Panel	3	12 mm
16	Drawer Bottom Panel	3	3 mm
17	Drawer Front Panel	3	12 mm
18	Left Door Panel	1	12 mm
19	Right Door Panel	1	12 mm

Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk











Components - Fixings

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk




Please check that you have all the components listed below before constructing your item.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

HARDWARE

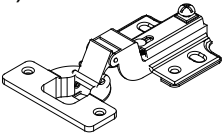(A)  x22+2	(B)  x22+2	(C)  x18+1	(D)  M4x35mm x20	(E)  x6
(F)  M4 x 12mm x26+2	(G)  M4 x 12mm x36+3	(H)  x4	(I)  M4 x 10mm x6	(N)  x4
(O)  M3x14mm x12+1	(P)  x2	(Q)  x8	(R)  x1	(S)  x1


ANTI - TIPPING KITS

(J)  x2	(K)  M4x40mm x2	(L)  x2
--	---	--

Tools Required (Not Provided)



Ruler - Use this to measure your screws (mm)




Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk


Assembly Instructions

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk


Step 1

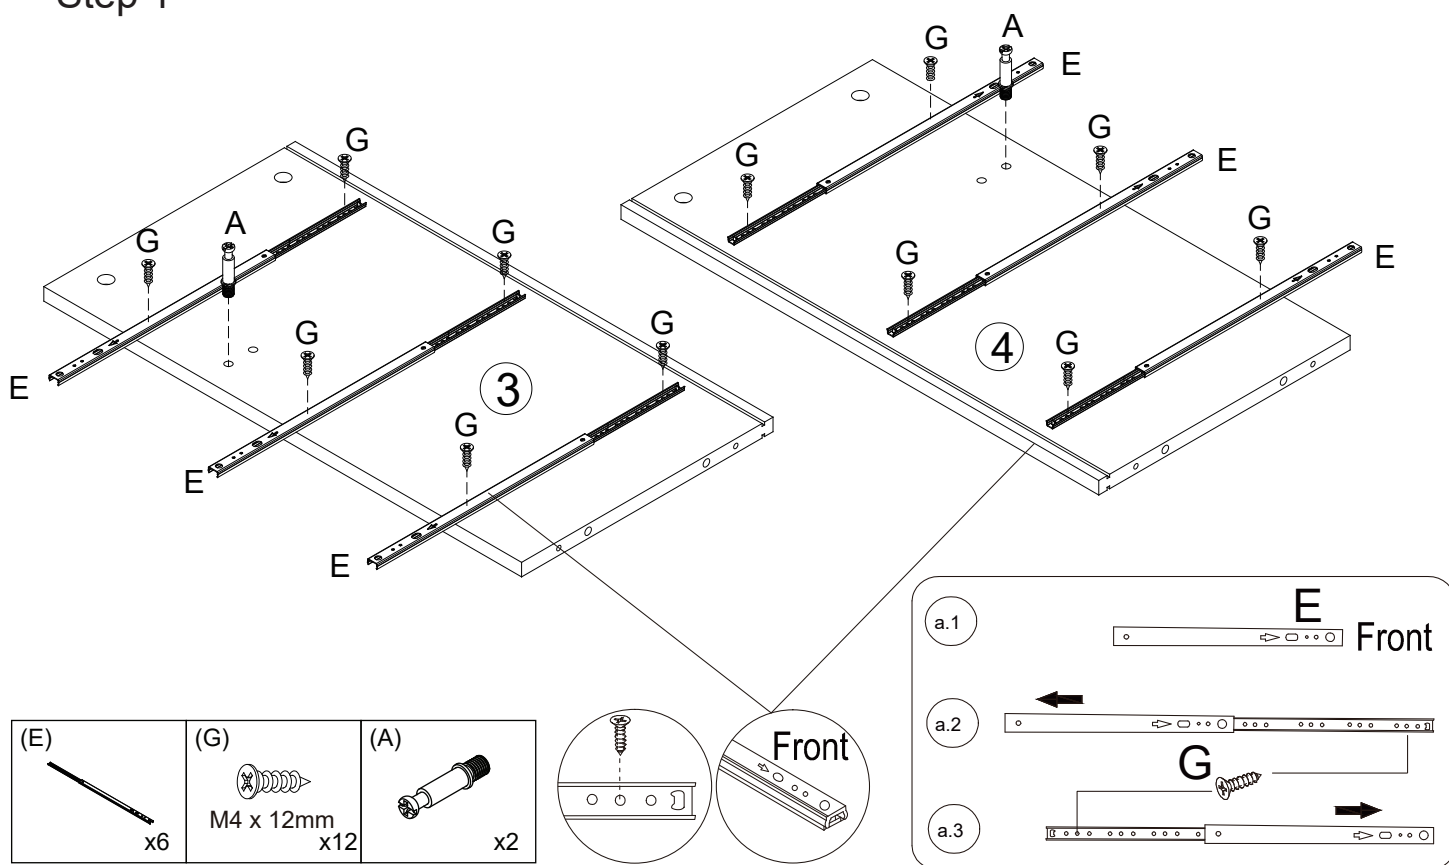


Step 2

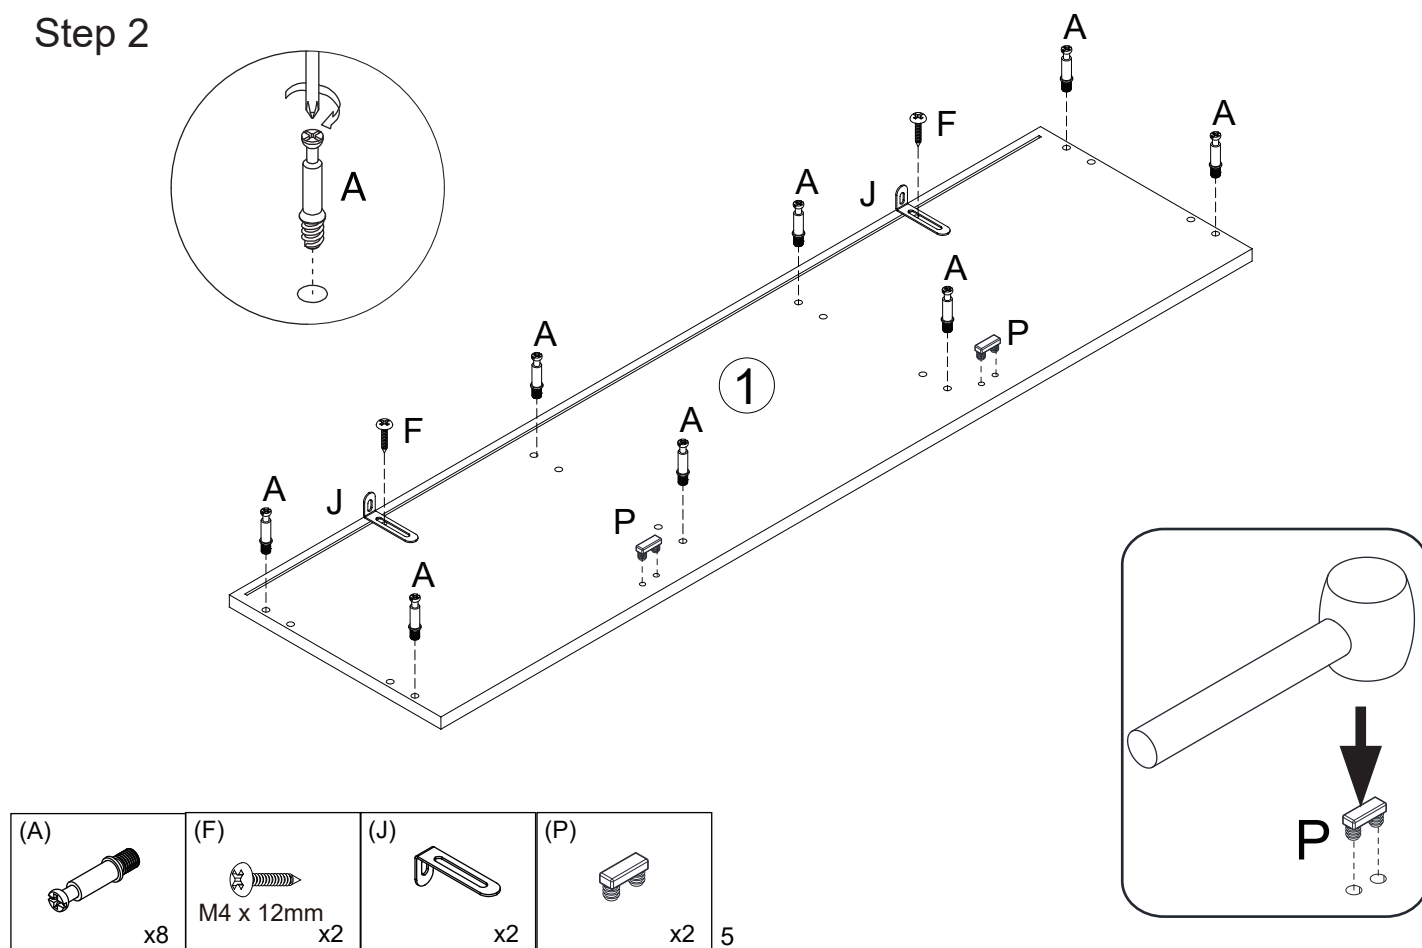


Step 3

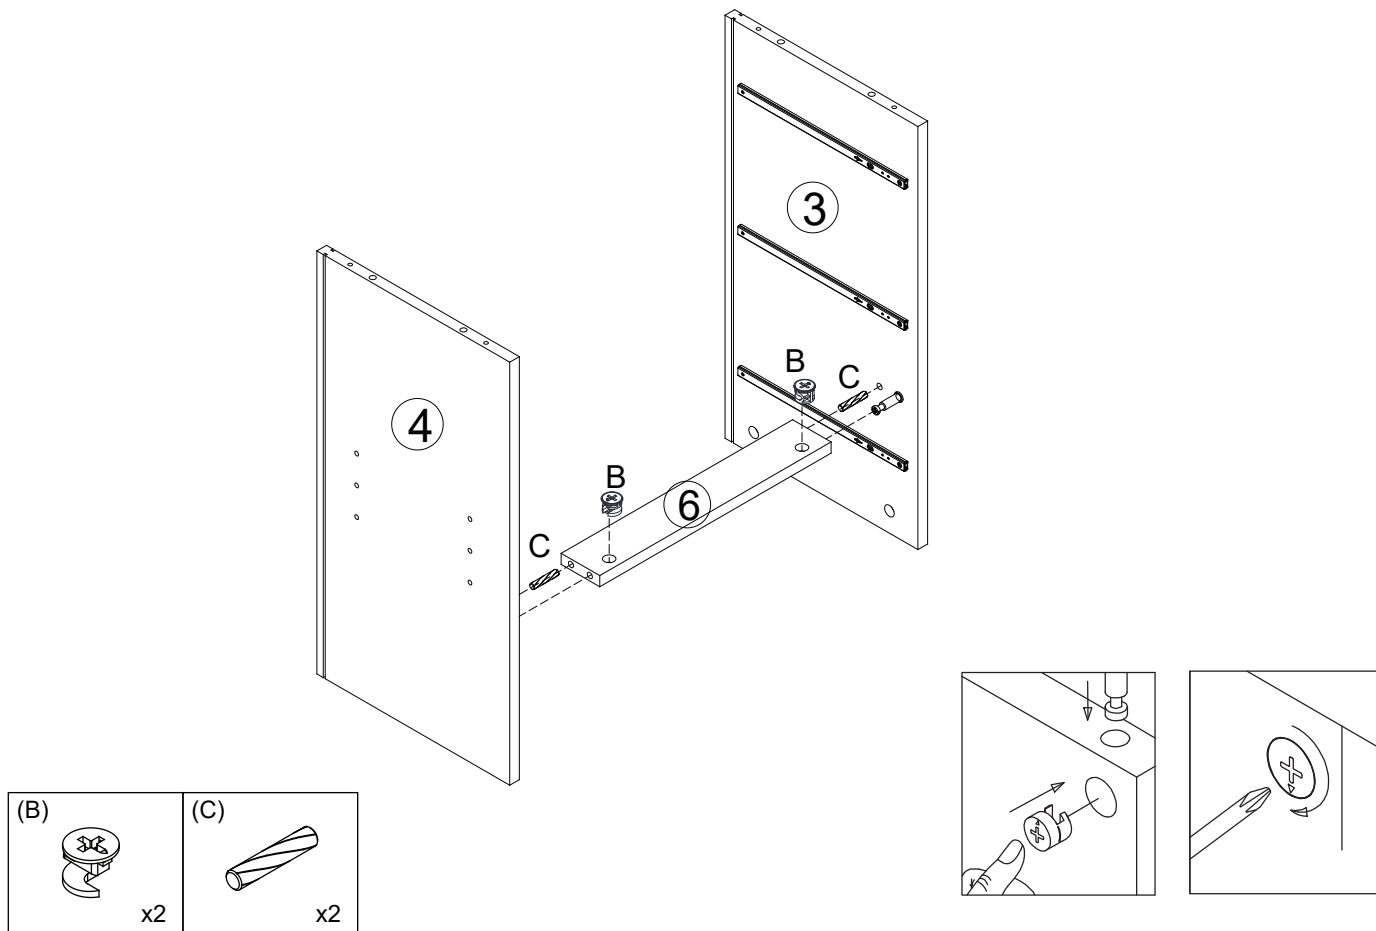


Step 4


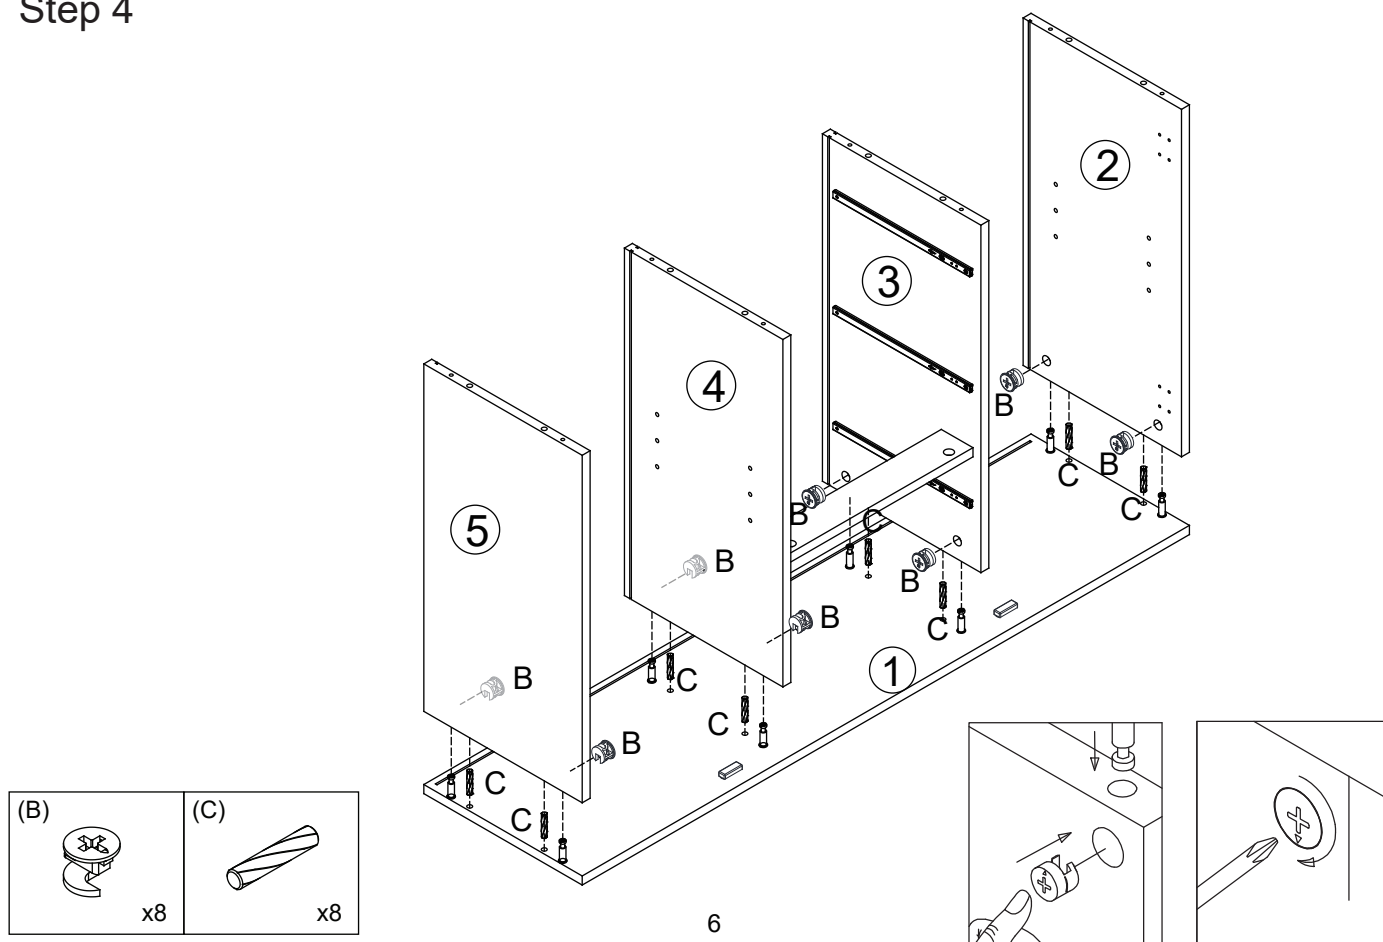


Step 5

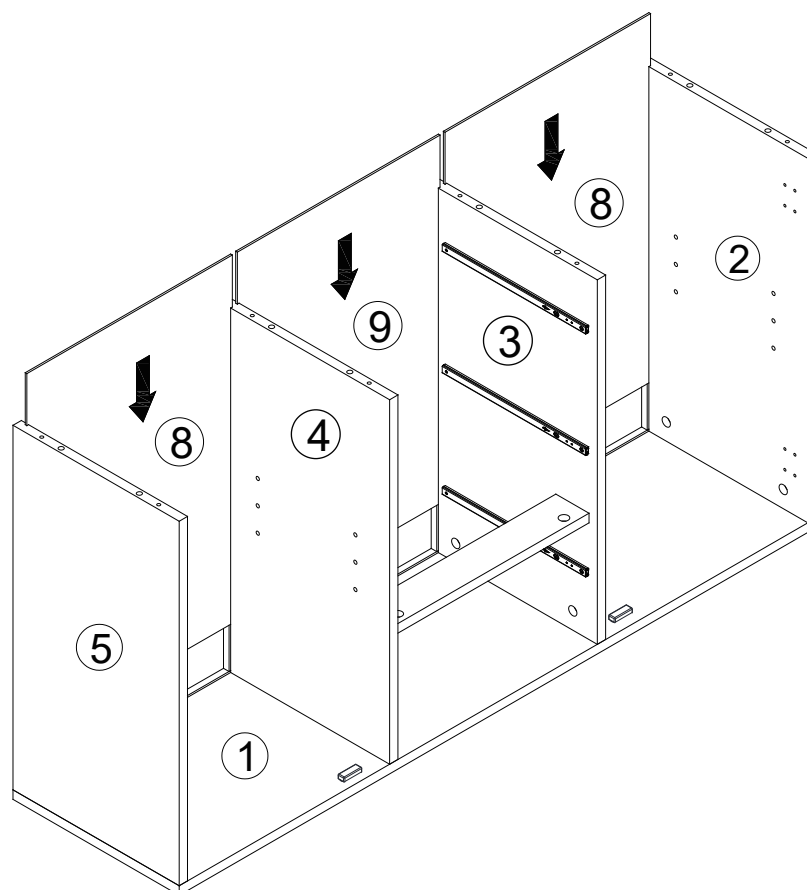


Step 6

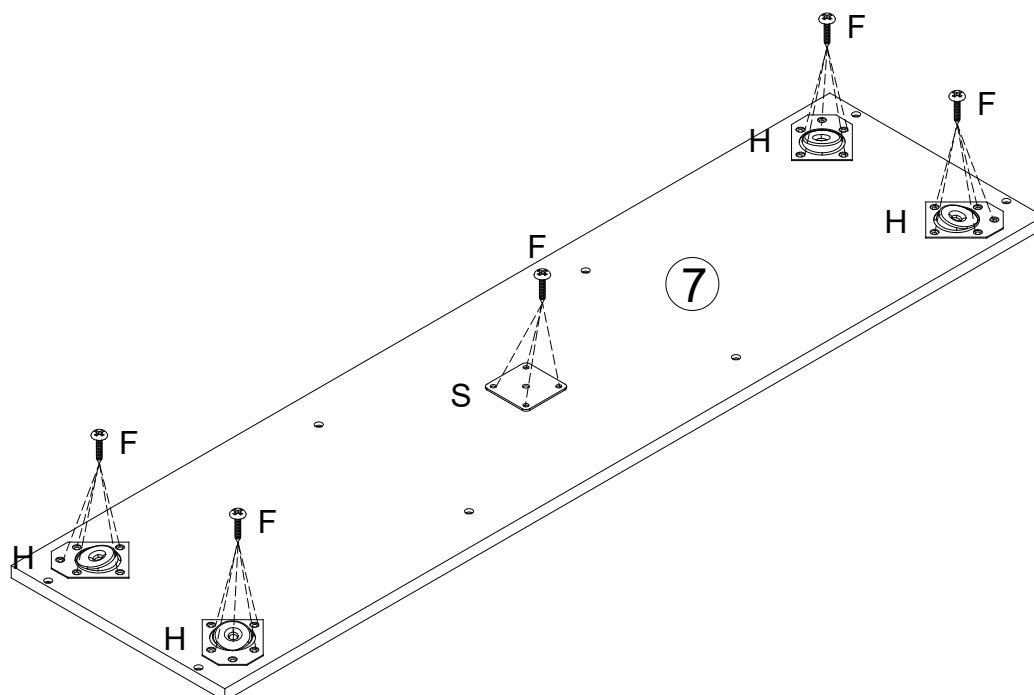


(F)  M4 x 12mm x24	(H)  x4	(S)  x1
---	--	--


Step7

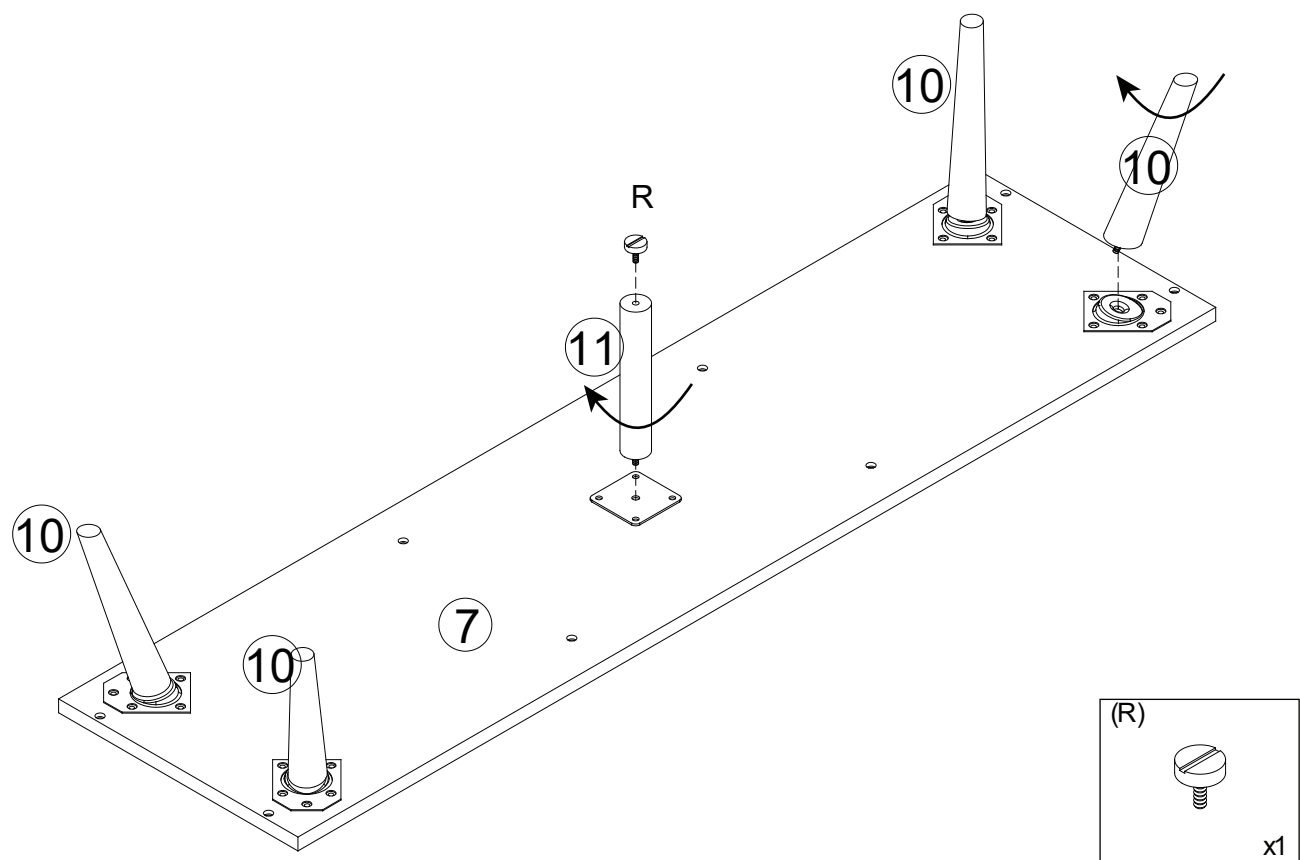


Step 8

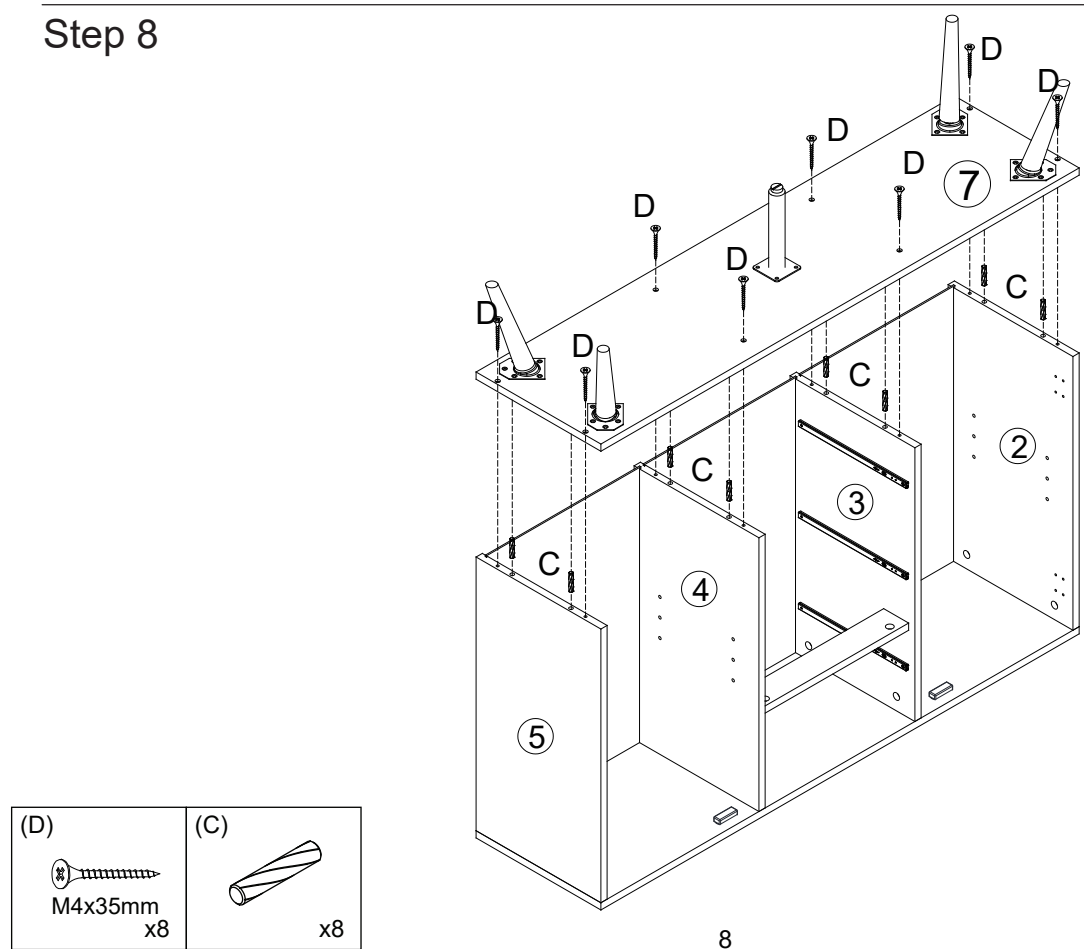

Step 9


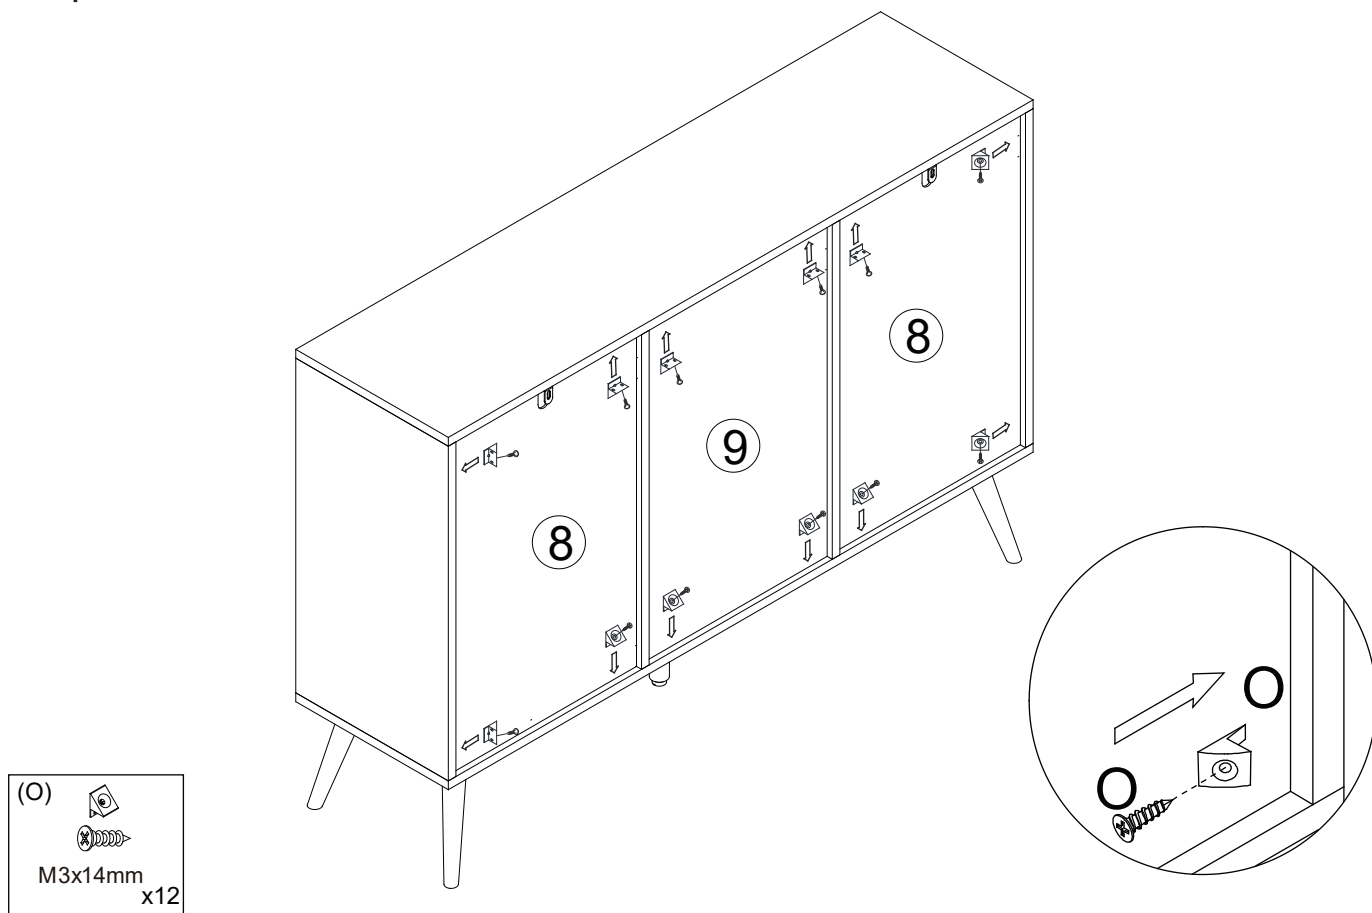


Step 10

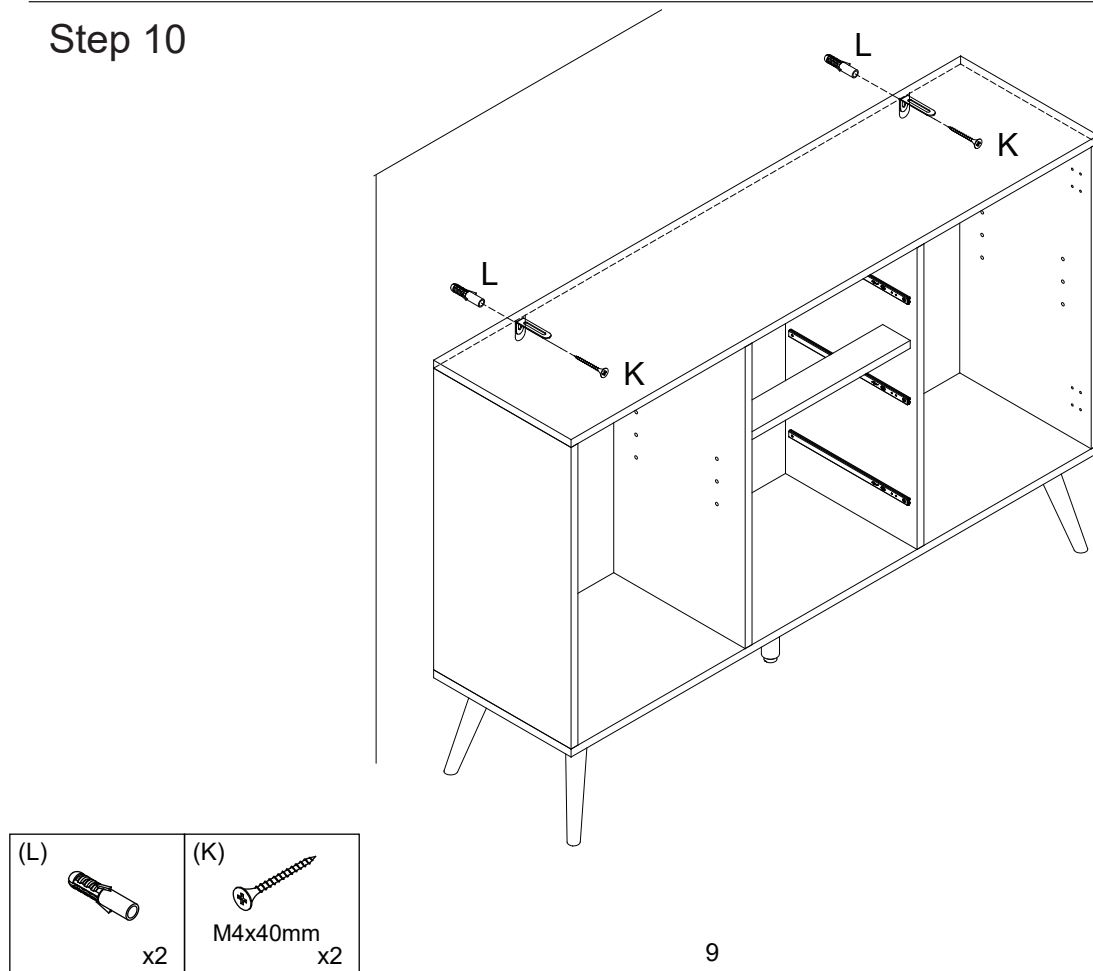




Step 11

x3

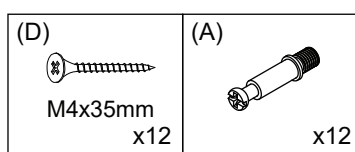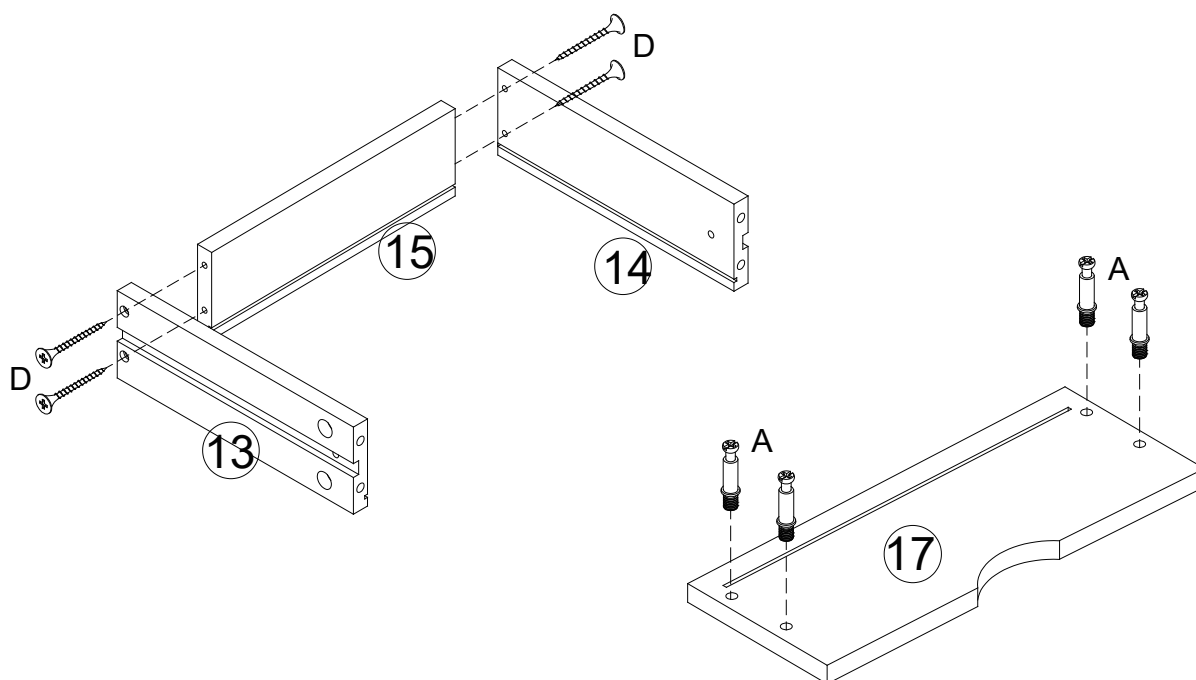


Step 12


x3

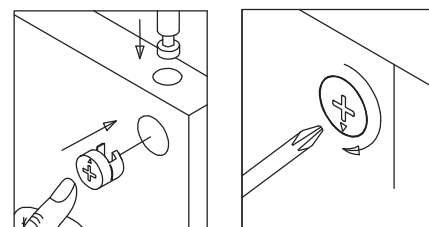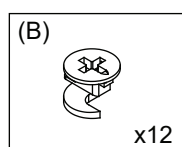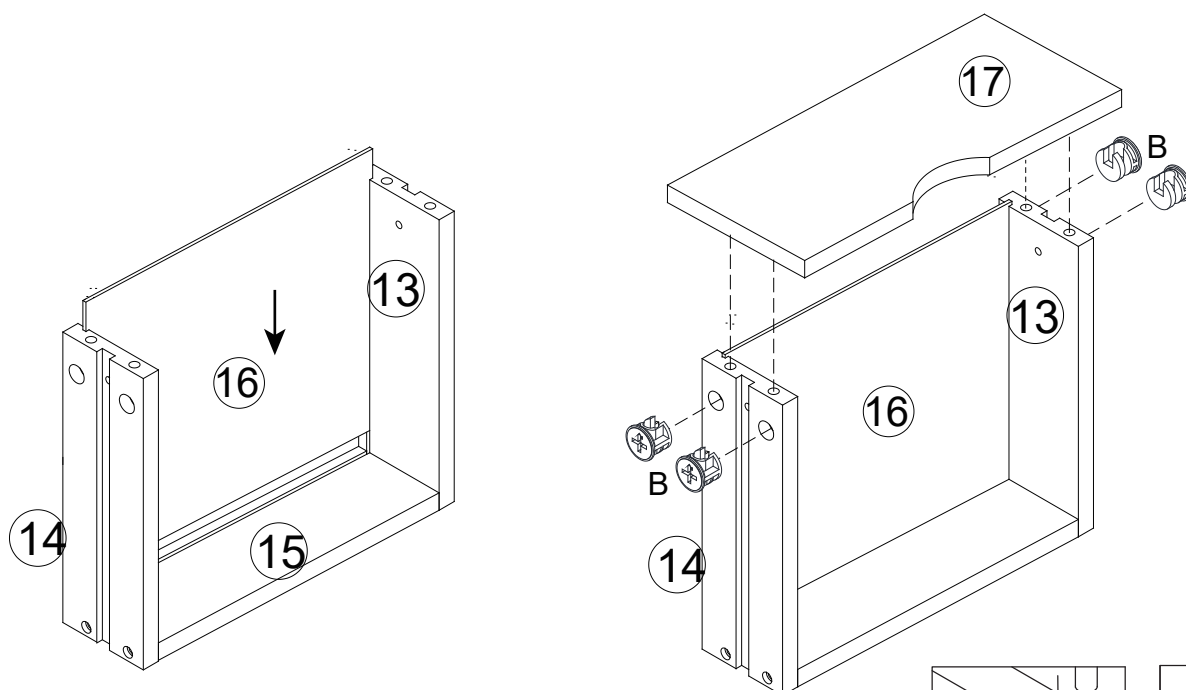


Step 13

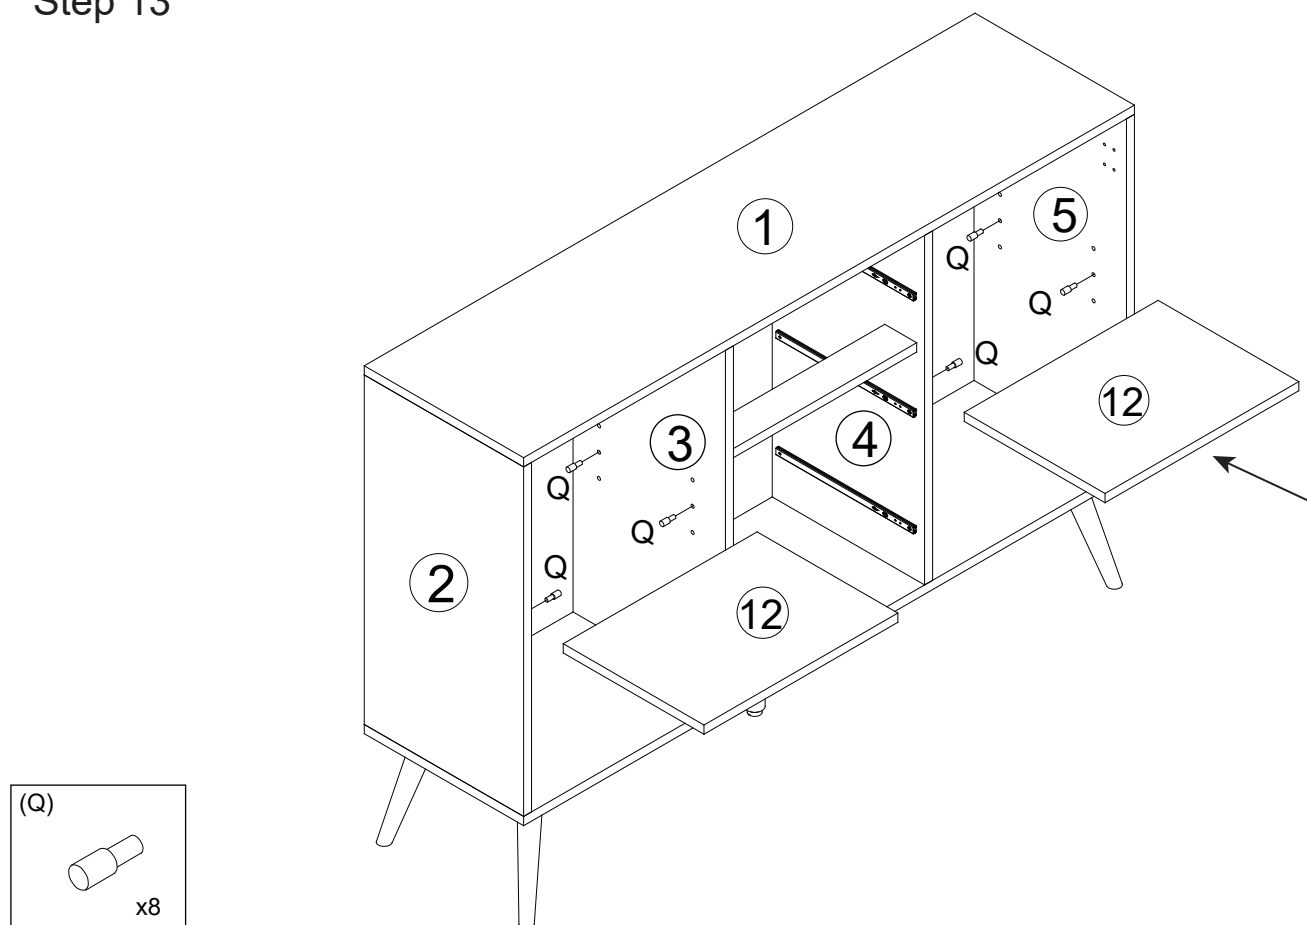


Step 14

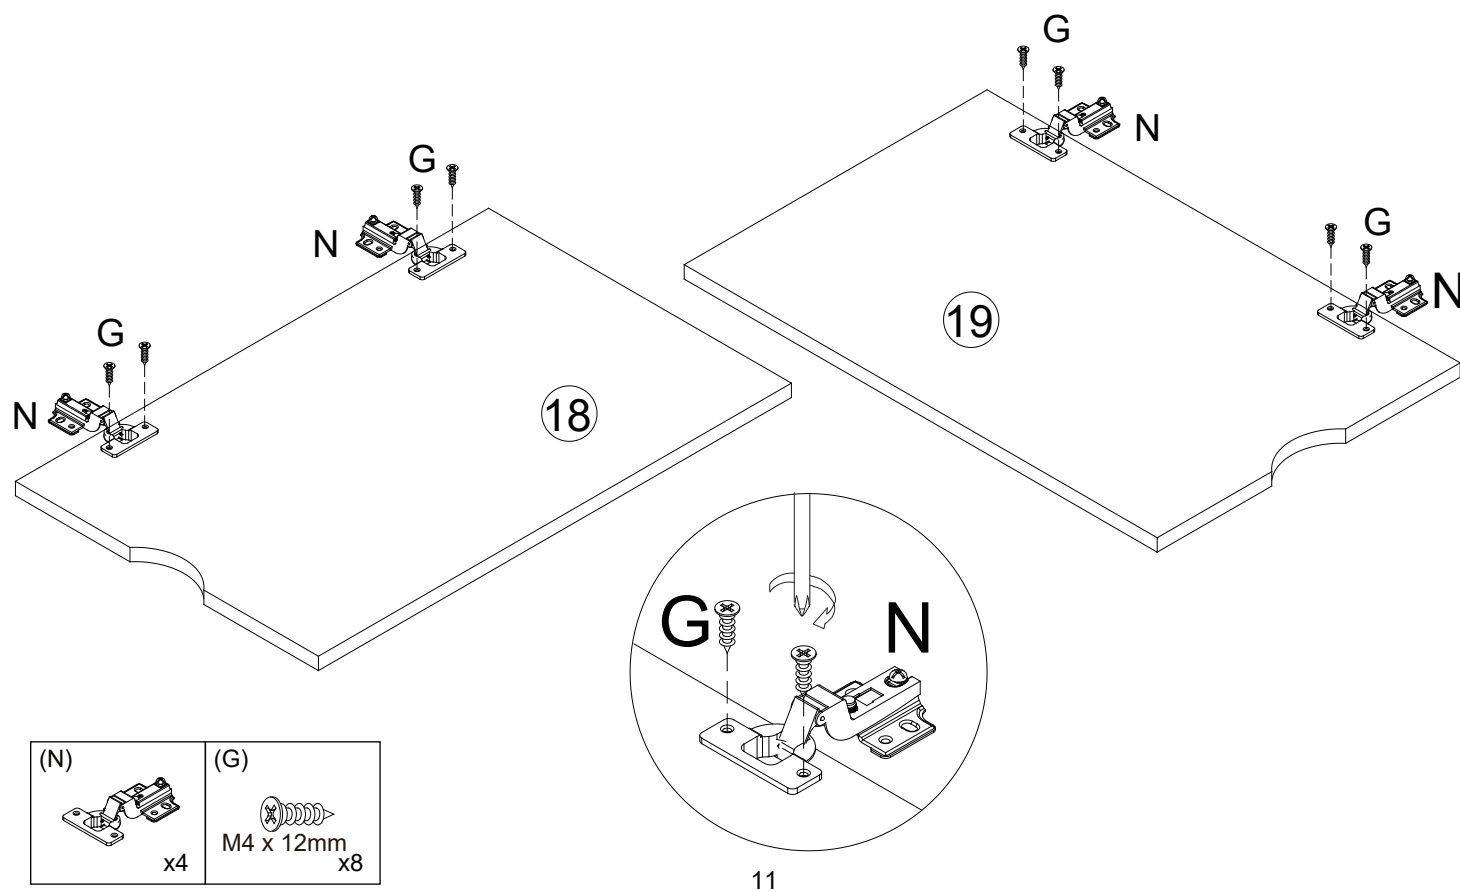


Step 15

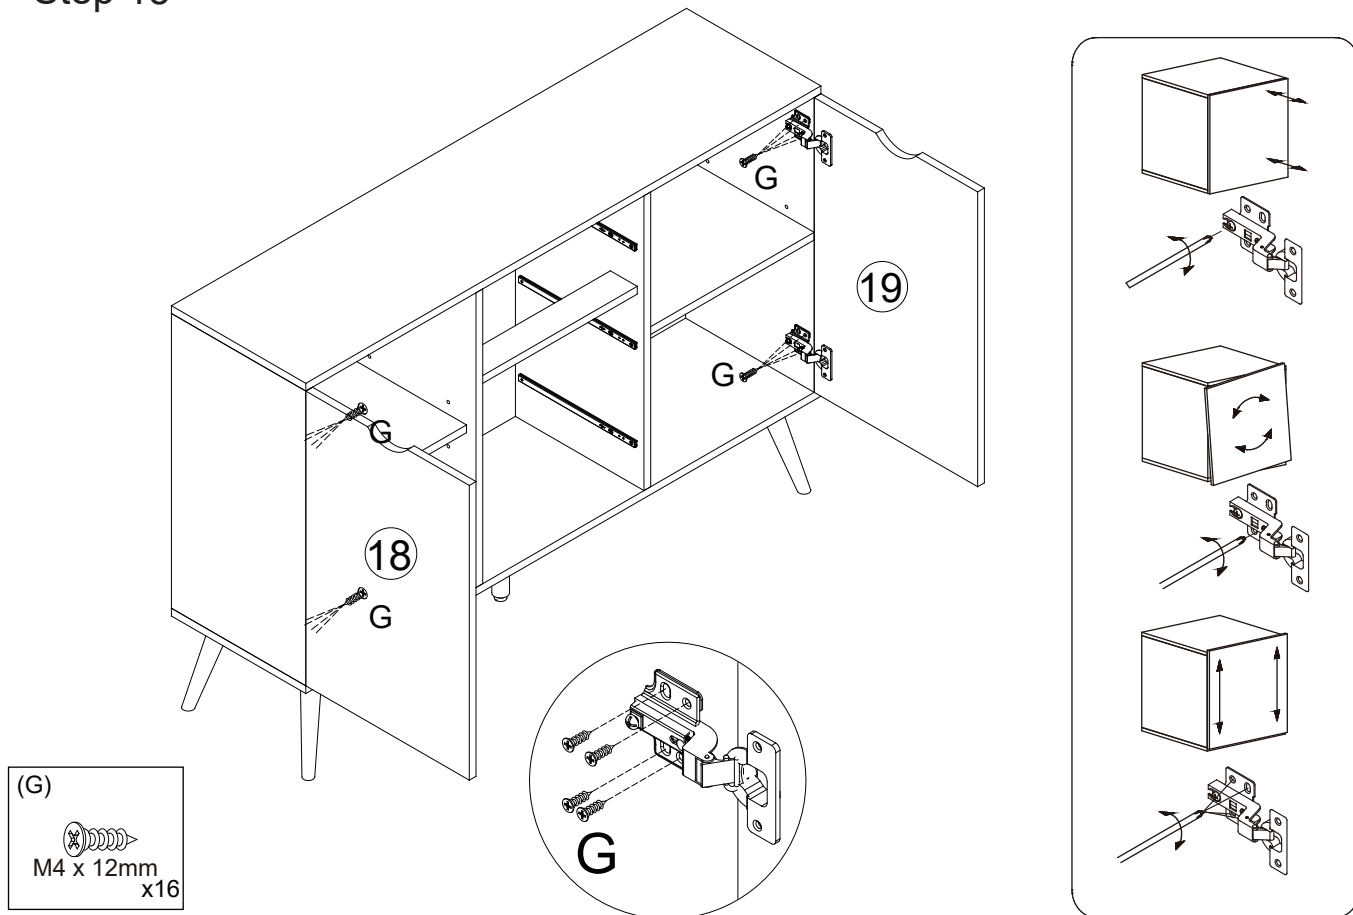

Step 16

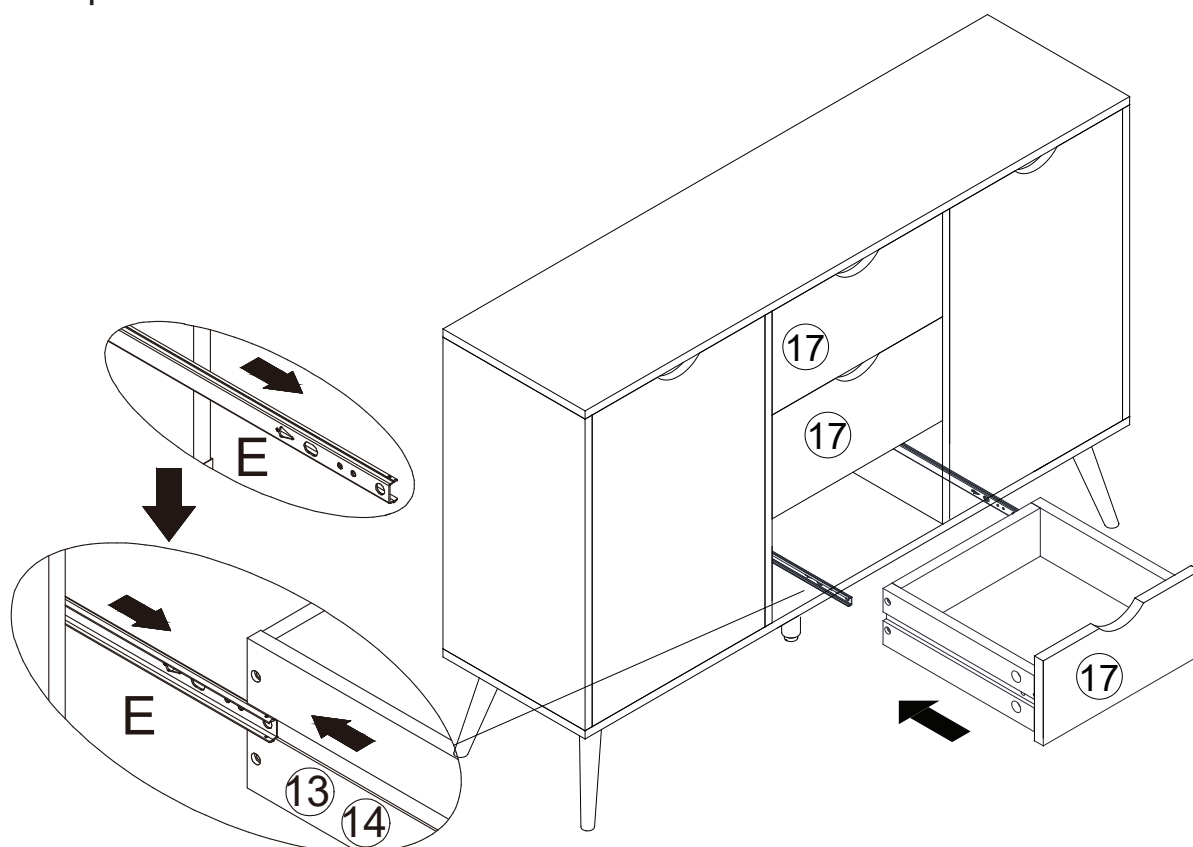

Step 17

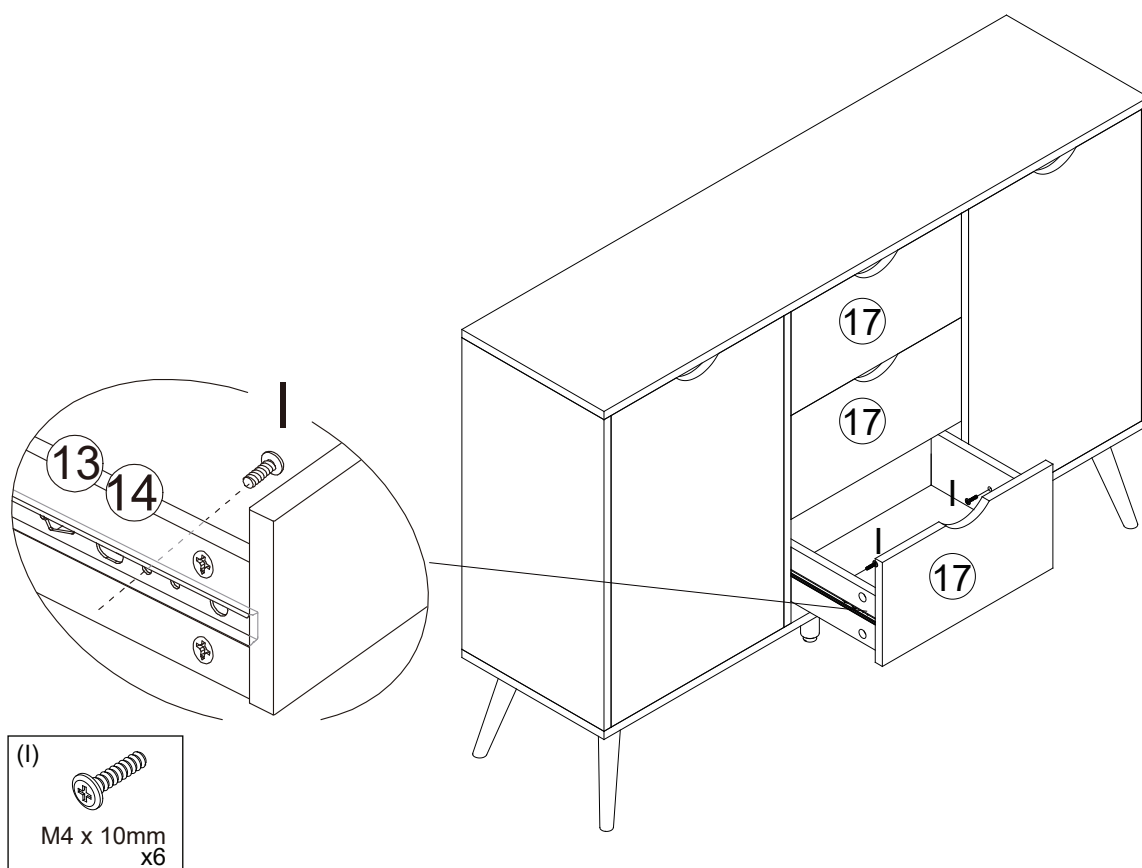

Step 18

