



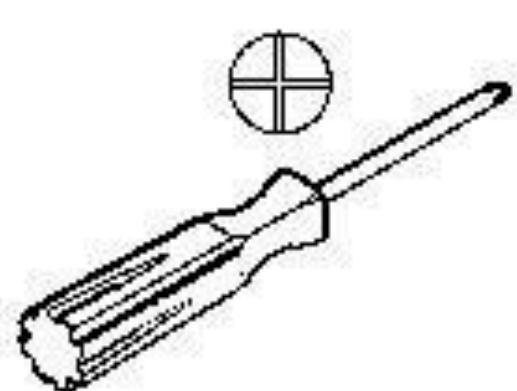


ASSEMBLY INSTRUCTIONS


KITCHEN WALL CORNER UNIT 600MM MODEL WC600

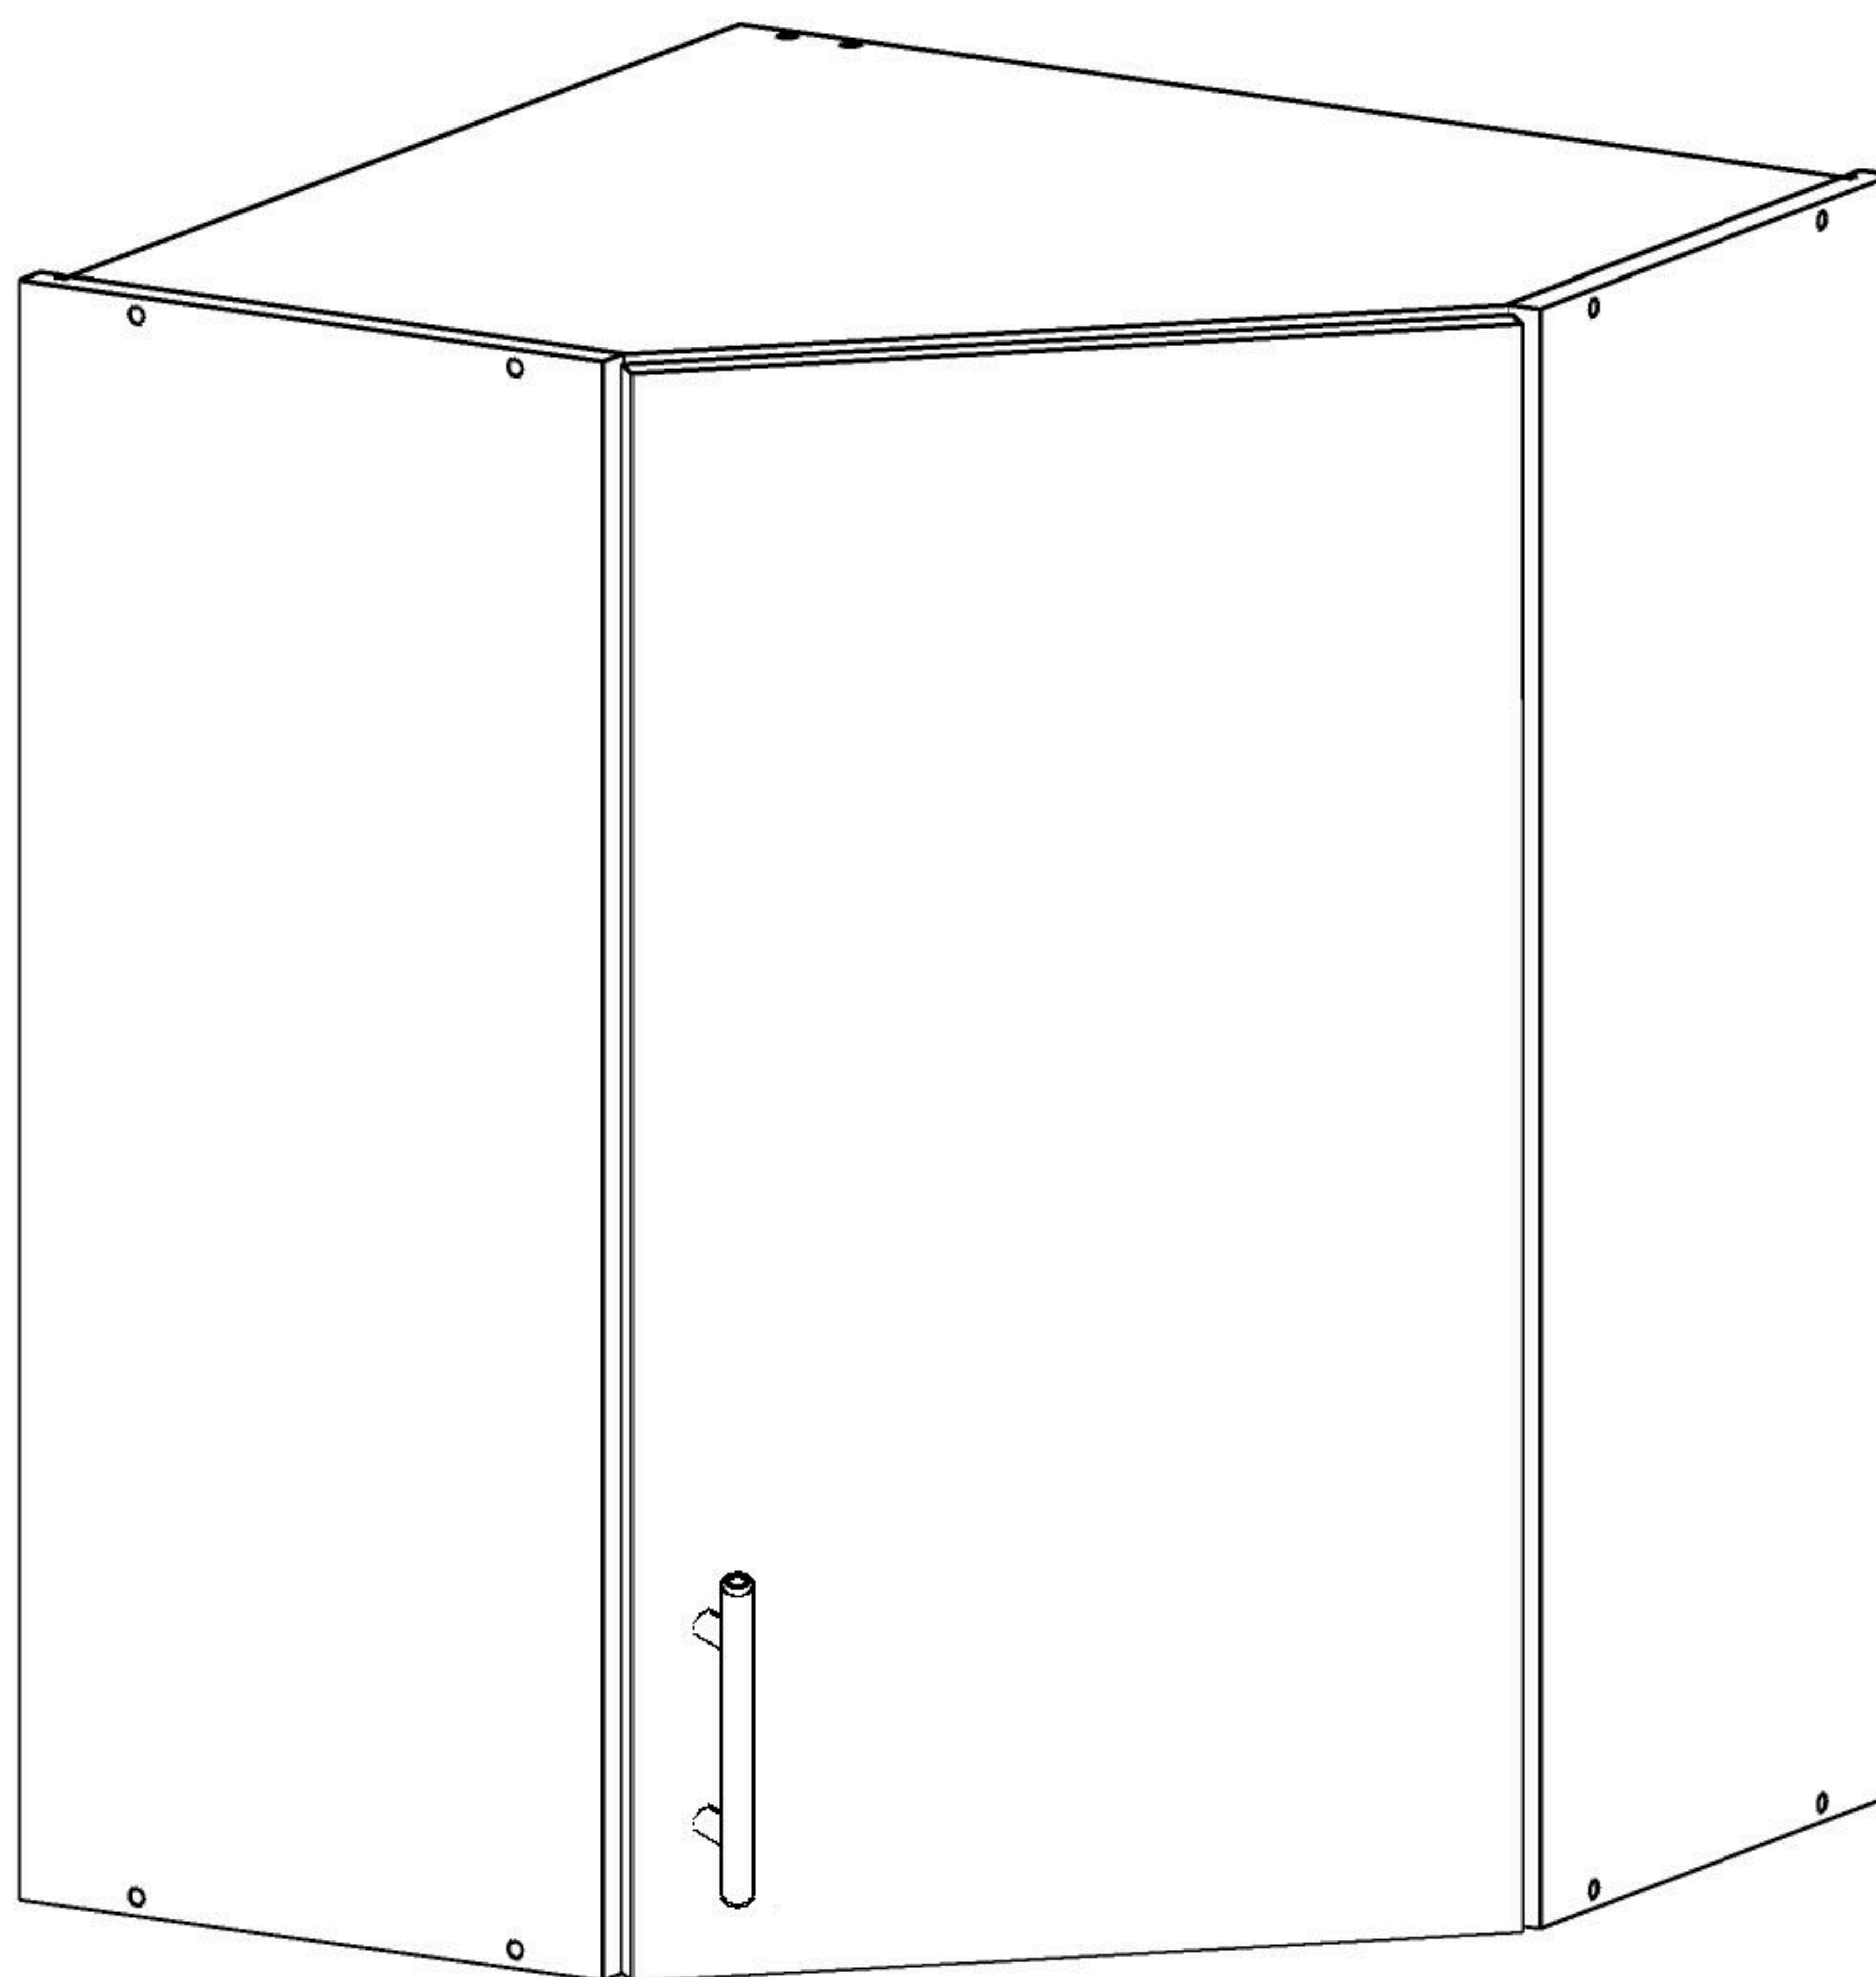


Cross-head
screwdriver

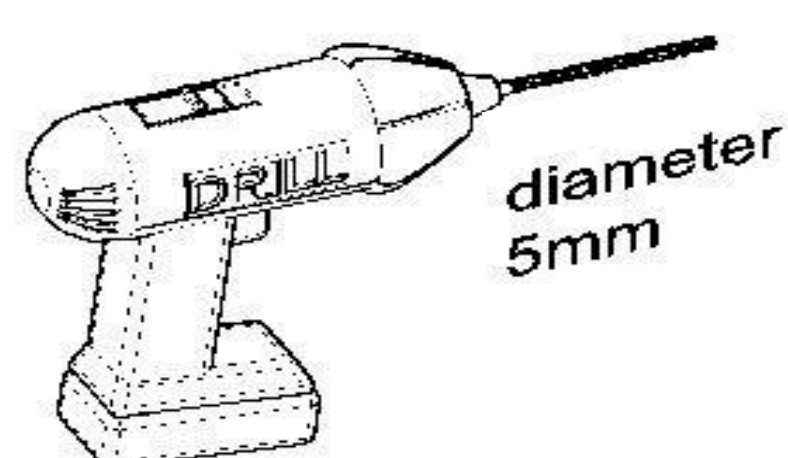

Electric
drill

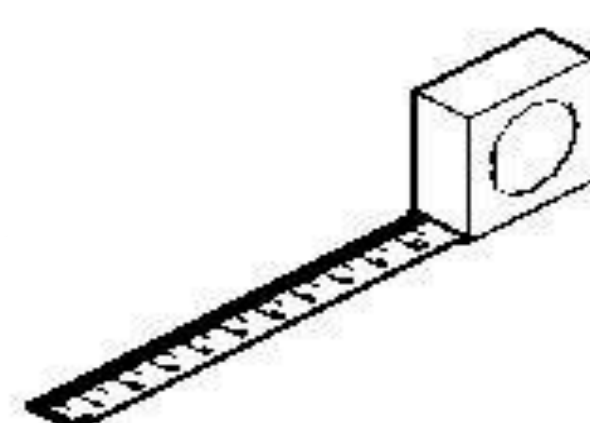

Rule

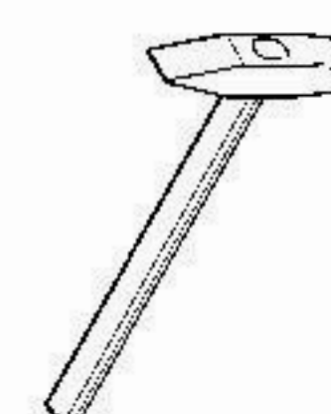

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346










COMPONENTS - PANELS

Please check you have all the panels listed below

1 x1 Front (separate package)	2 x1	3 x2
4 x2	5 x1	6 x1
7 x1		

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

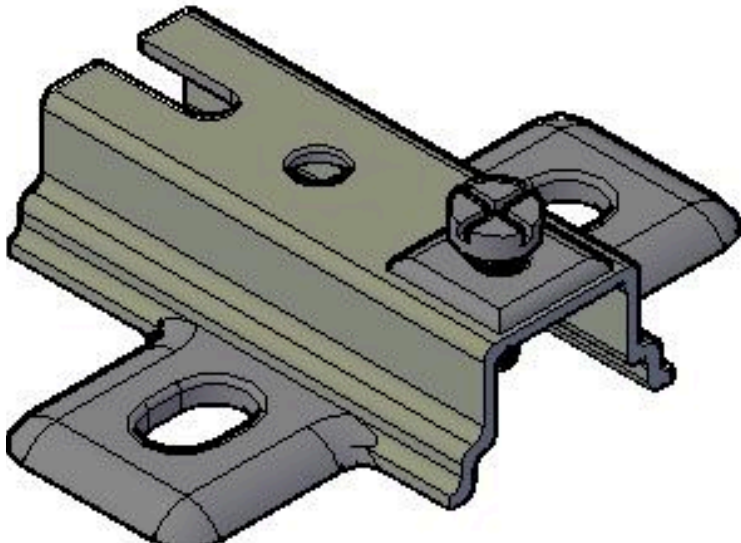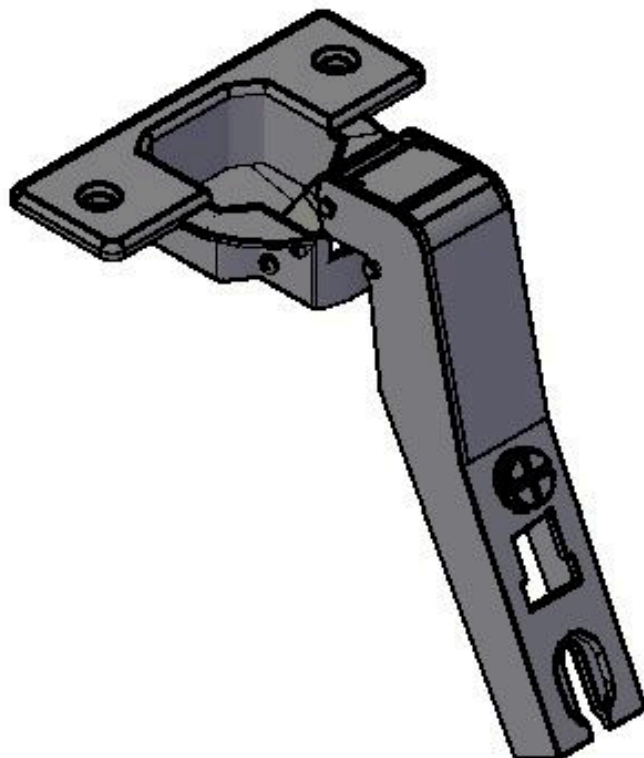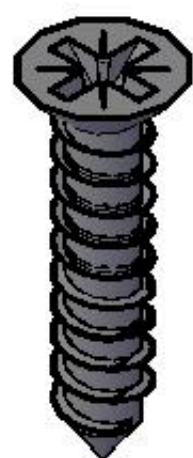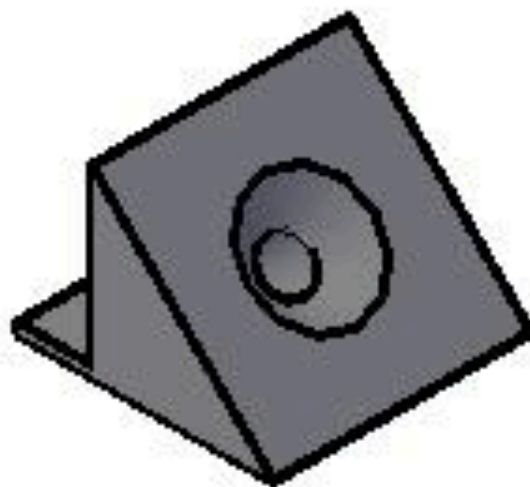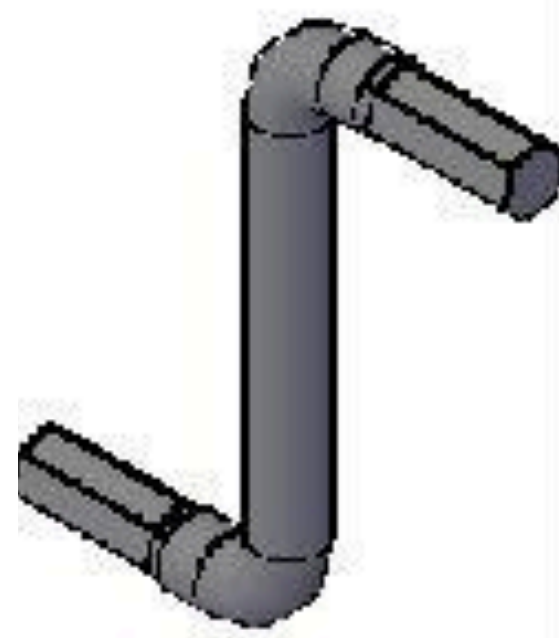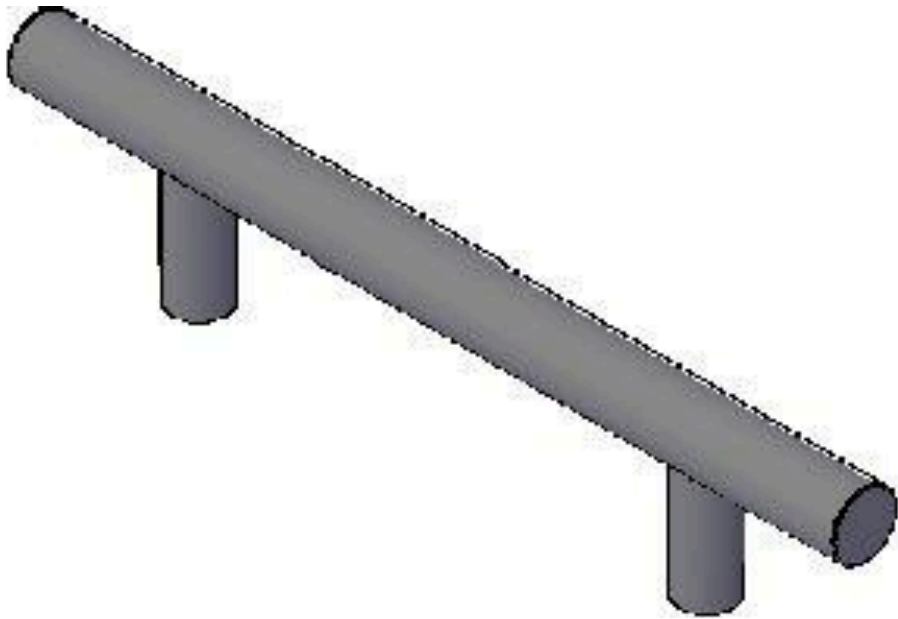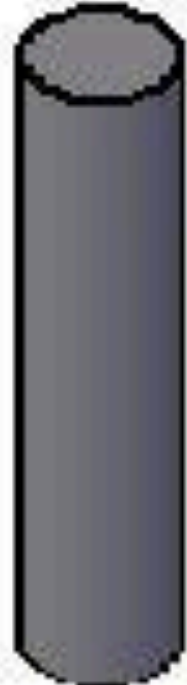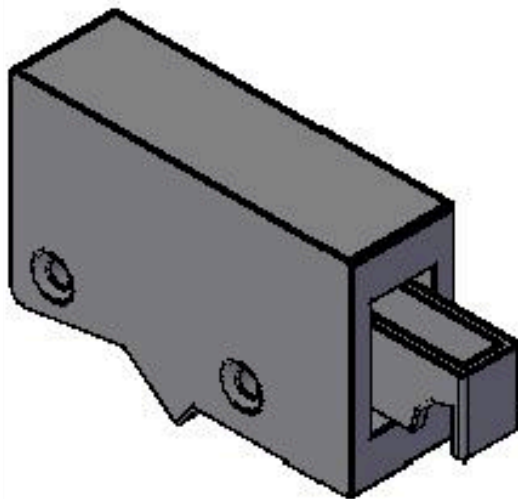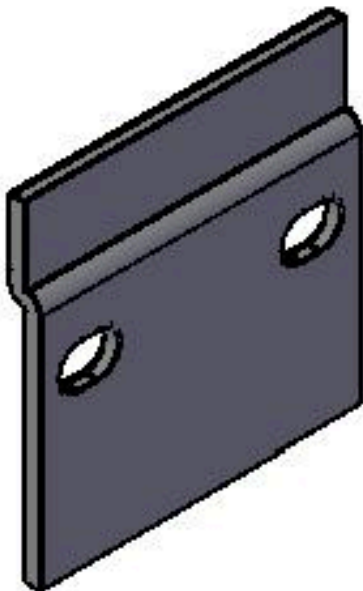O x4  ⌀ 7x16	F x2 	G4 x2 	! PAY ATTENTION: O AND F ATTACHED TO G4
H3 x16  ⌀ 3x16	A4 x10 	Q7 x1 	C x12  ⌀ 7x50
S1 x12 	H9 x6 US 031.03  ⌀ 4x30	J9 x2  ⌀ 3x25	U7 x1 
H x4 US 031.03  ⌀ 3.5x13	W x42 	D8 x5 	A x8 
Z8 x3 	Z9 x3 		

STEP - 1


! PAY ATTENTION: O ATTACHED TO F

O x4



‡ 7x16


F x2

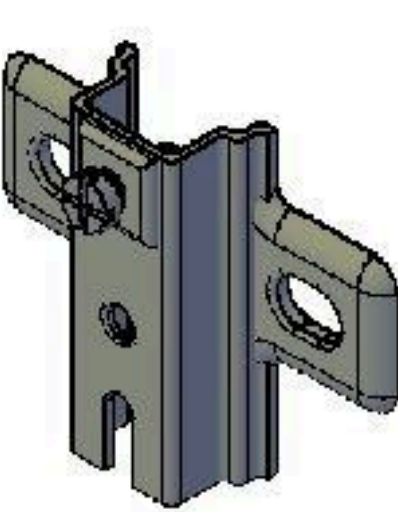

D8 x2



H9 x4 US 031.03





‡ 4x30

A x8



Z8 x2

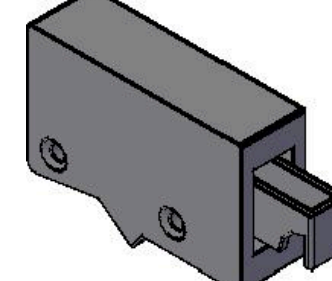

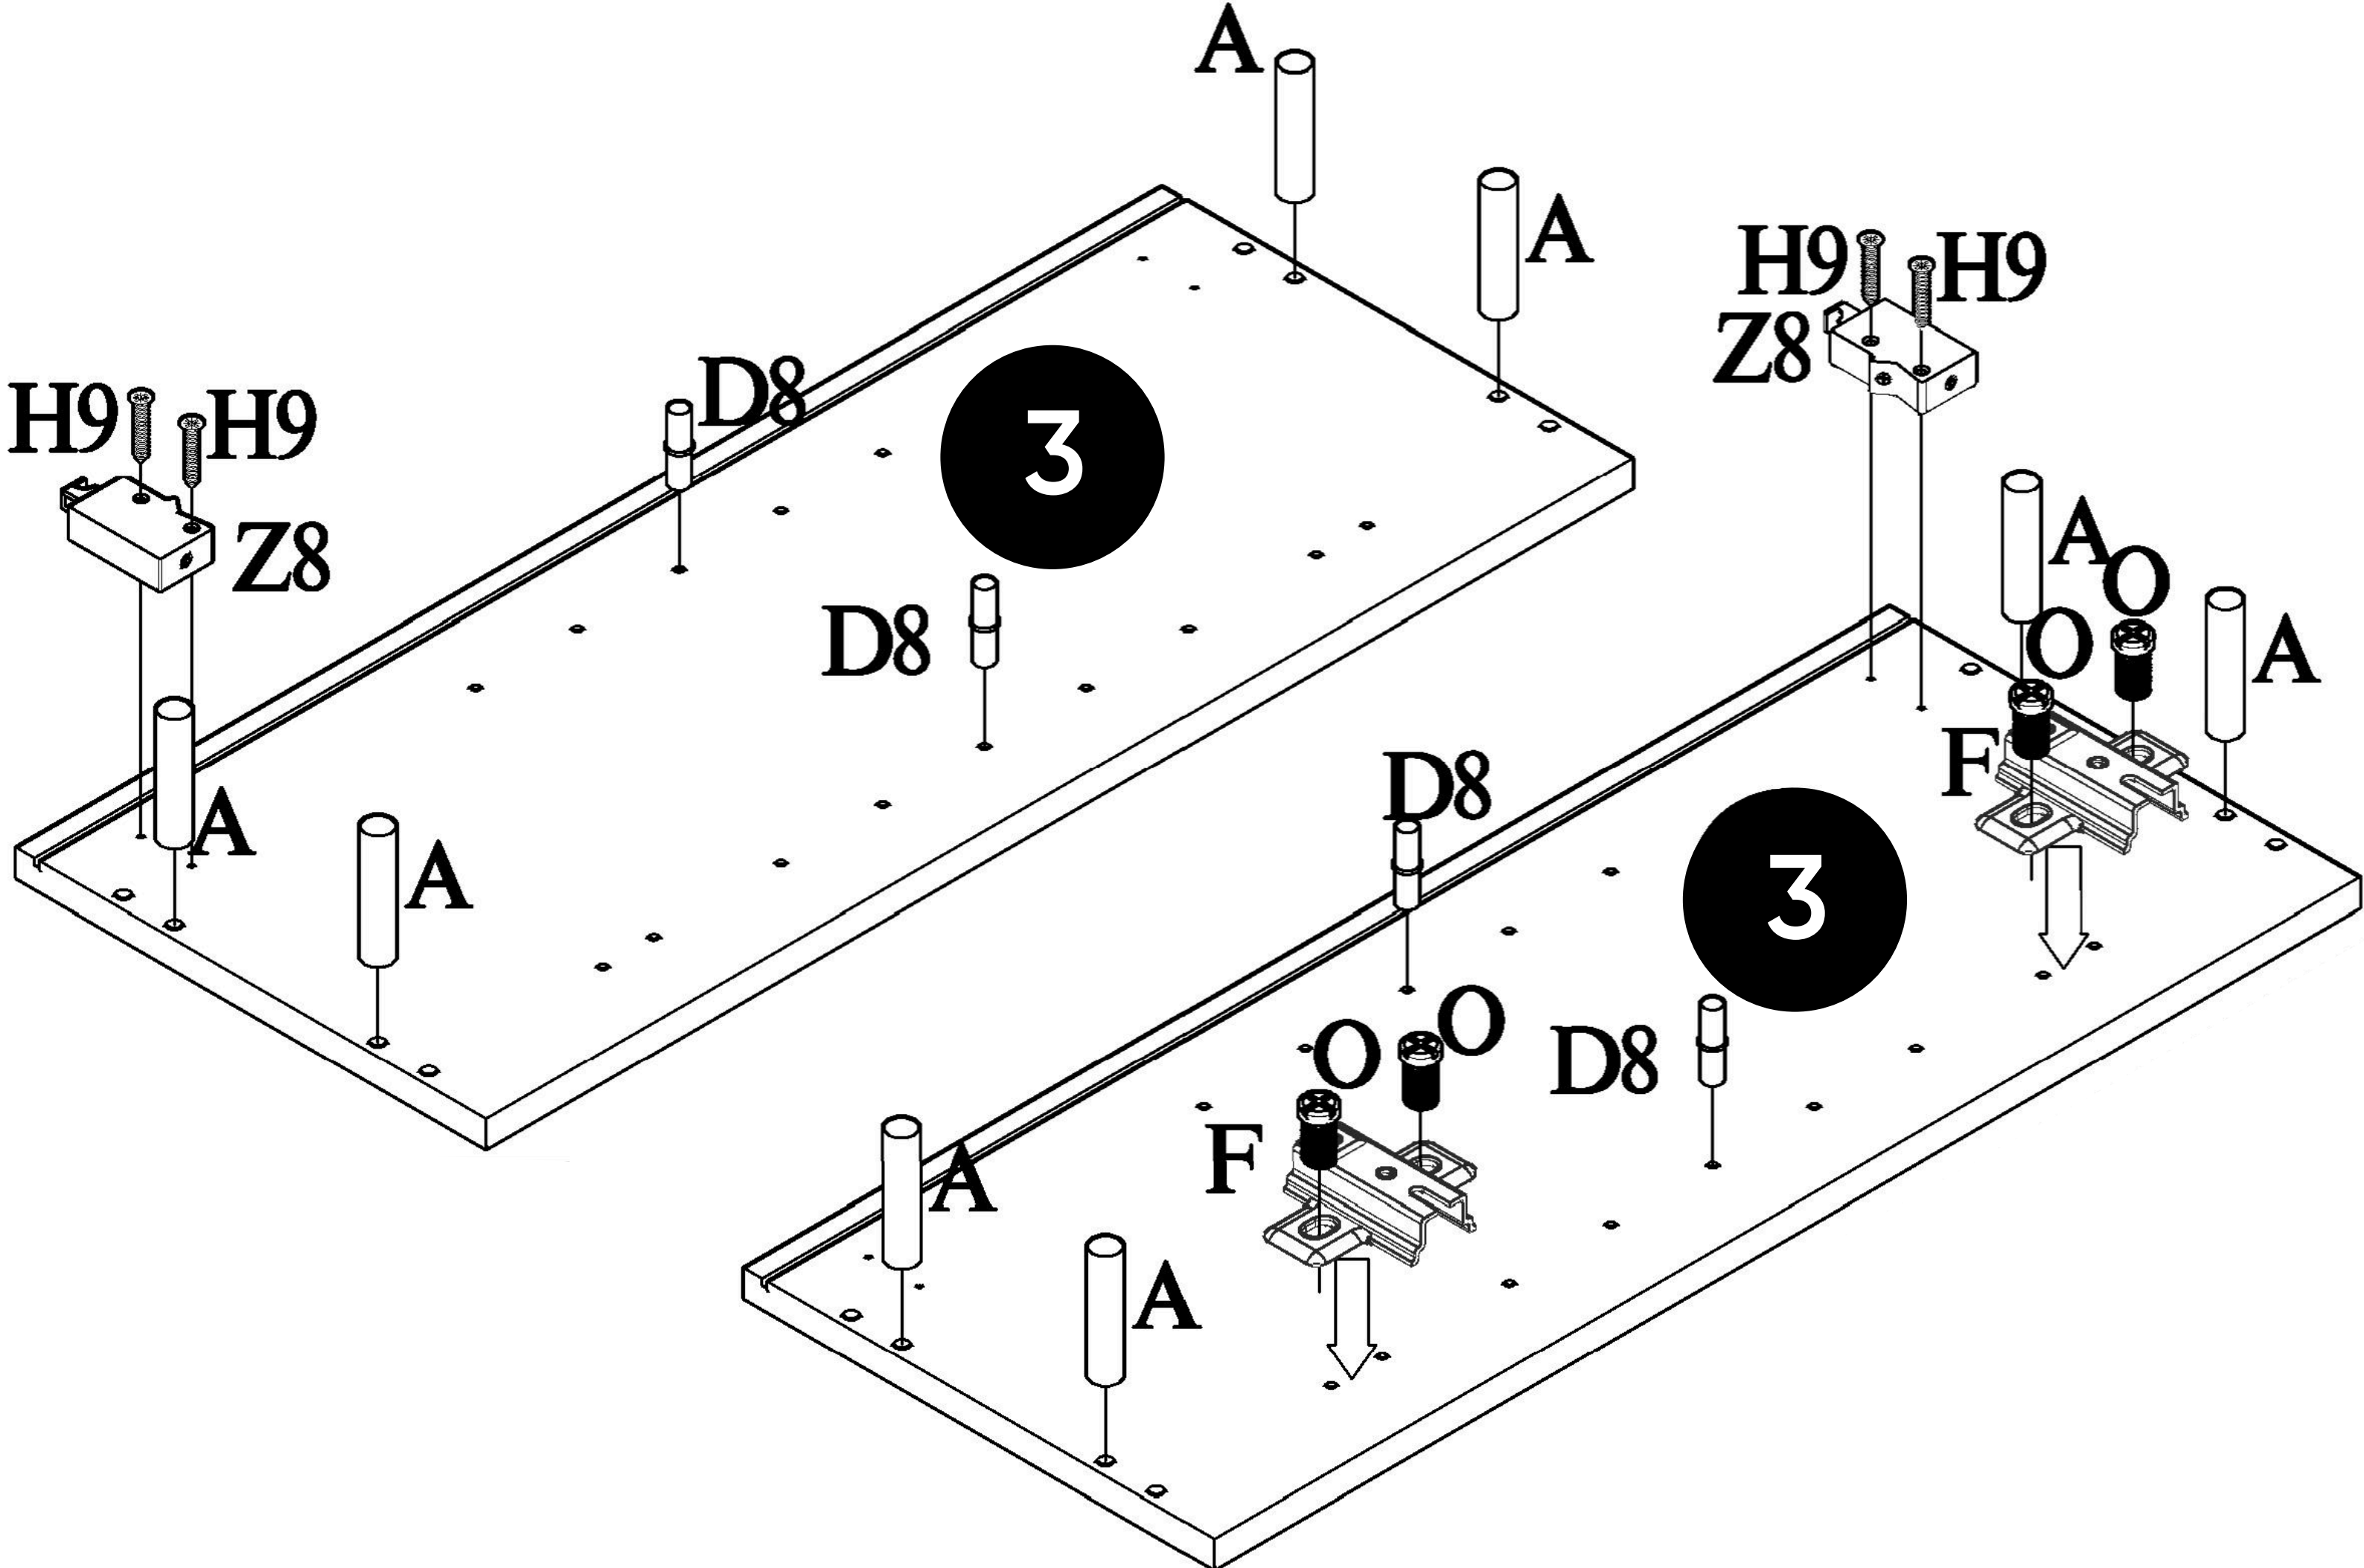


STEP - 2

D8 x1





H9 x2 US 031.03



‡ 4x30


Z8 x1

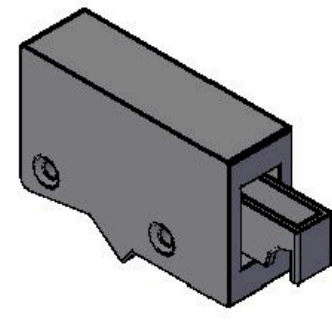

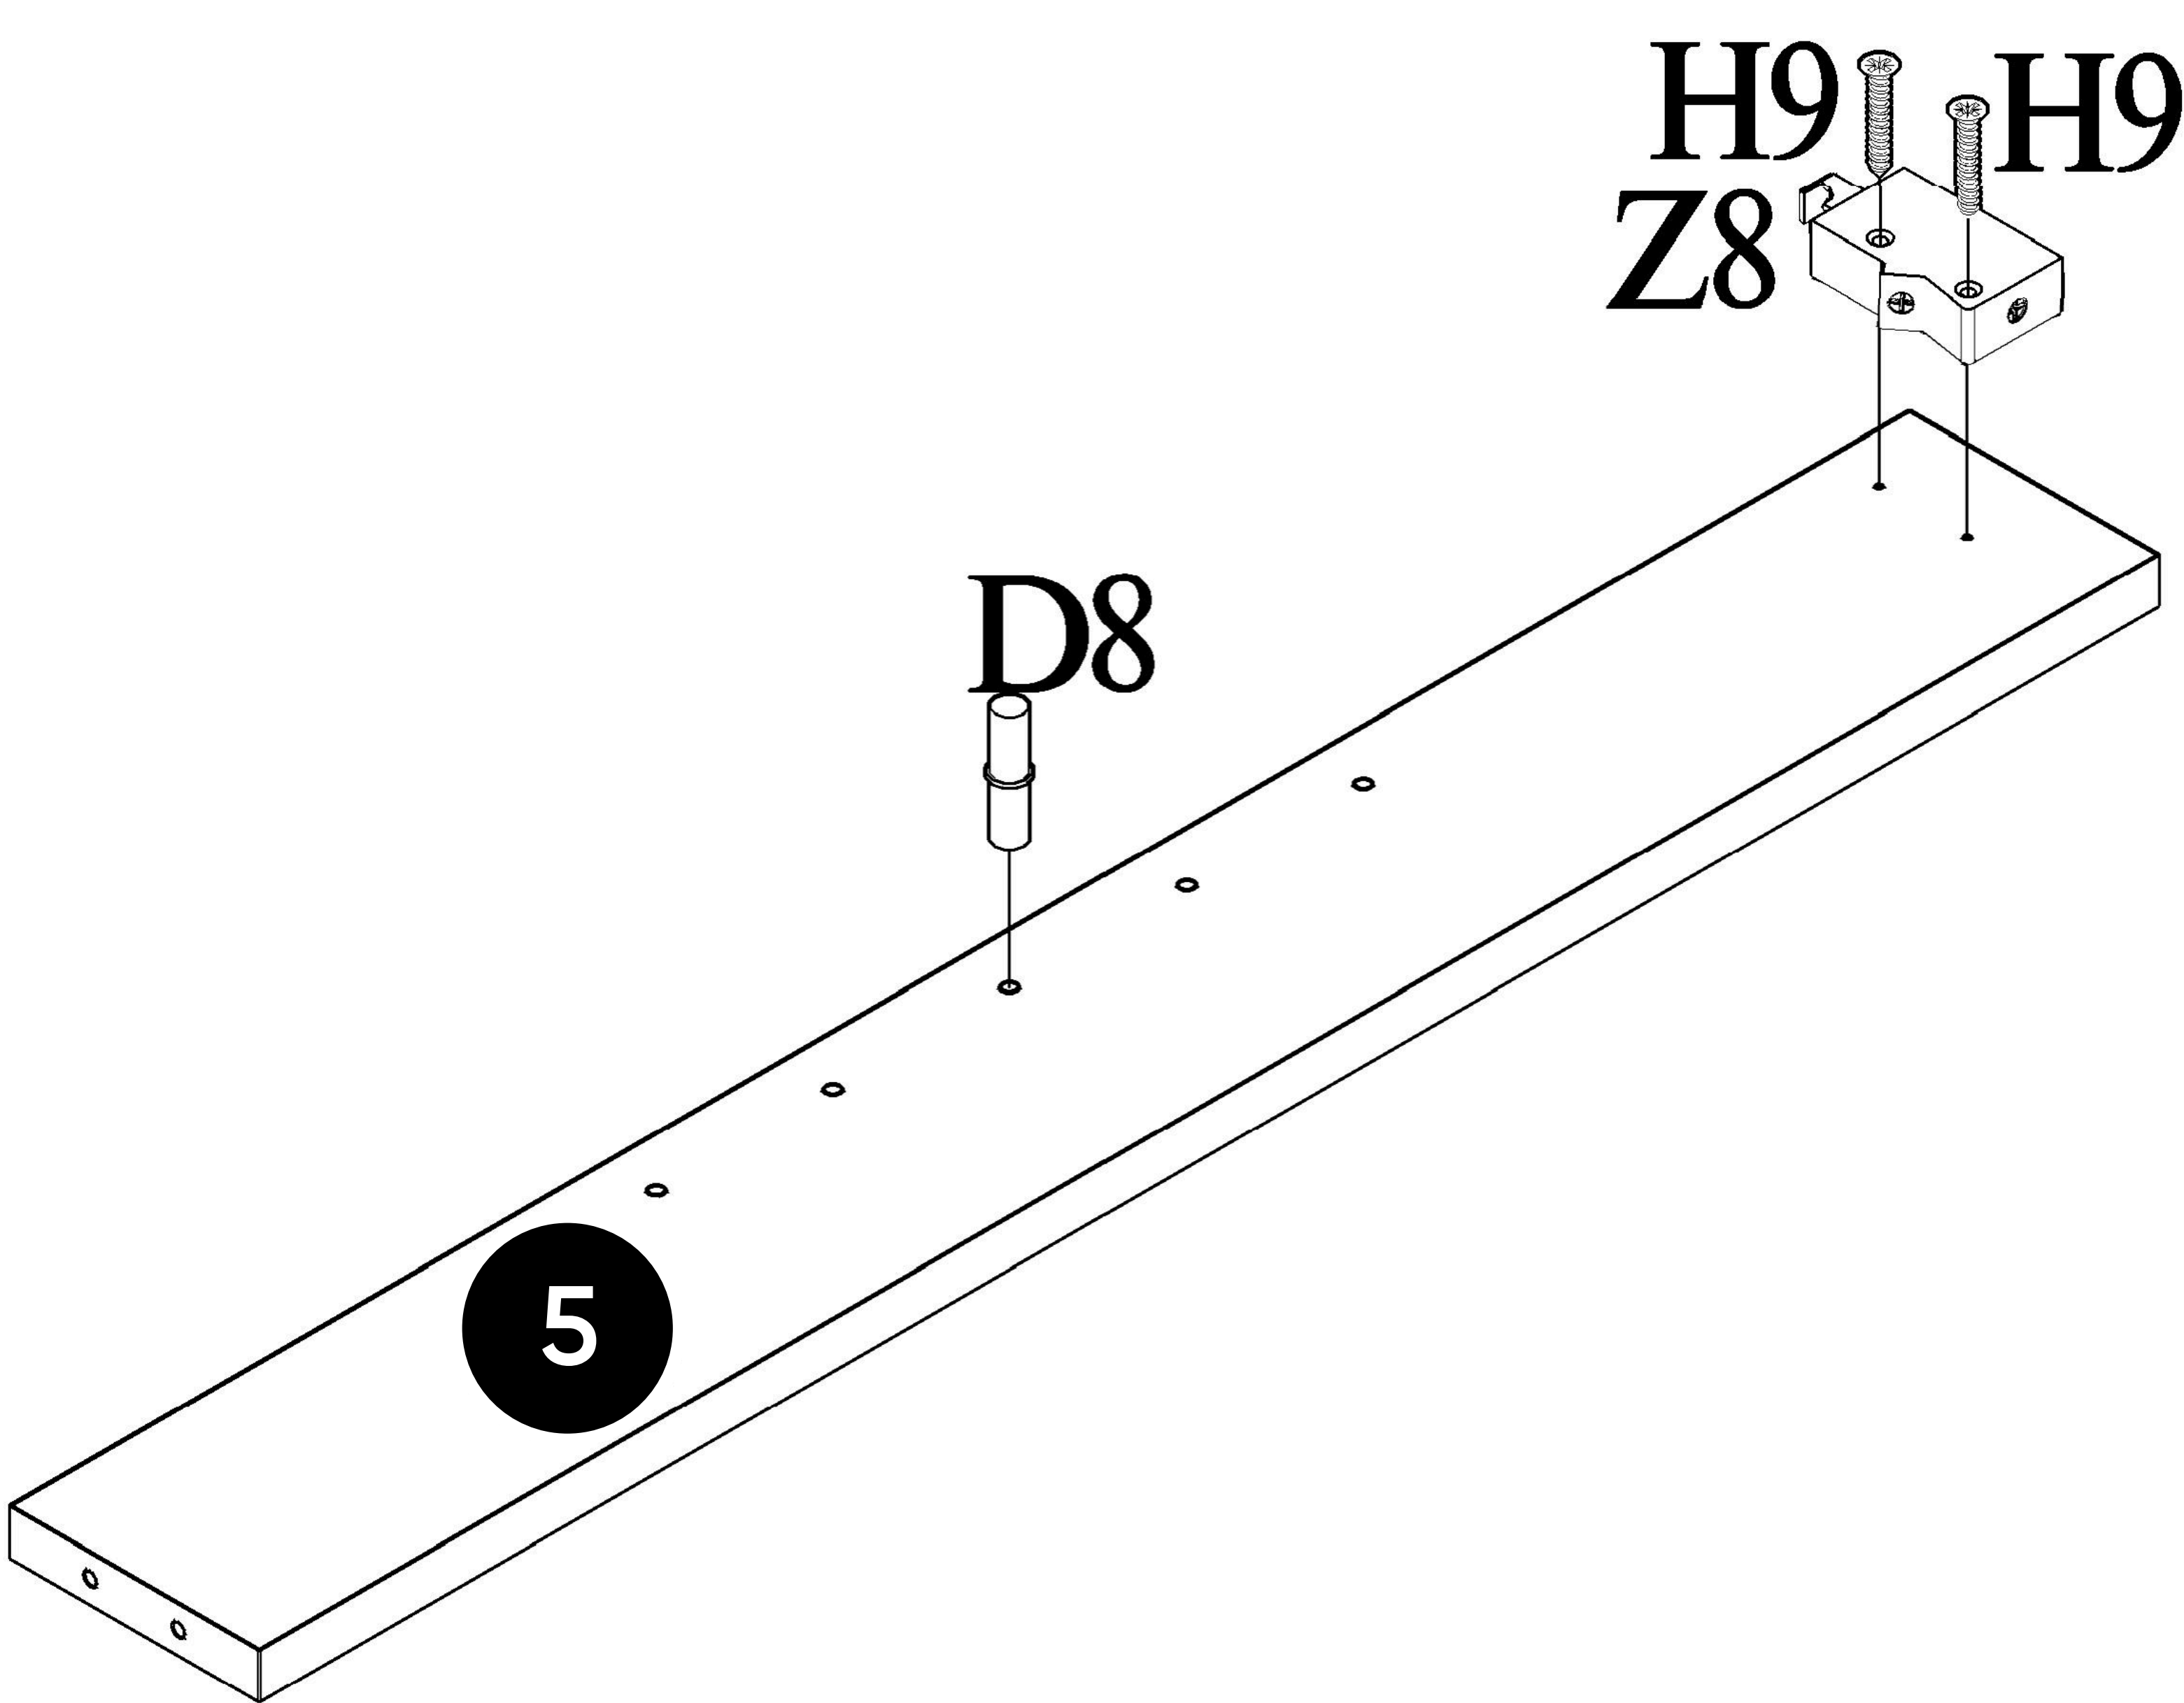


STEP - 3

Q7 x1

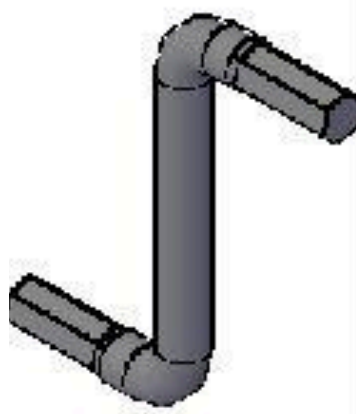


S1 x12

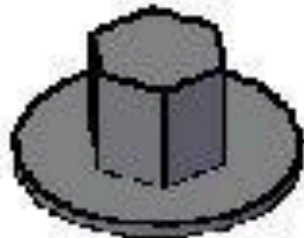


C x12



φ 7x50

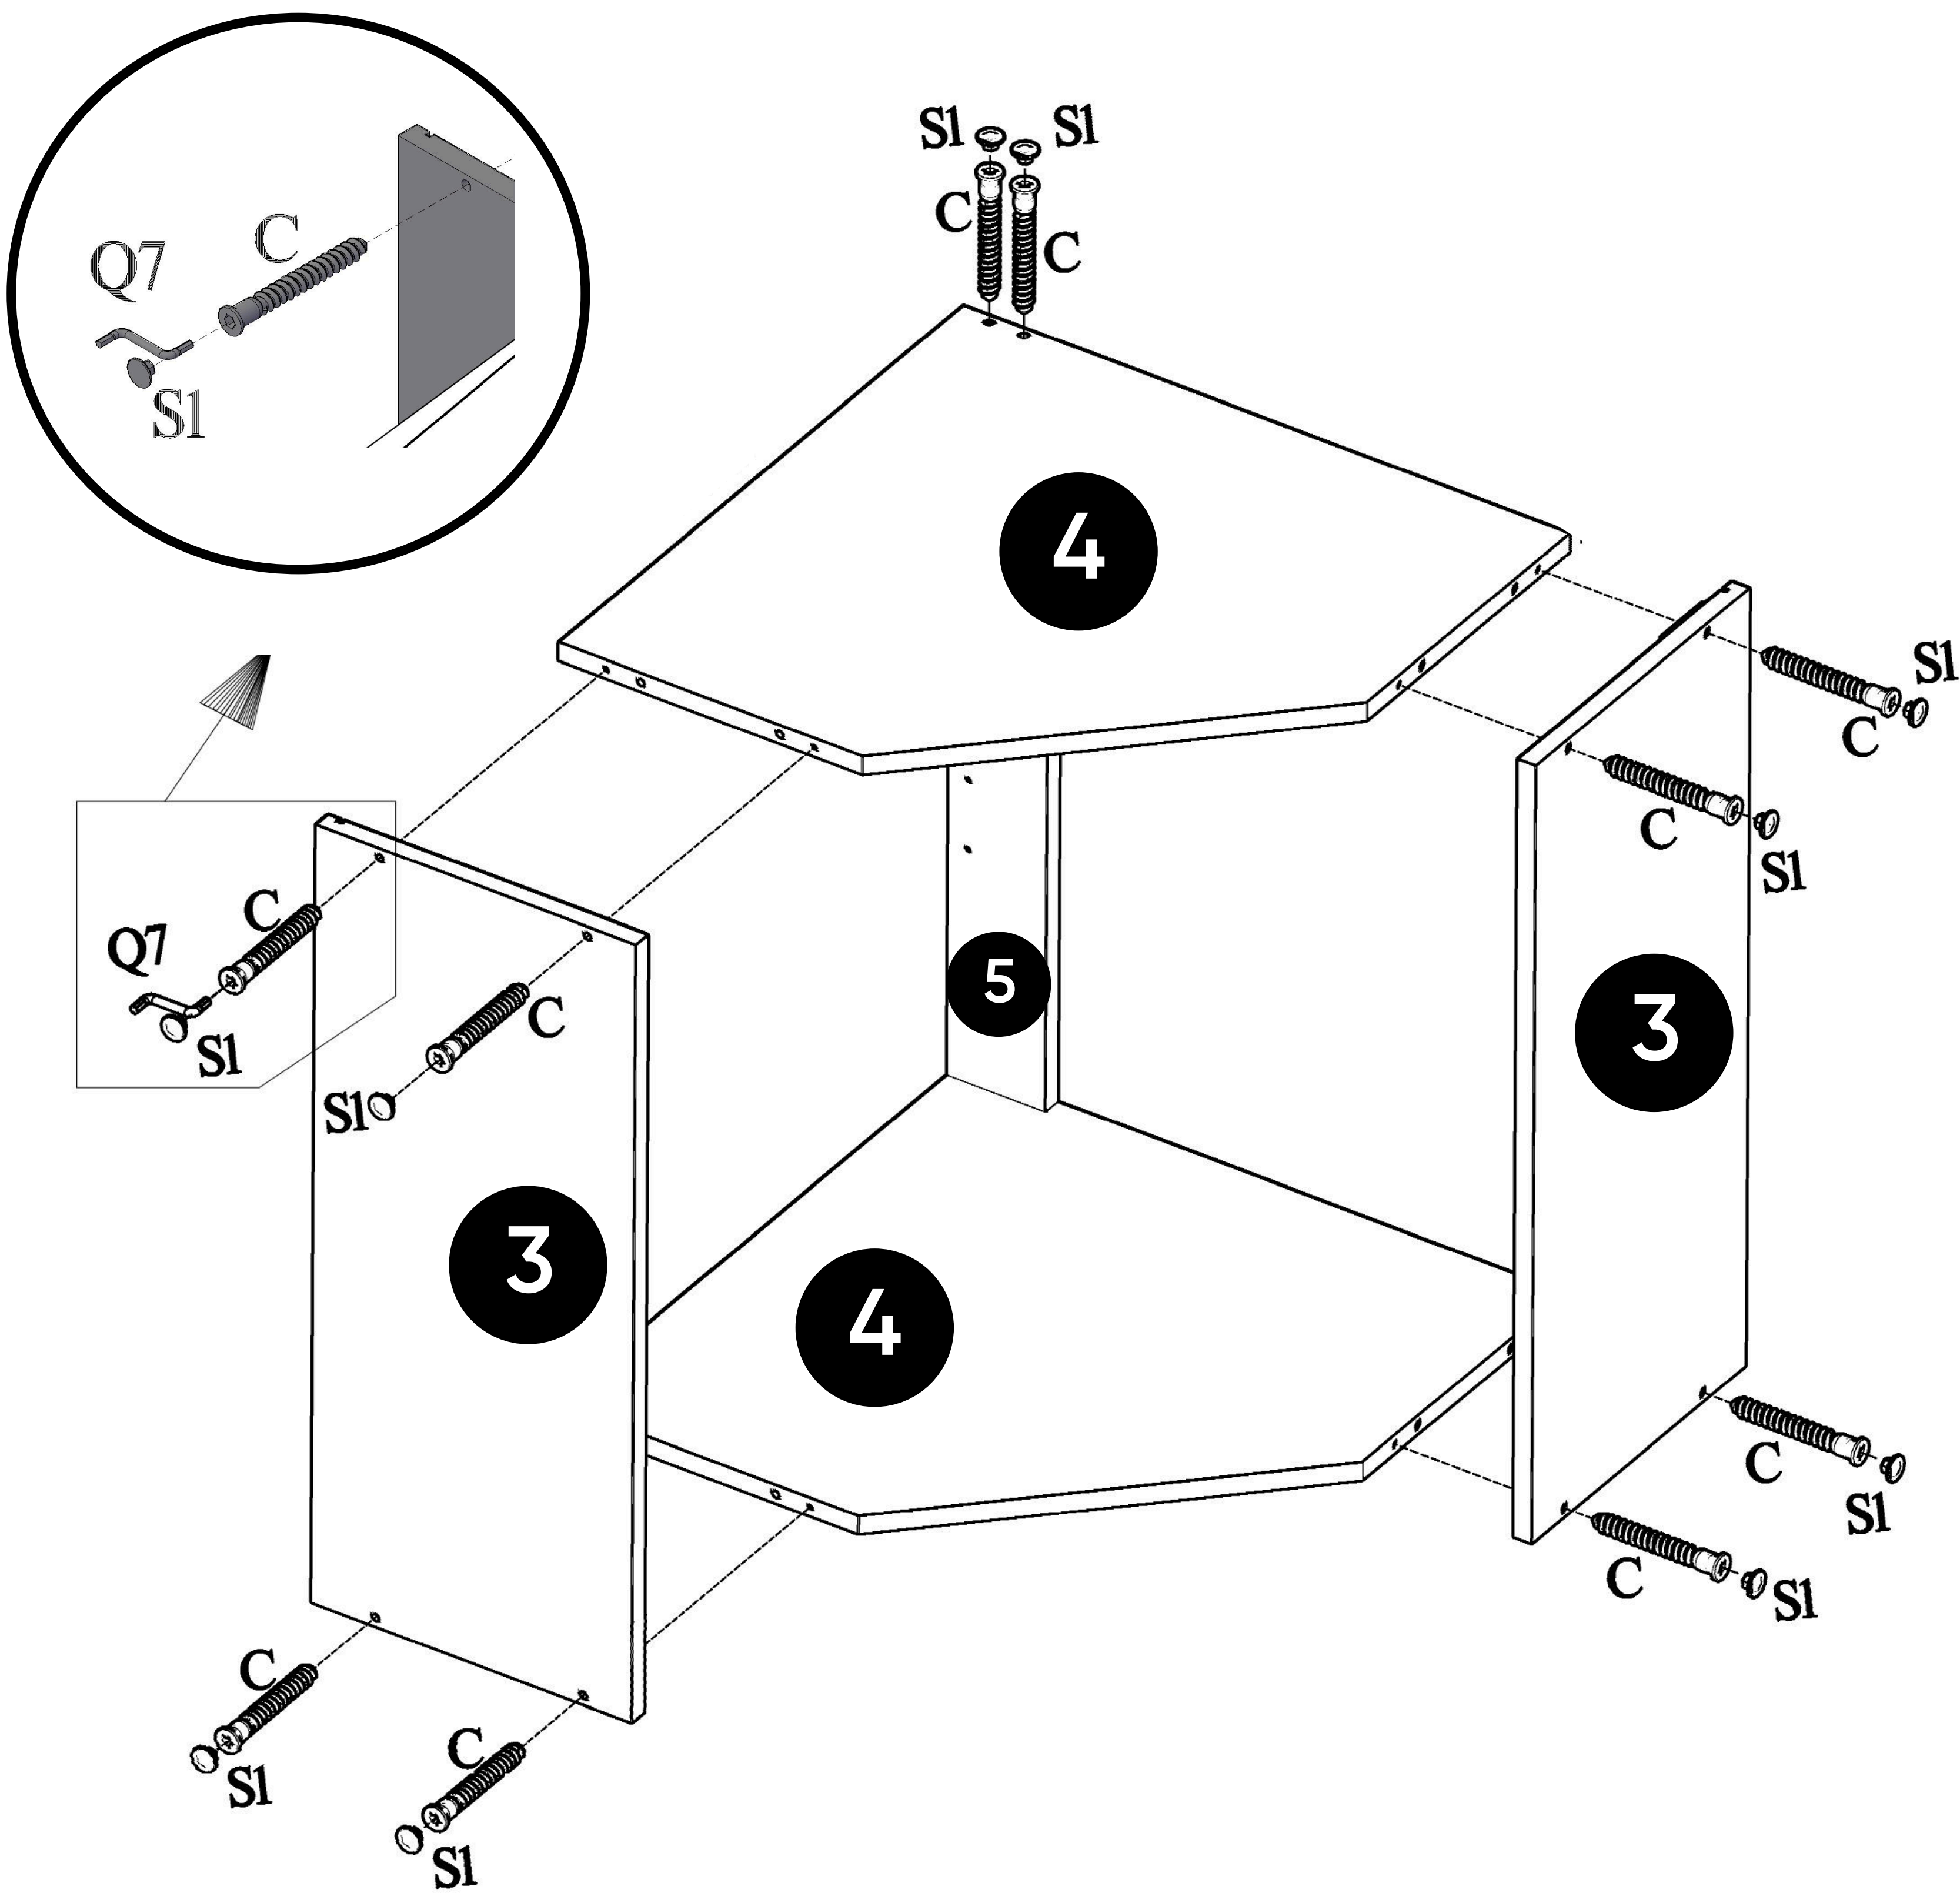


STEP - 4

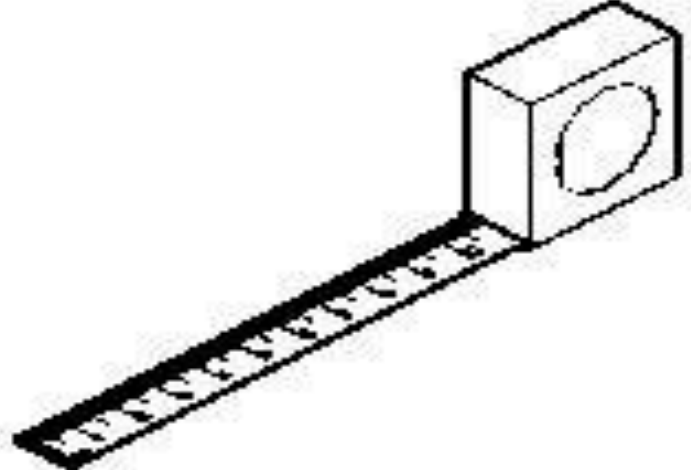


Rule

! X1=X2

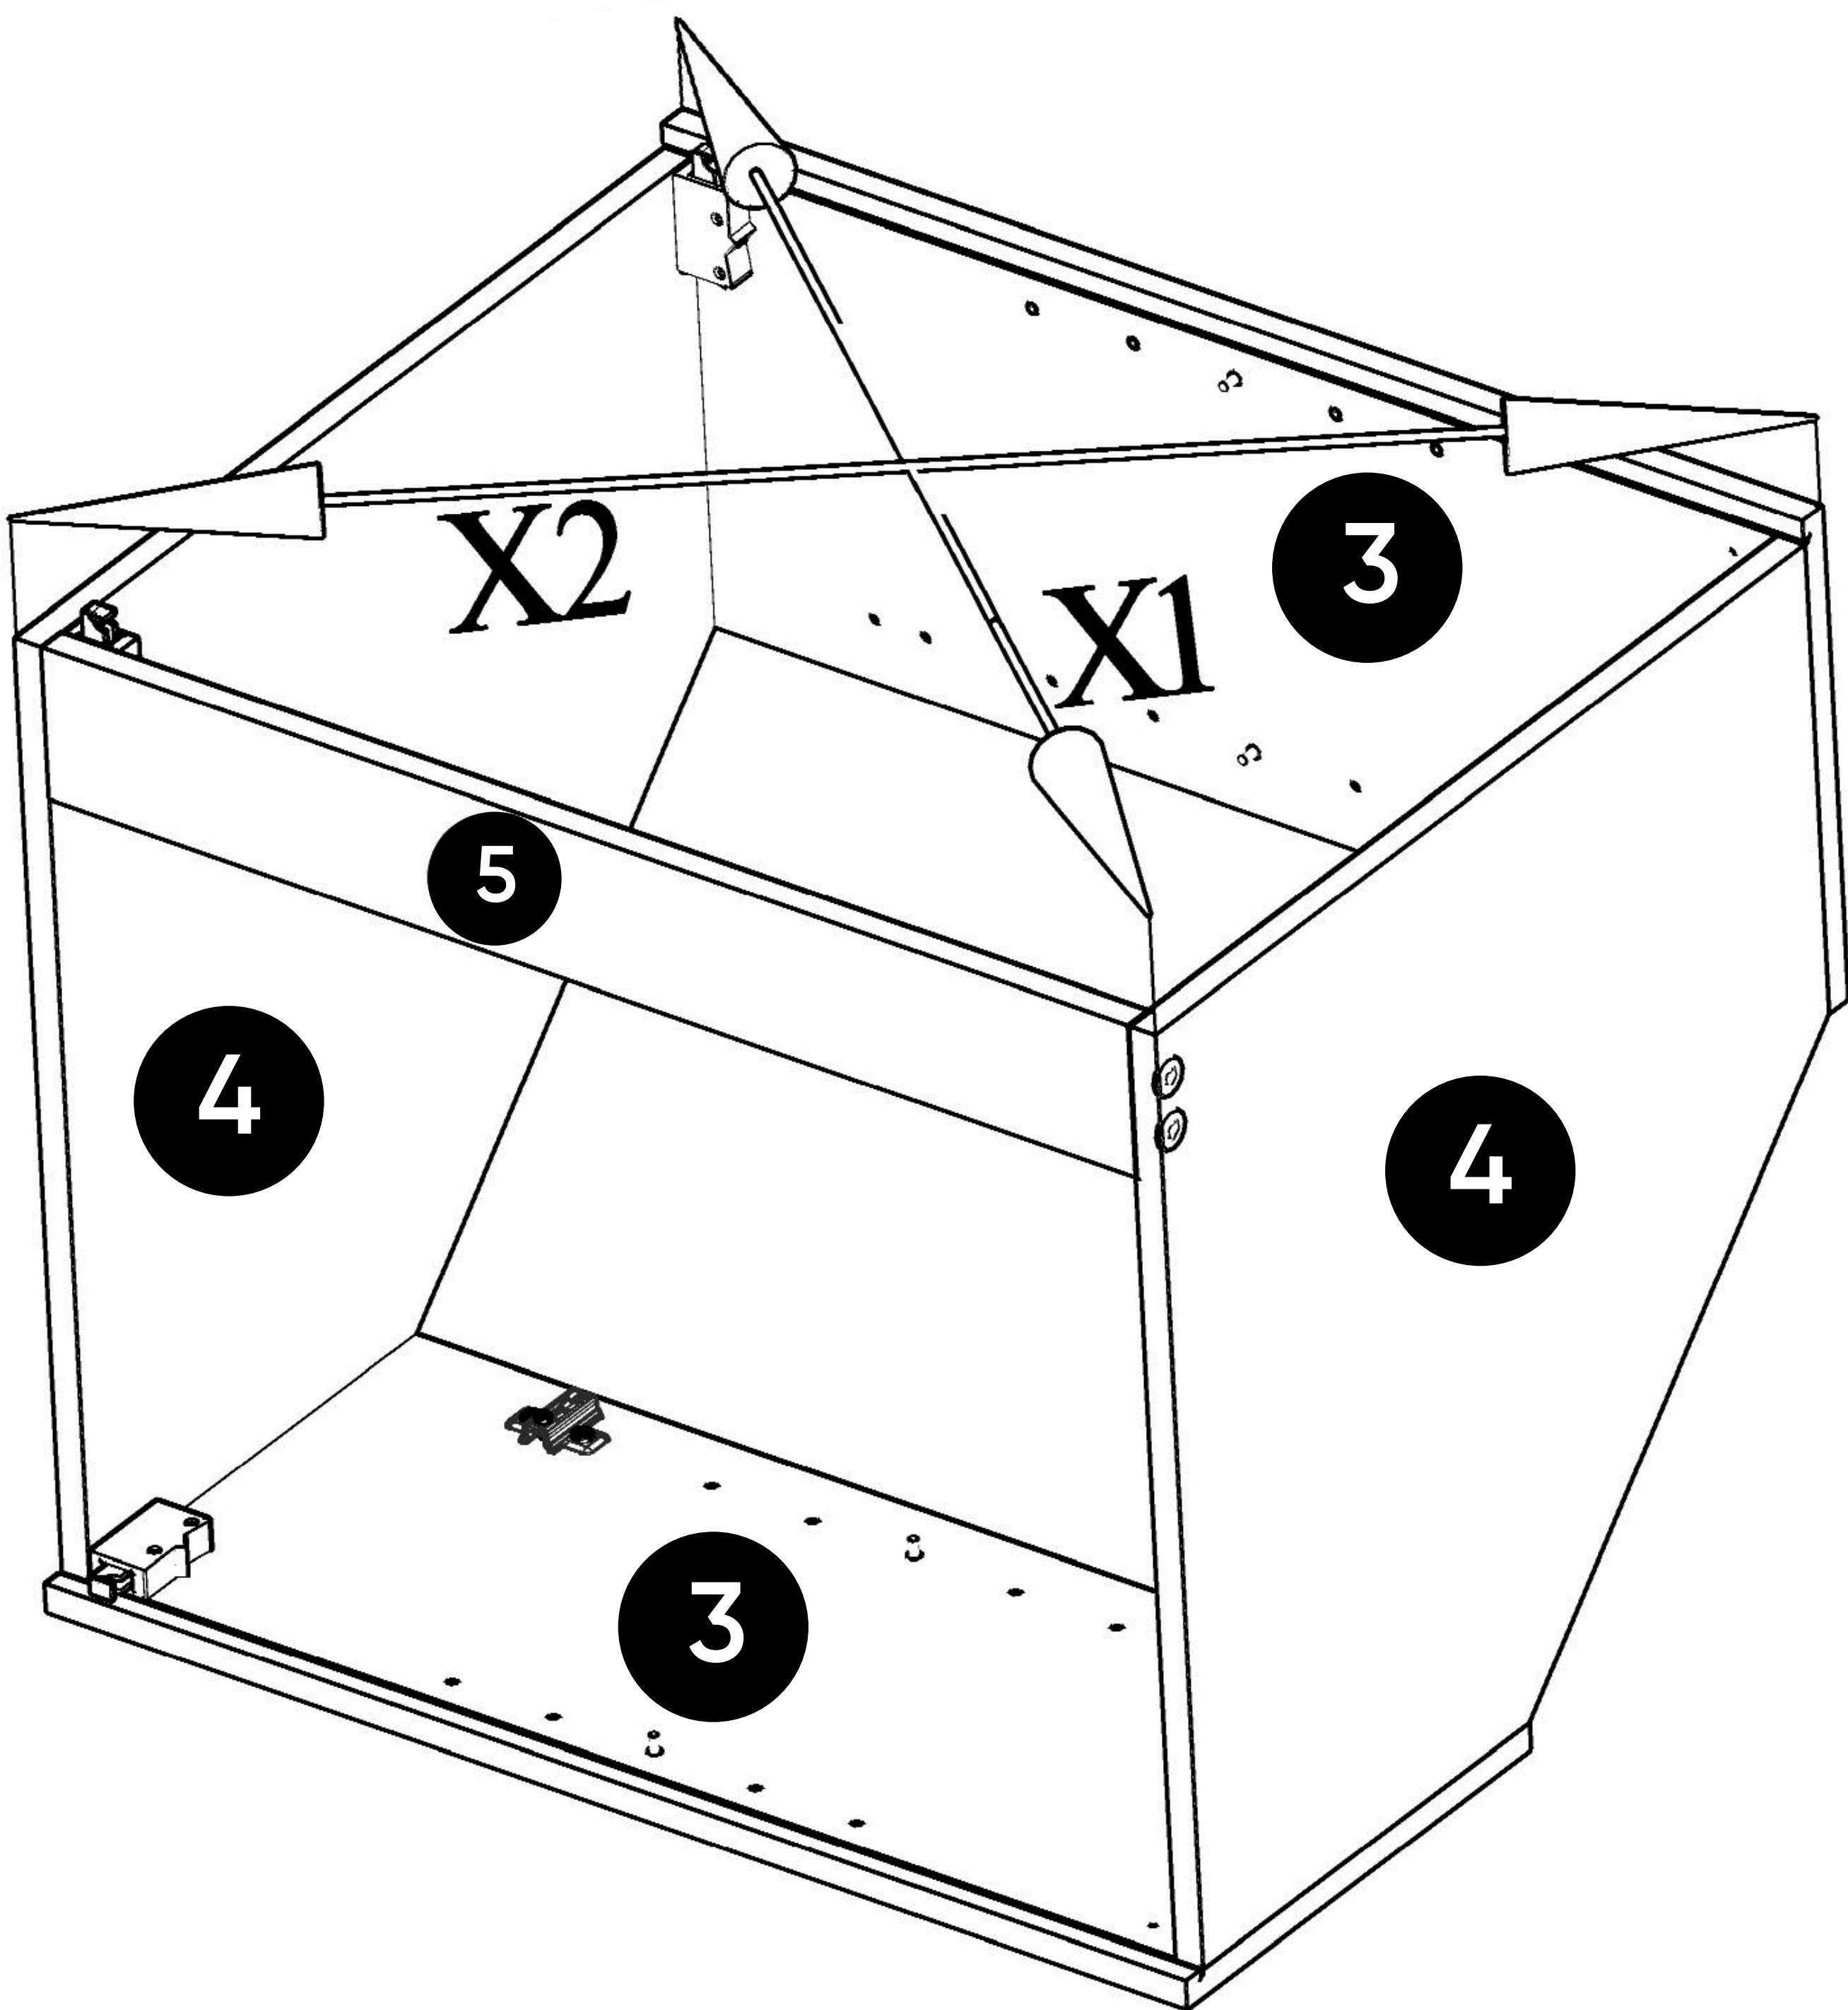


STEP - 5

H3 x5

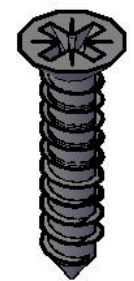


3x16

A4 x5

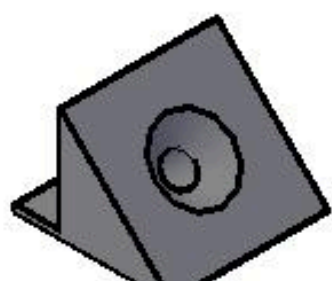


W x28



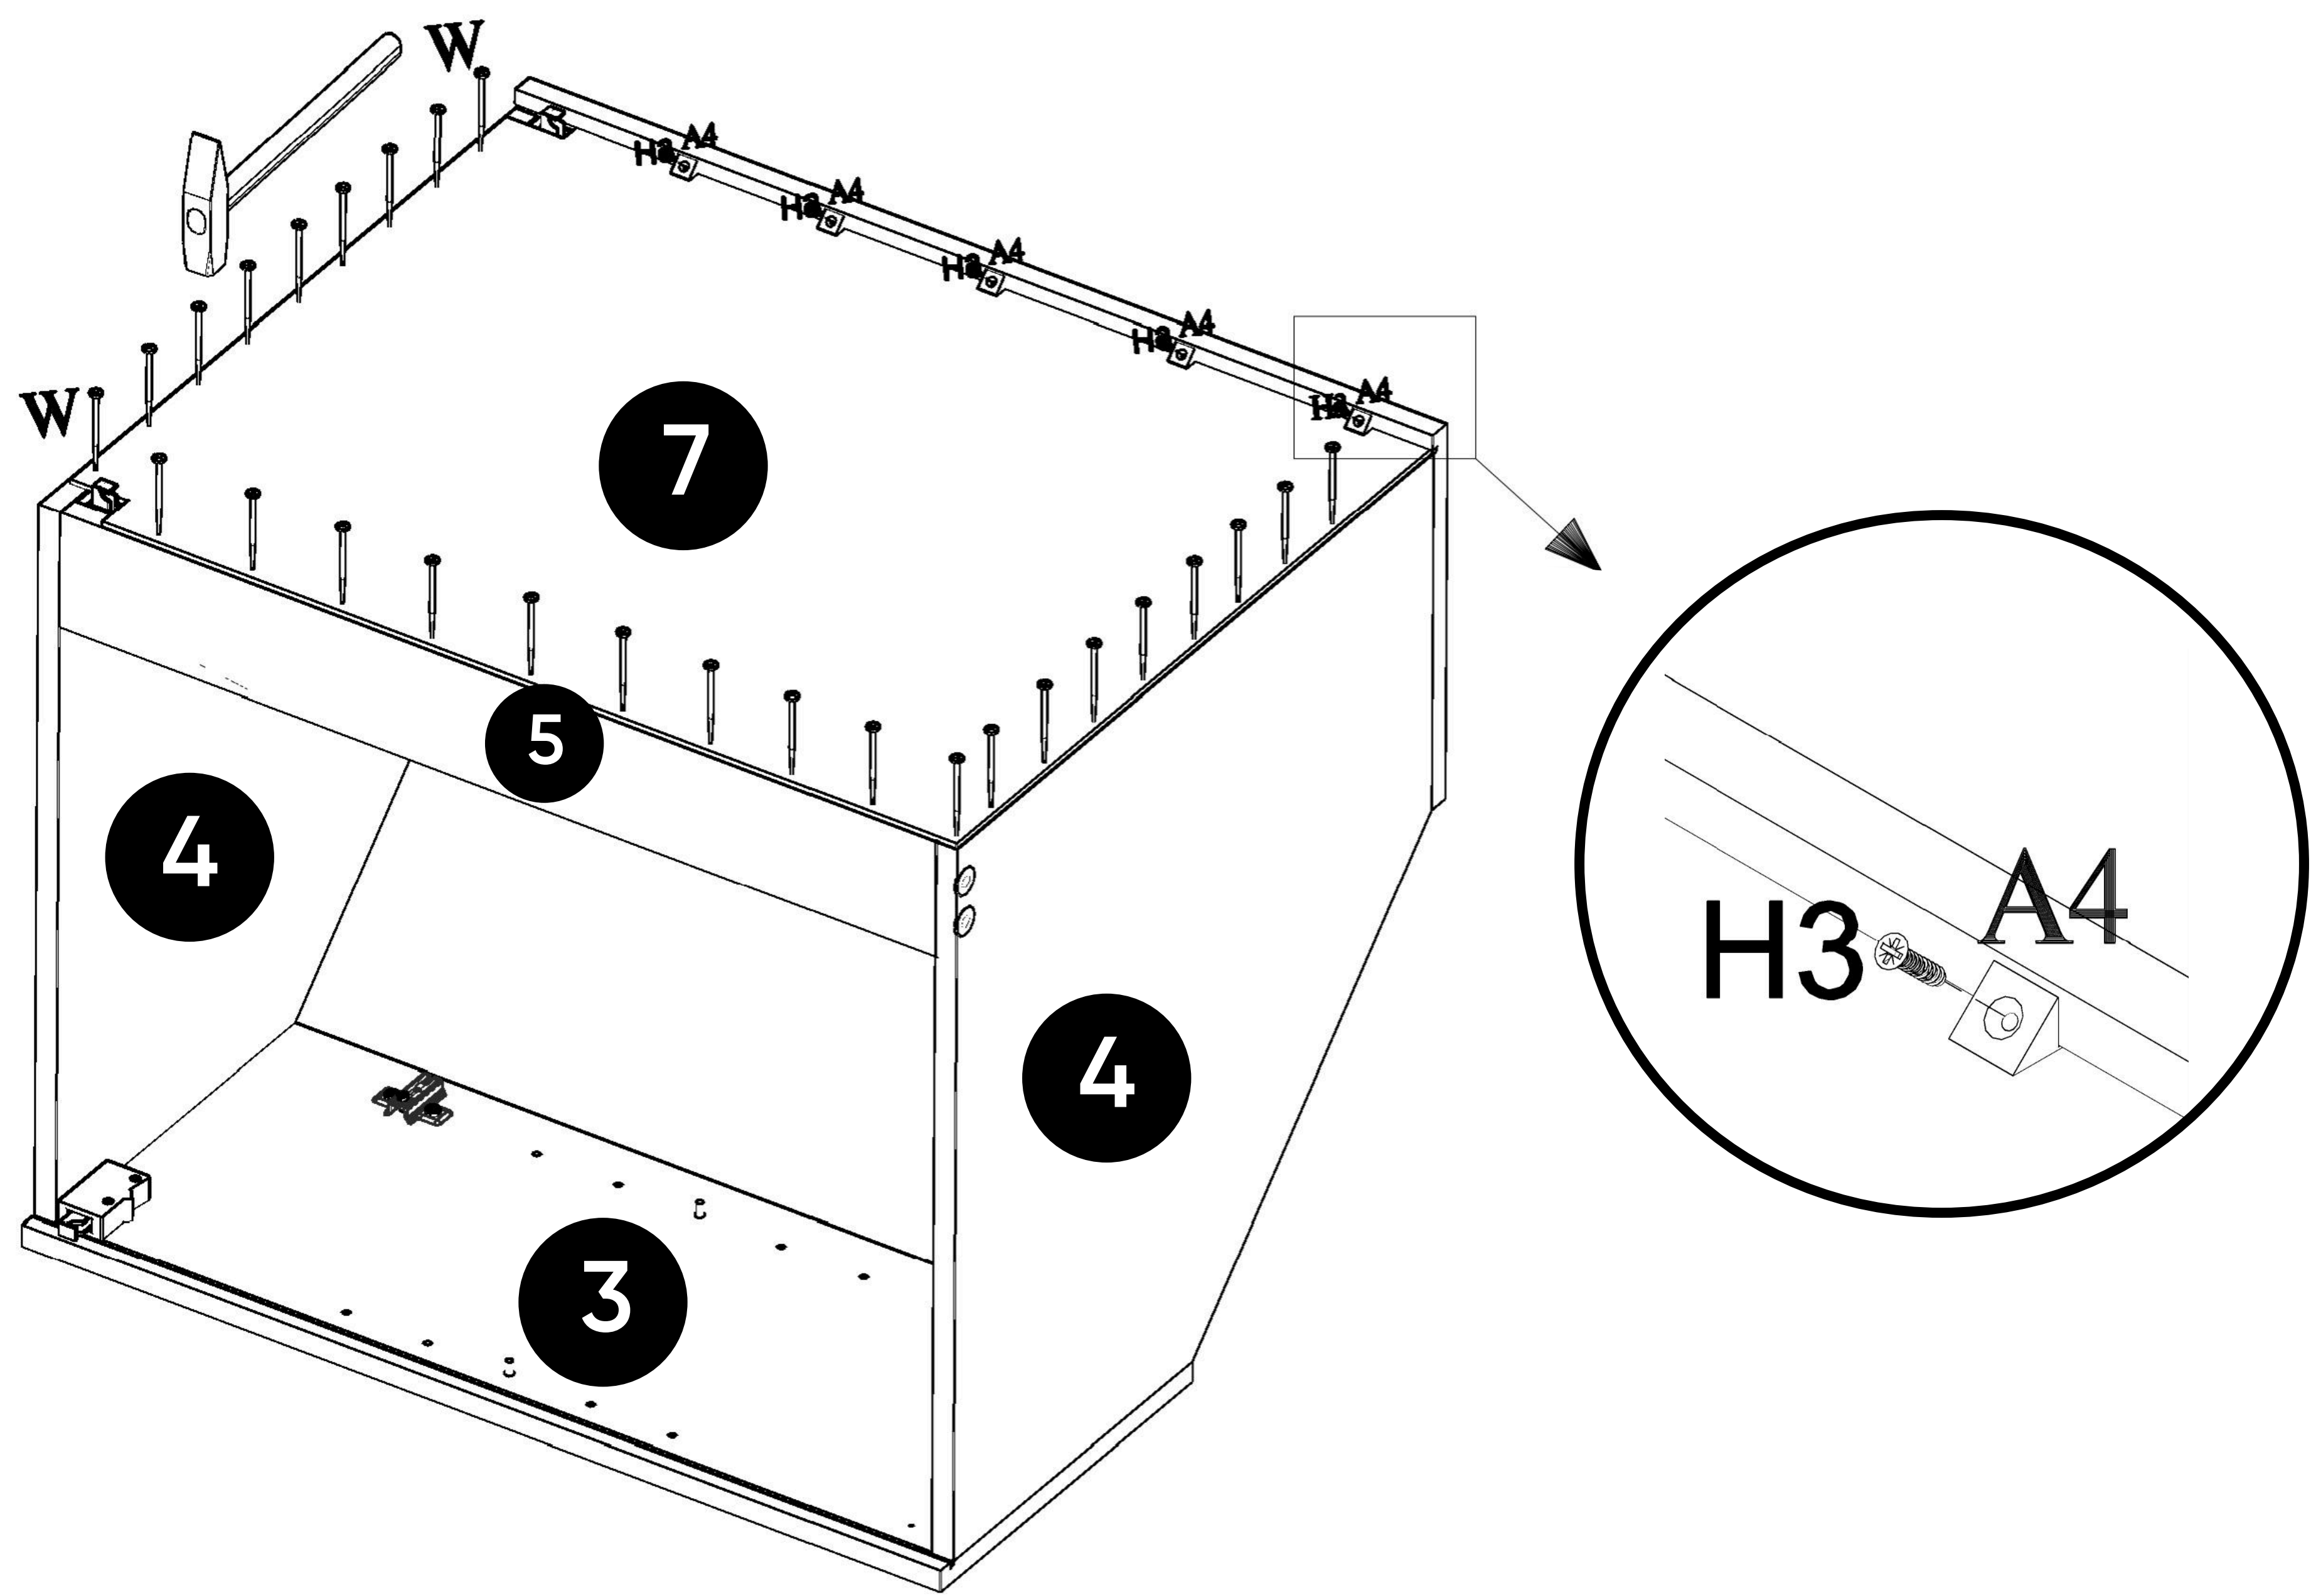


STEP - 6

H3 x11

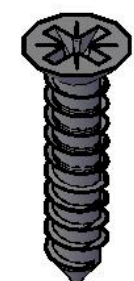


3x16

A4 x5

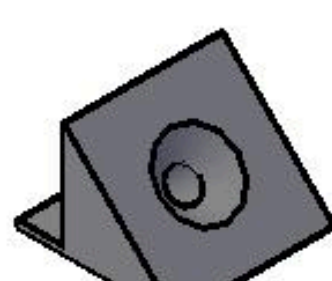


W x14



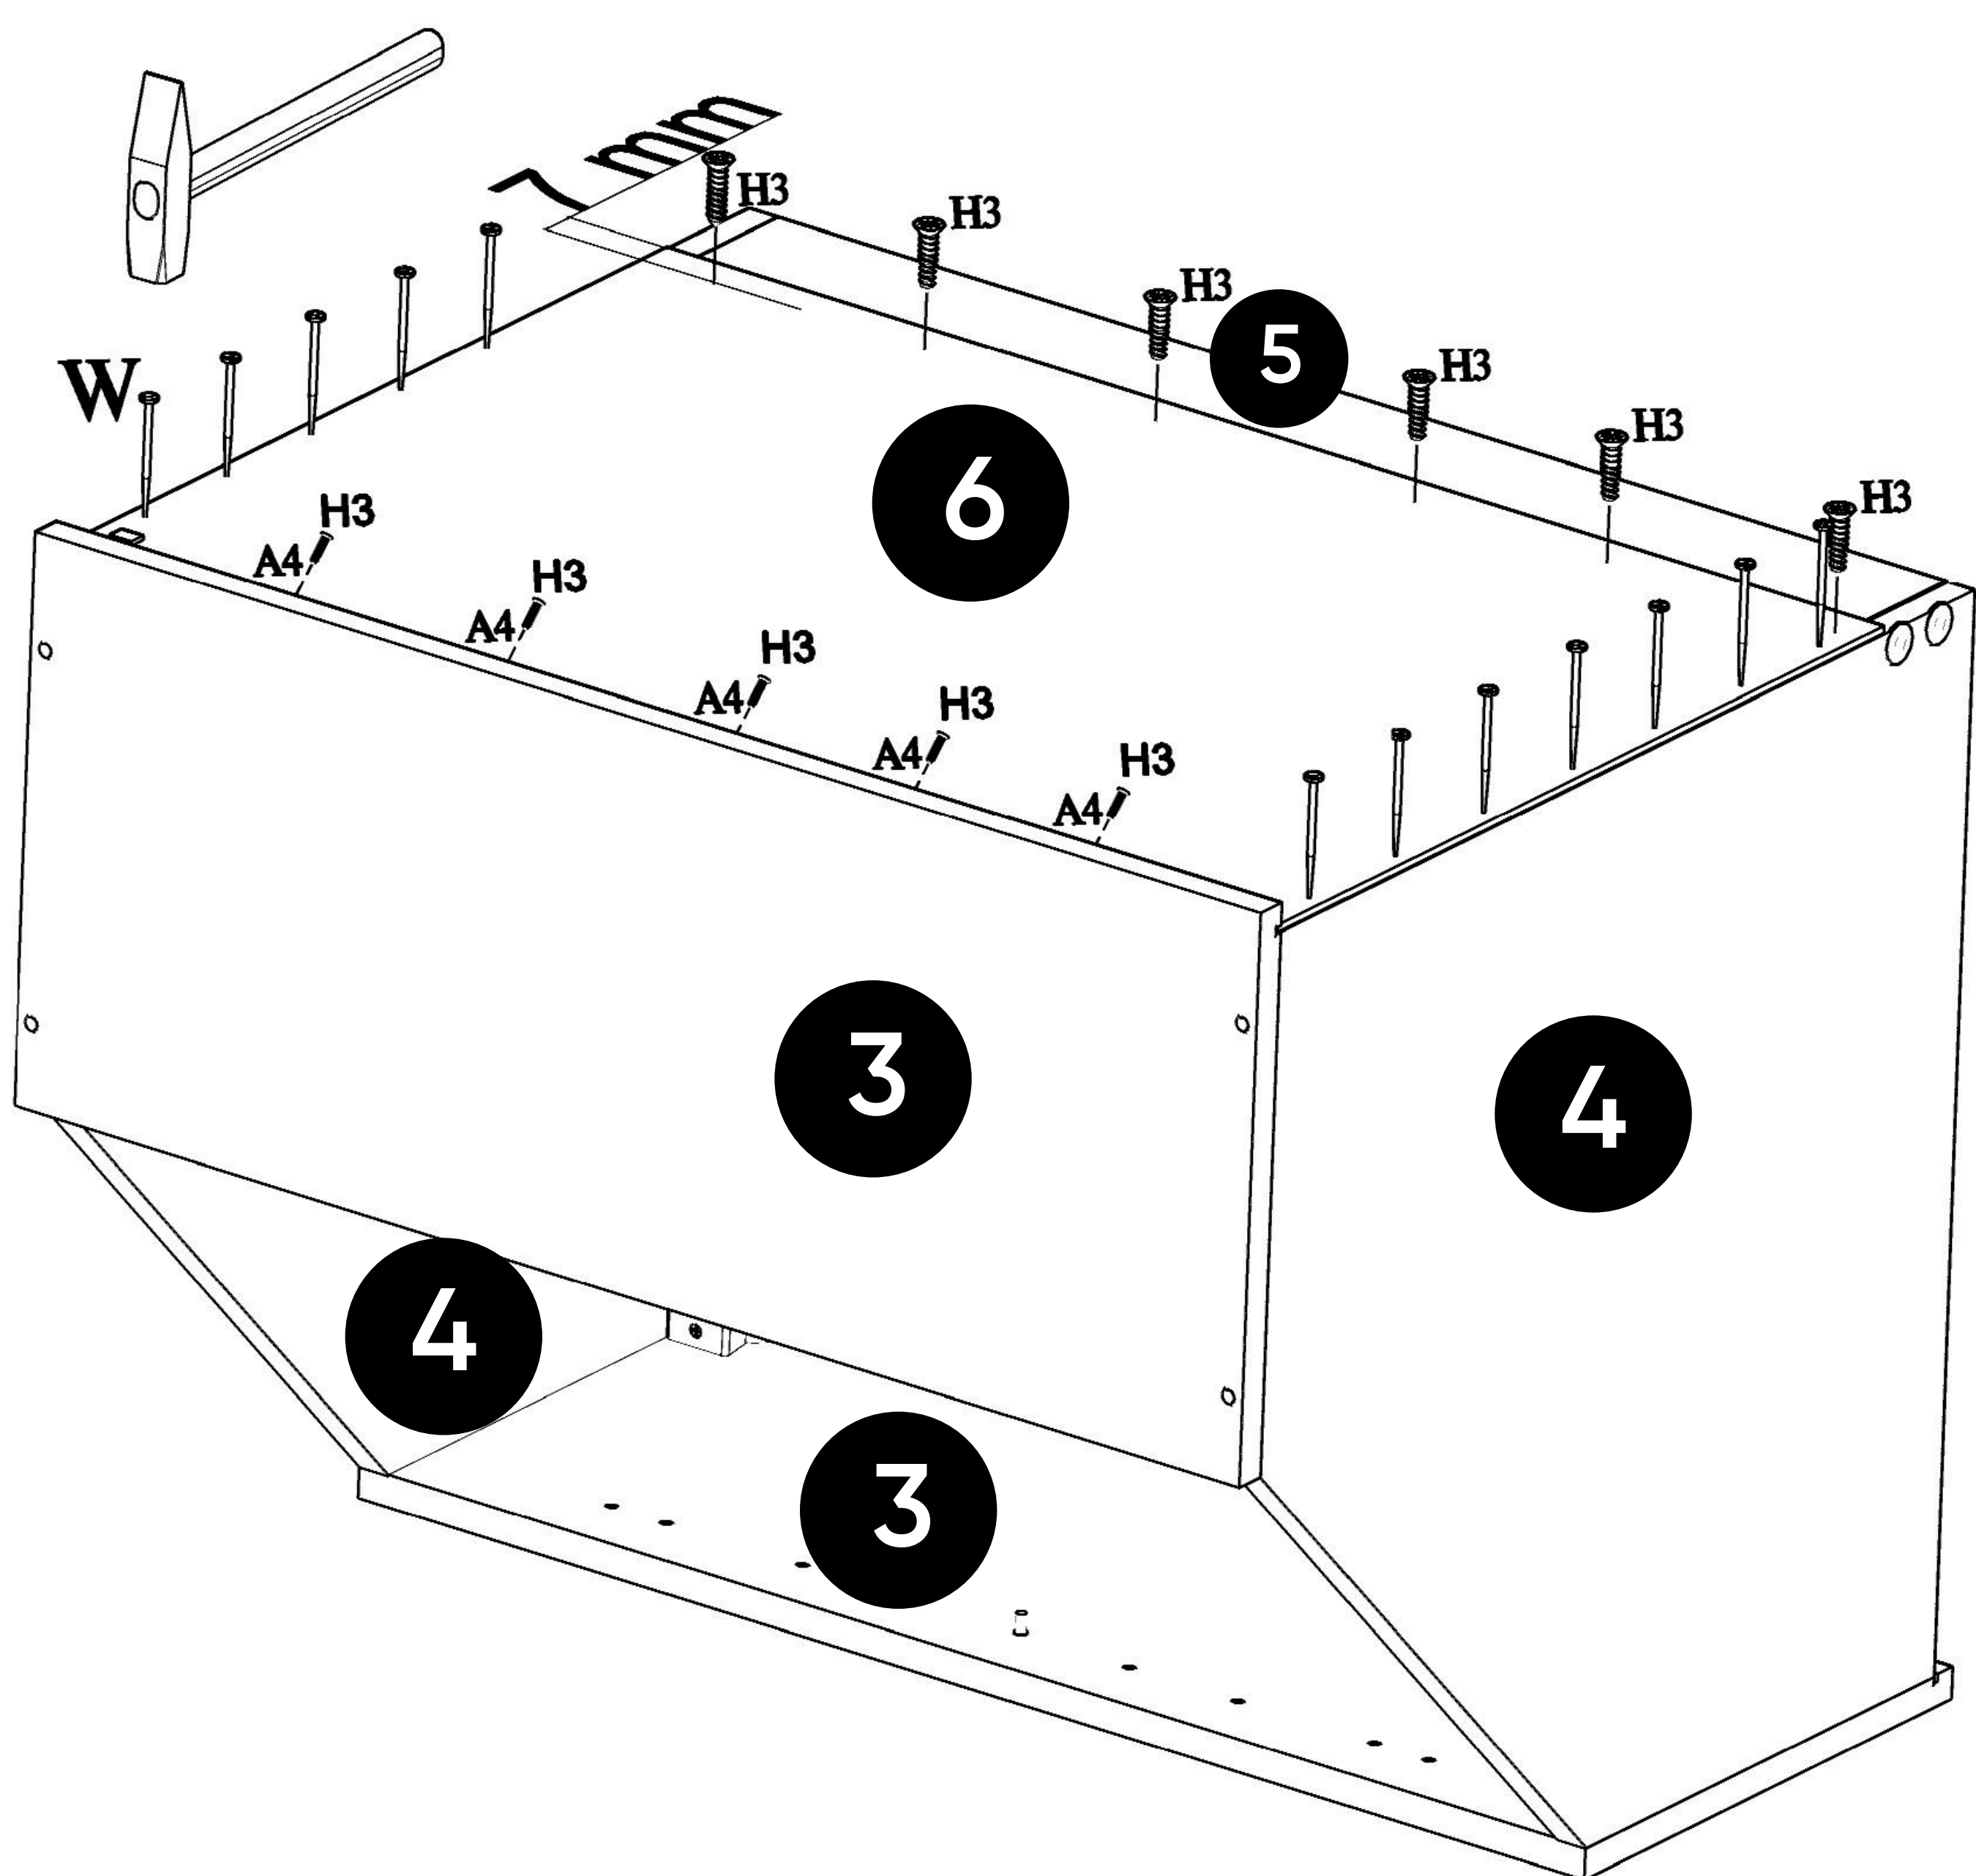

STEP - 7


G4 x2

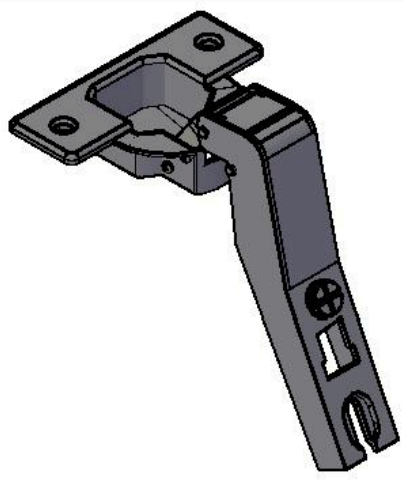


H x4 US 031.03




φ 3.5x13

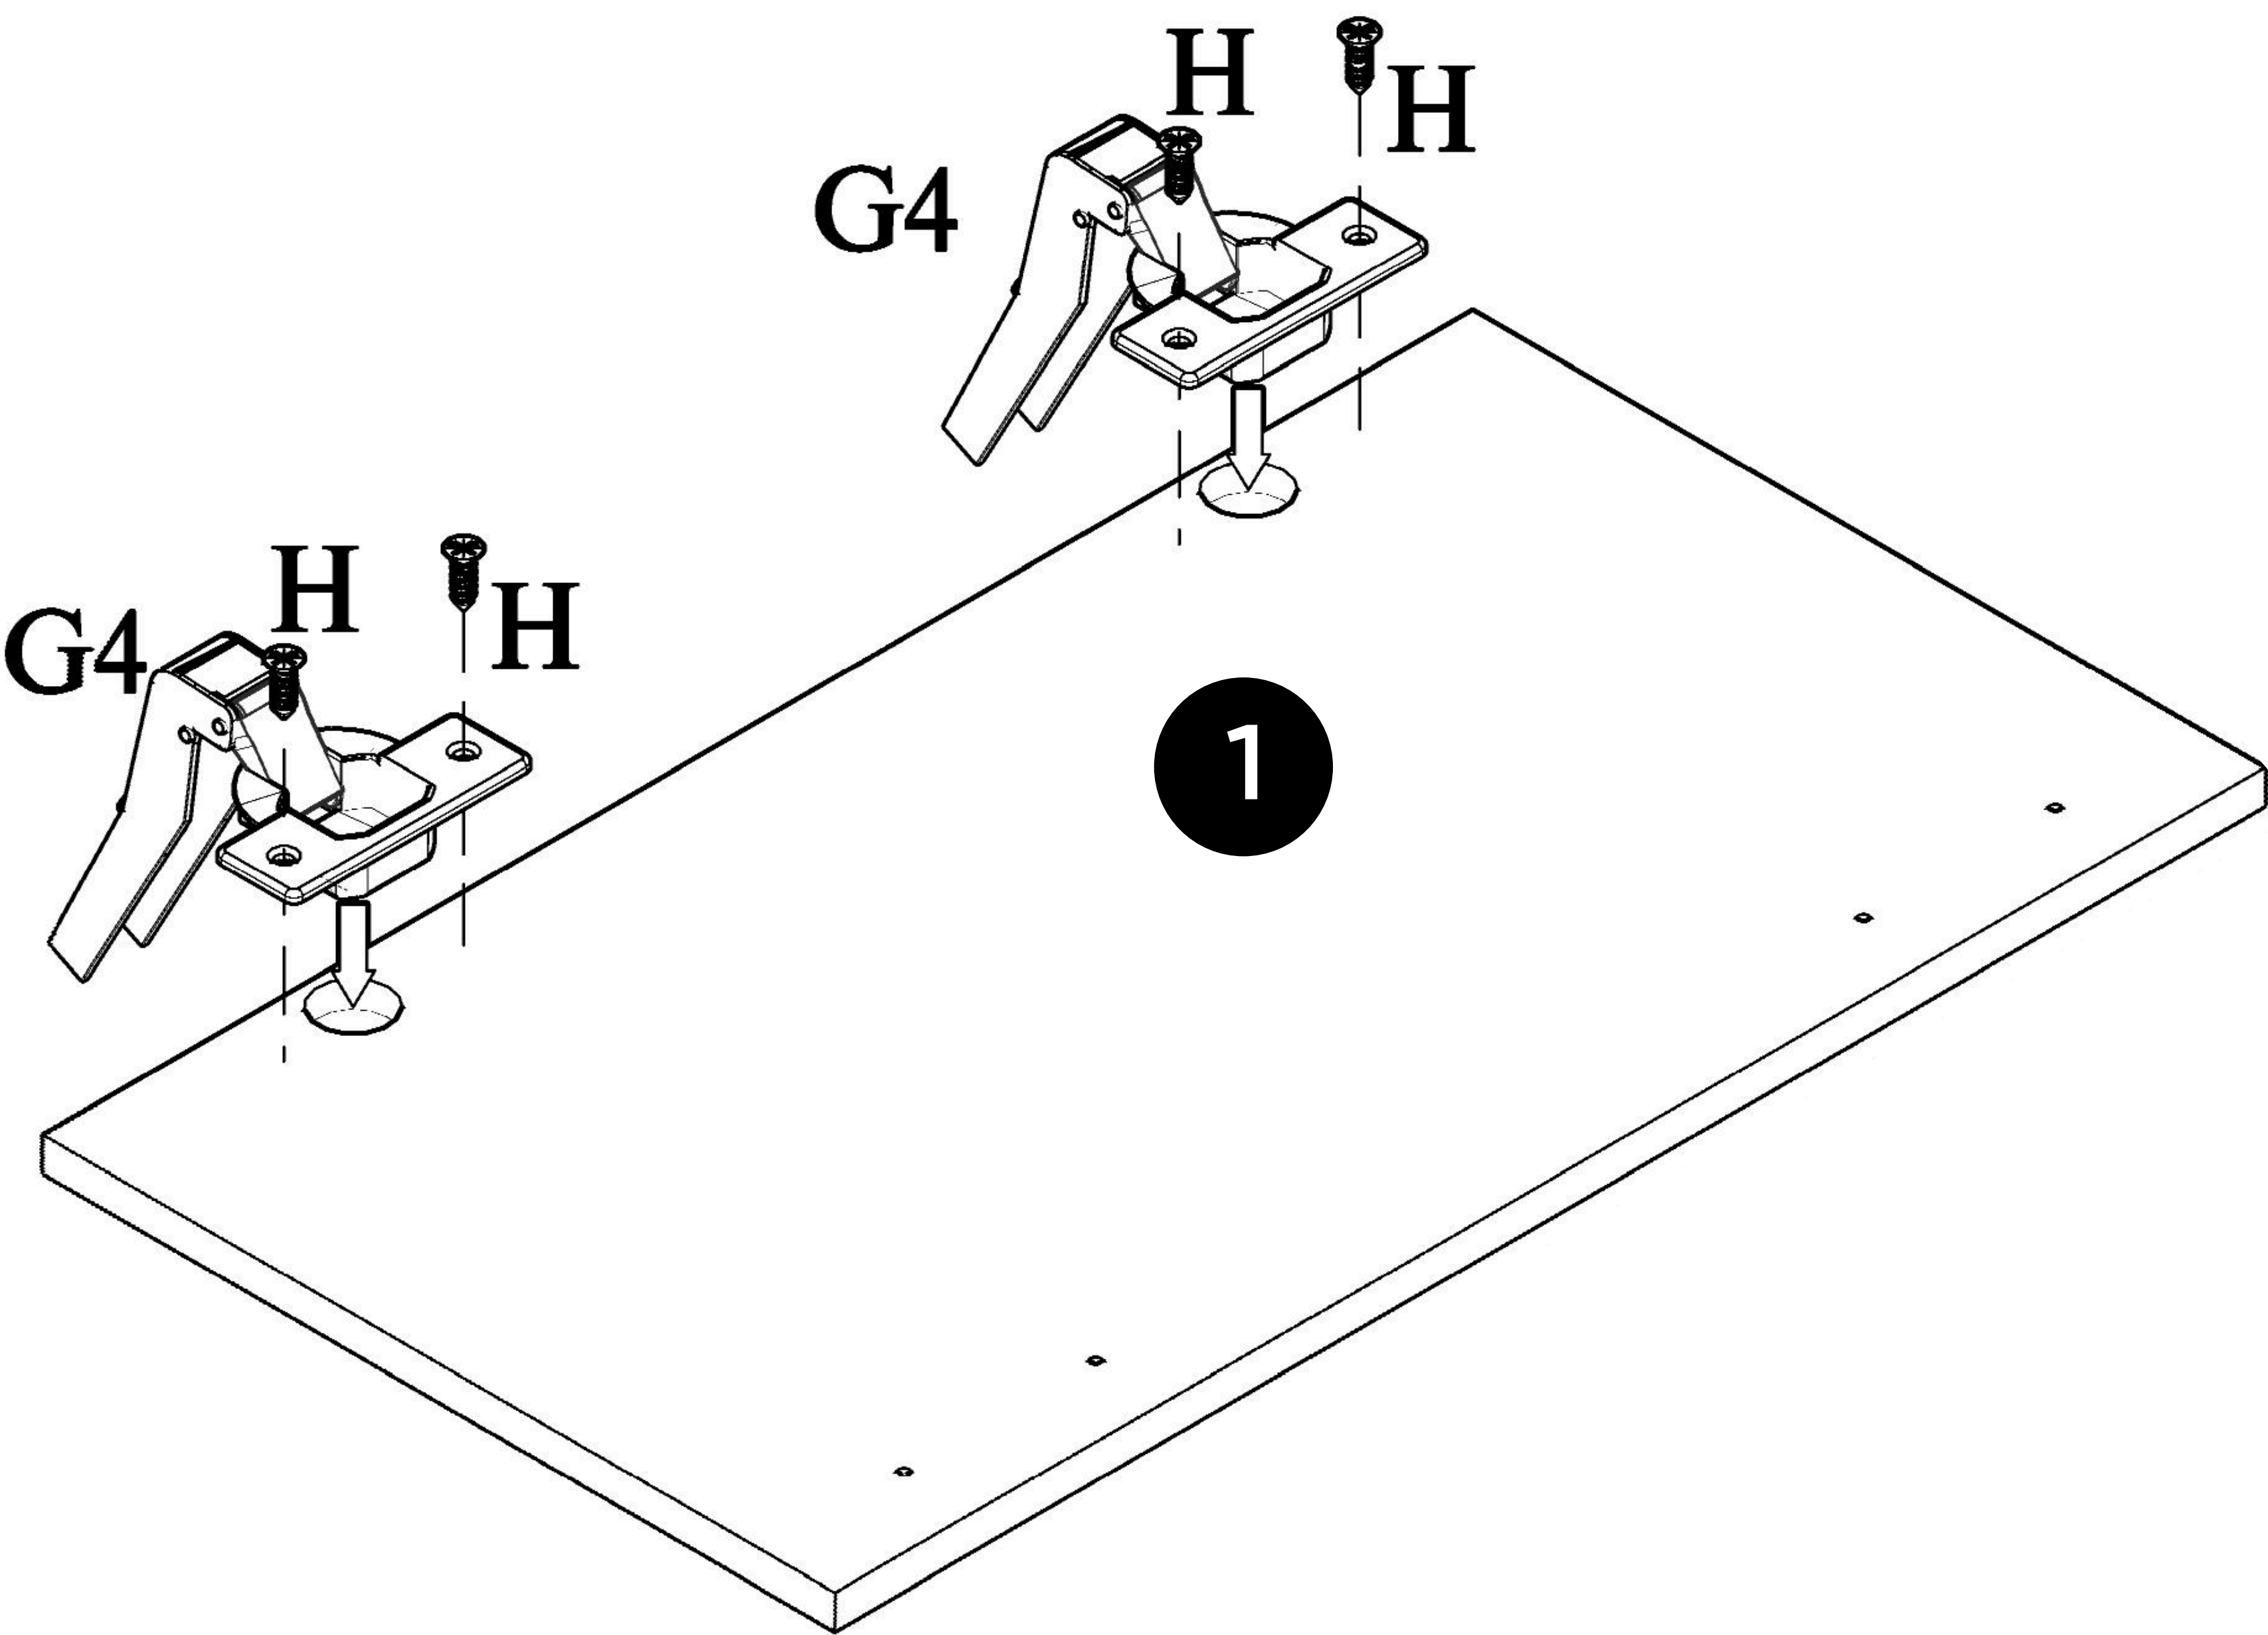


STEP - 8

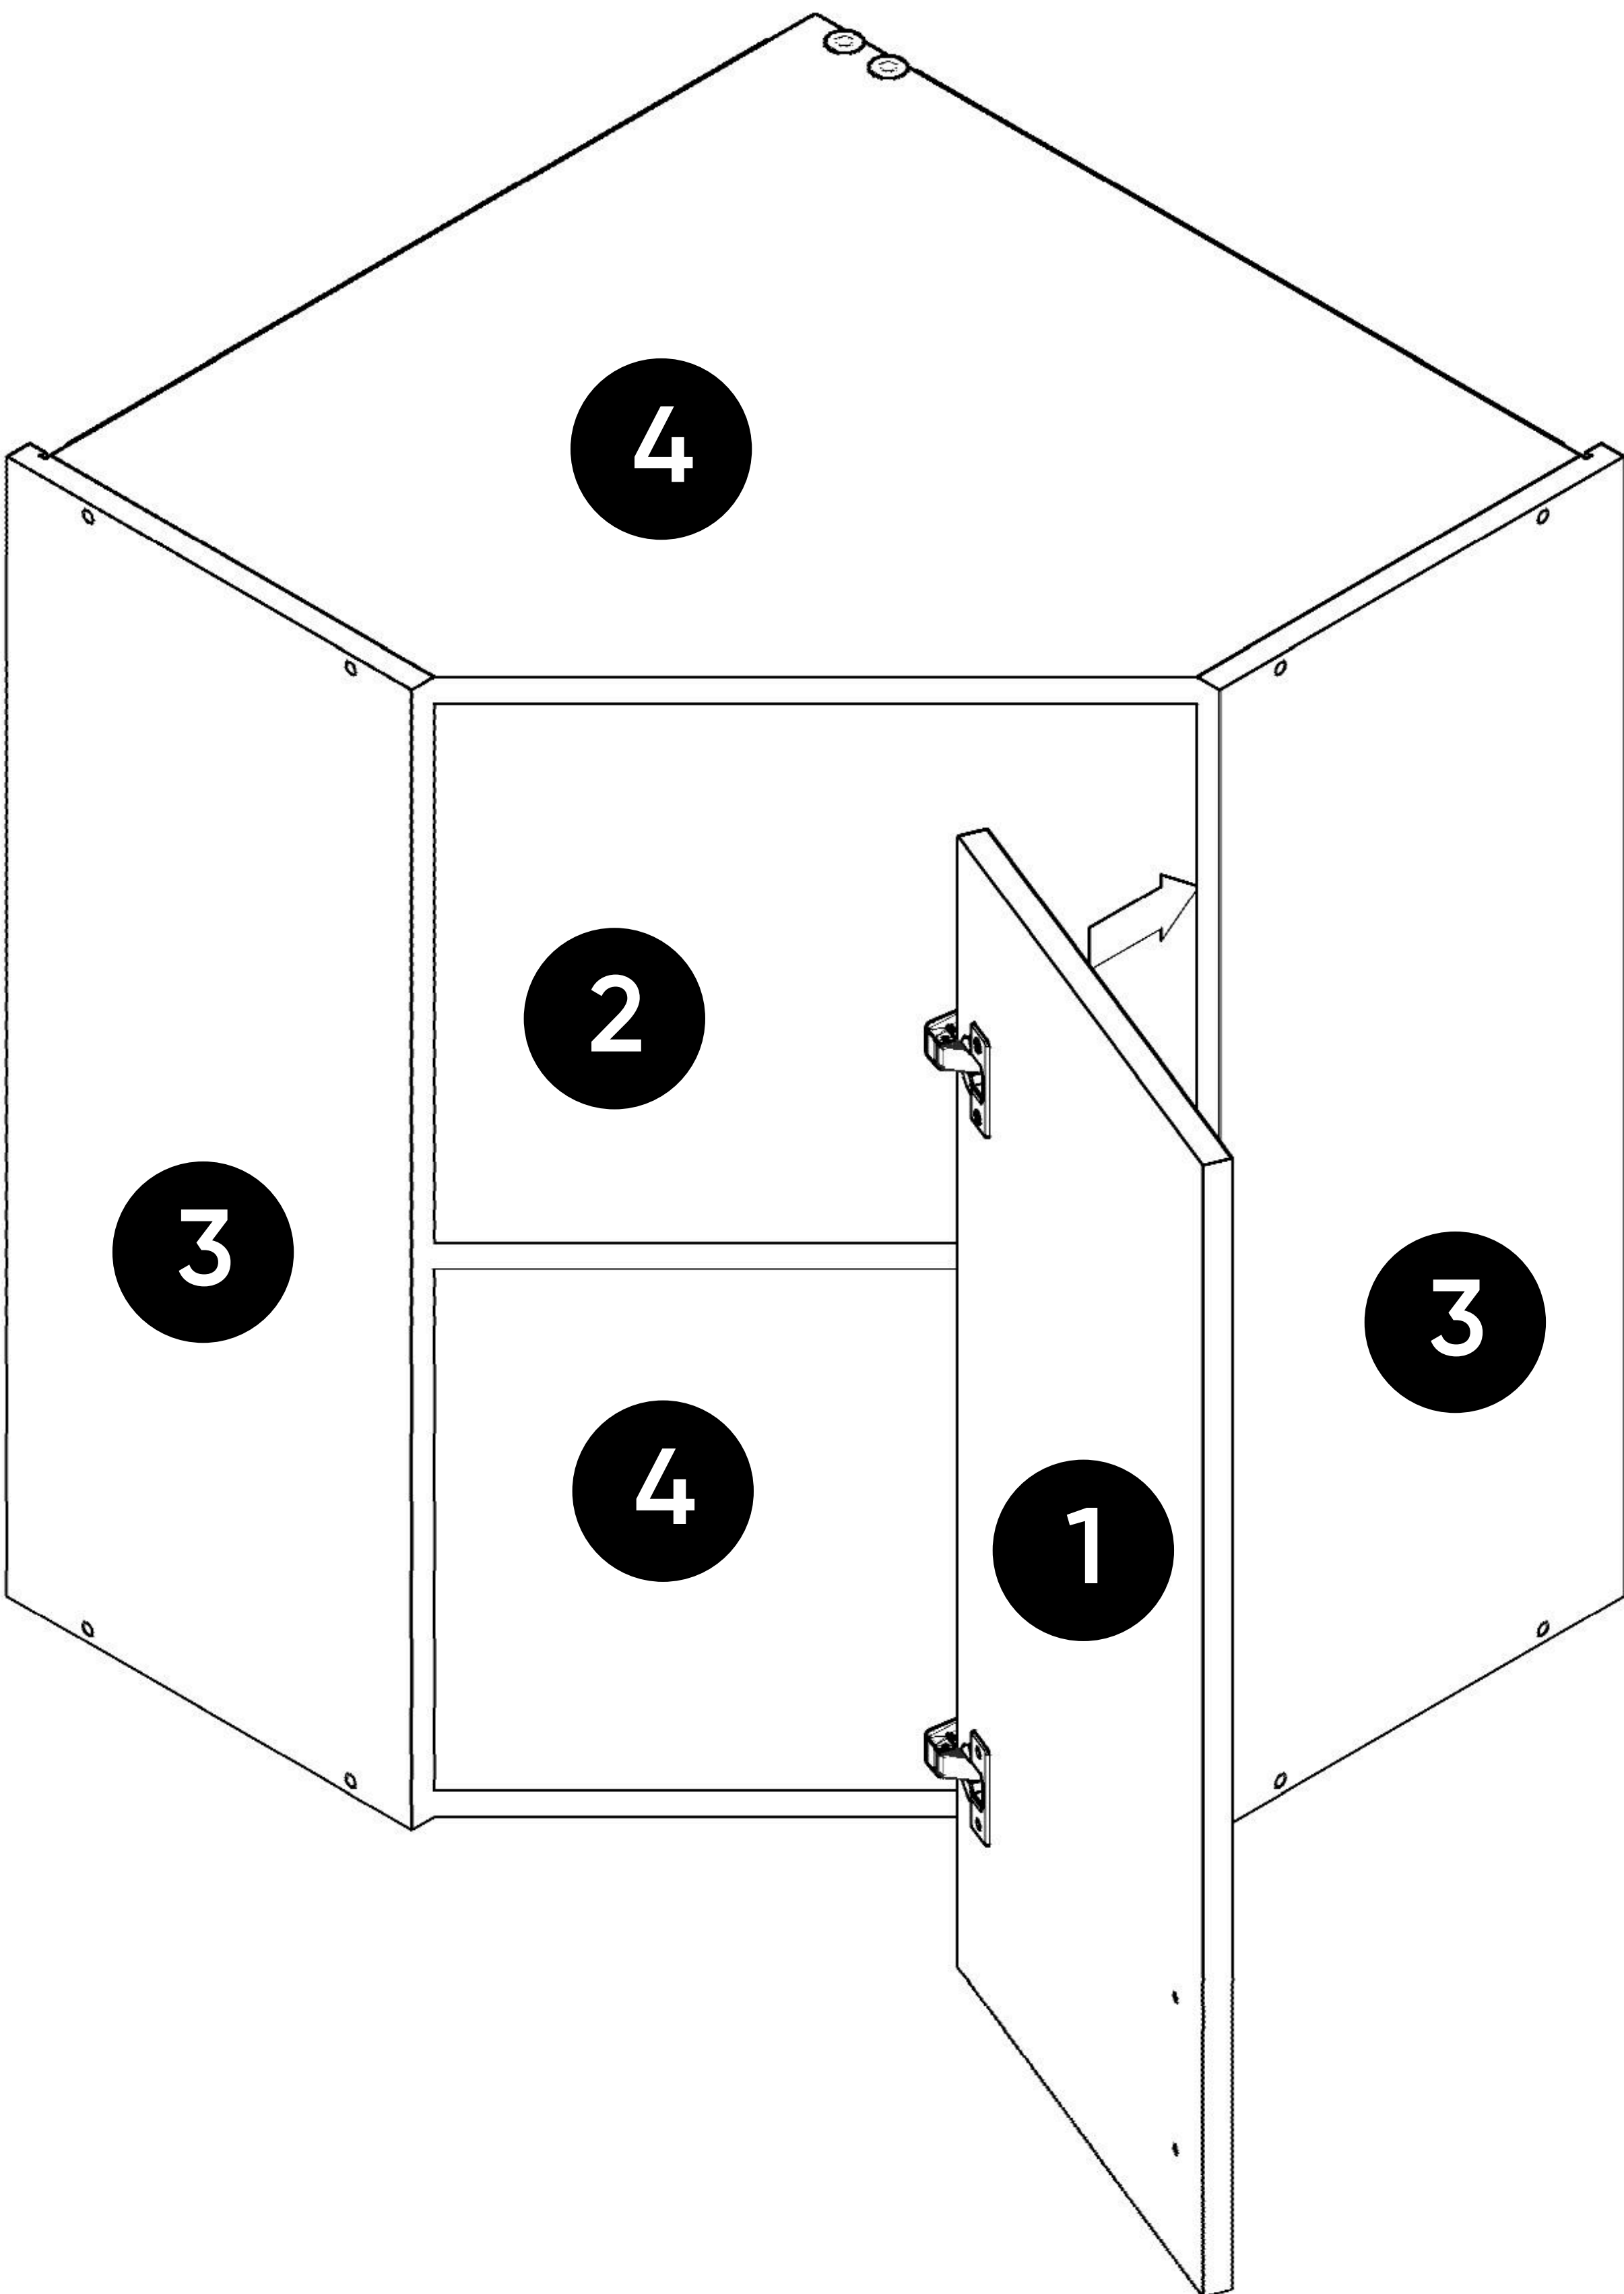


STEP - 9

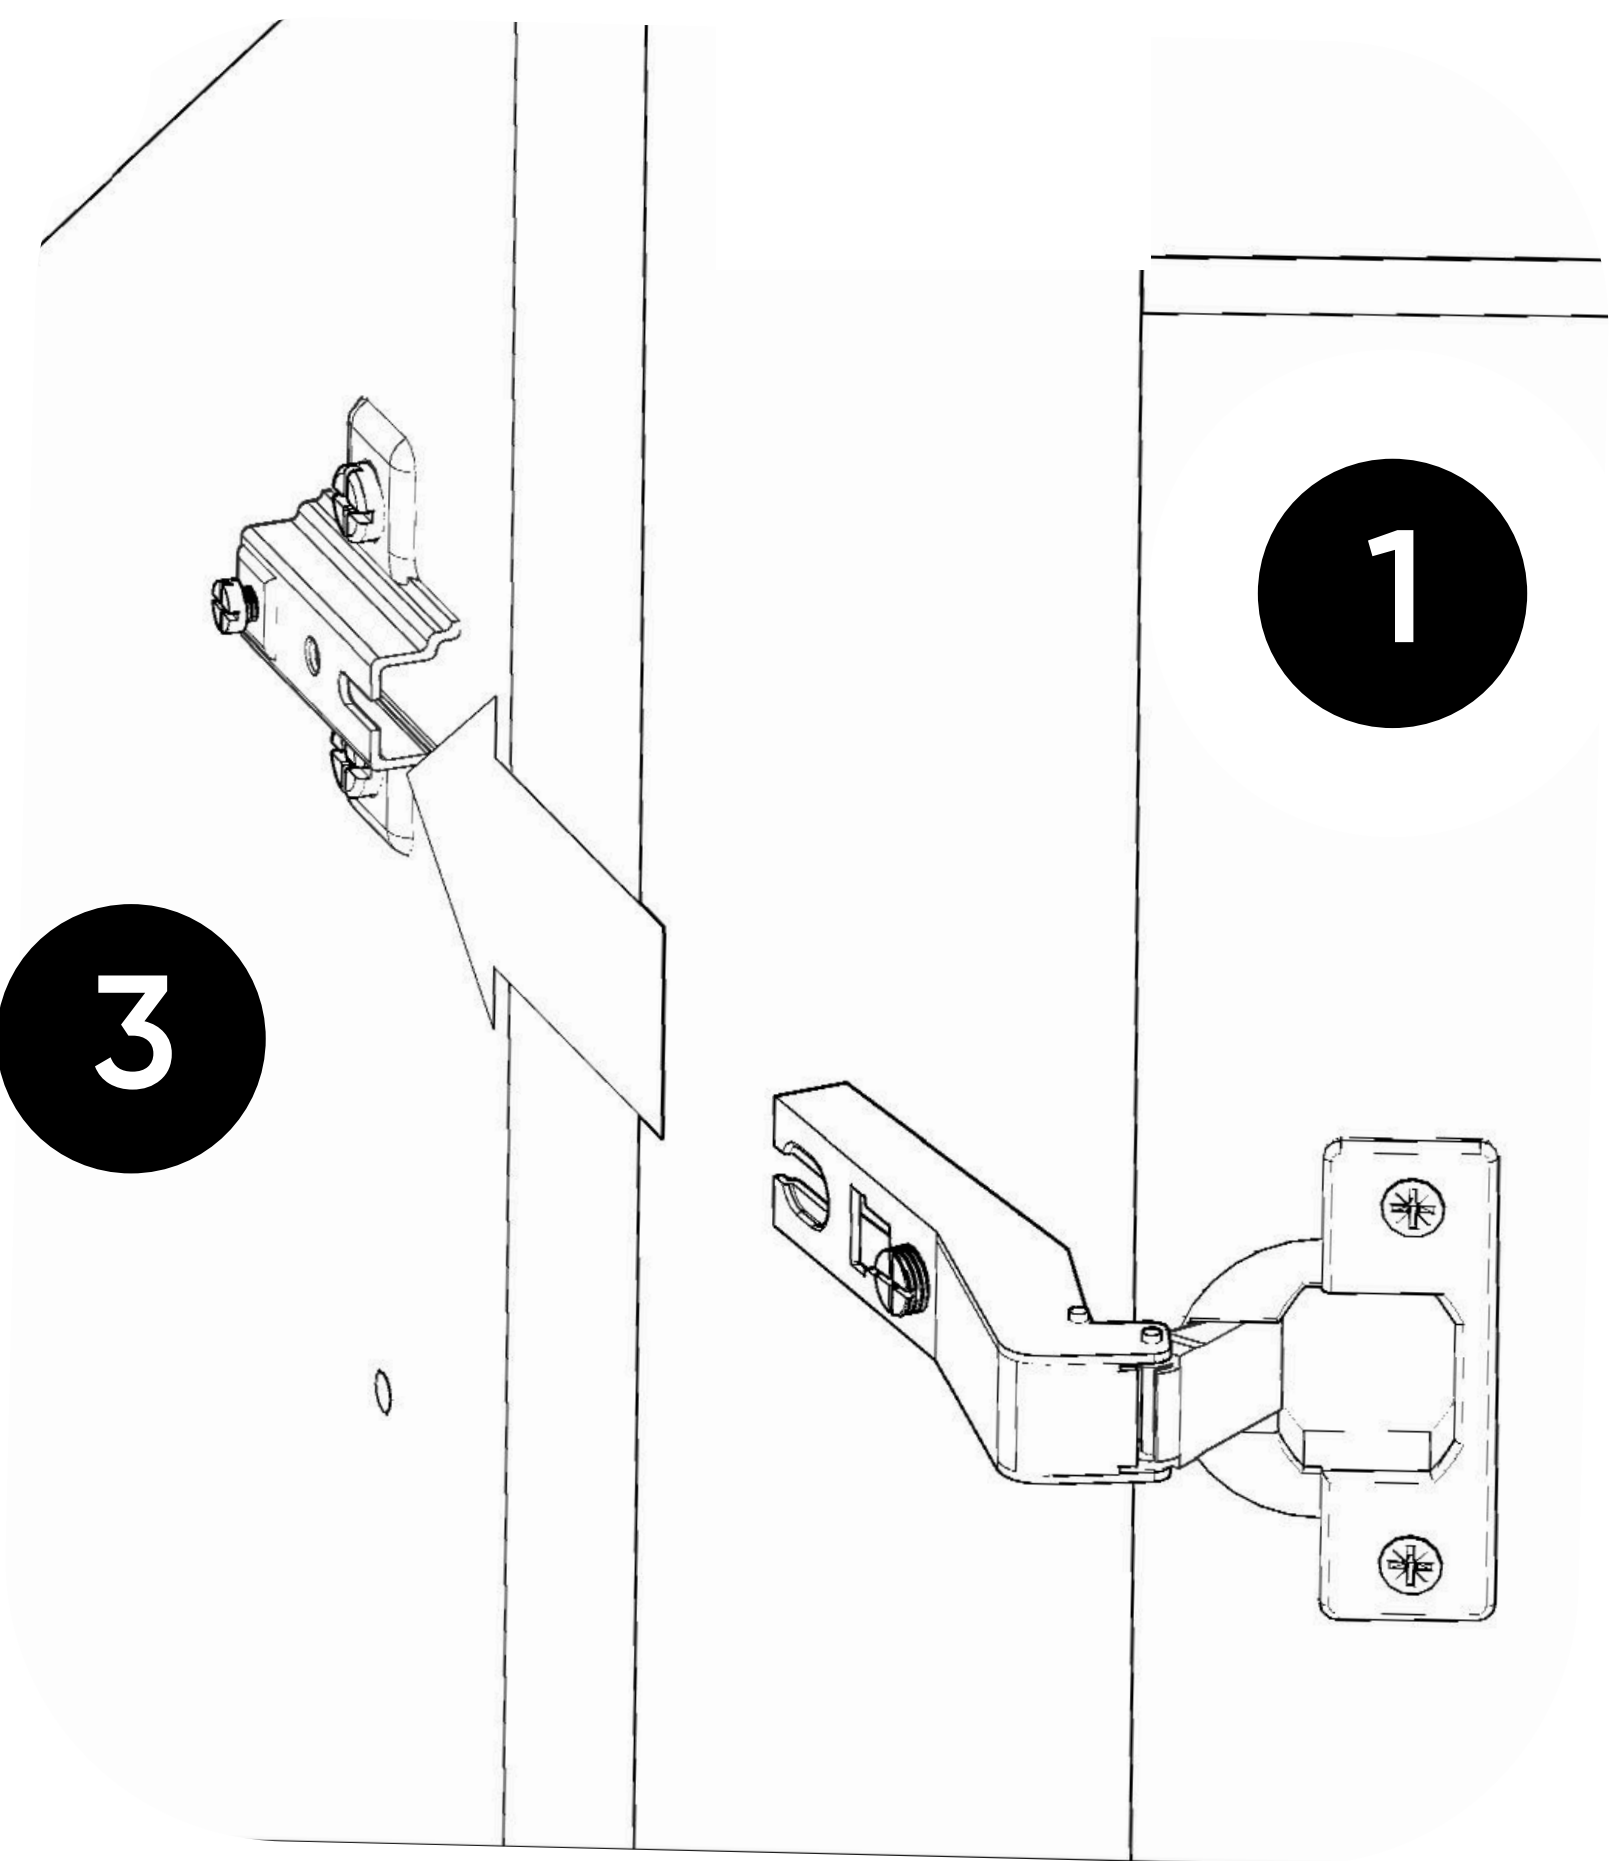




STEP - 10

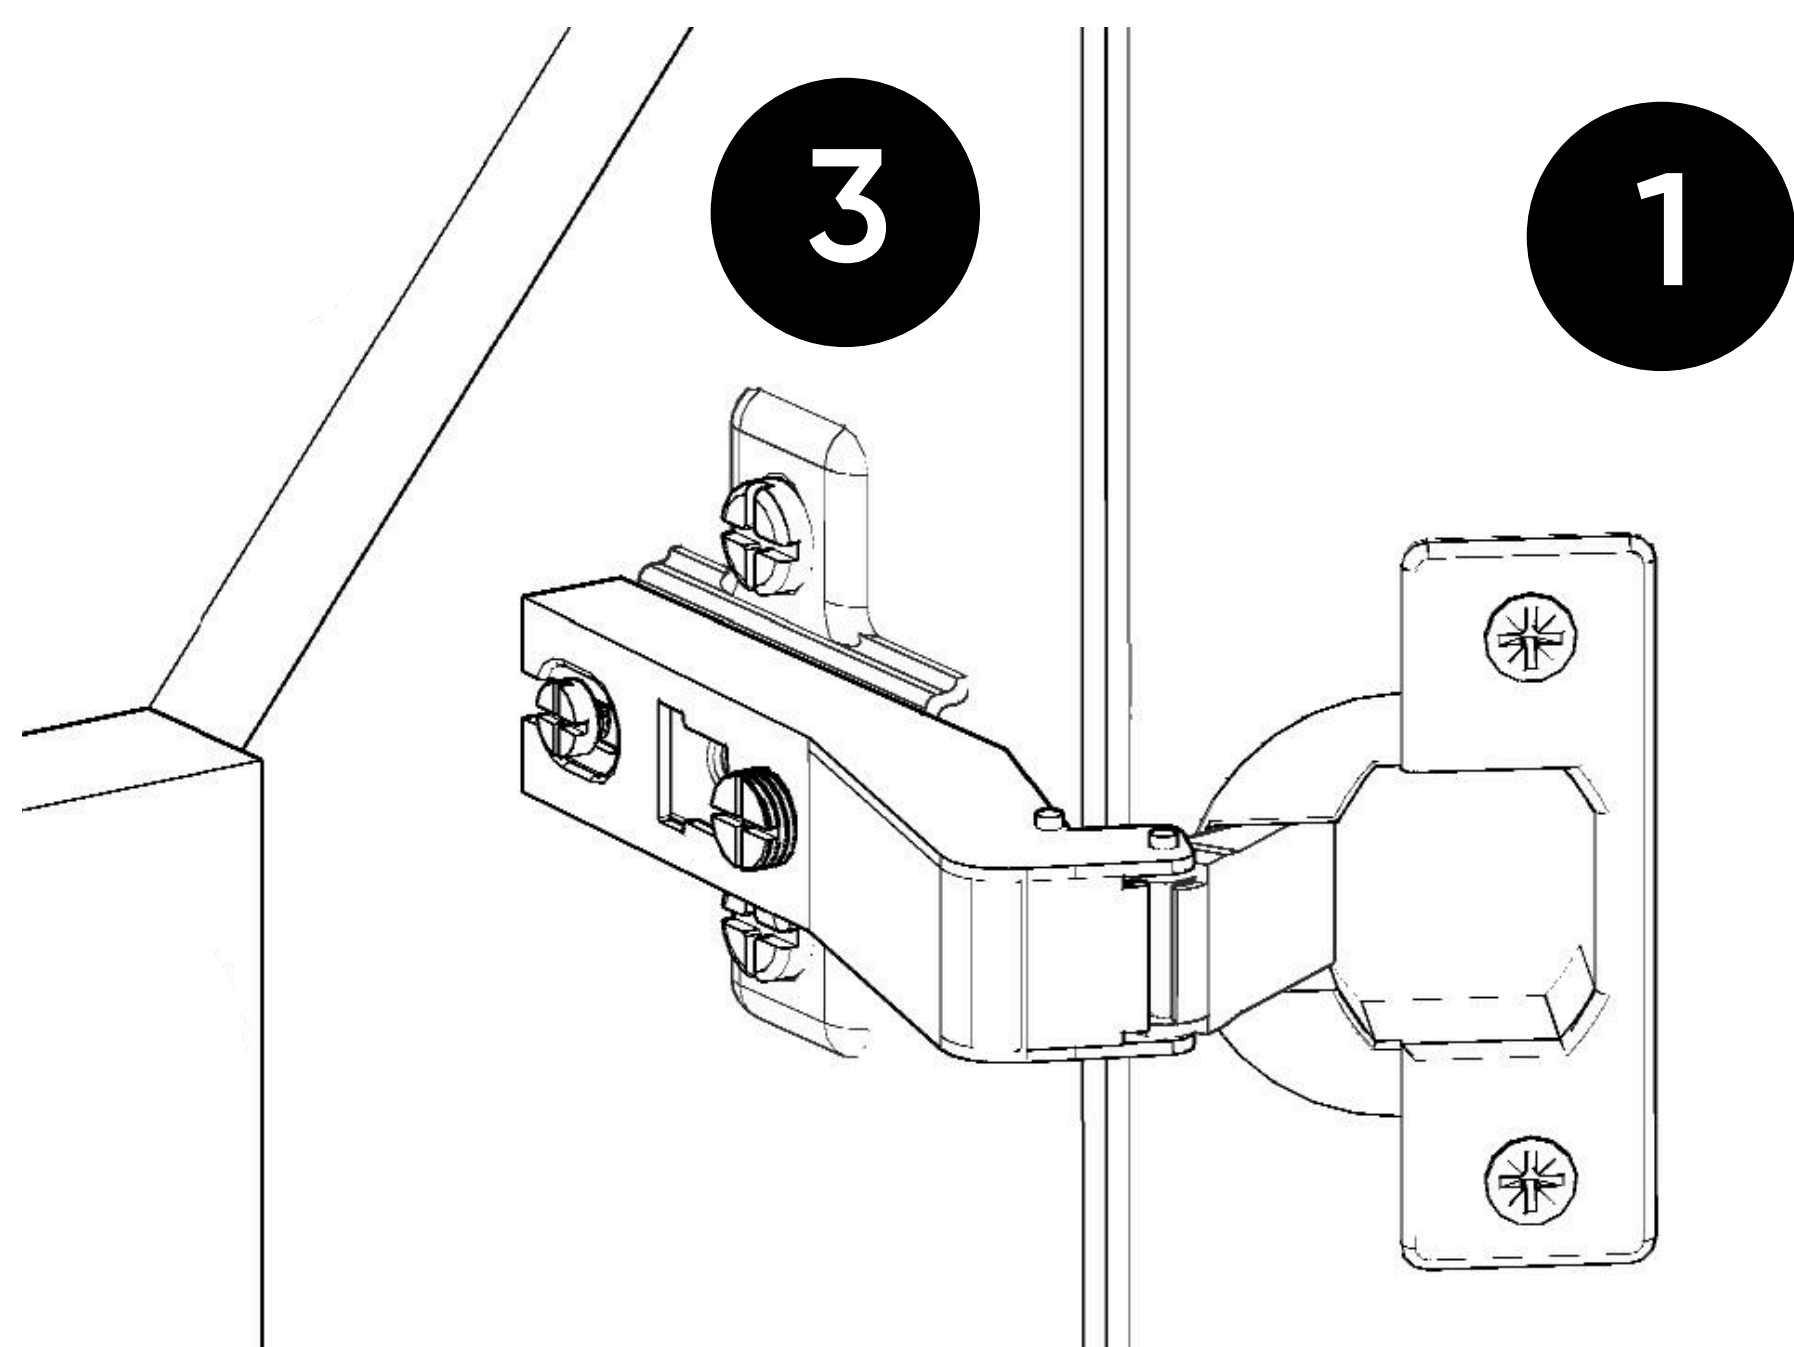



STEP - 11

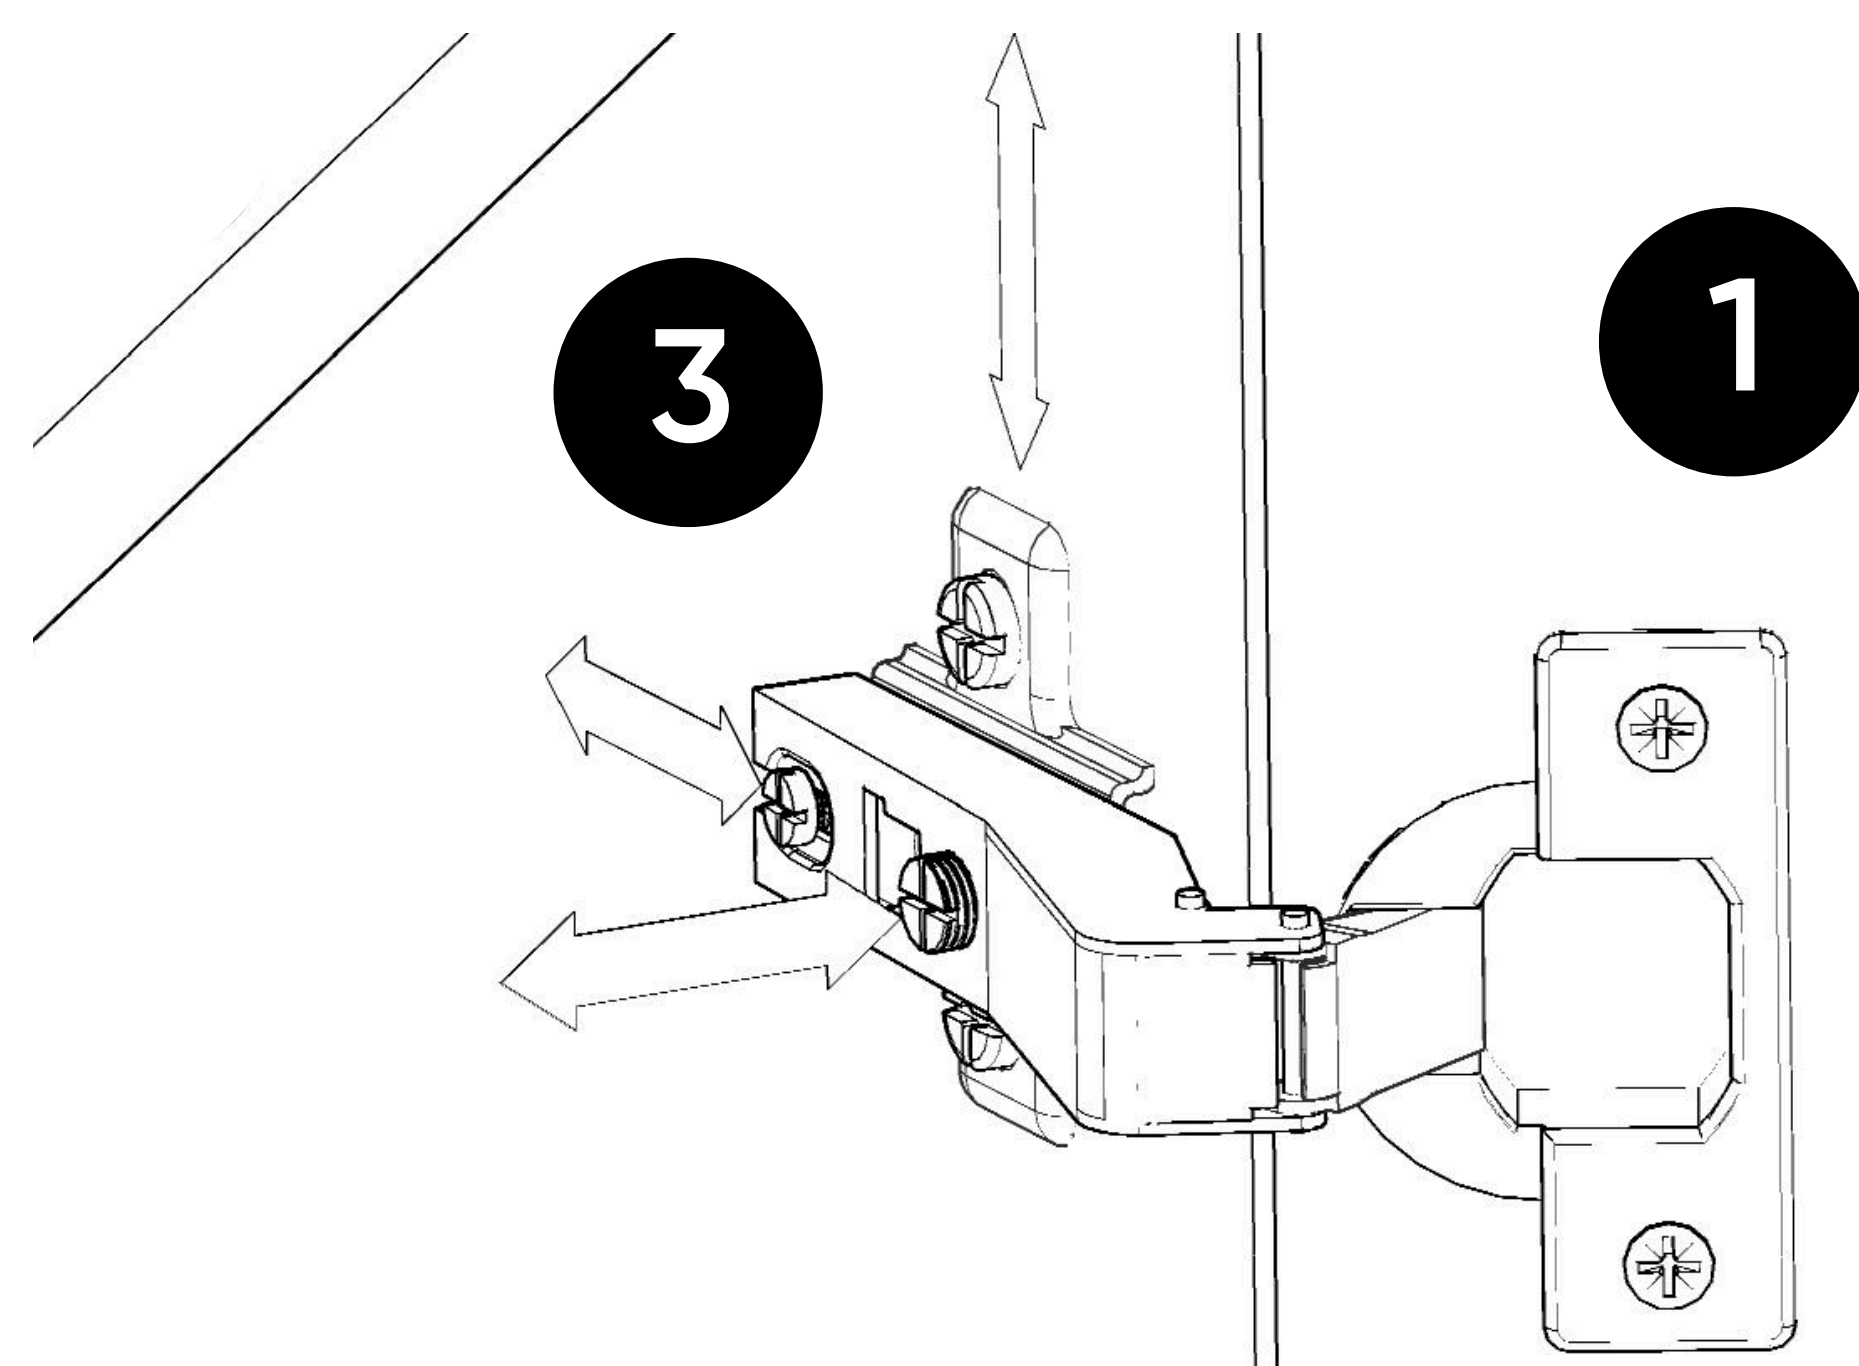

STEP - 12

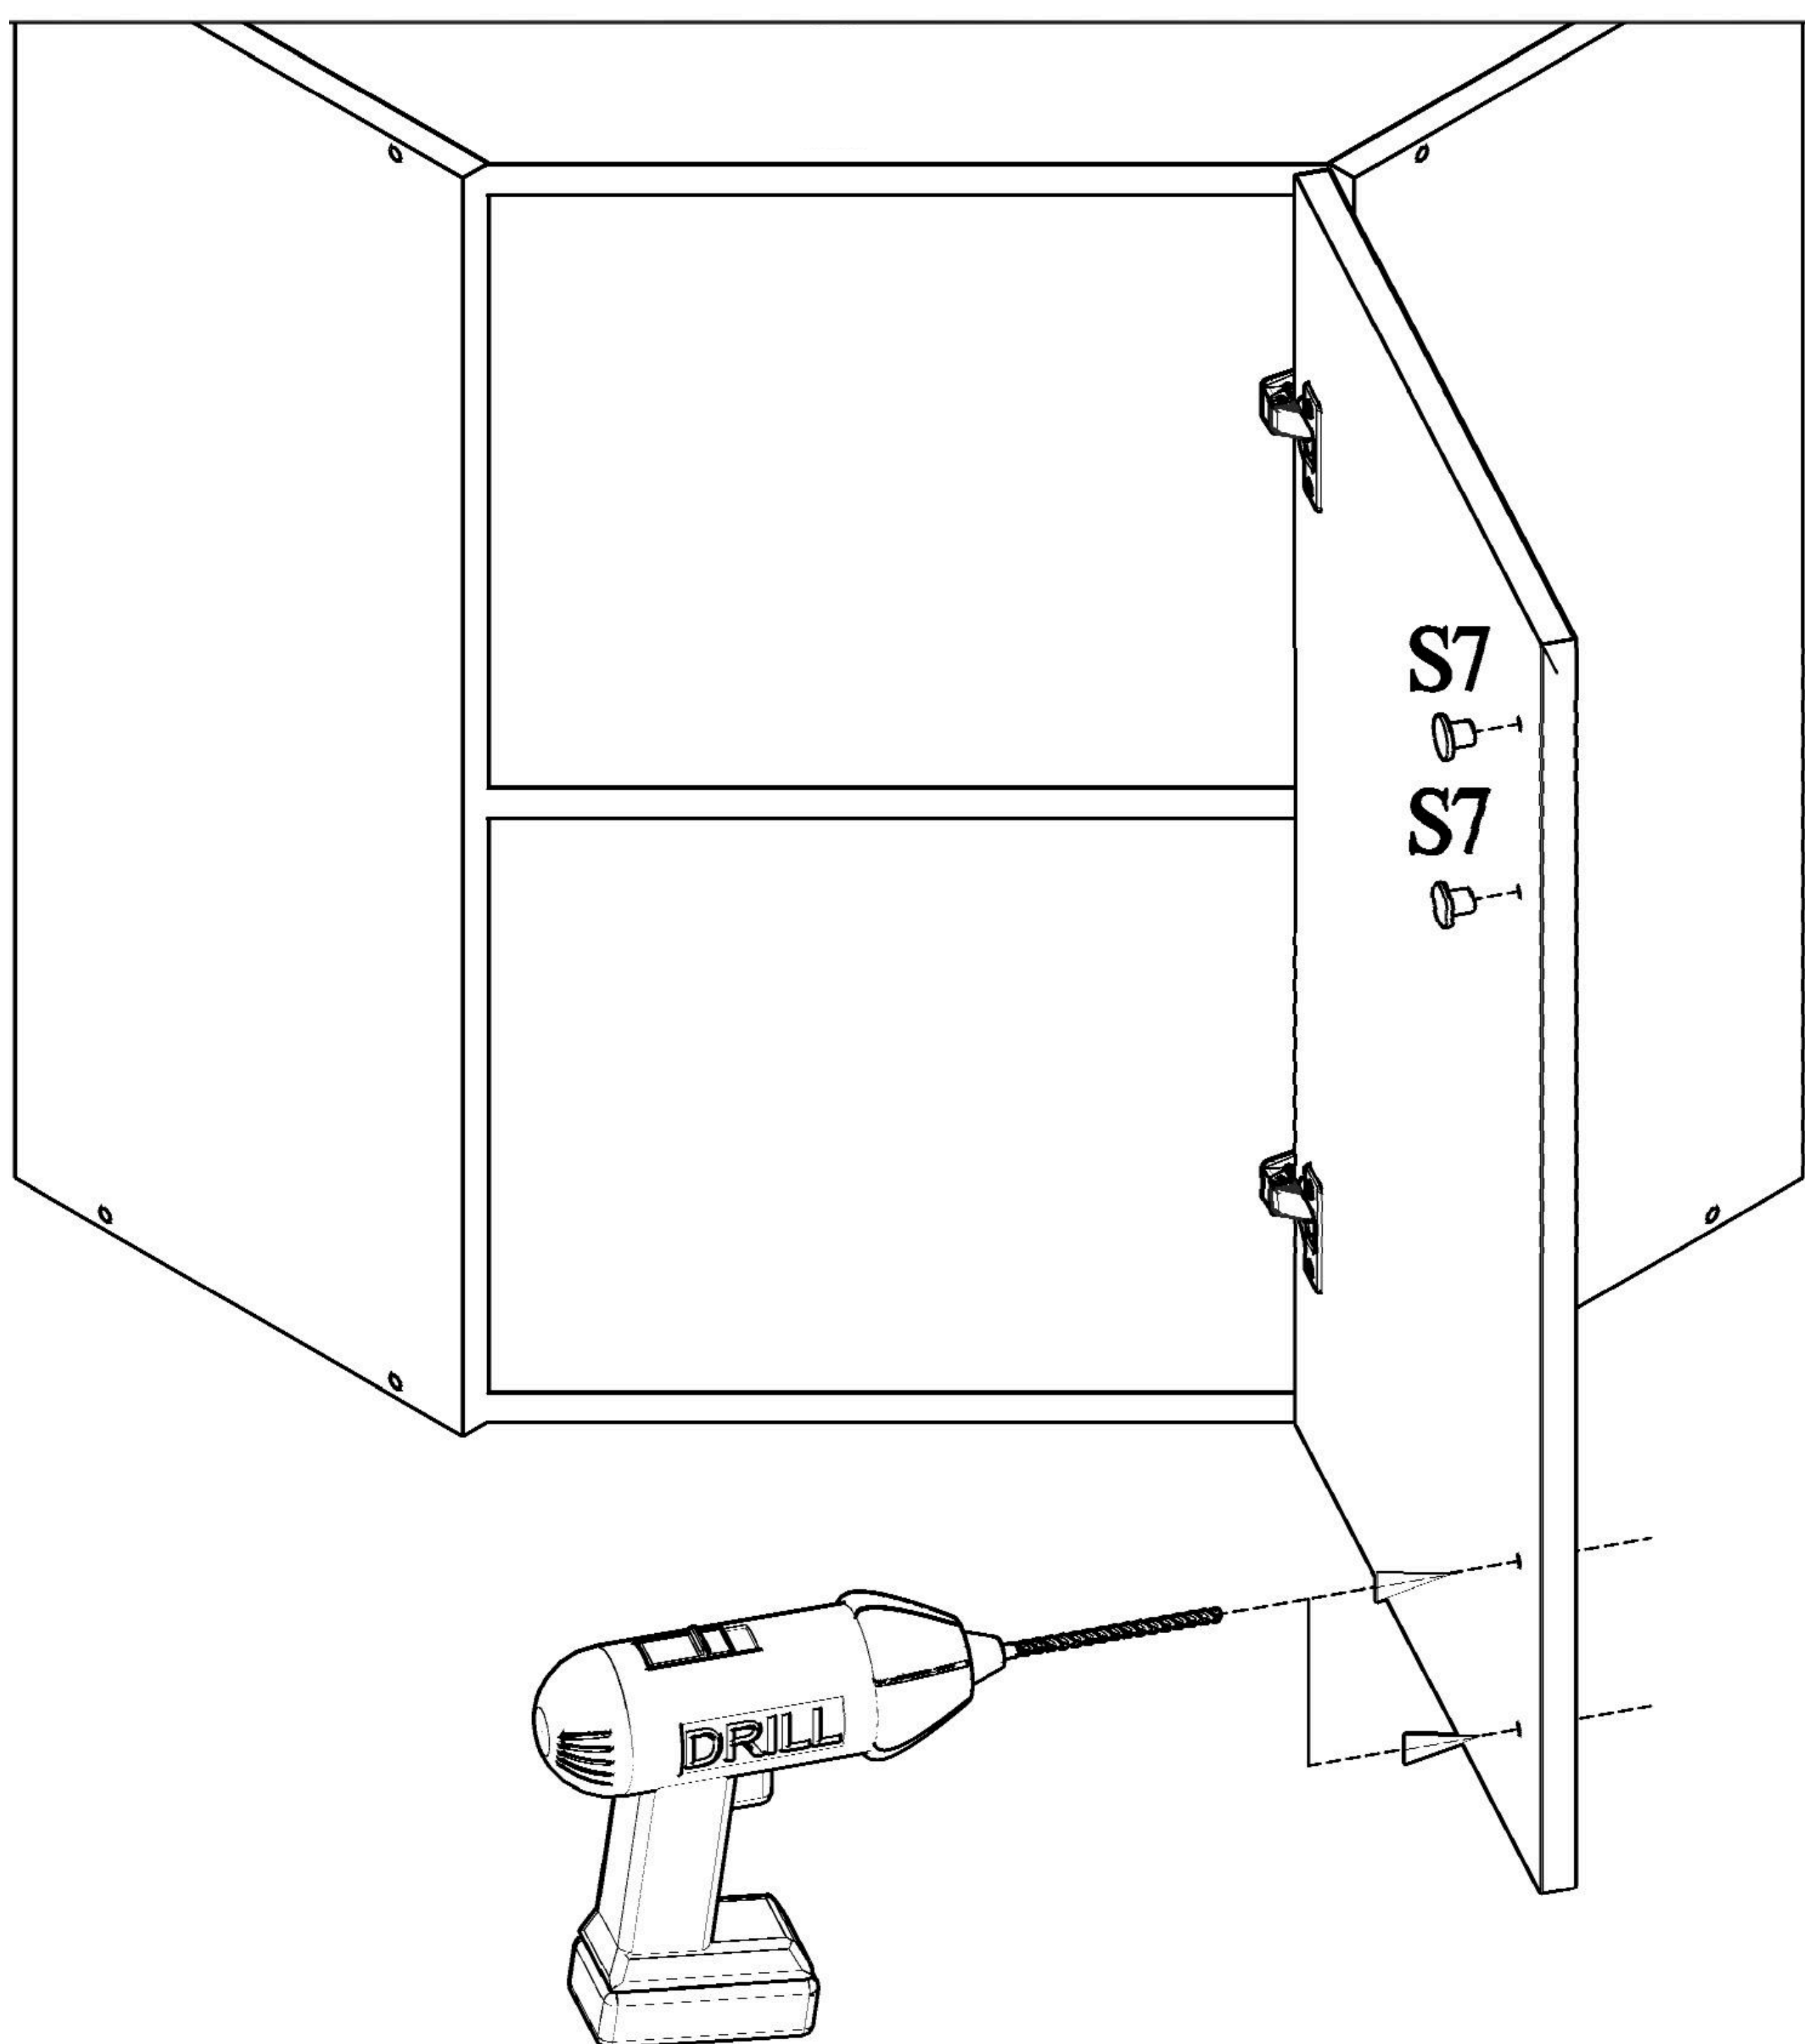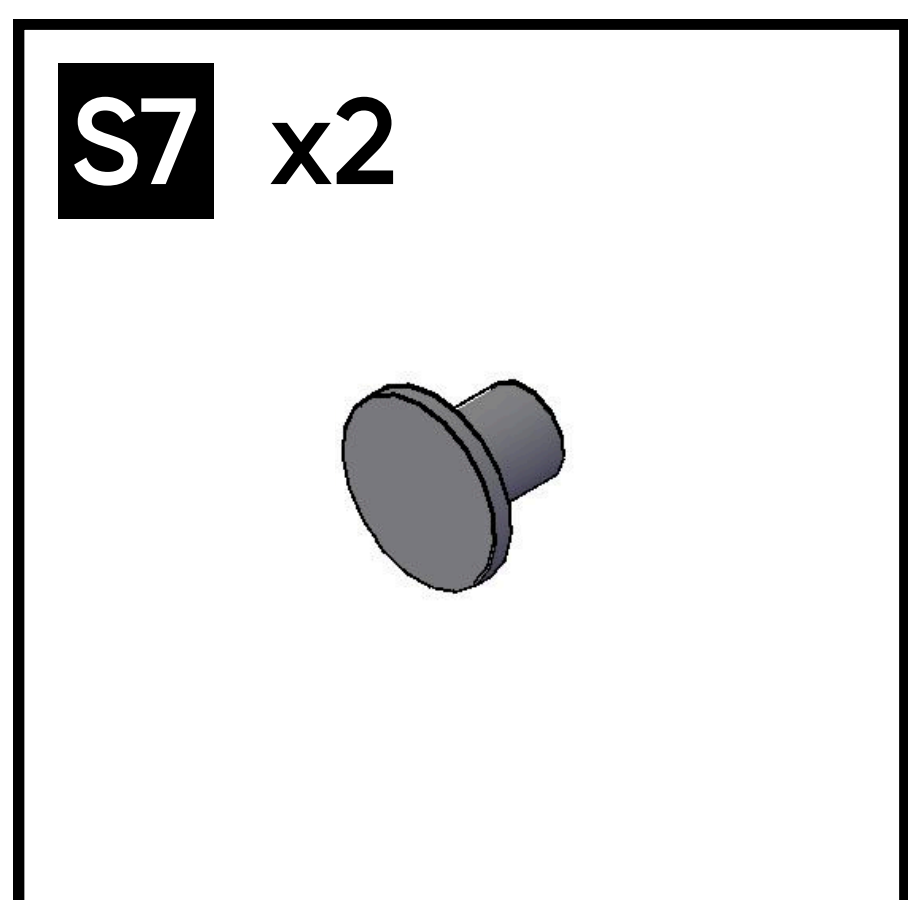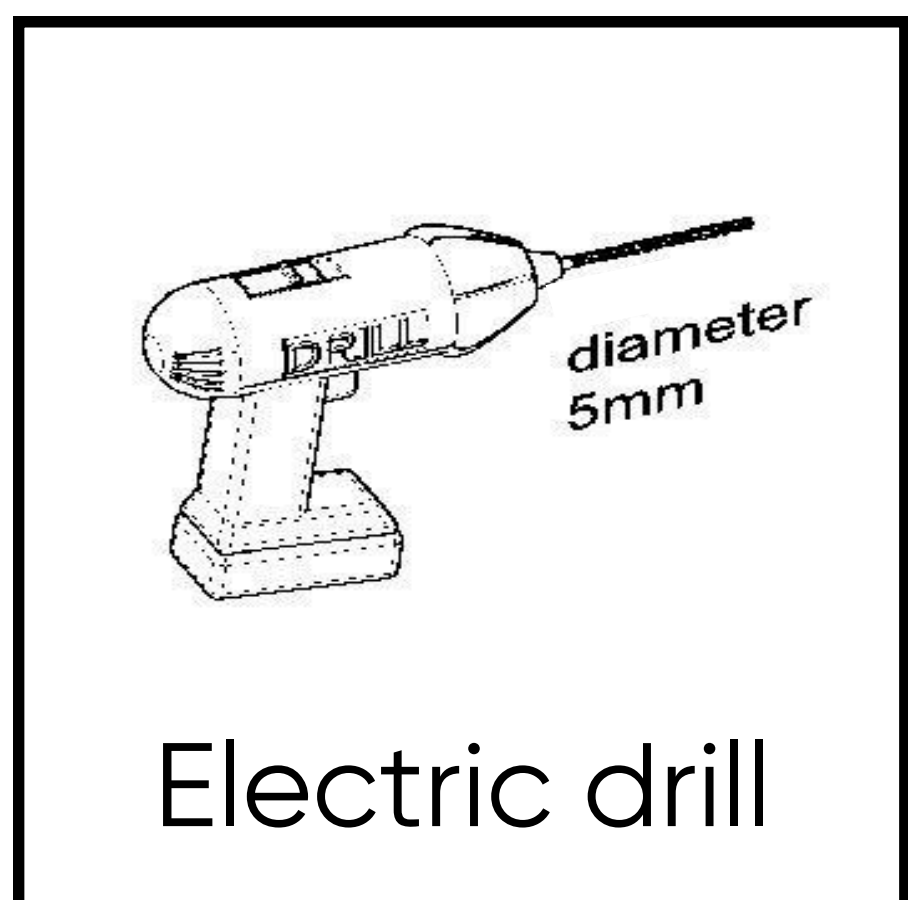

STEP - 13

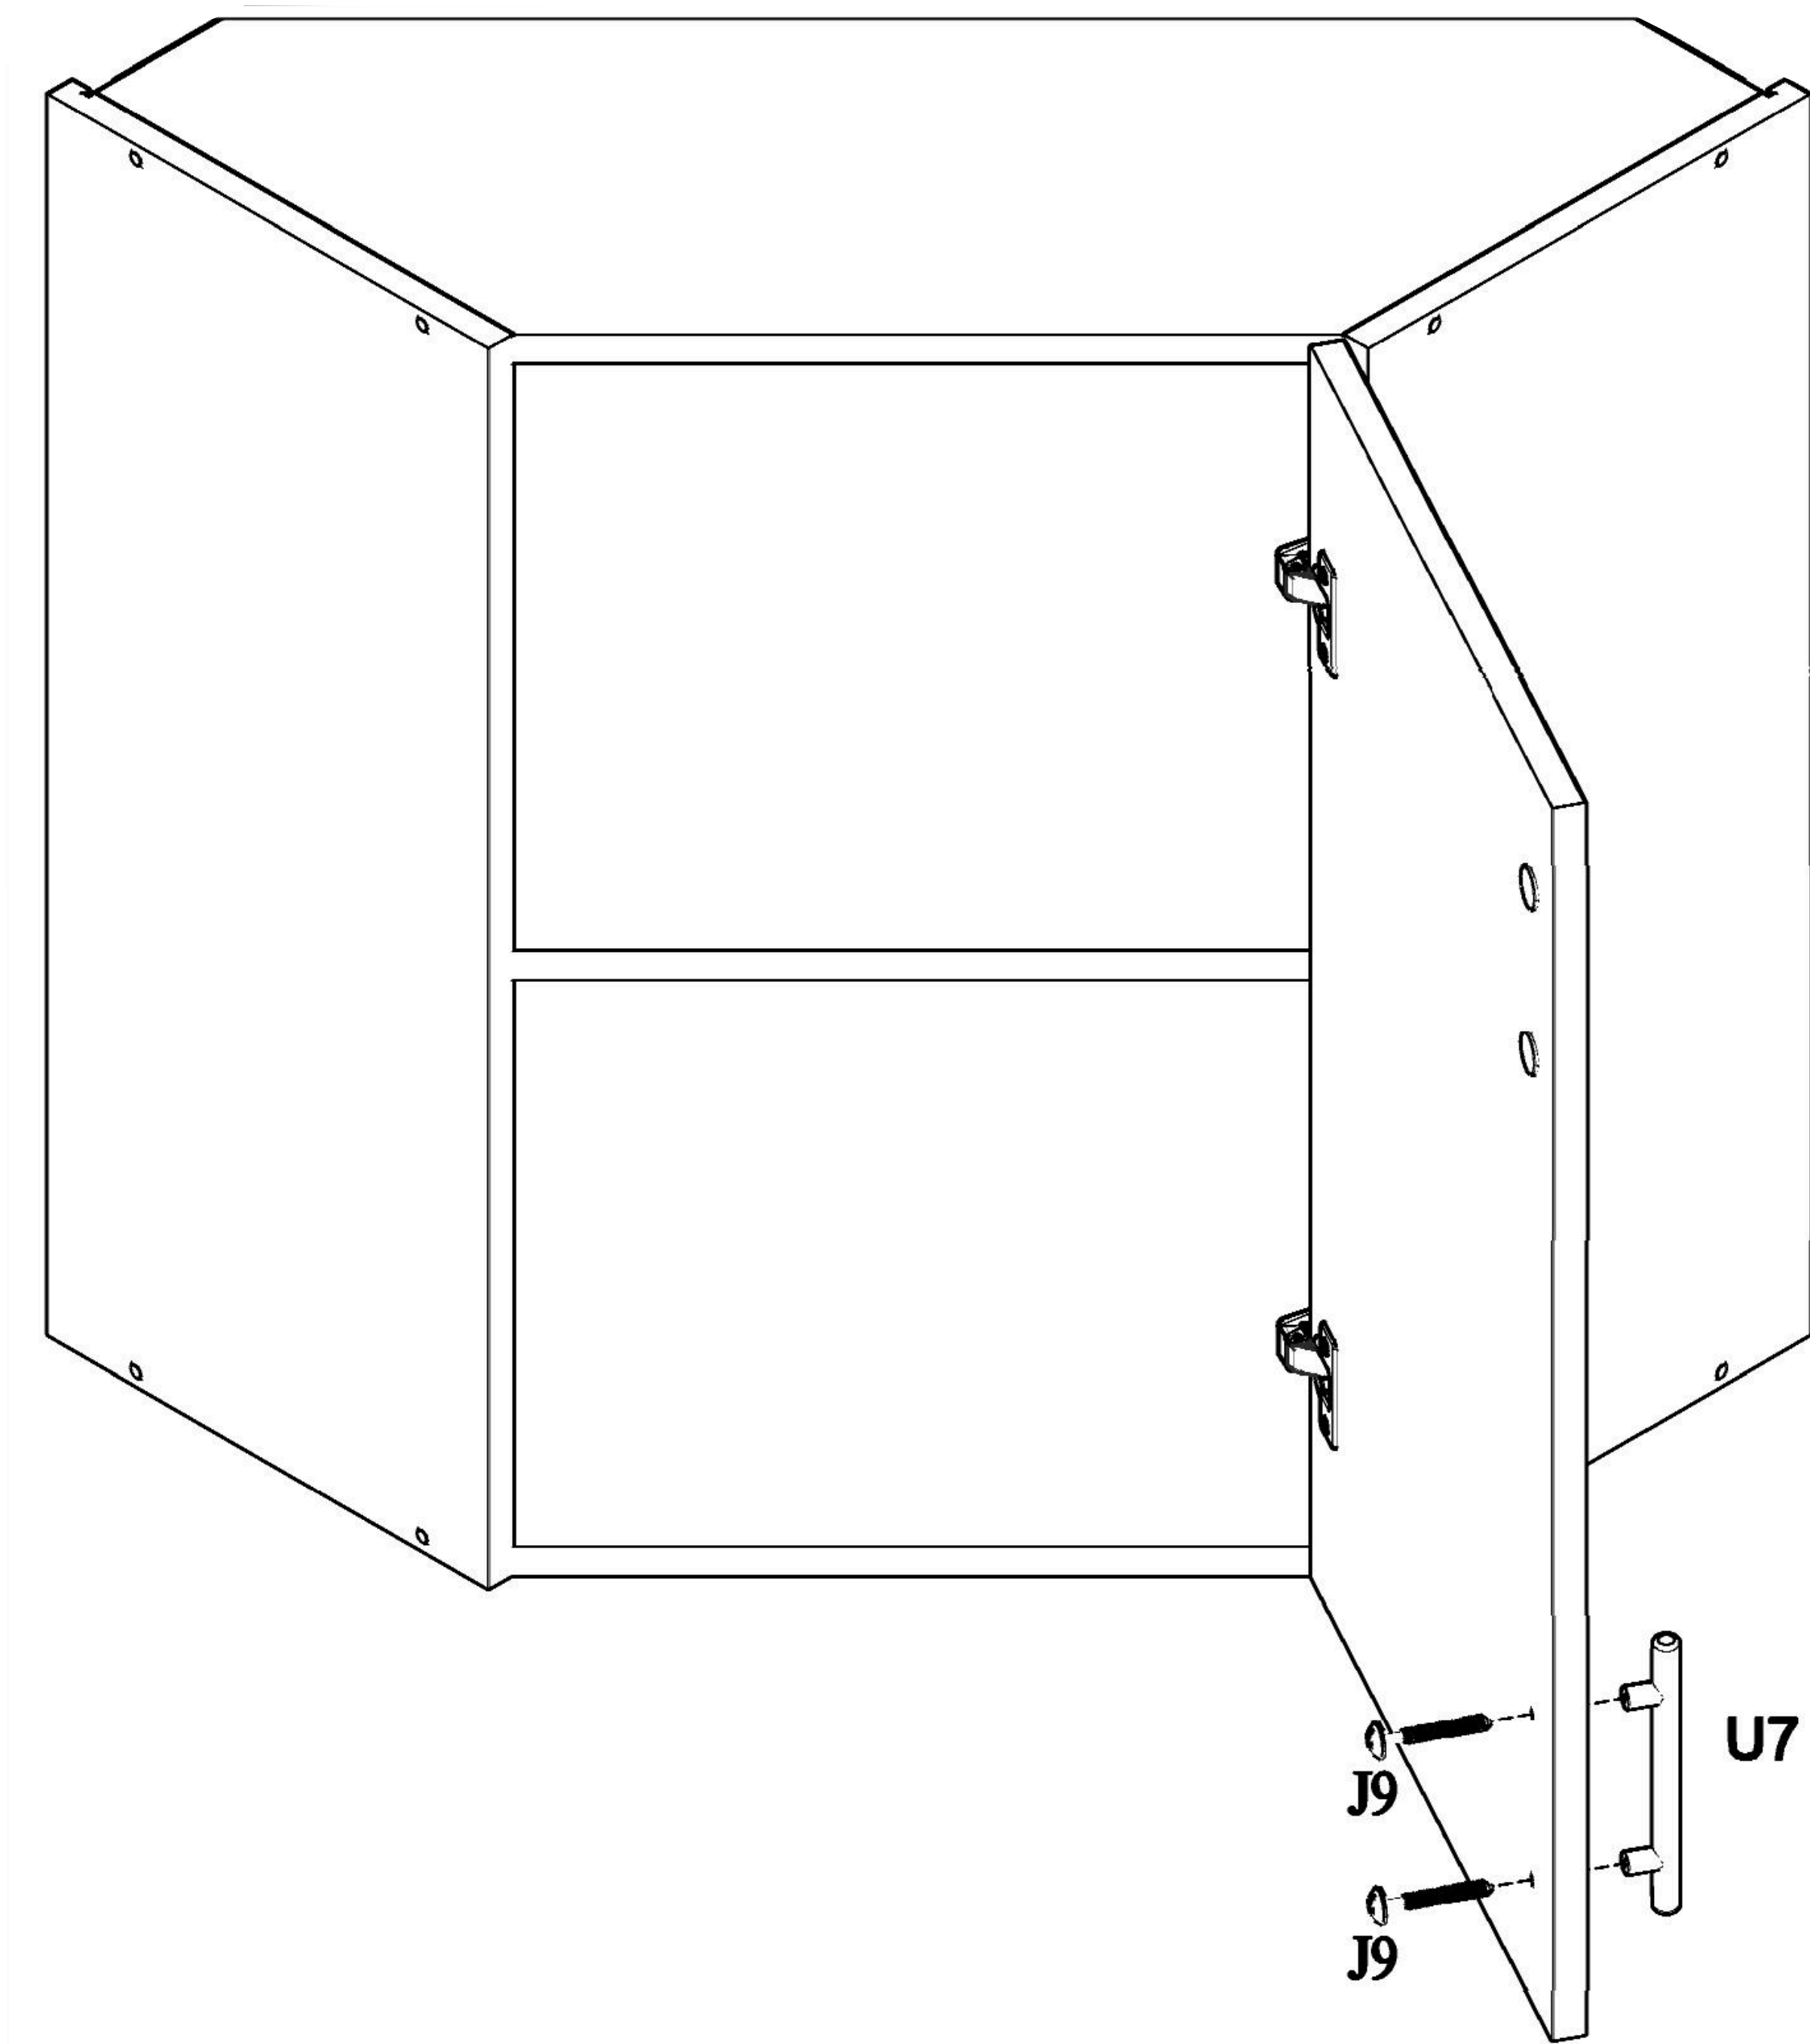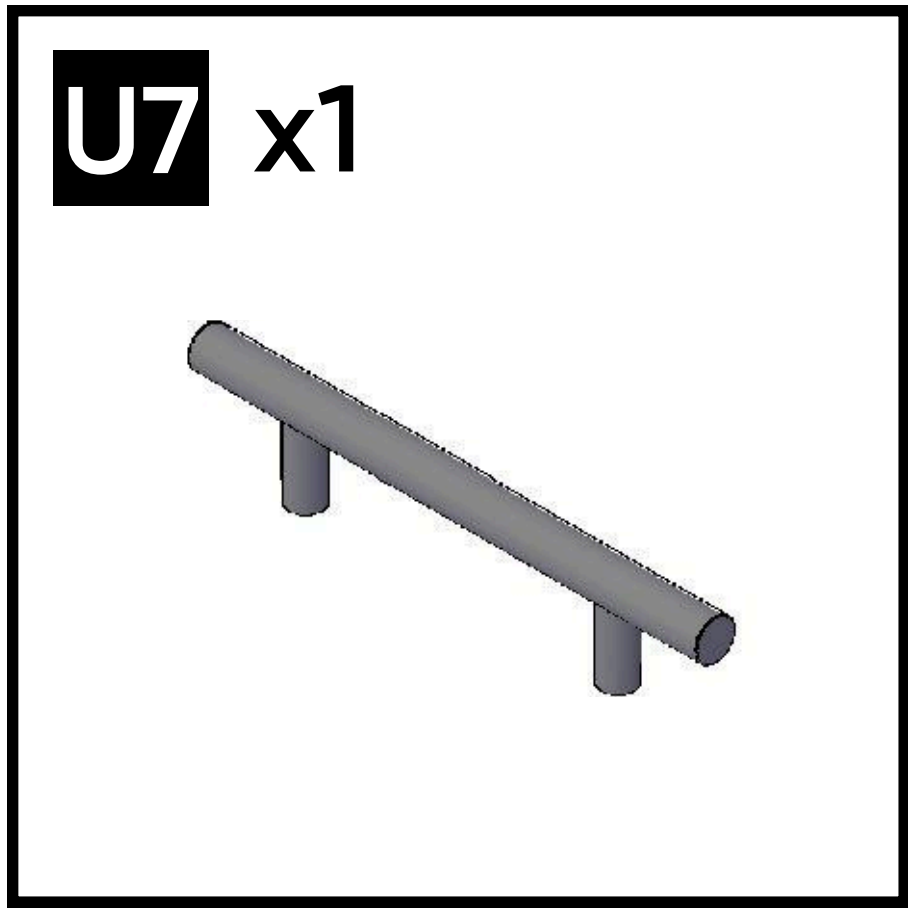

STEP - 14

