



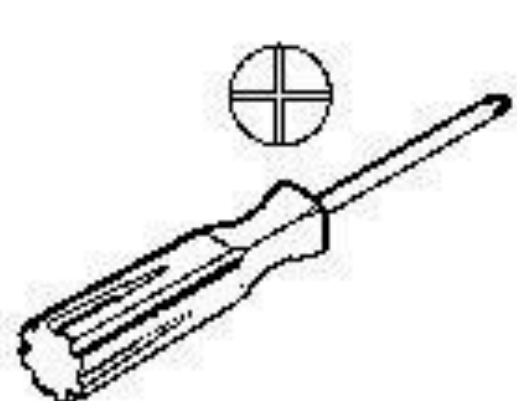


ASSEMBLY INSTRUCTIONS

KITCHEN BASE SINK UNIT 1200MM


MODEL S1200

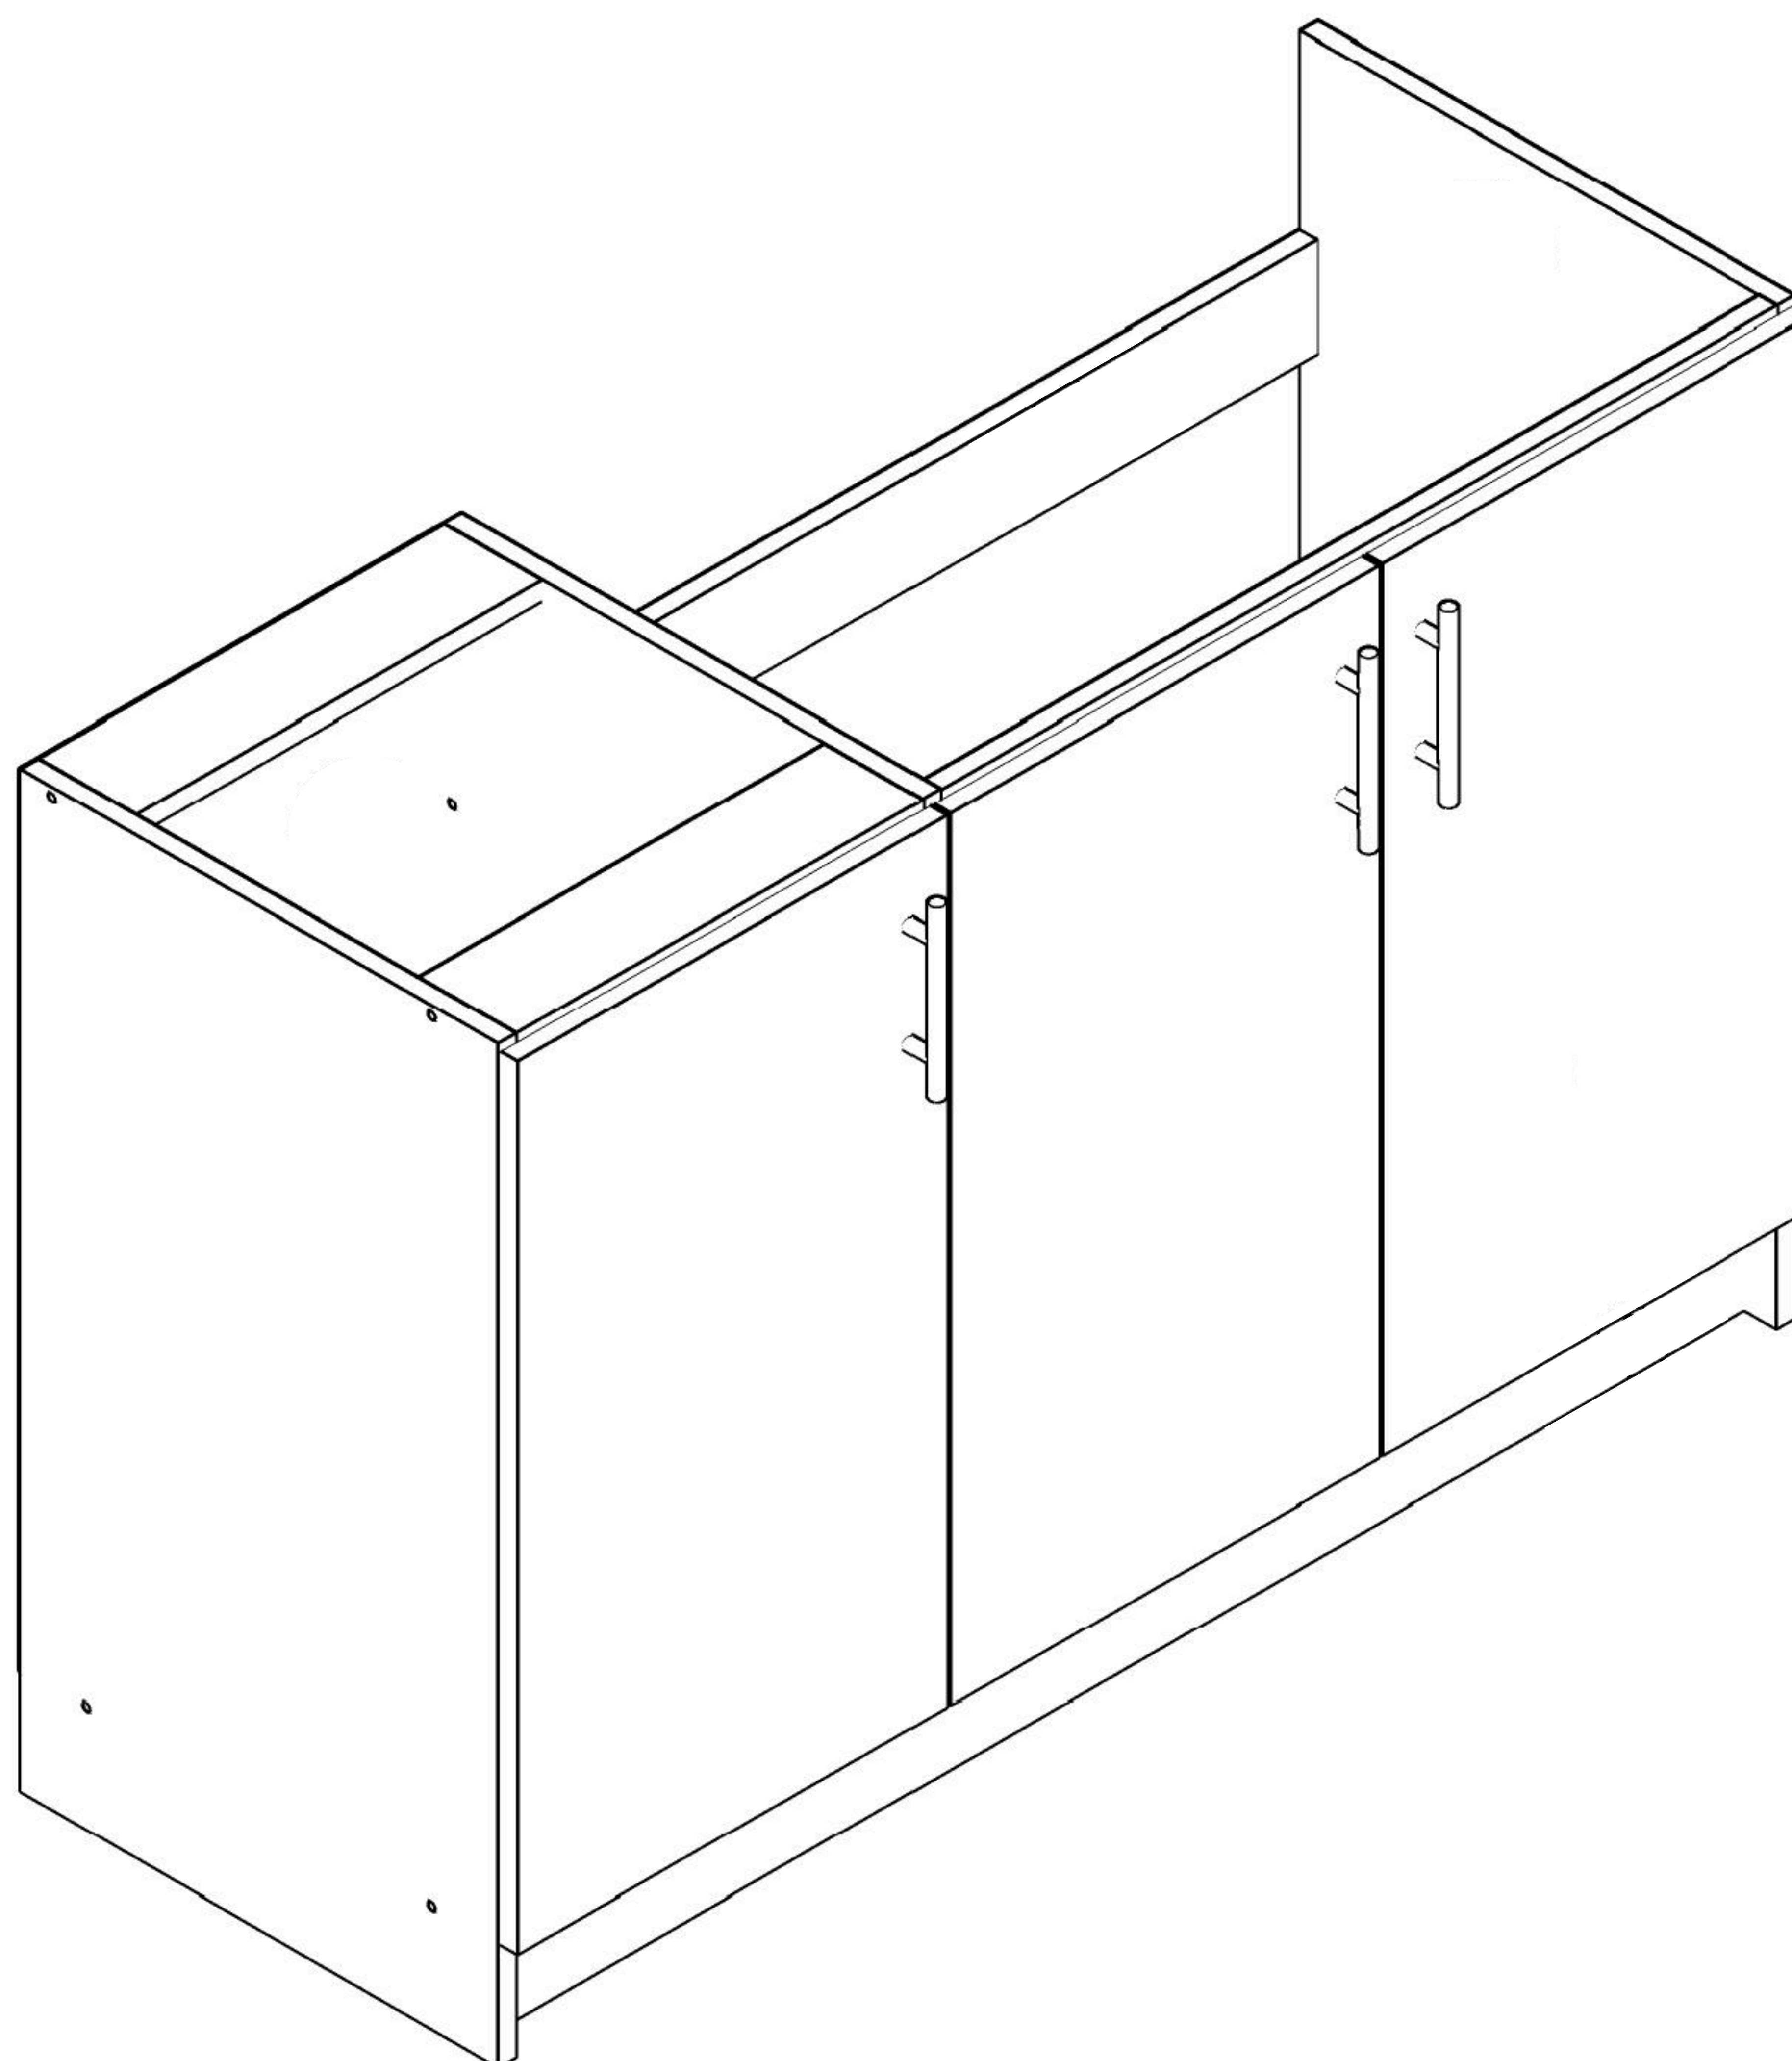


Cross-head
screwdriver

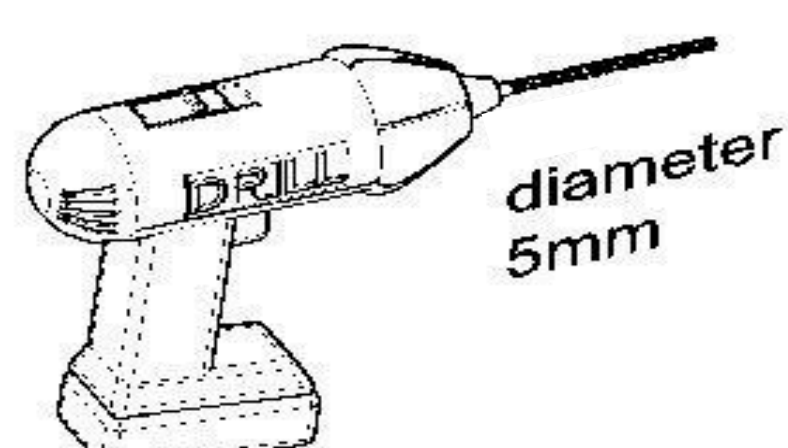

Electric
drill

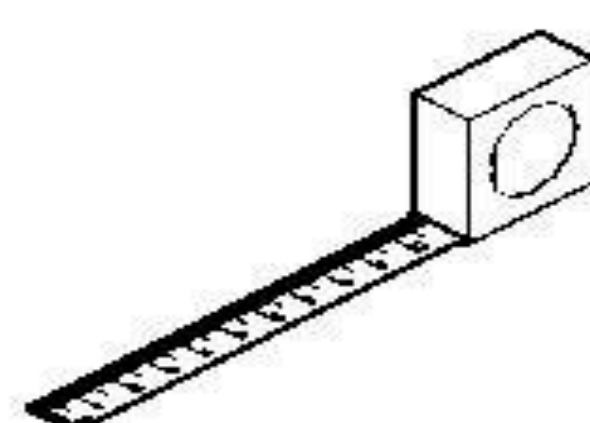

Rule

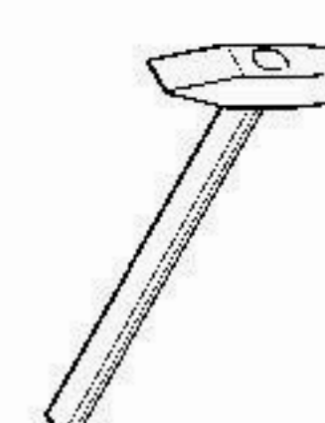

Hammer














**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346










COMPONENTS - PANELS

Please check you have all the panels listed below

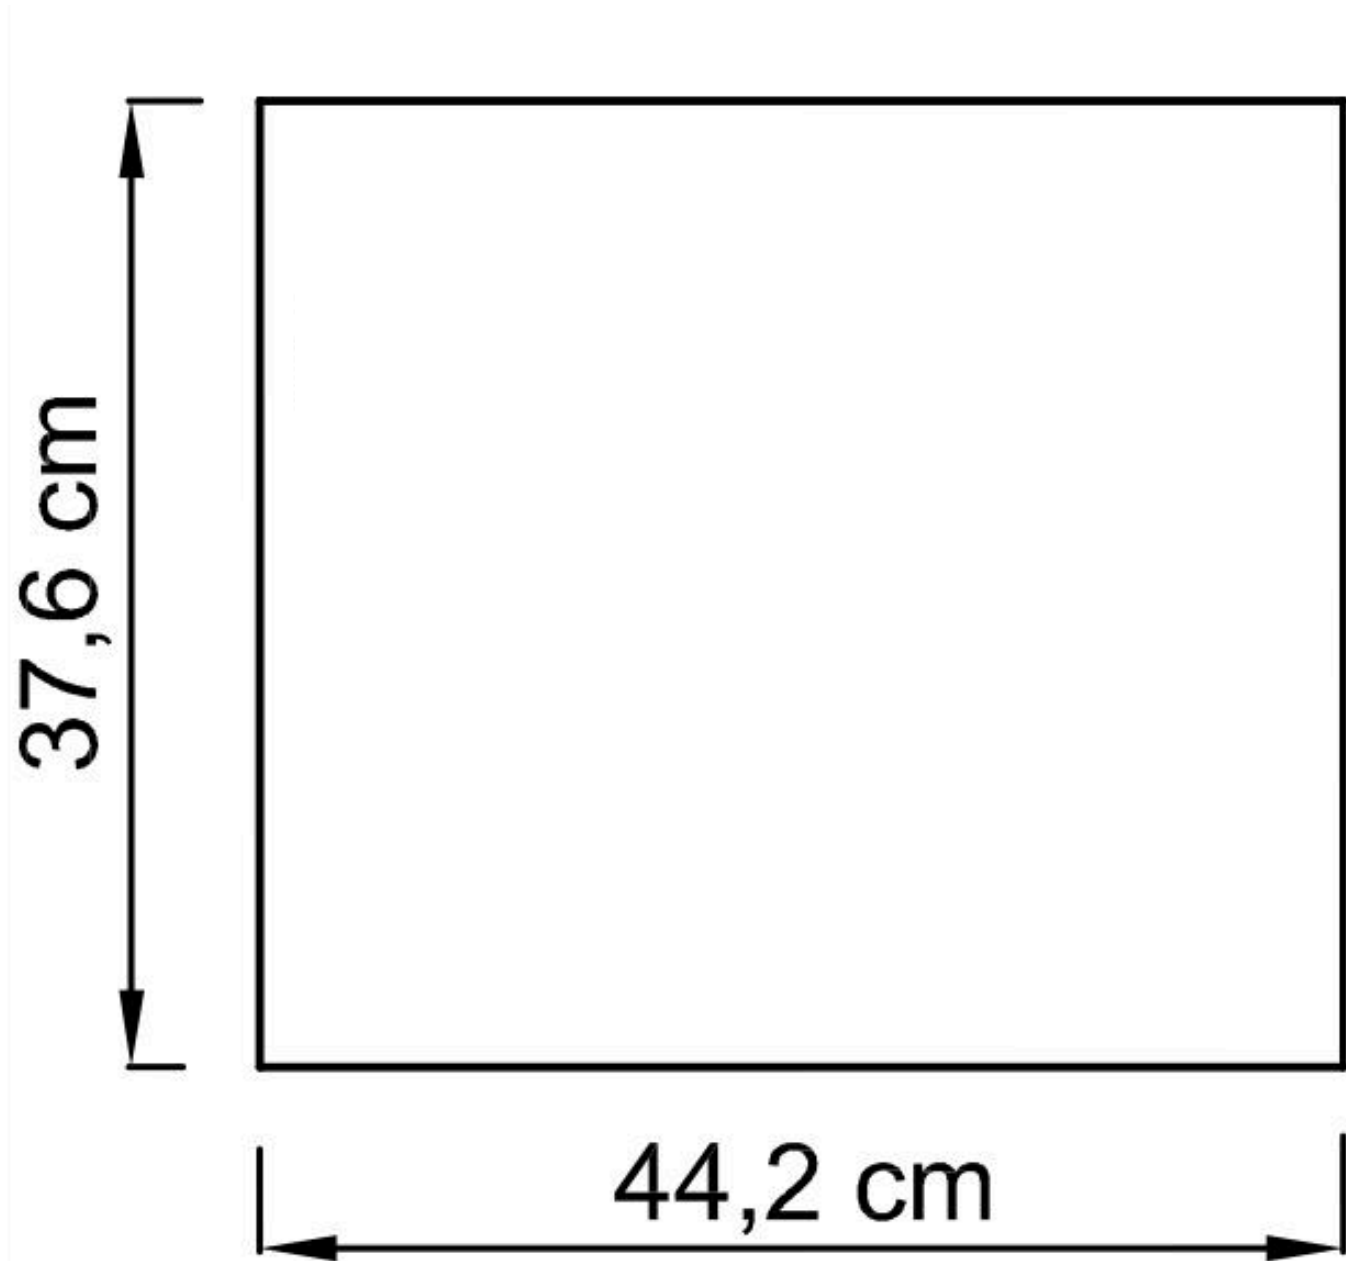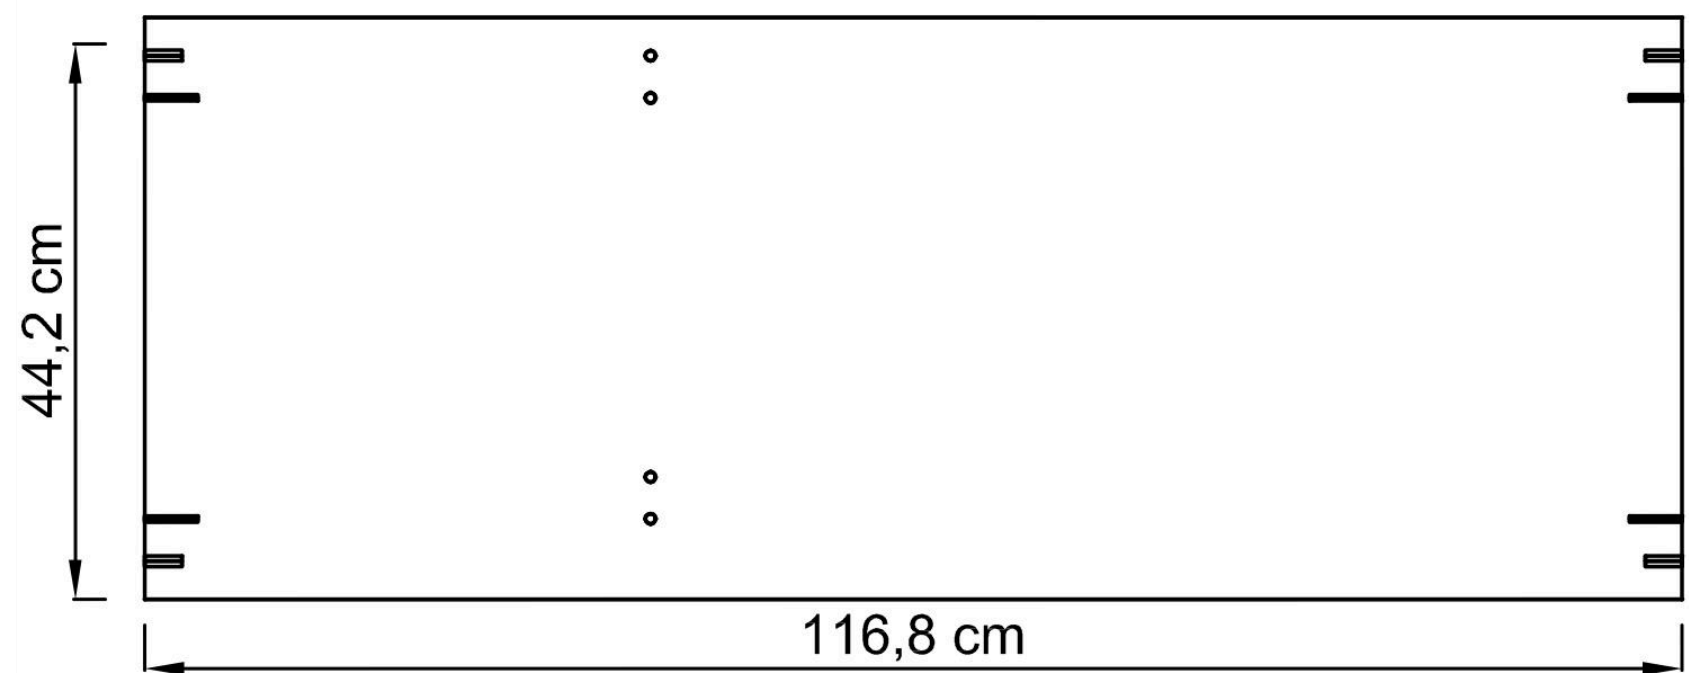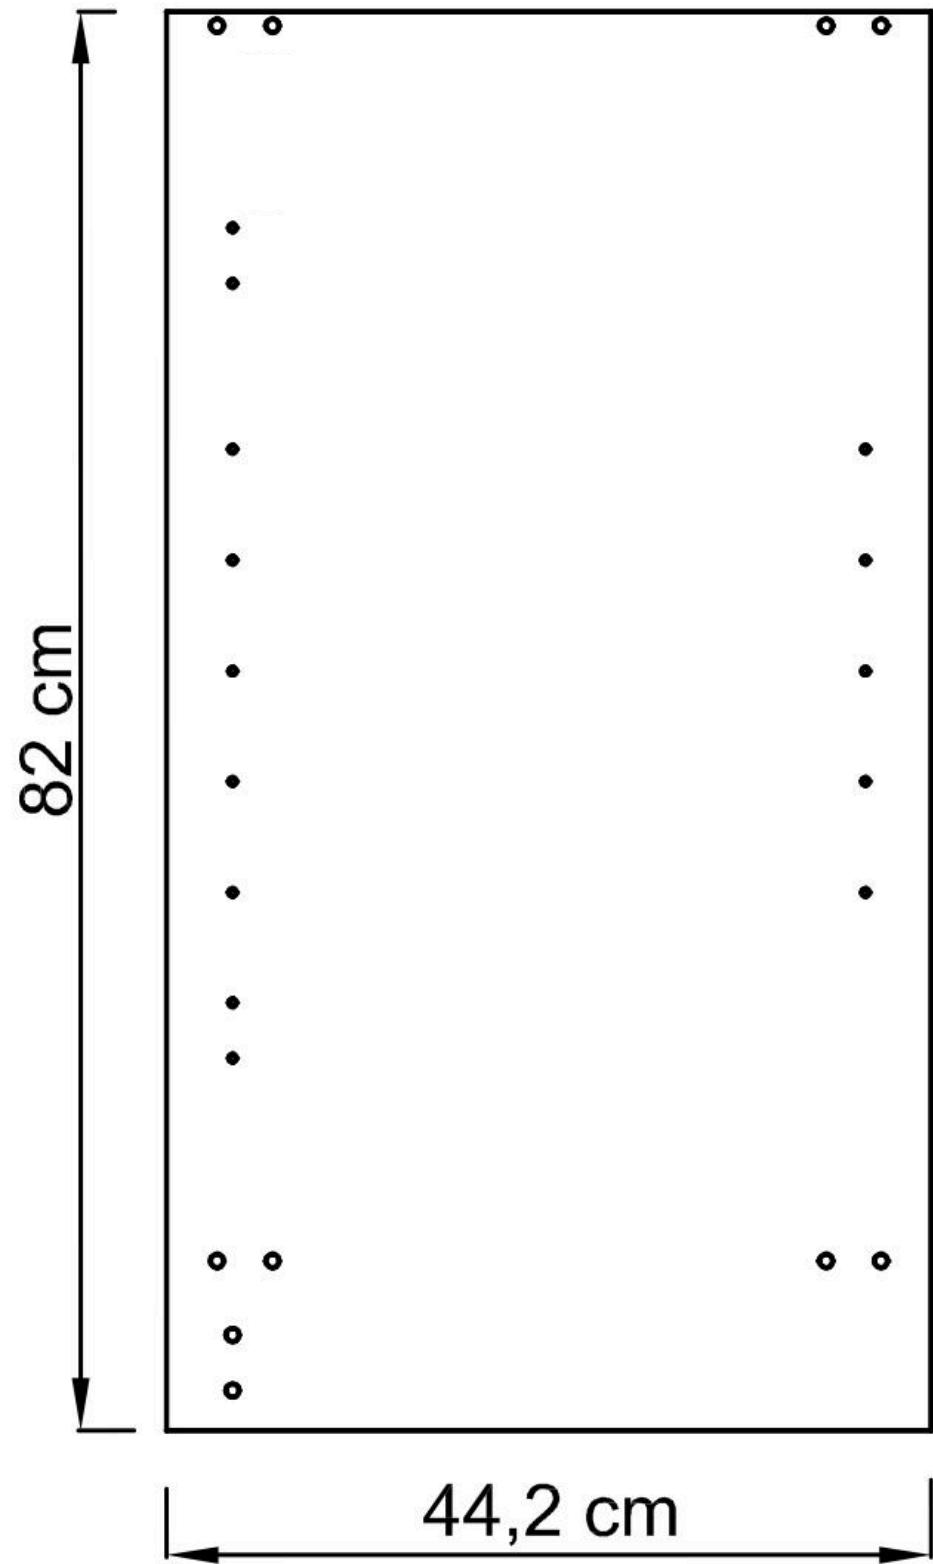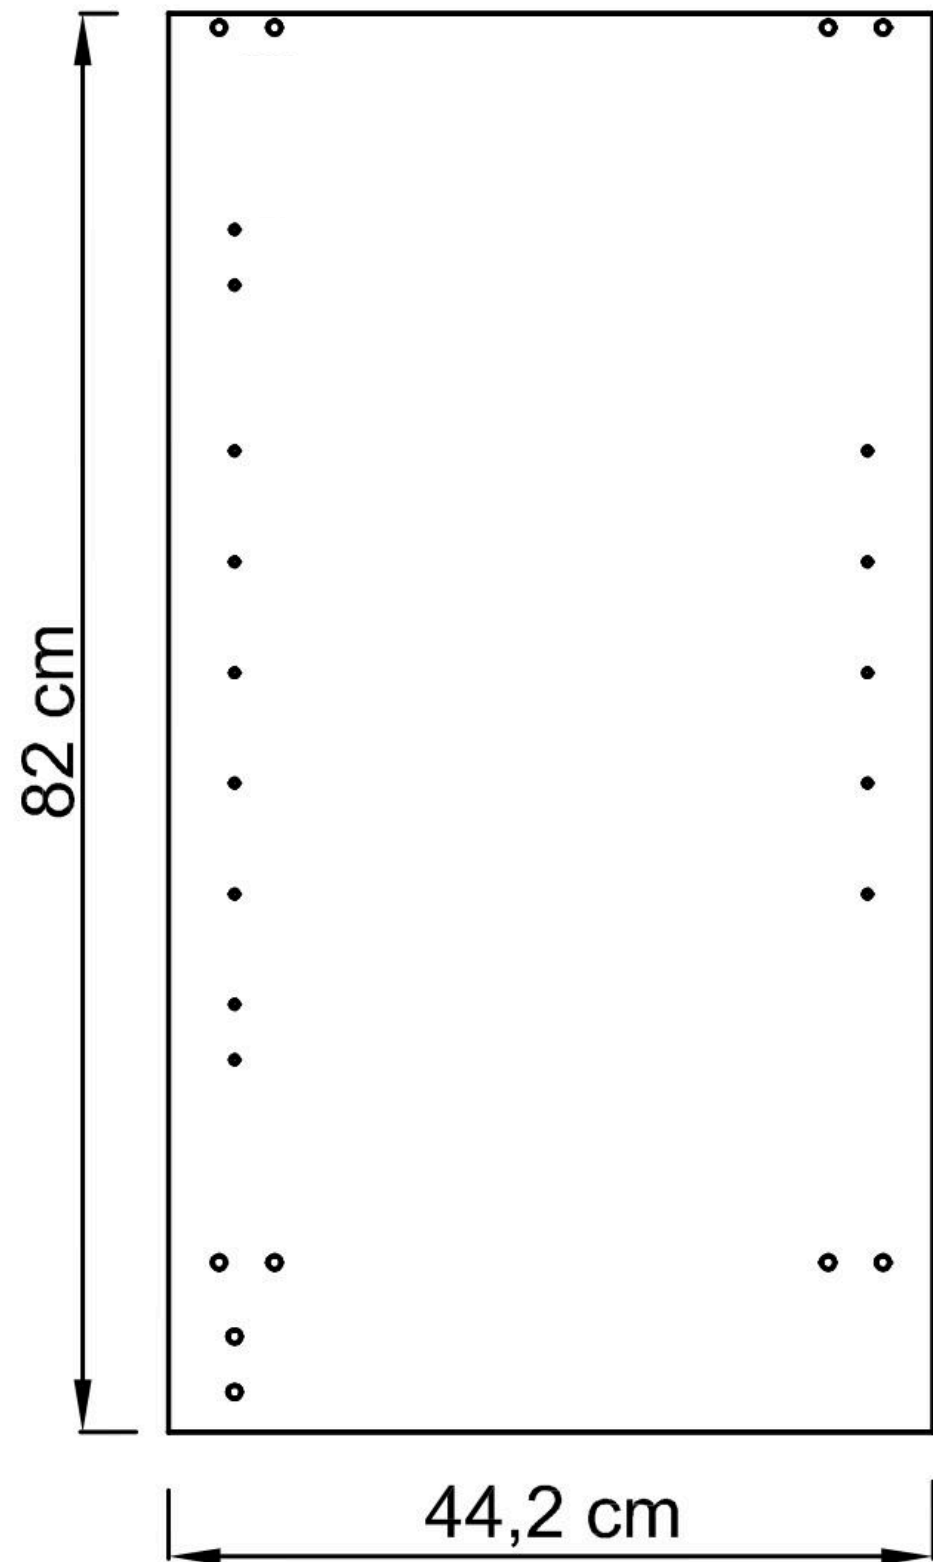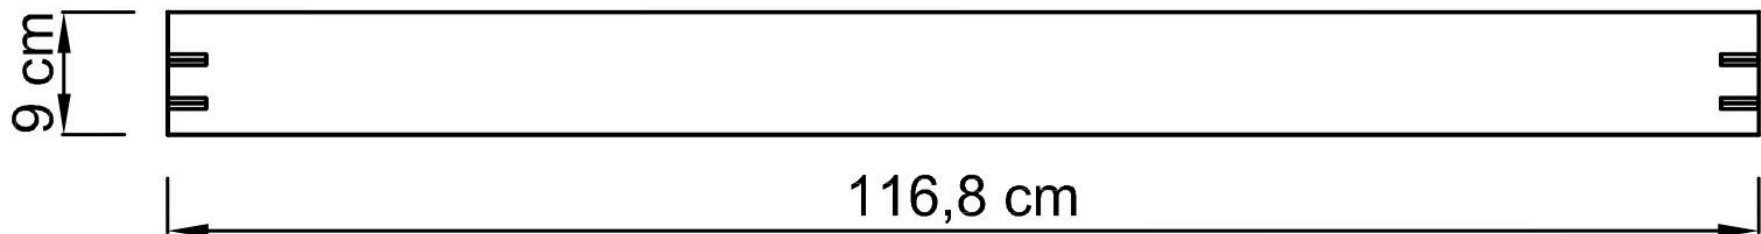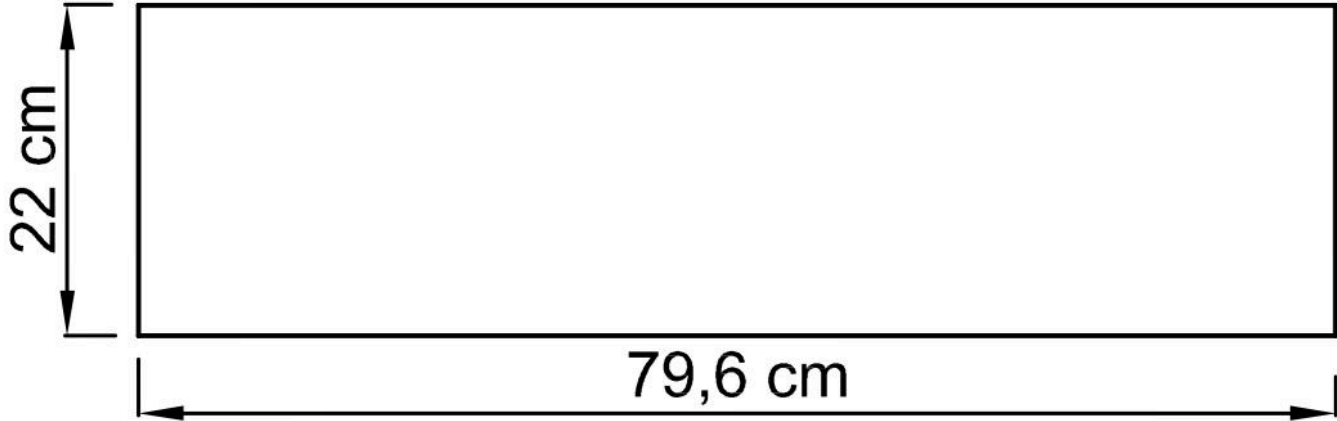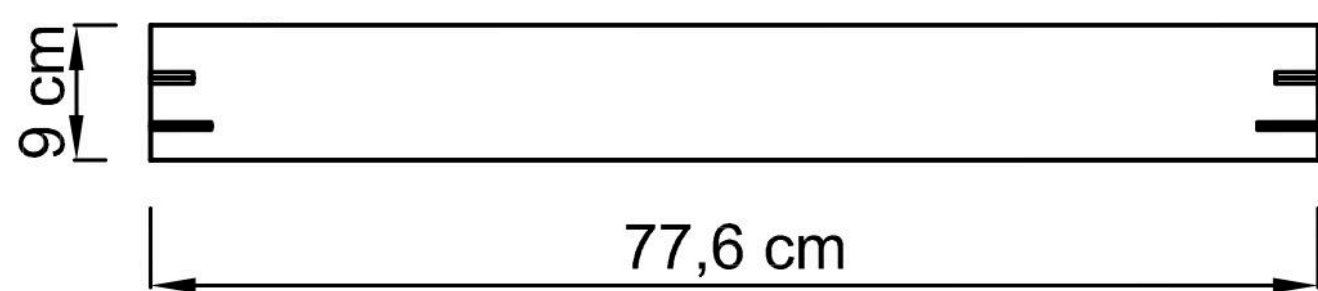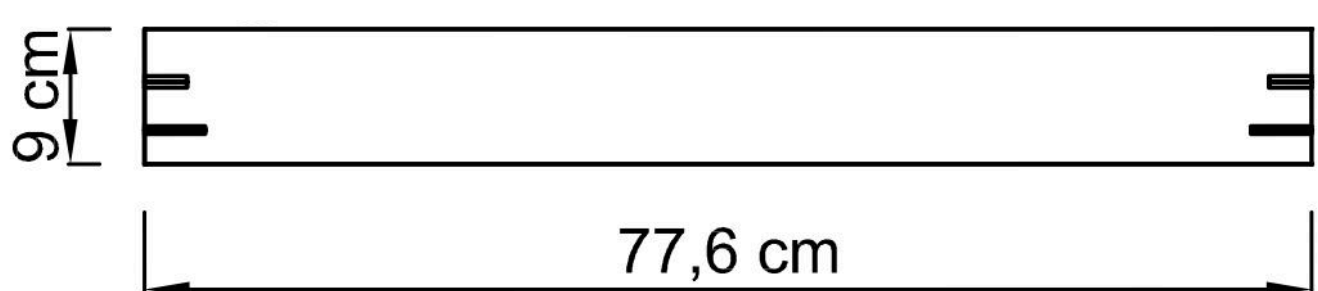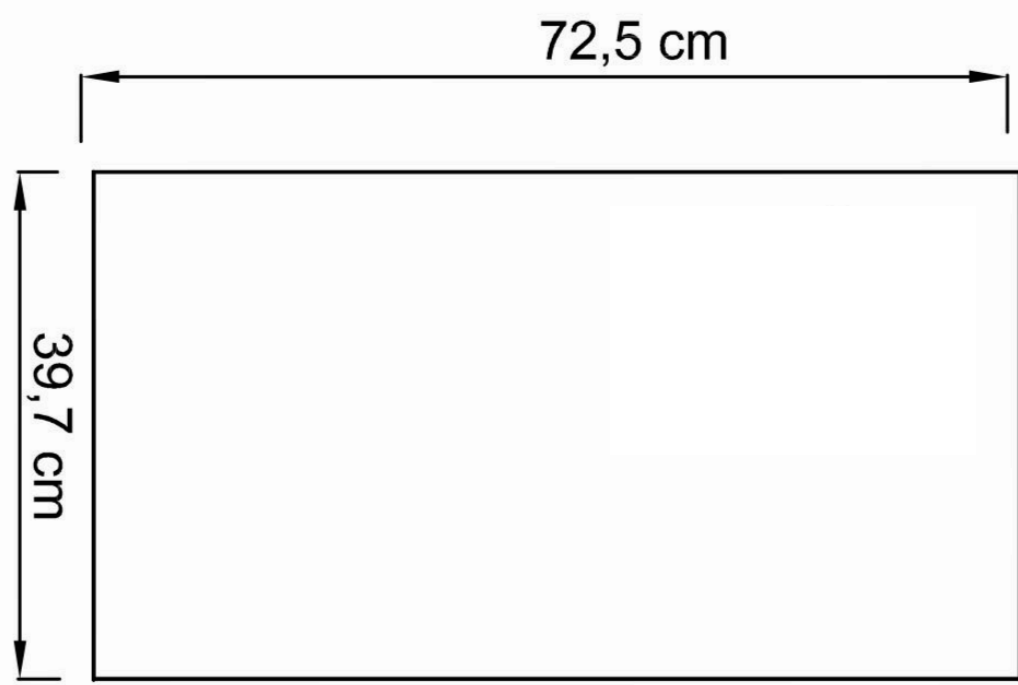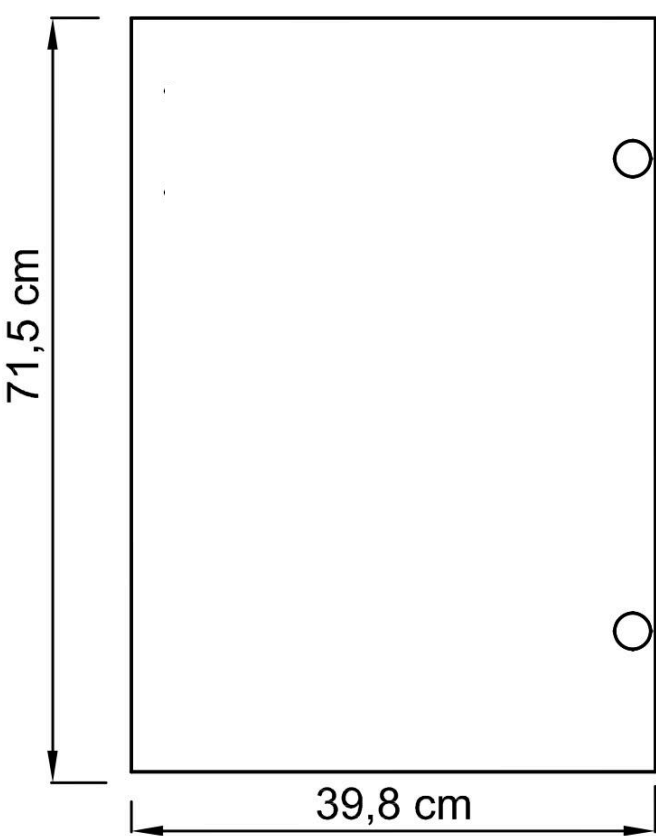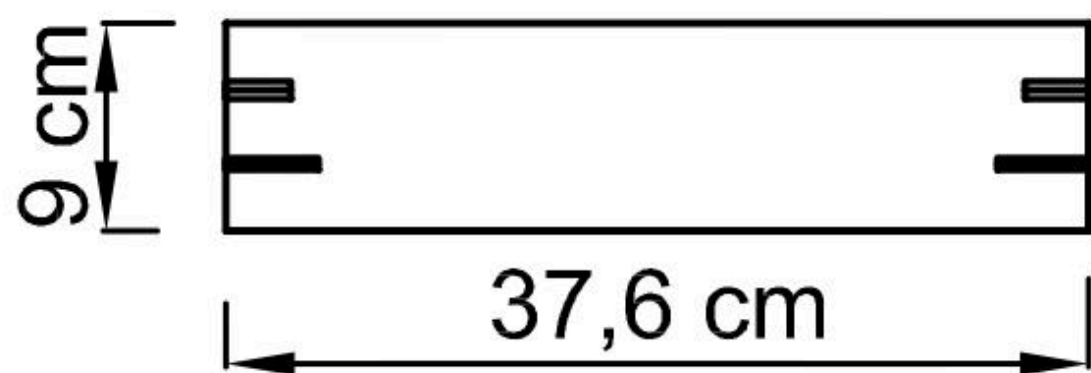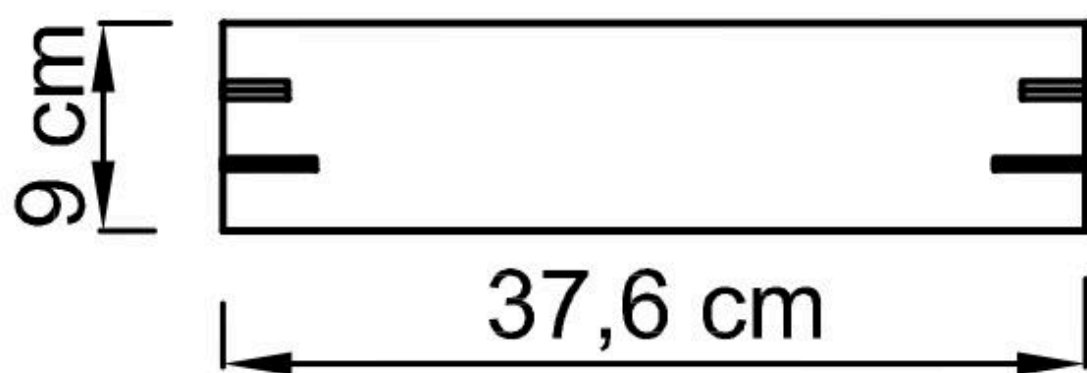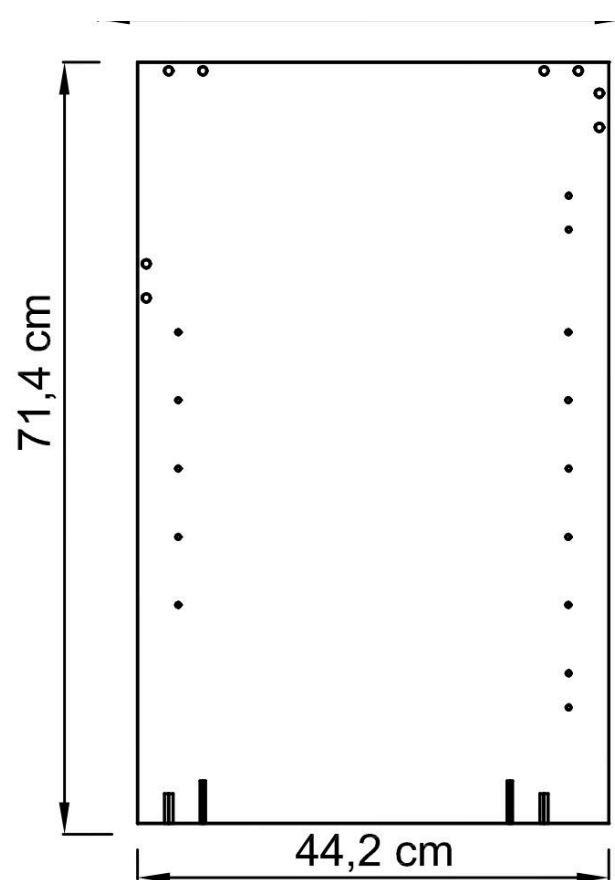1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
		7 x2 
8 x1 	9 x1 	10 x3 Front (separate package) 
11 x1 	12 x1 	13 x1 

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

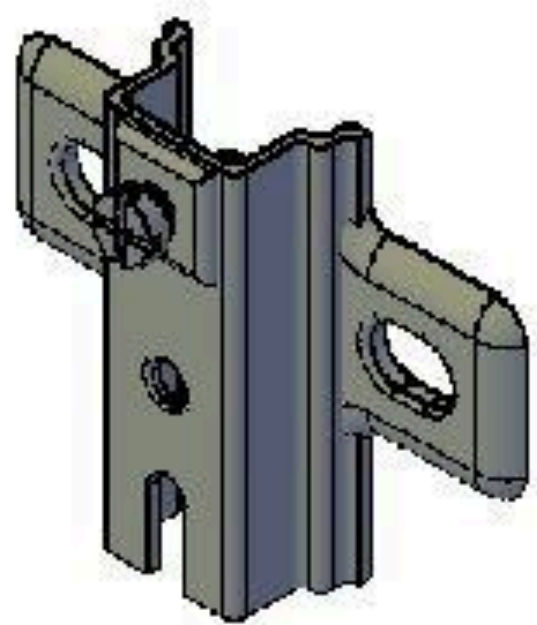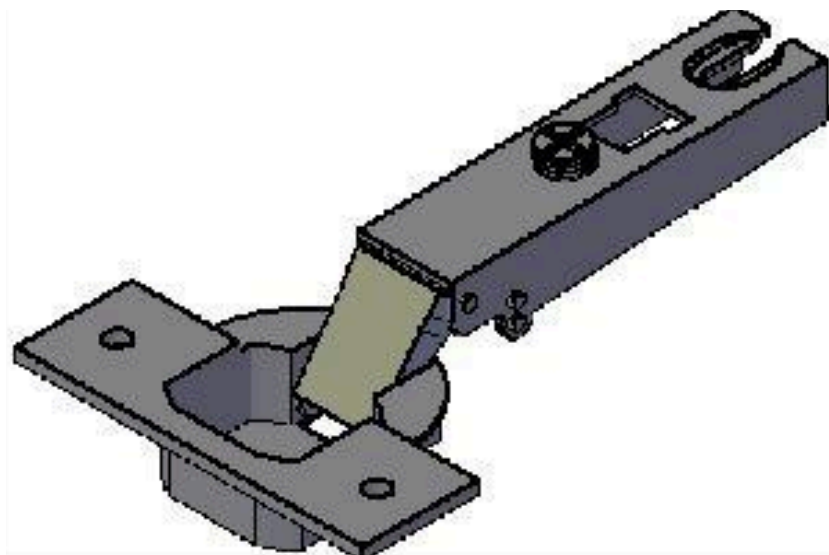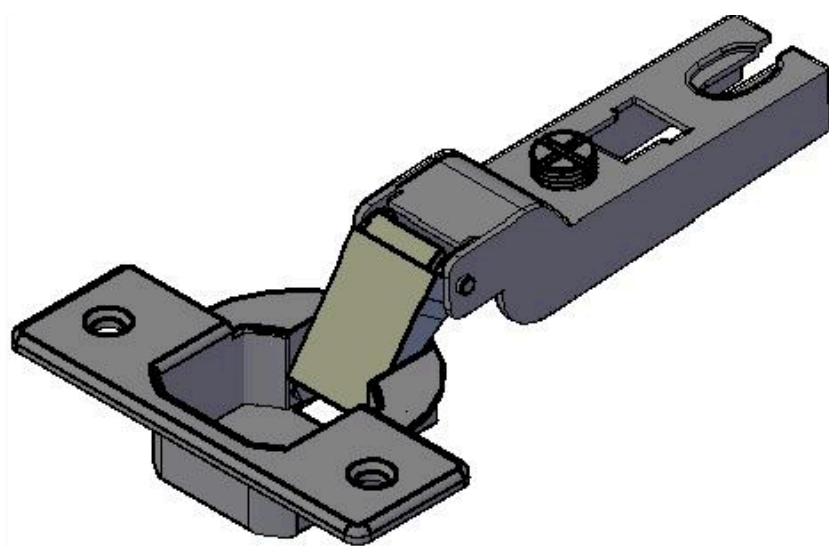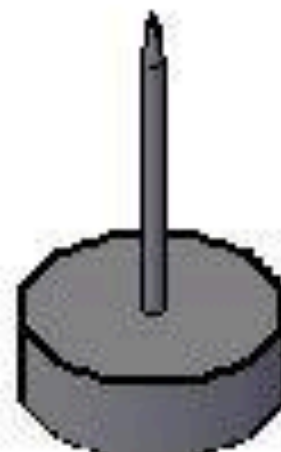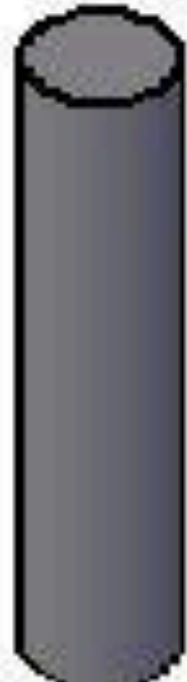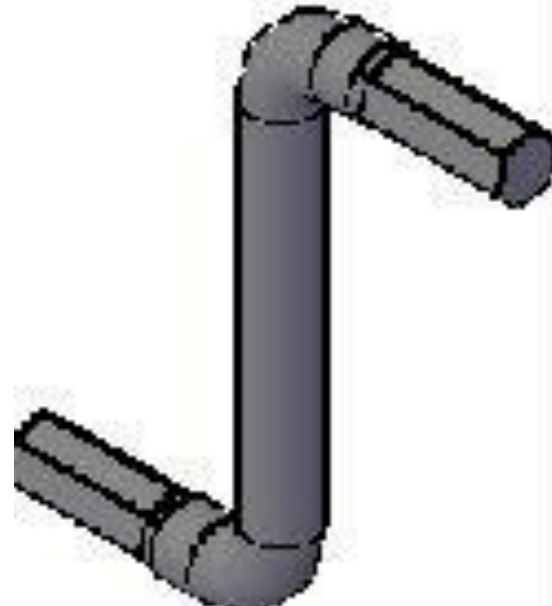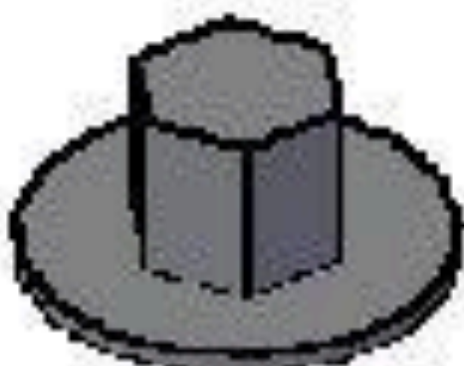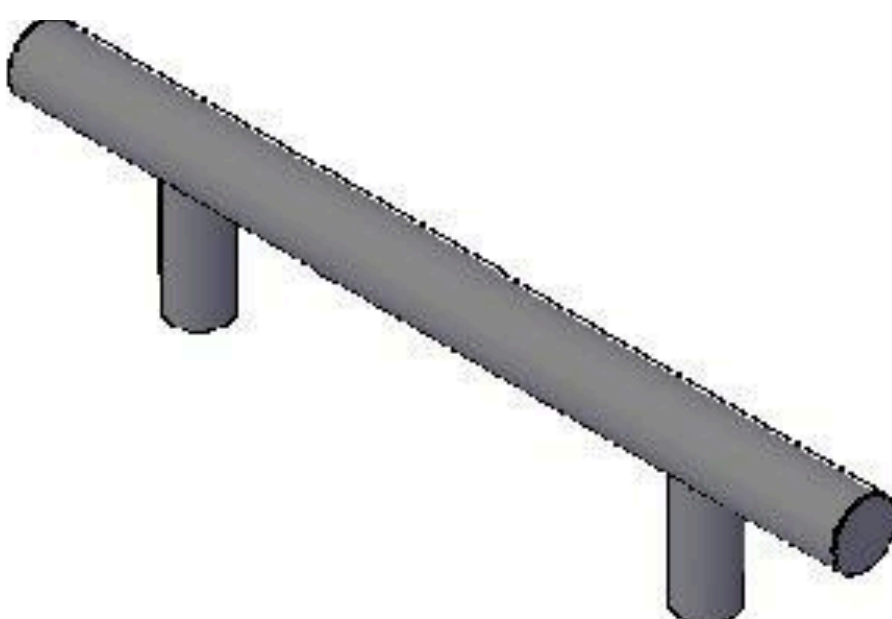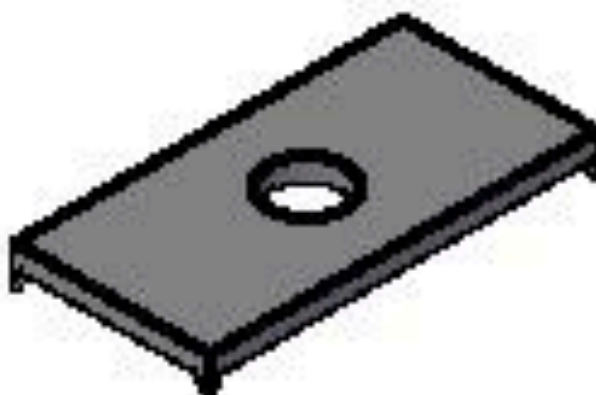O x12 ⌀ 7x16 F x6 G2 x4 G1 x2			
   			
! PAY ATTENTION: O AND F ATTACHED TO G2 AND G1			
E x6 	A x18 	Q7 x1 	C x14  ⌀ 7x50
S1 x8 	D8 x4 	J9 x6  ⌀ 3x25	U7 x3 
H x12 US 031.03  ⌀ 3.5x13	W x50 	S7 x6 	M x8 
H5 x4 US 031.03  ⌀ 3.5x25	H3 x8 US 031.03  ⌀ 3x16		

STEP - 1

! PAY ATTENTION: O ATTACHED TO F


O x8

F x4




7x16

E x4

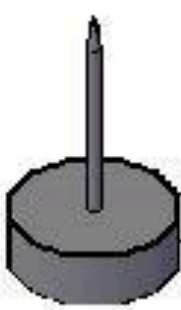


A x12

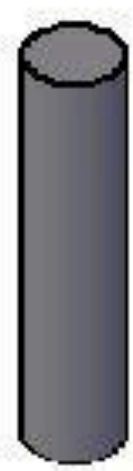

D8 x2



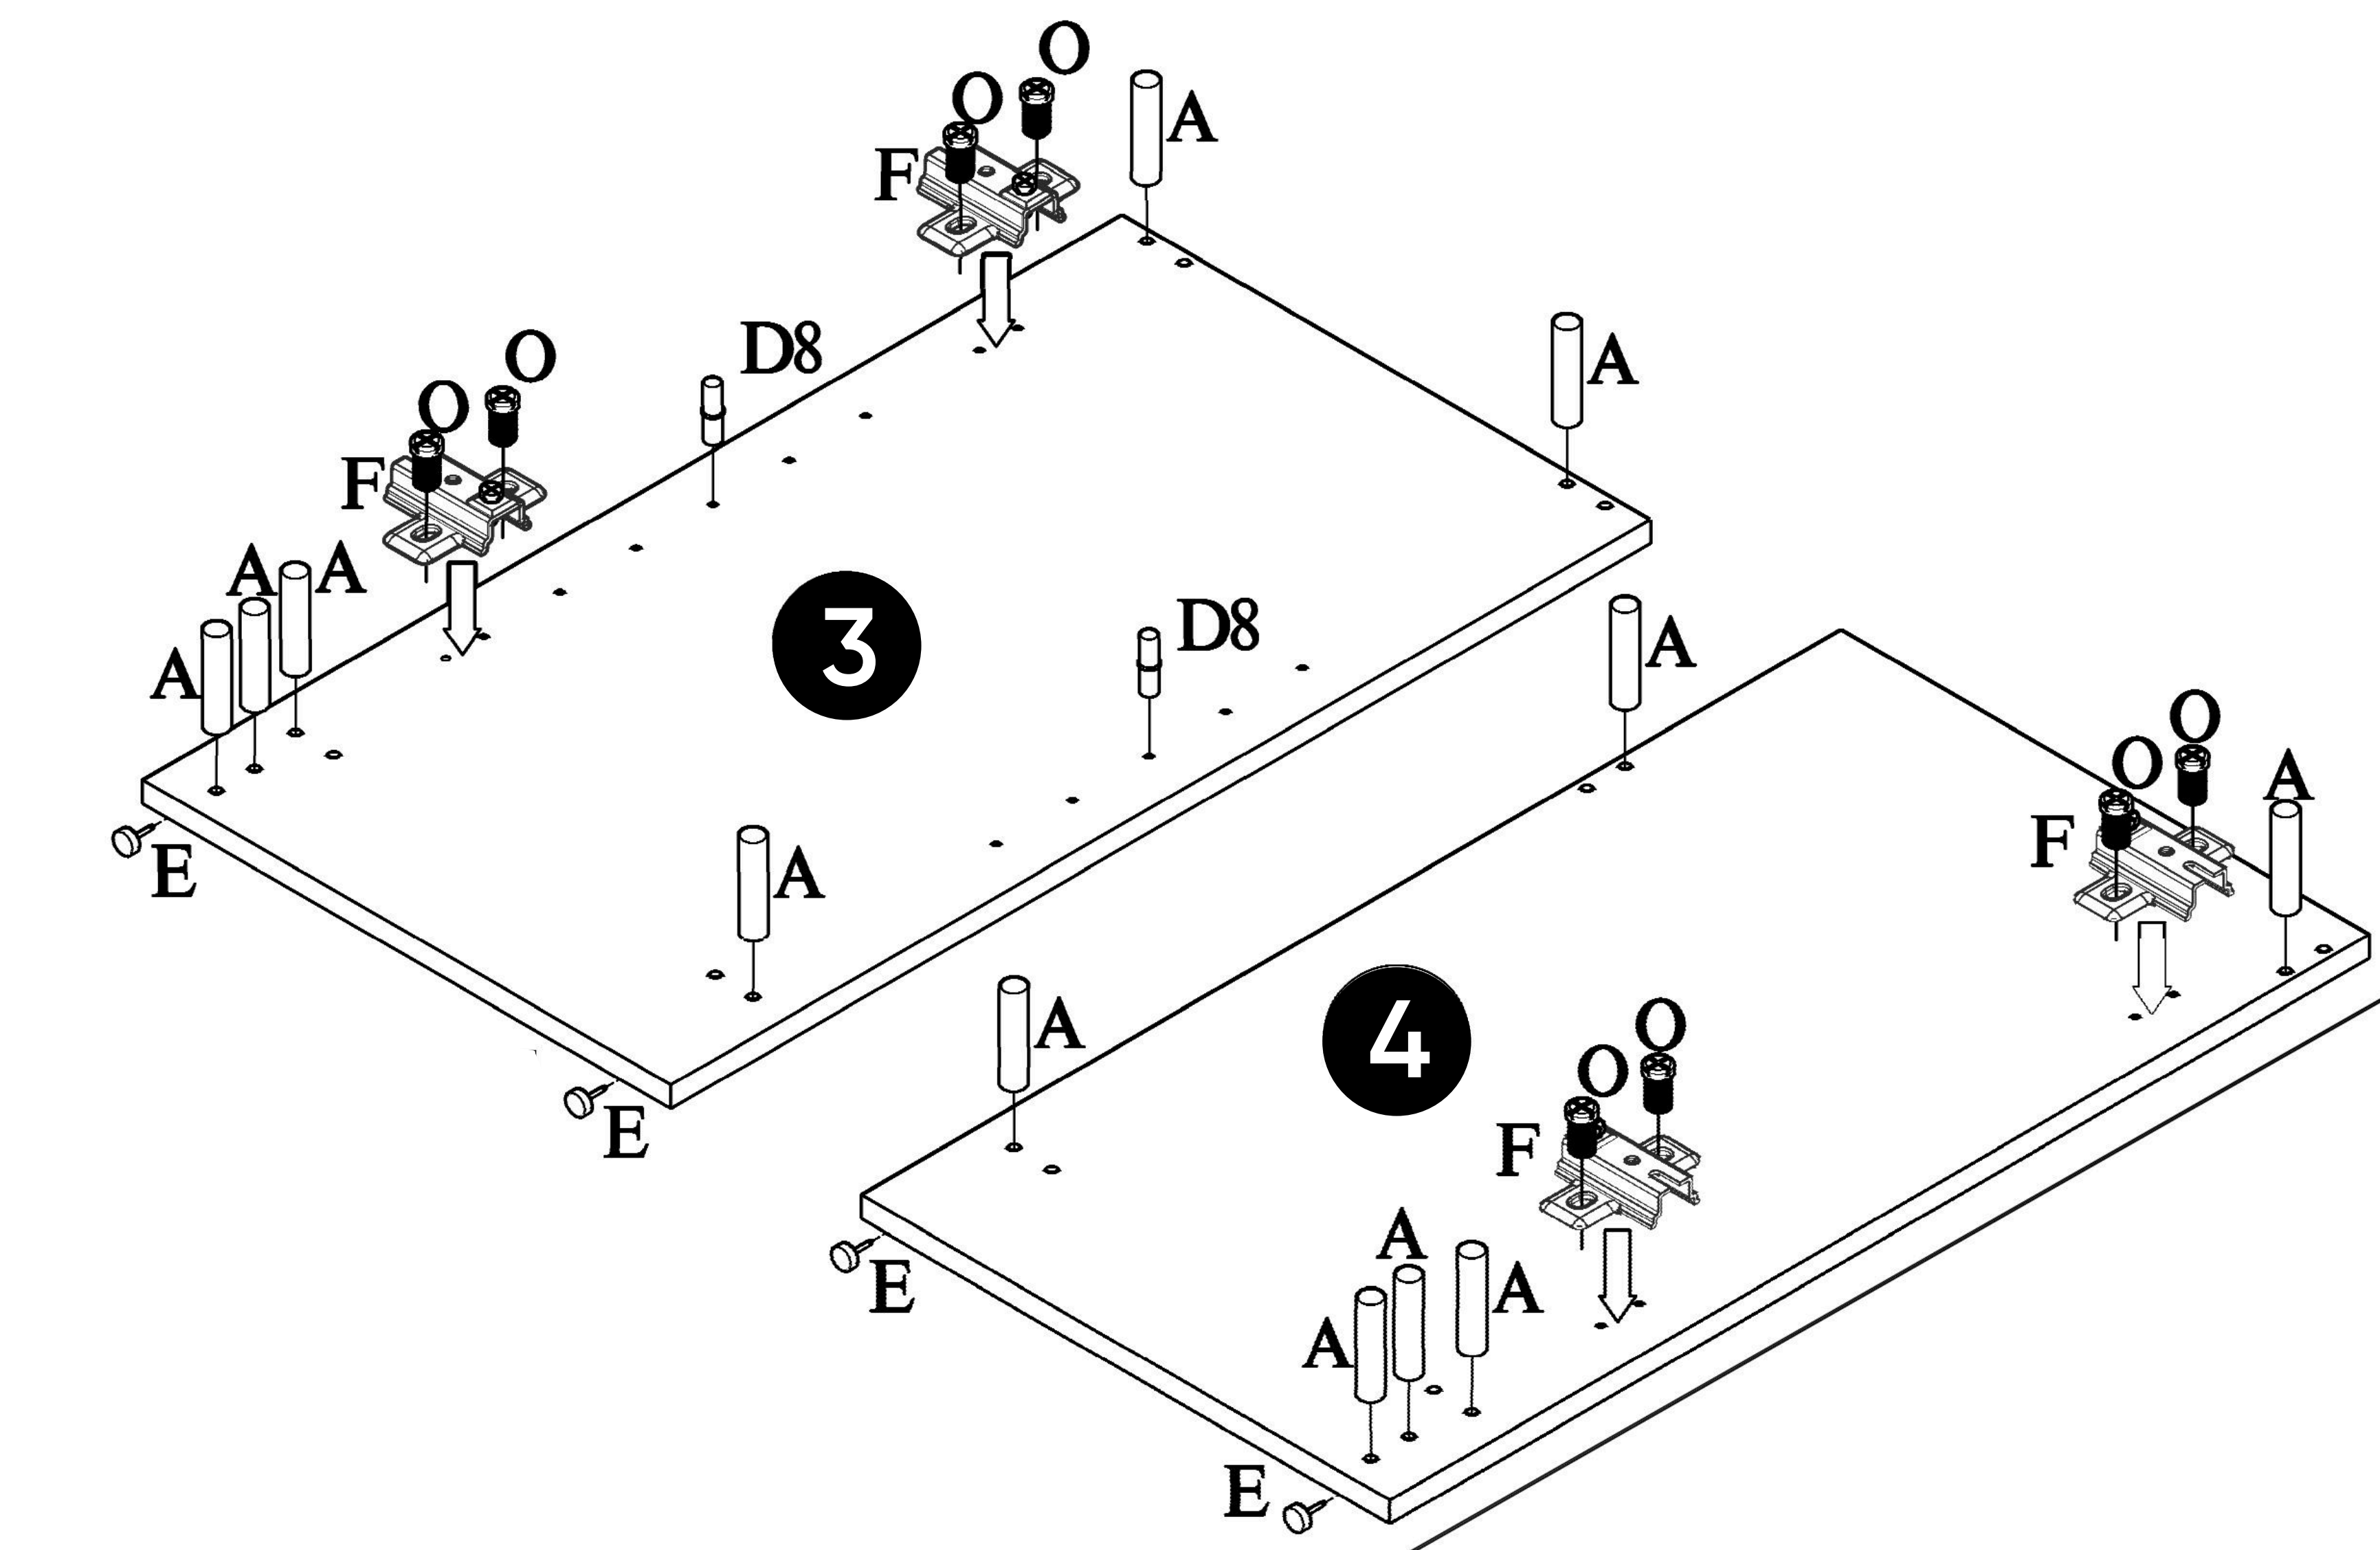


STEP - 2

! PAY ATTENTION: O ATTACHED TO F

O x4

F x2

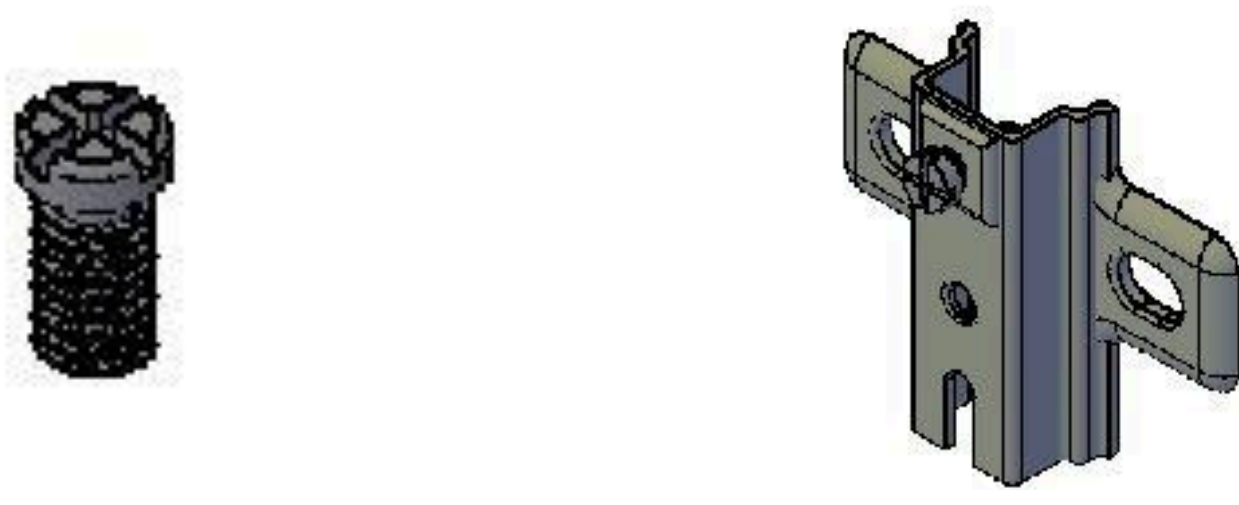



7x16

D8 x2





A x4




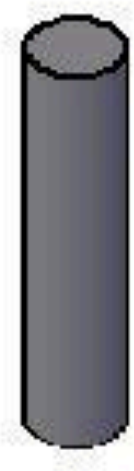


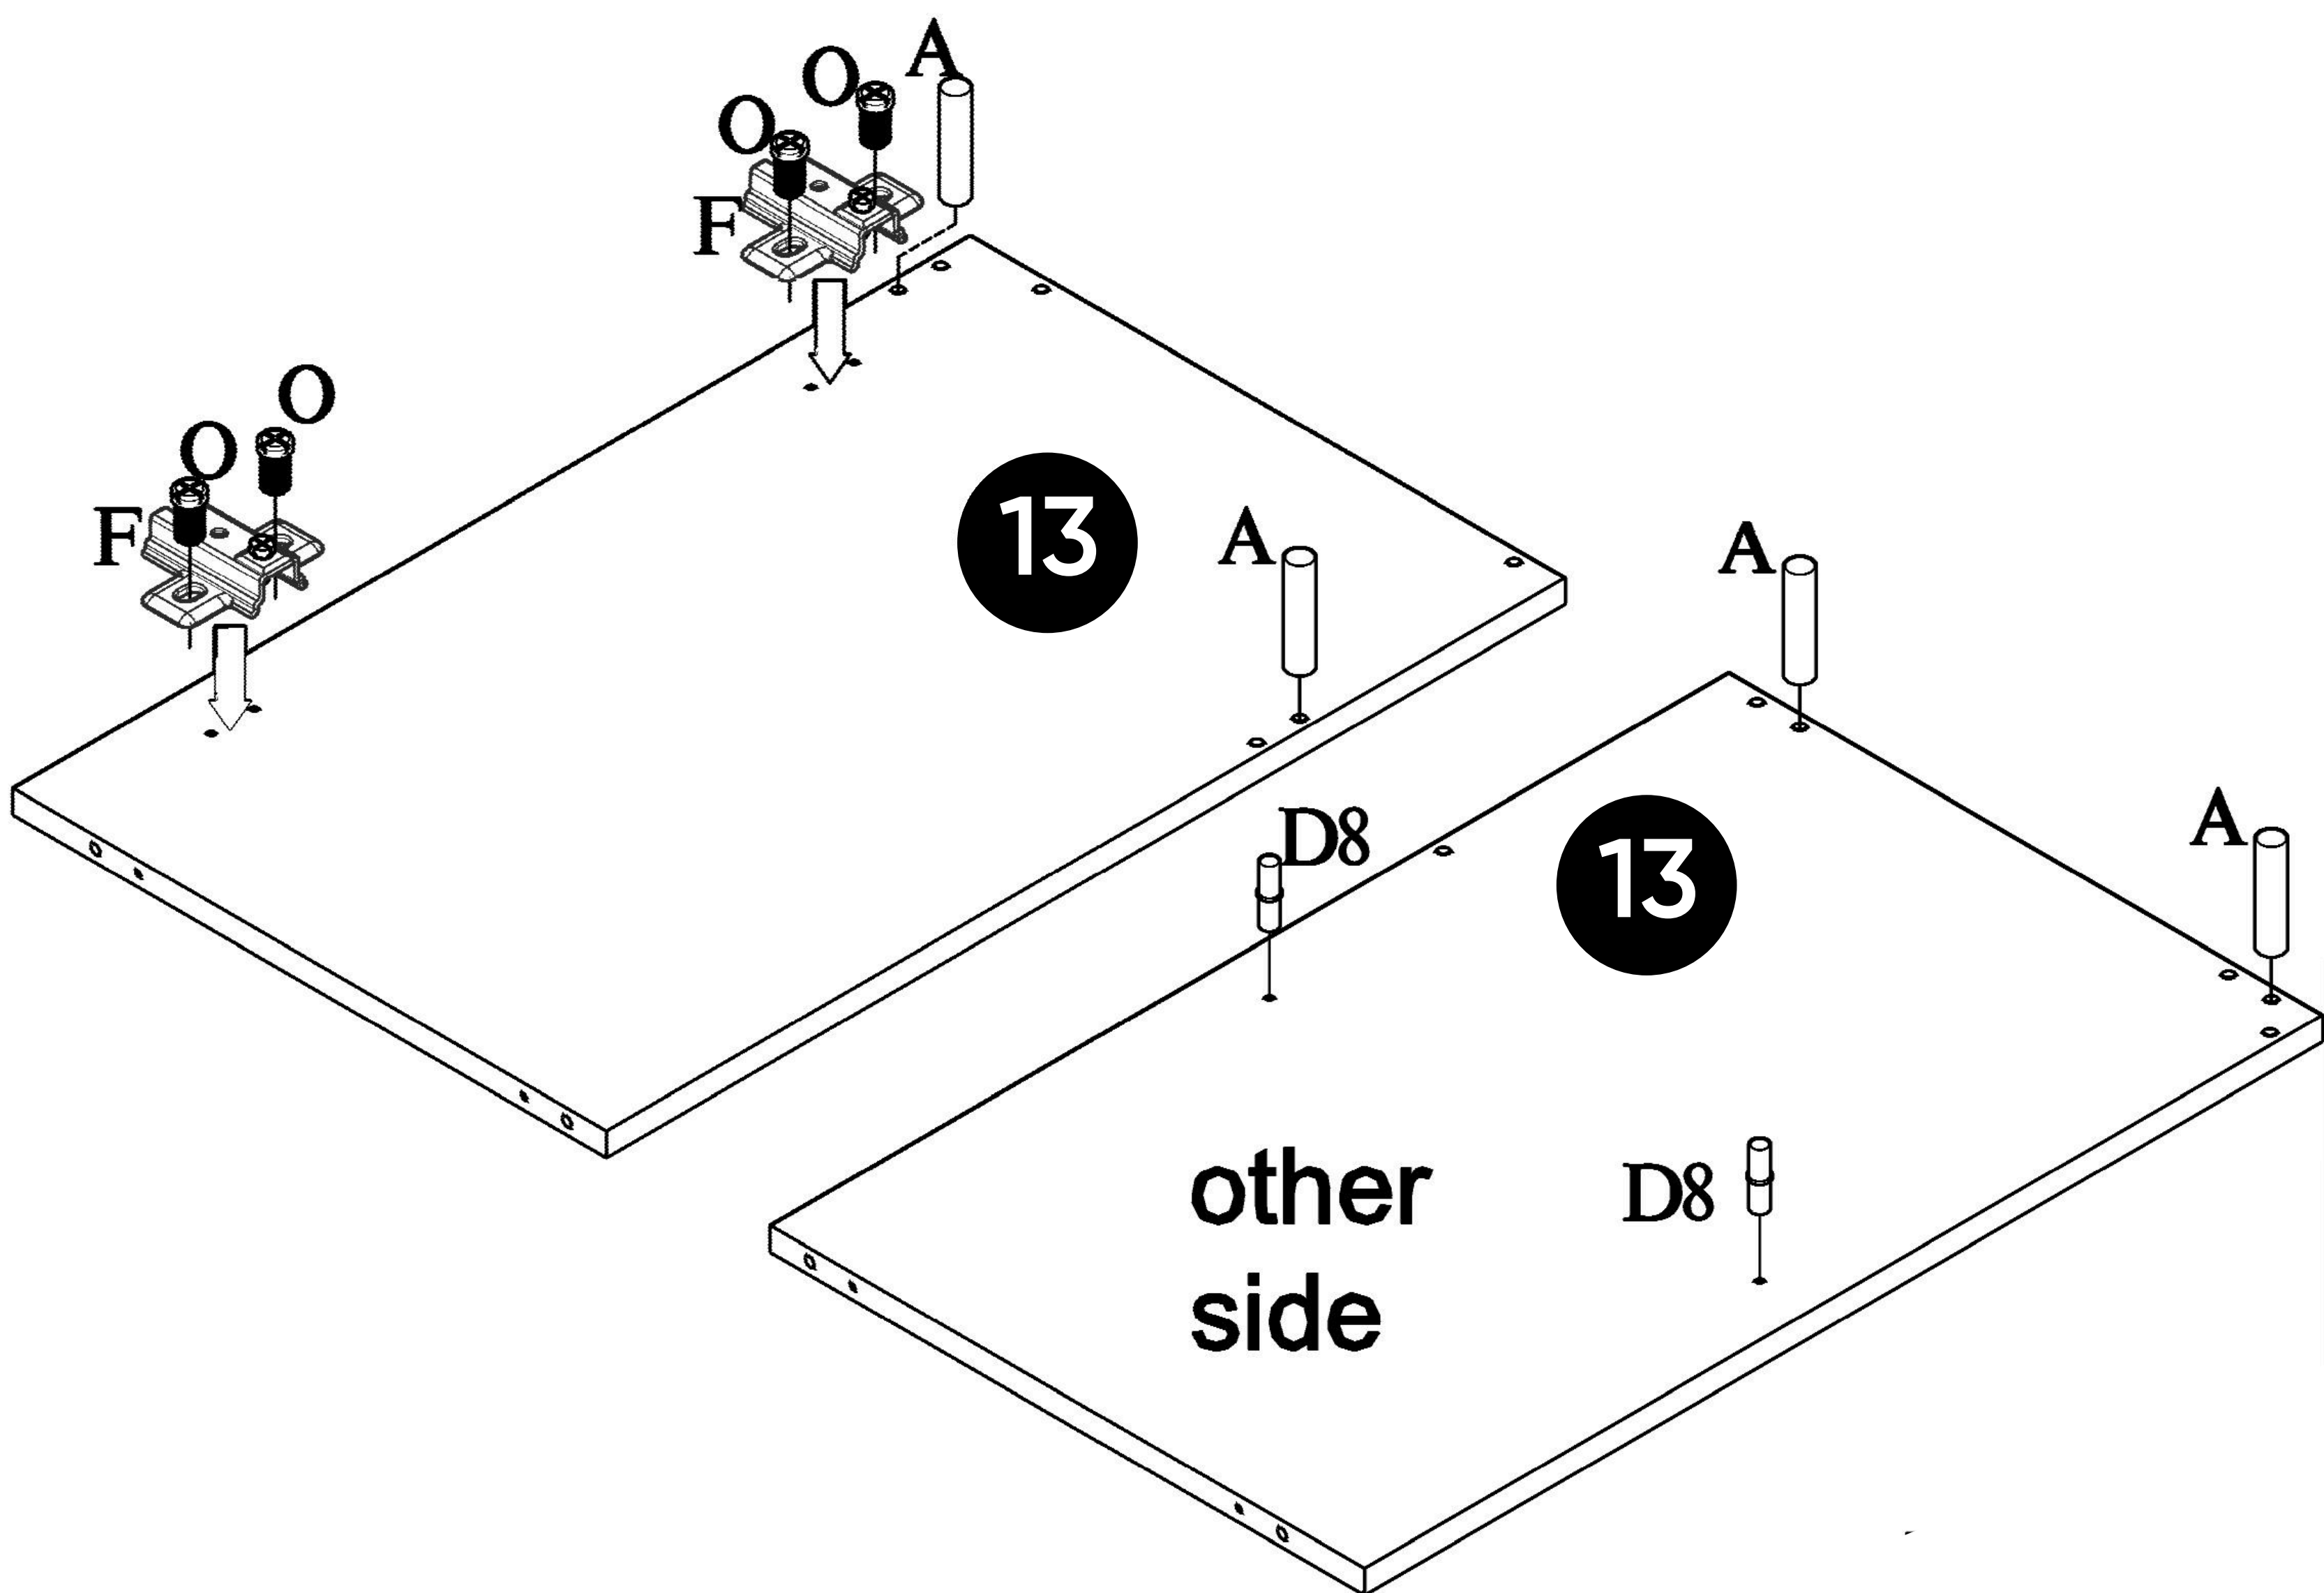



STEP - 3

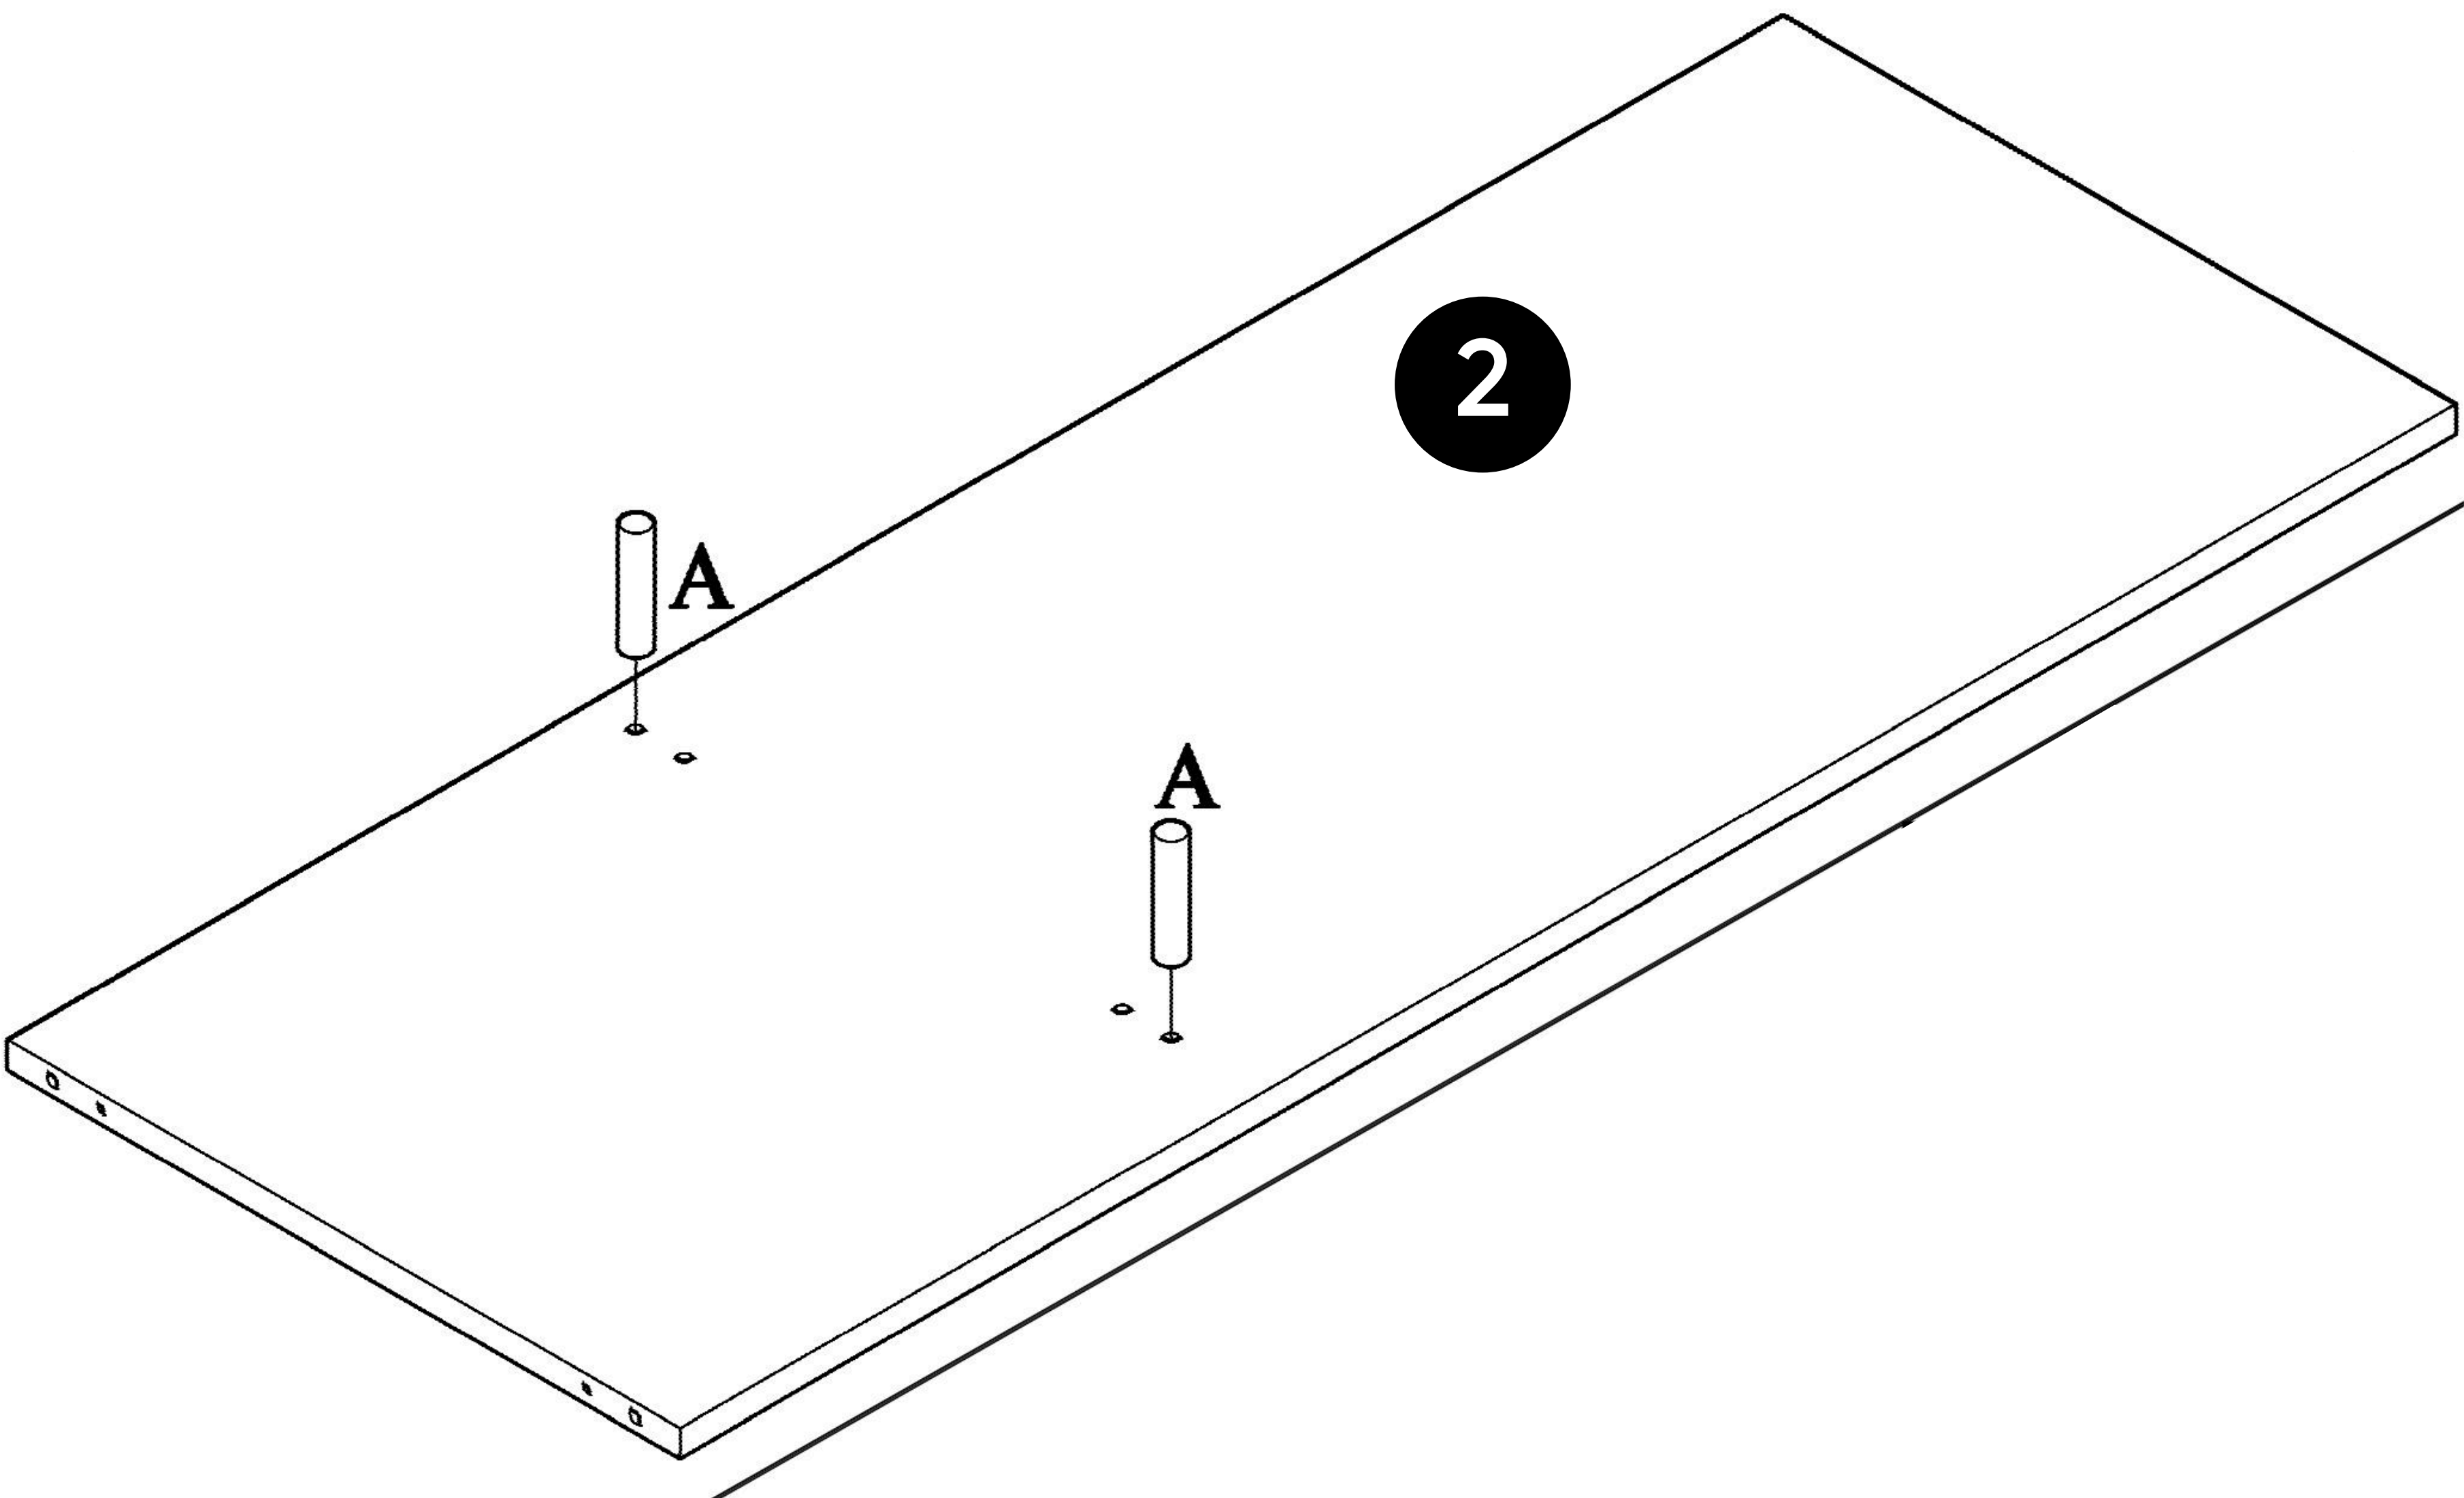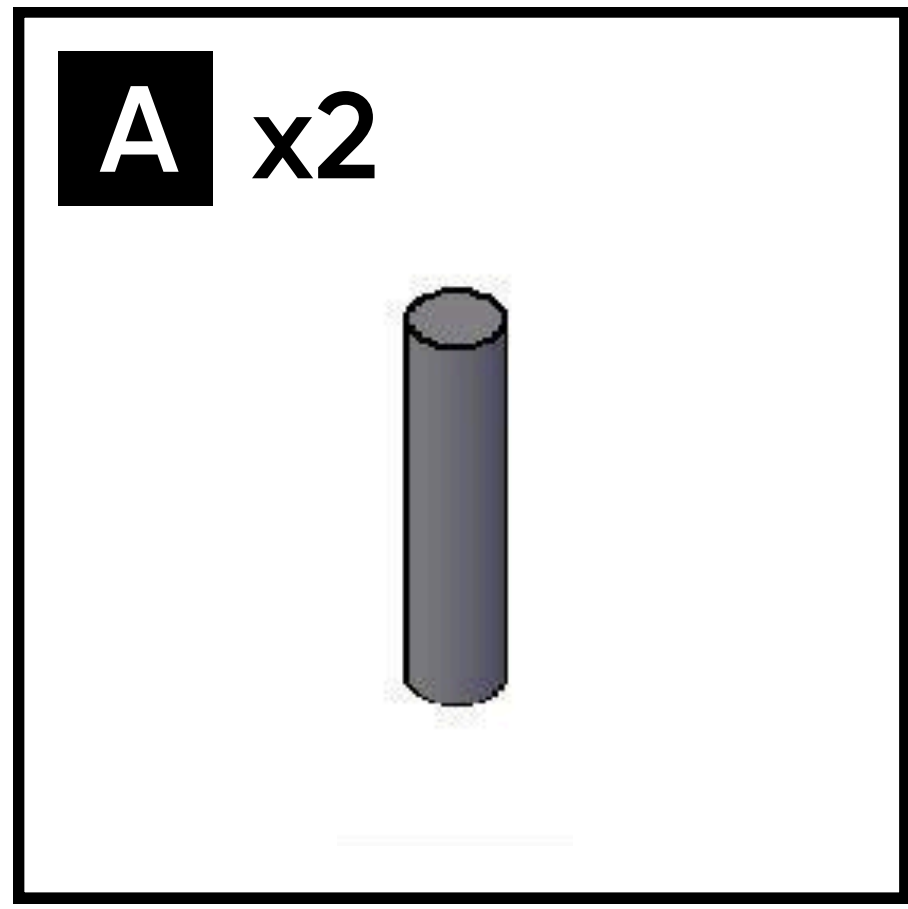



STEP - 4

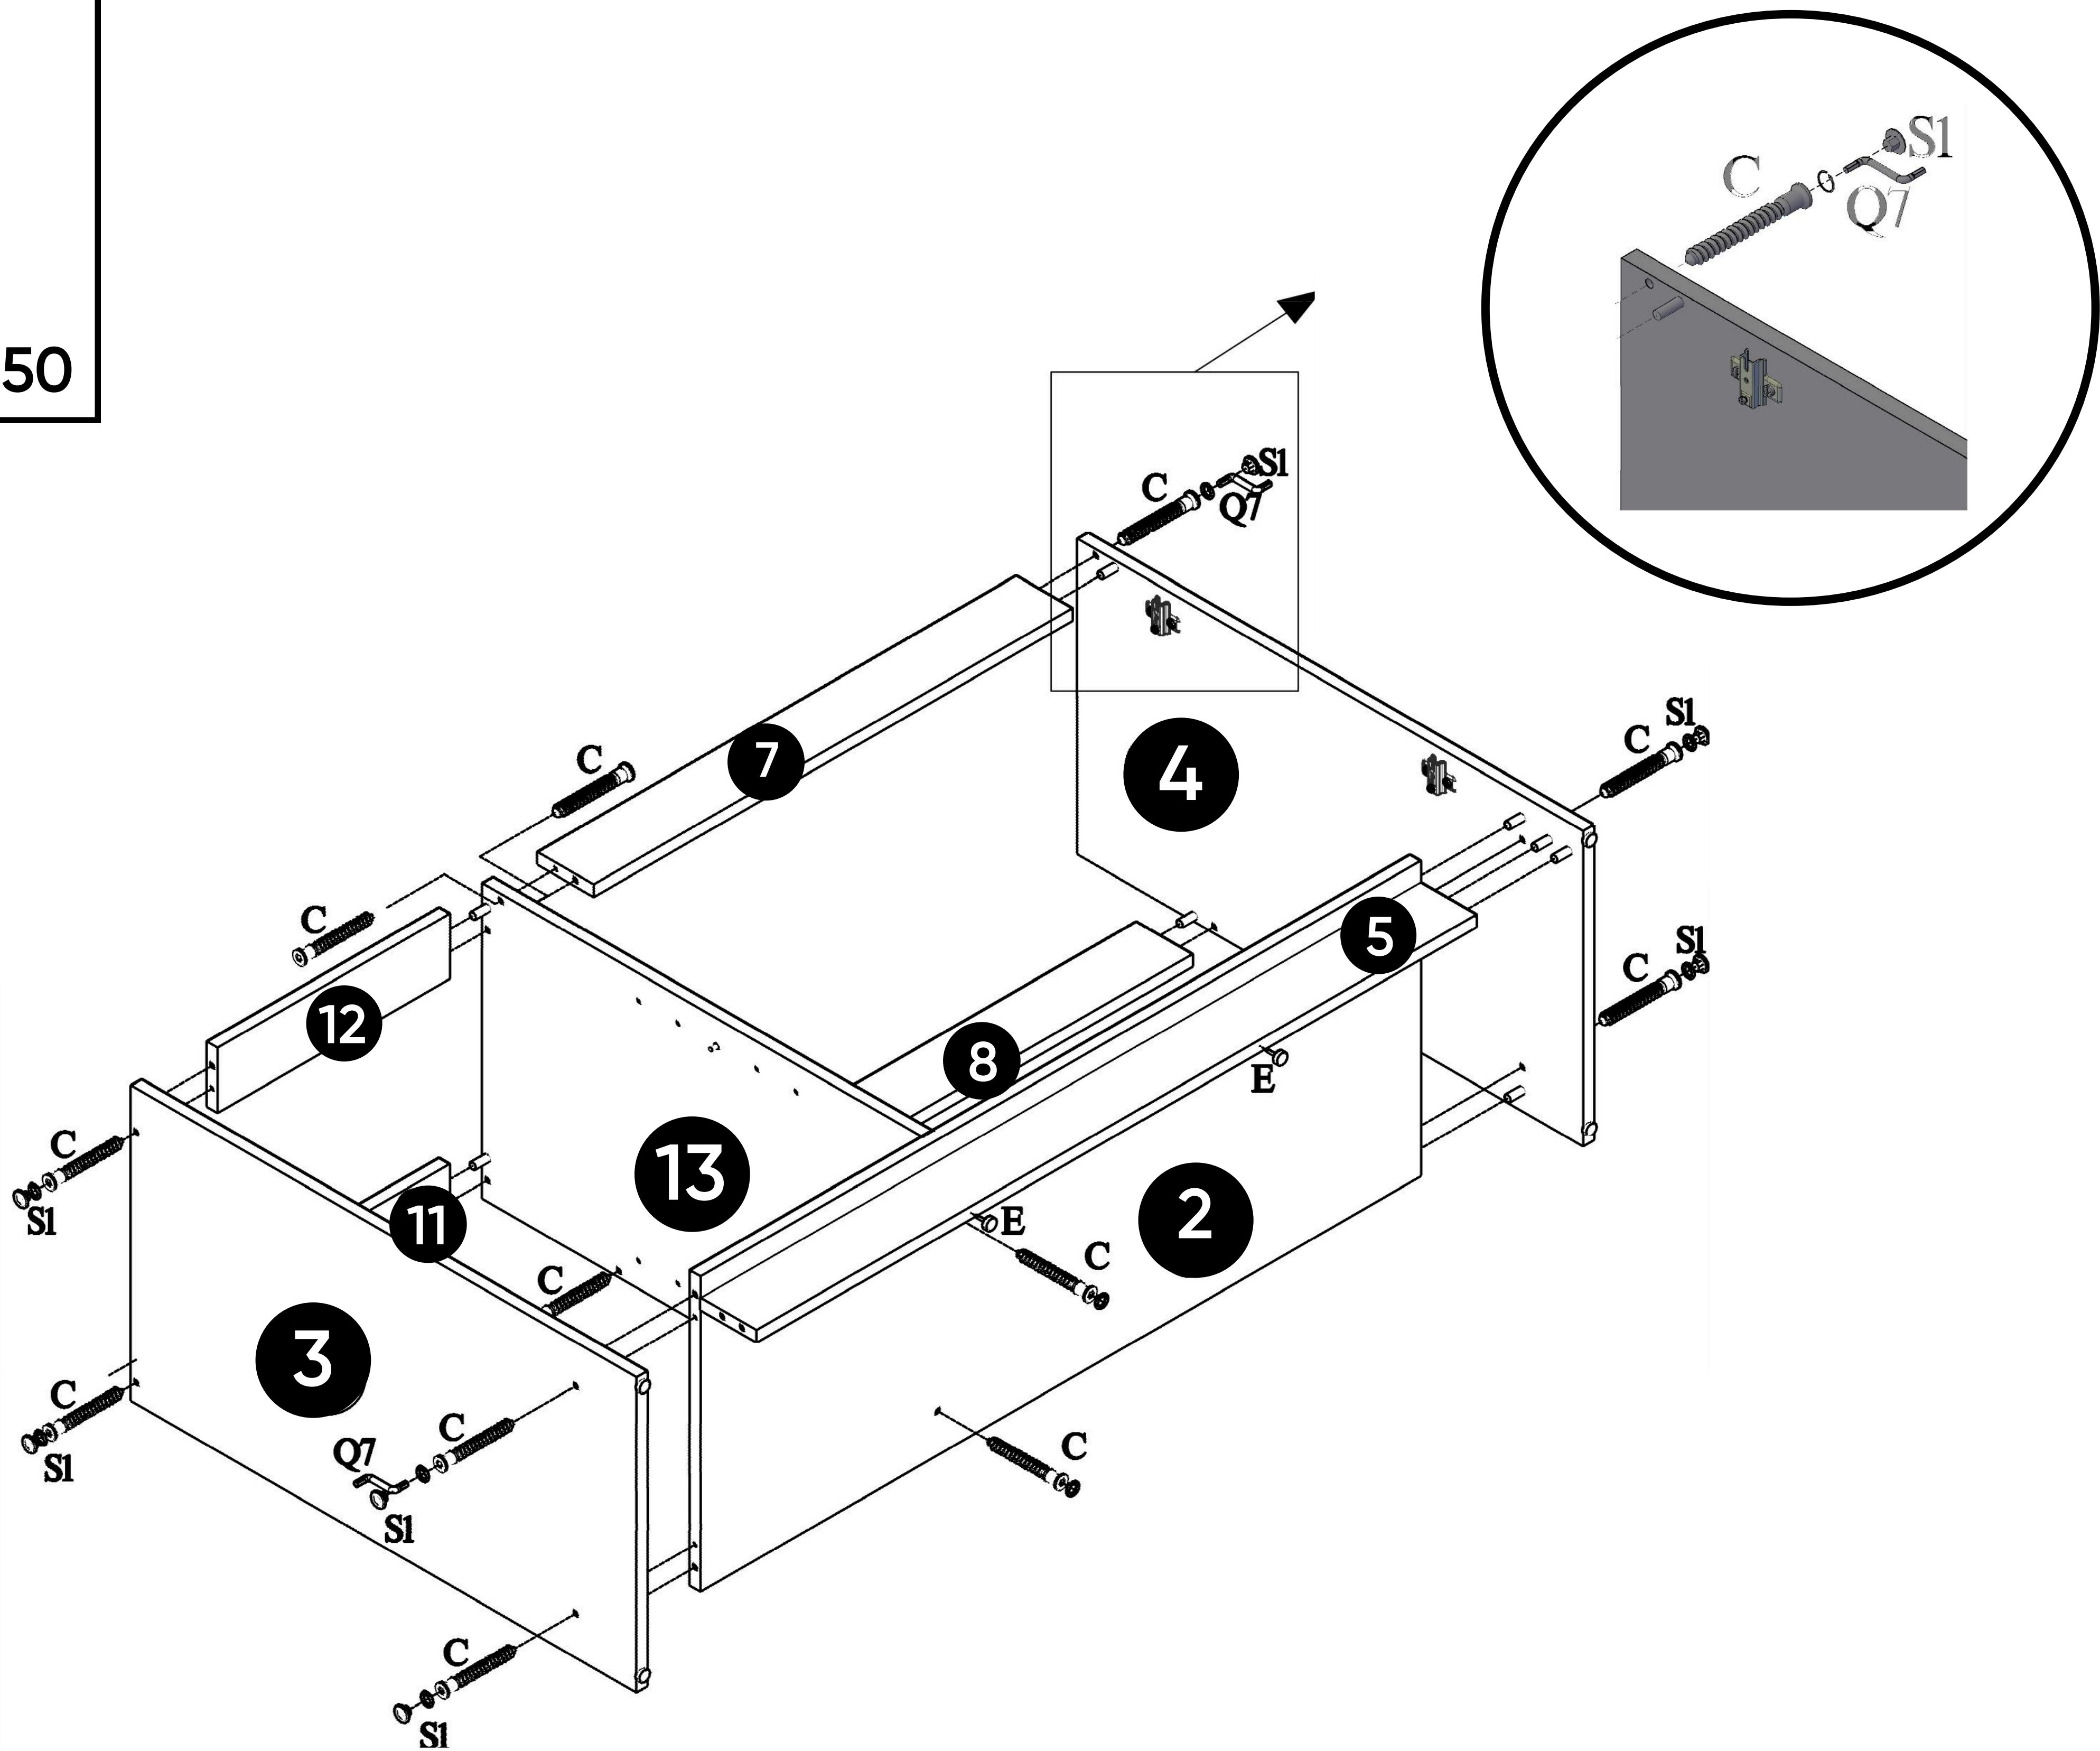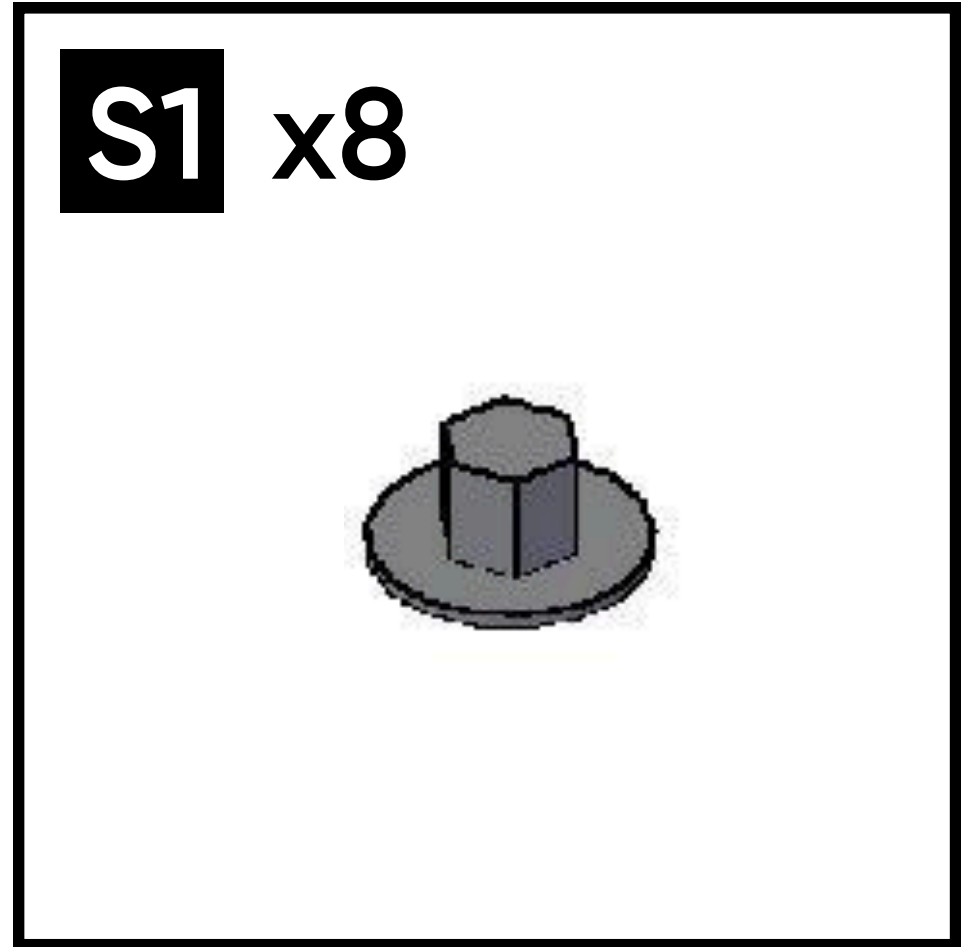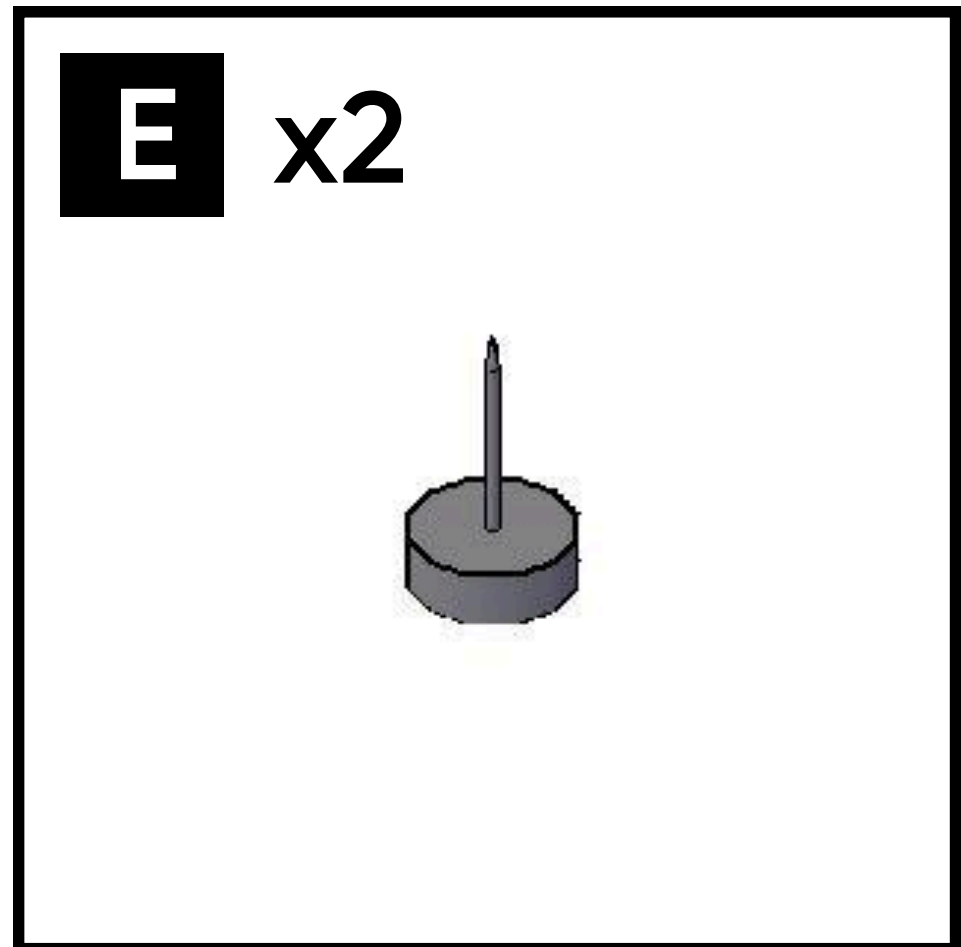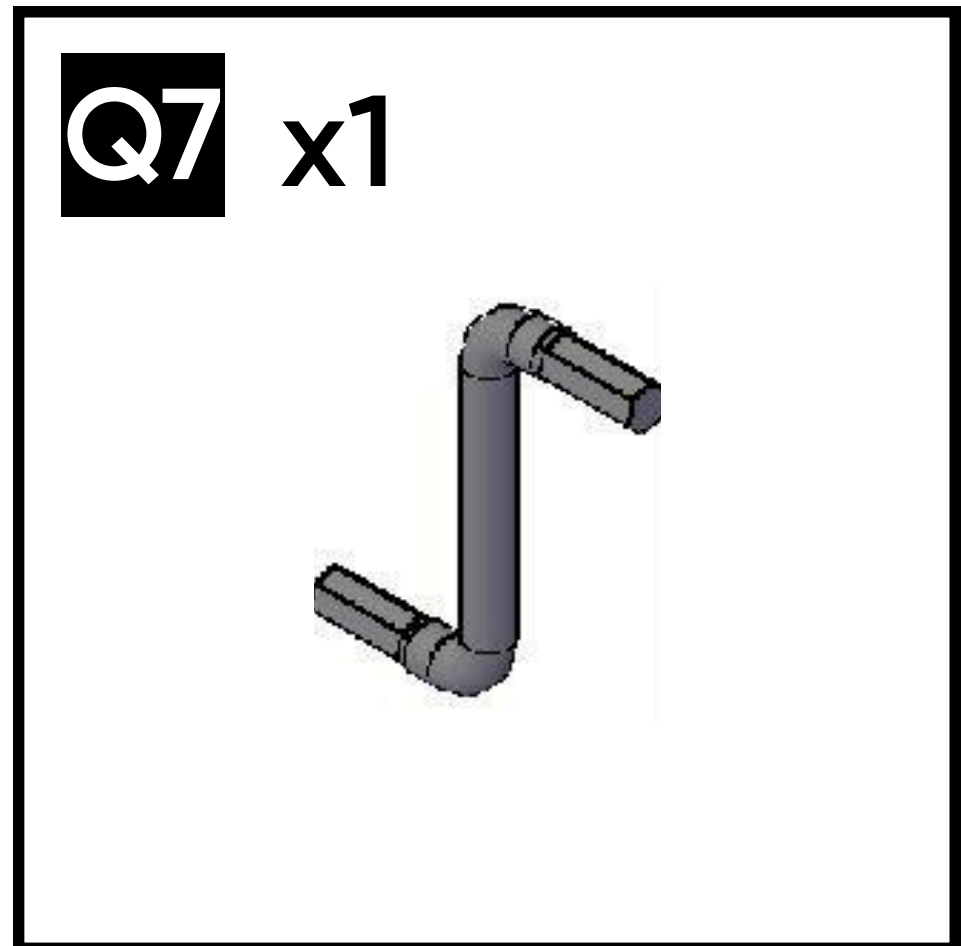



STEP - 5

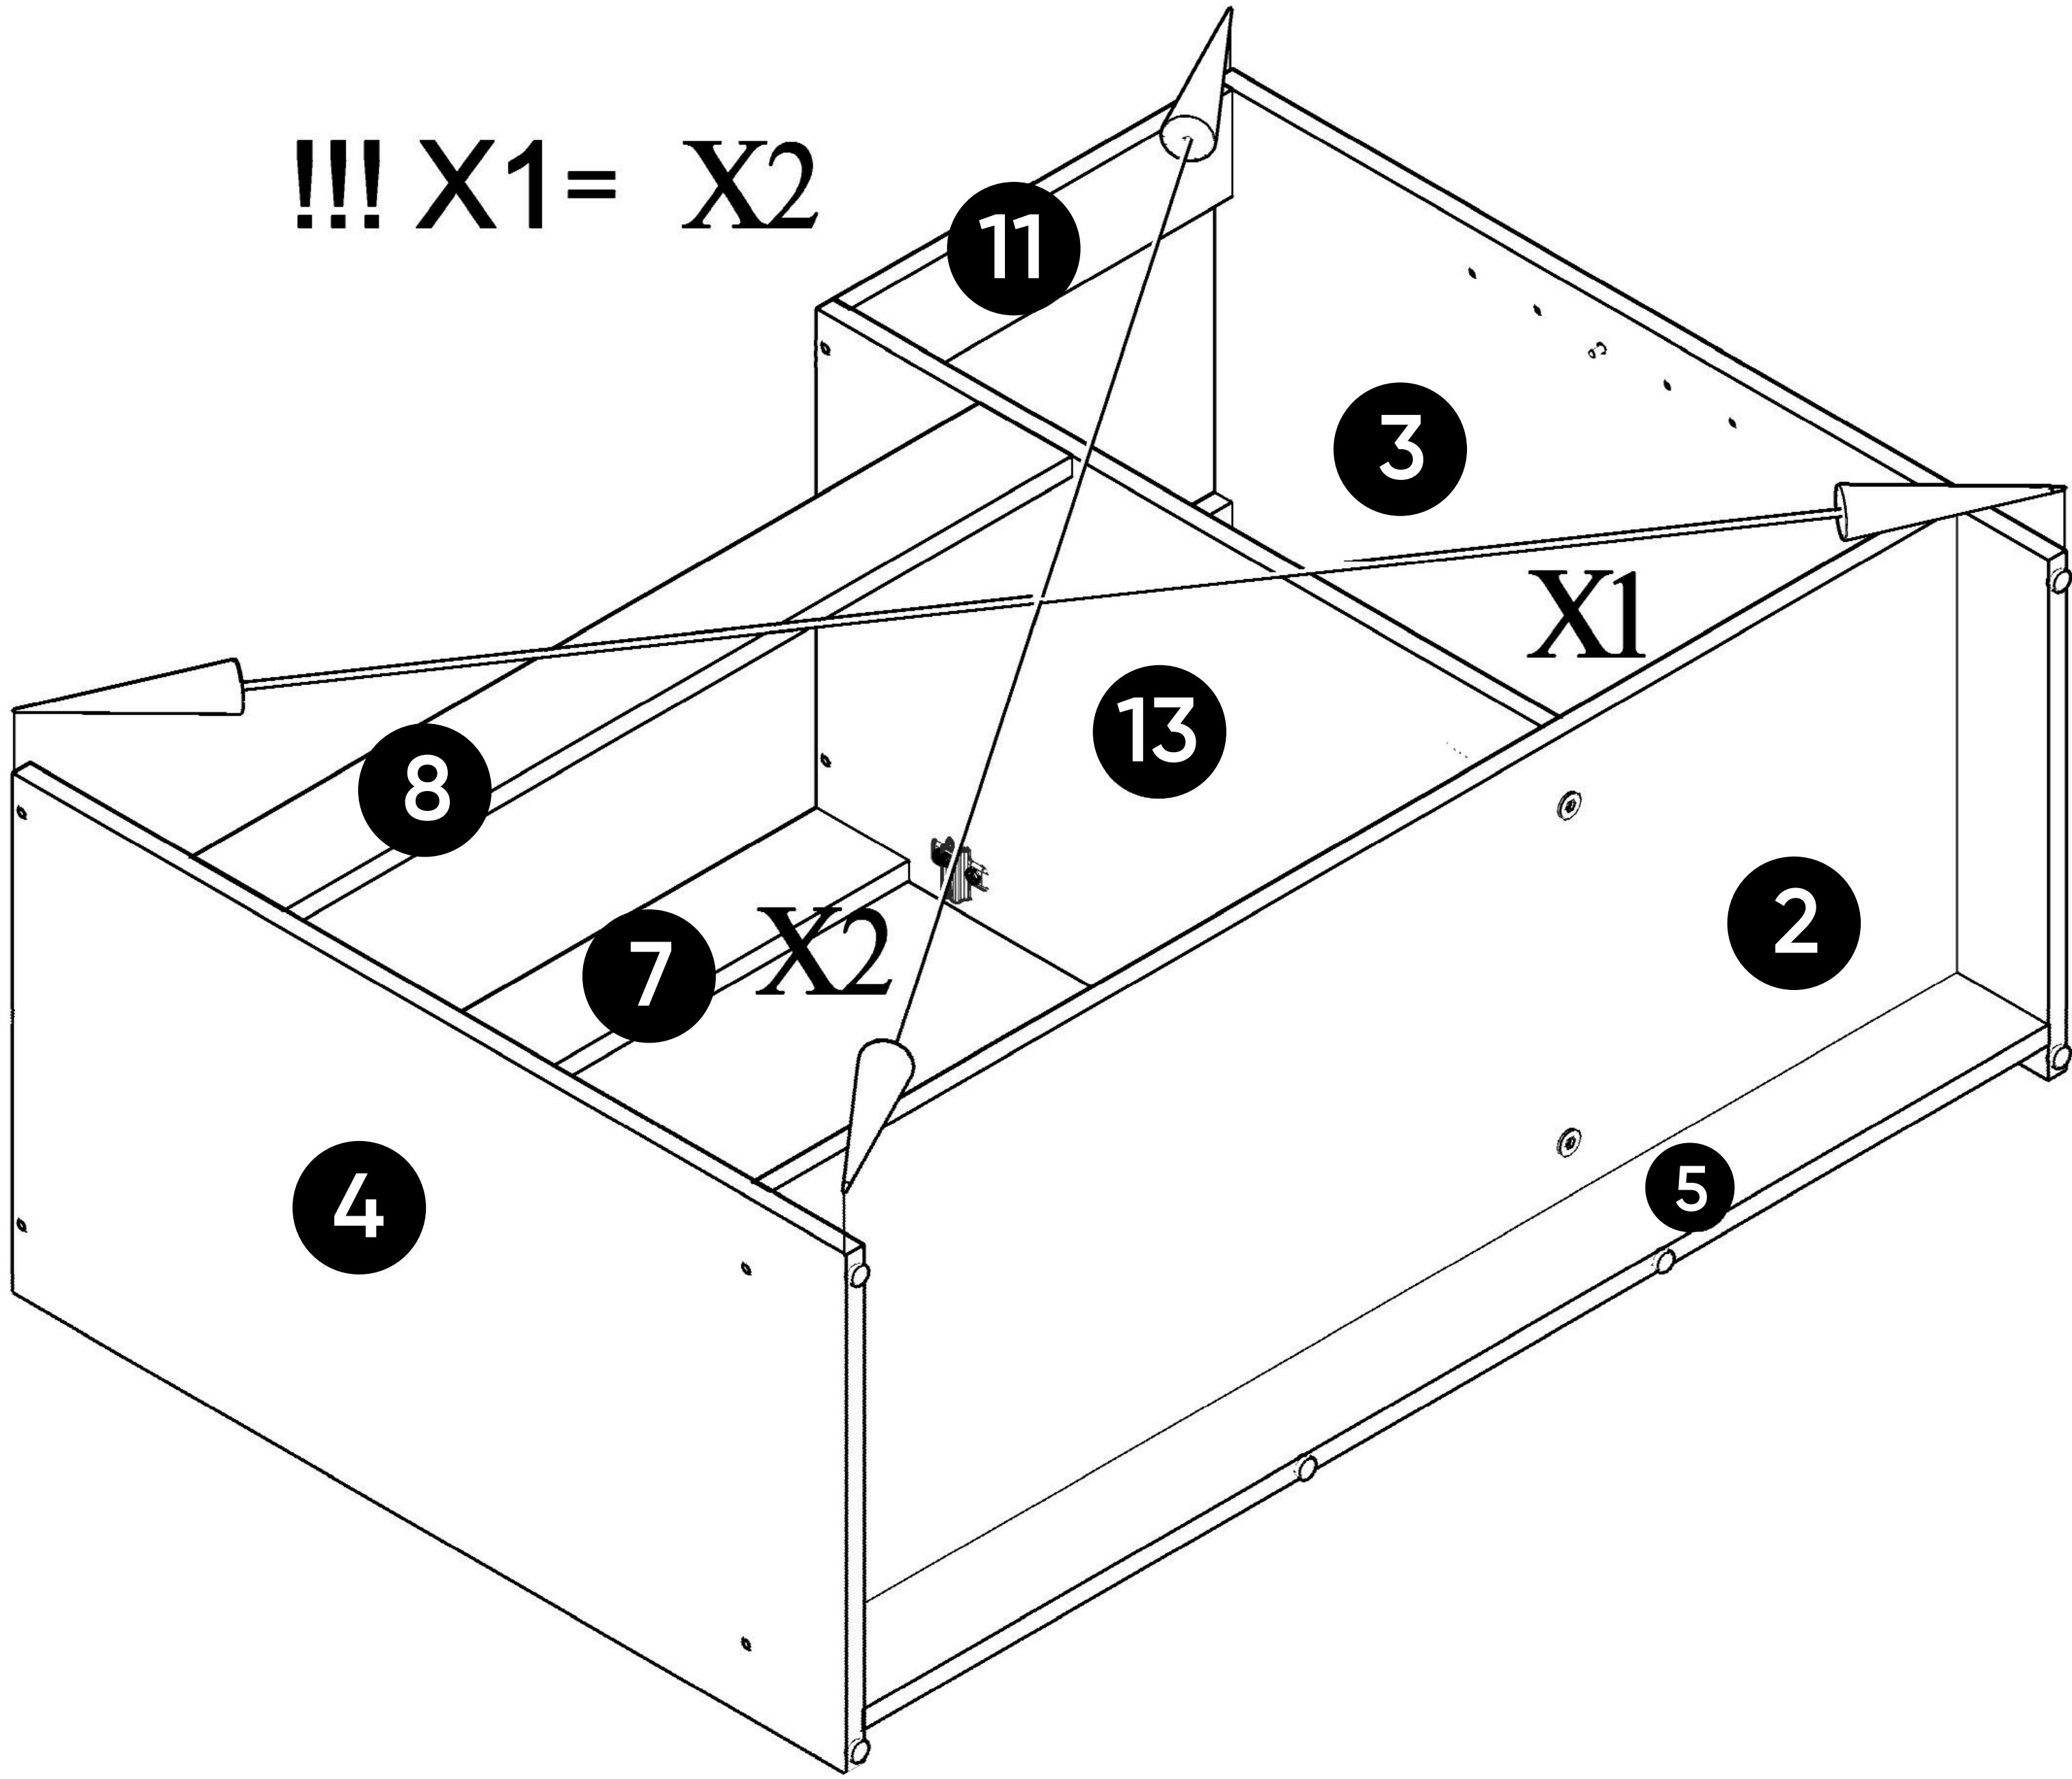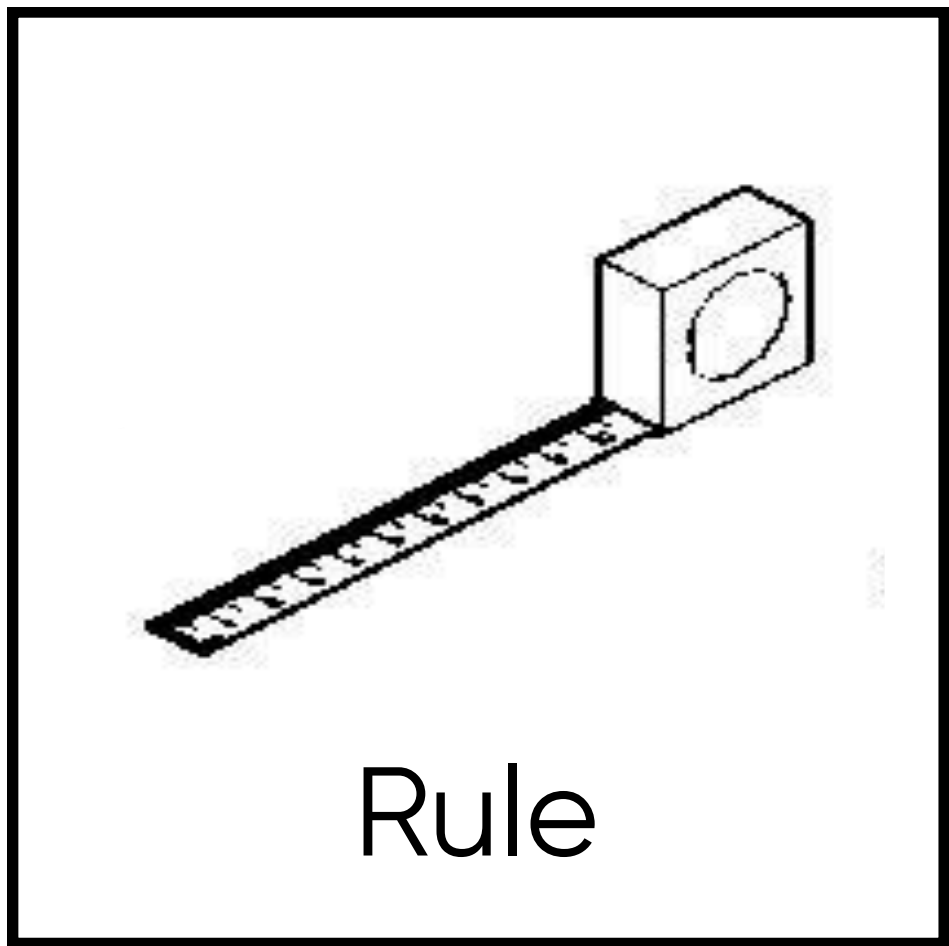



STEP - 6

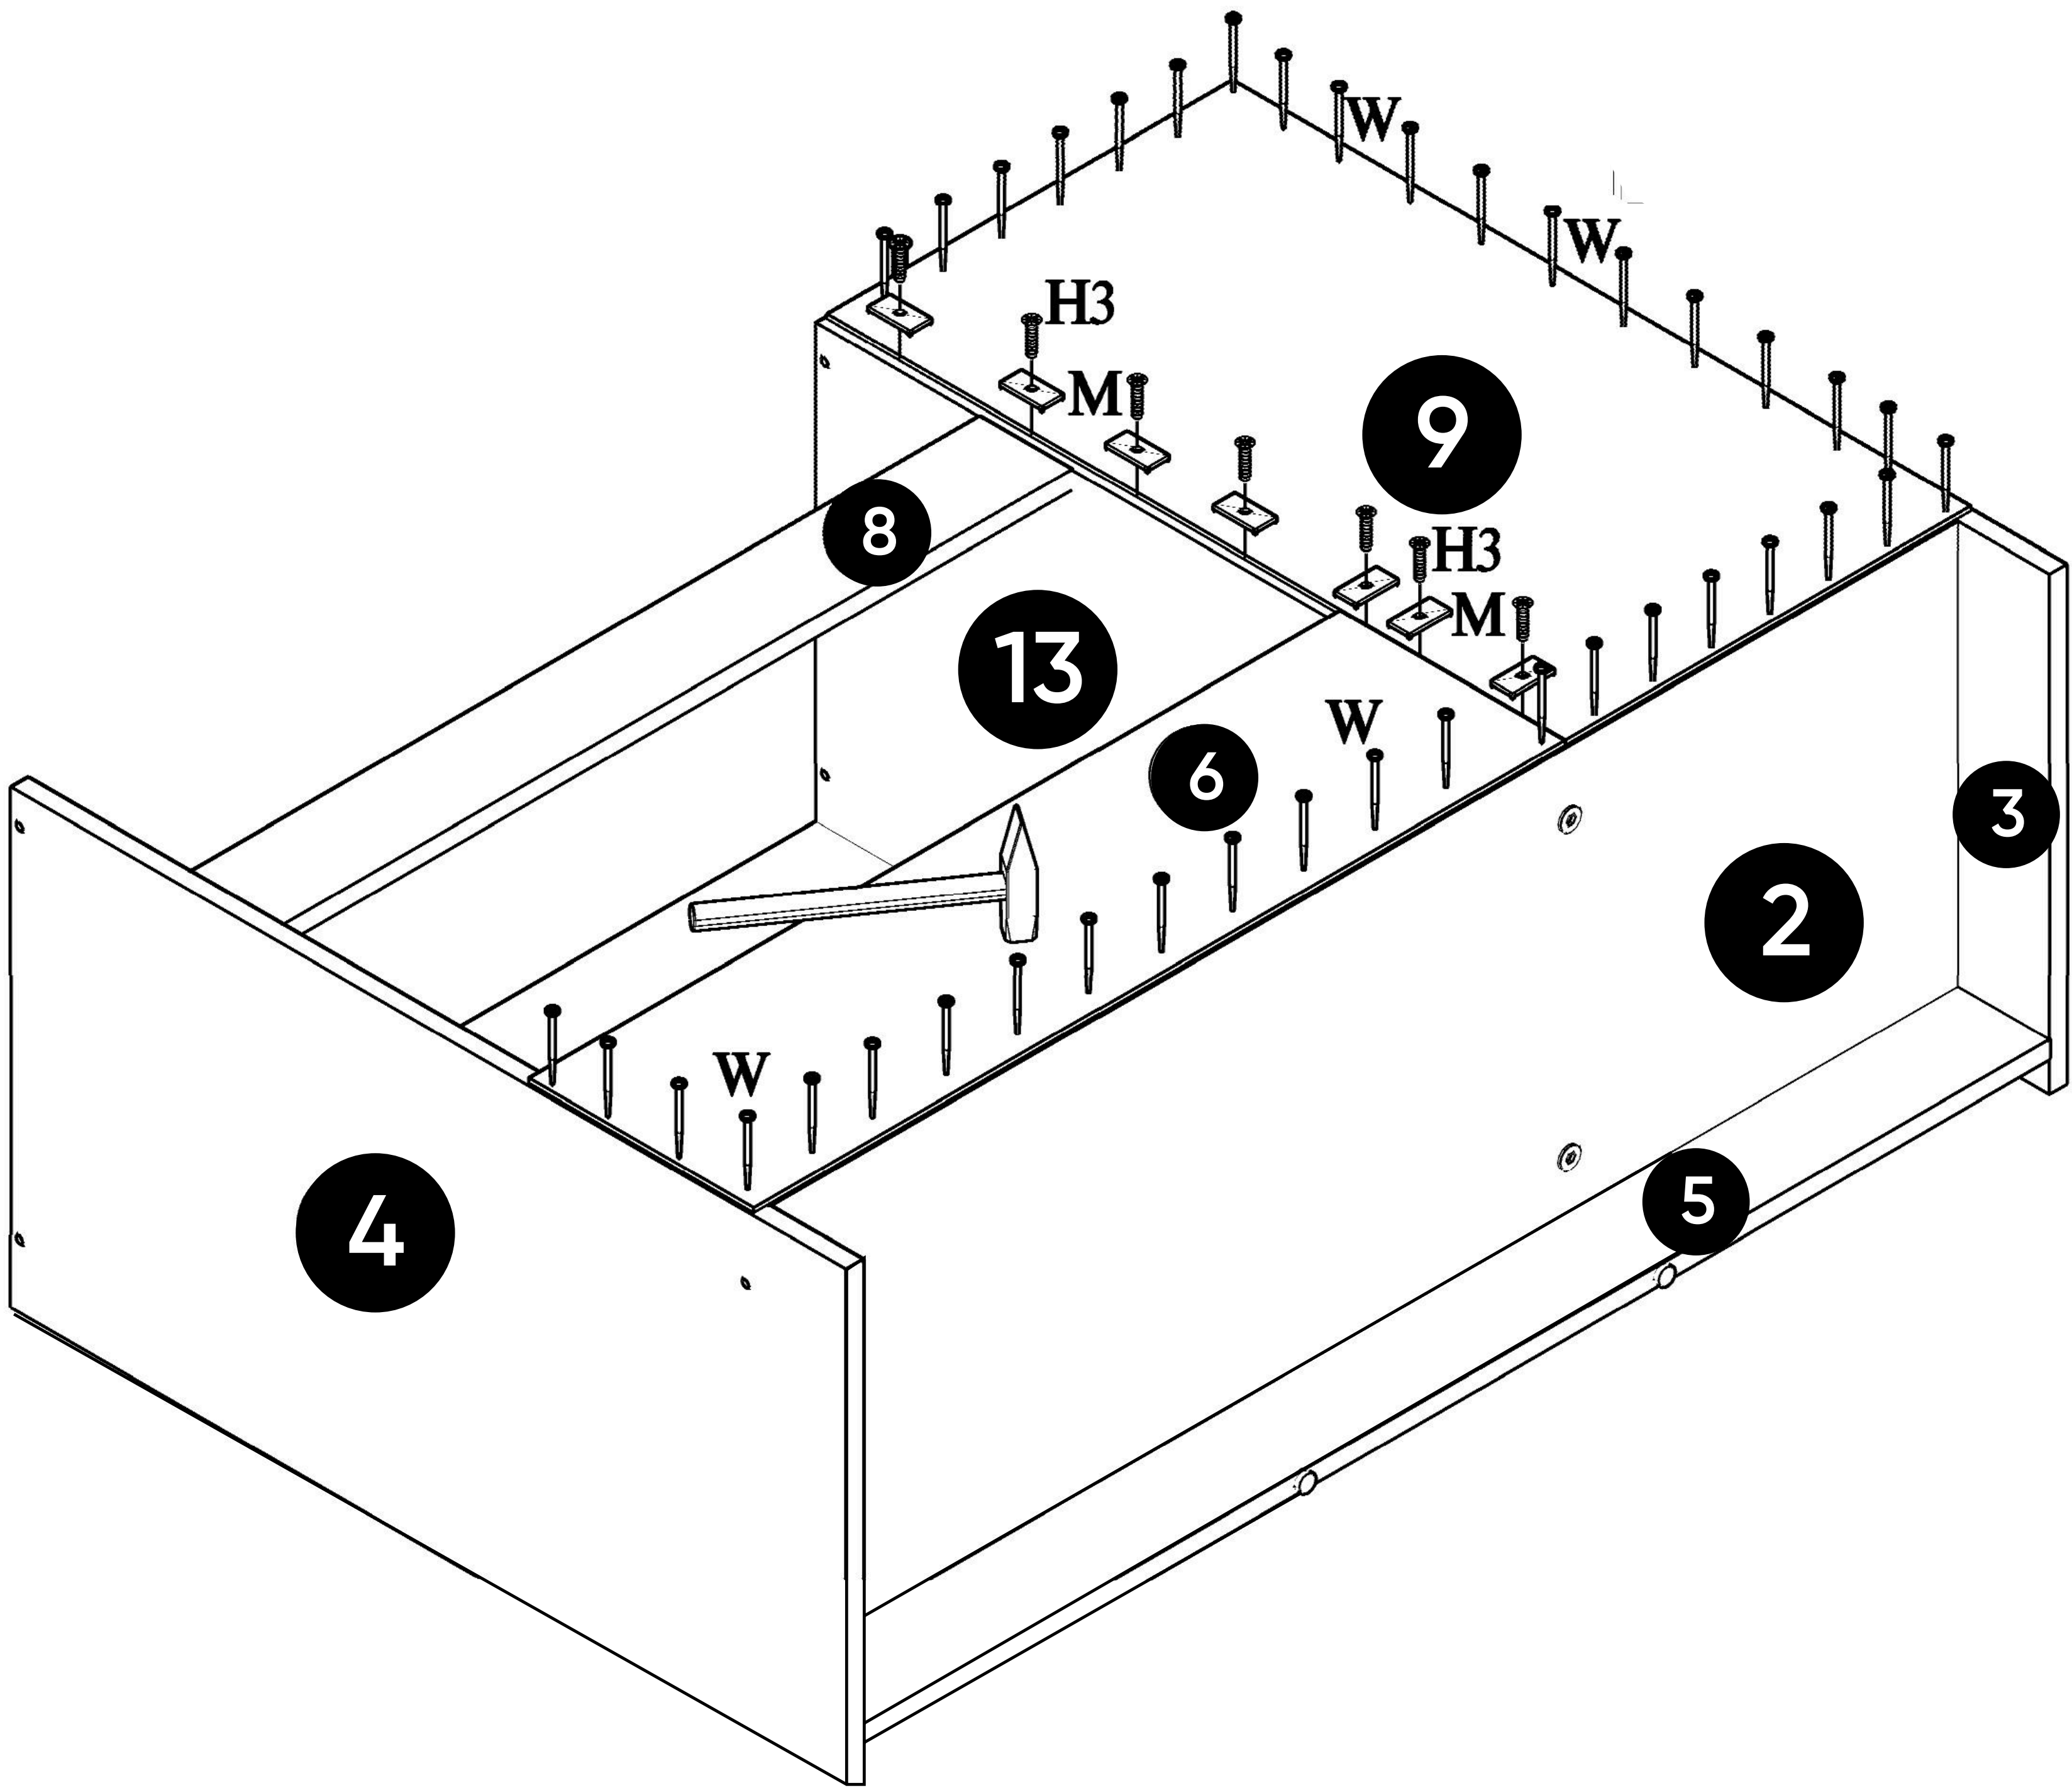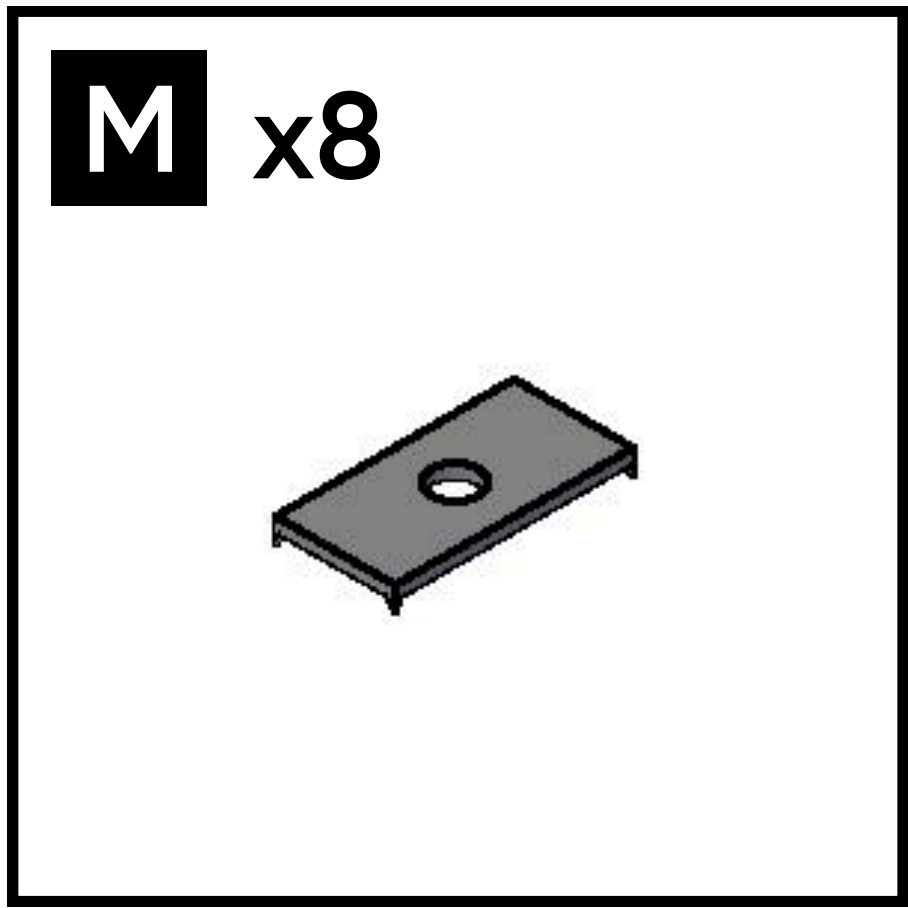



STEP - 7

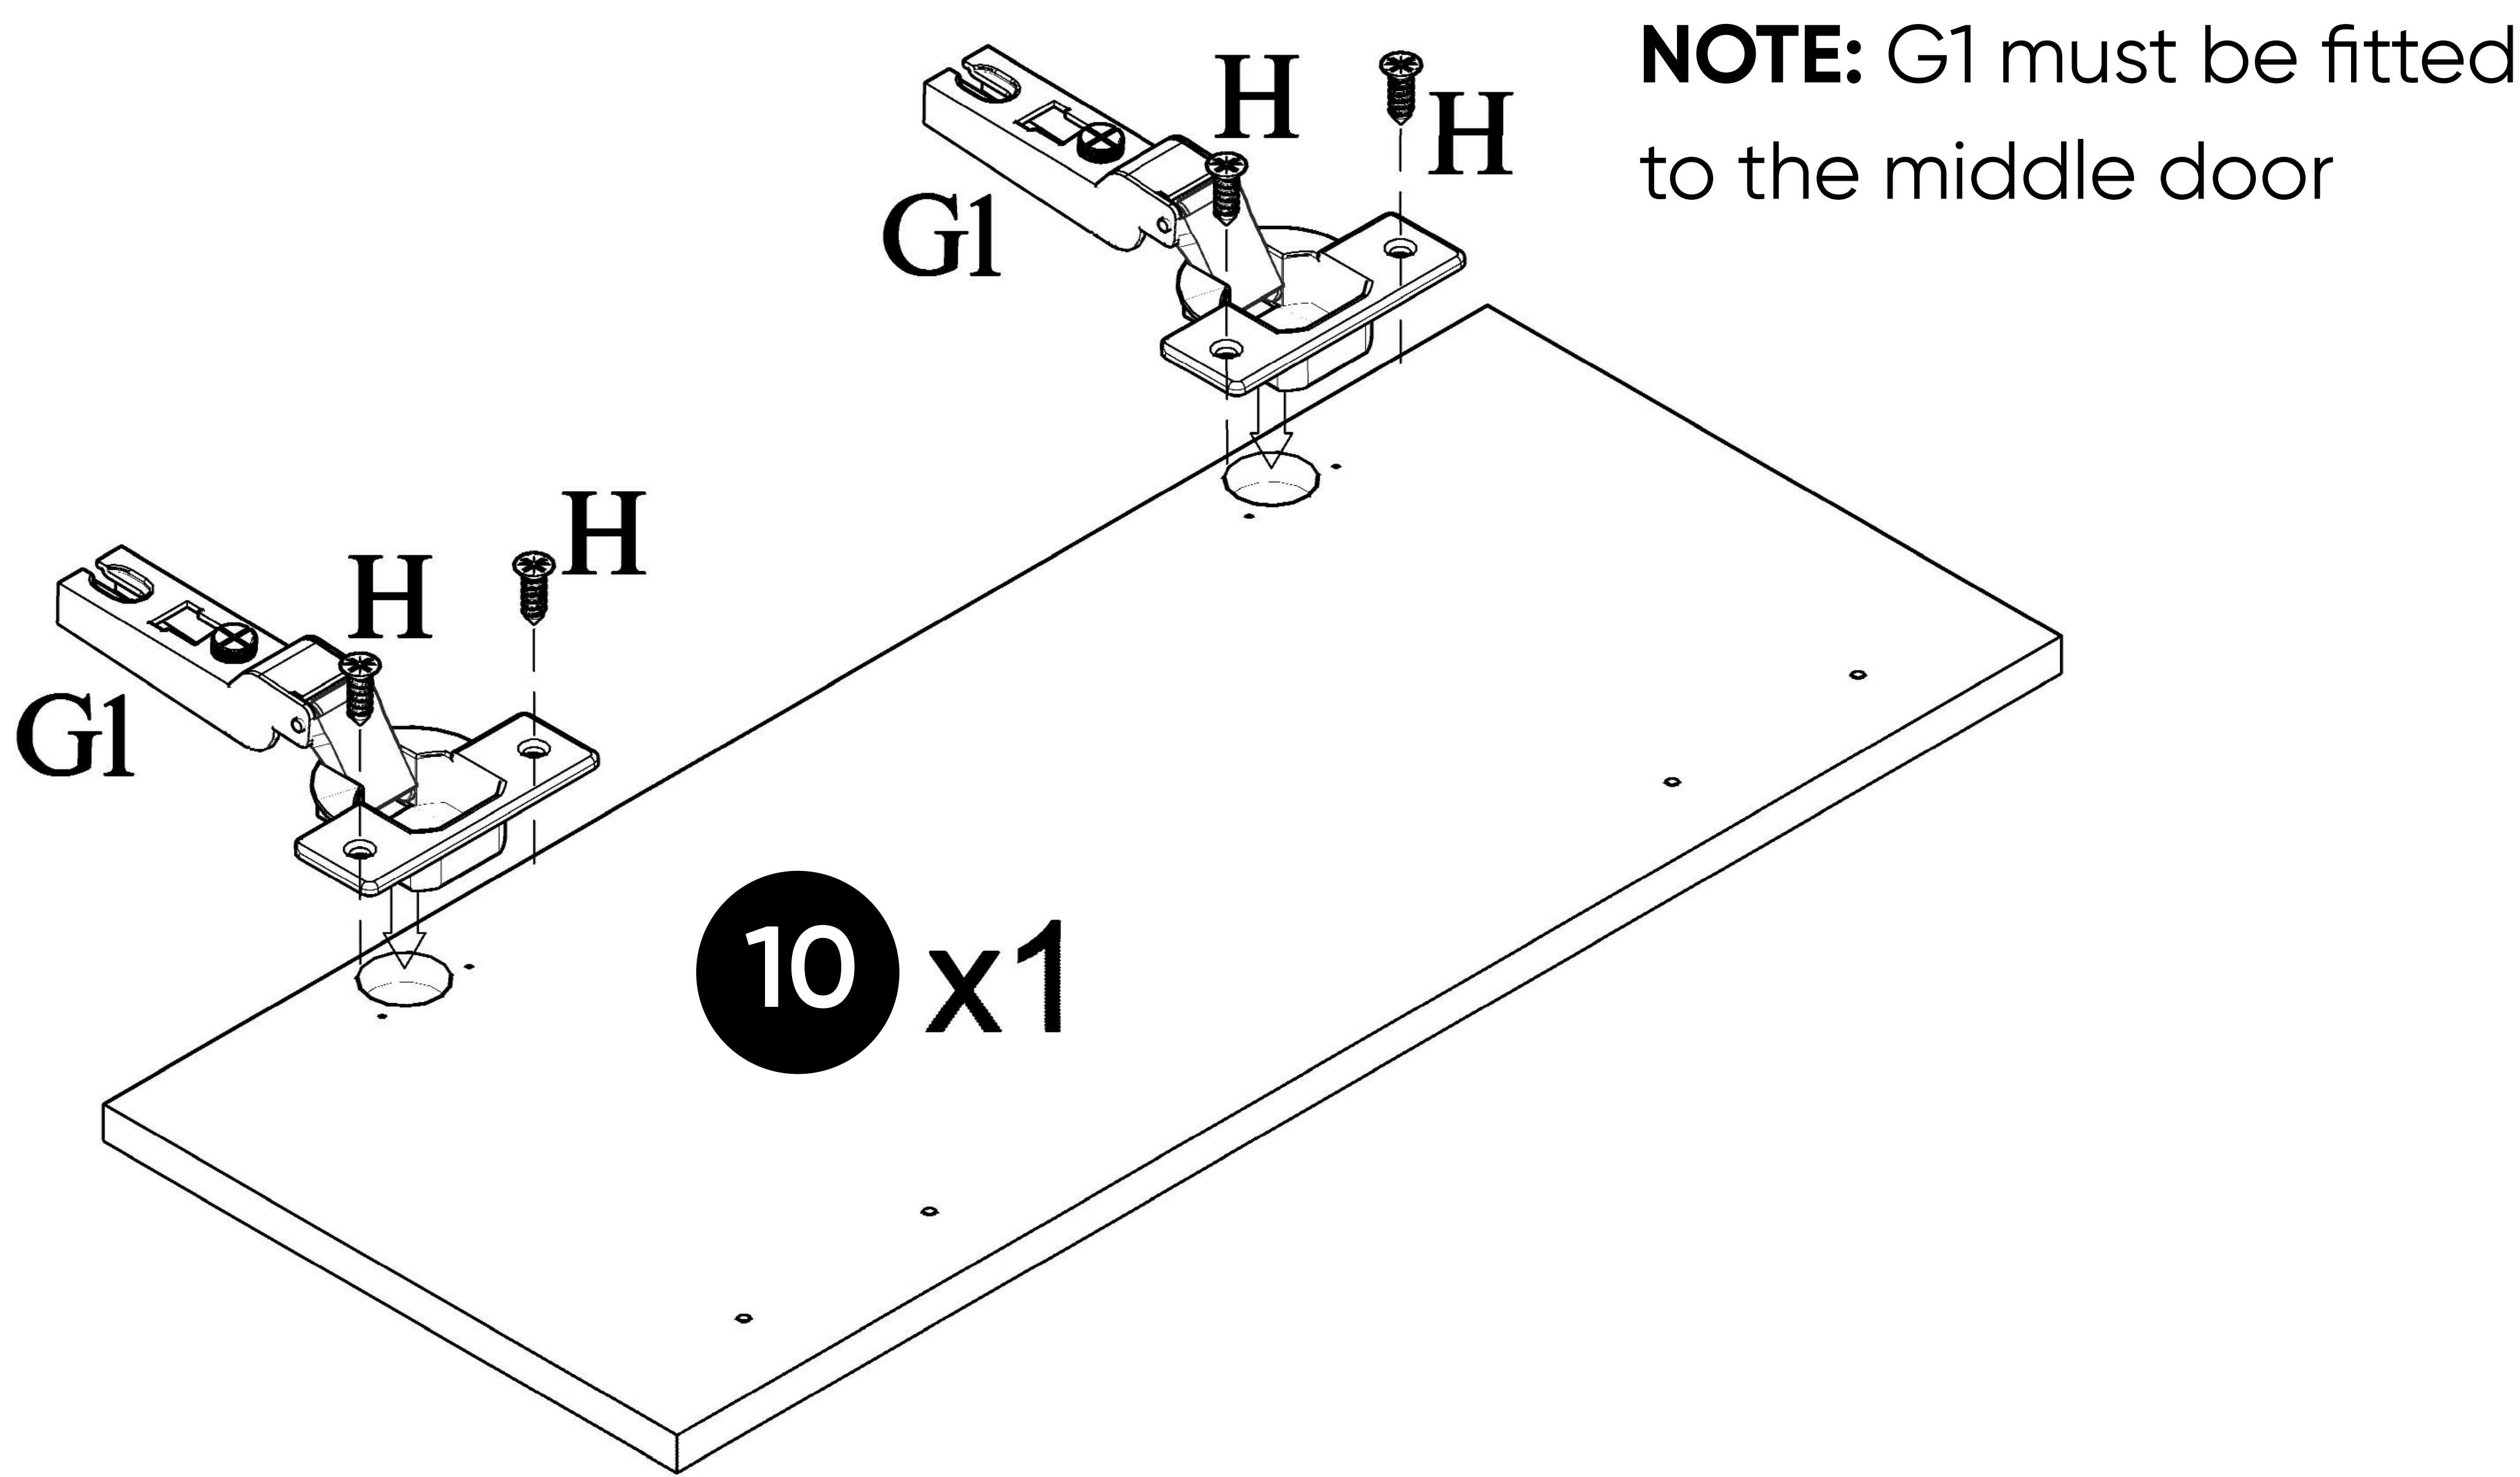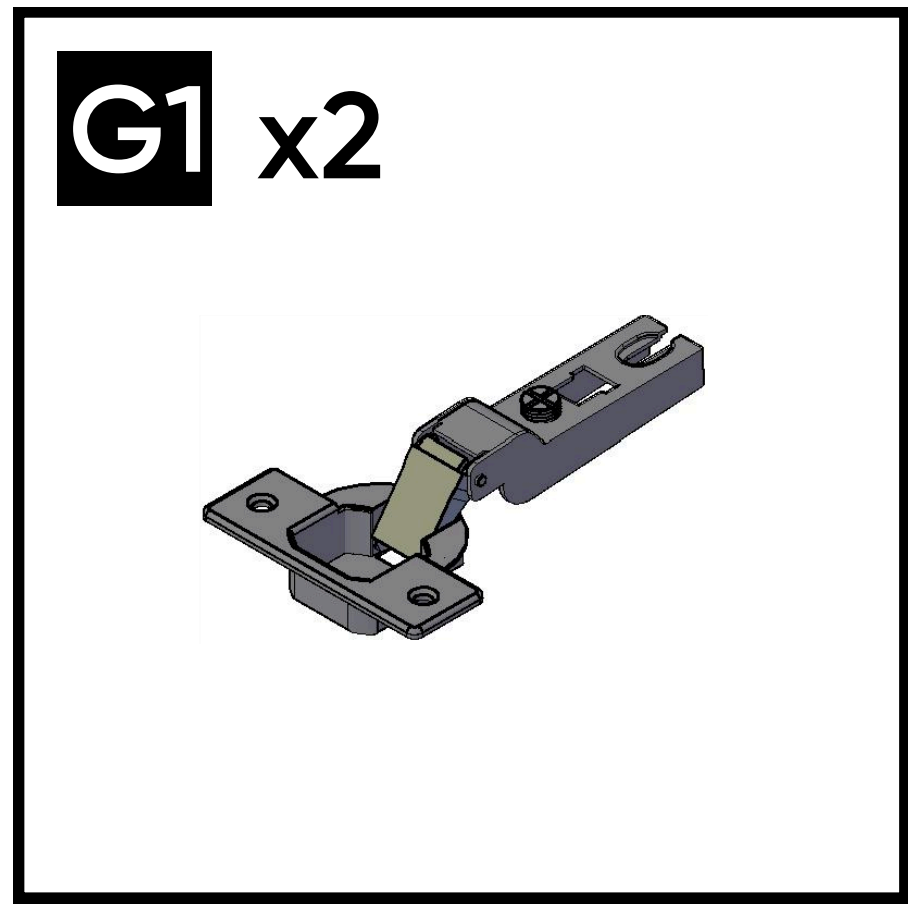

STEP - 8

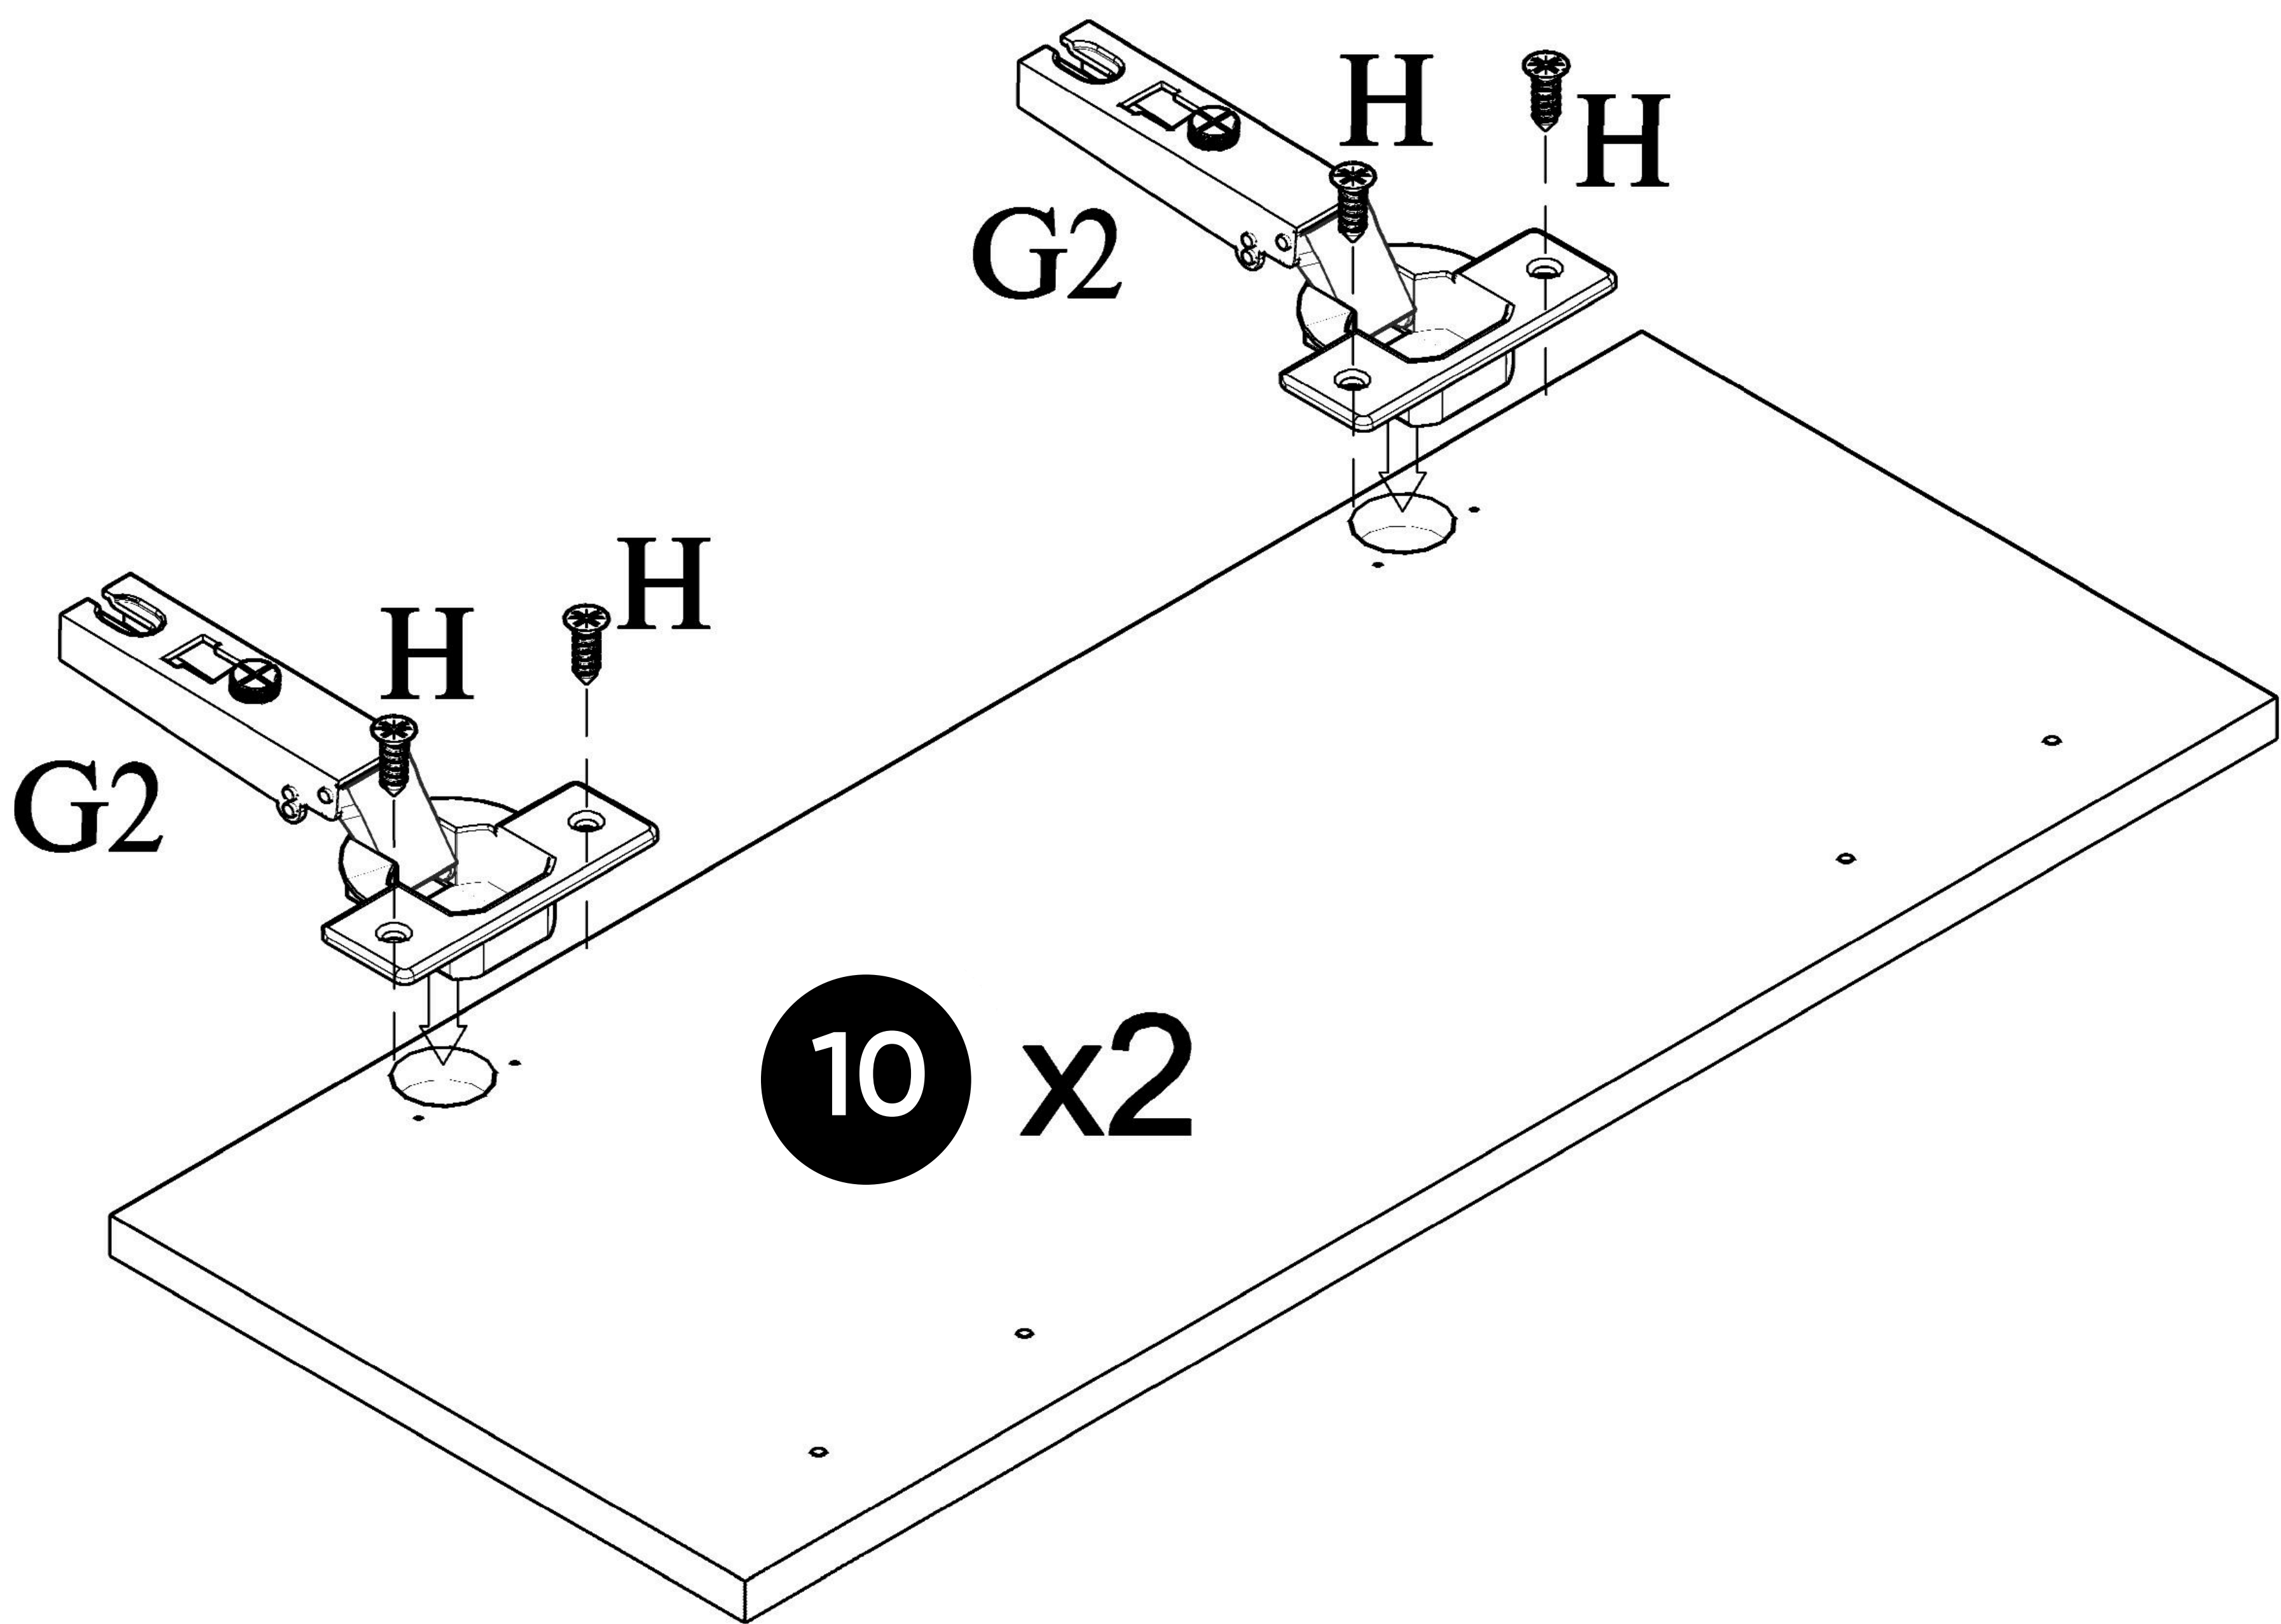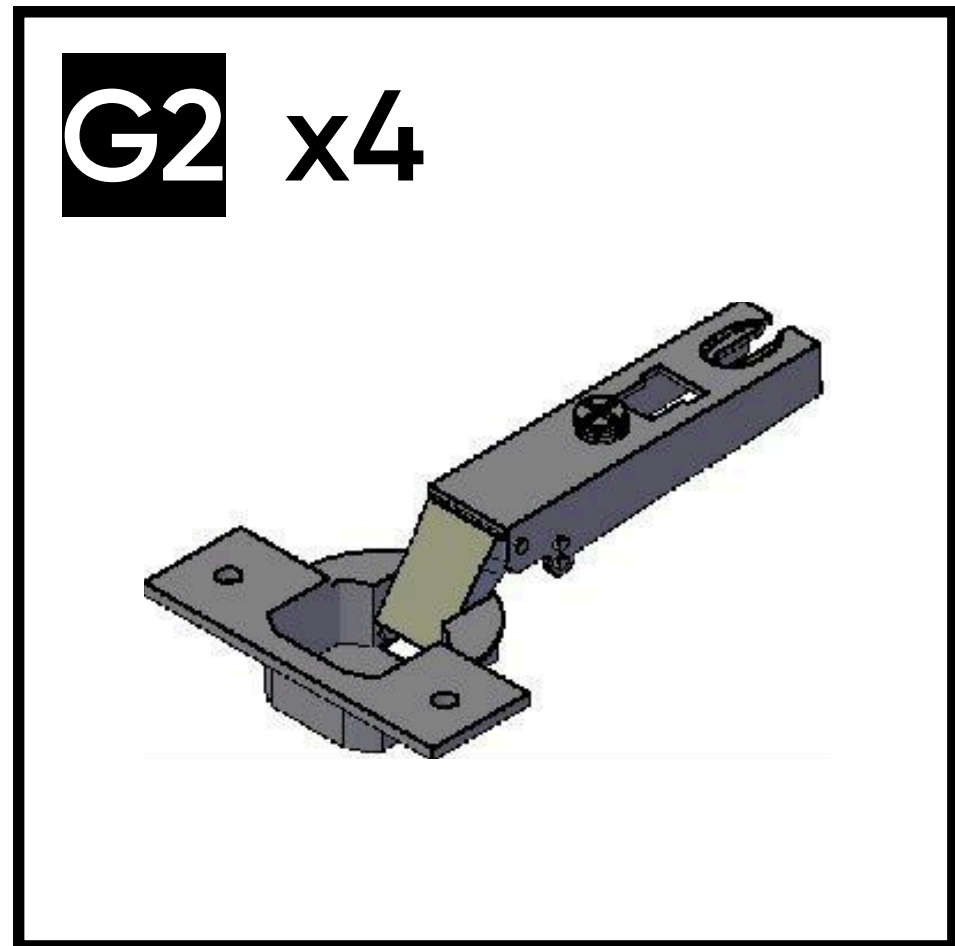

STEP - 9

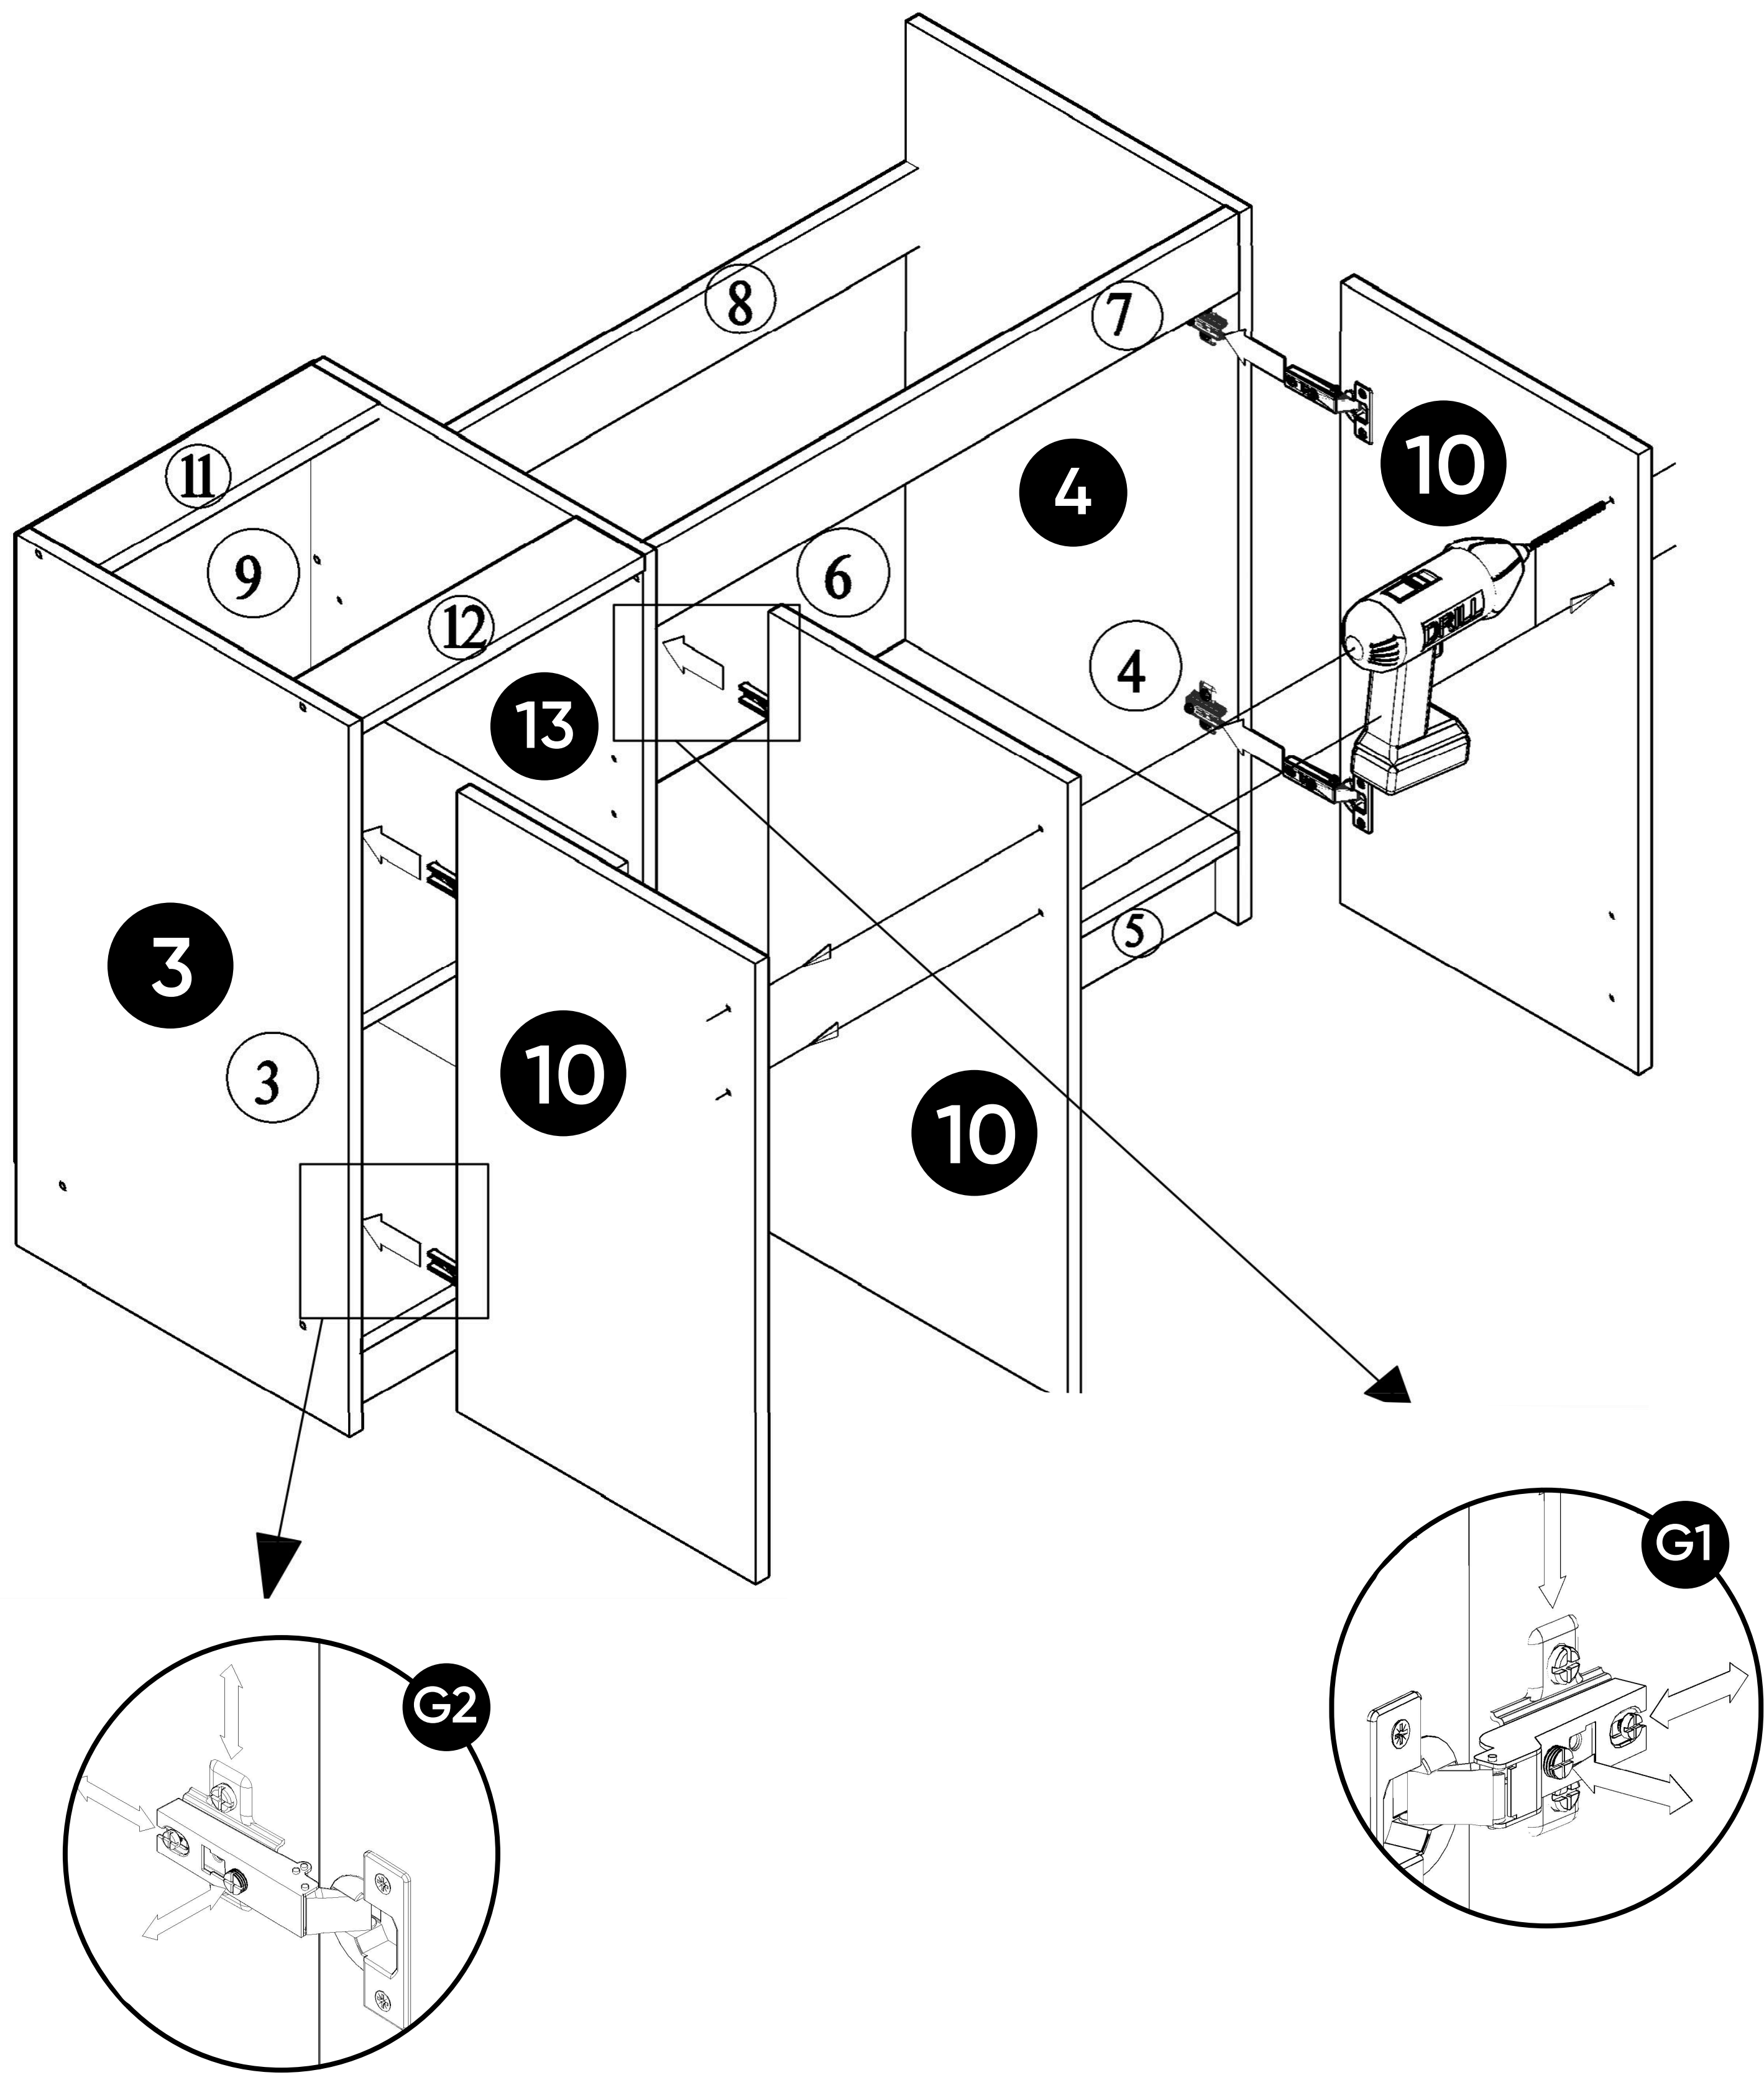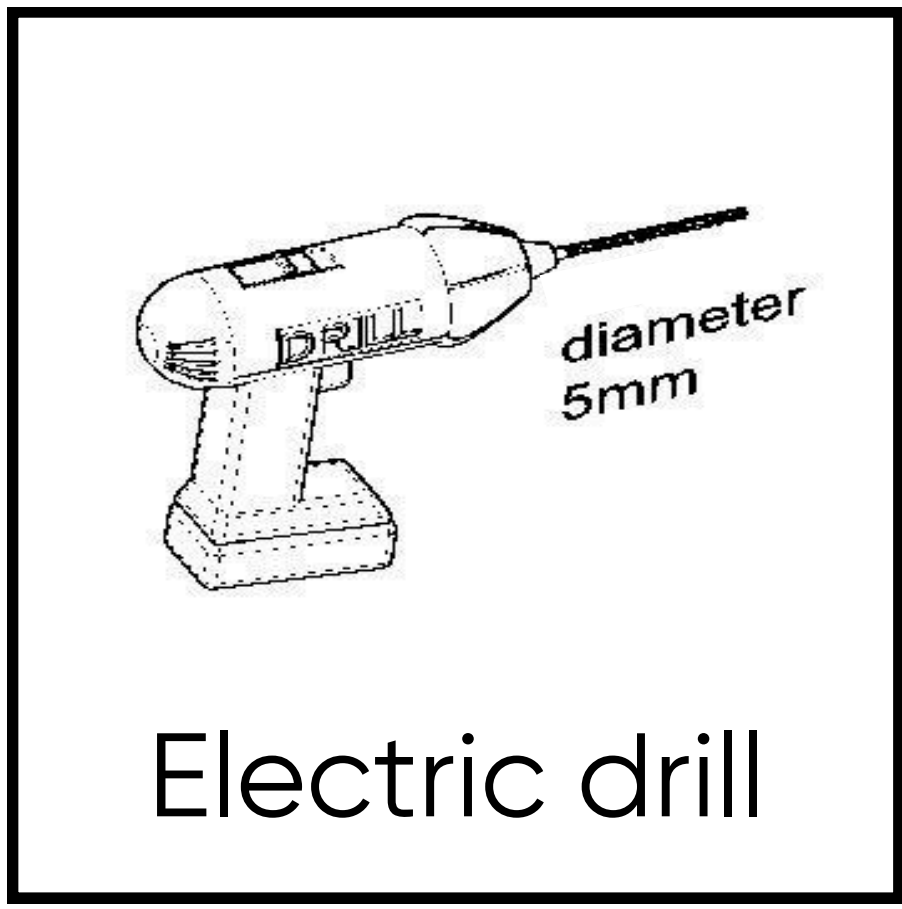

STEP - 10

