JDFURNITURE

ASSEMBLY INSTRUCTIONS

KITCHEN BASE UNIT 1000MM

MODEL B1000

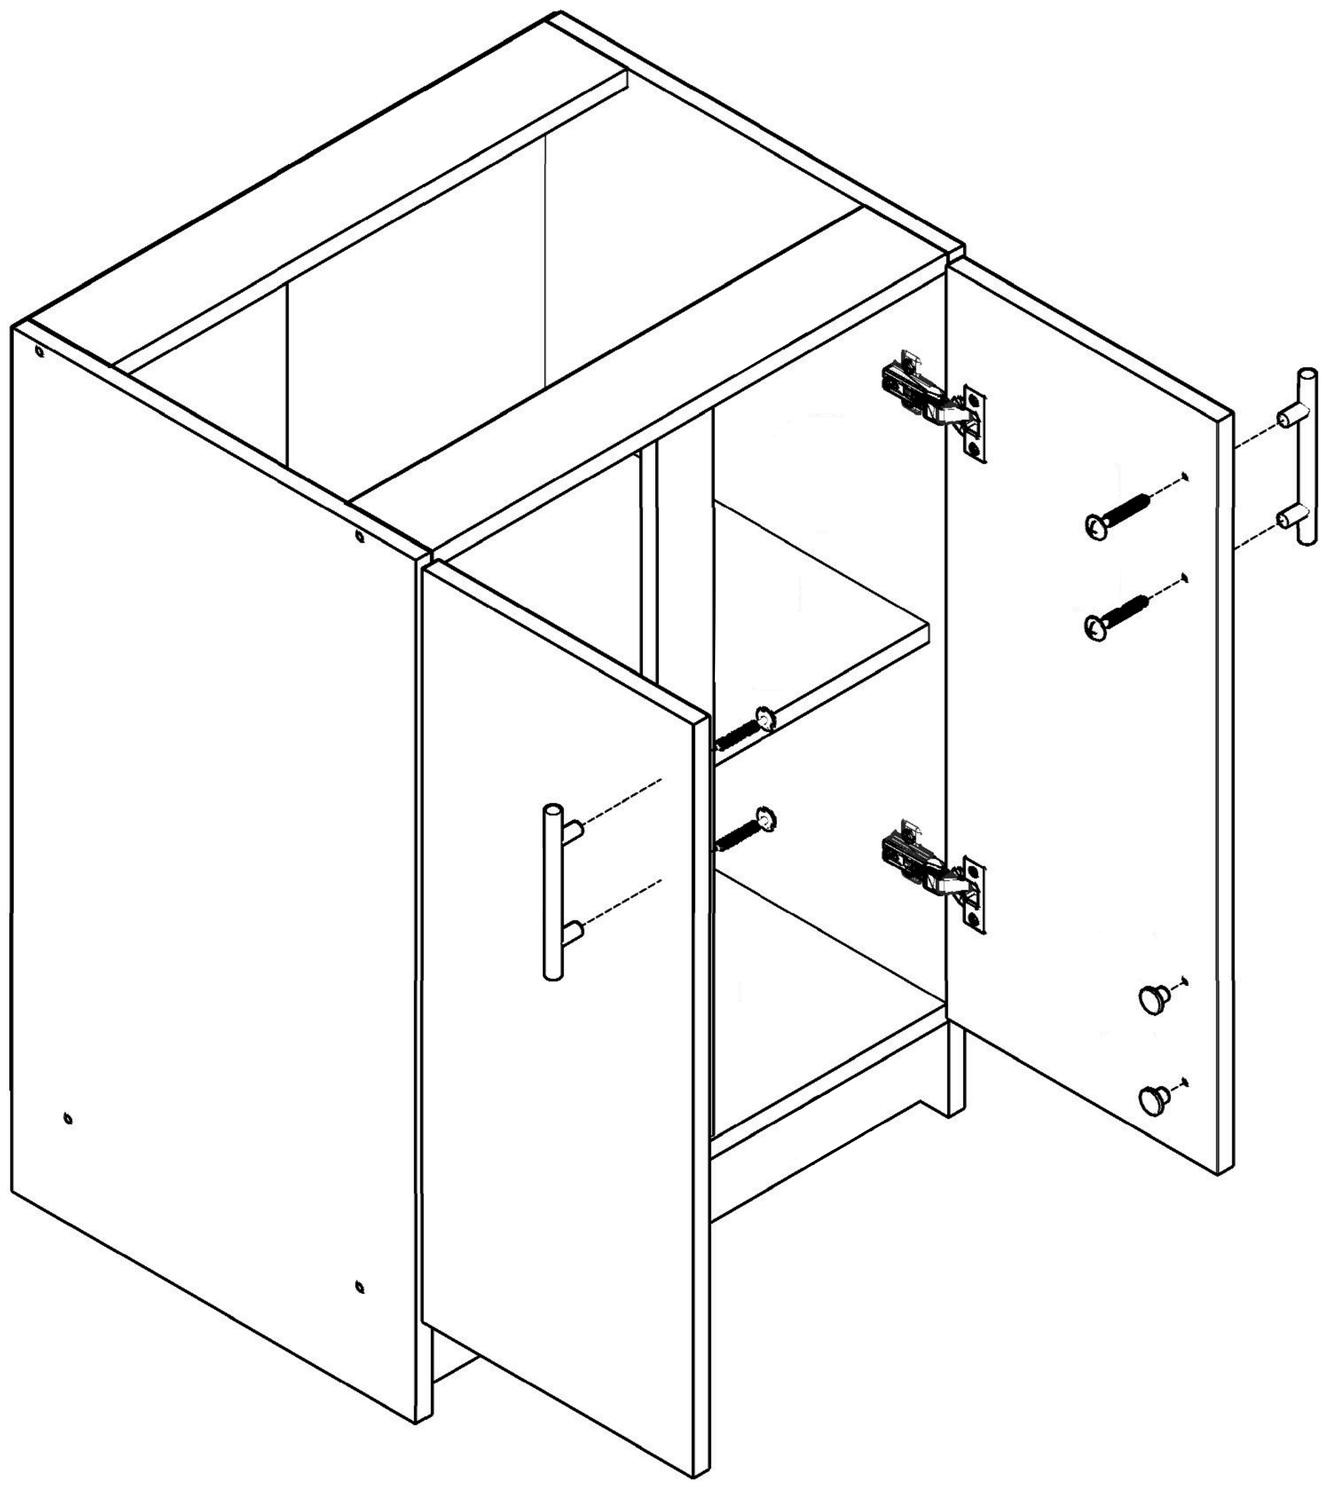

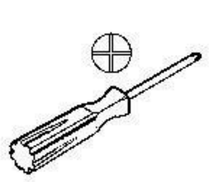

Cross-head screwdriver

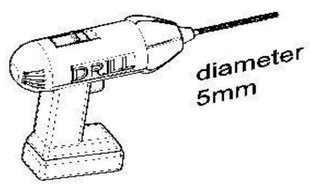

Electric drill

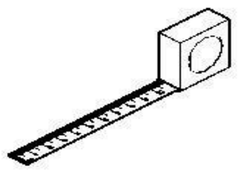

Rule

Hammer

TOOLS REQUIRED

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below

1 x1

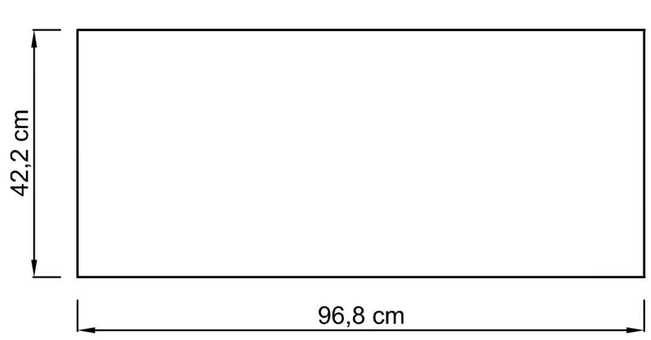

2 x1

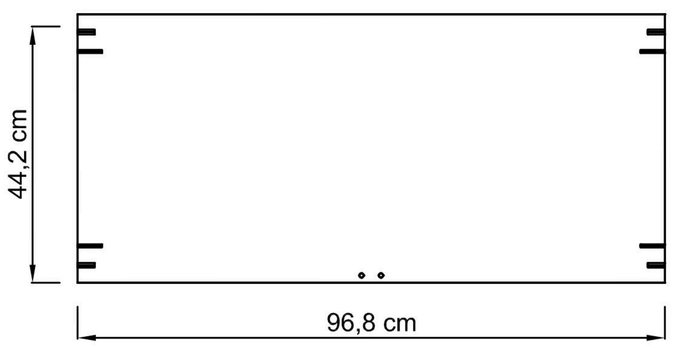

3 x1

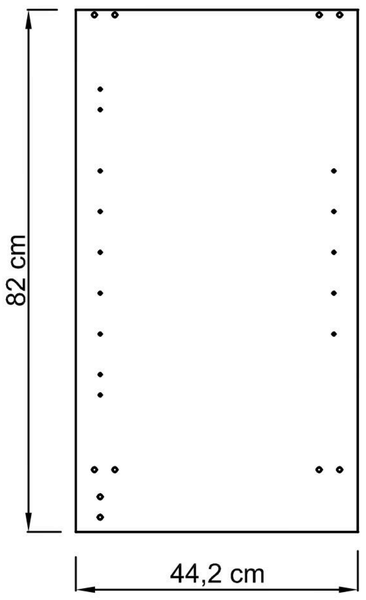

4 x1

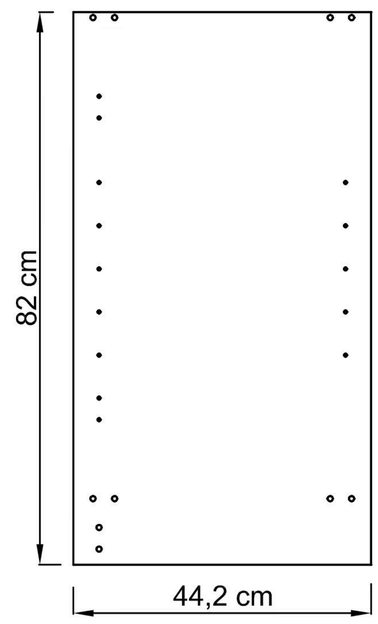

5 x1

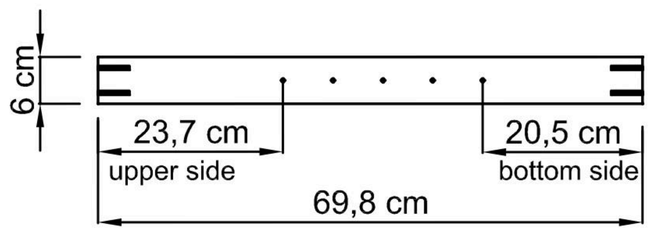

Attention! For proper assembly of the upper and bottom sides. Asembly instruction site 3

6 x1

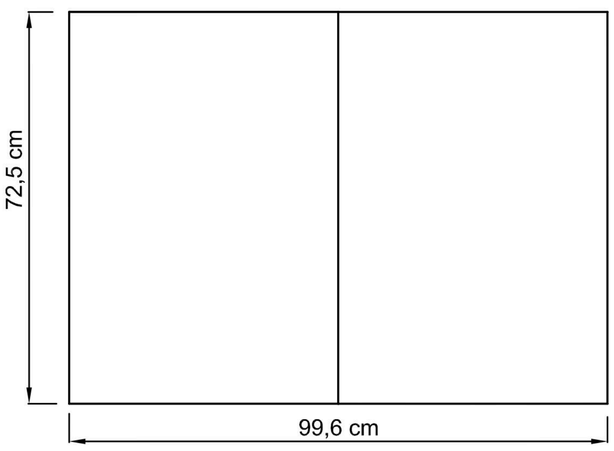

7 x1

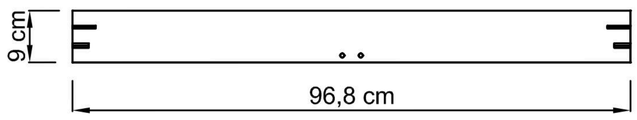

8 x1

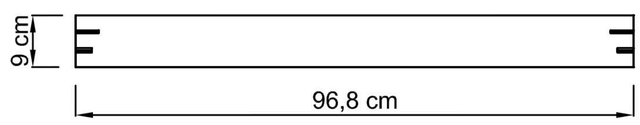

9 x1

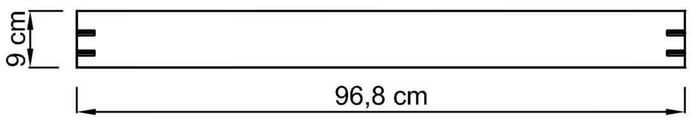

10 x2 Front
(separate package)

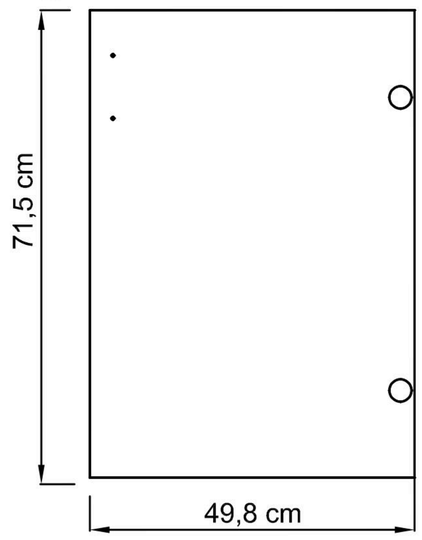

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

O x8

7x16

F x4

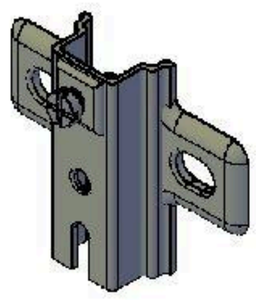

G2 x4

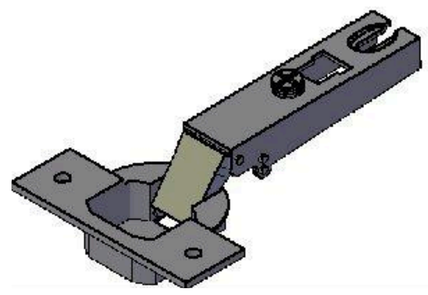

!

PAY ATTENTION:
O AND F ATTACHED TO G2

E x5

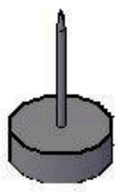

D8 x5

Q7 x1

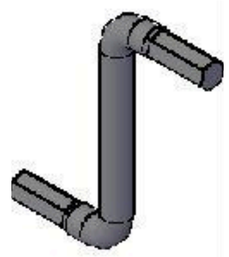

C x12

7x50

S1 x8

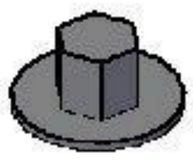

S7 x4

J9 x4

3x25

U7 x2

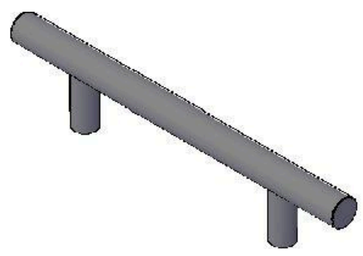

H x8 US 031.03

3.5x13

W x40

H5 x4

3.5x25

A x12

Ruler - Use this ruler to help correctly identify the screws

STEP - 1

PAY ATTENTION: O ATTACHED TO F

O x8

7x16

F x4

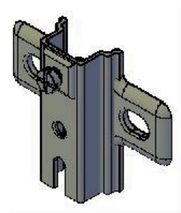

E x4



A x12

D8 x4

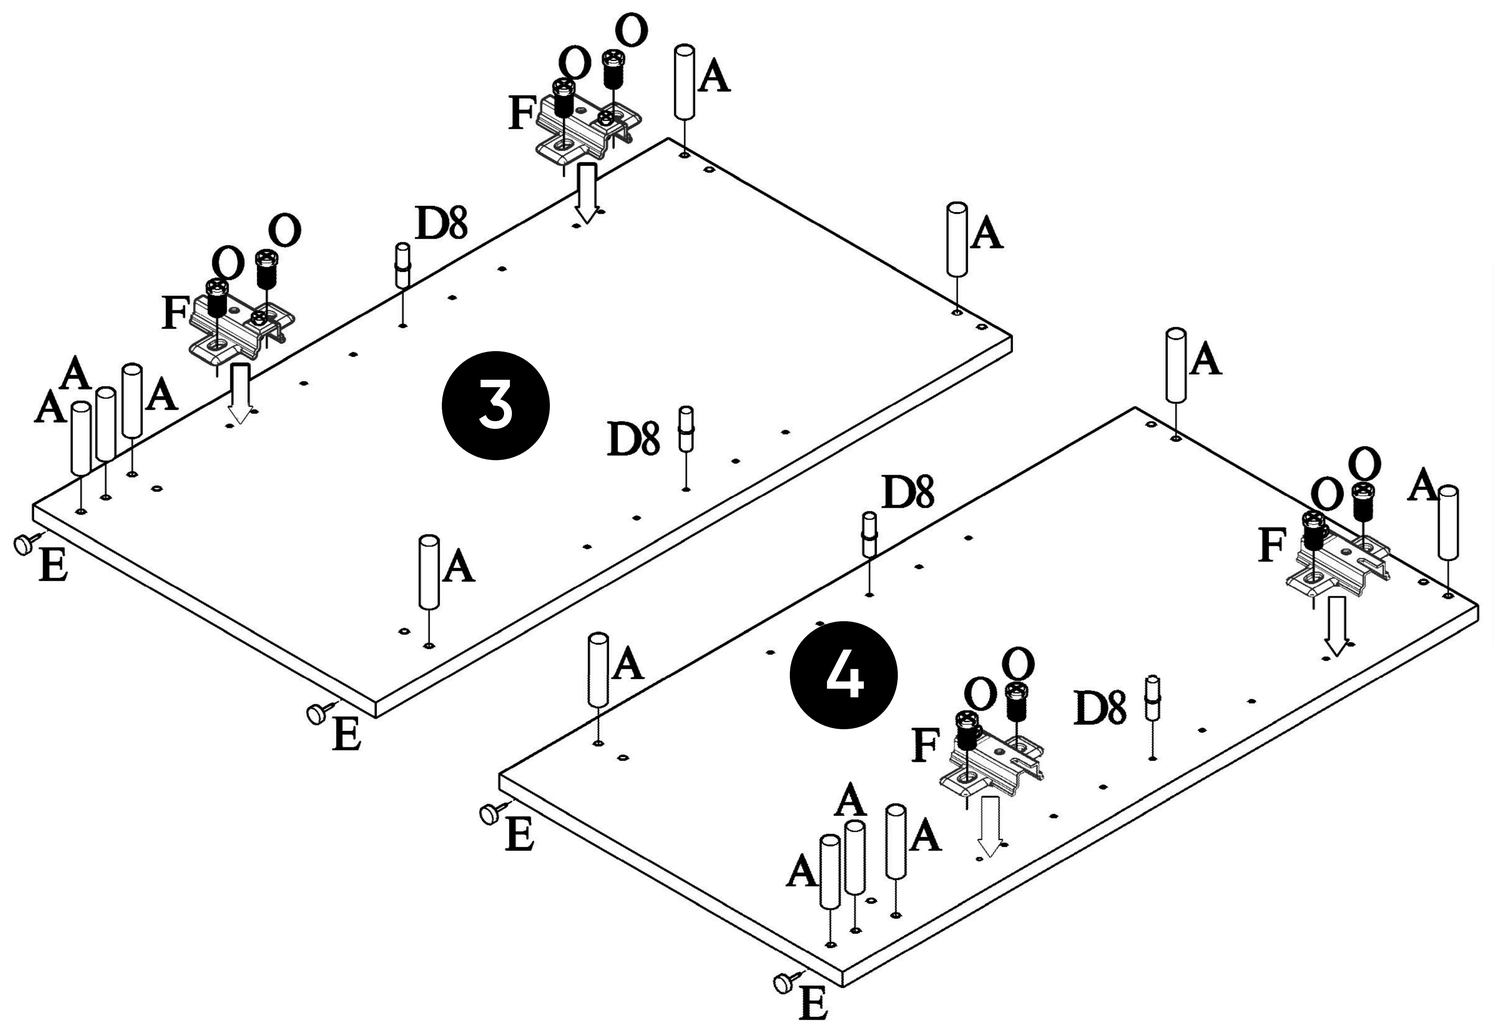

STEP - 2

Q7 x1

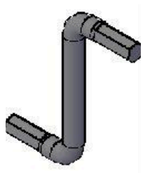

E x1



S1 x12



S1 x8

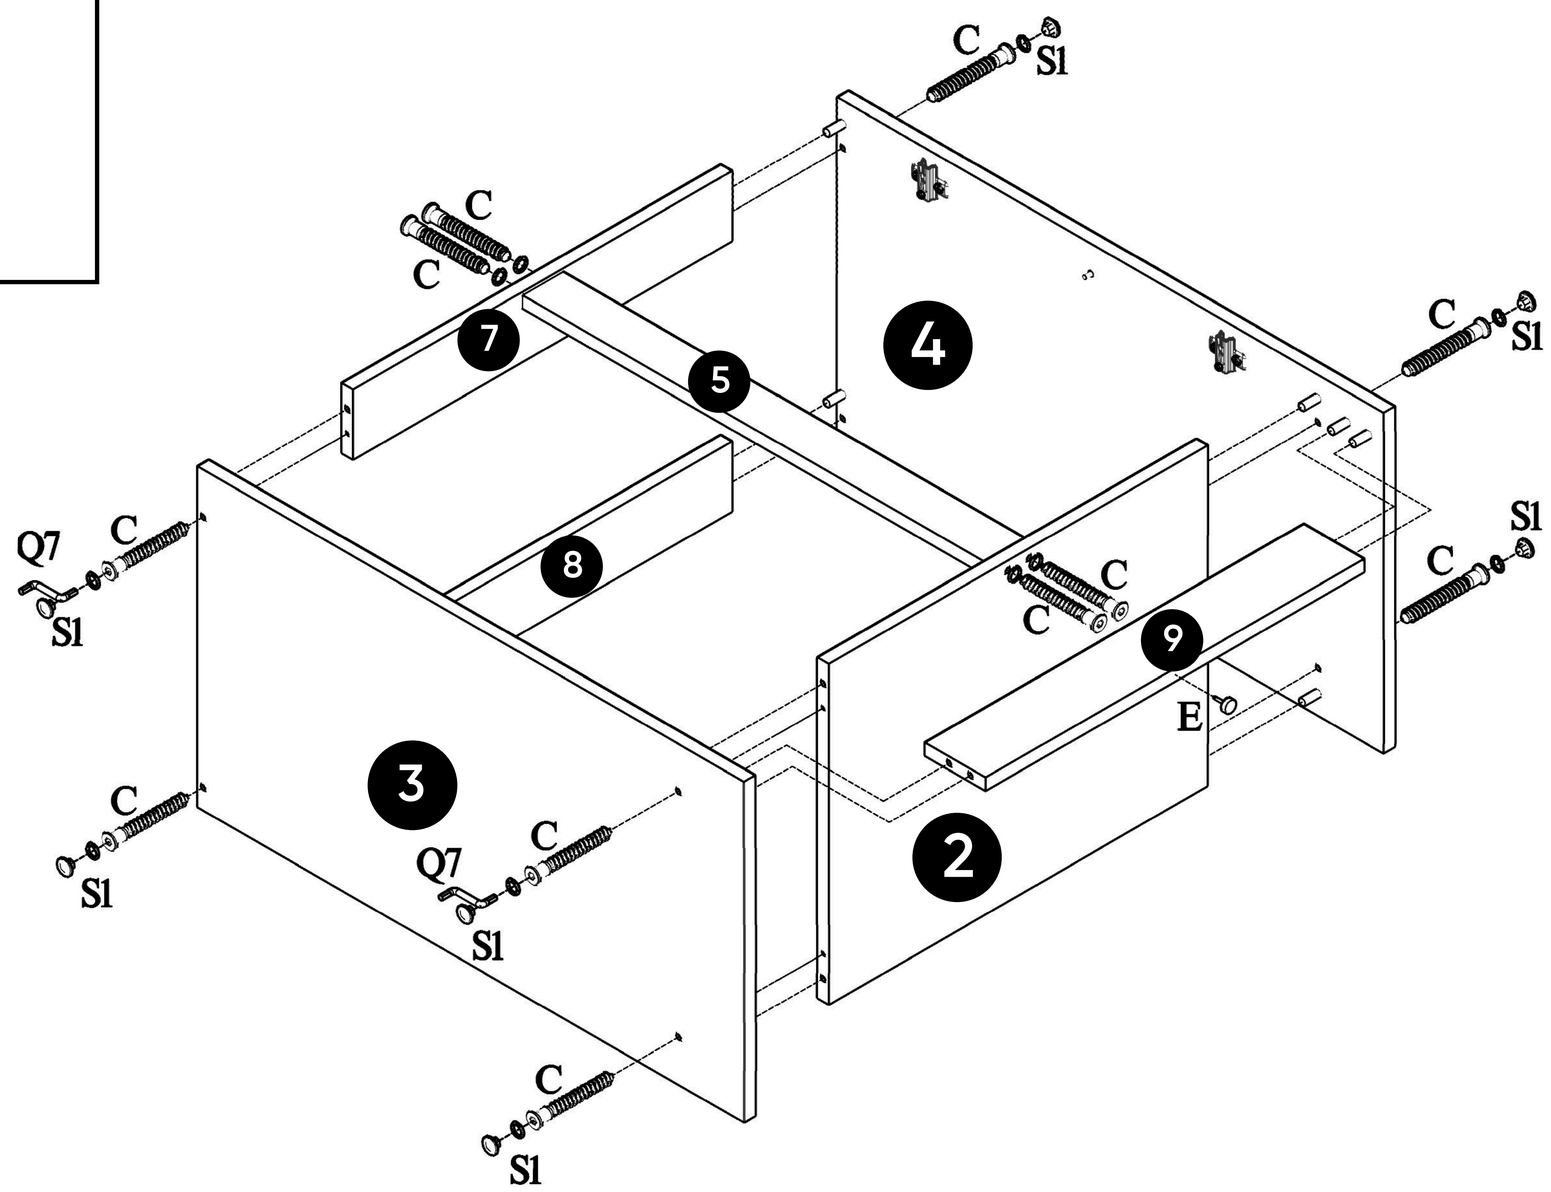

STEP - 3

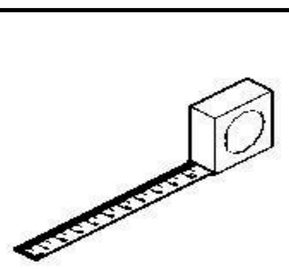

Rule

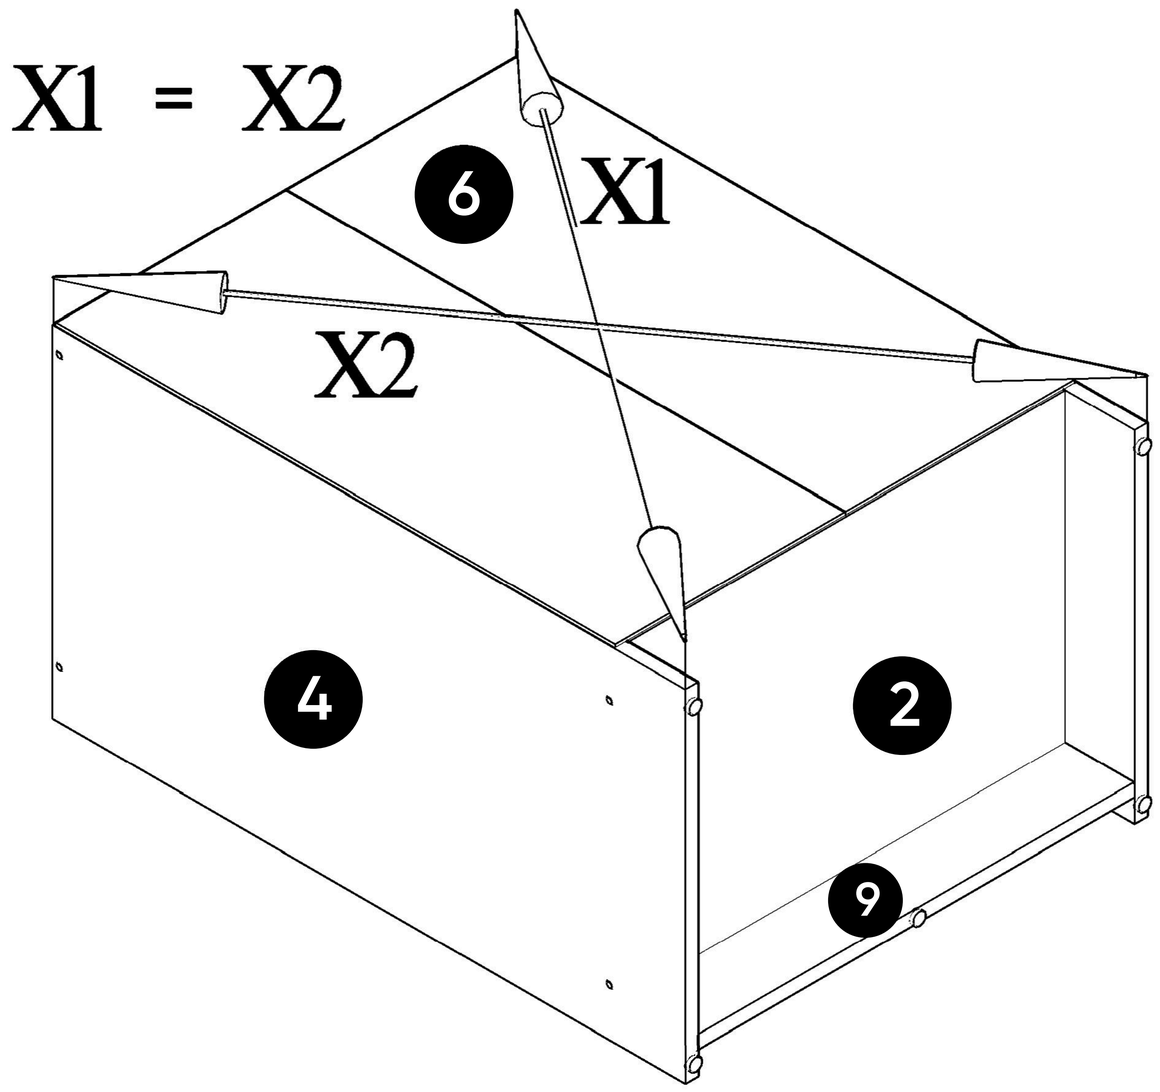

STEP - 4

W x40

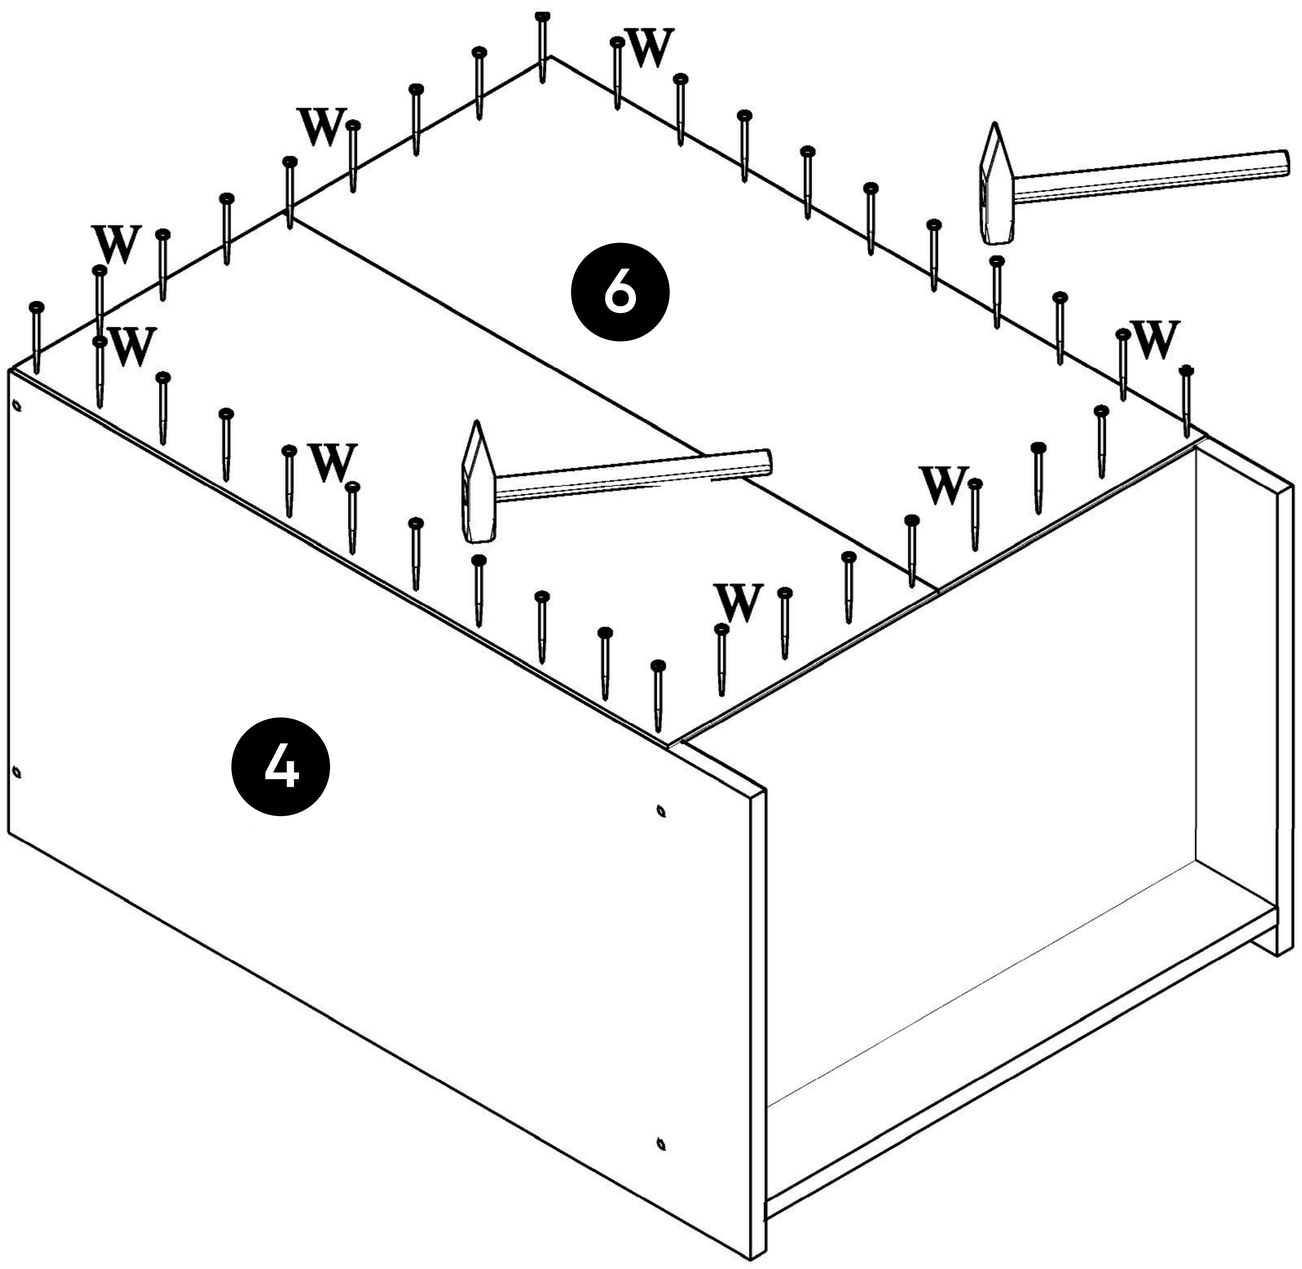

STEP - 5

G2 x4

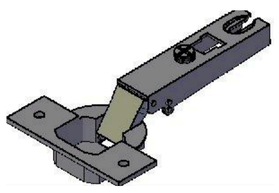

H x8 US 031.03

ϕ3.5x13

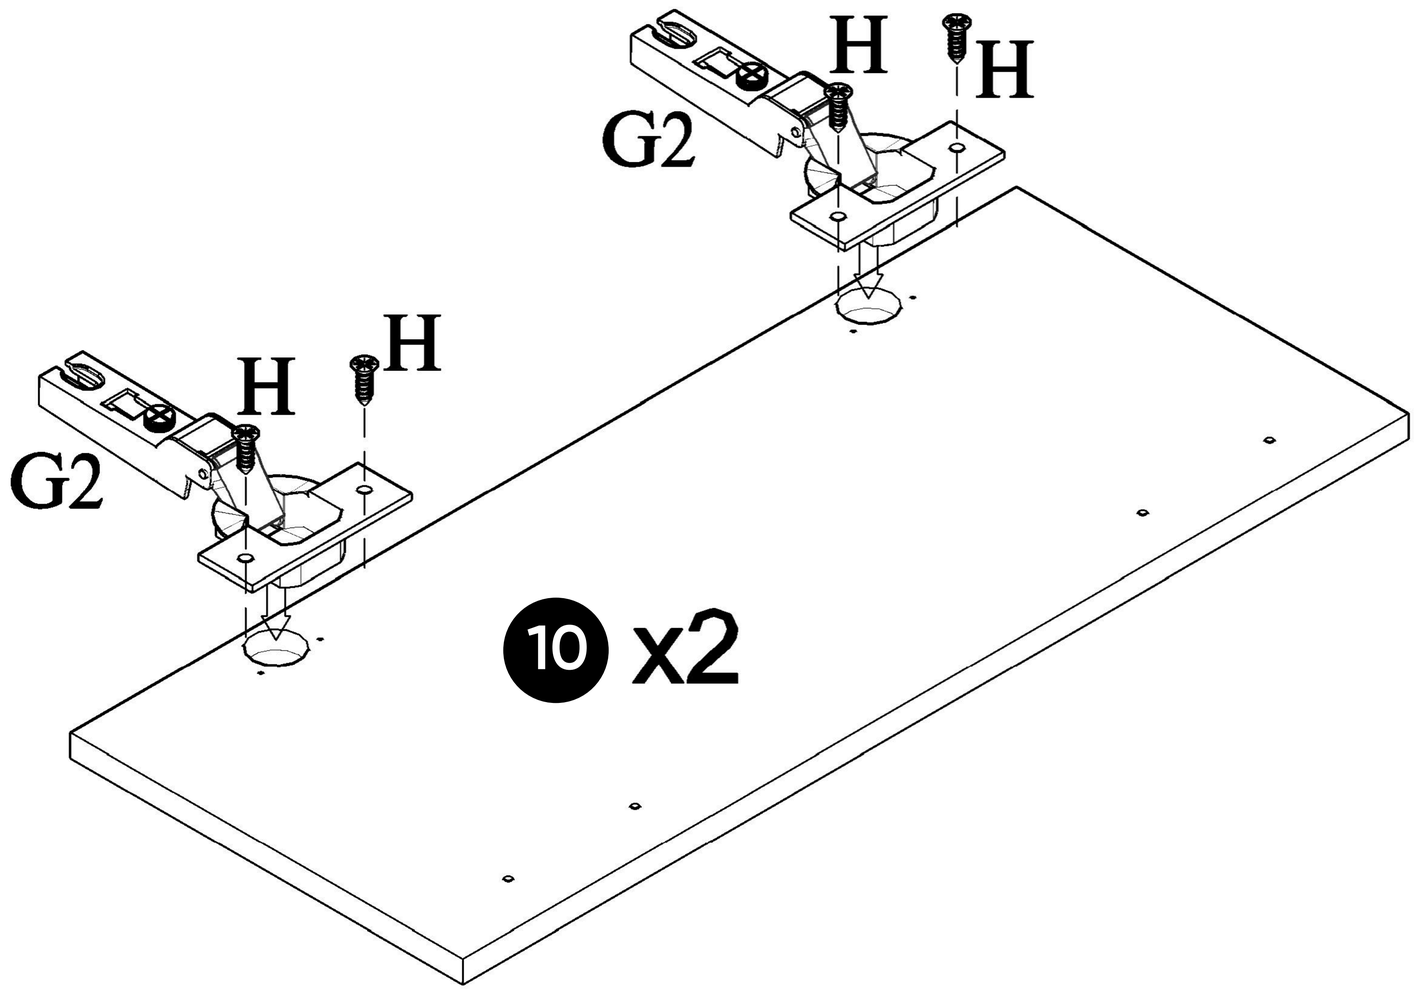

STEP - 6

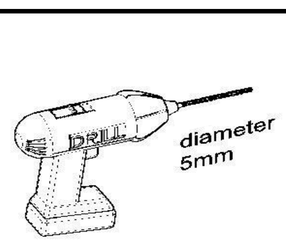

Electric drill

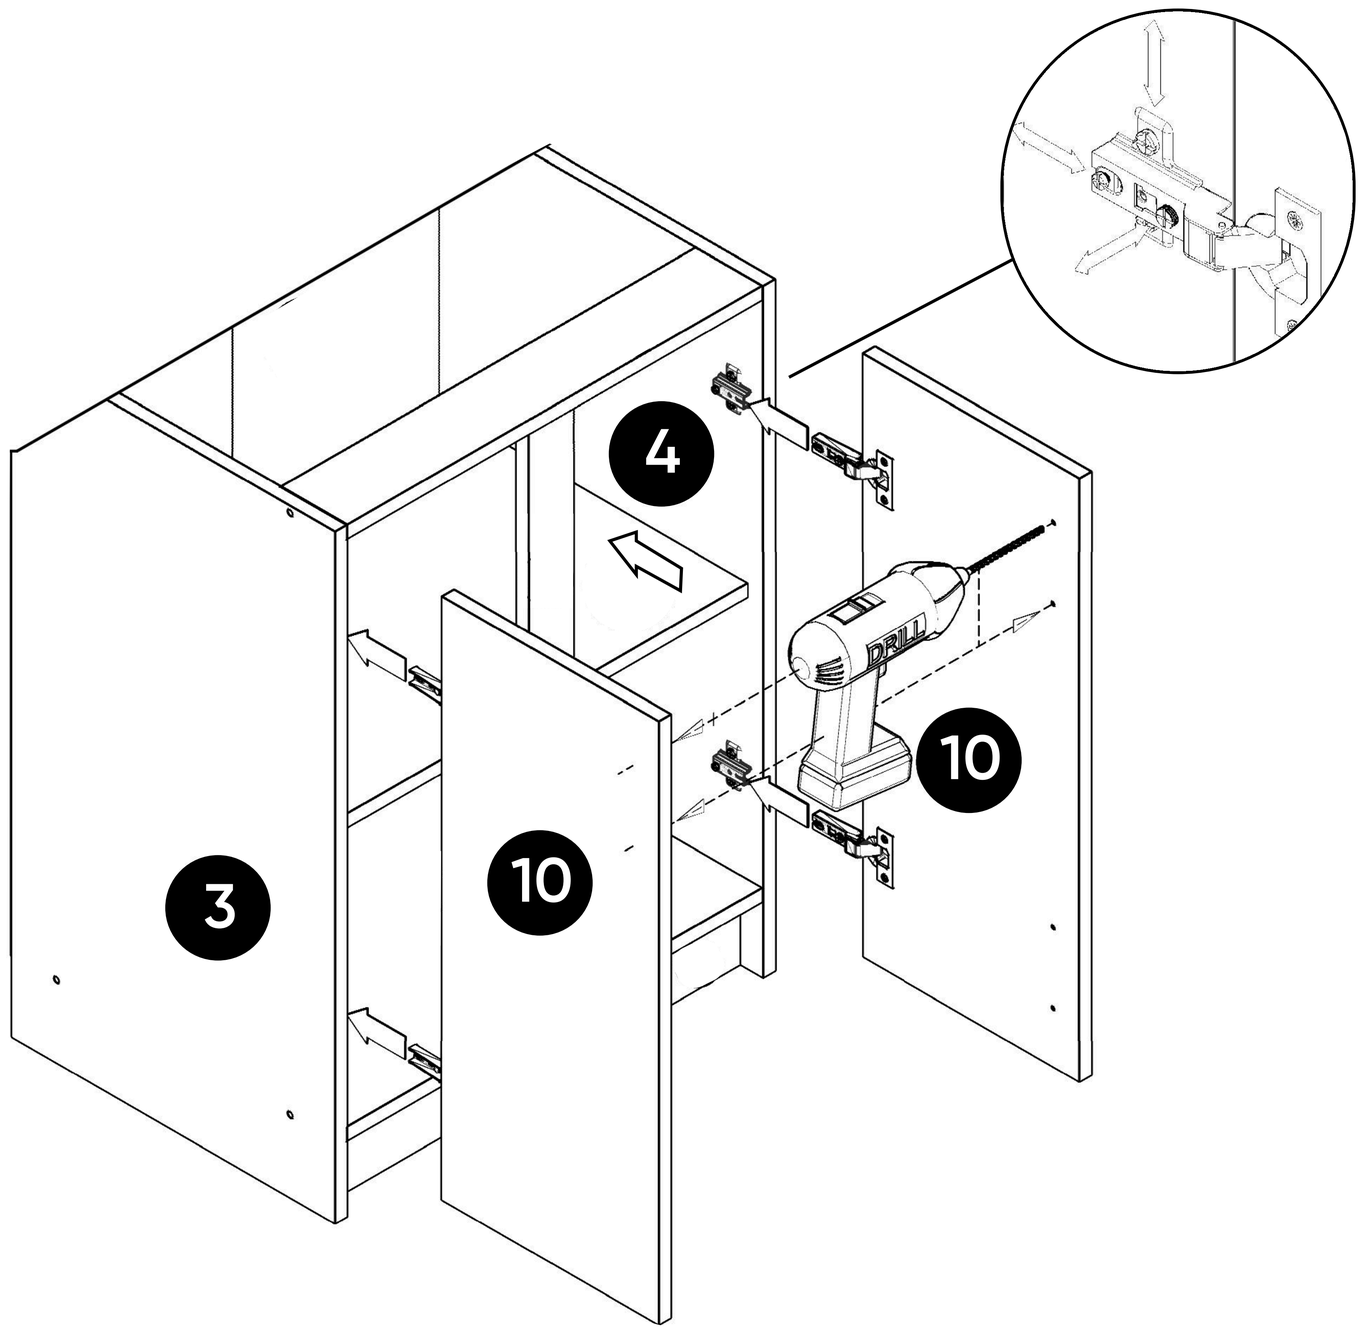

STEP - 7

S7 x4



J9 x4

3x25

U7 x2

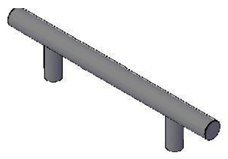

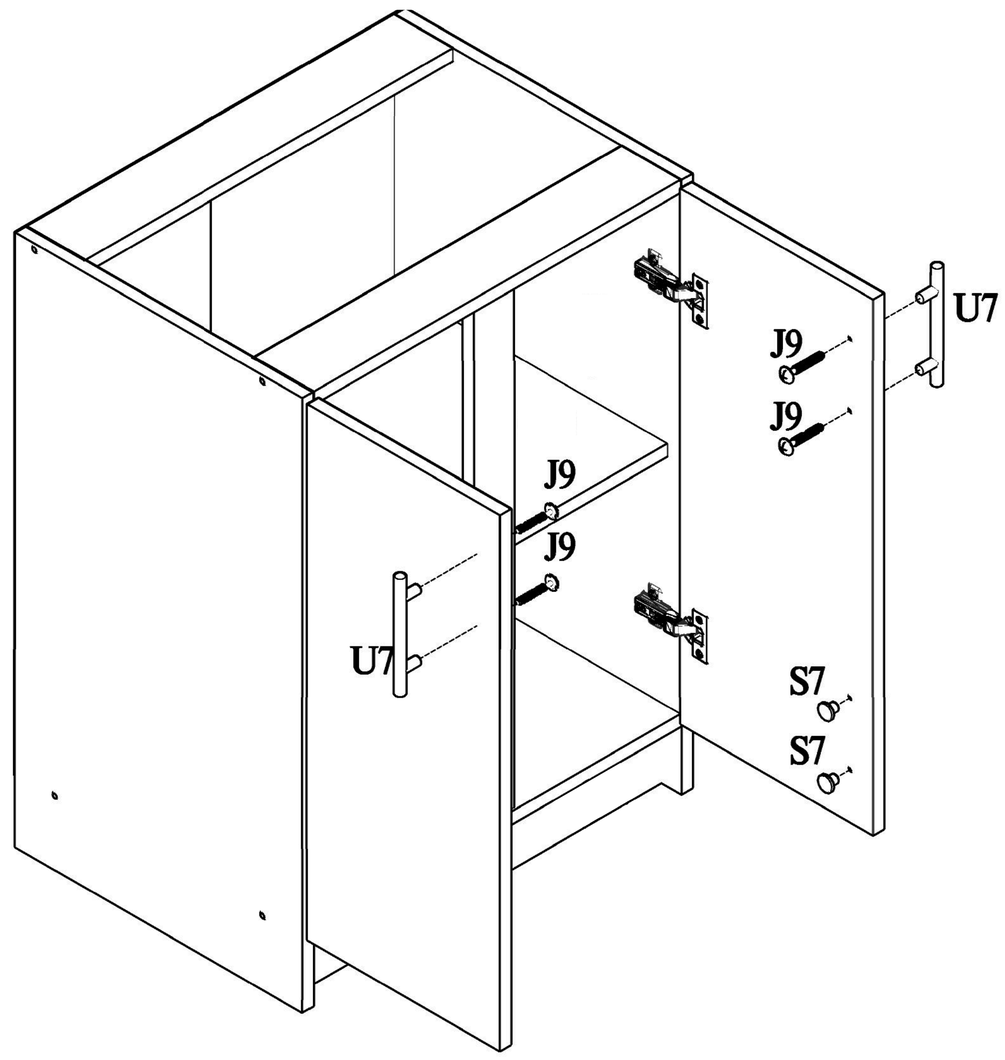

STEP - 8

H5 x4



3.5x25

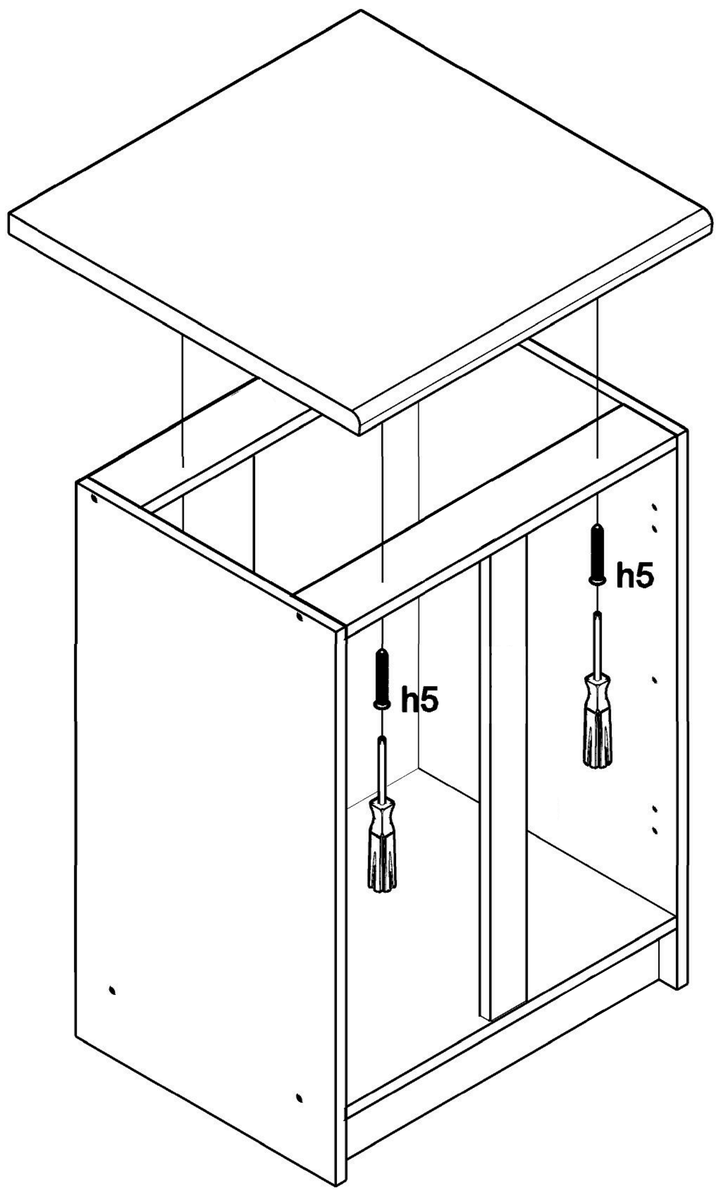

PAY ATTENTION:

WORKTOP IS OPTIONAL

(MIGHT NOT BE INCLUDED)