



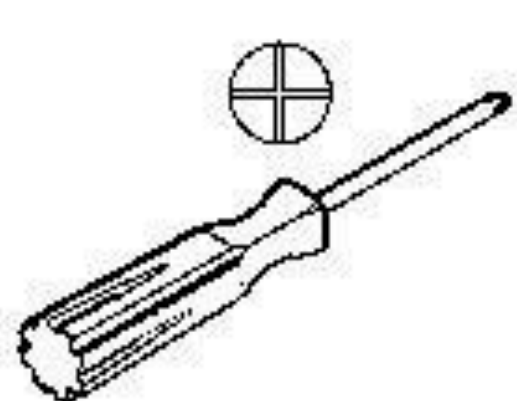


ASSEMBLY INSTRUCTIONS


KITCHEN WALL BRIDGING UNIT 600MM MODEL WEX600

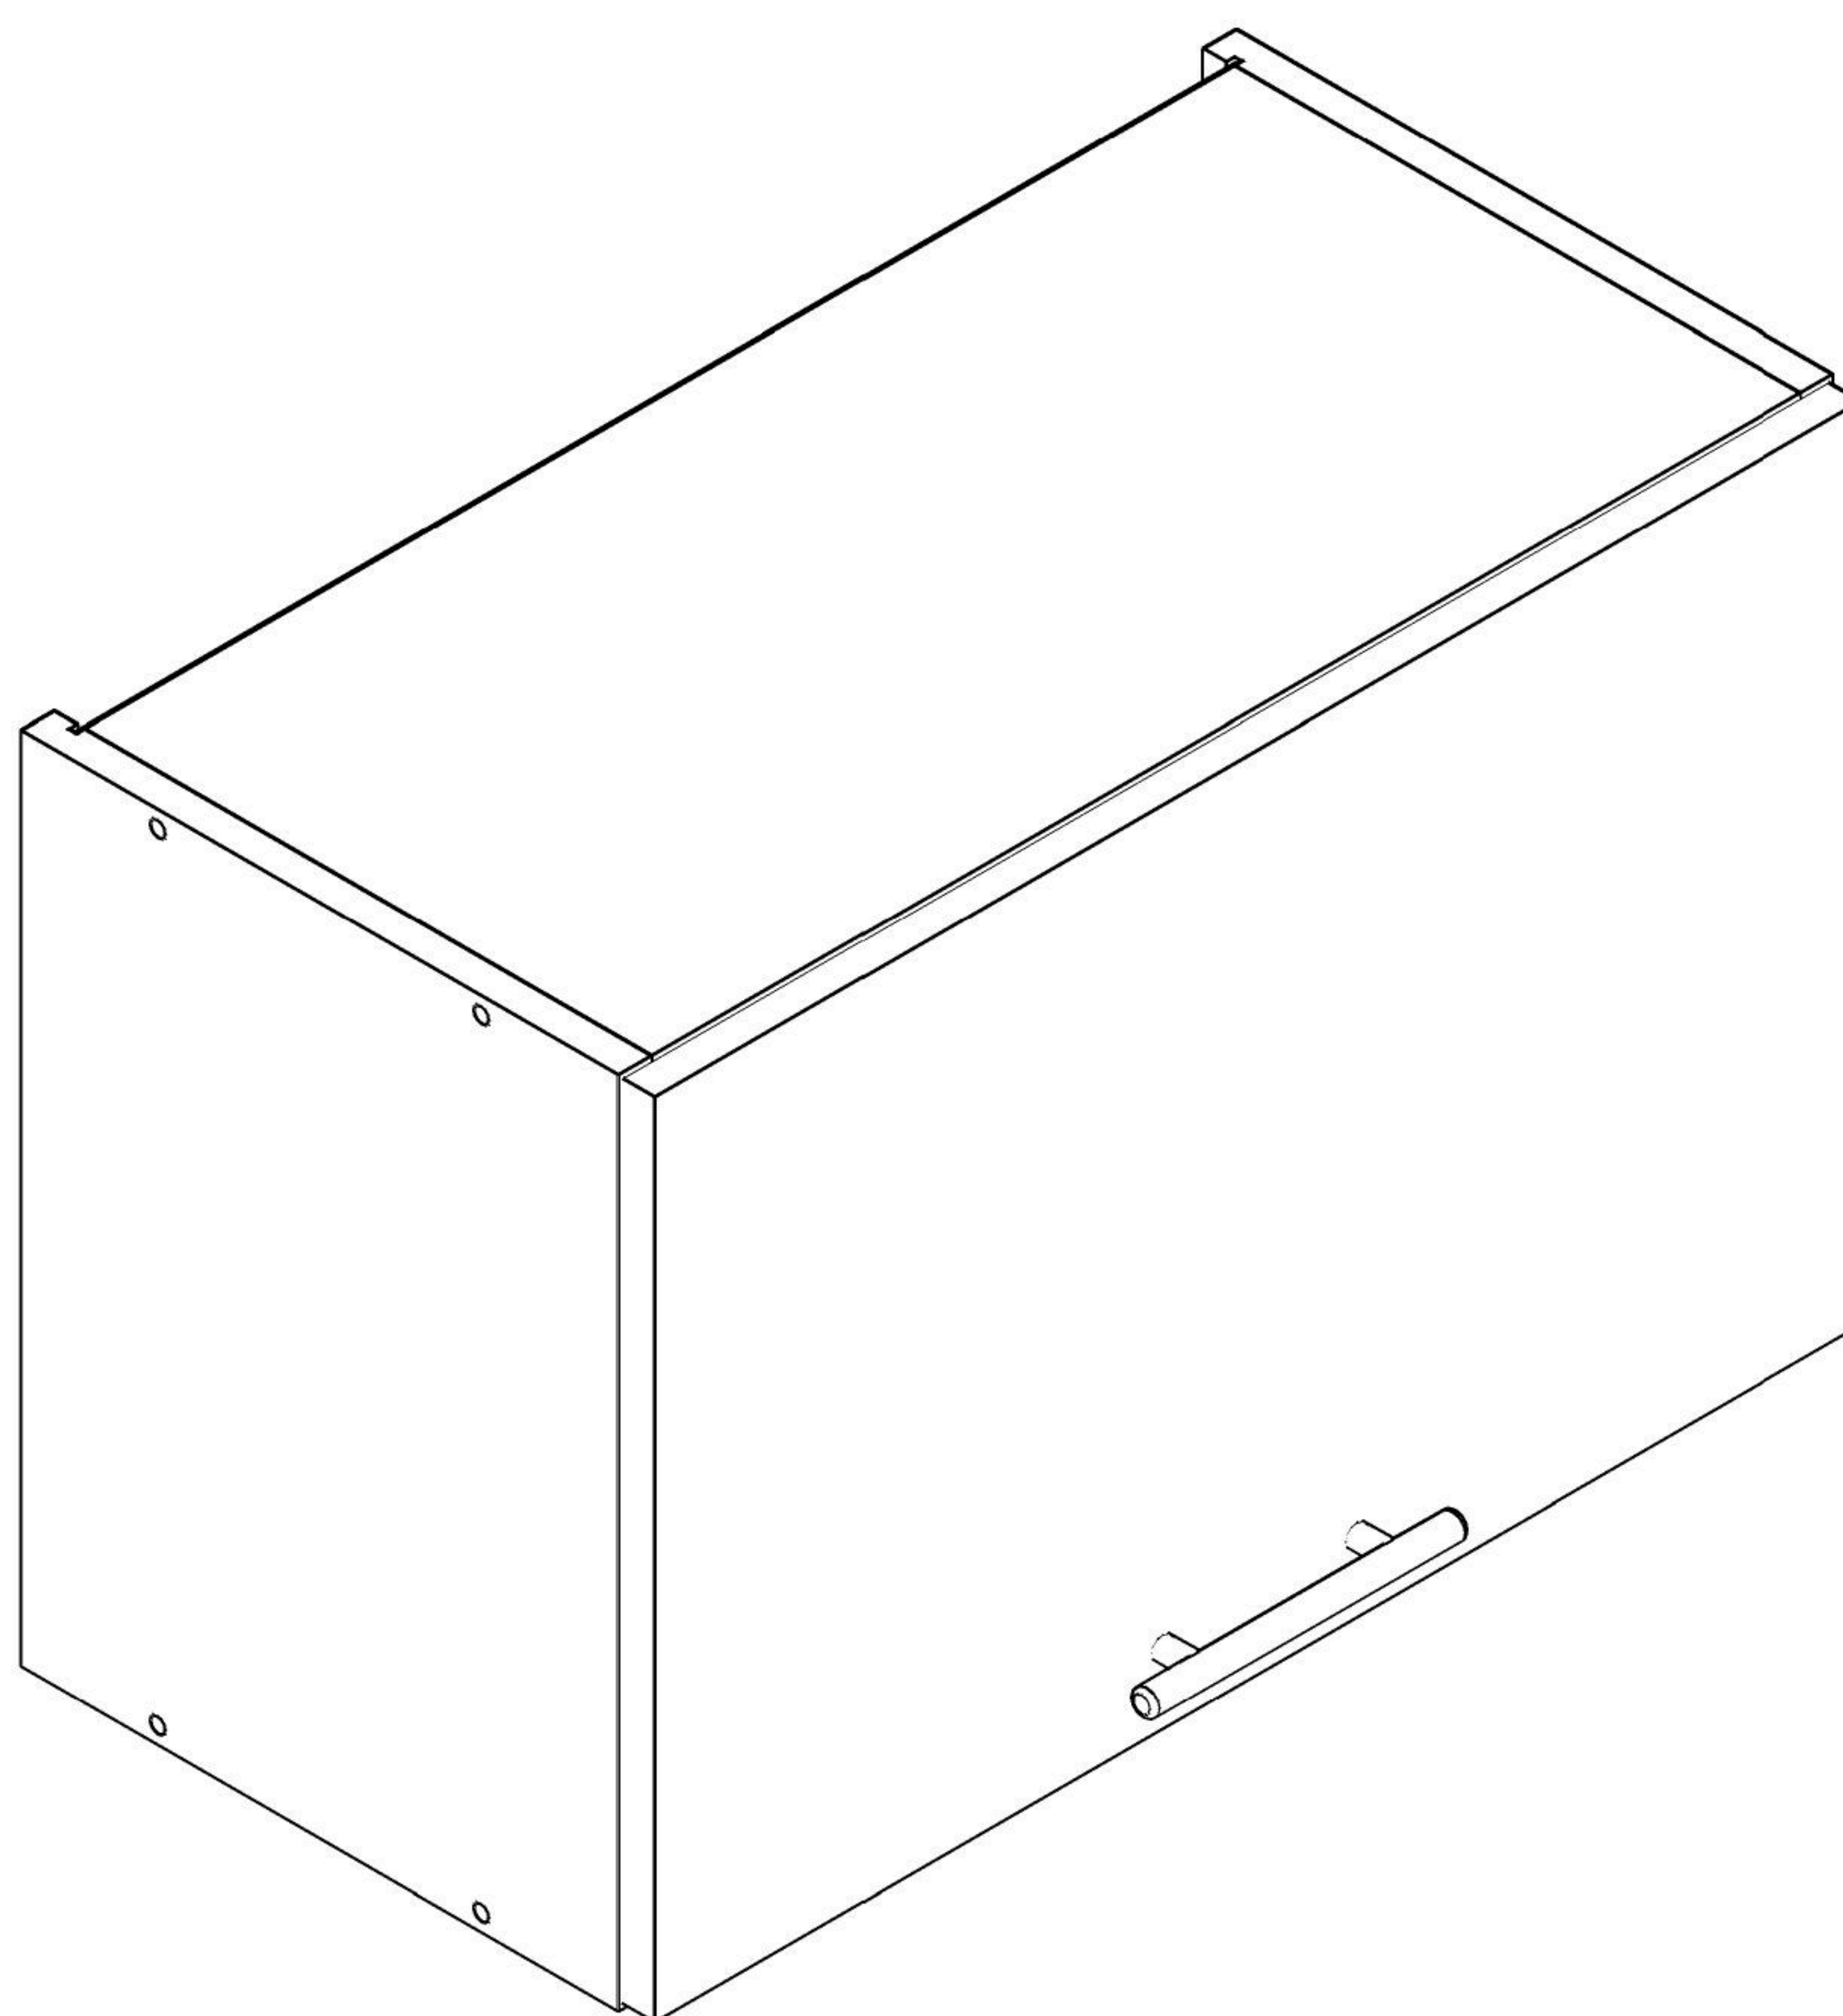


Cross-head
screwdriver

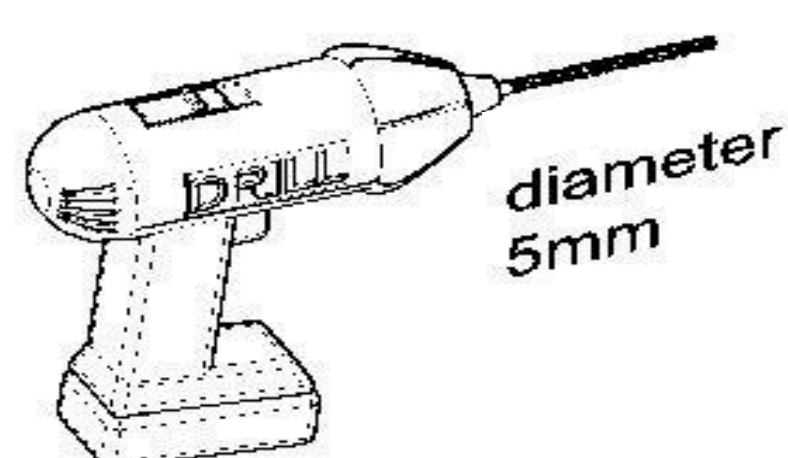

Electric
drill

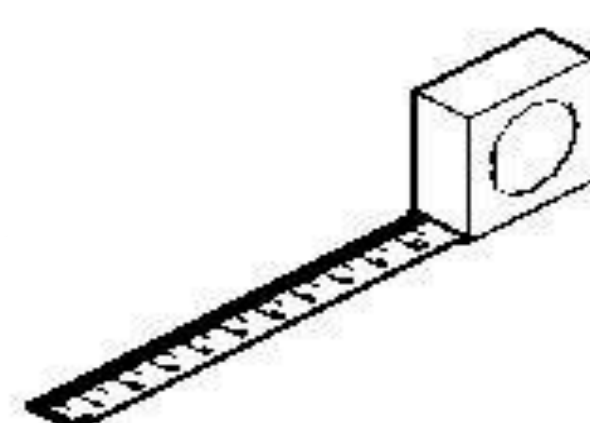

Rule

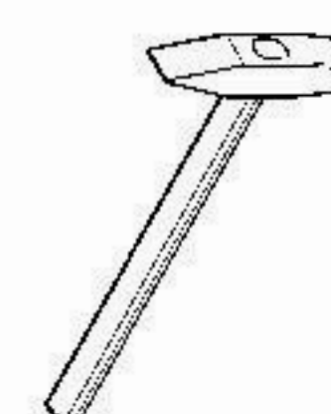

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below


1

x1

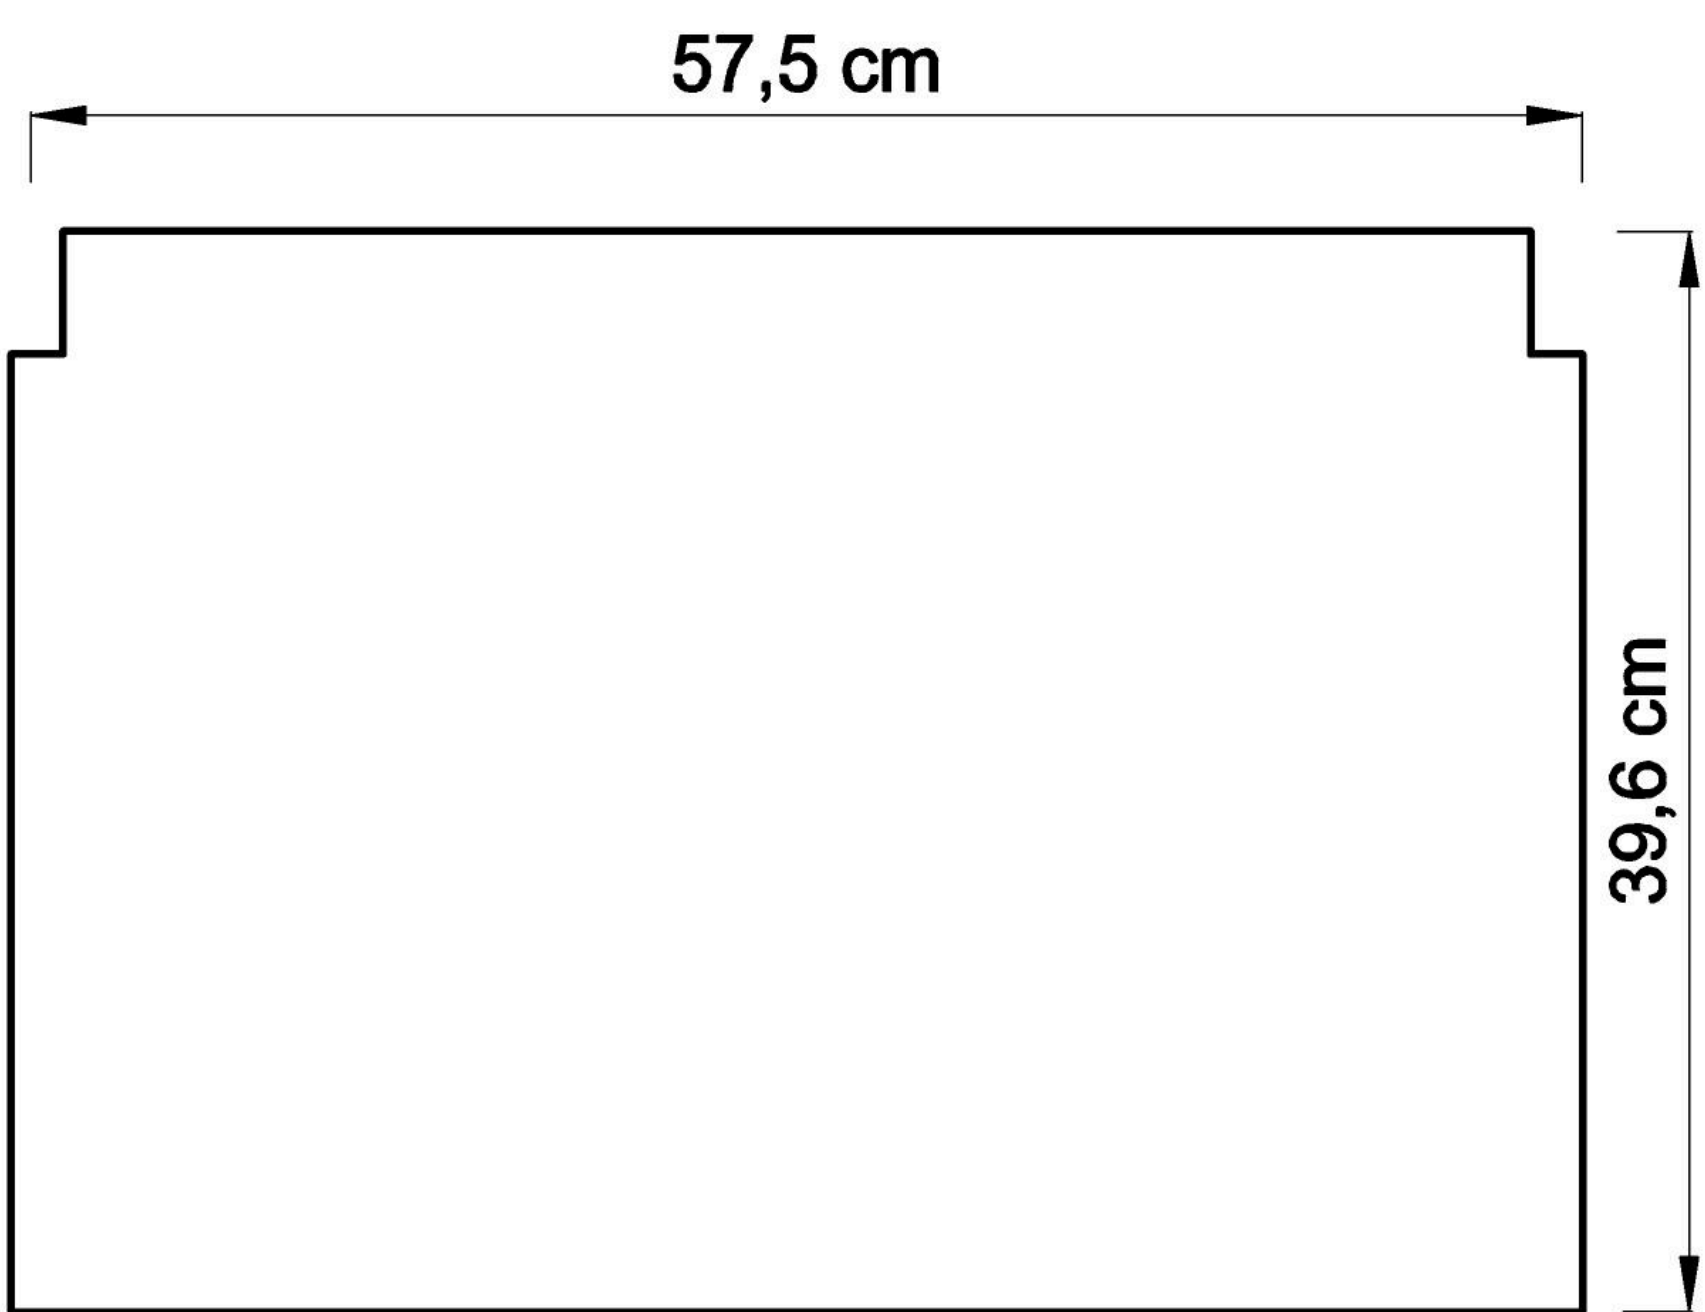


2

x1

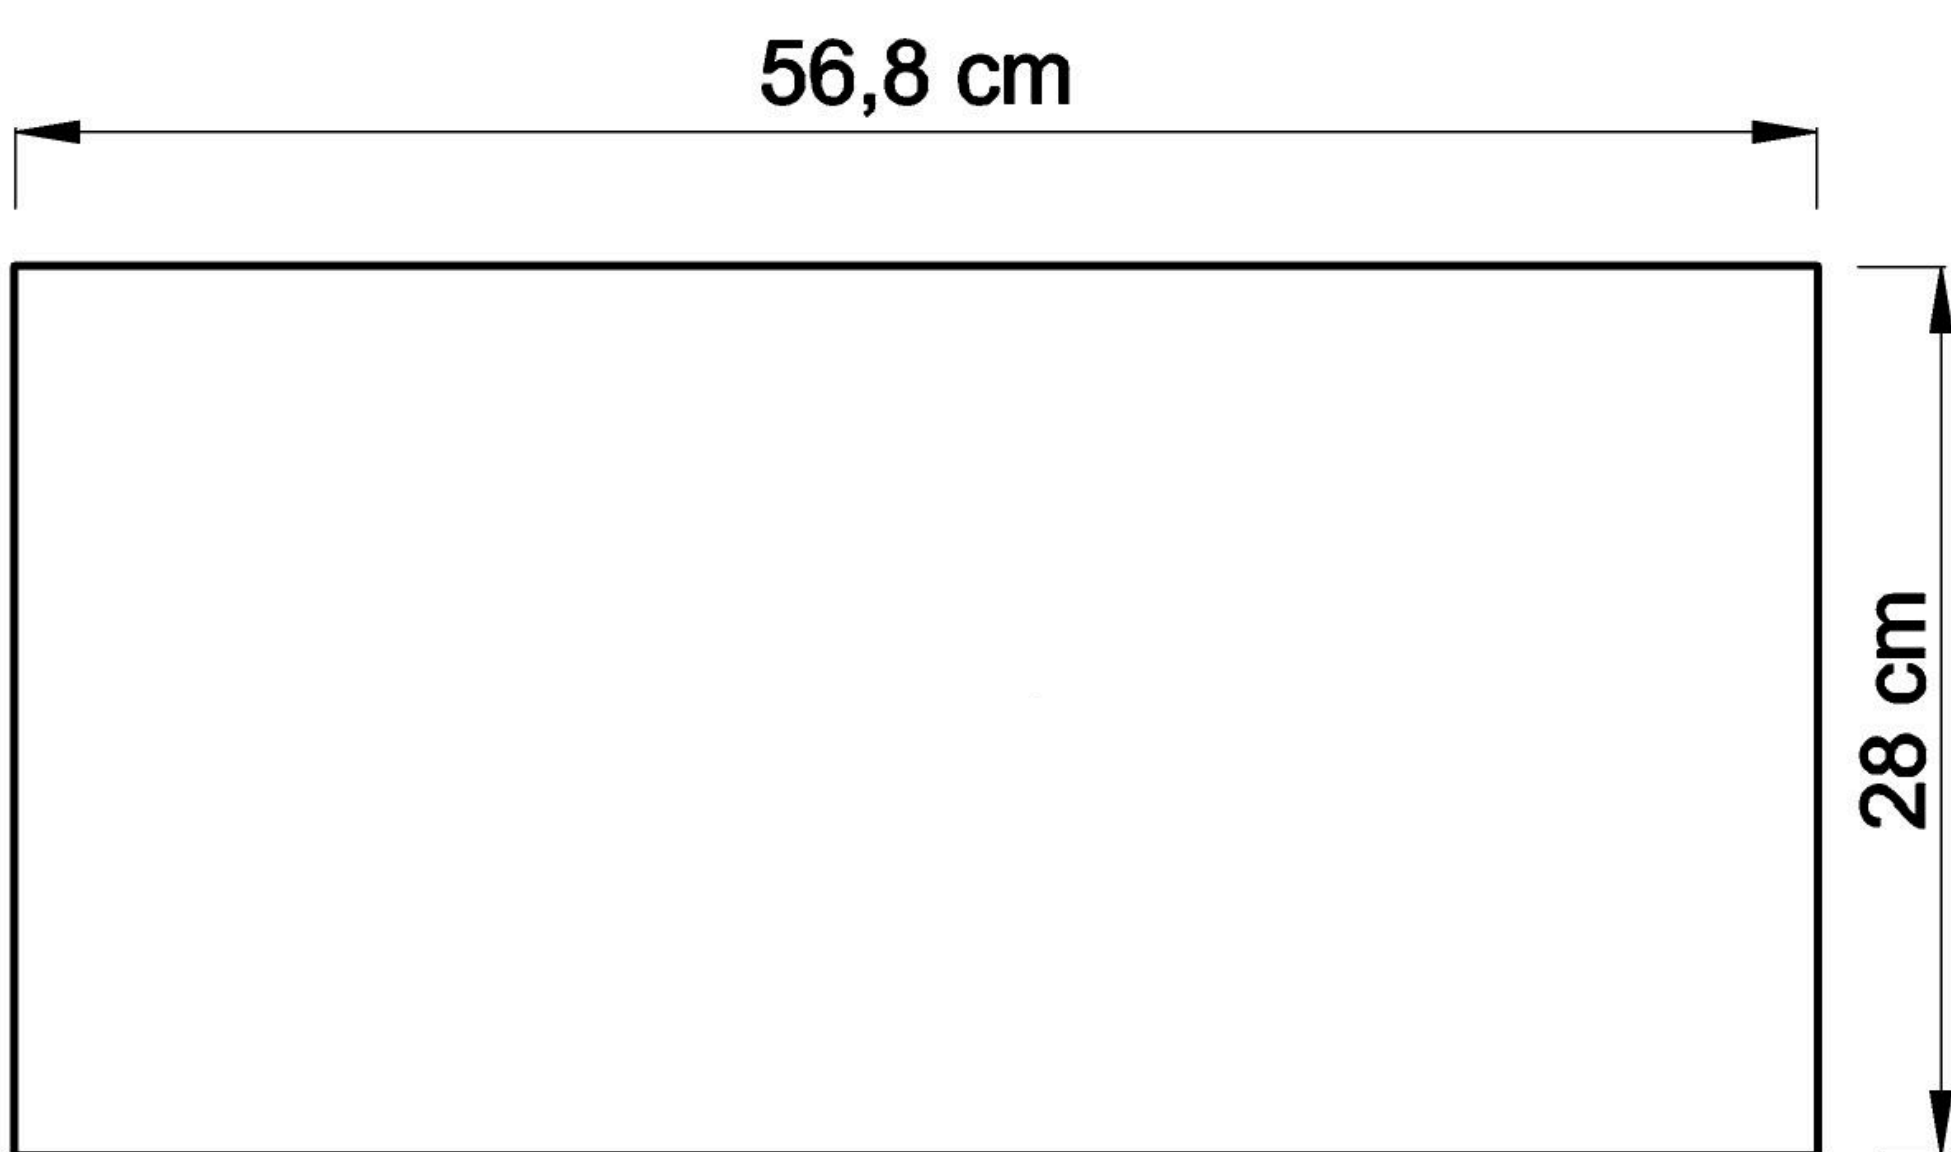


3

x1

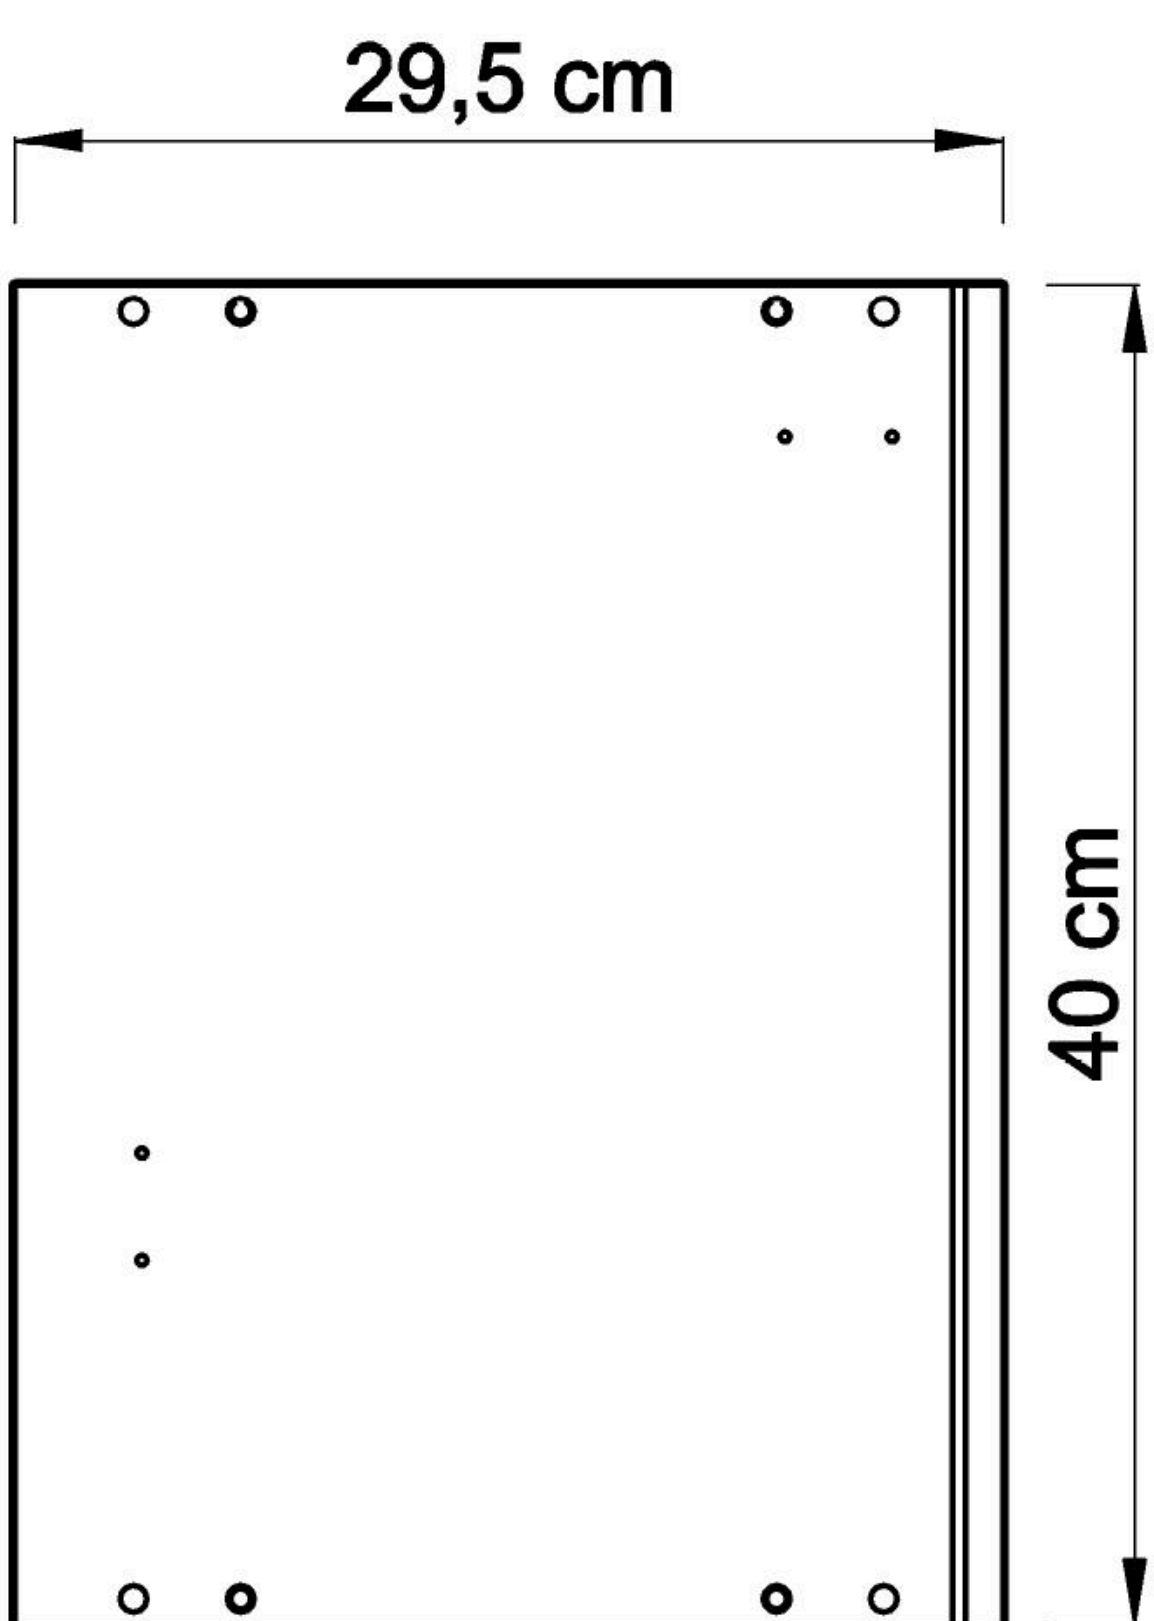


4

x1

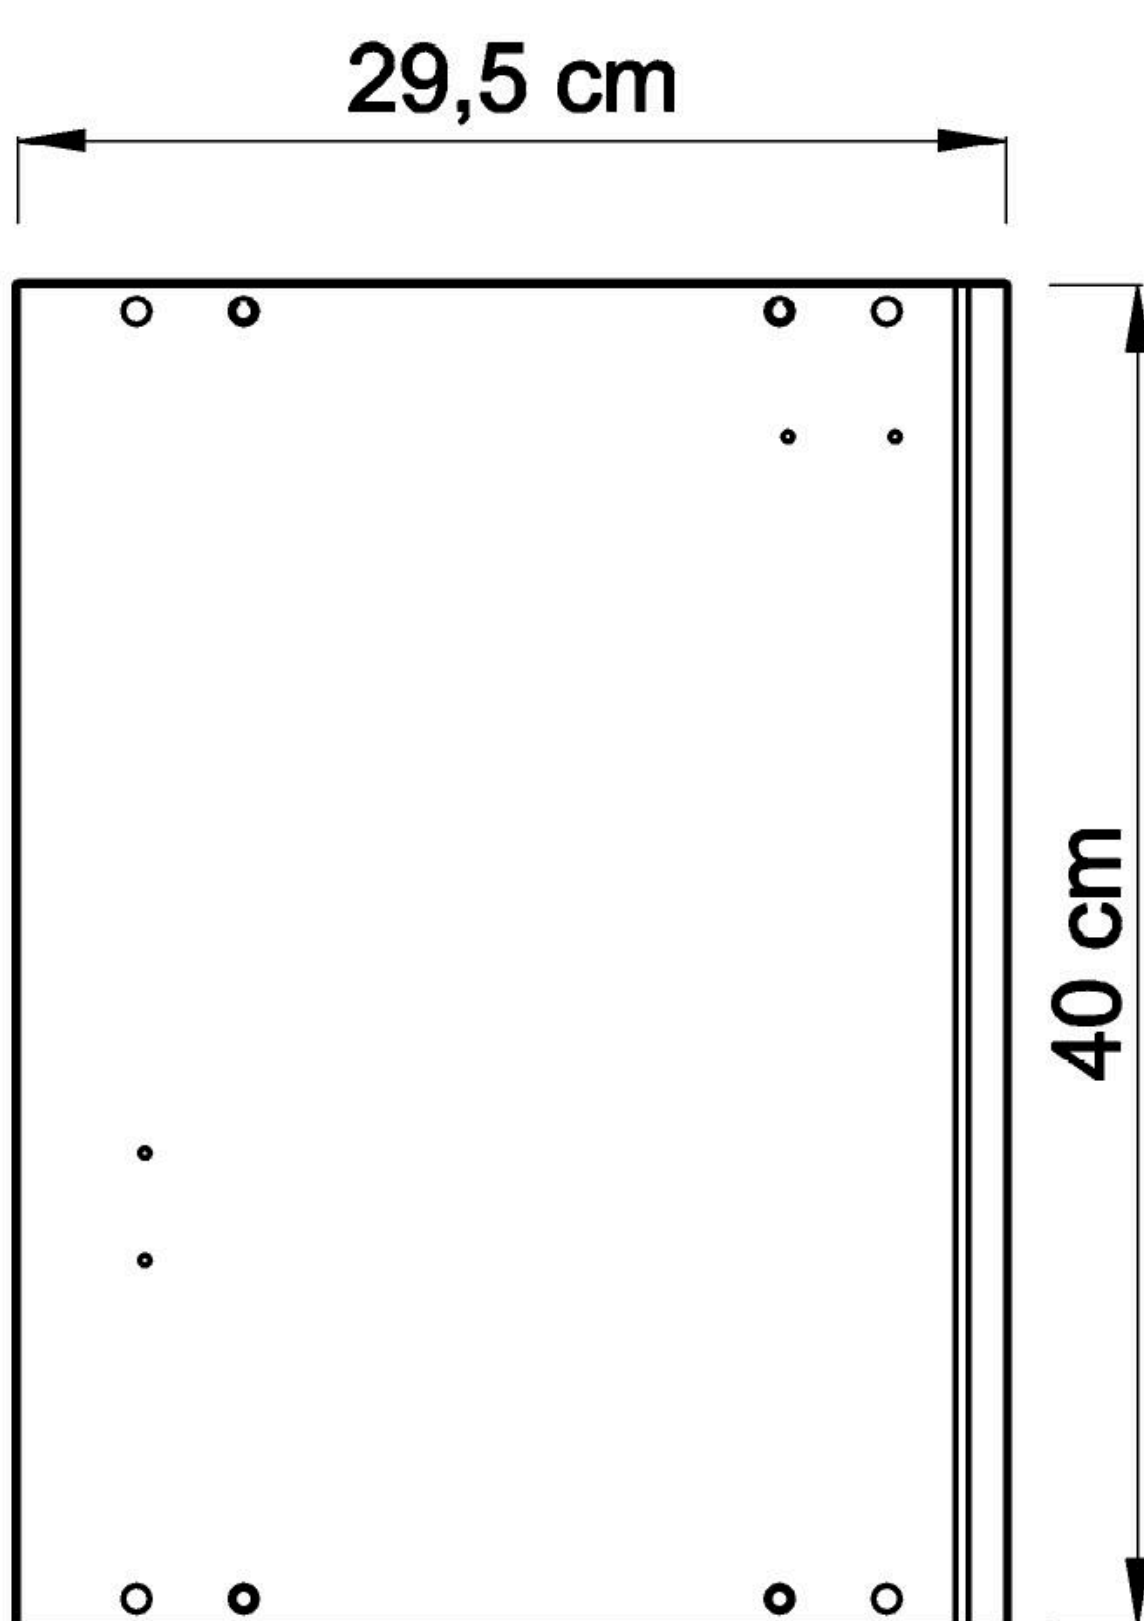


5

x1

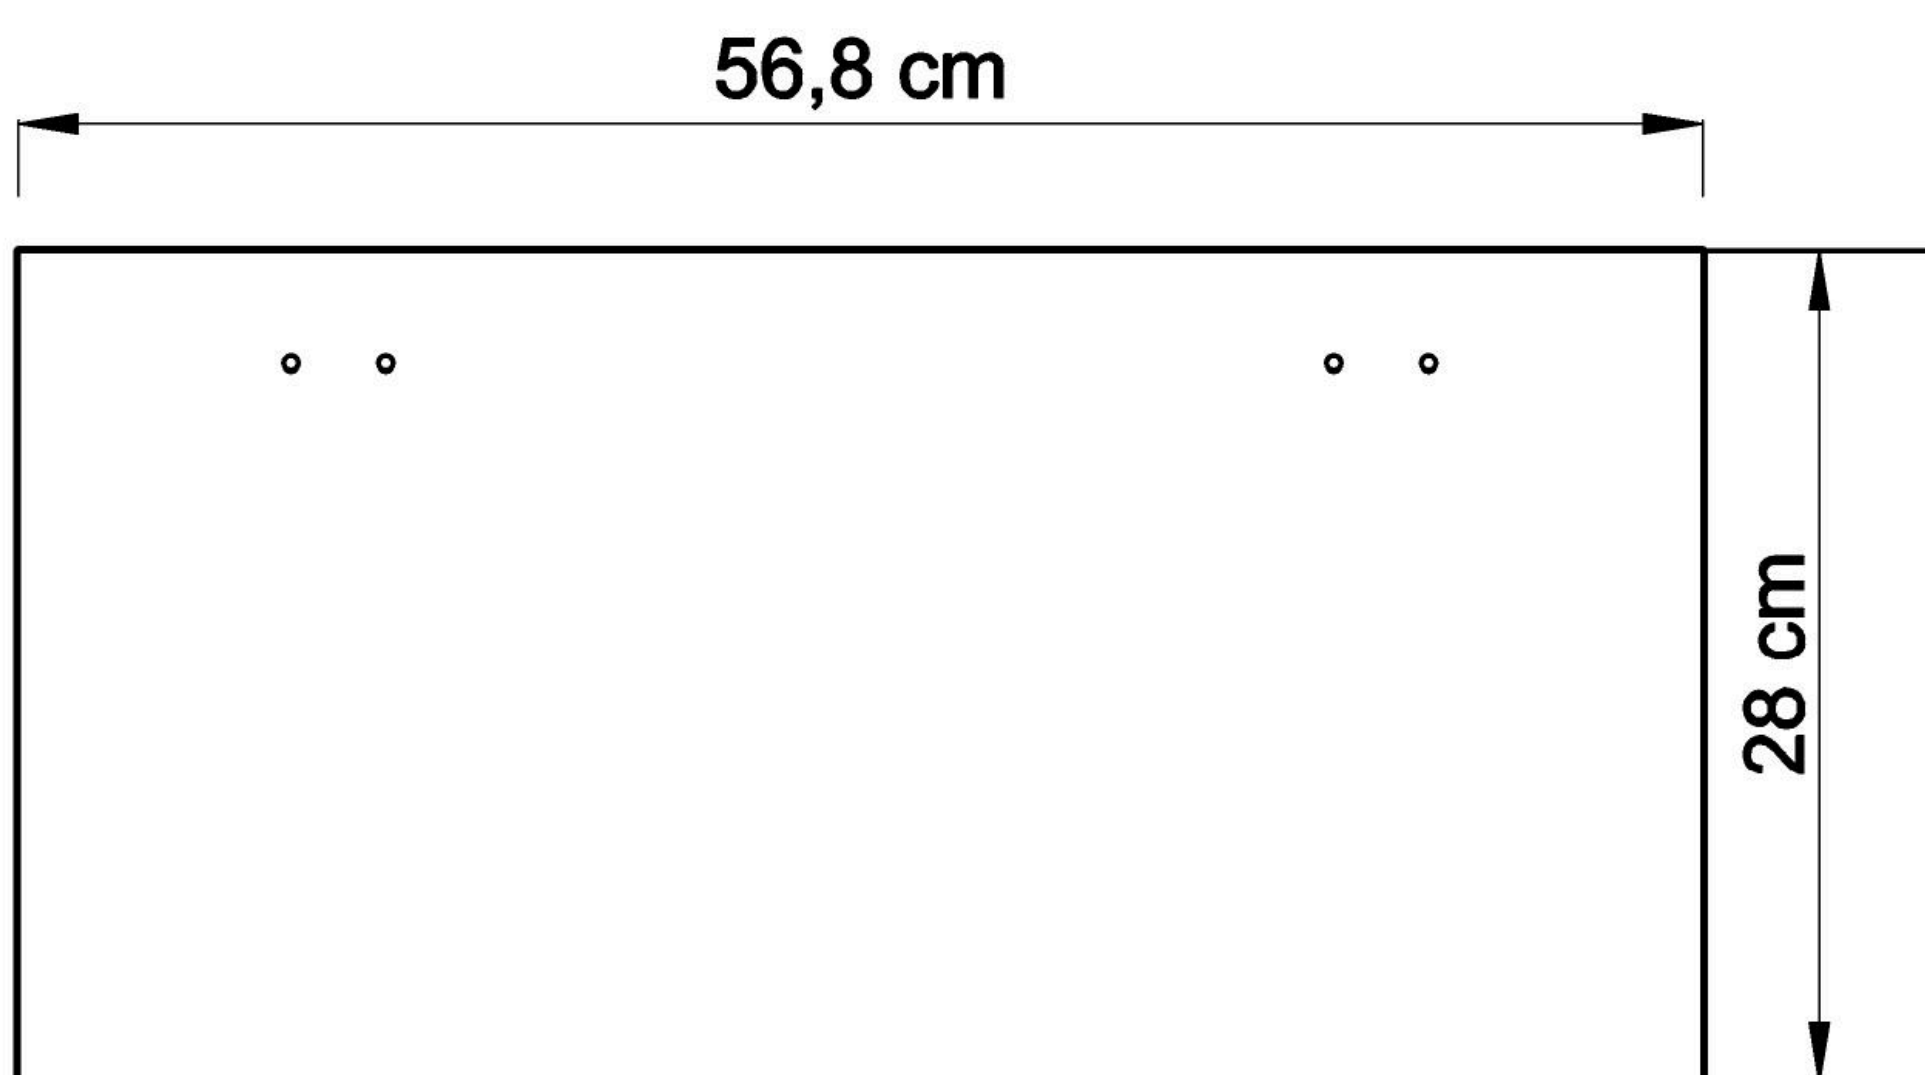













6

x1

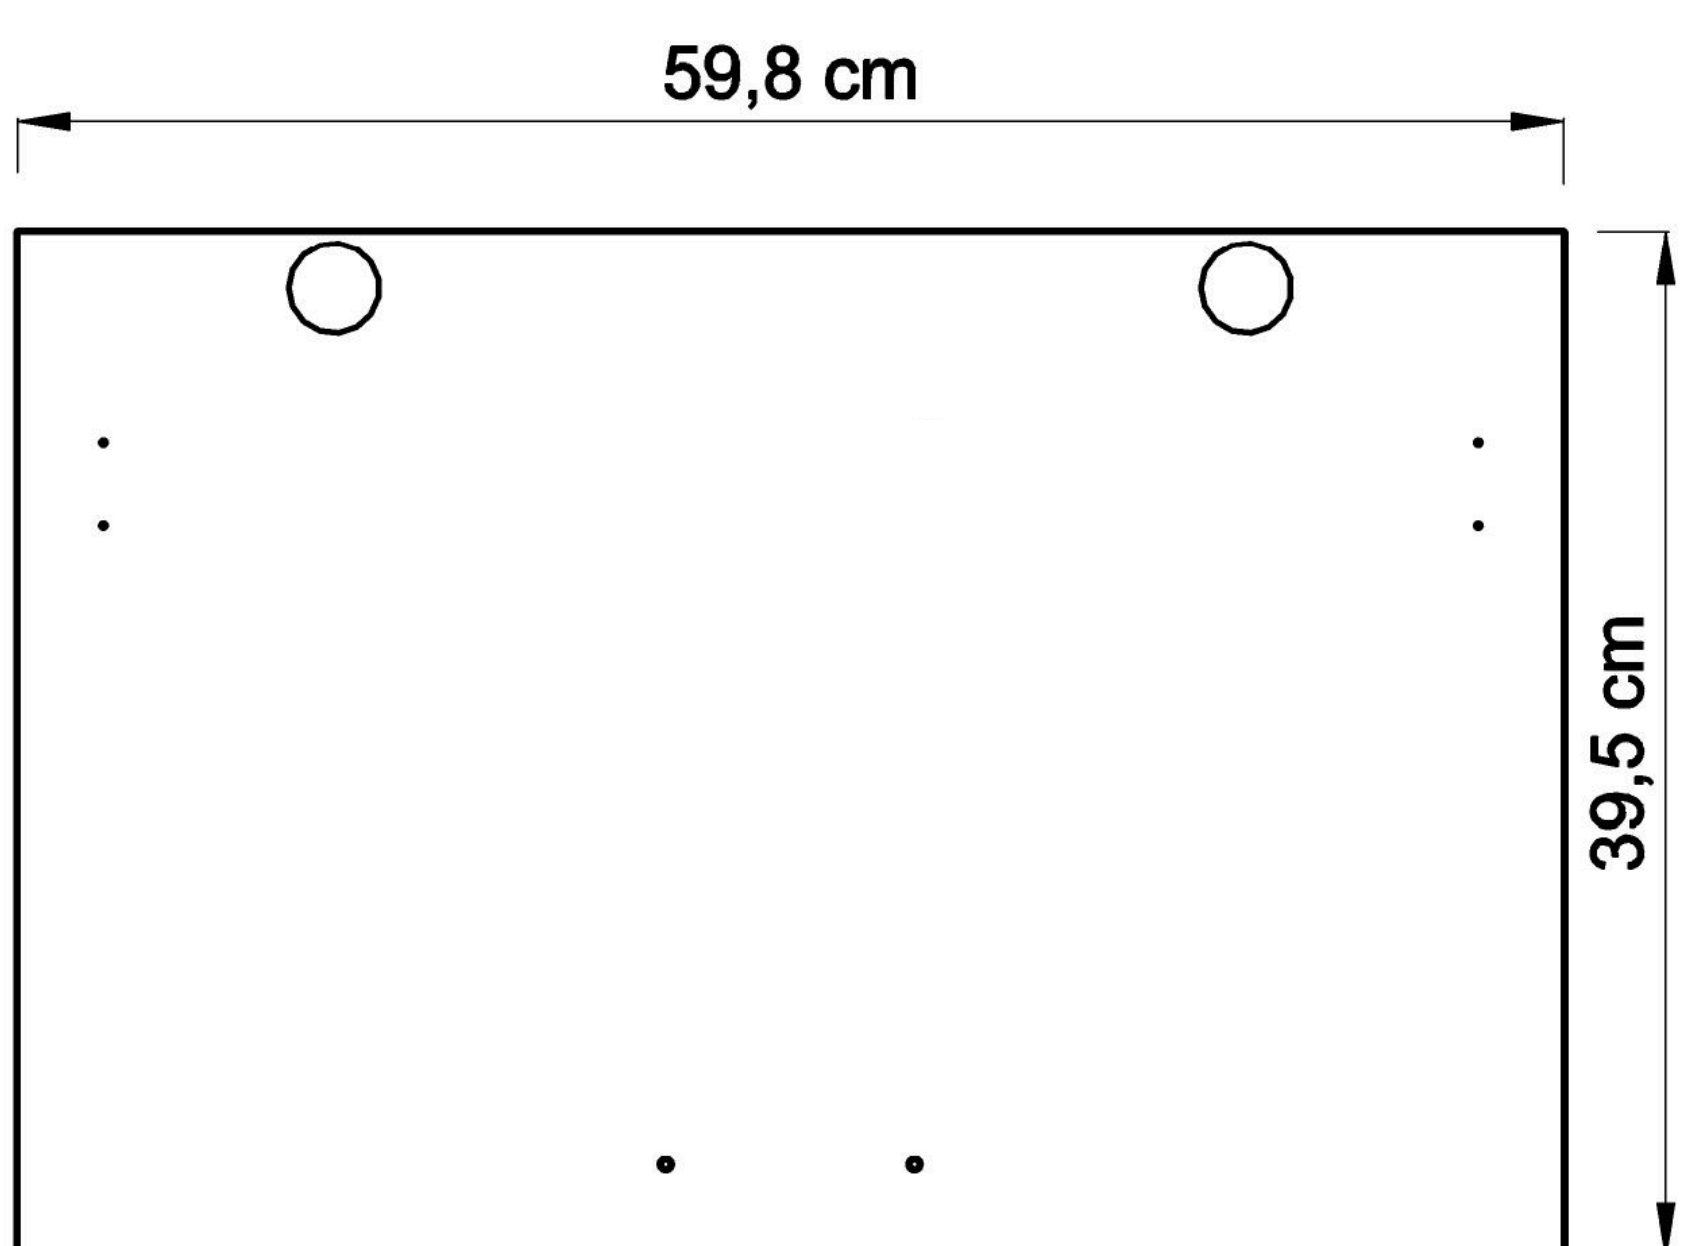



COMPONENTS - FITTINGS

Please check you have all the fittings listed below

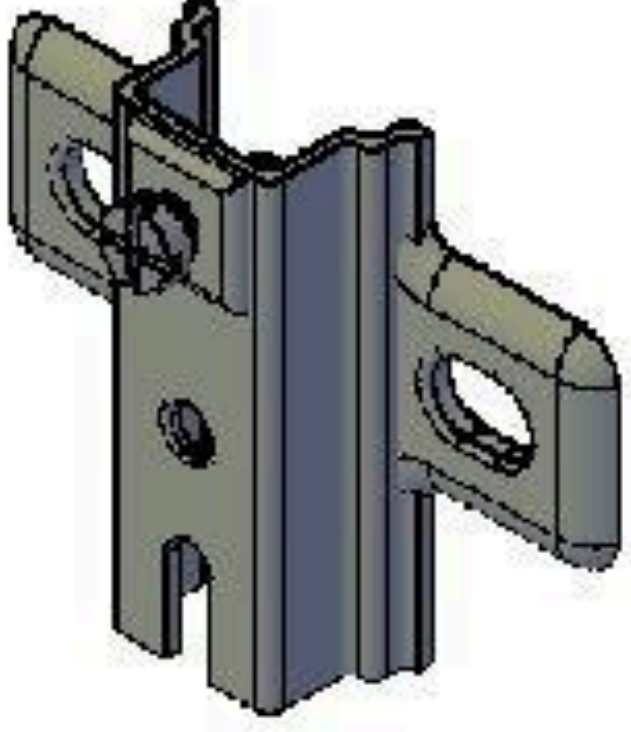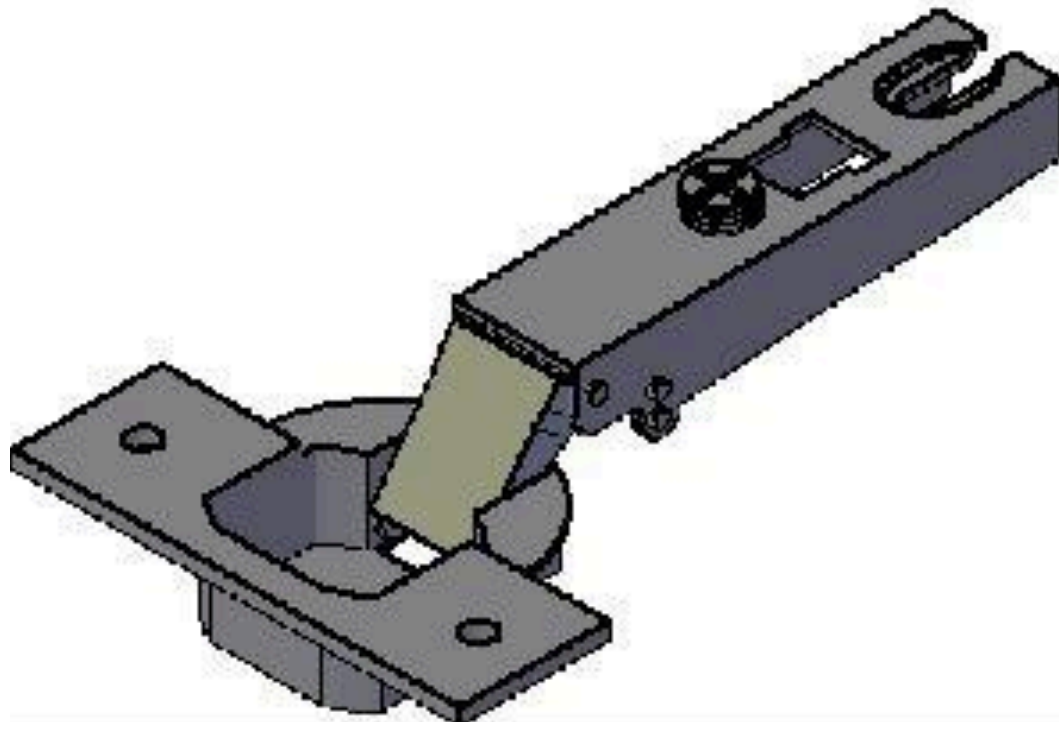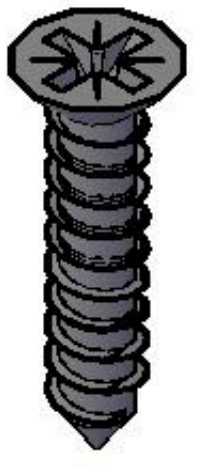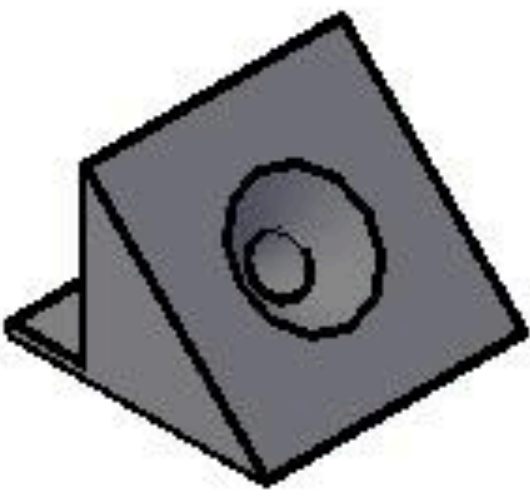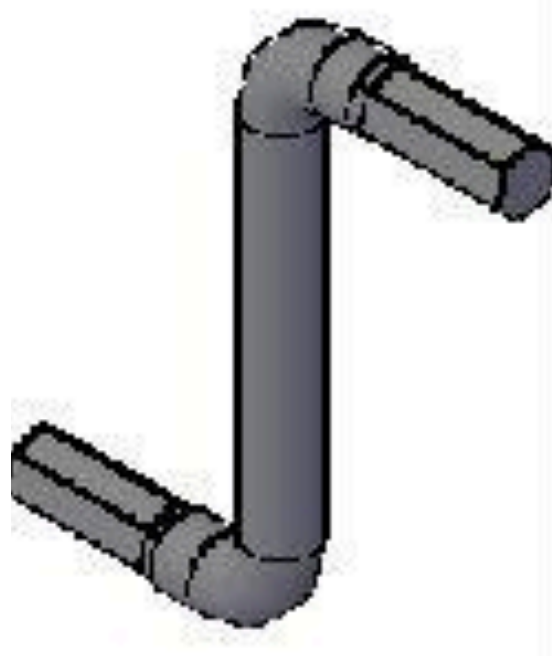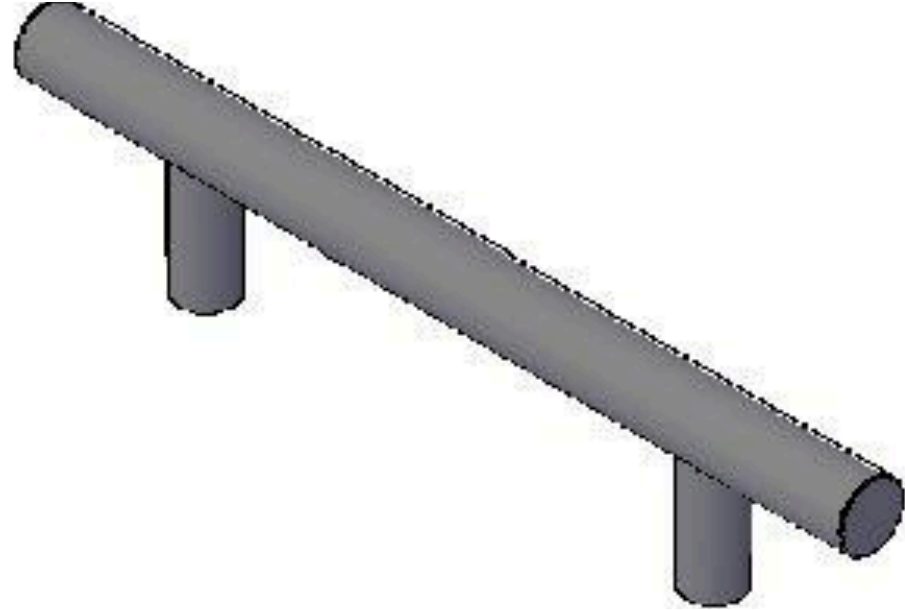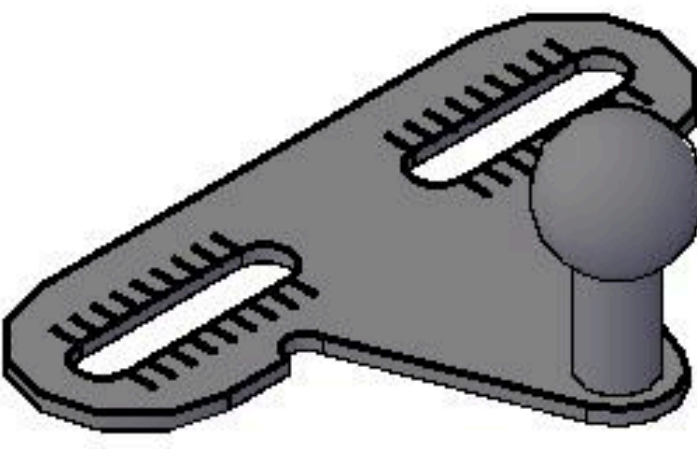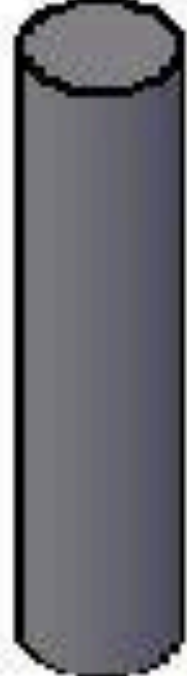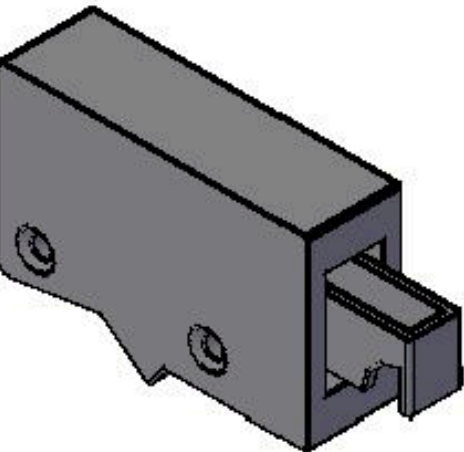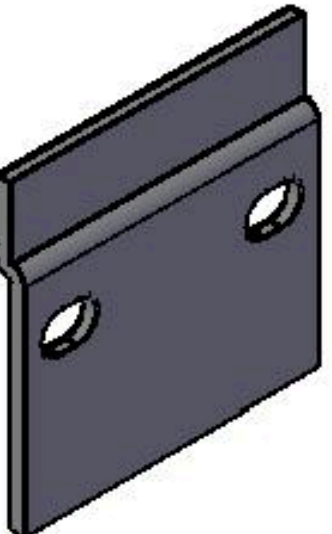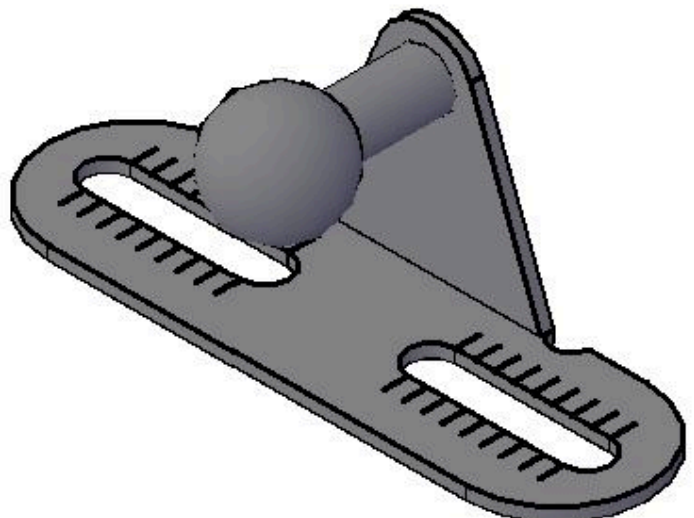
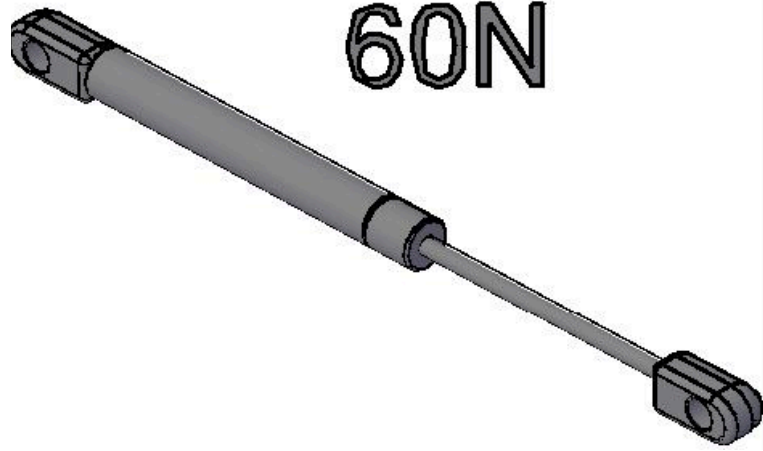
O x4  ϕ 7x16	F x2 	G2 x2 	 PAY ATTENTION: O AND F ATTACHED TO G2
H3 x16  ϕ 3x16	A4 x8 	Q7 x1 	C x8  ϕ 7x50
S1 x8 	H9 x4 US 031.03  ϕ 4x30	J9 x2  ϕ 3x25	U7 x1 
H x4 US 031.03  ϕ 3.5x13	W x12 	Y2 x2 	A x8 
Z8 x2 	Z9 x2 	Y3 x2 	Y4 x2  60N

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

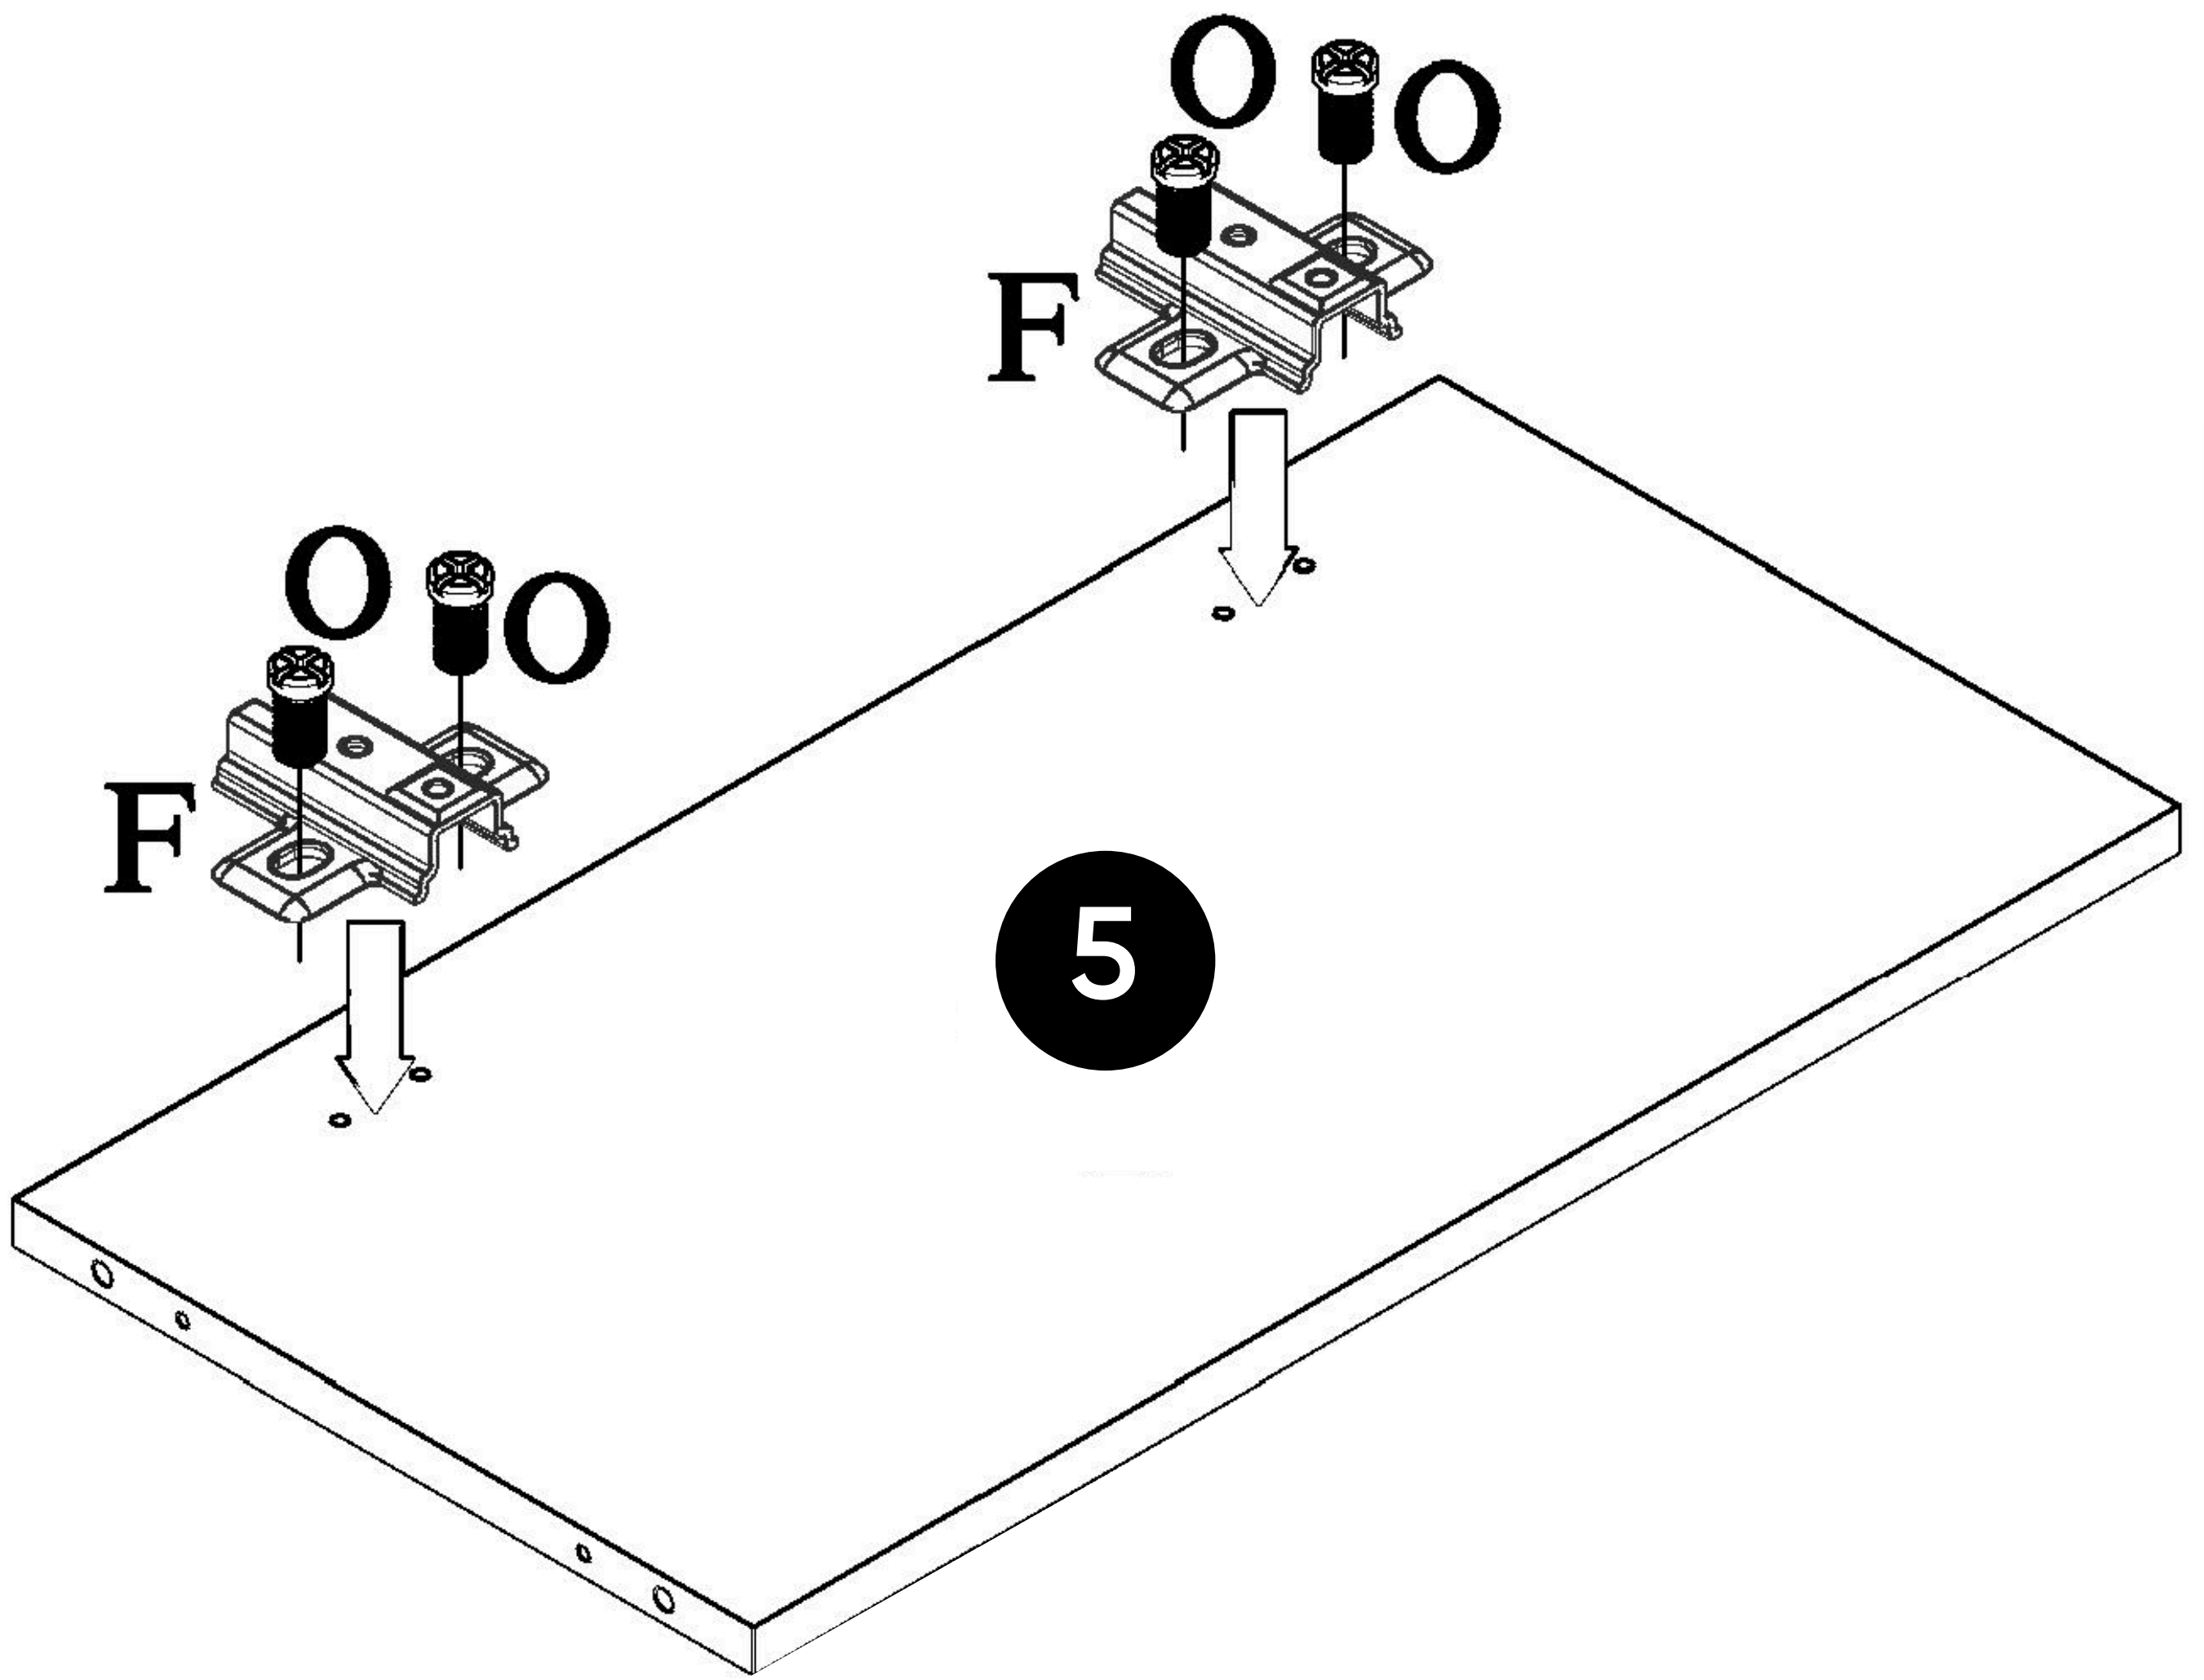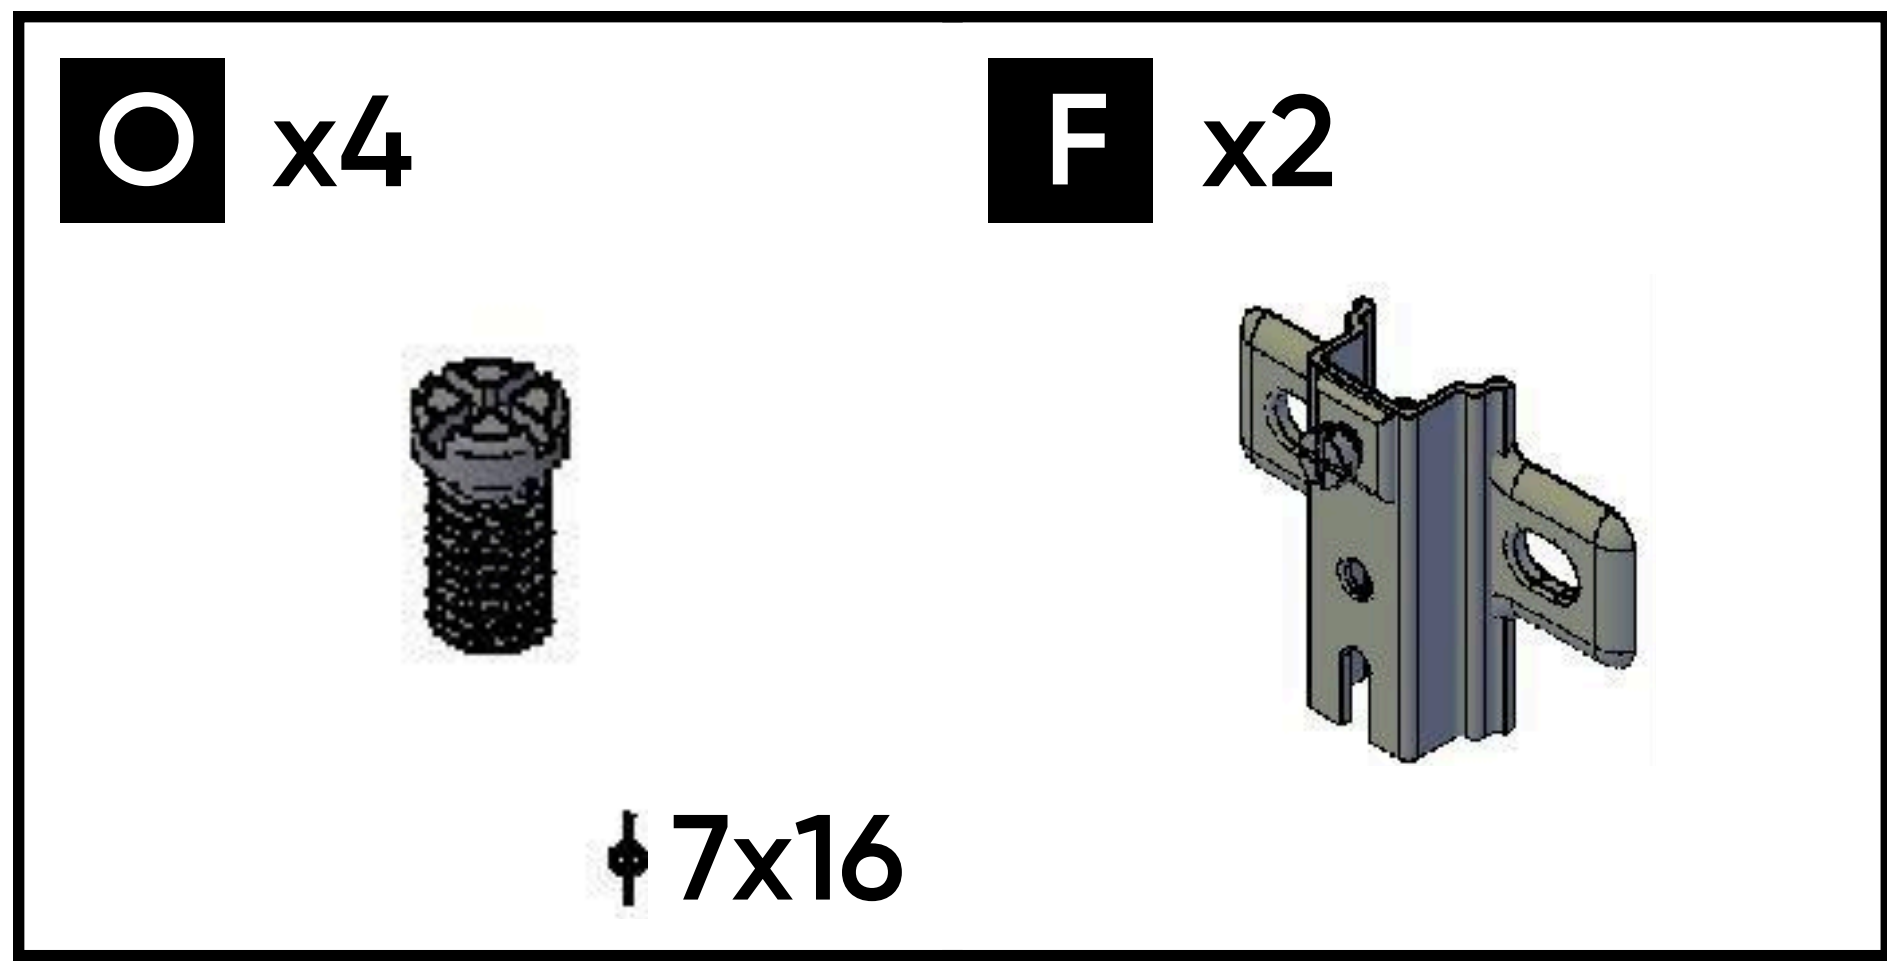


STEP - 2

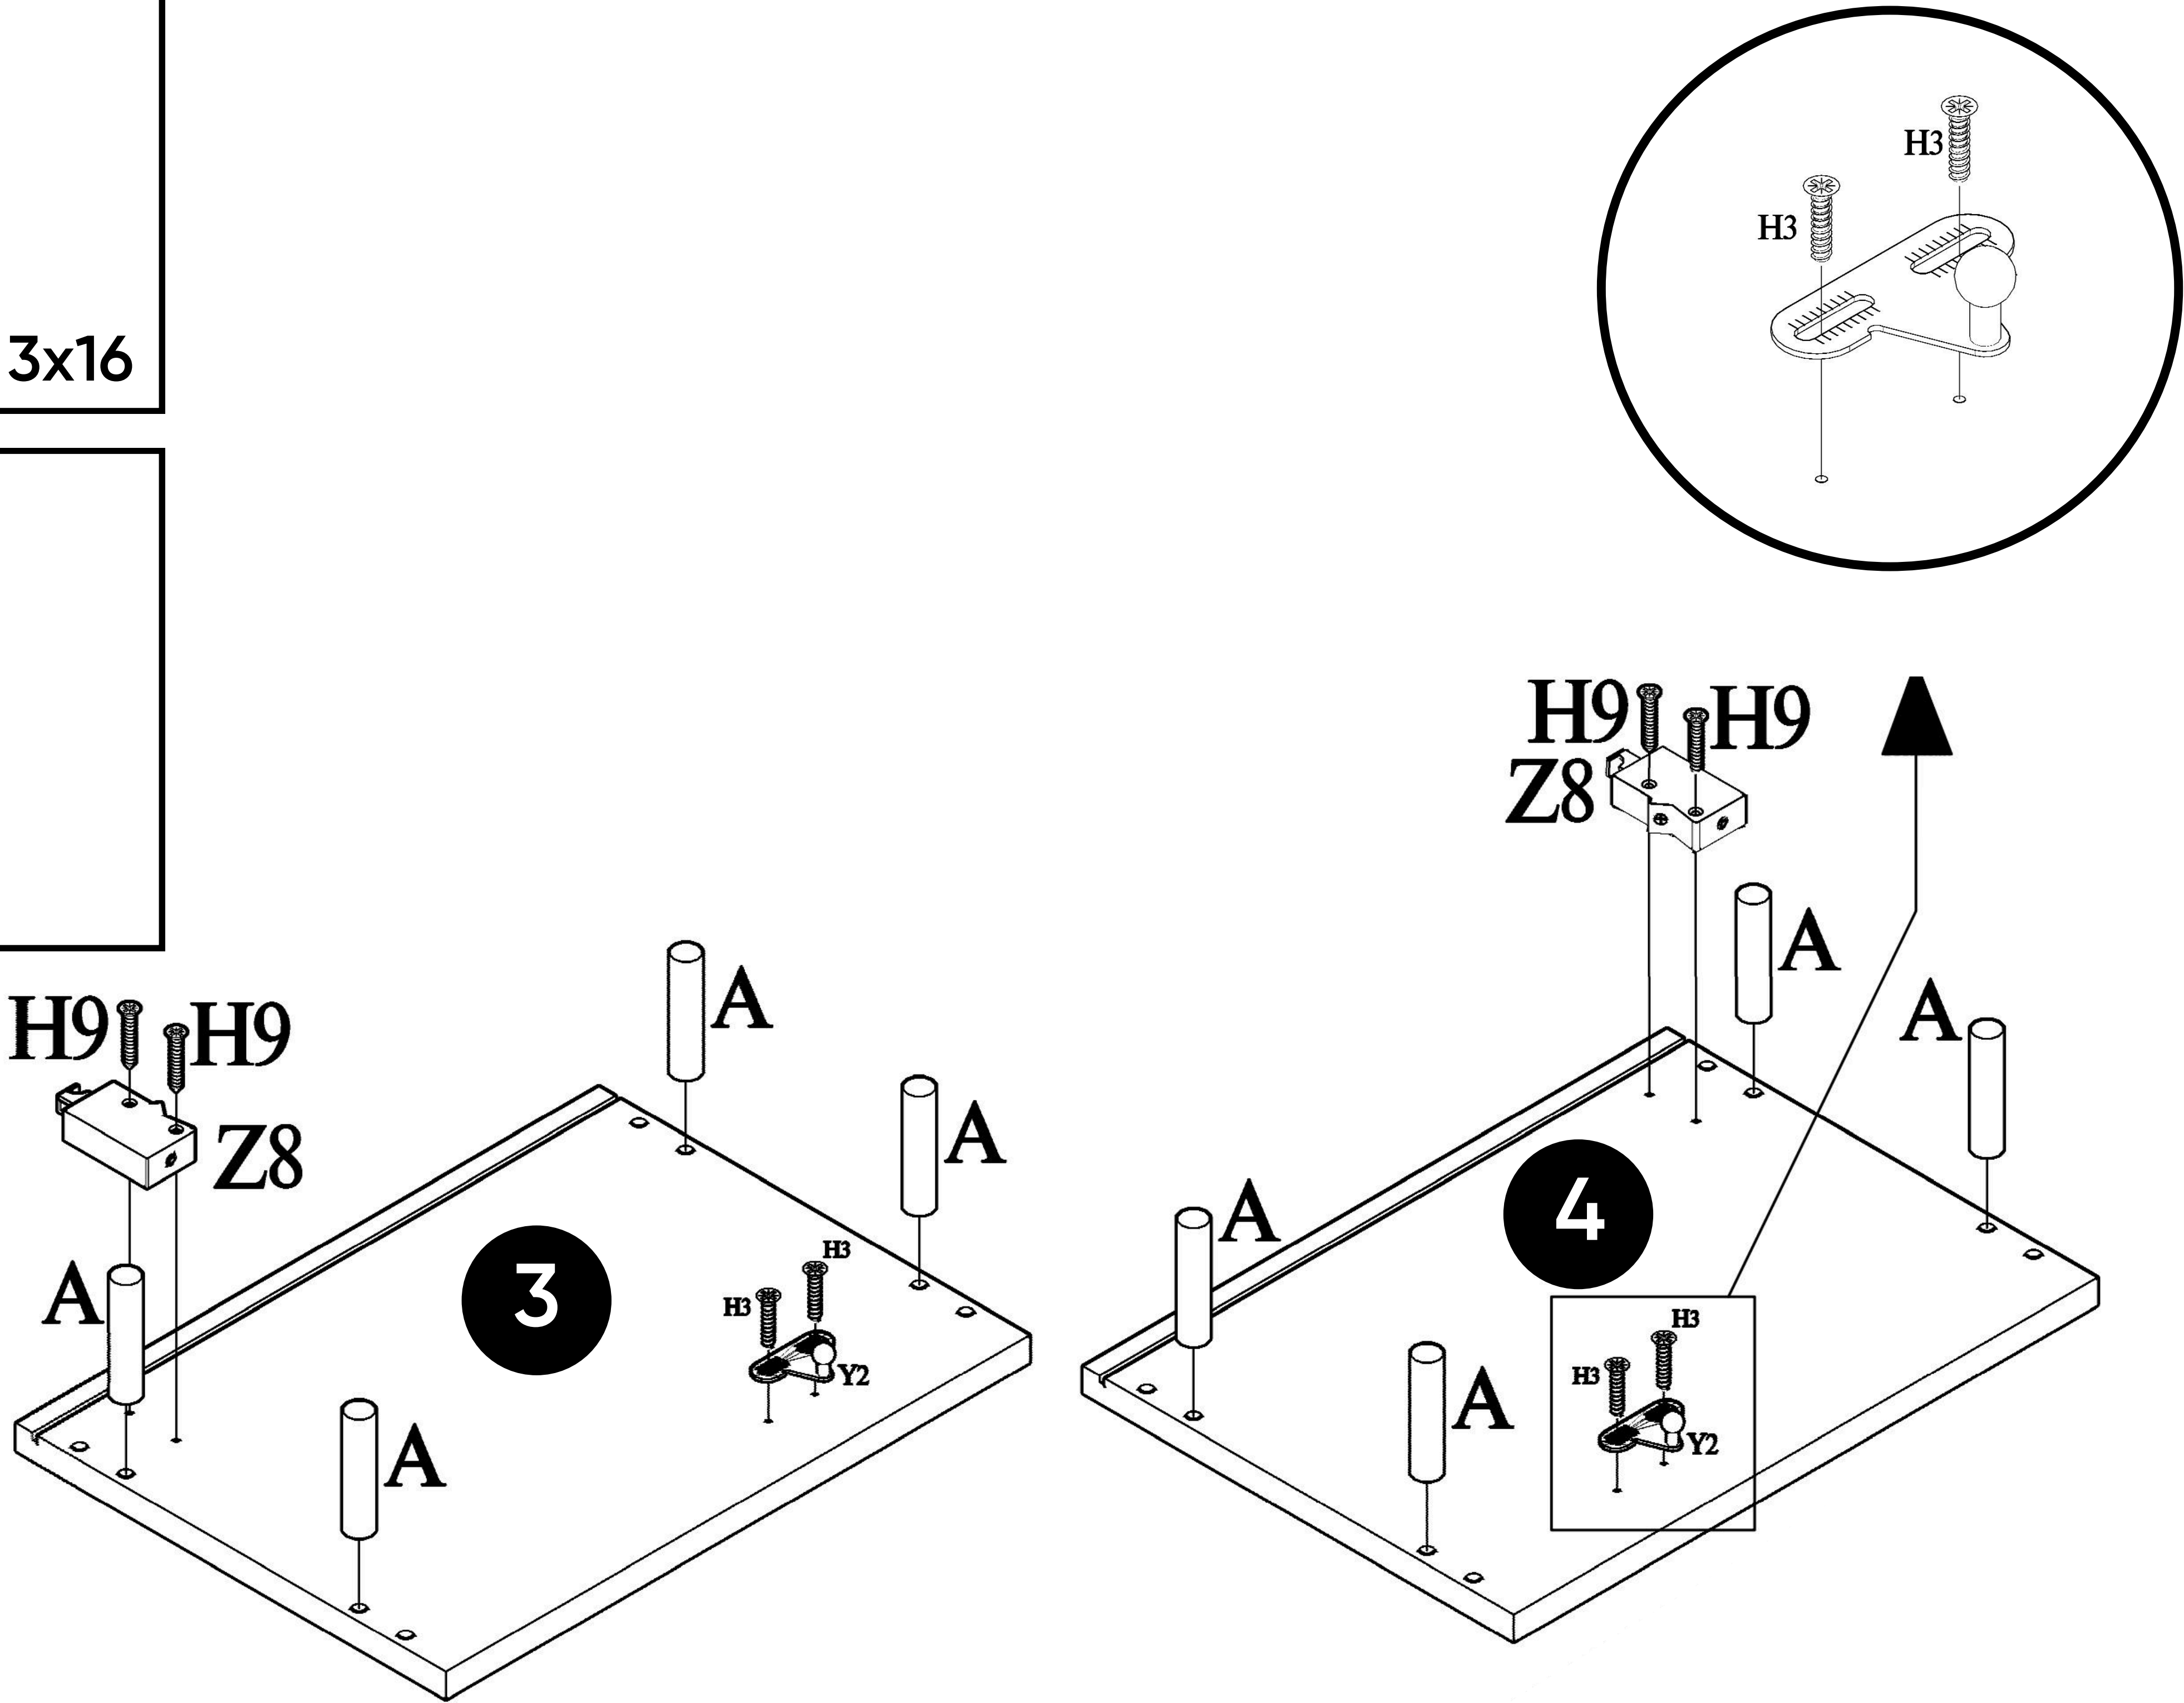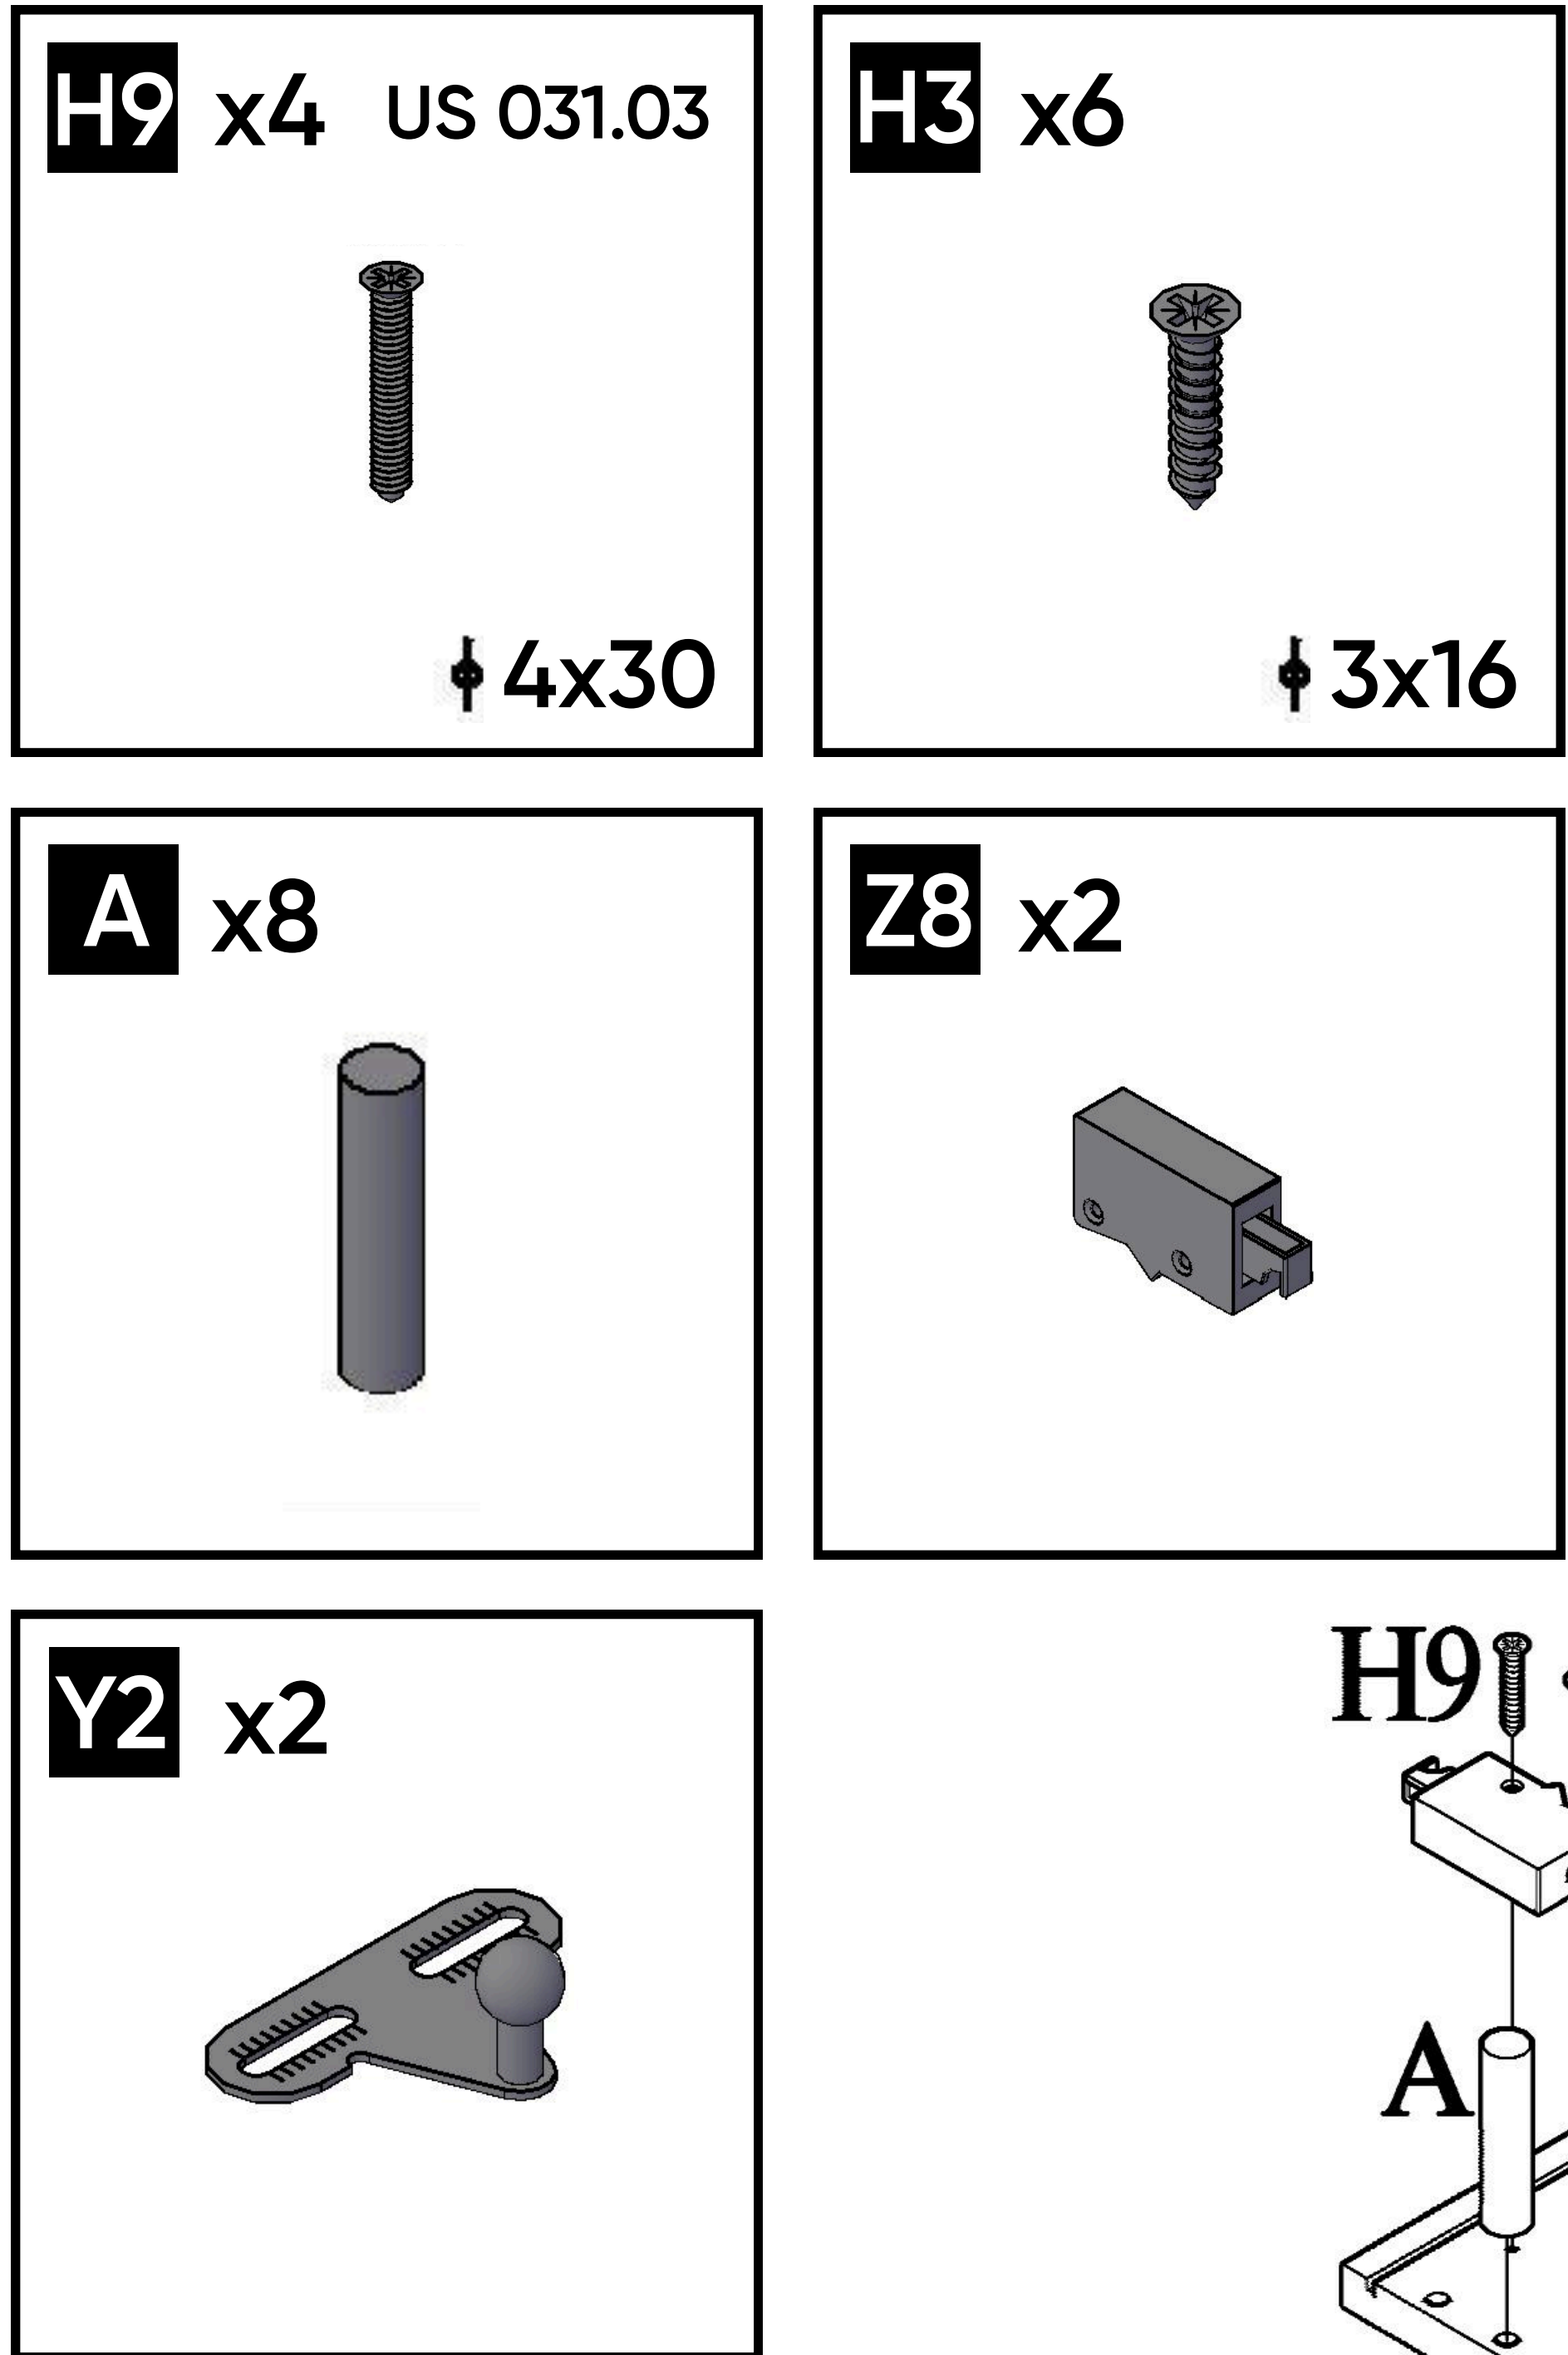


STEP - 3

Q7 x1

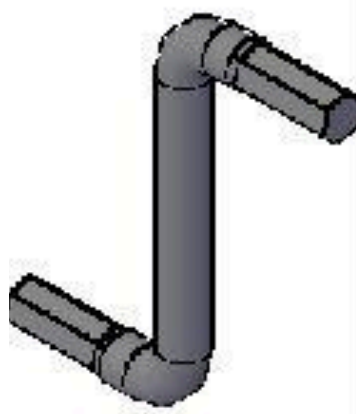


S1 x8

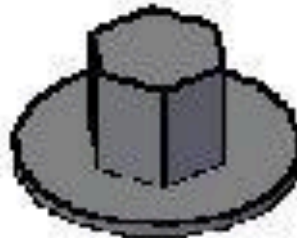


C x8





φ 7x50

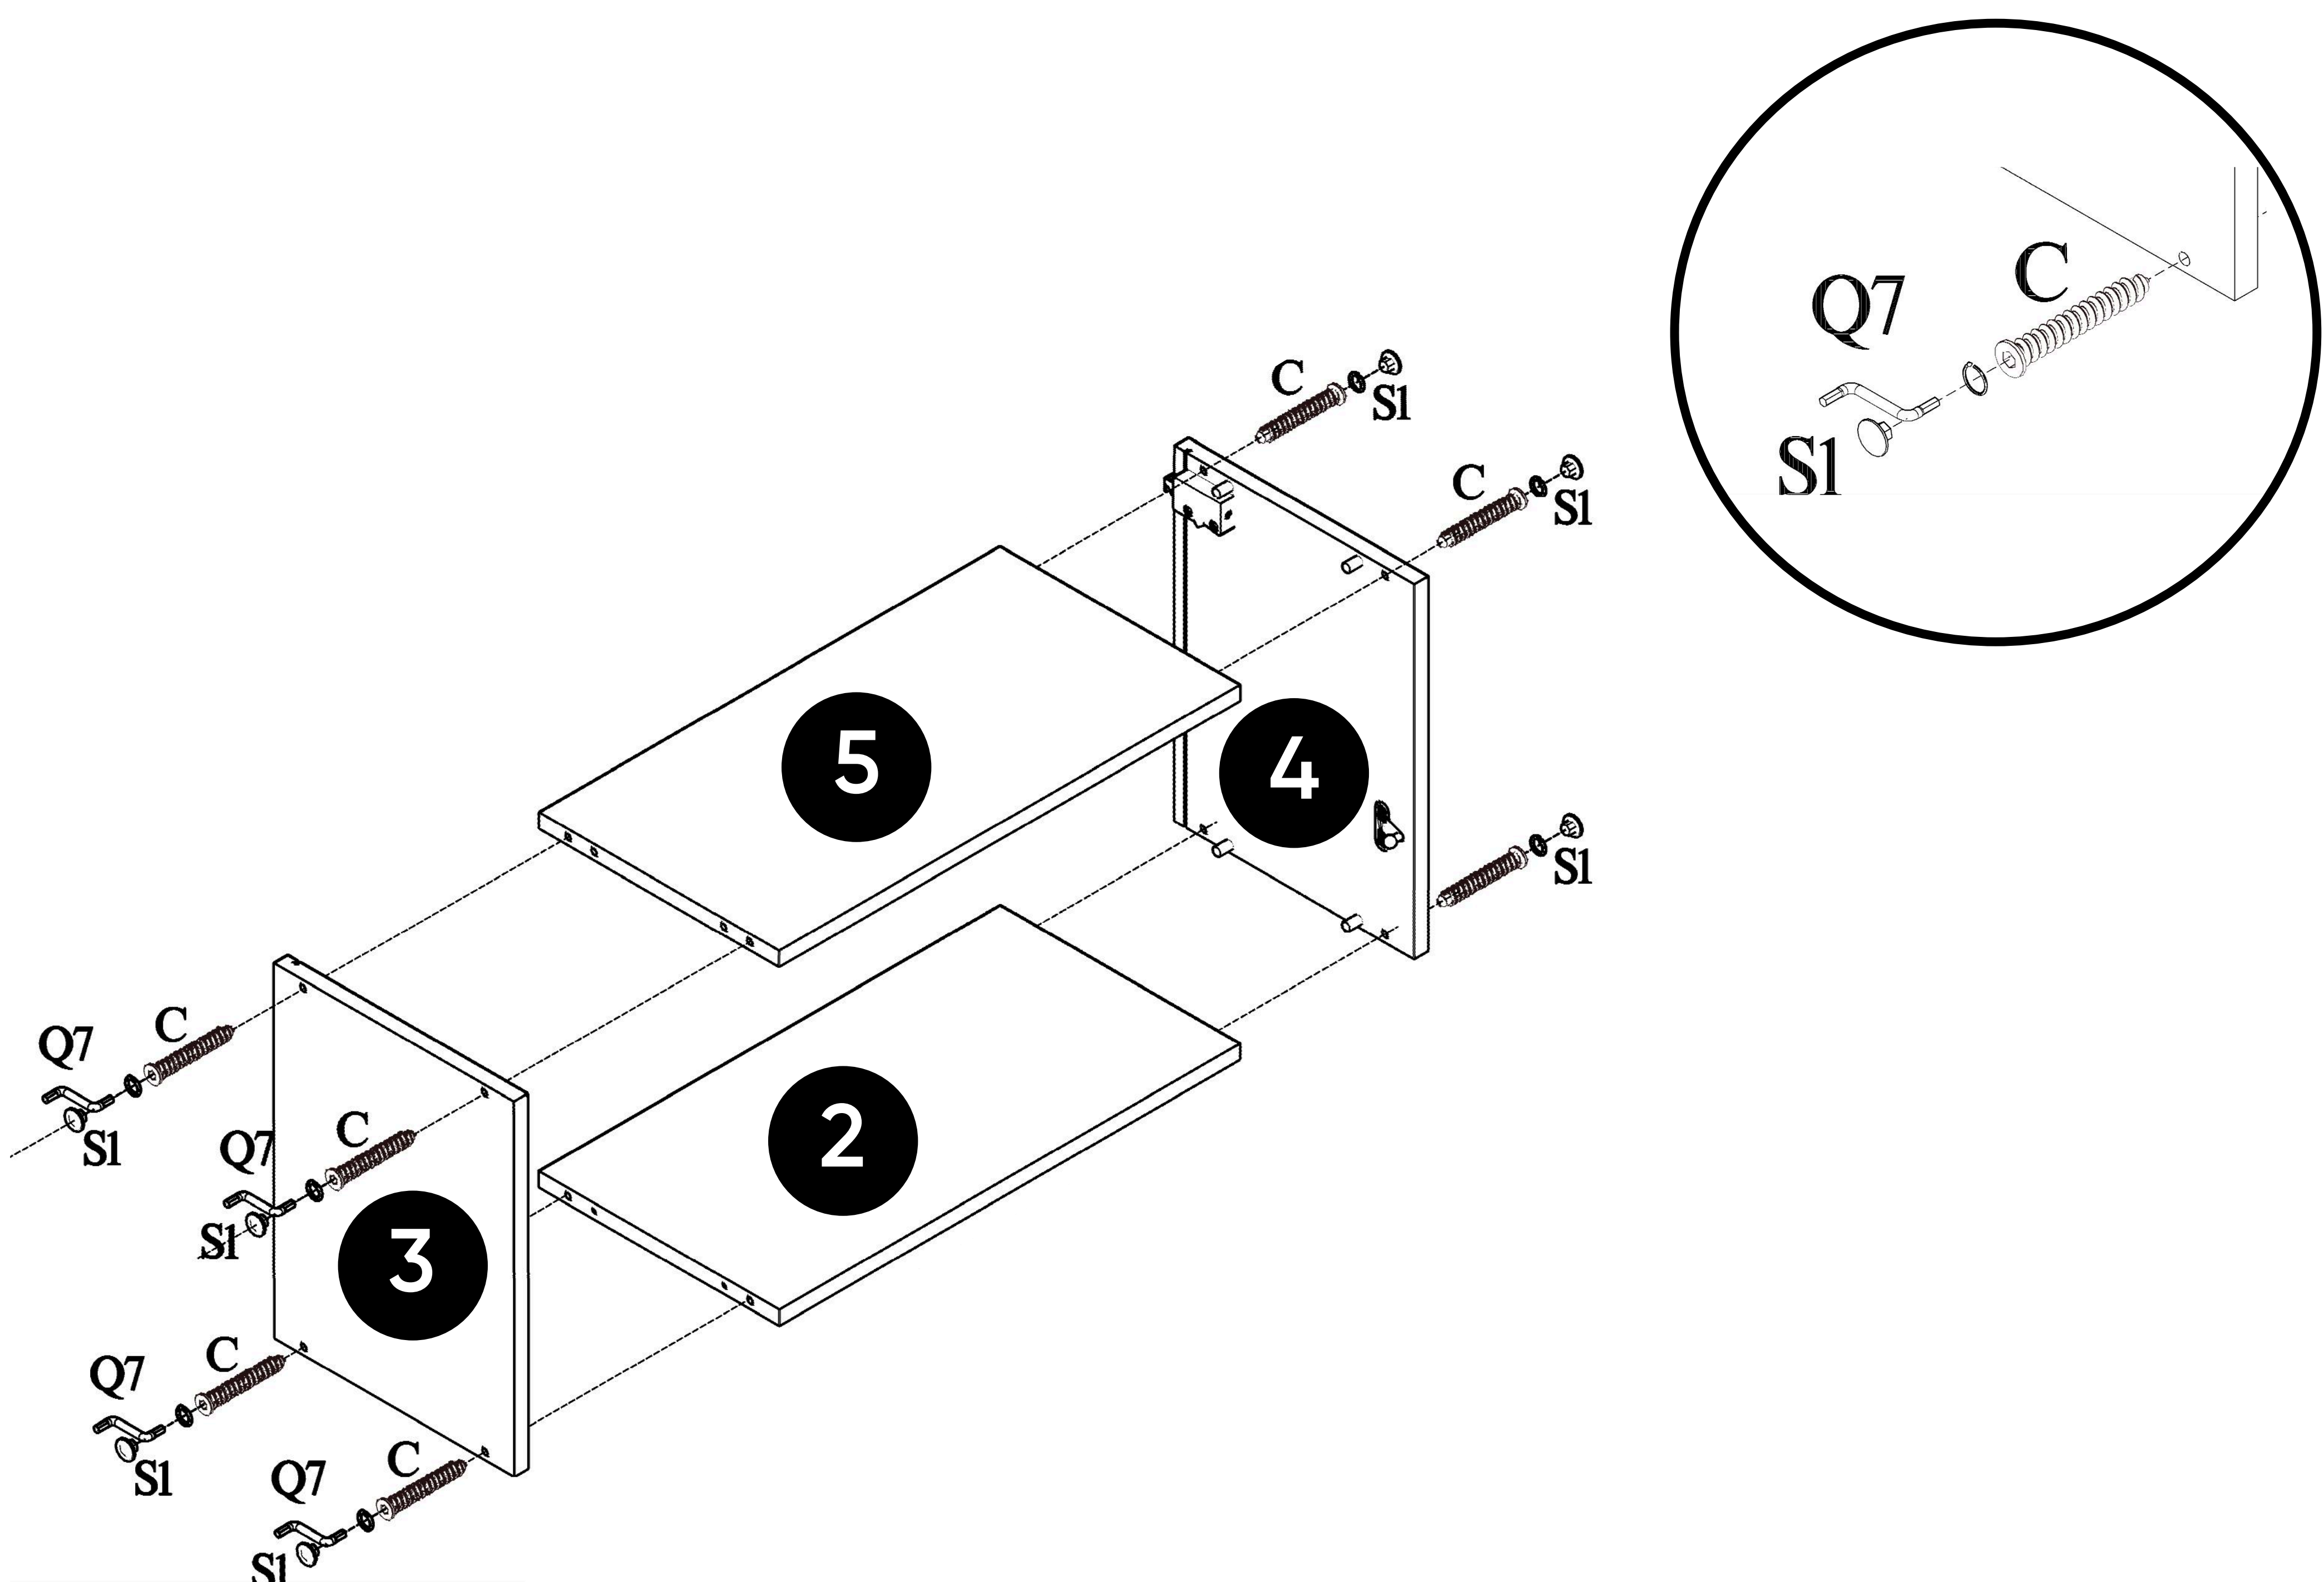





STEP - 4

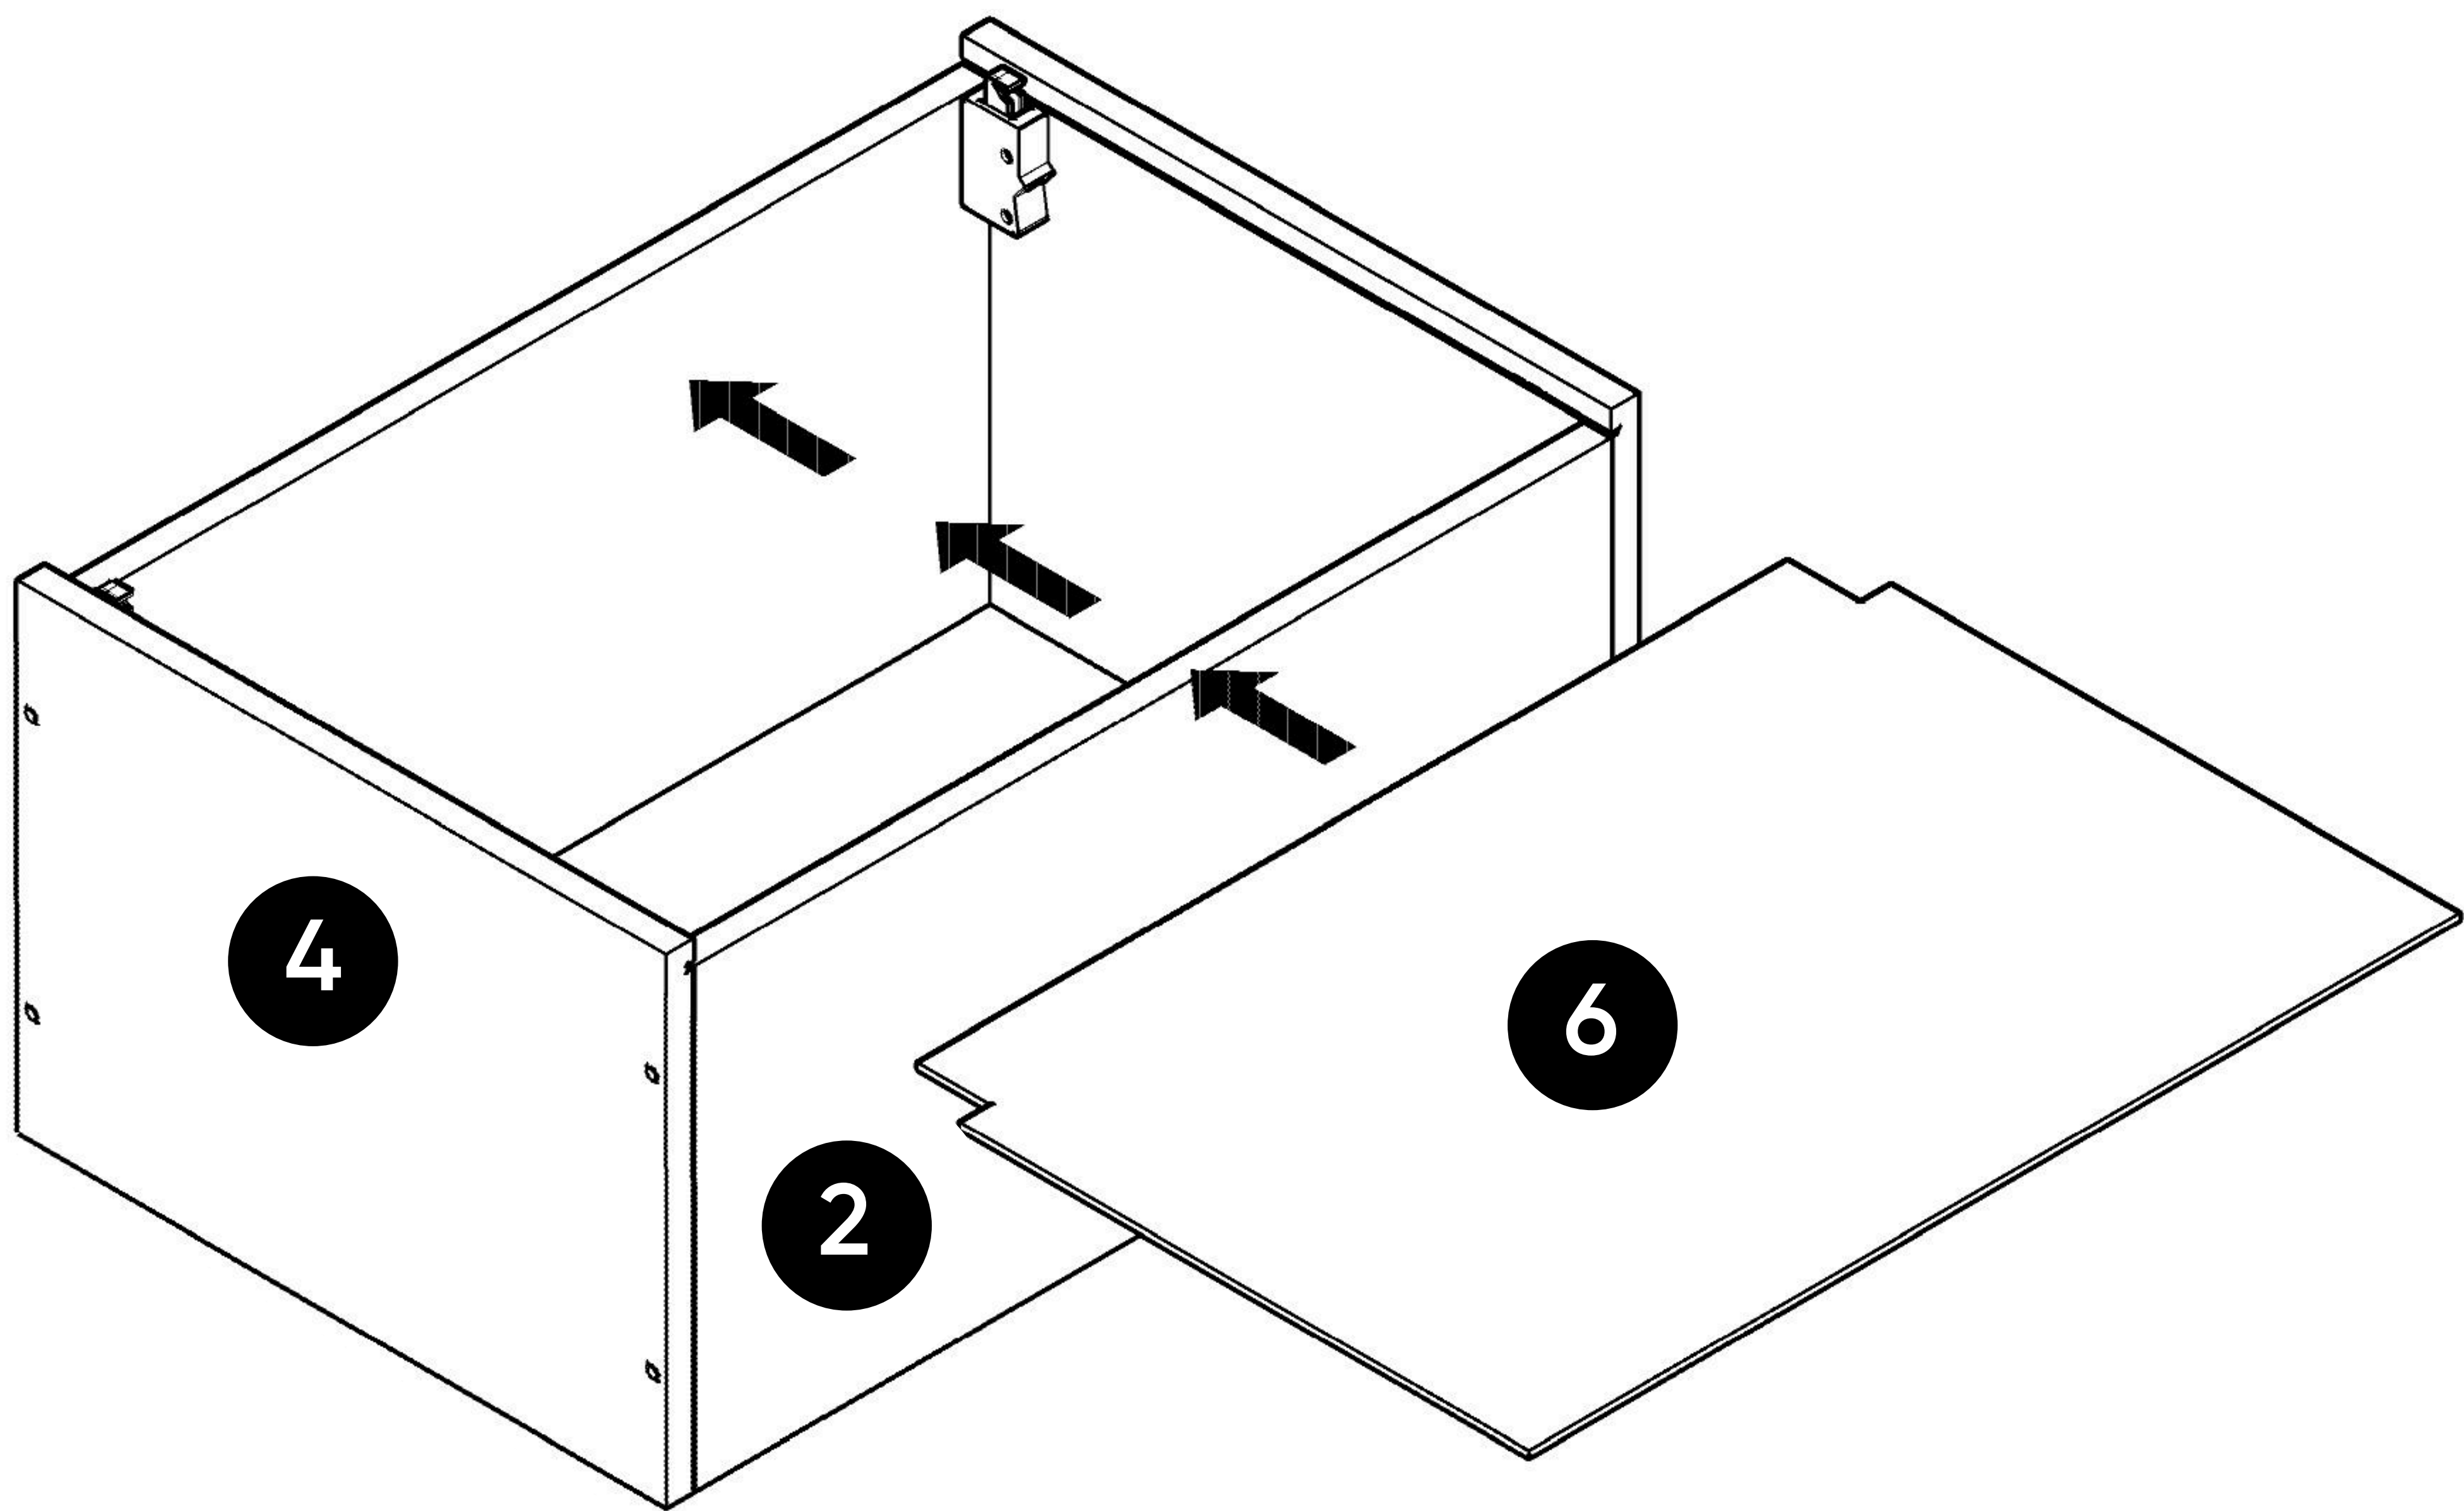





STEP - 5

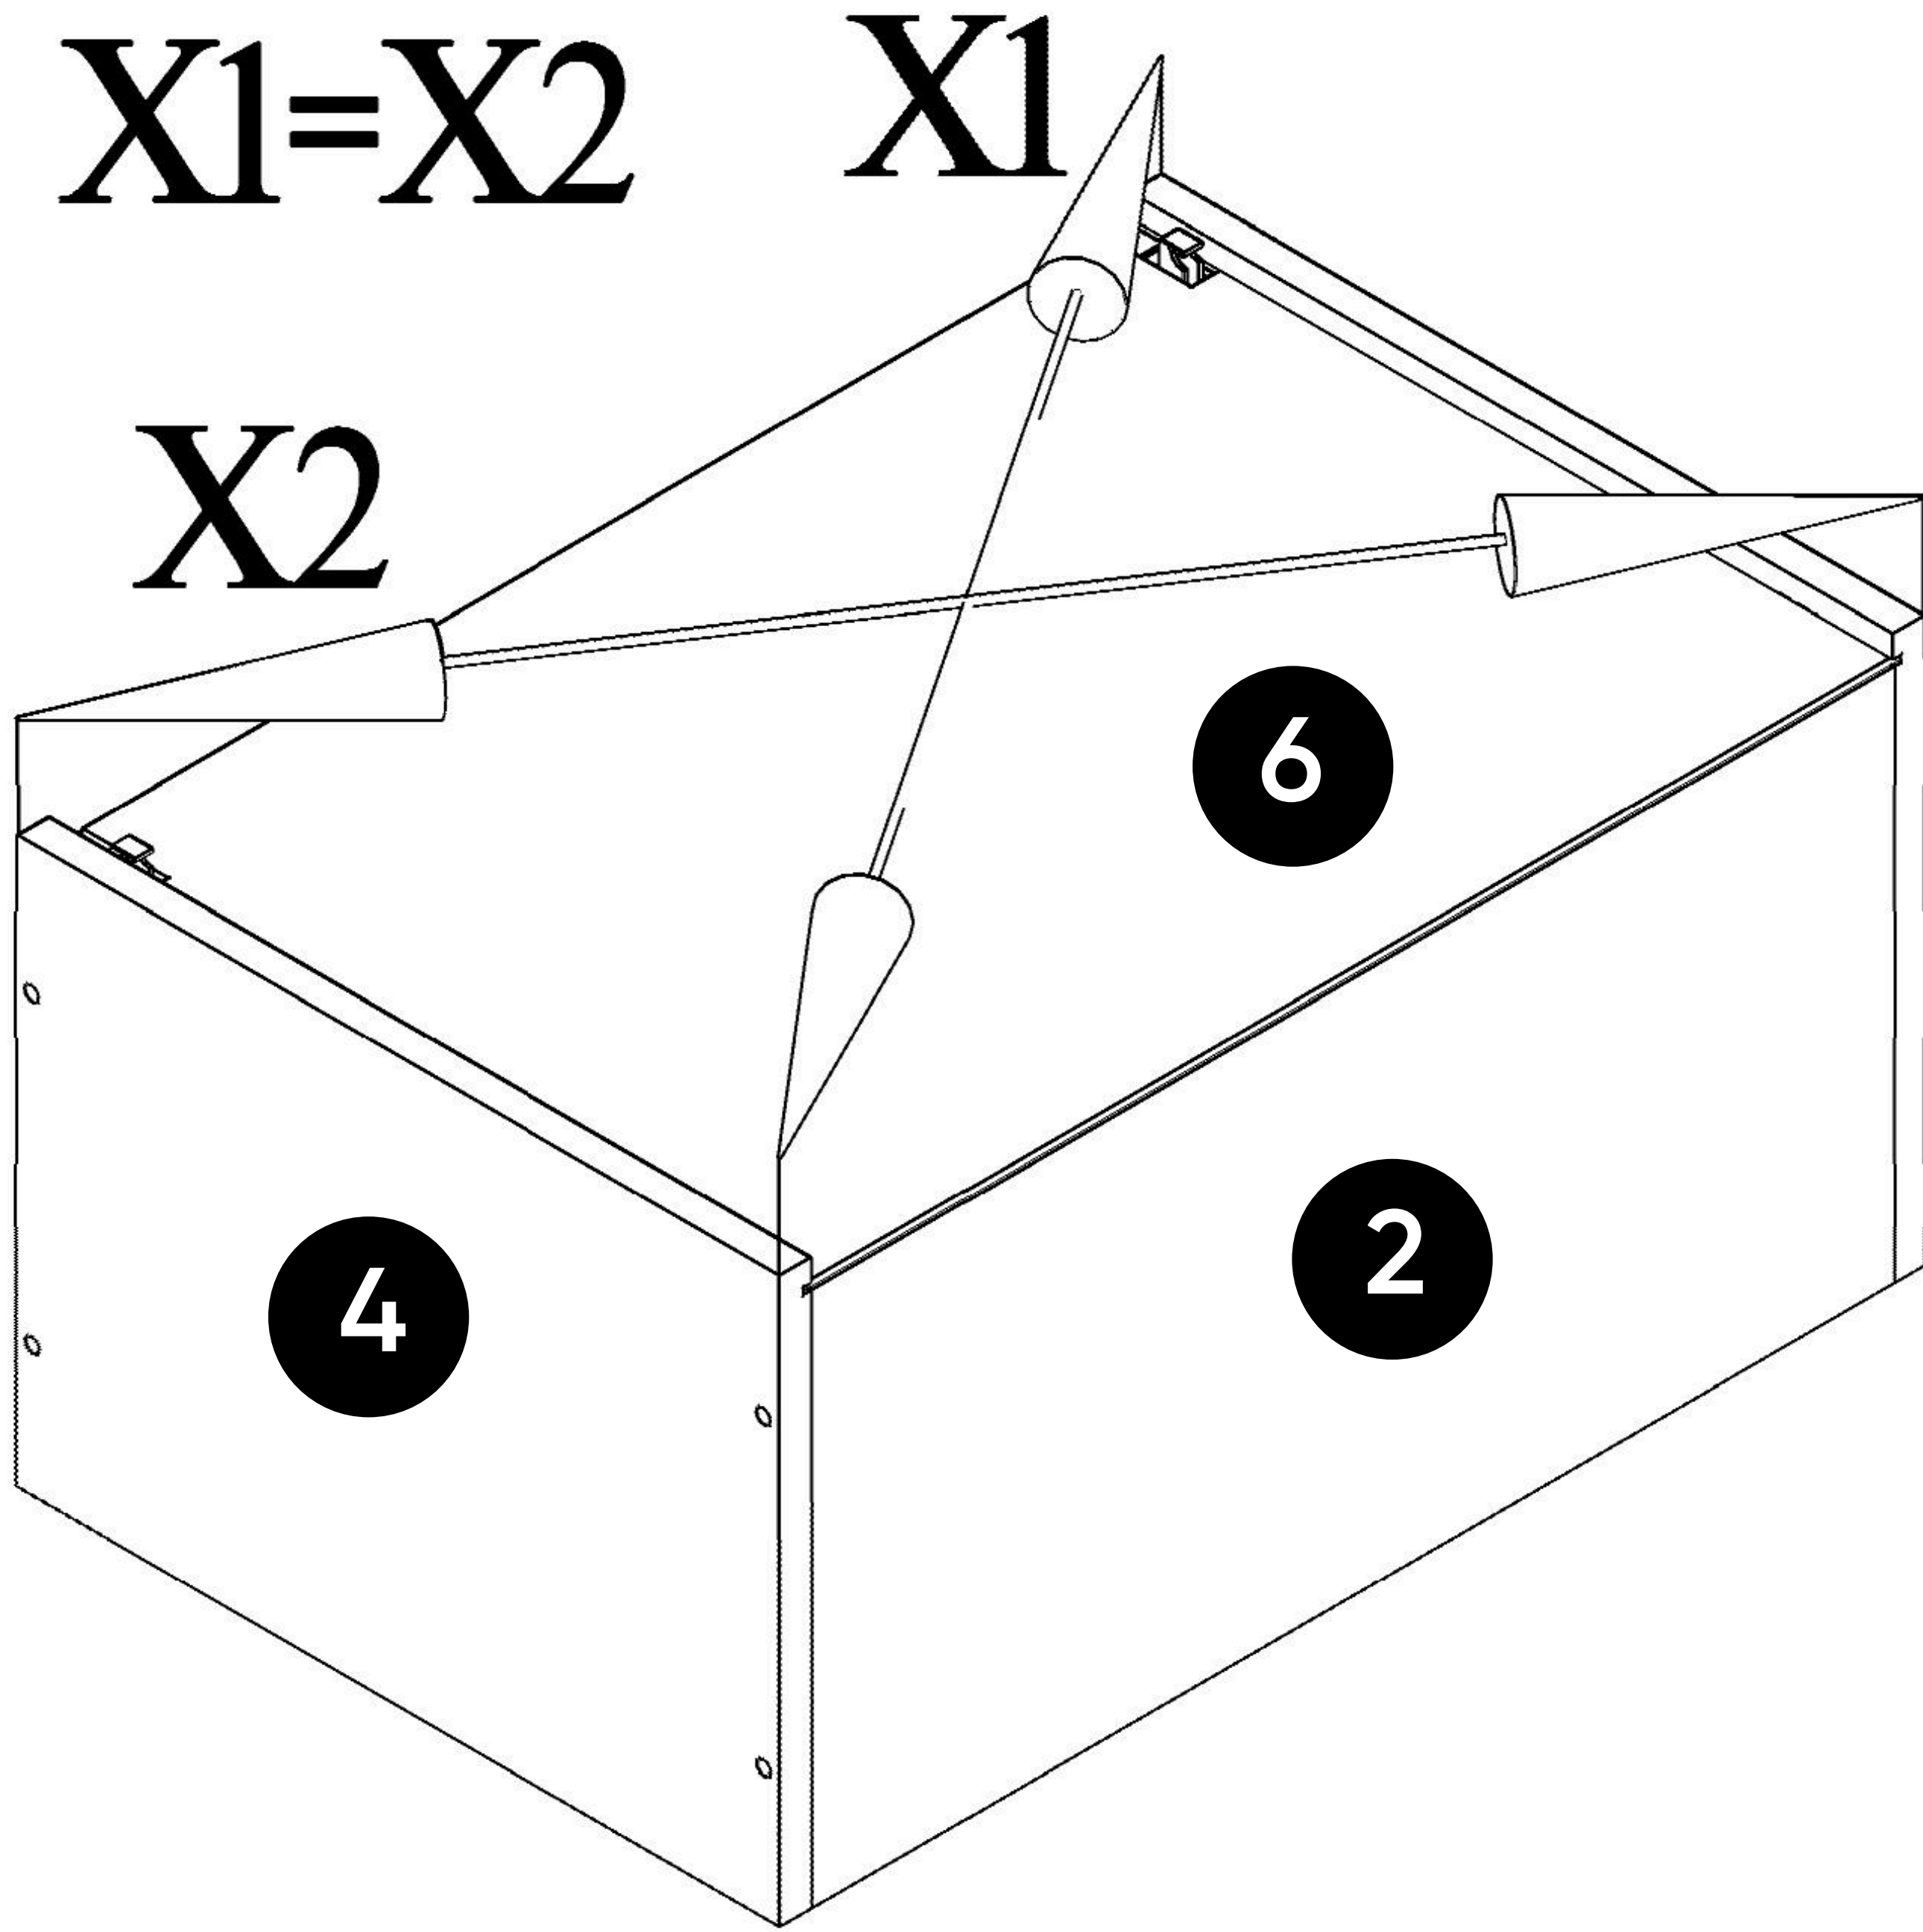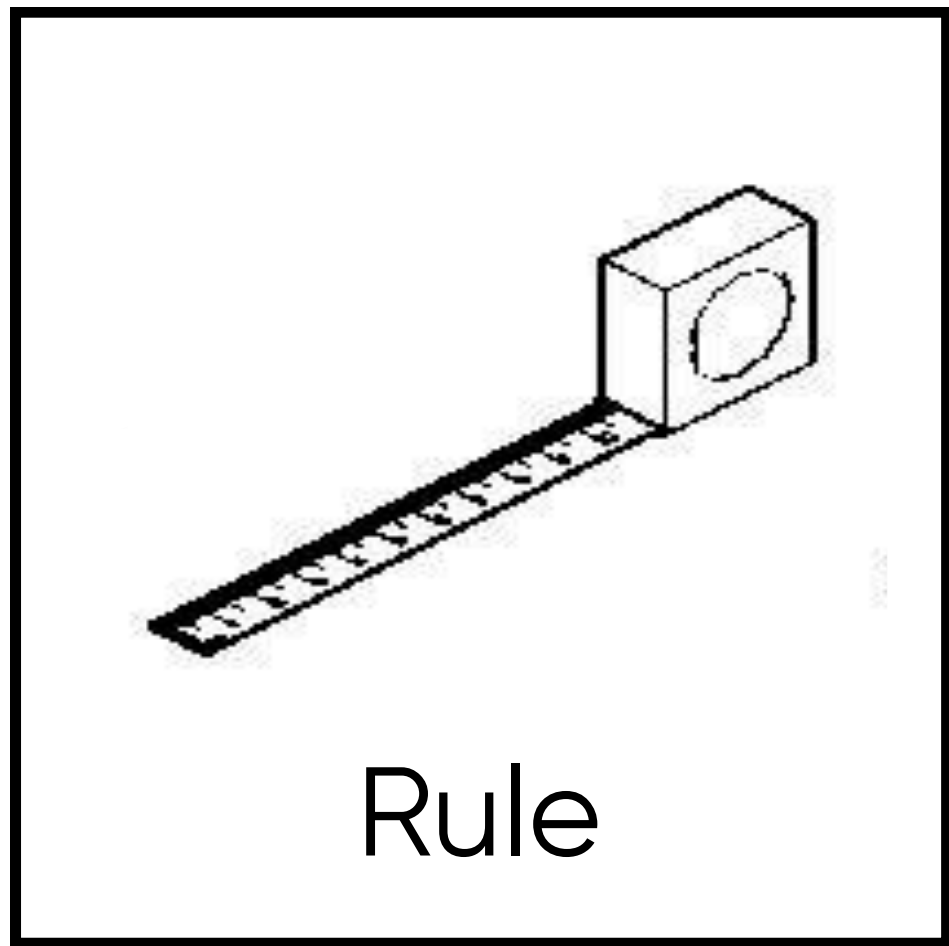


STEP - 6

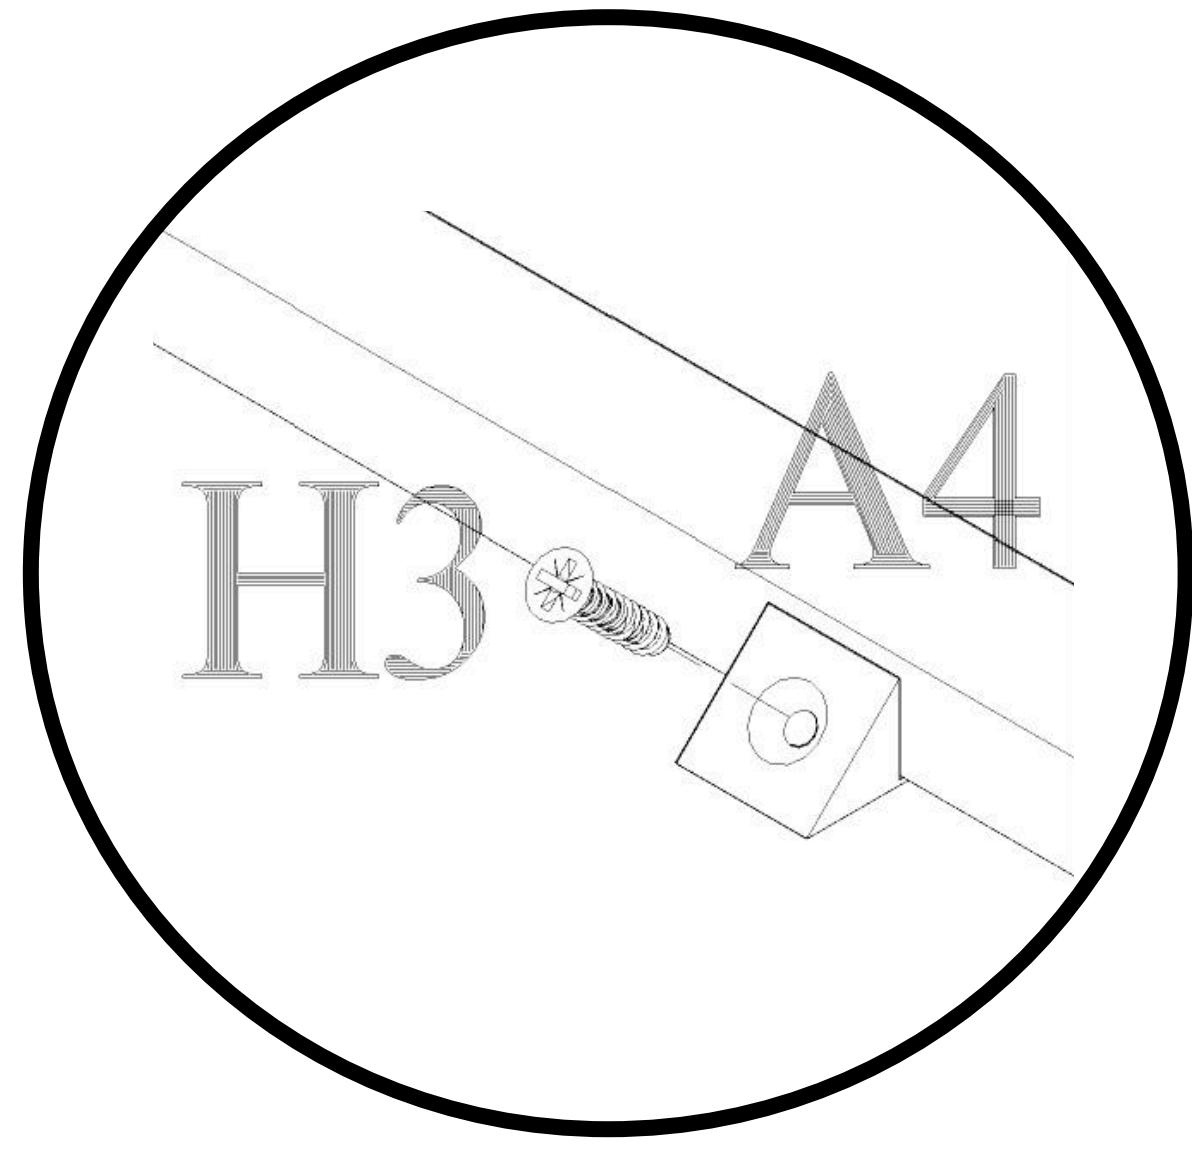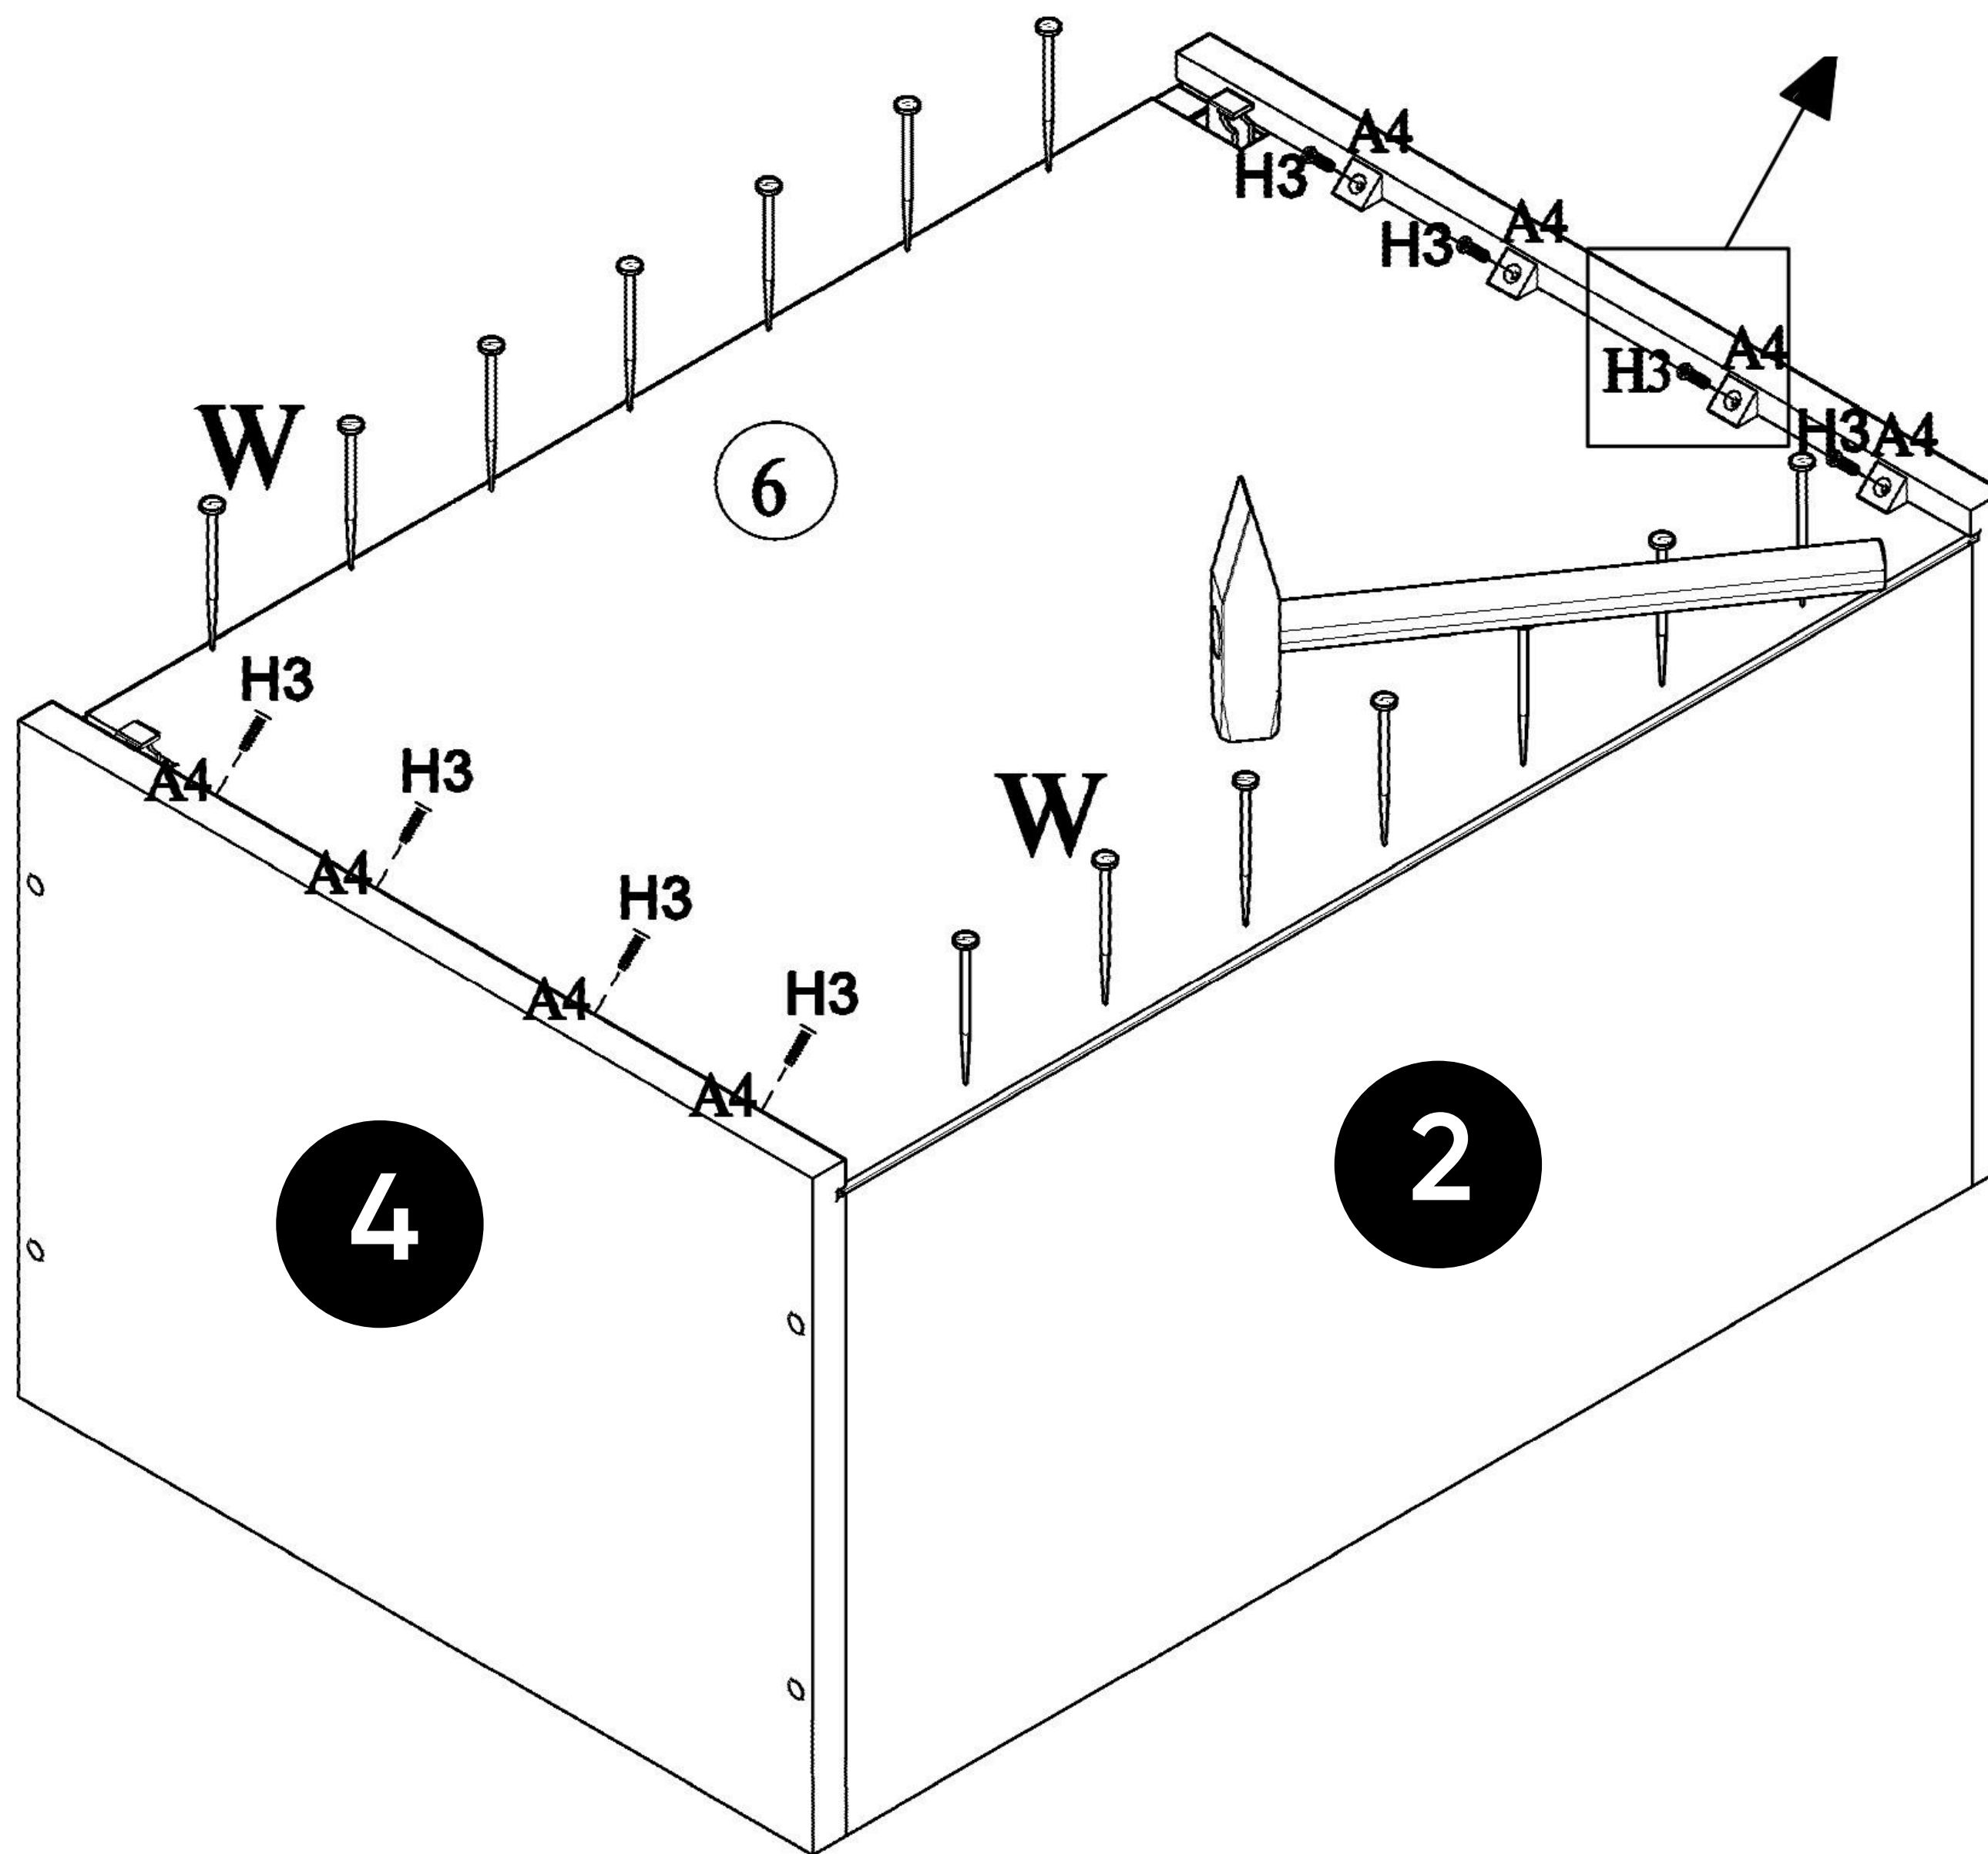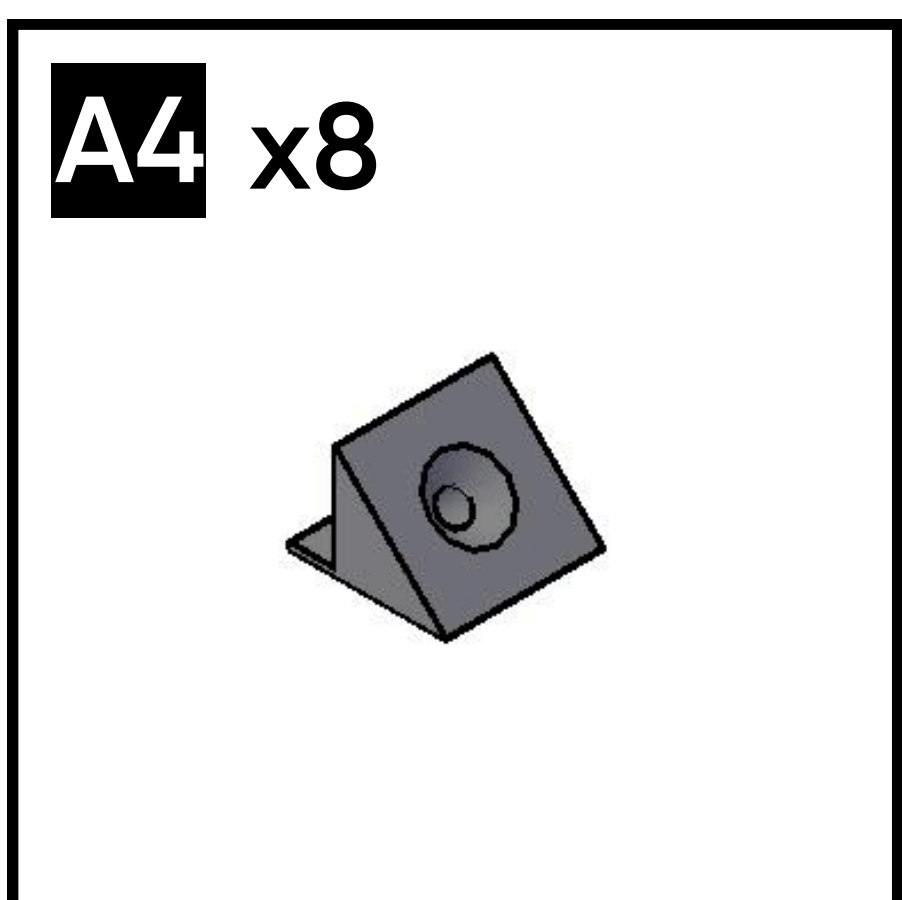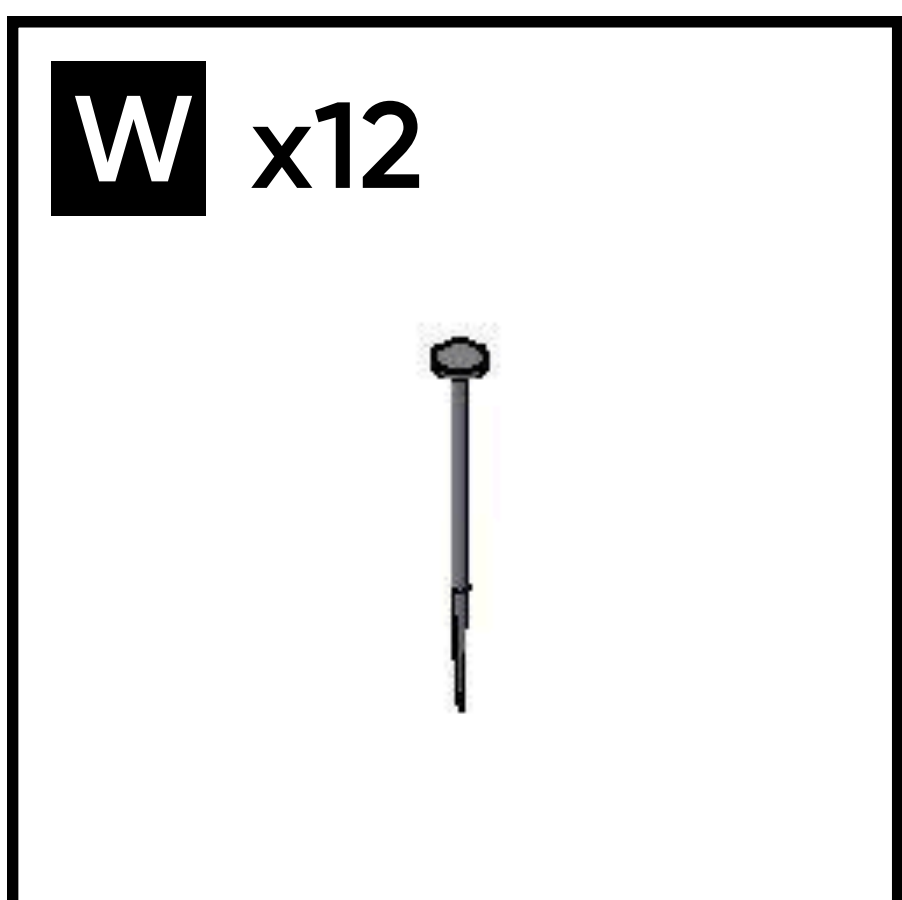



STEP - 7

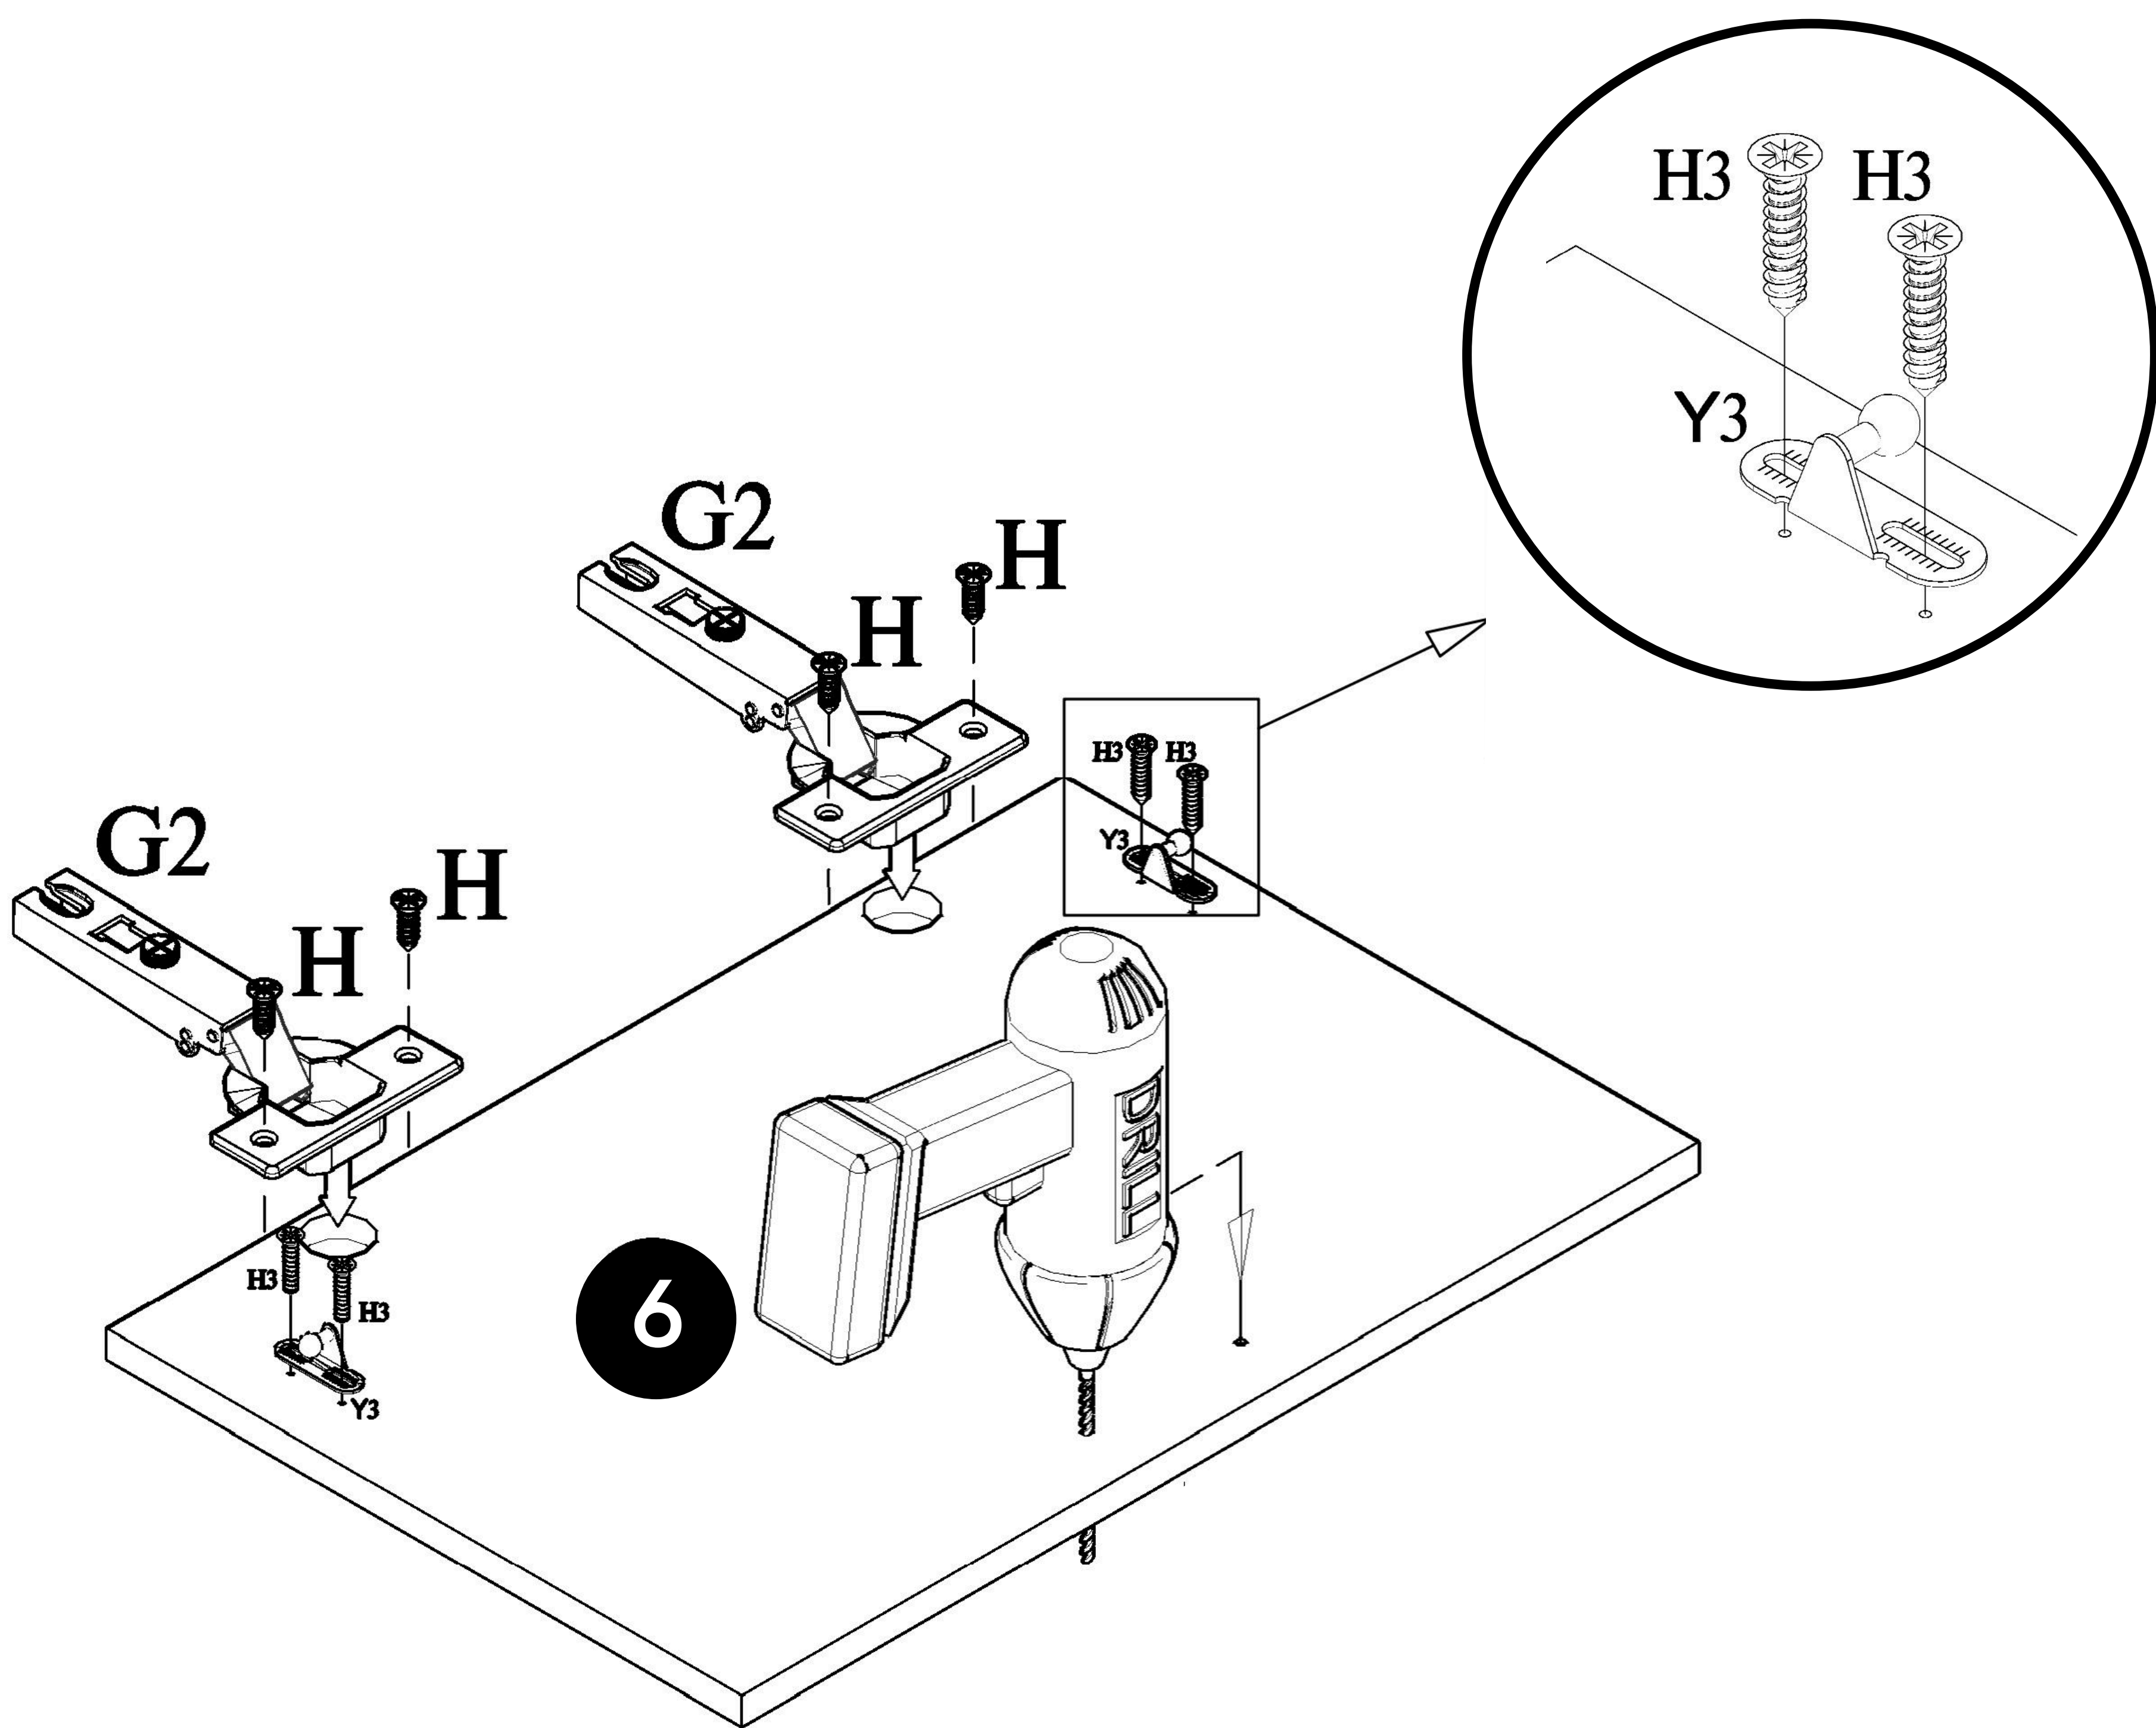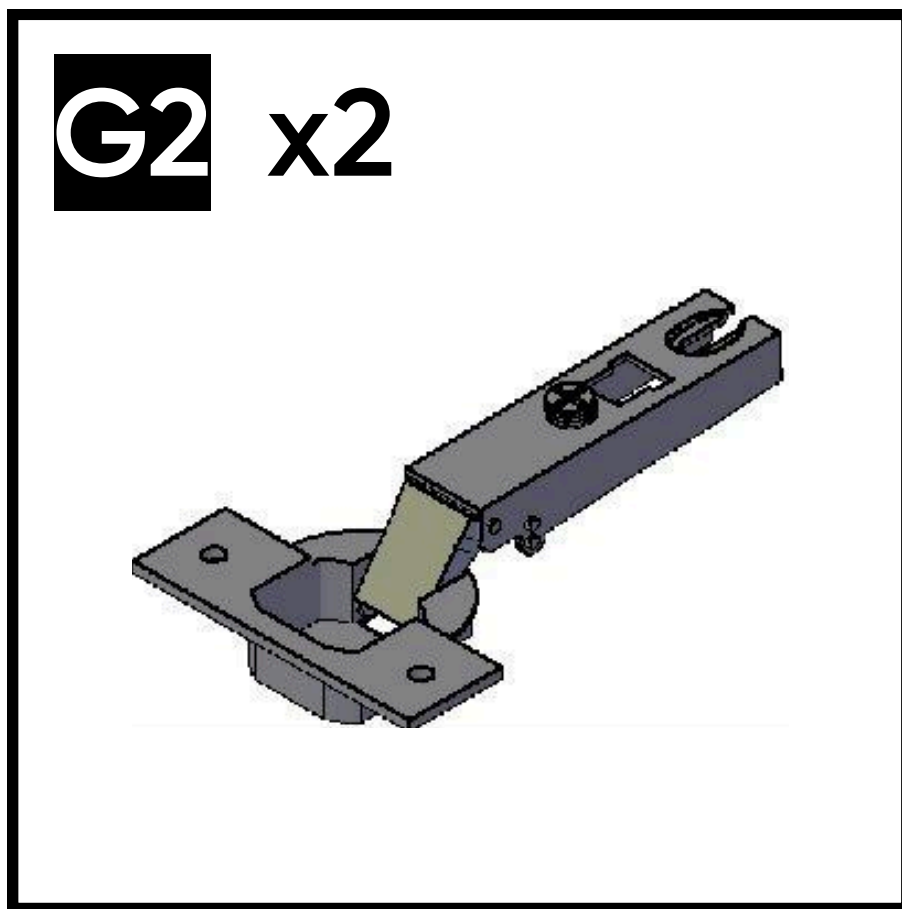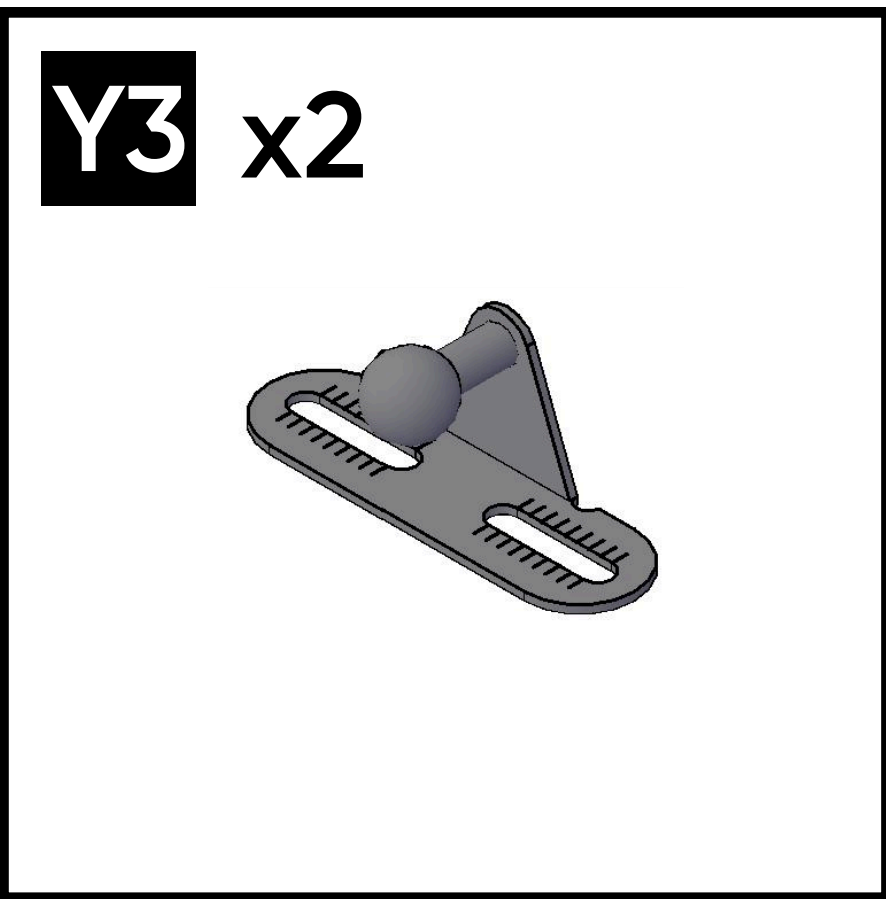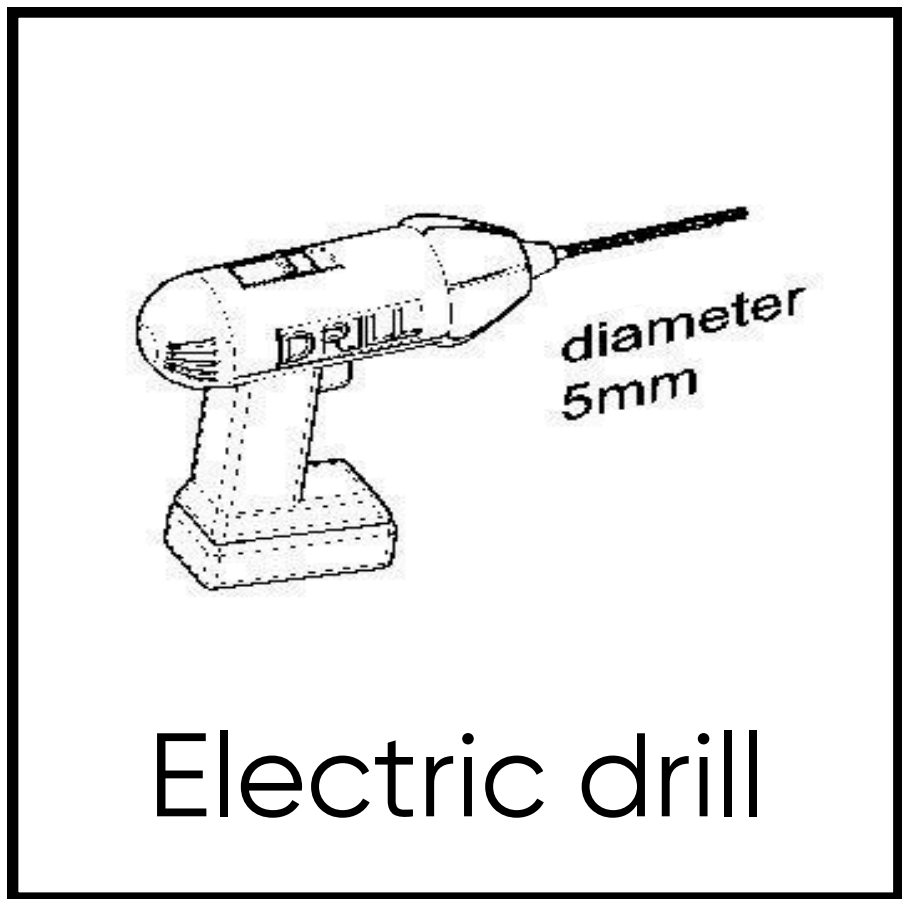



STEP - 8

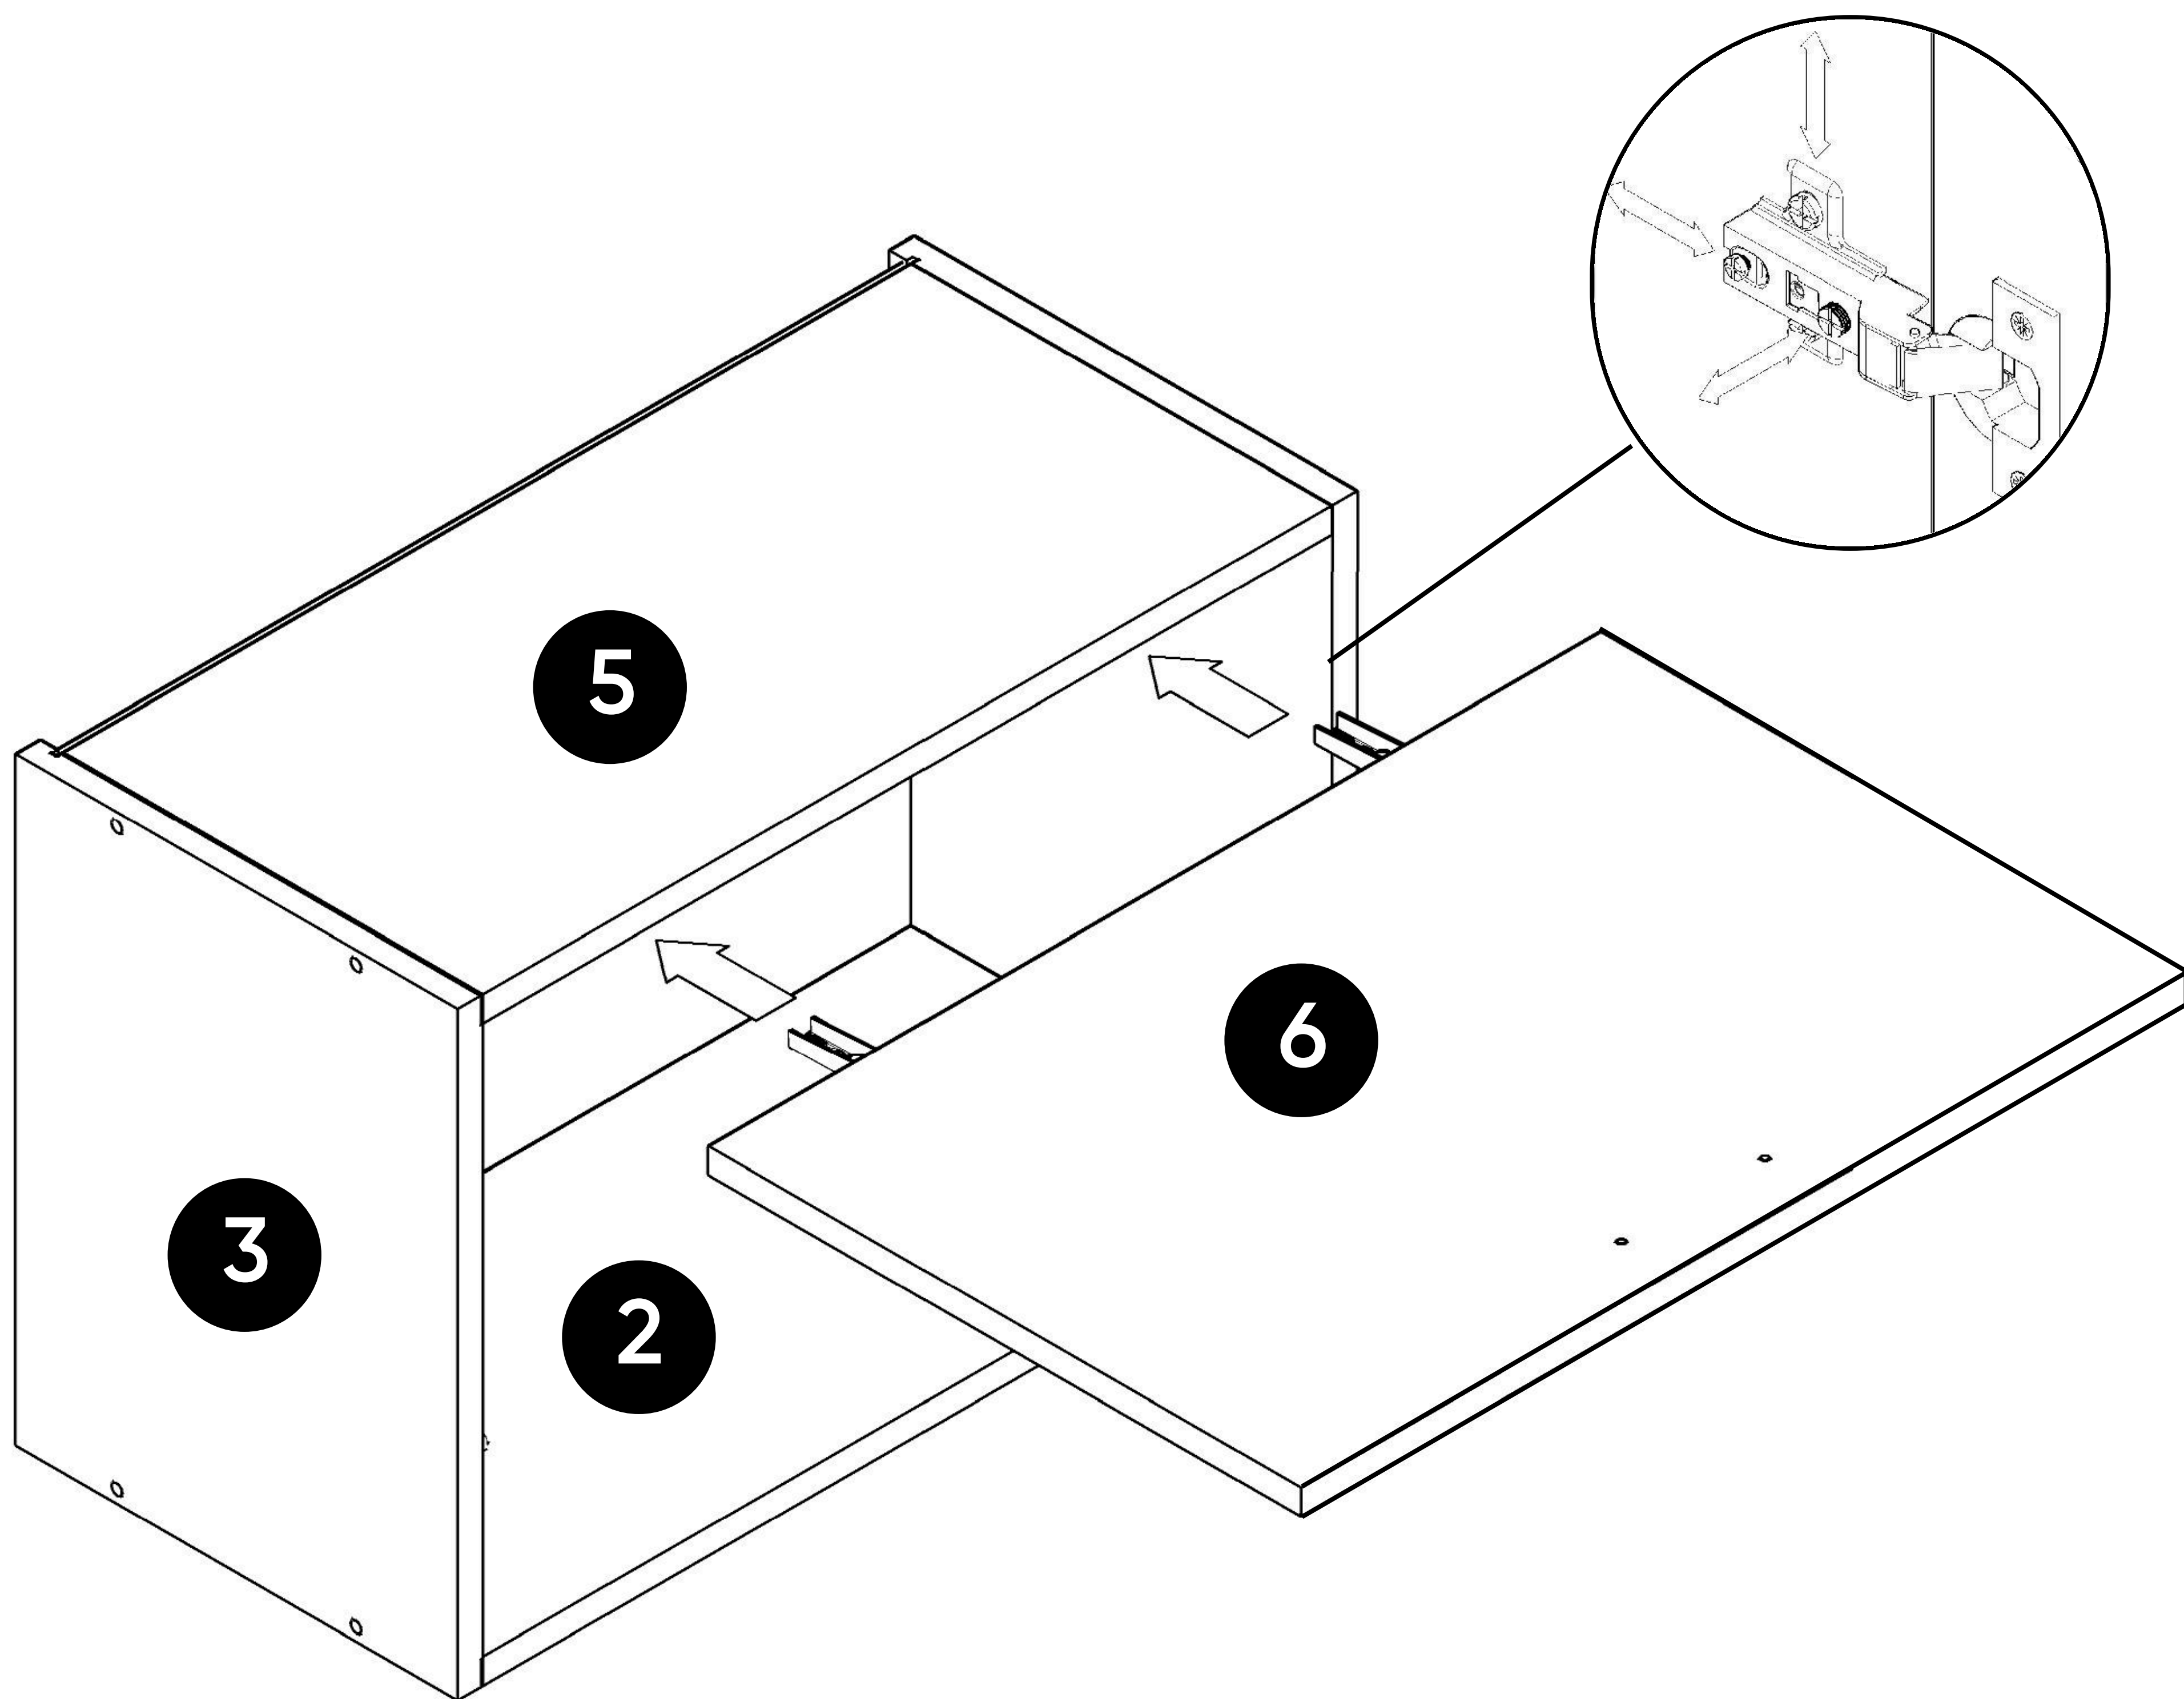




STEP - 9

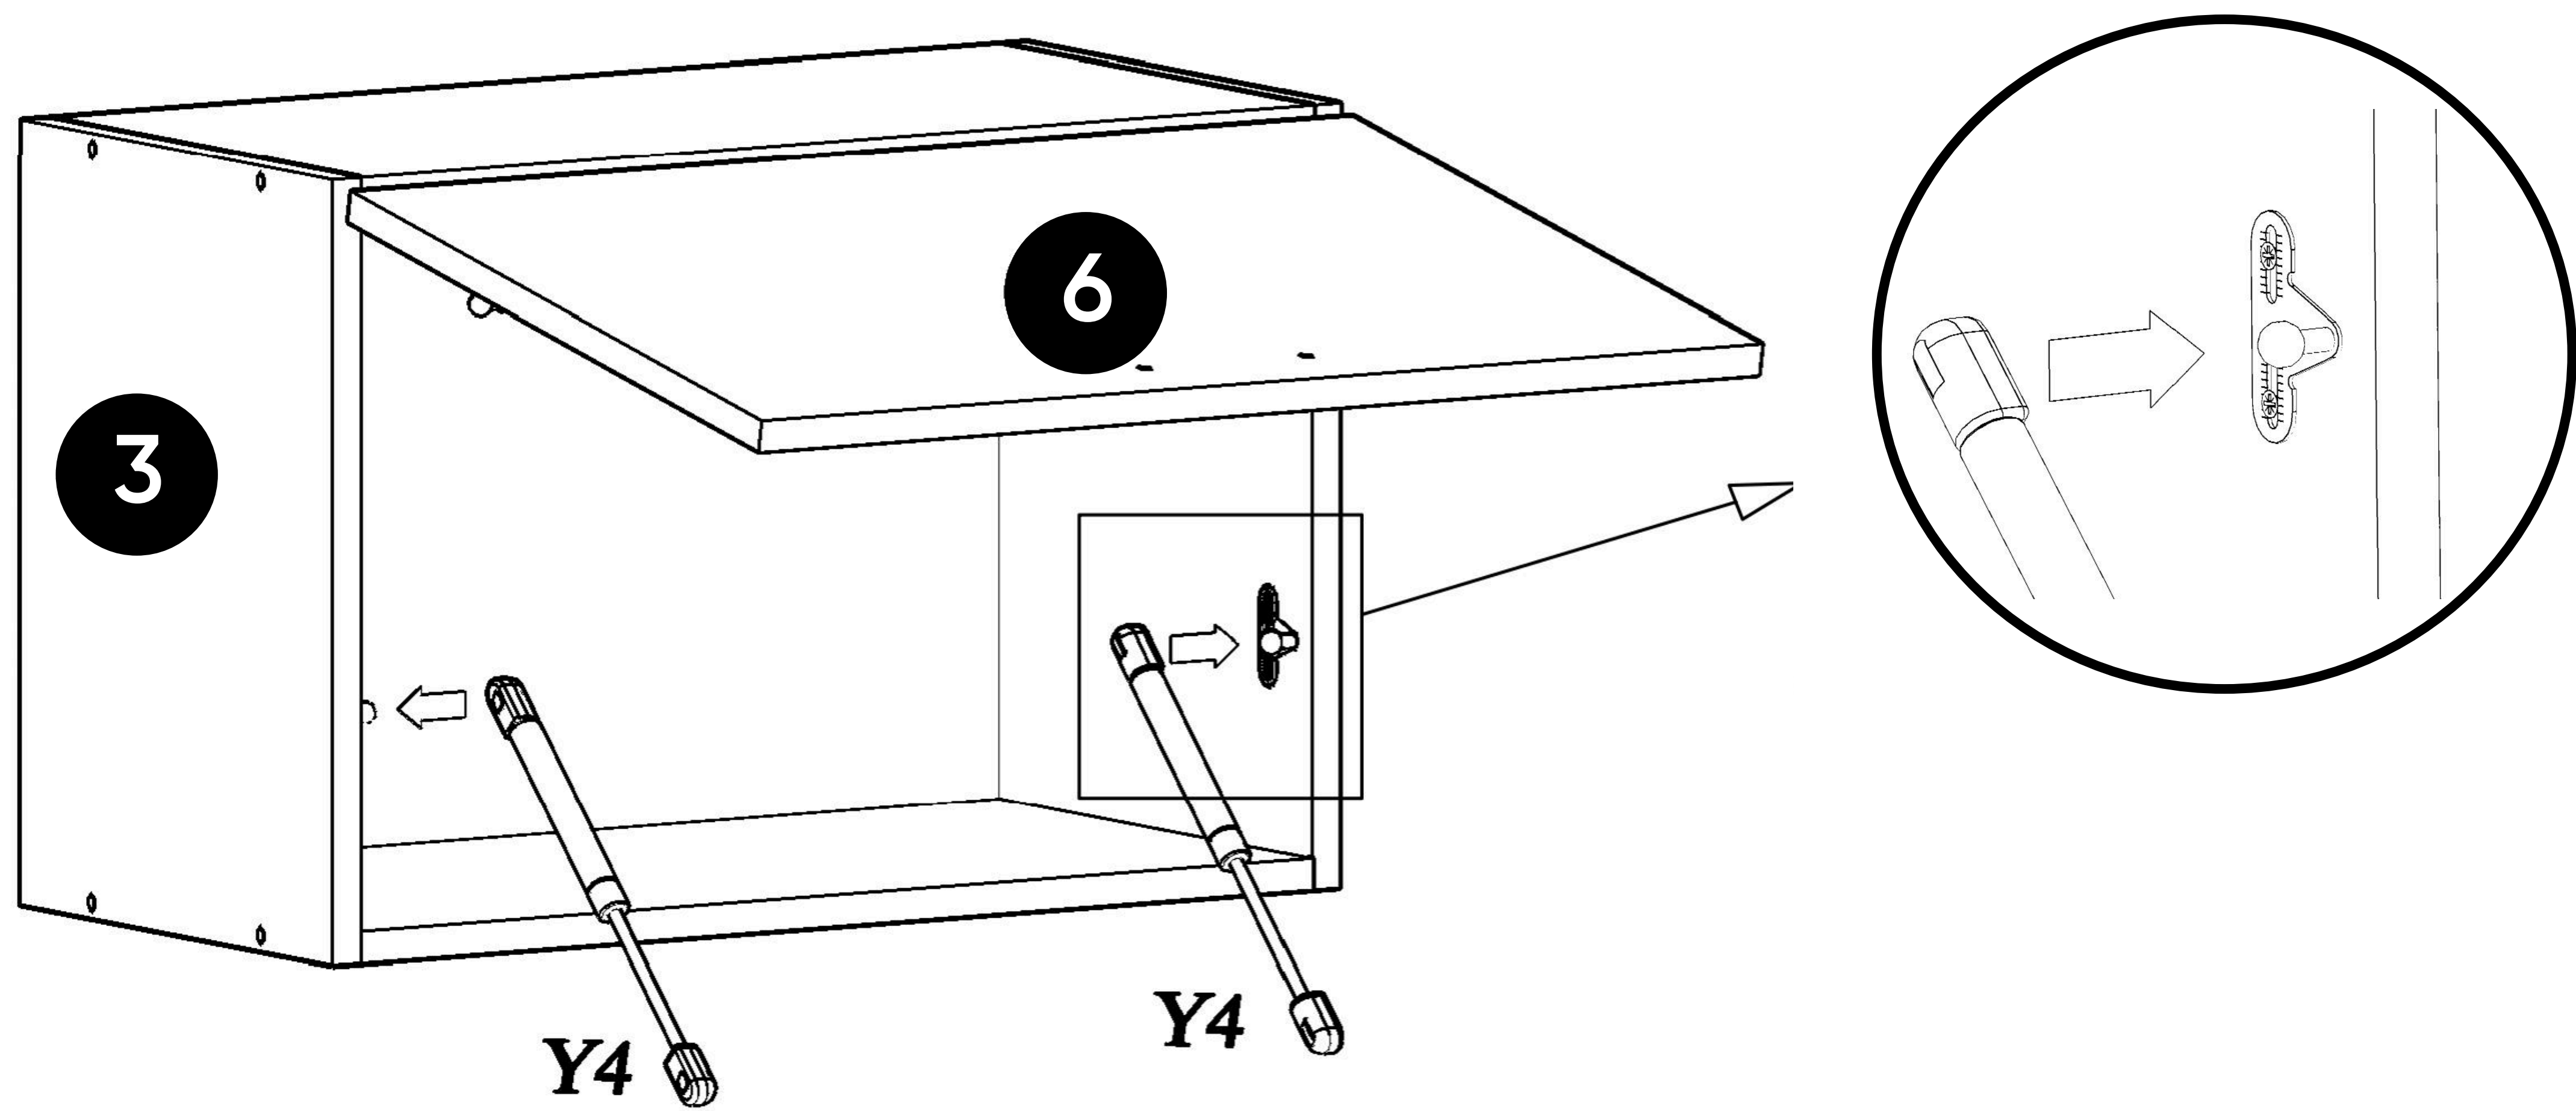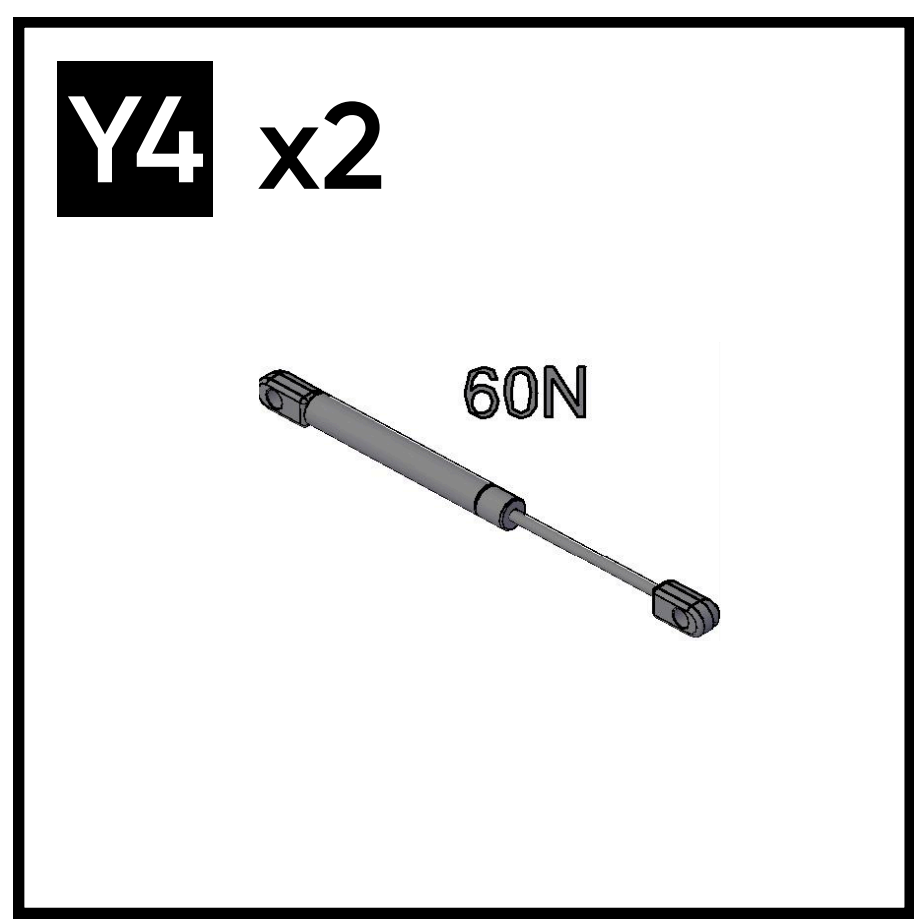


STEP - 10

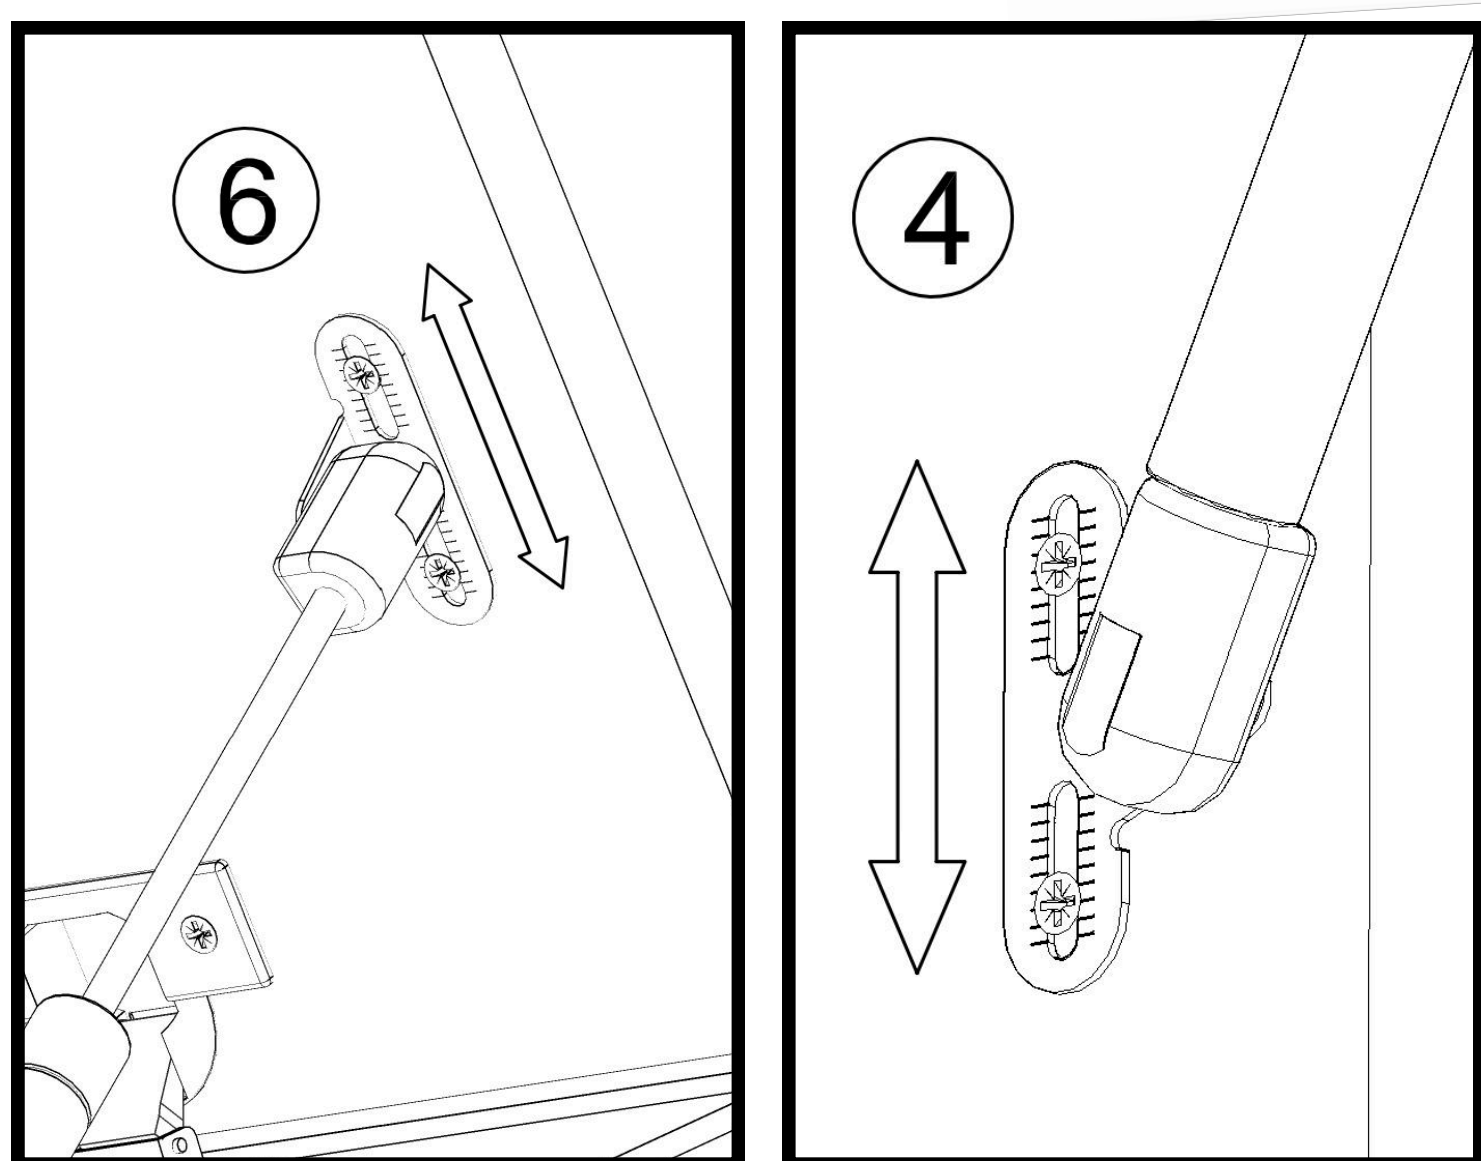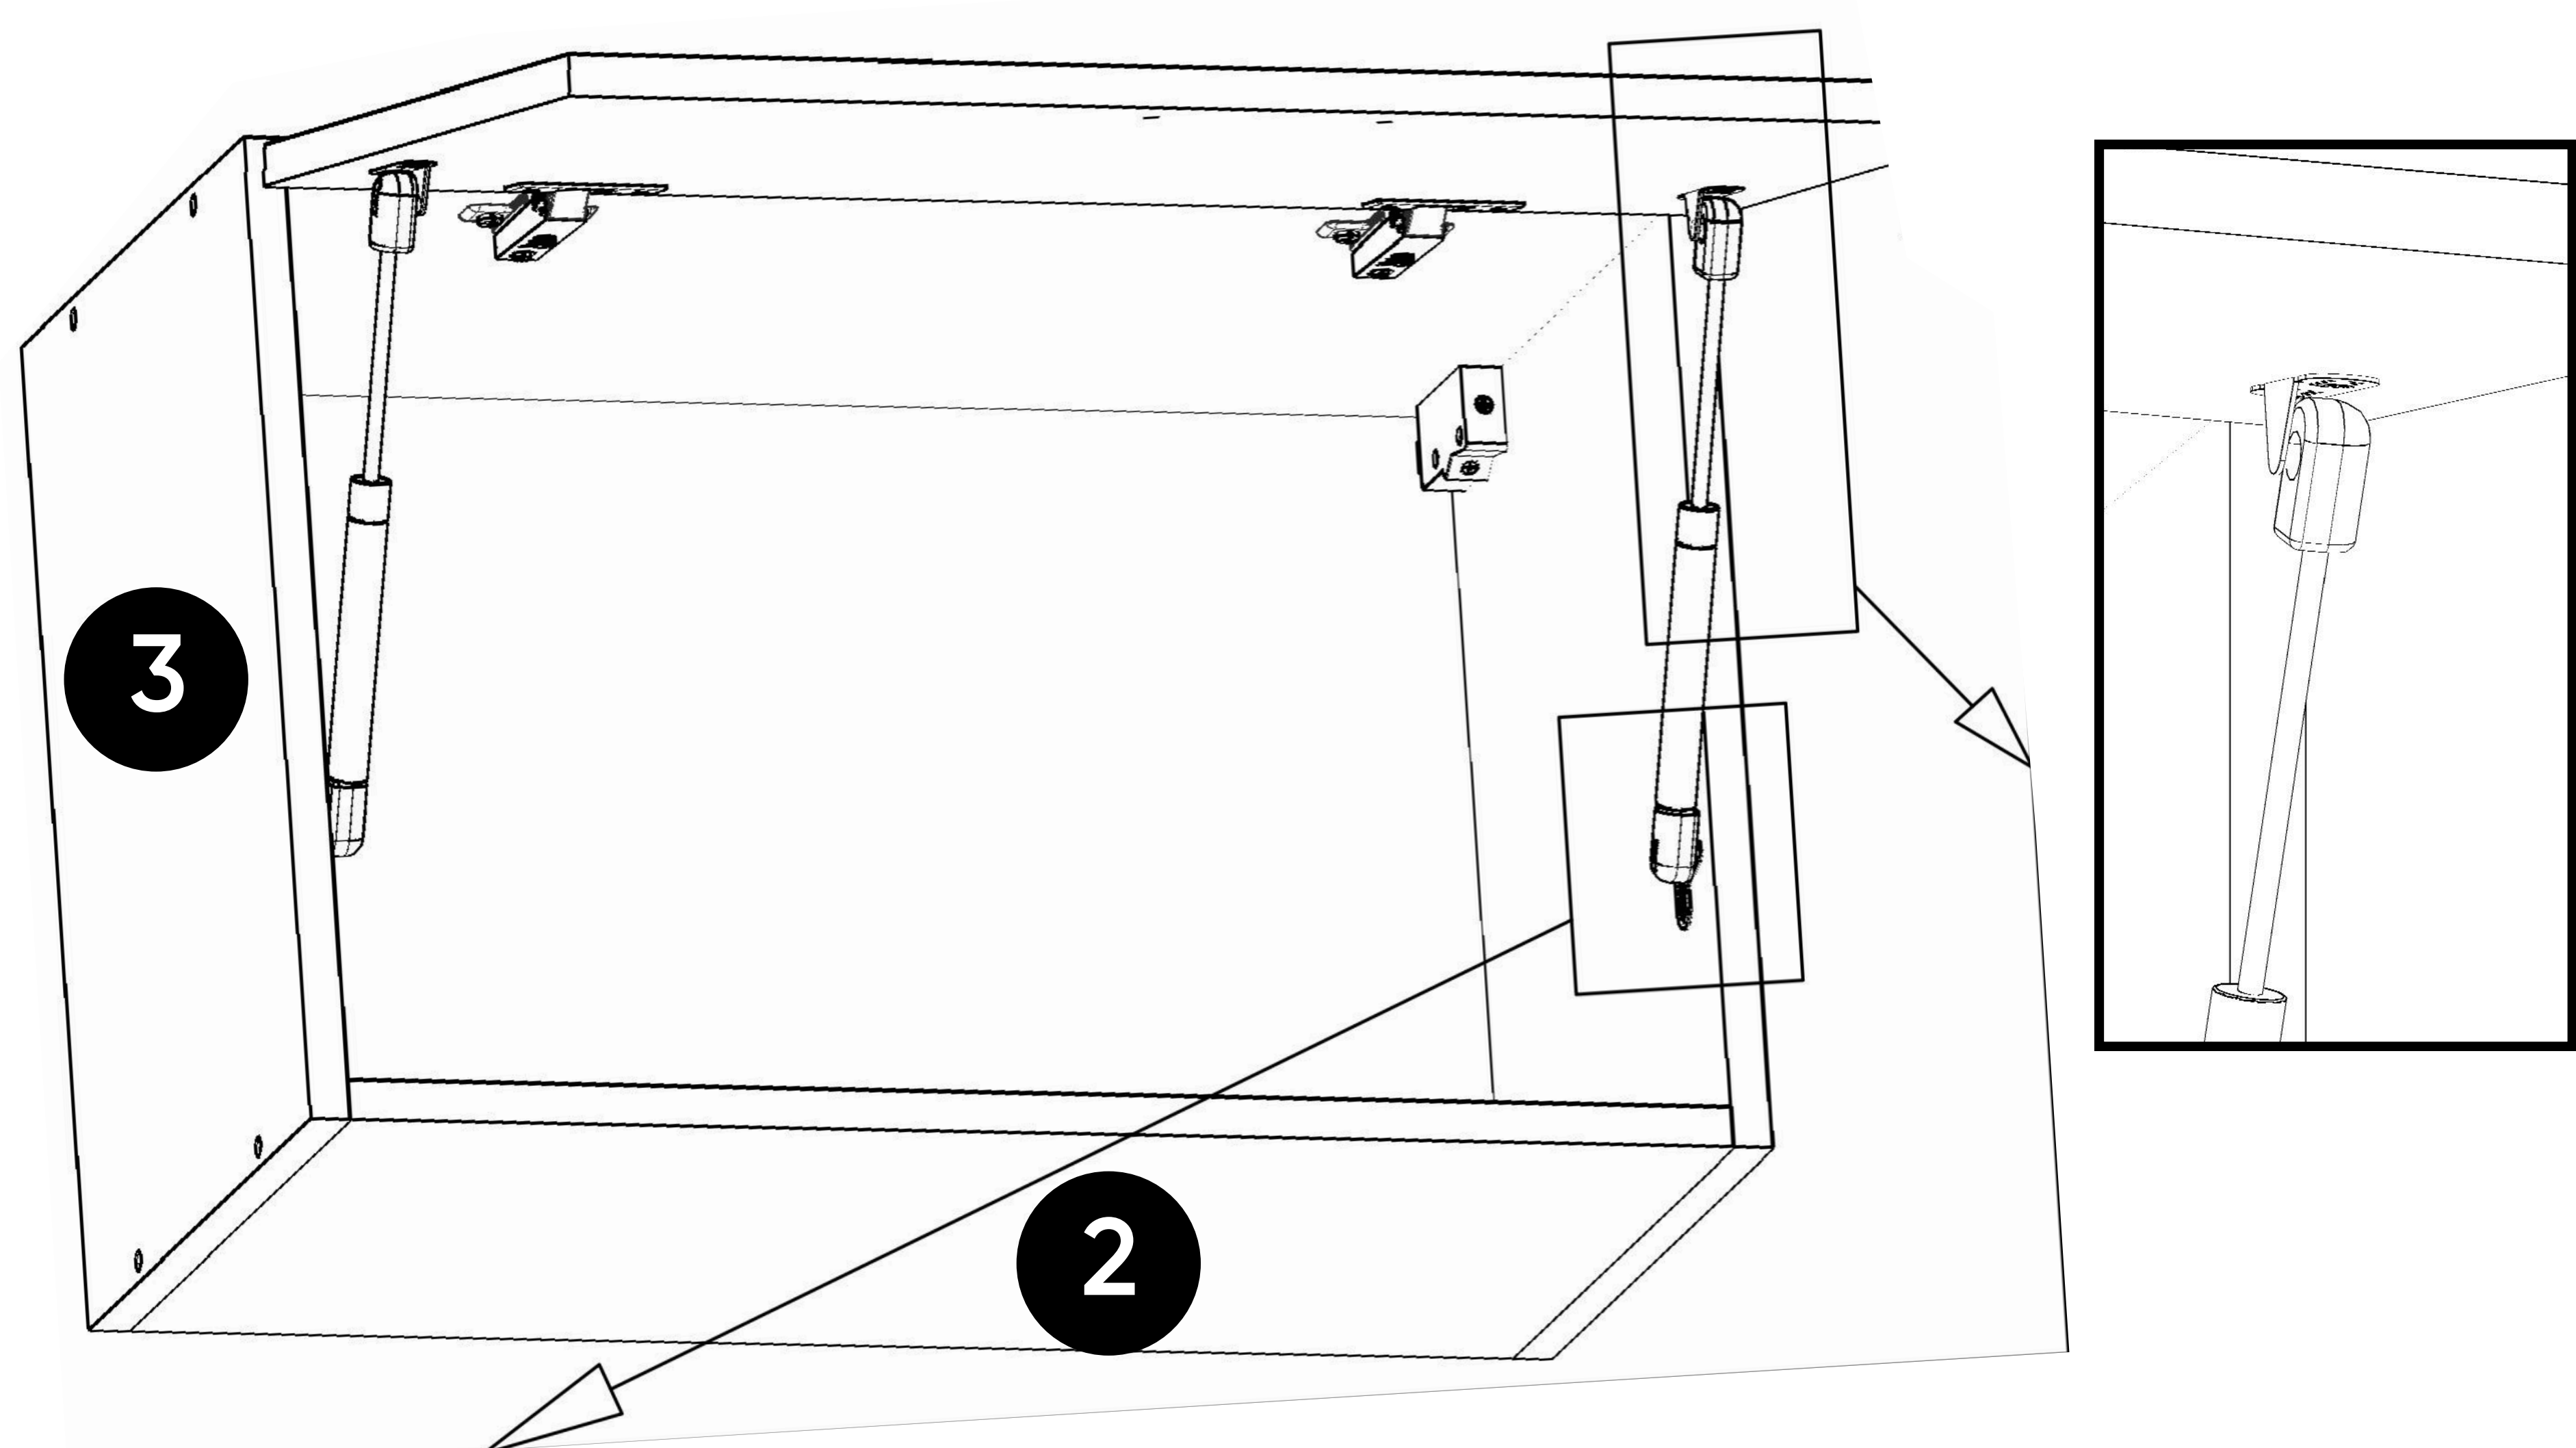



STEP - 11

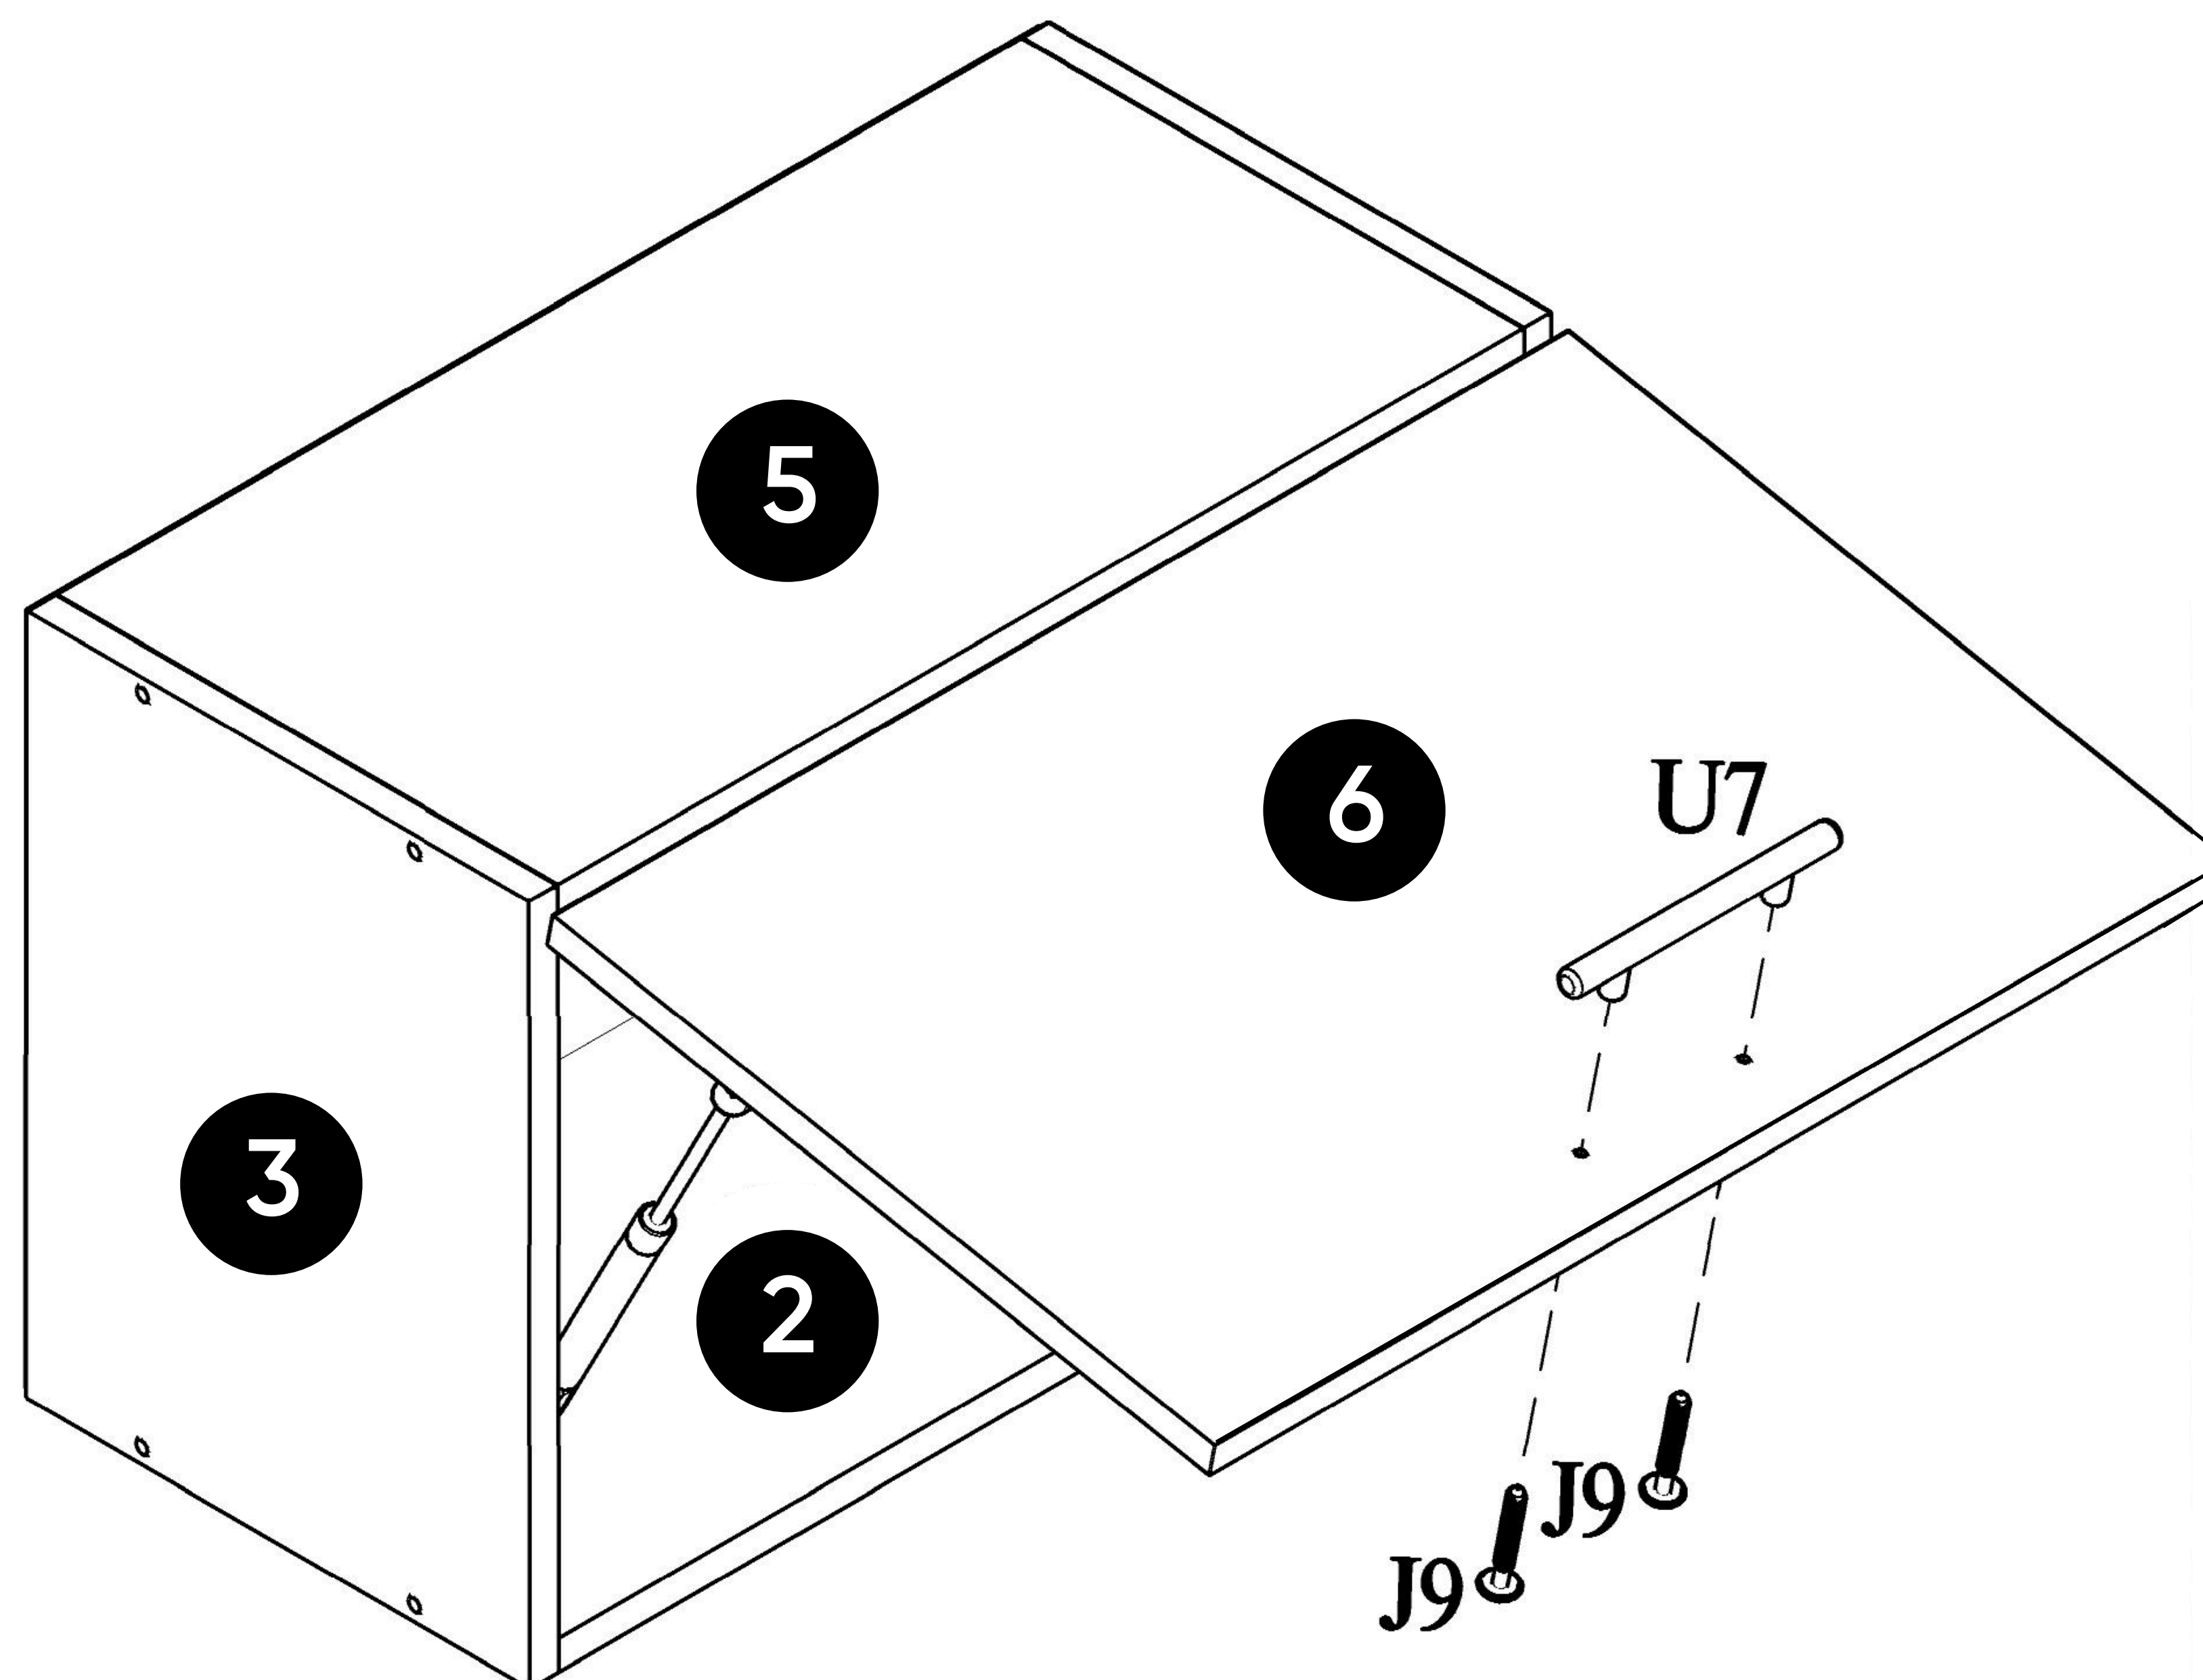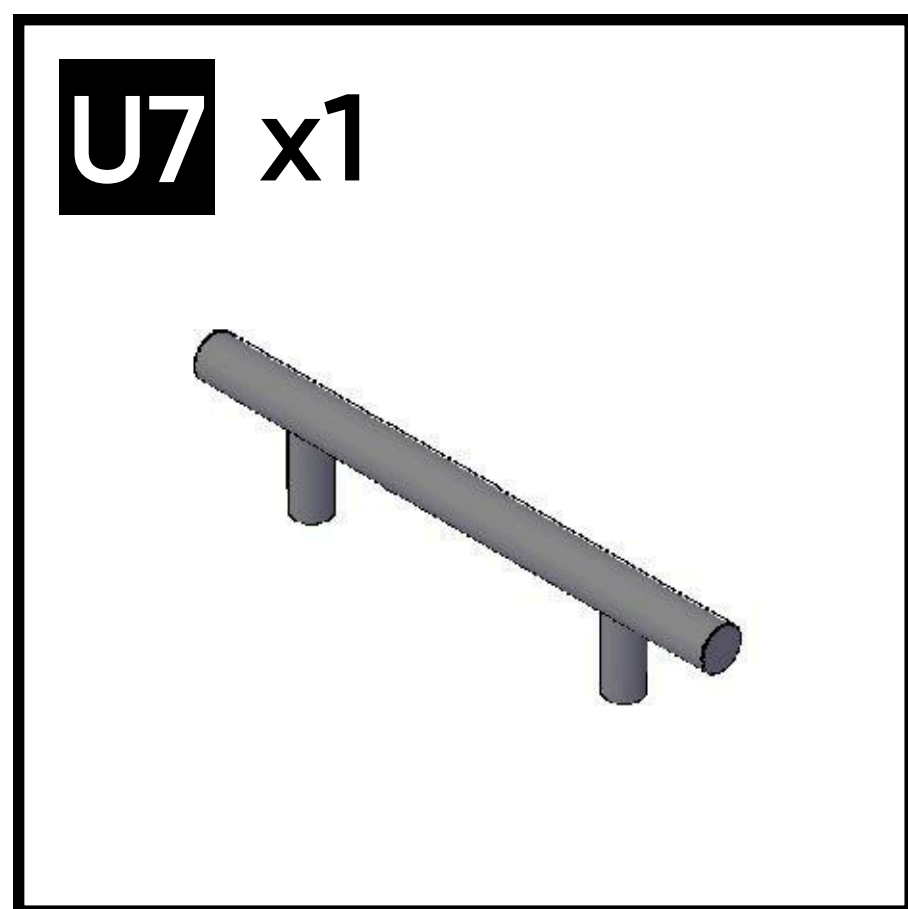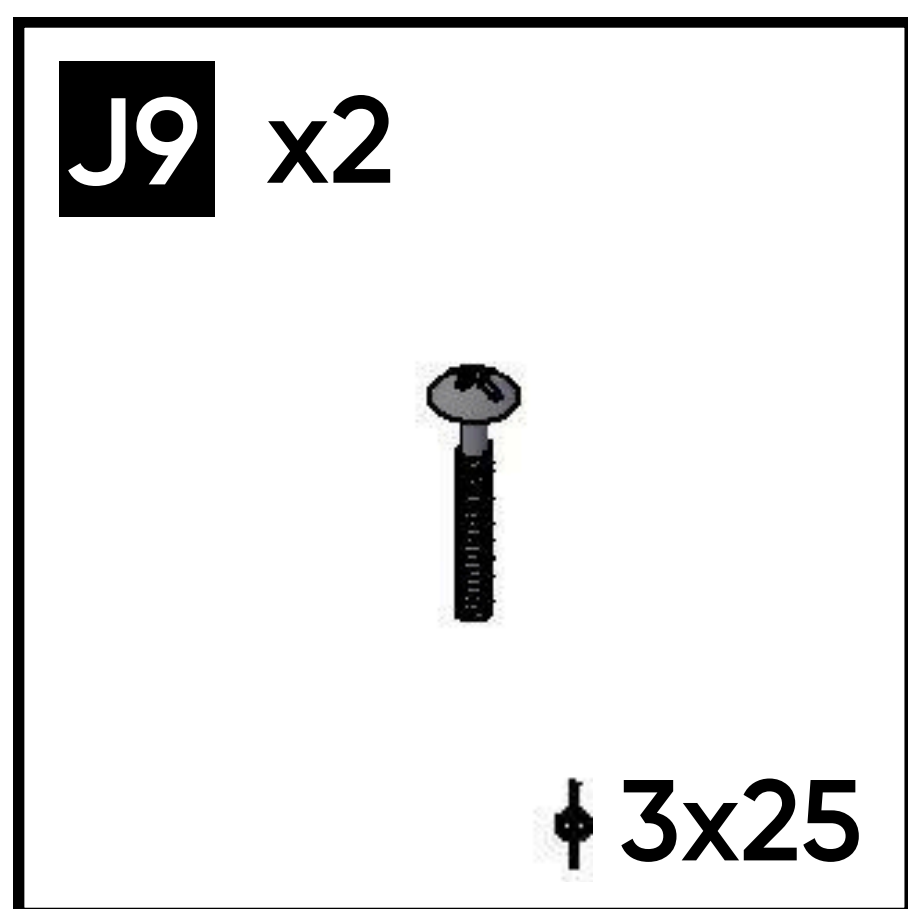


STEP - 12

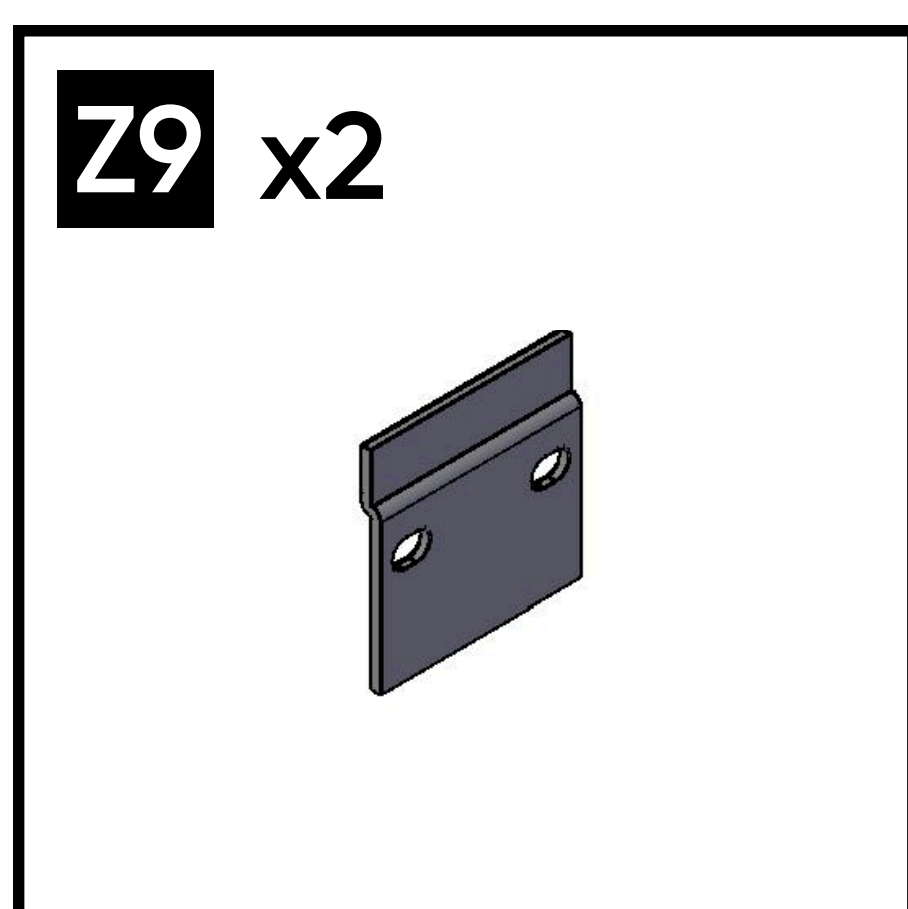

! Mounting the Z9 component to the wall

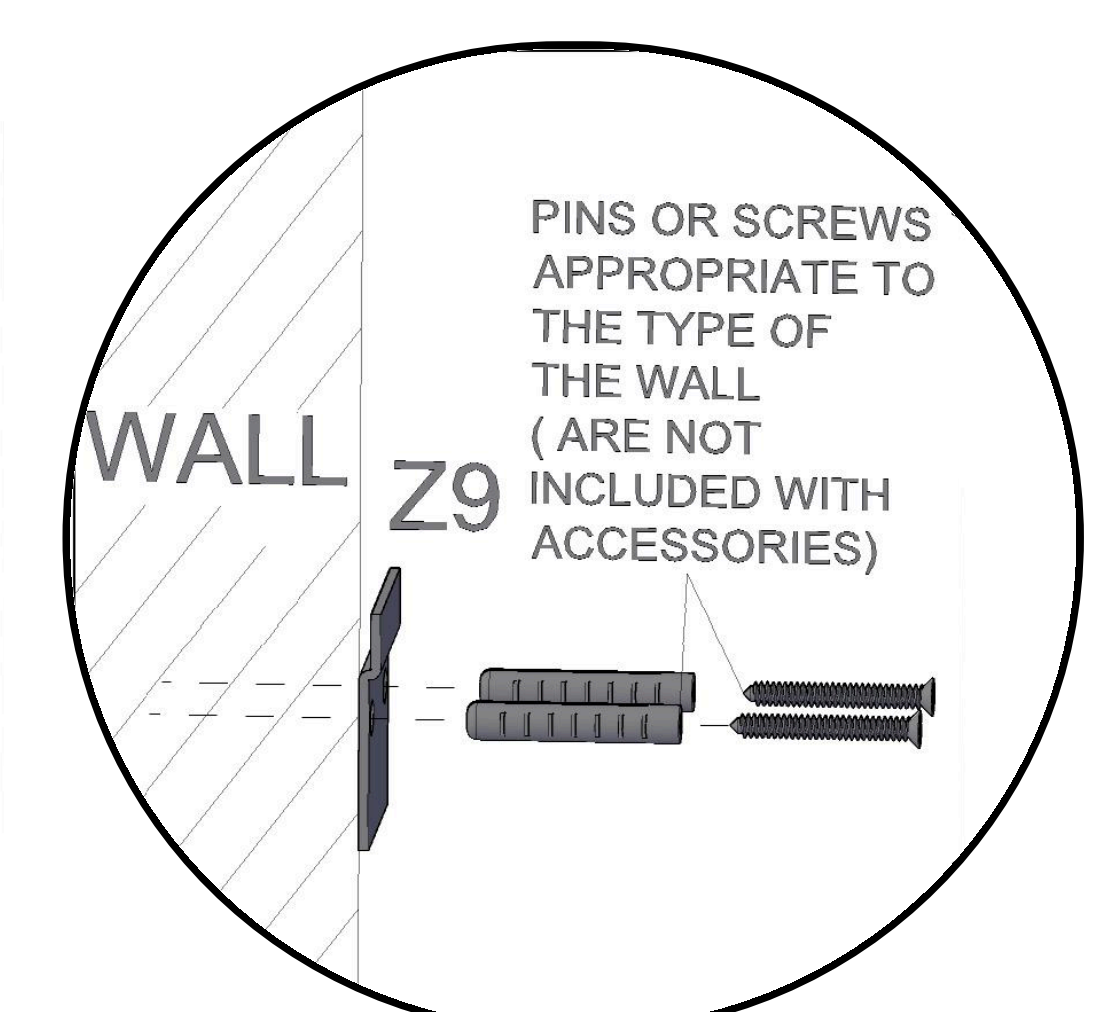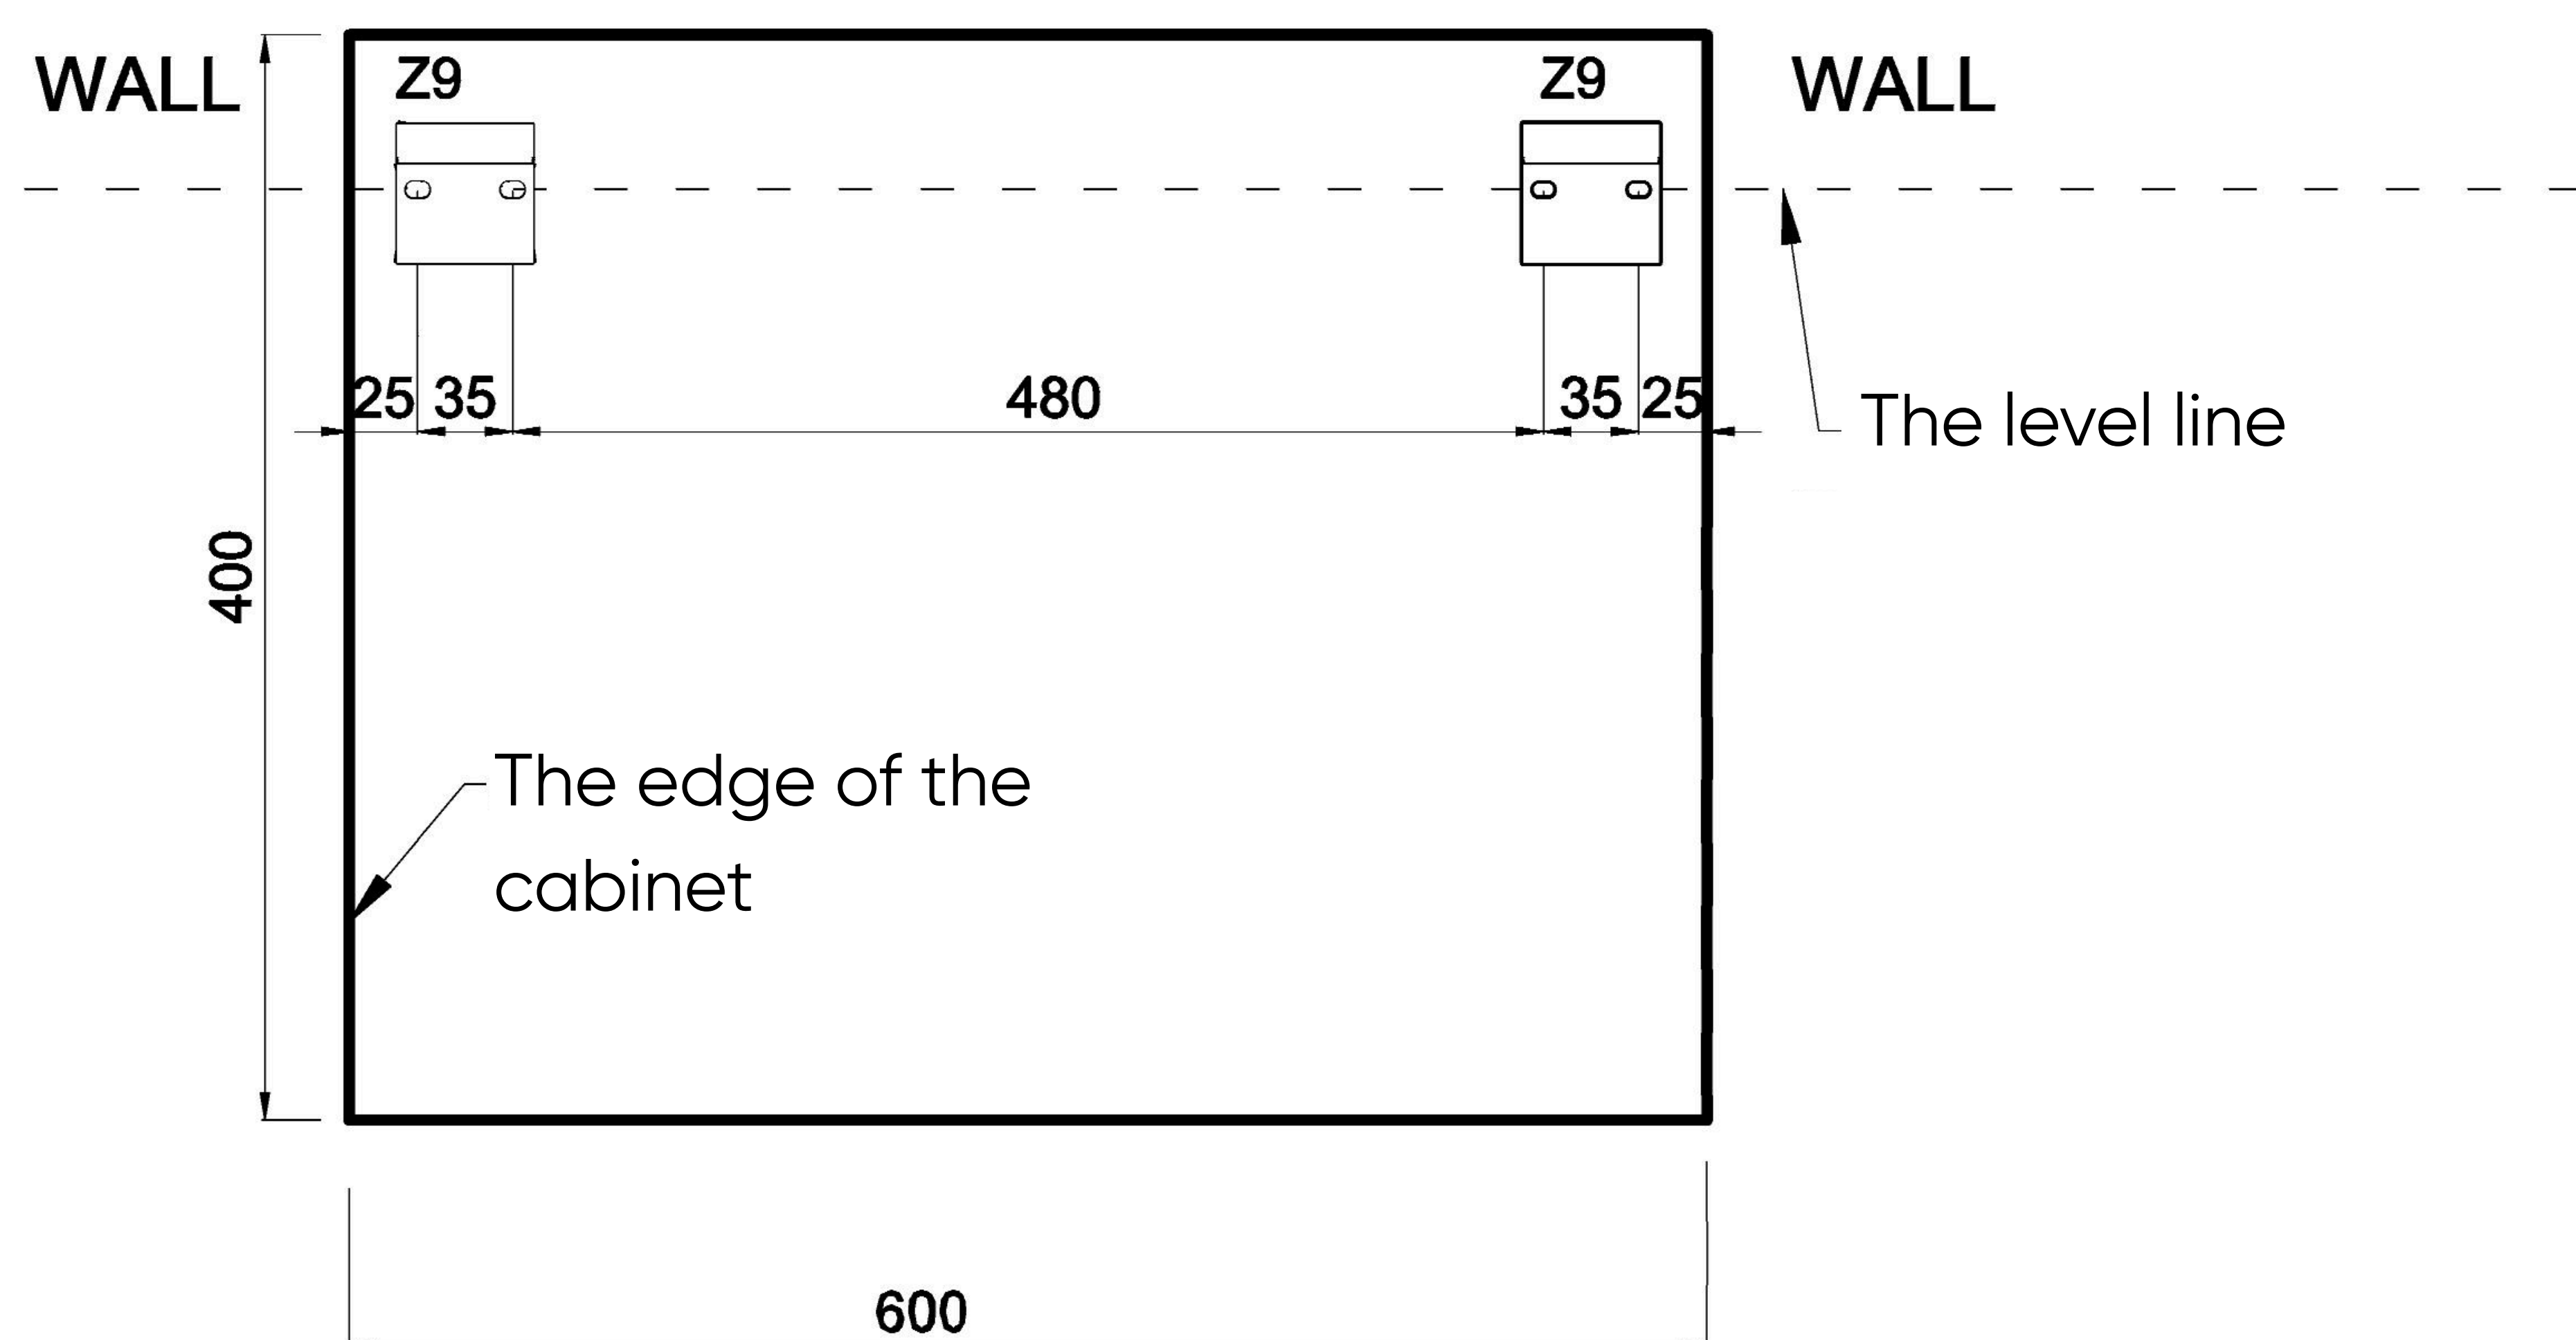

STEP - 13

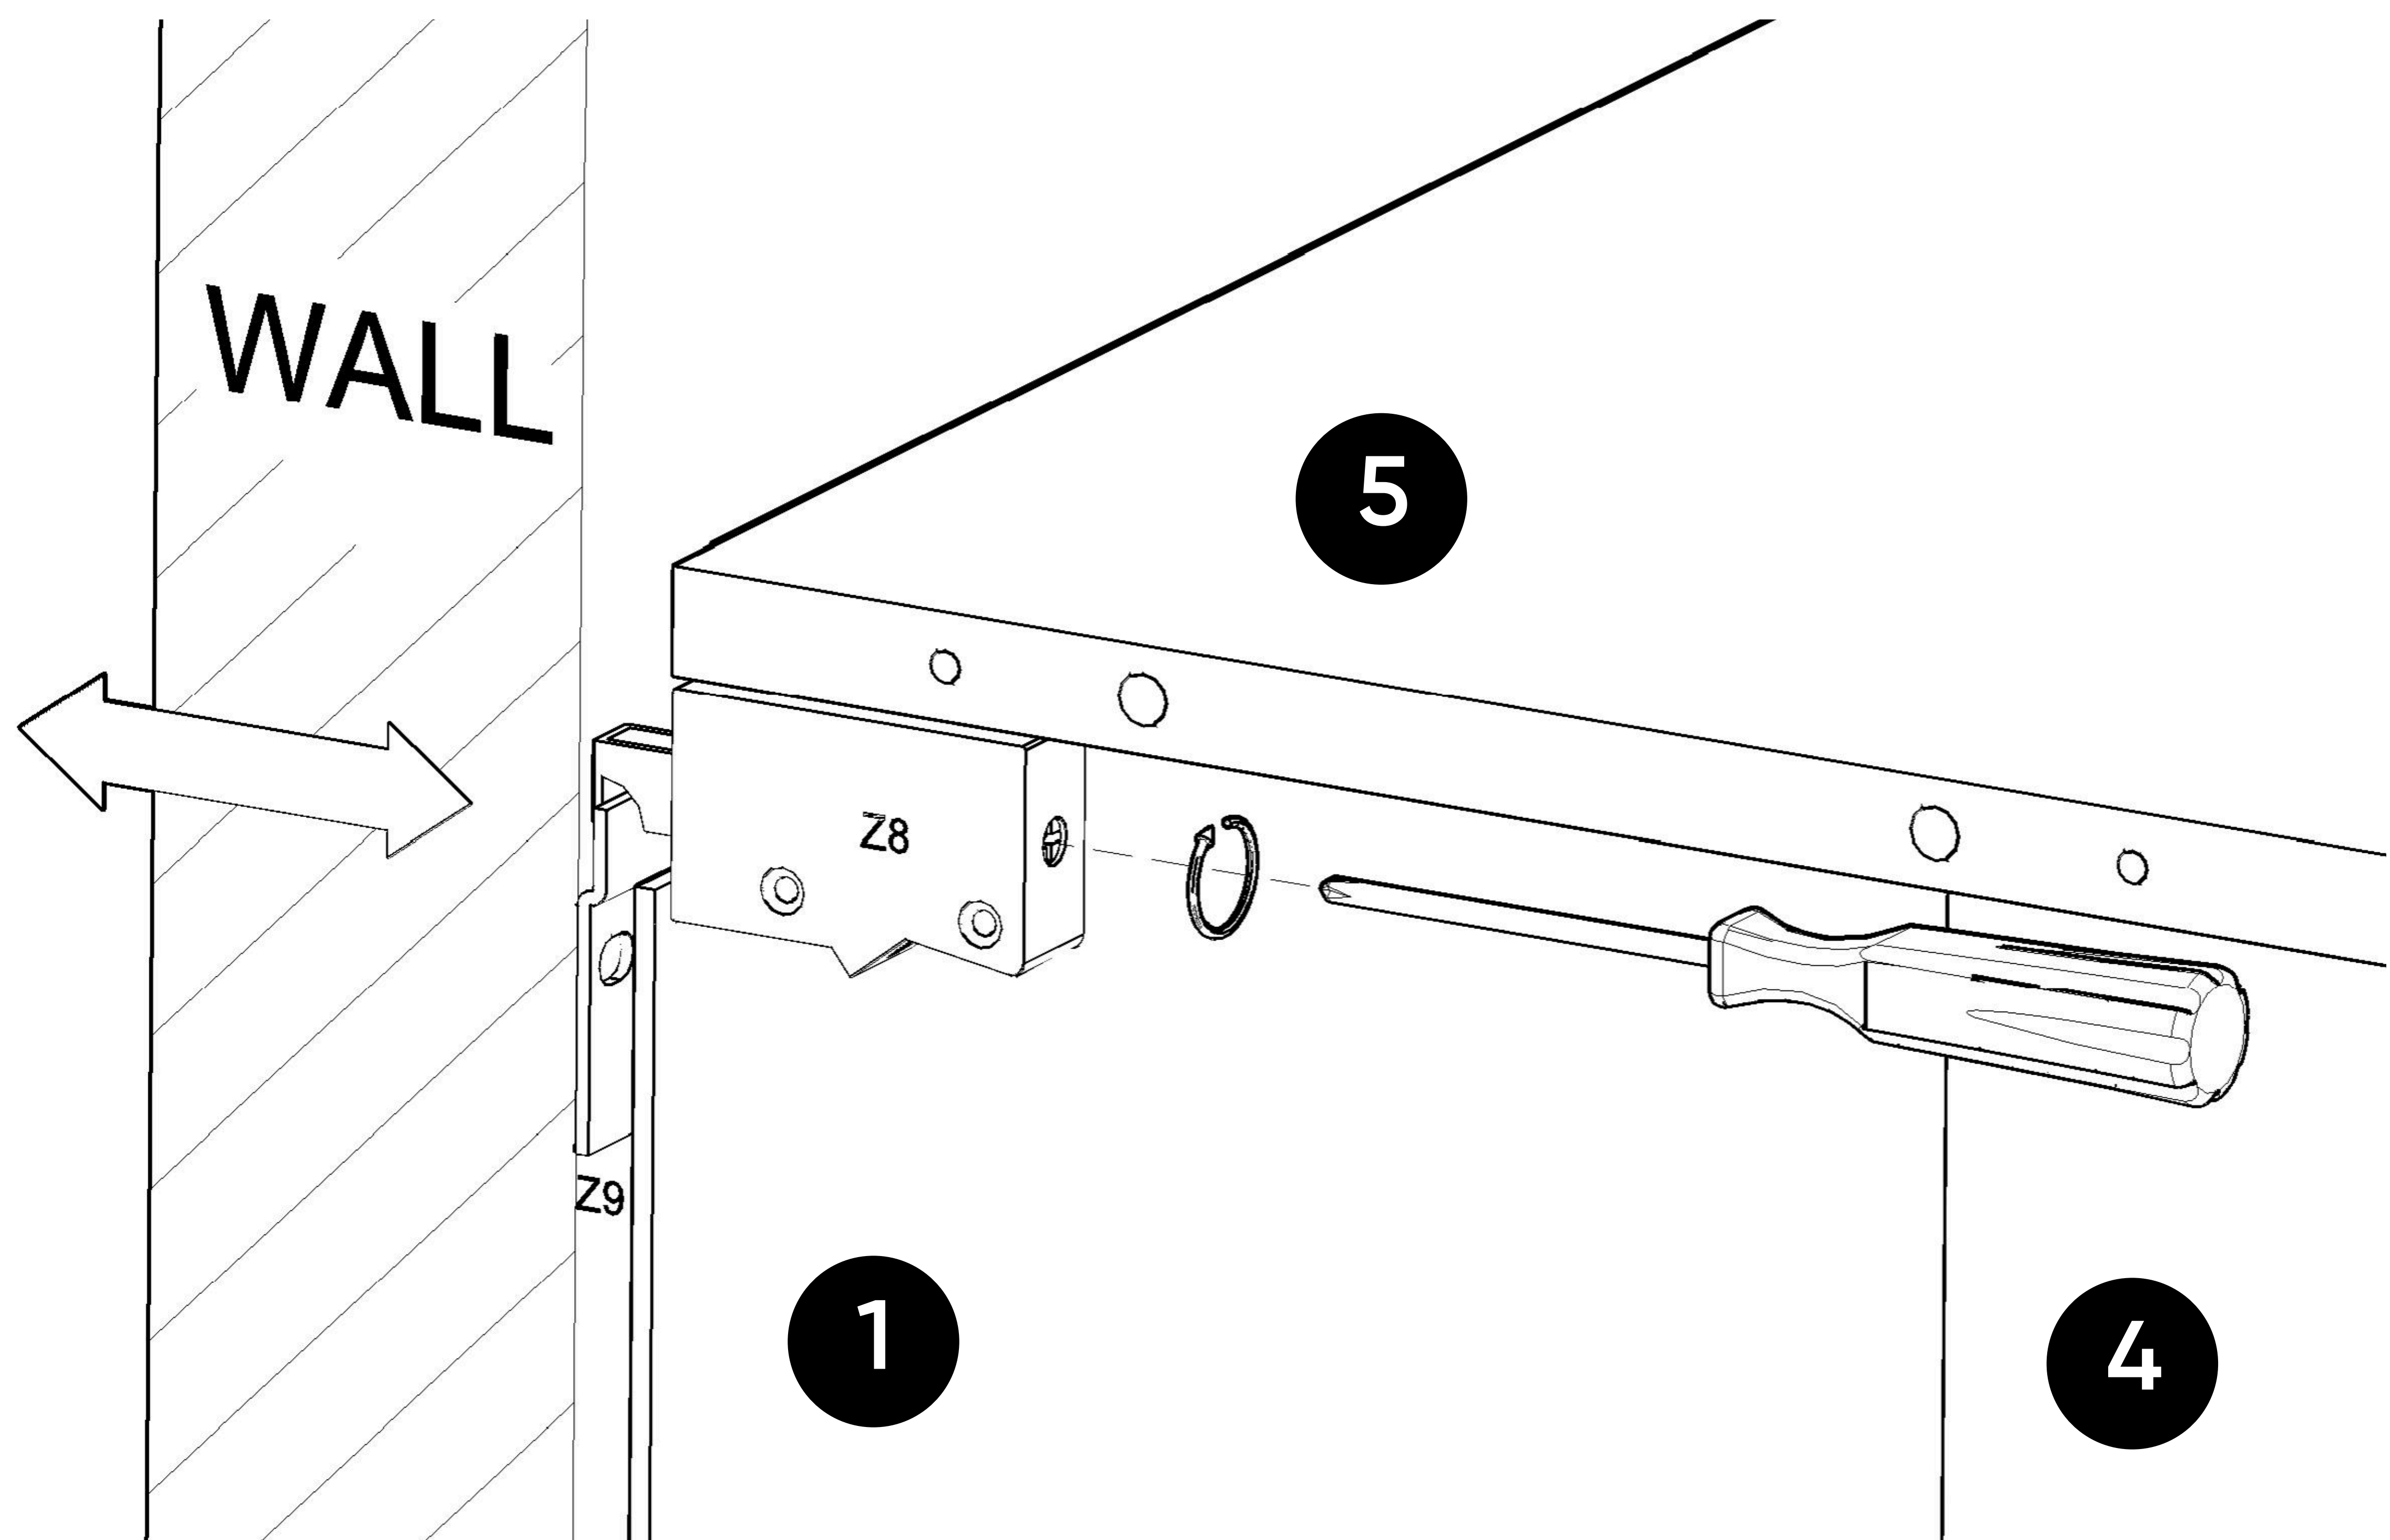

STEP - 14

