



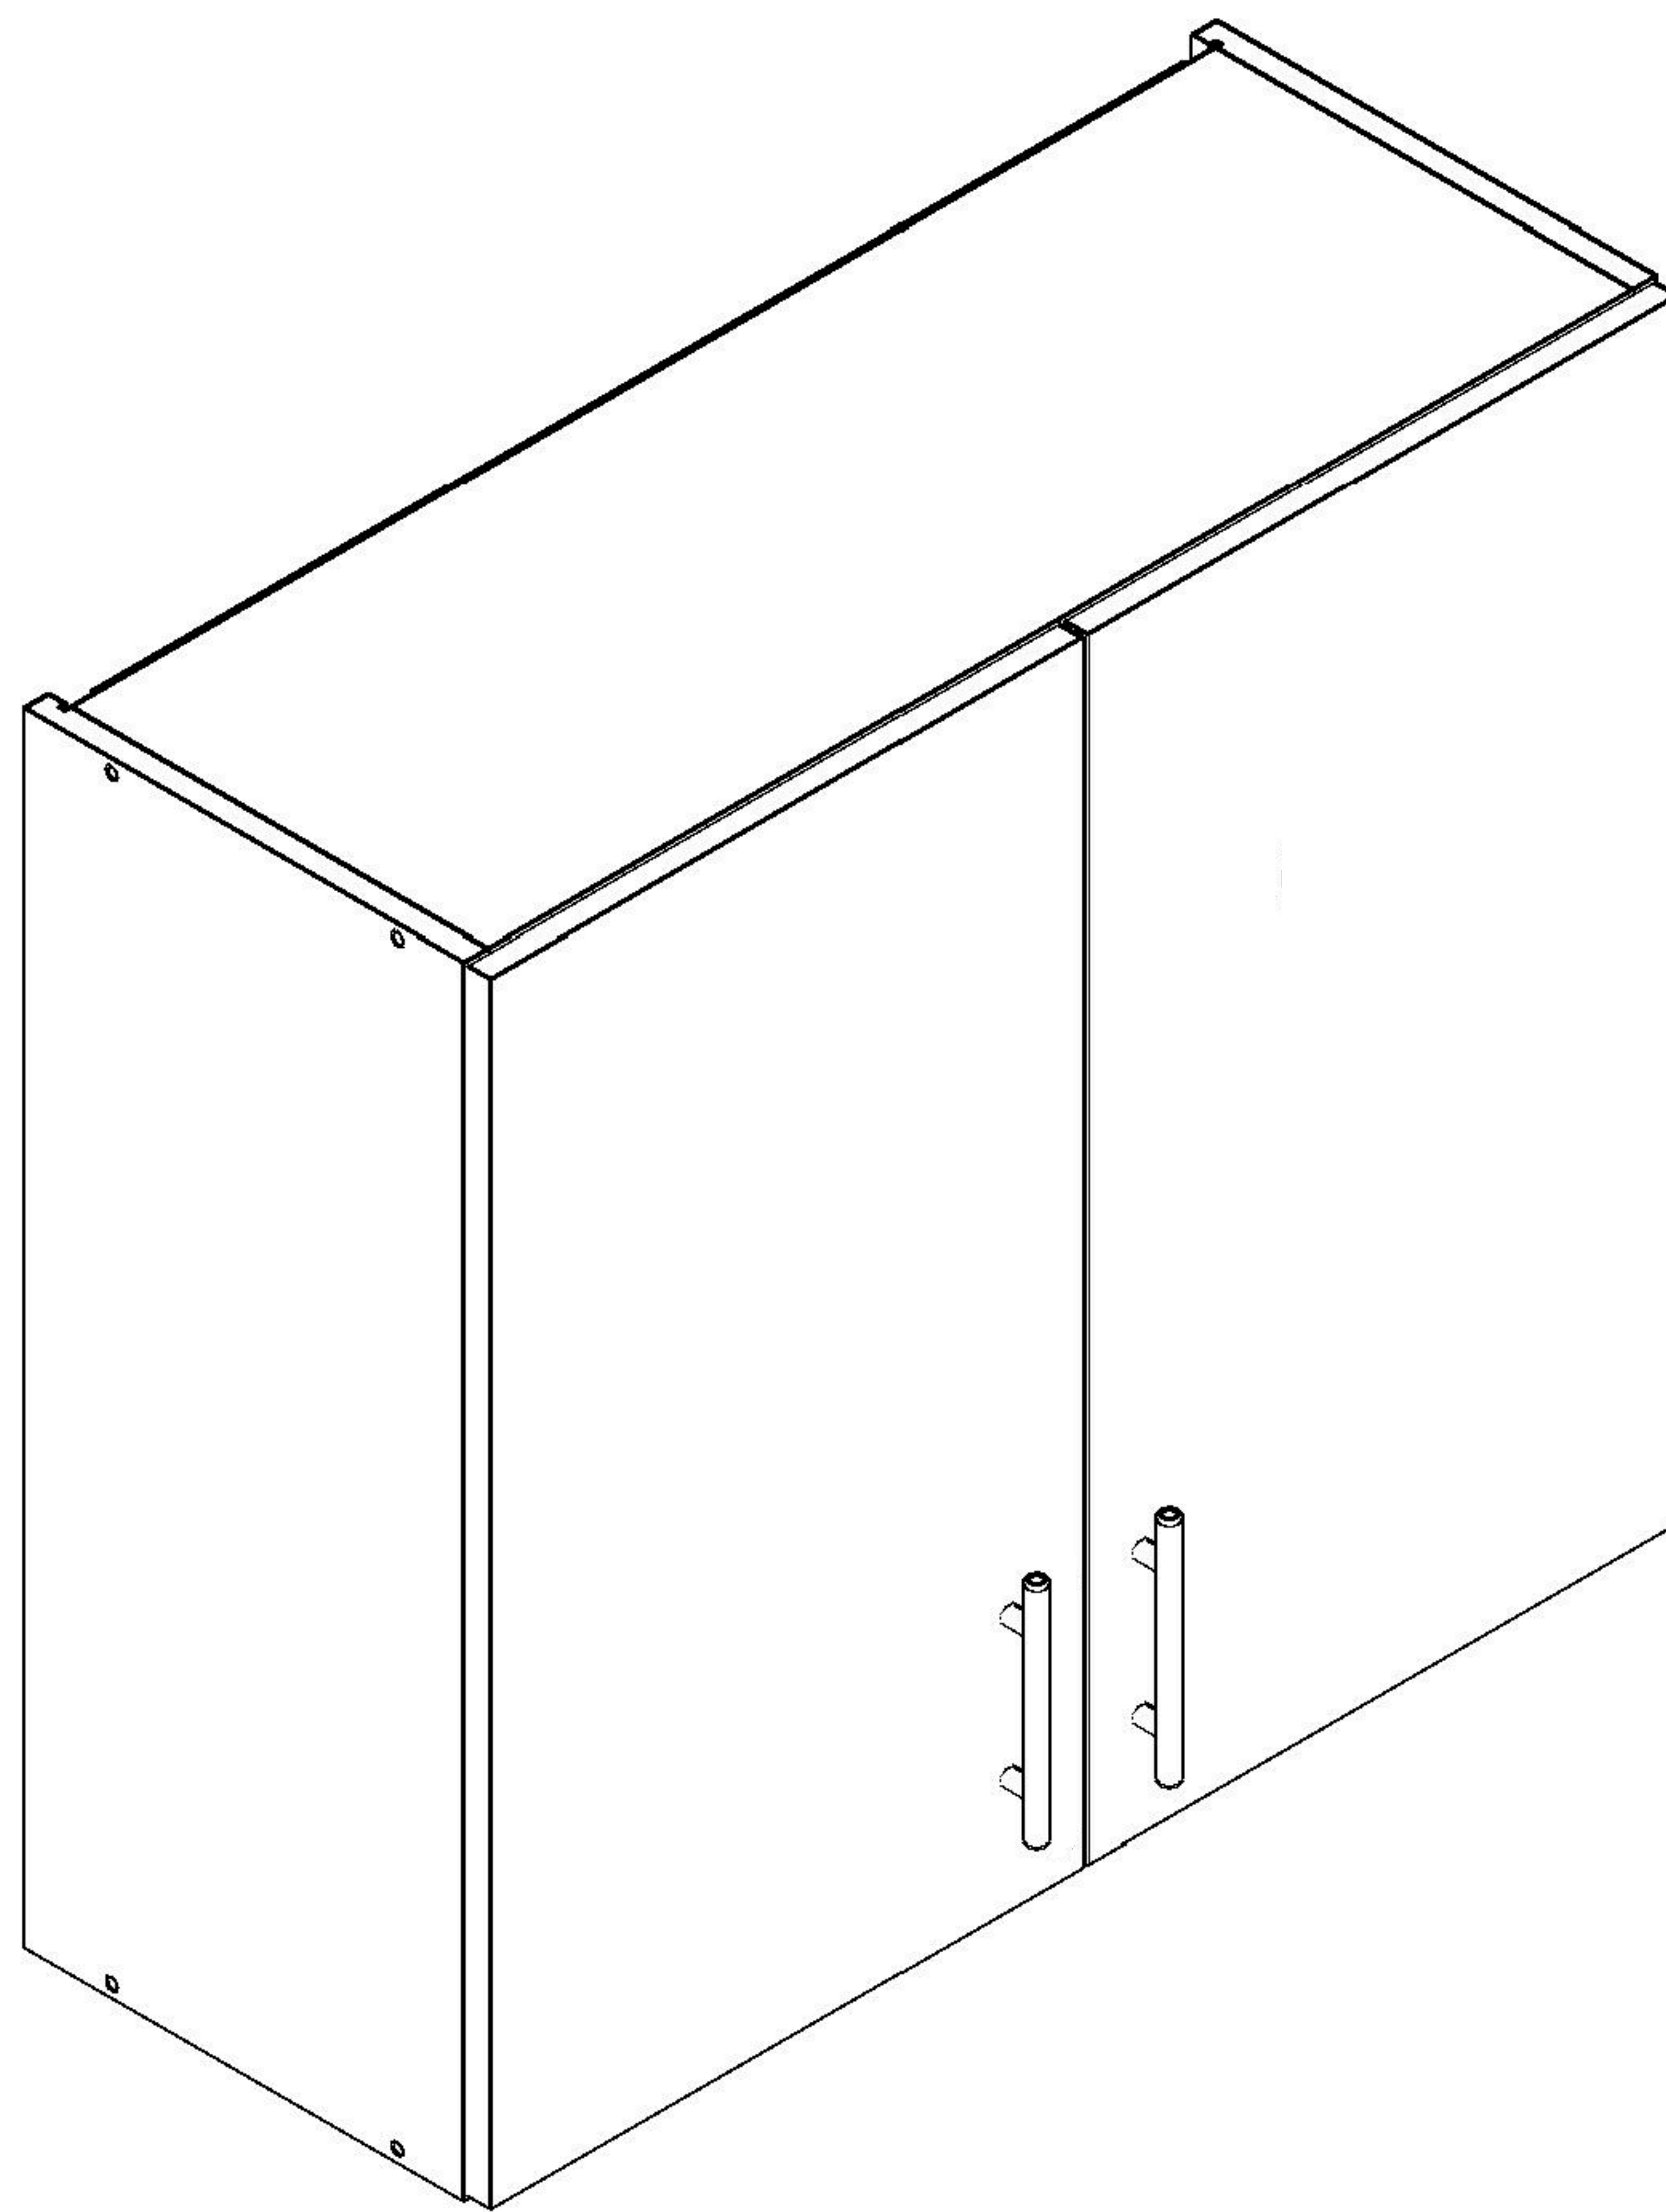


ASSEMBLY INSTRUCTIONS

KITCHEN WALL UNIT 800MM


MODEL W800

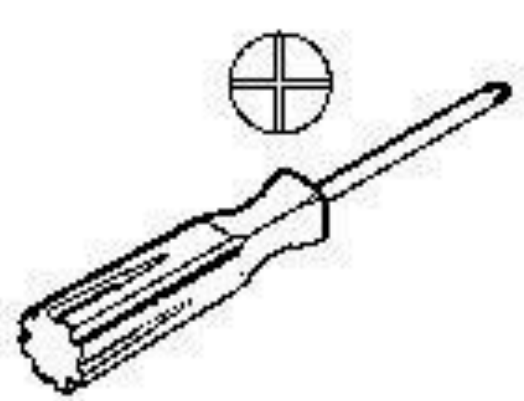


Cross-head
screwdriver

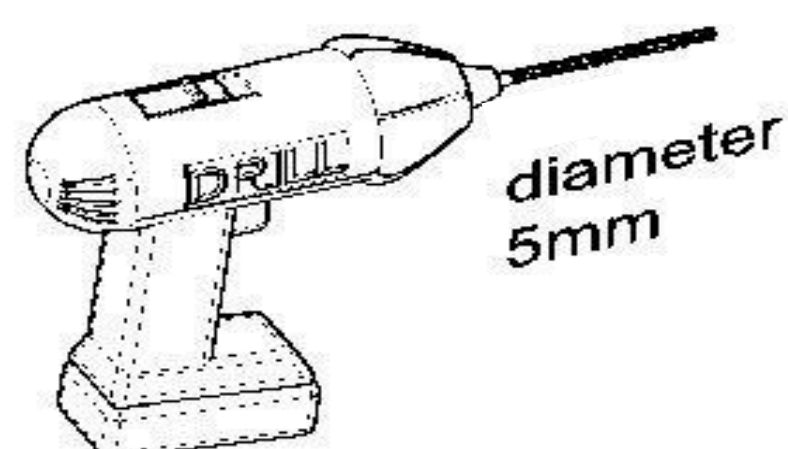

Electric
drill

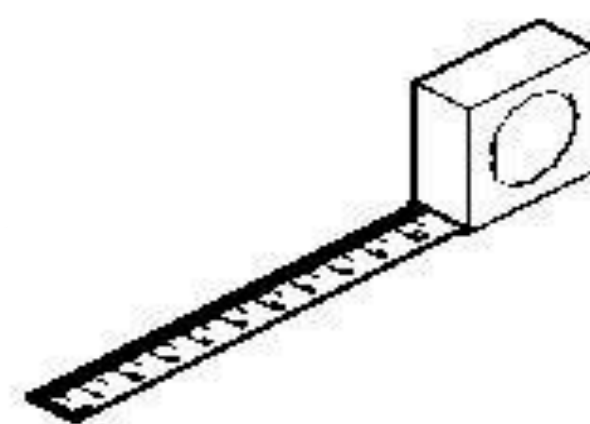

Rule

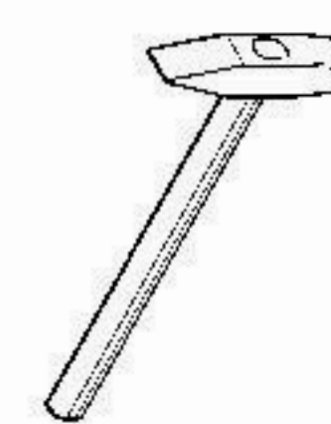

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below


1

x1

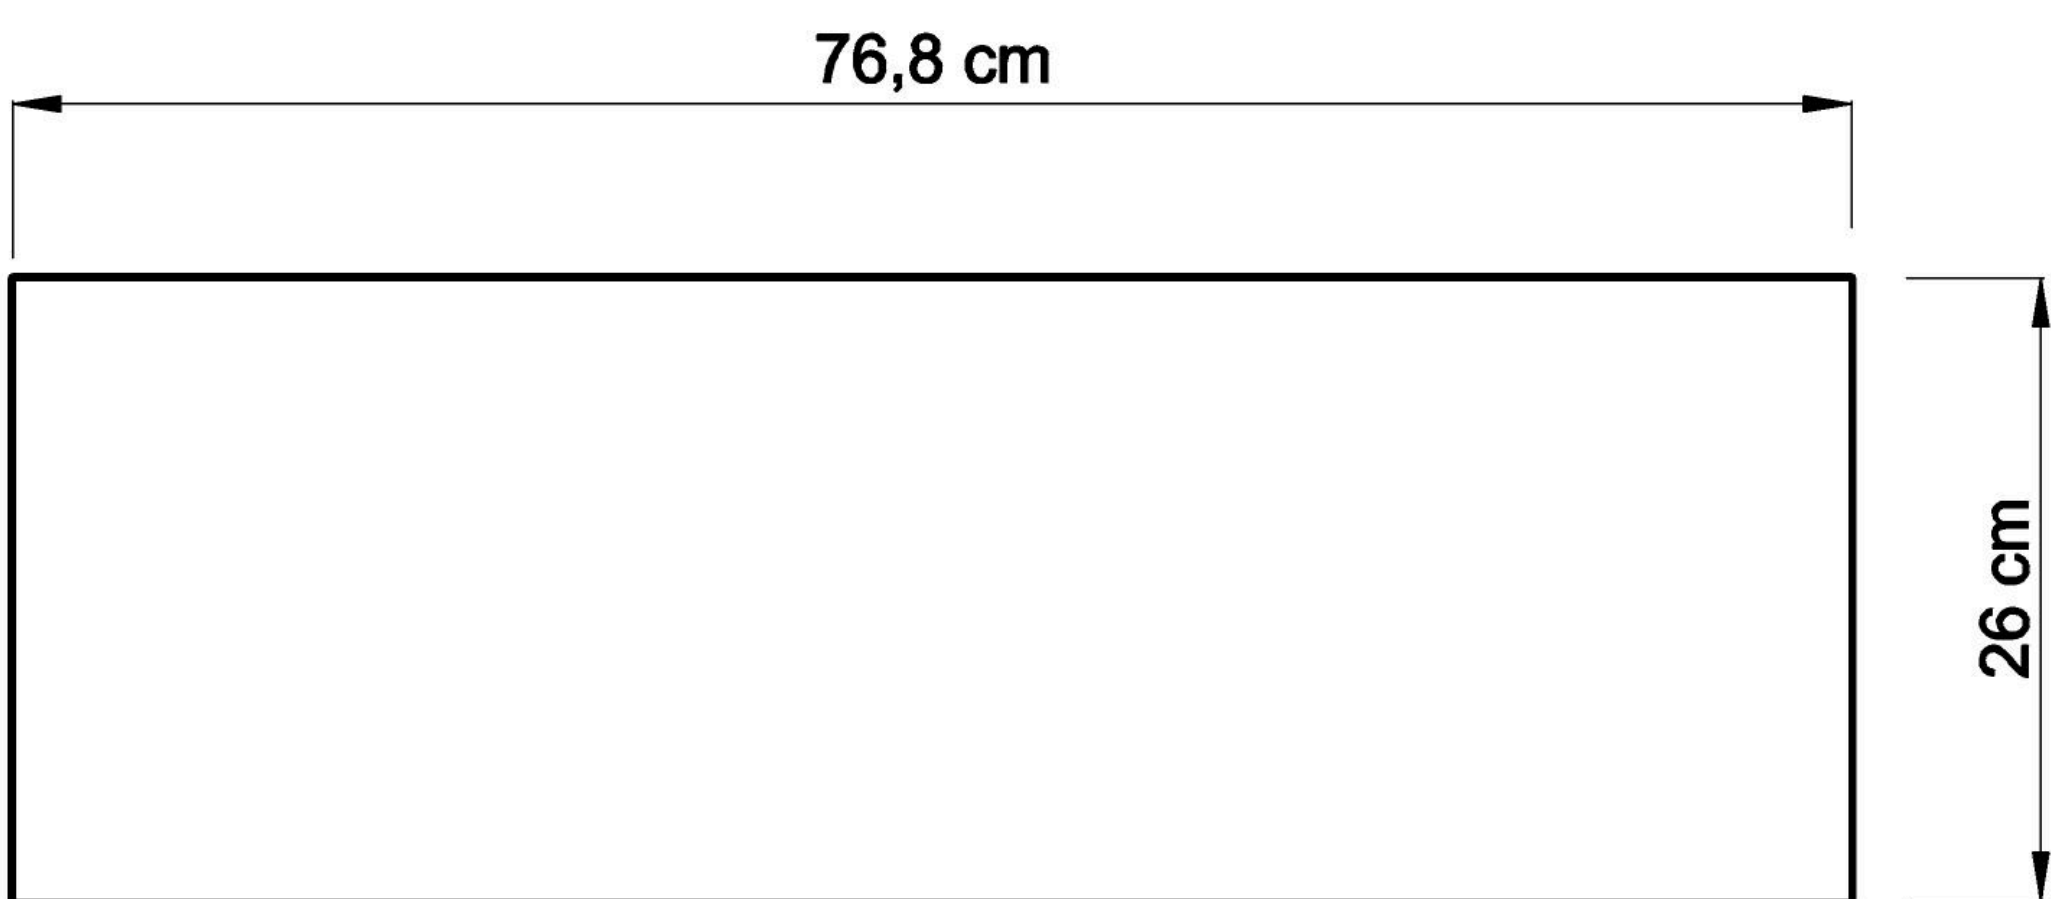


2

x2

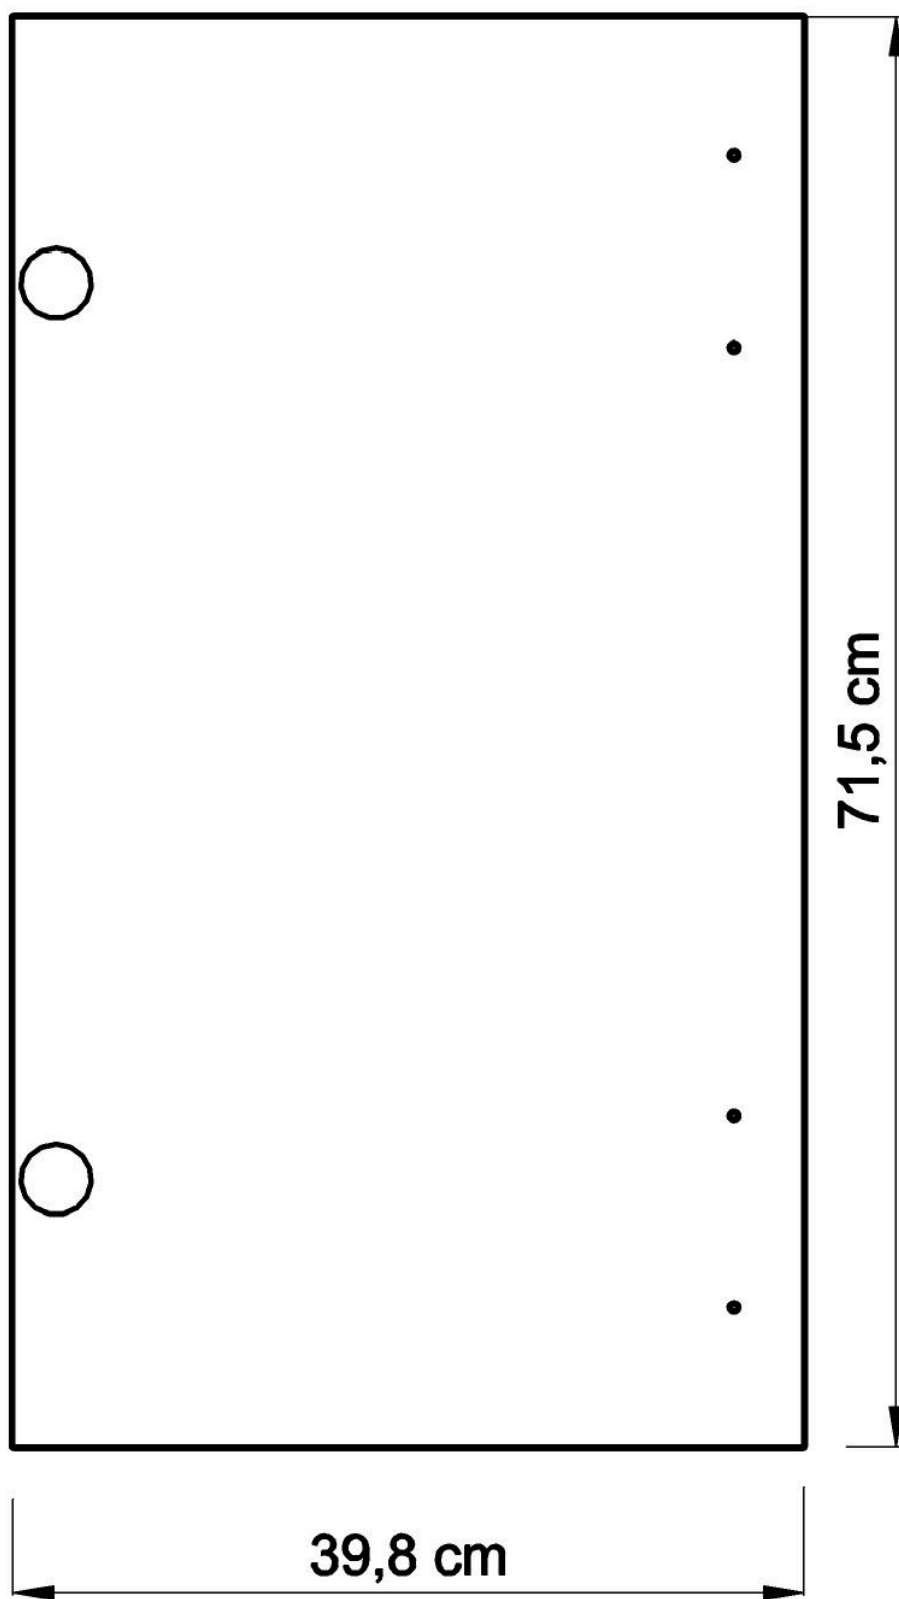


3

x2

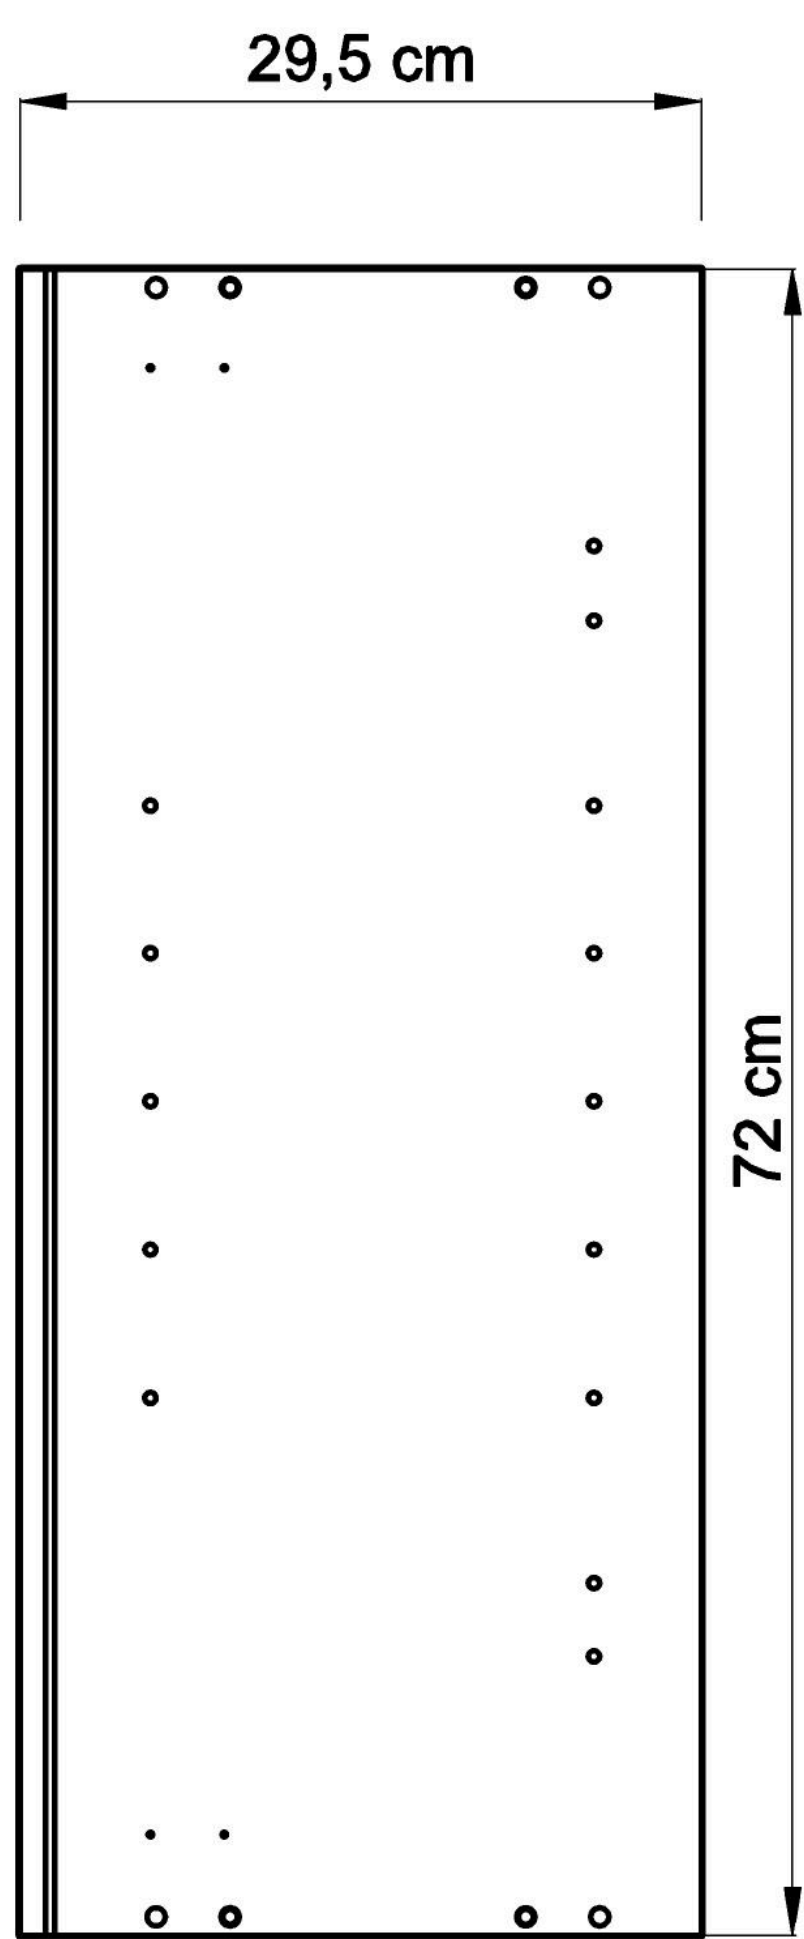


4

x1

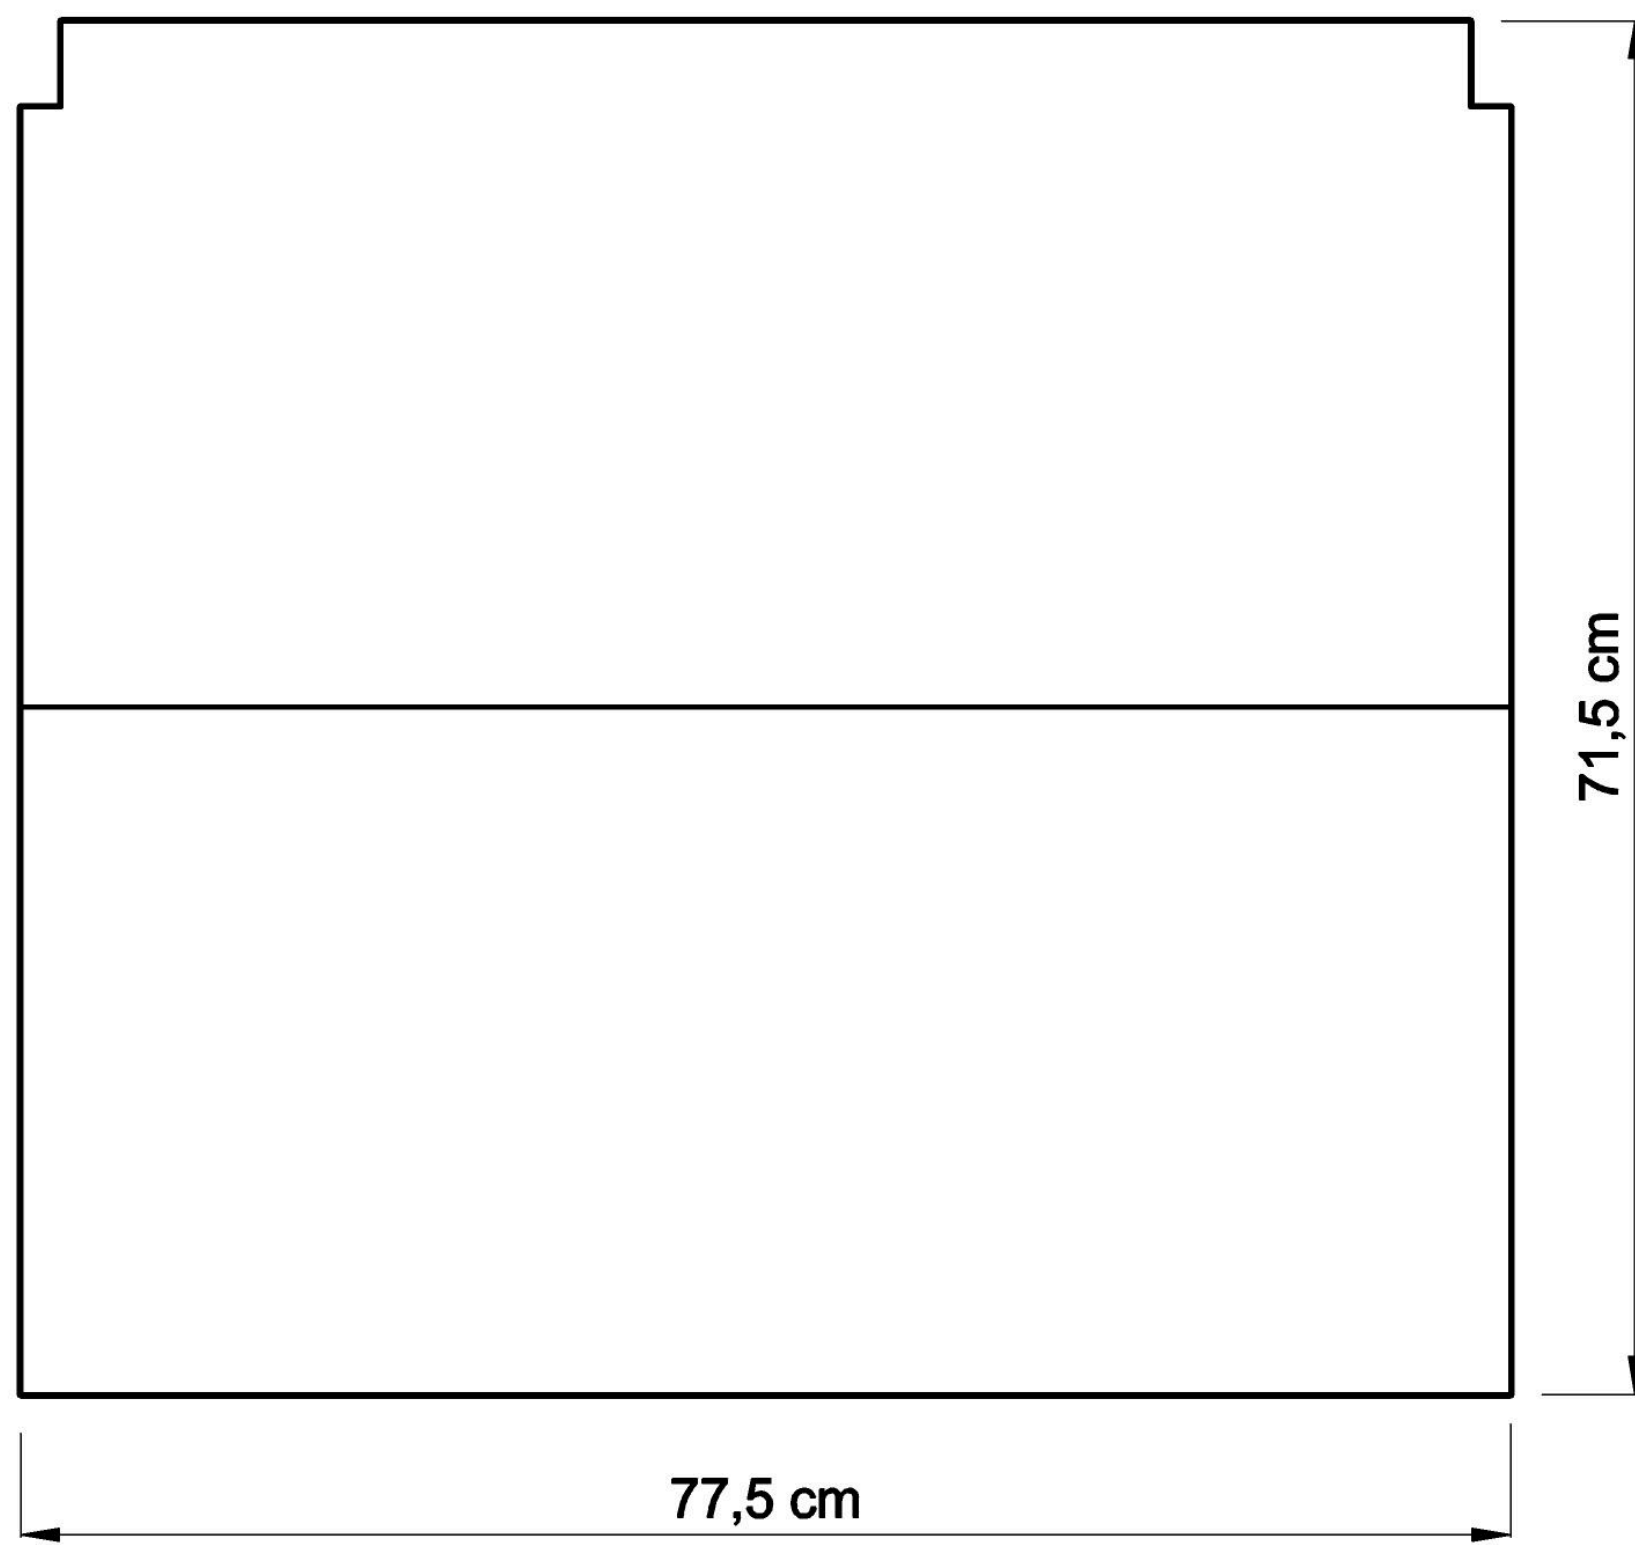











5

x2

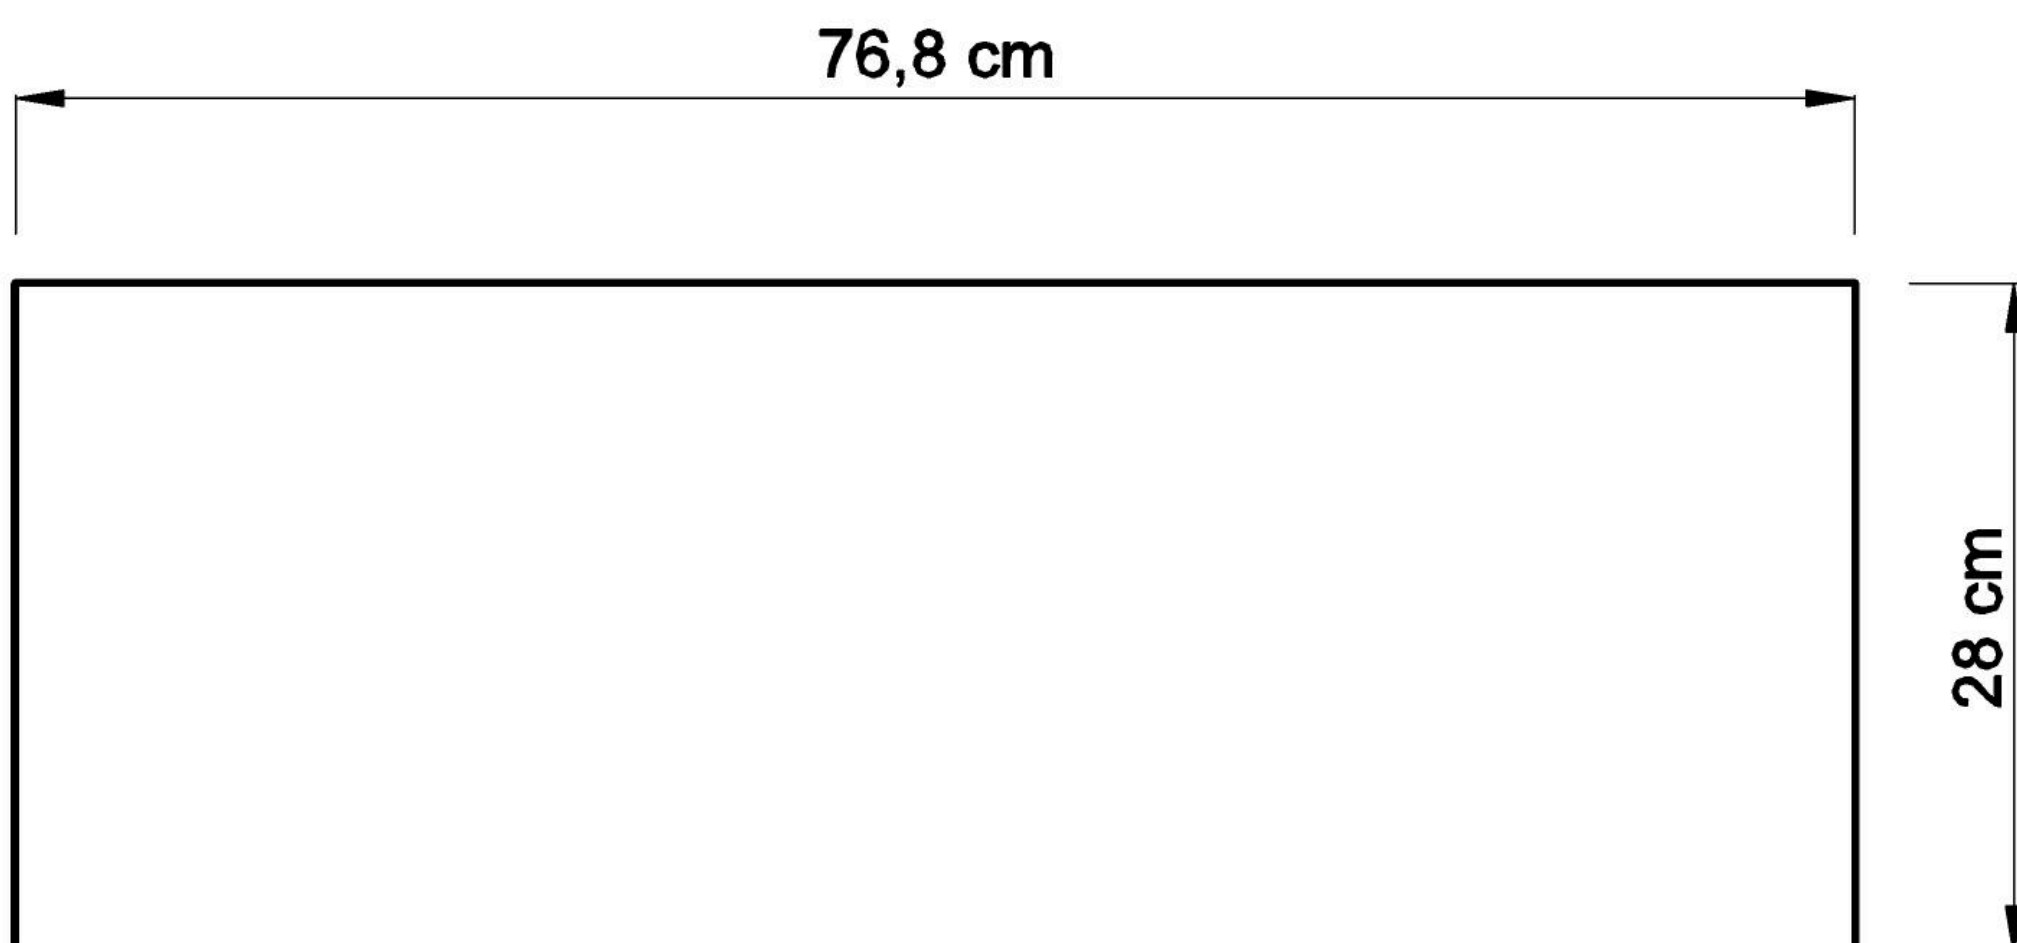

COMPONENTS - FITTINGS

Please check you have all the fittings listed below
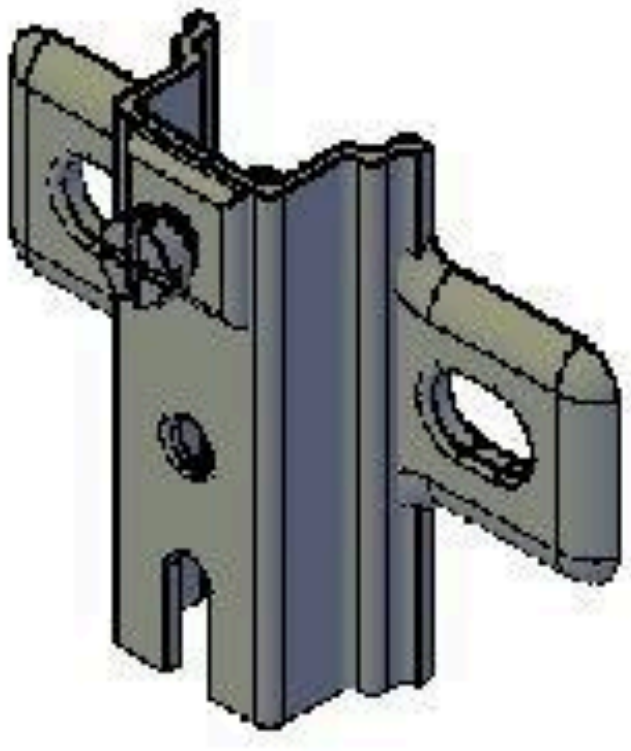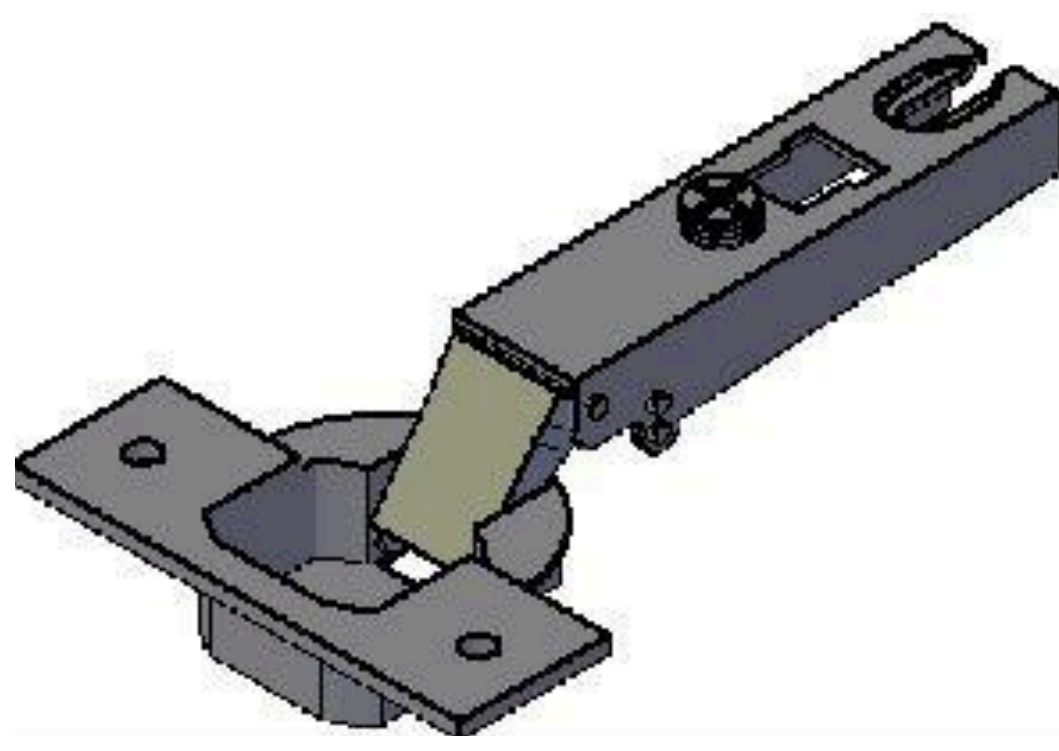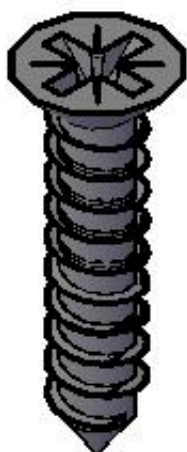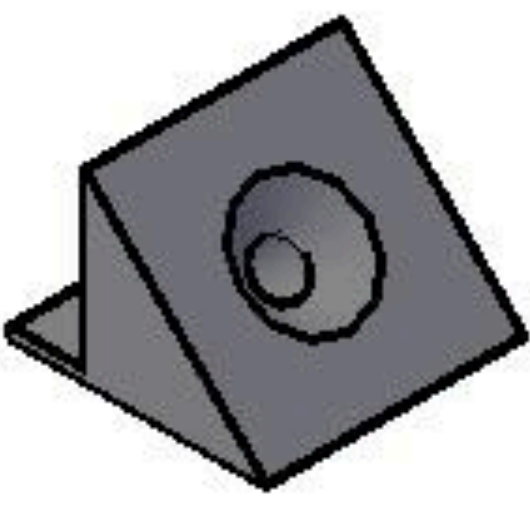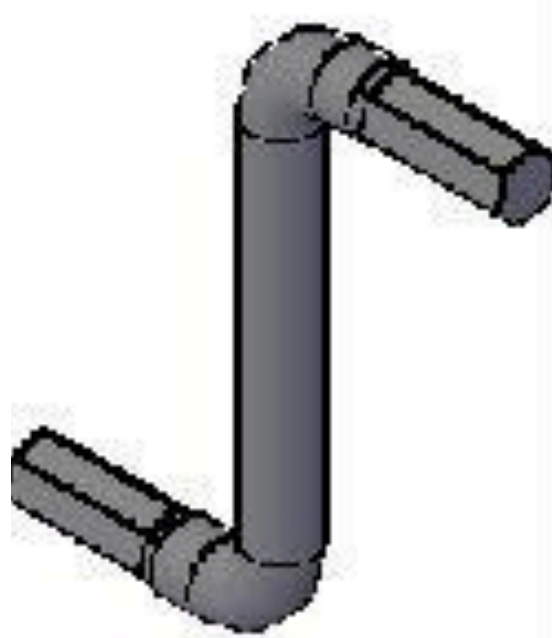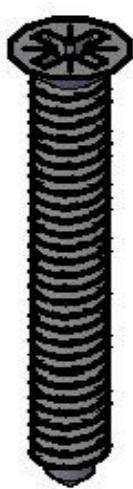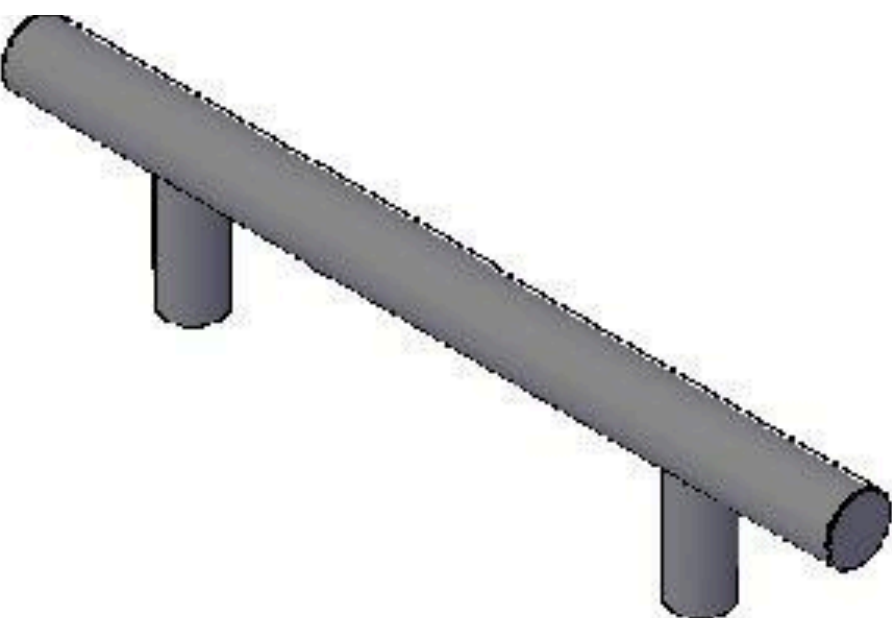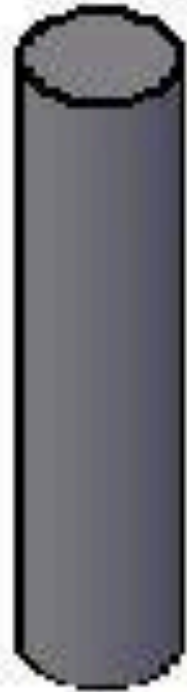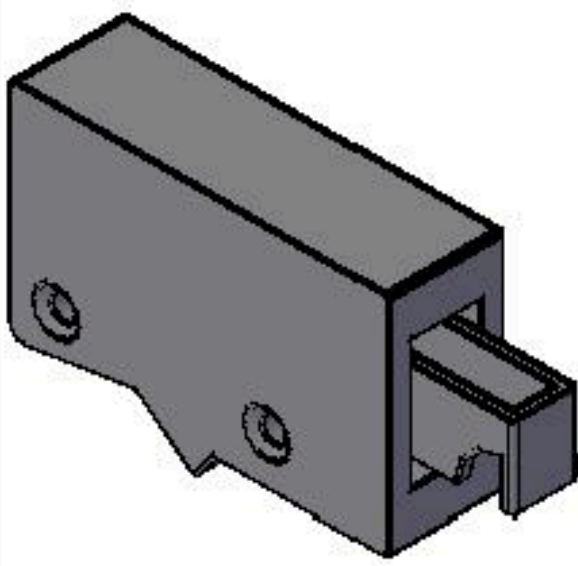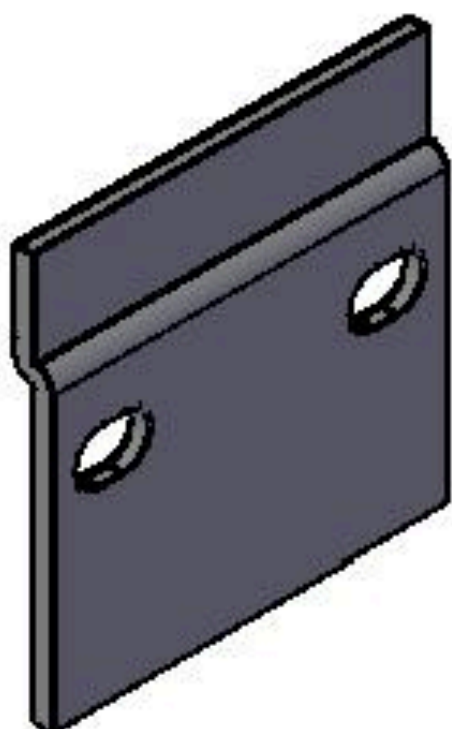
<div><div>O</div>x8</div> <div></div> <div>⌀ 7x16</div>	<div><div>F</div>x4</div> <div></div> <div></div>	<div><div>G2</div>x4</div> <div></div> <div></div>	<div><div>!</div></div> <div>PAY ATTENTION: O AND F ATTACHED TO G2</div>
<div><div>H3</div>x12</div> <div></div> <div>⌀ 3x16</div>	<div><div>A4</div>x12</div> <div></div> <div></div>	<div><div>Q7</div>x1</div> <div></div> <div></div>	<div><div>C</div>x8</div> <div></div> <div>⌀ 7x50</div>
<div><div>S1</div>x8</div> <div></div> <div></div>	<div><div>H9</div>x4 US 031.03</div> <div></div> <div>⌀ 4x30</div>	<div><div>J9</div>x4</div> <div></div> <div>⌀ 3x25</div>	<div><div>U7</div>x2</div> <div></div> <div></div>
<div><div>H</div>x8 US 031.03</div> <div></div> <div>⌀ 3.5x13</div>	<div><div>W</div>x16</div> <div></div> <div></div>	<div><div>D8</div>x4</div> <div></div> <div></div>	<div><div>A</div>x8</div> <div></div> <div></div>
<div><div>S7</div>x4</div> <div></div> <div></div>	<div><div>Z8</div>x2</div> <div></div> <div></div>	<div><div>Z9</div>x2</div> <div></div> <div></div>	

STEP - 1

! PAY ATTENTION: O ATTACHED TO F


O x8

F x4




‡7x16

H9 x4 US 031.03

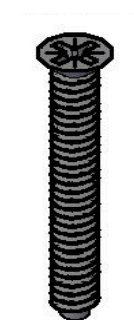


‡4x30

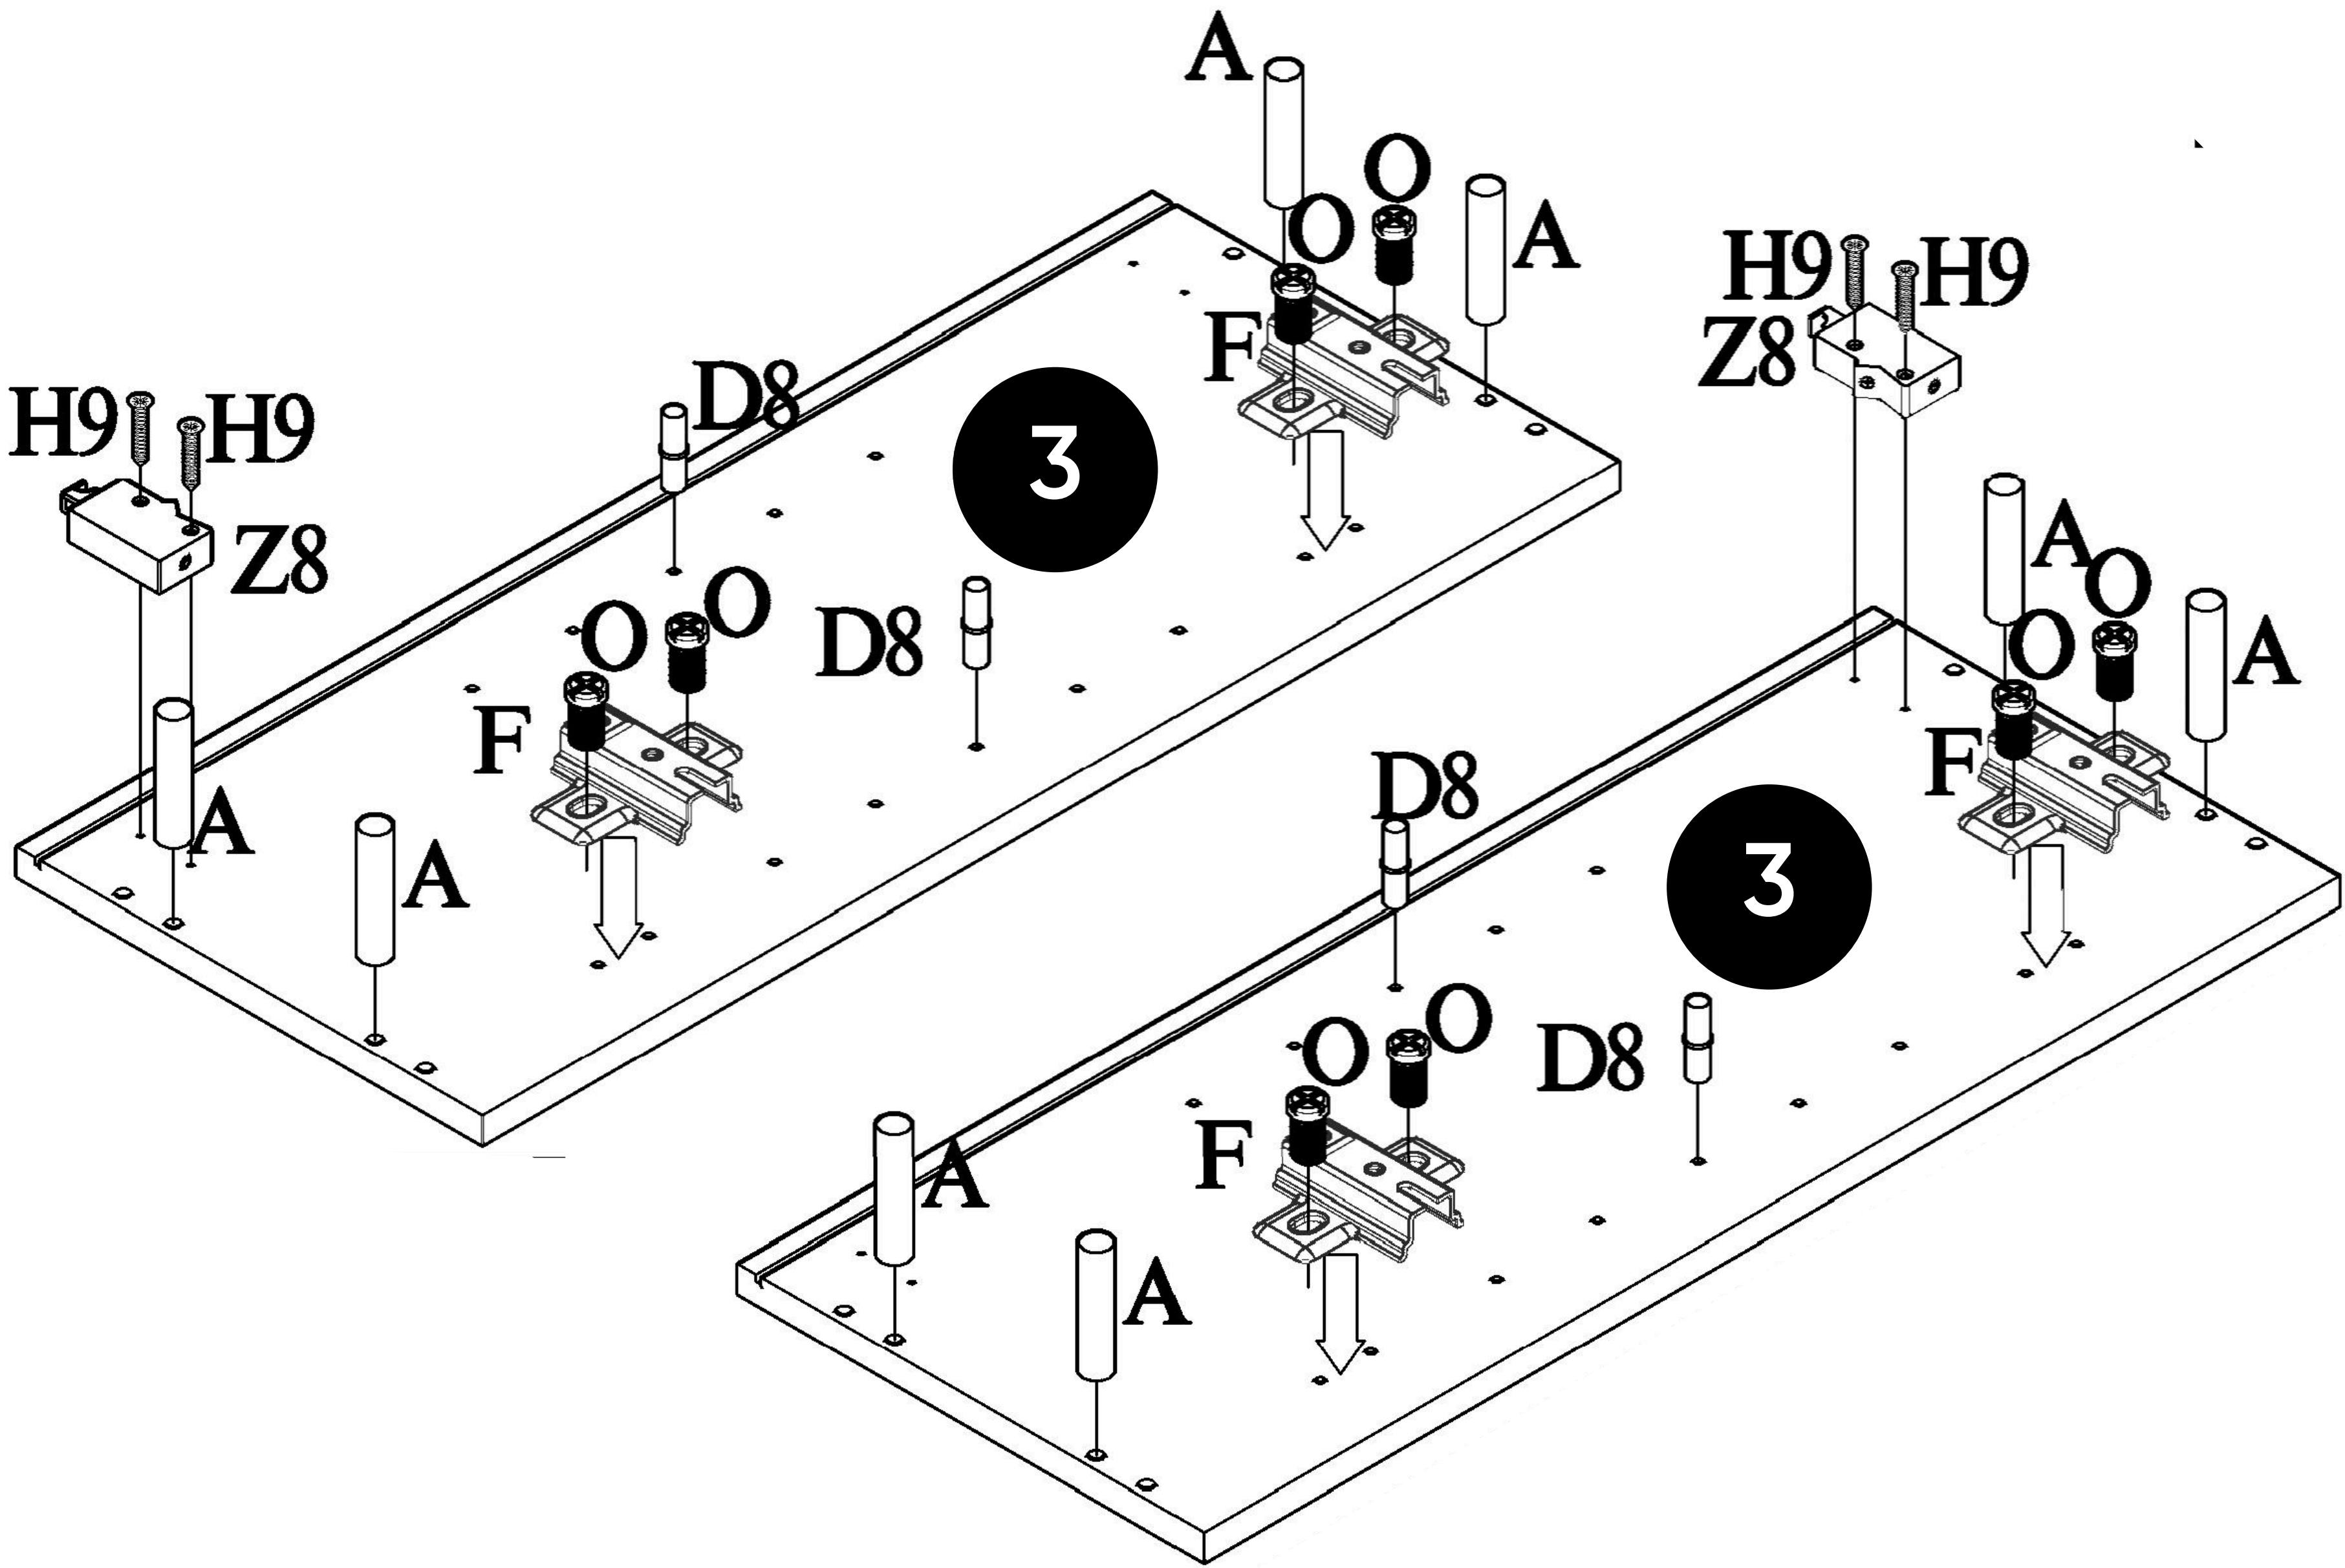


STEP - 2

Q7 x1

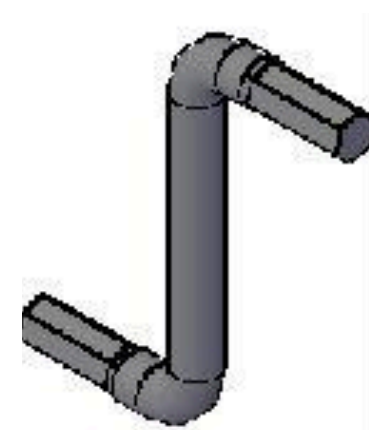



S1 x8

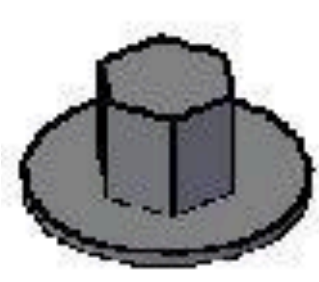


C x8





‡7x50

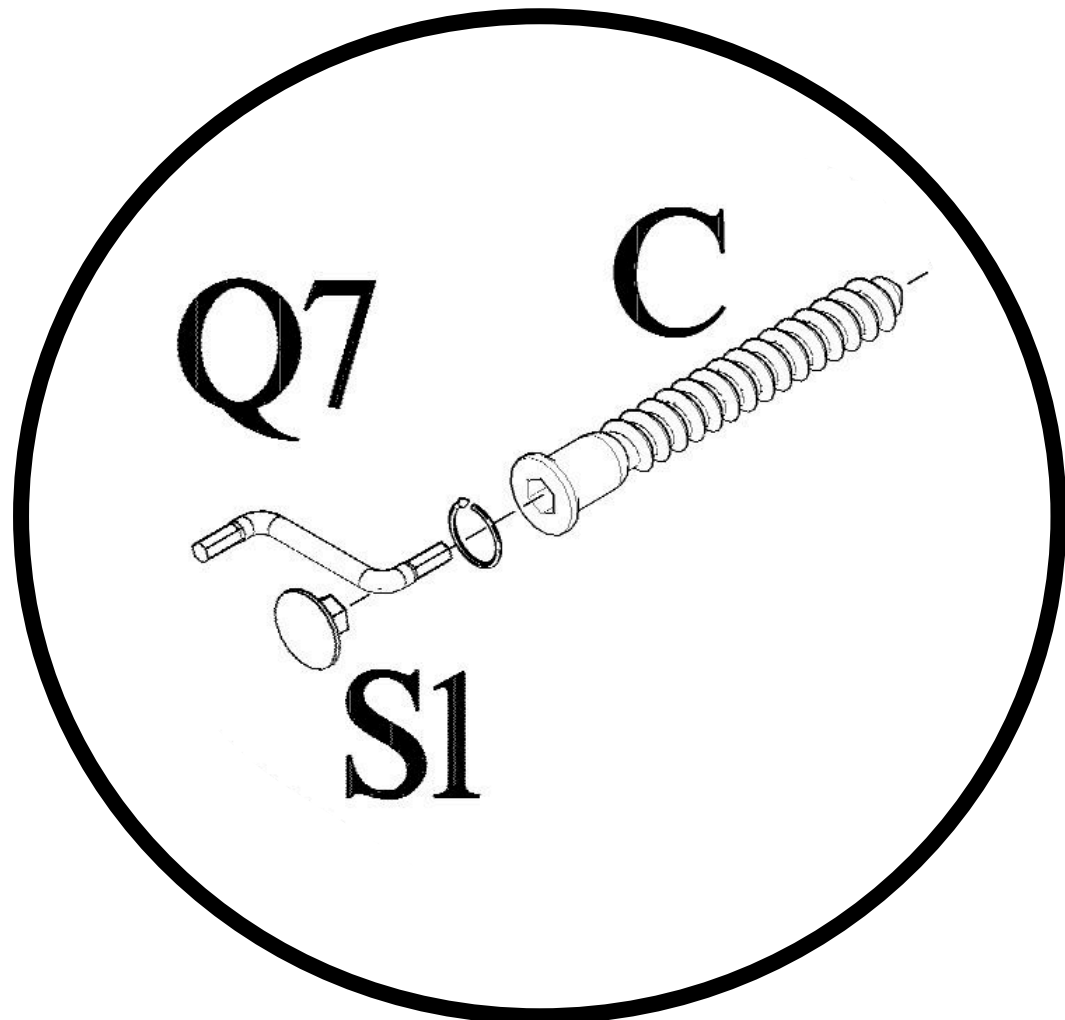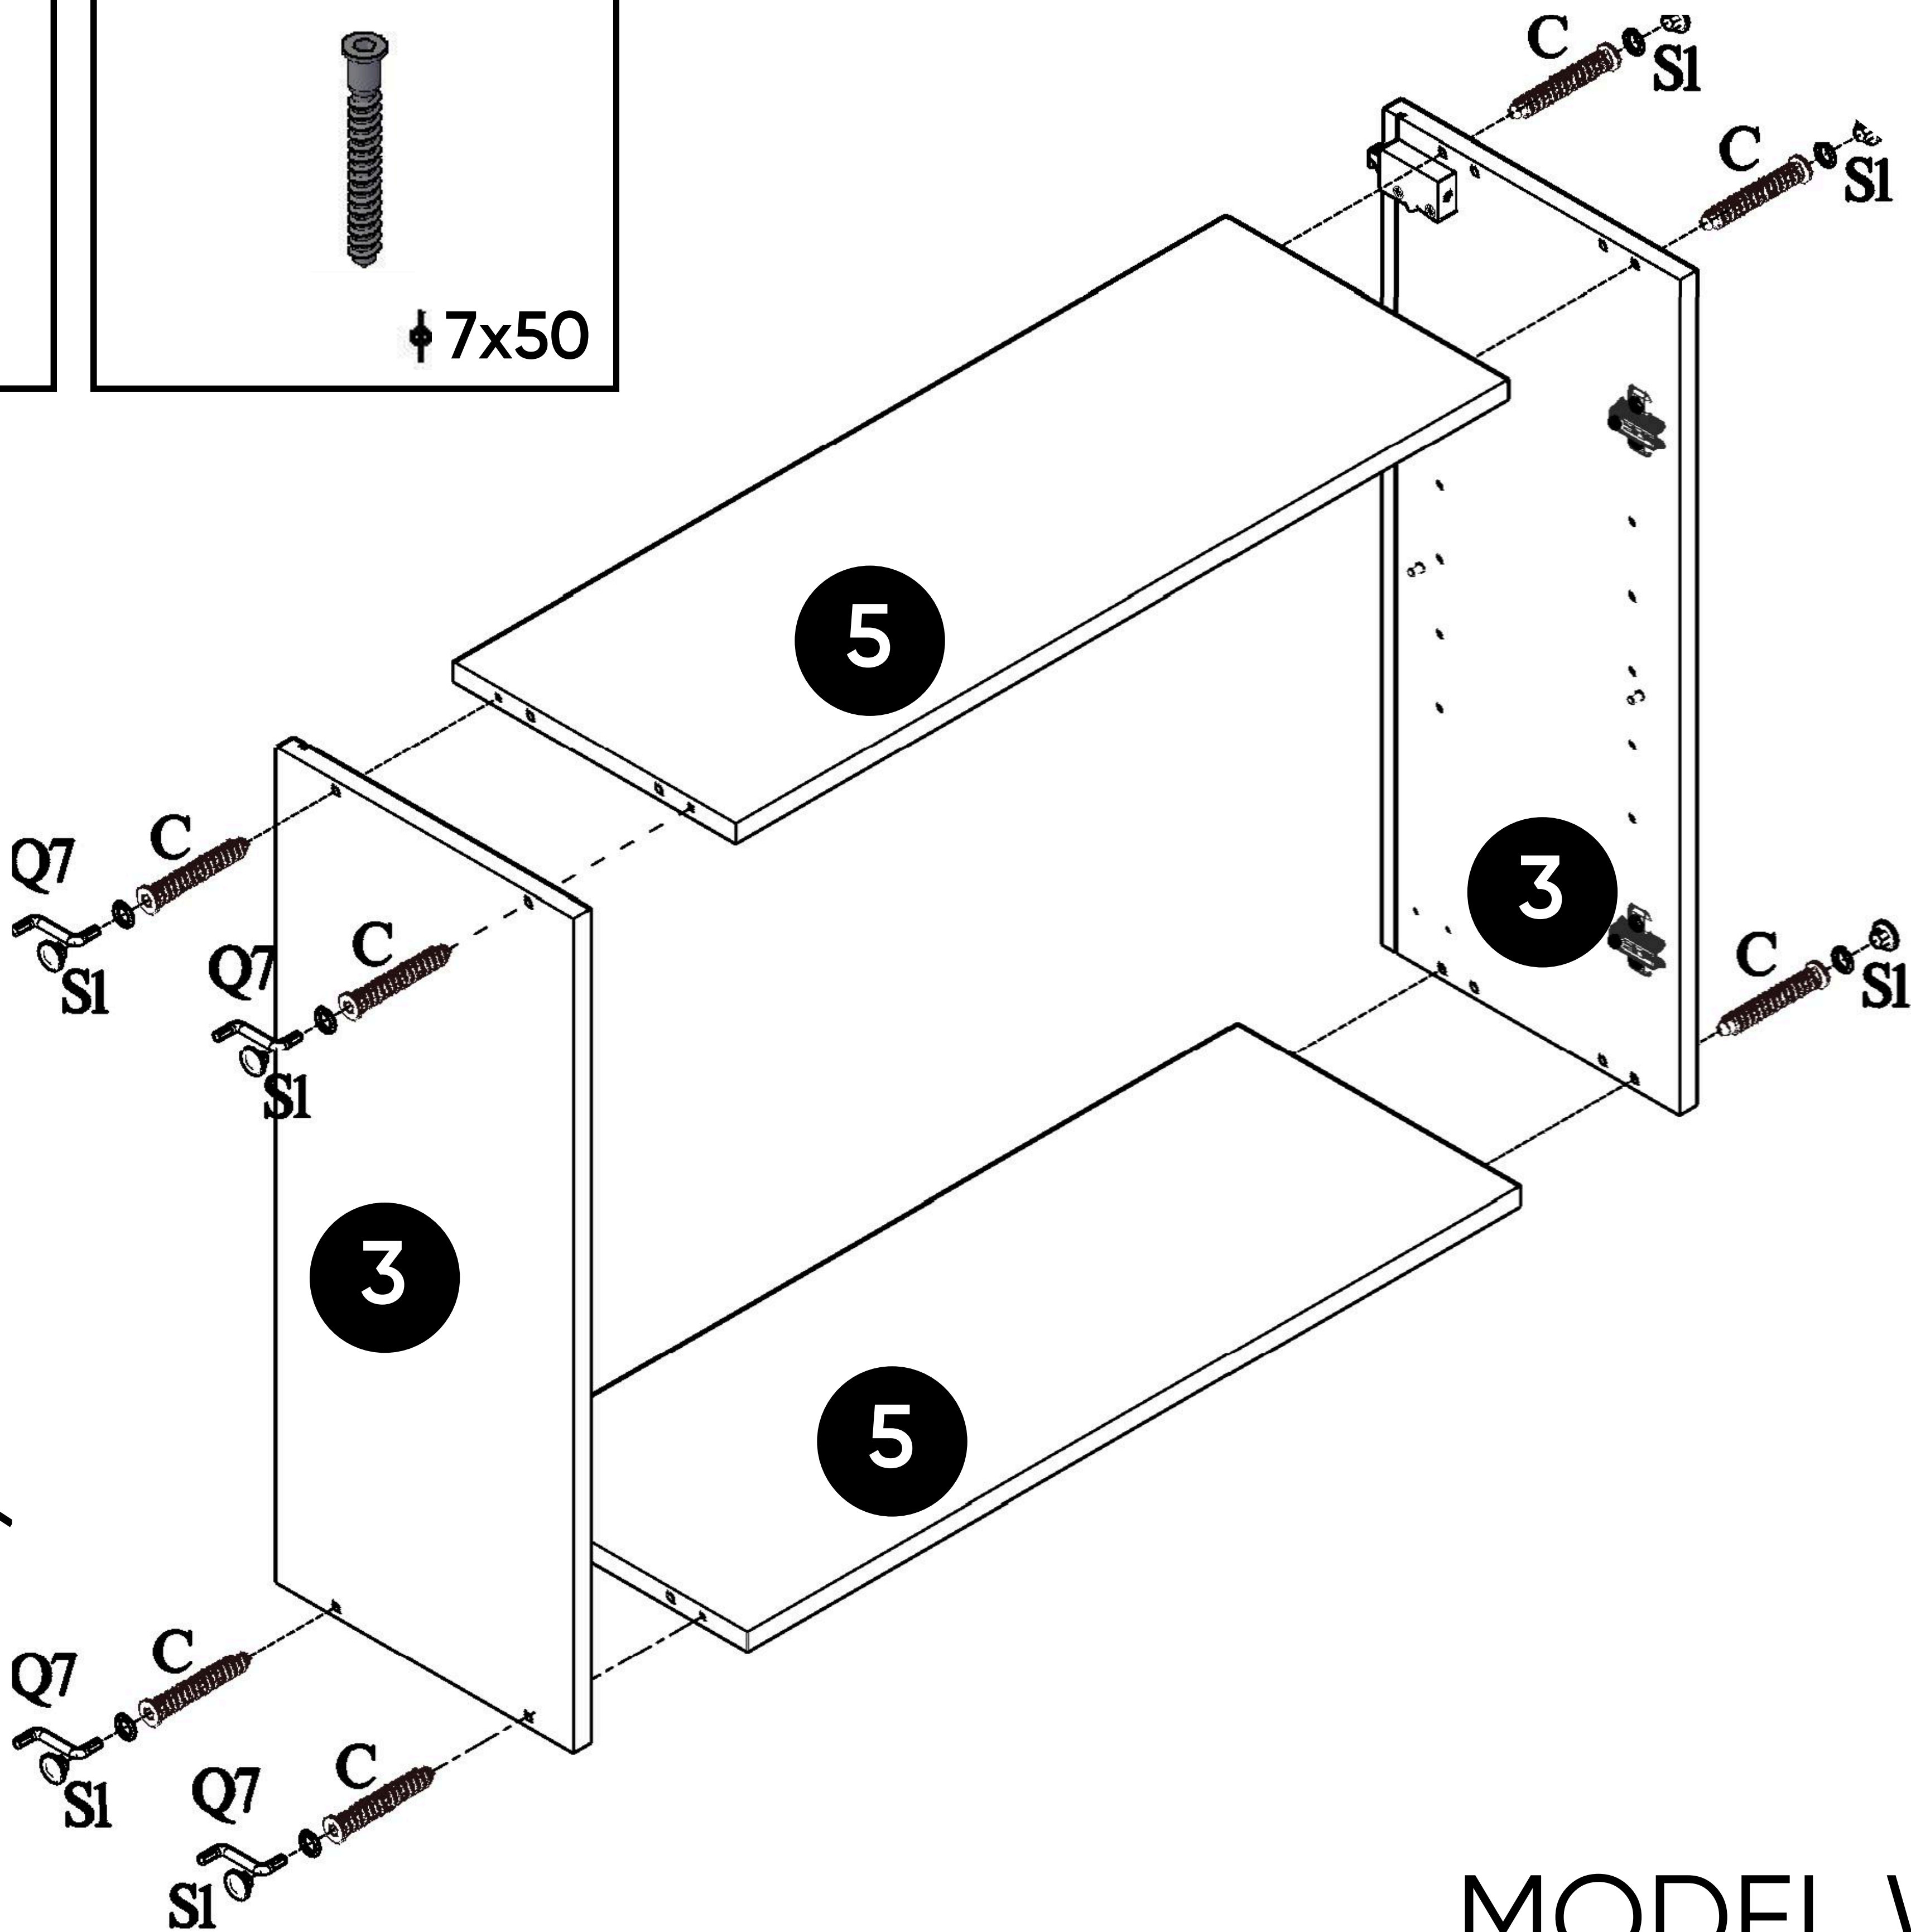

STEP - 3

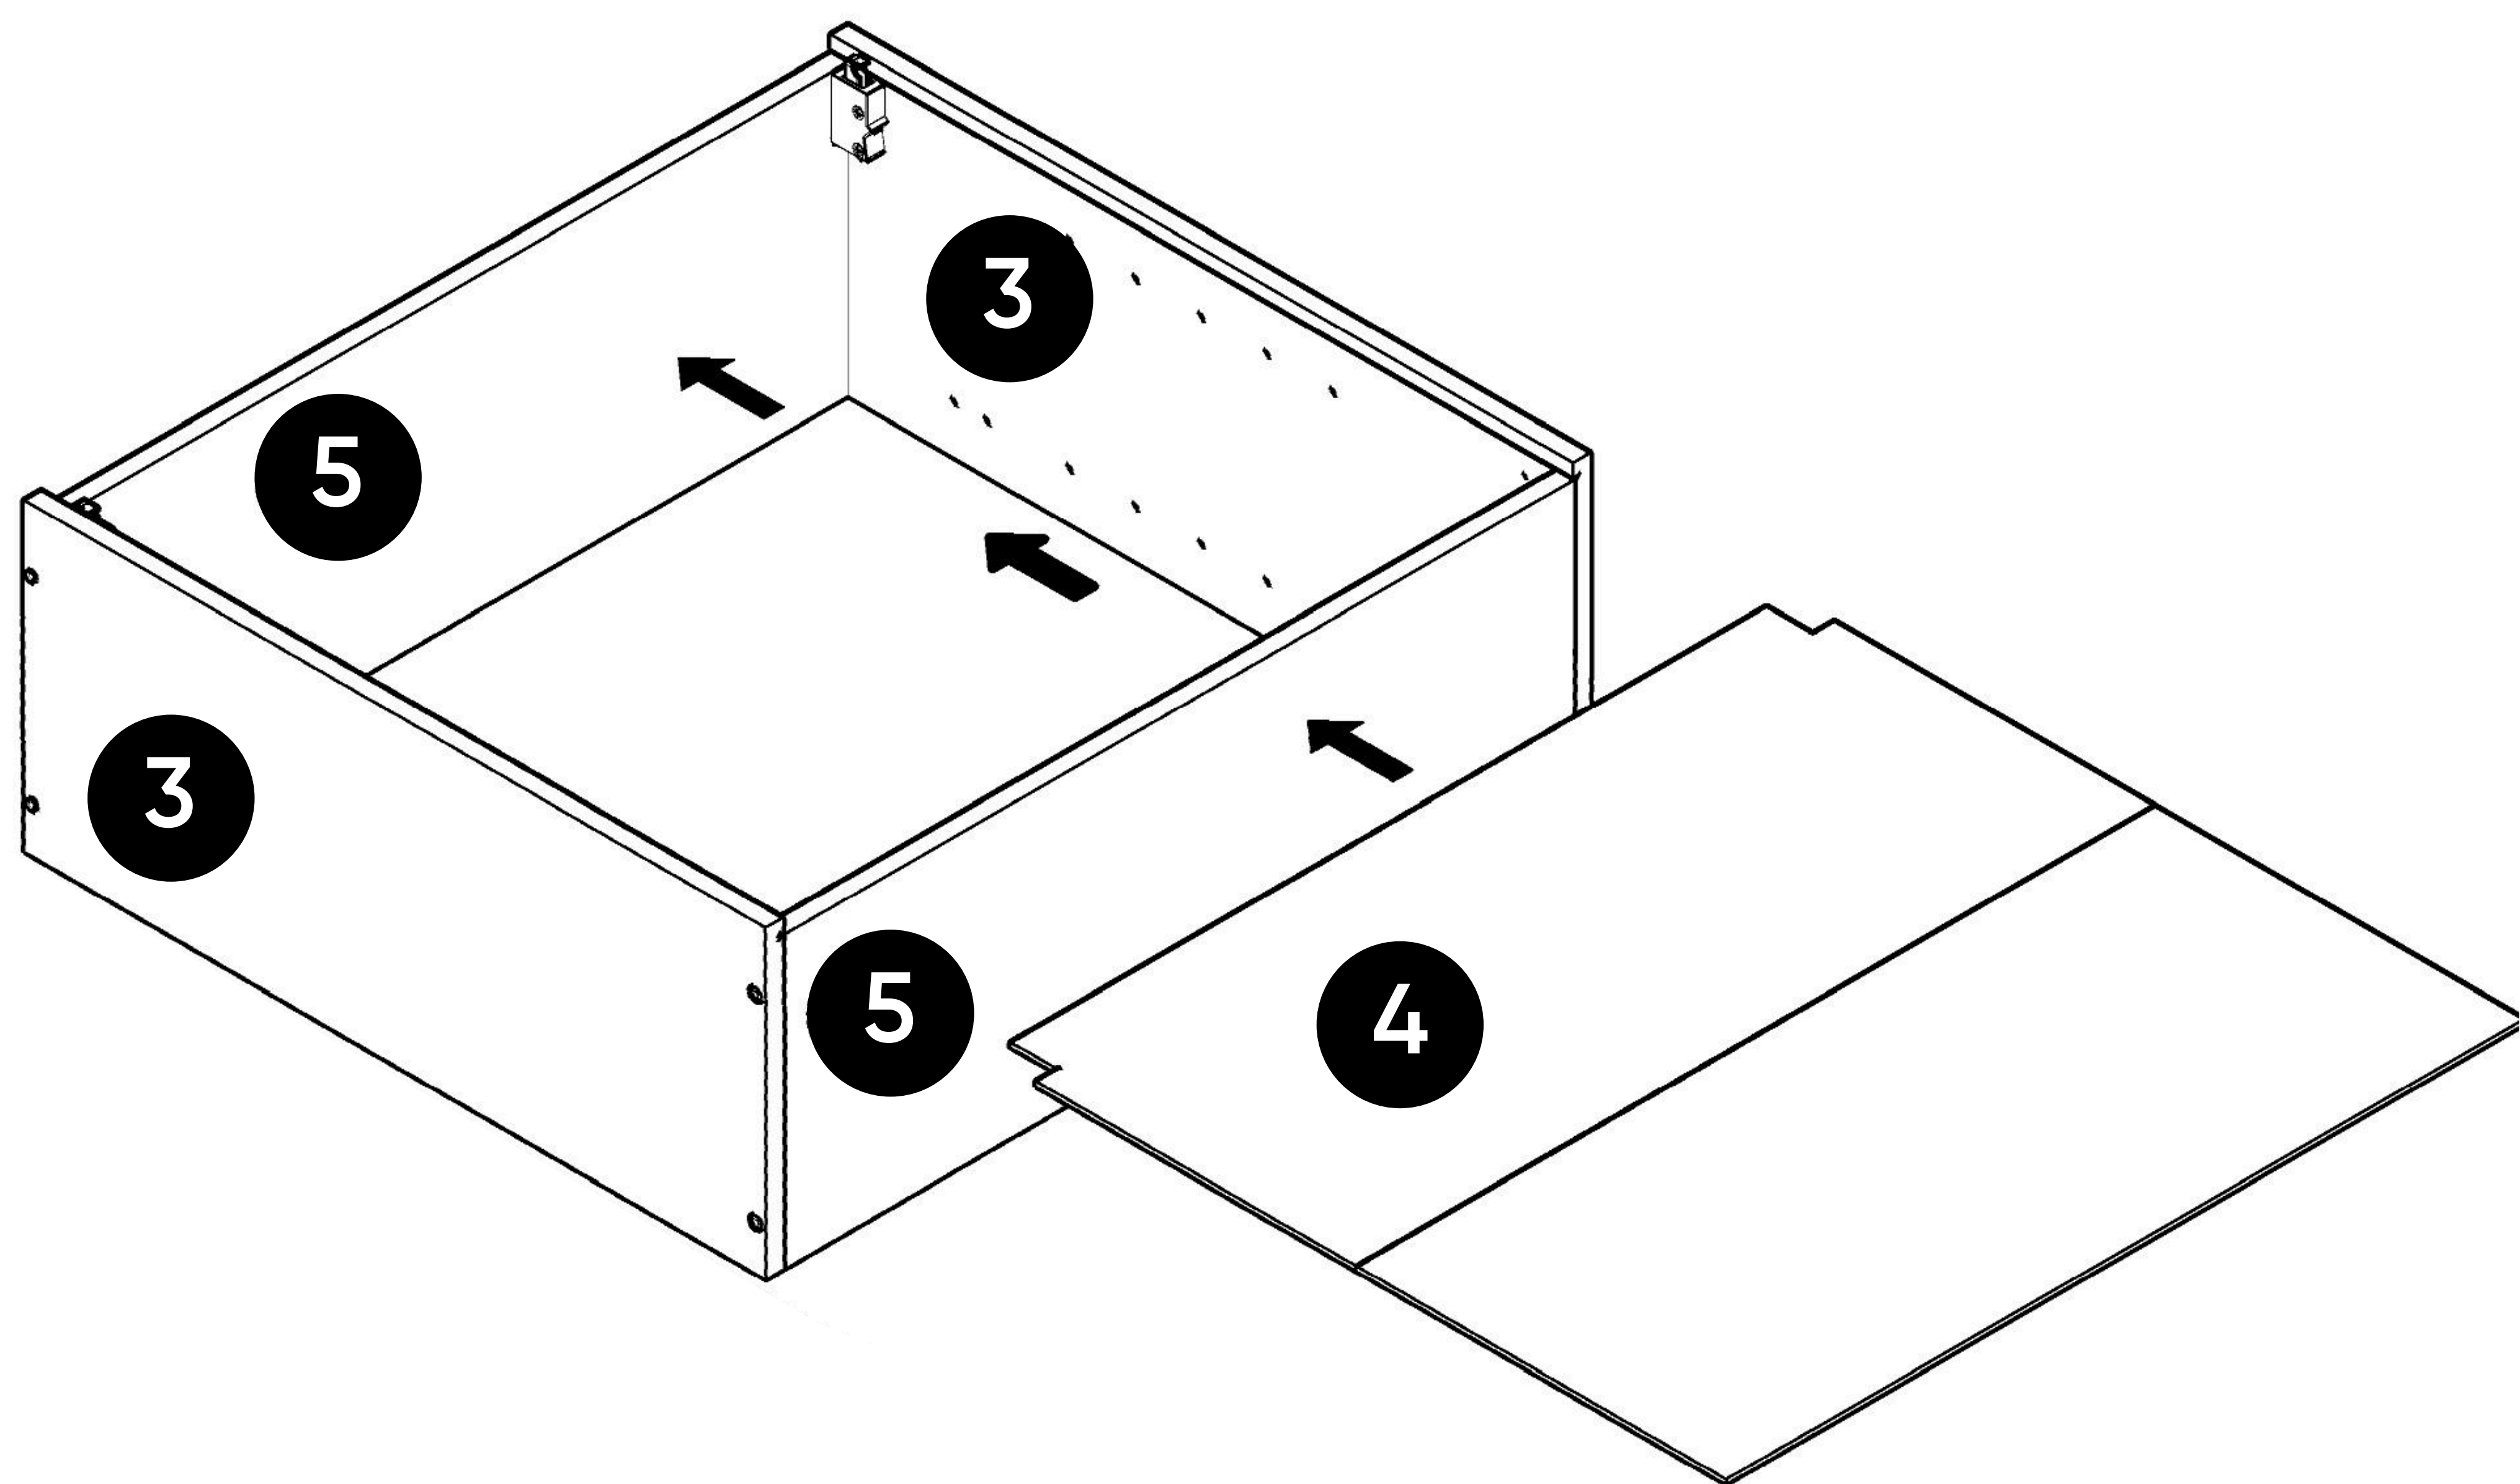


STEP - 4

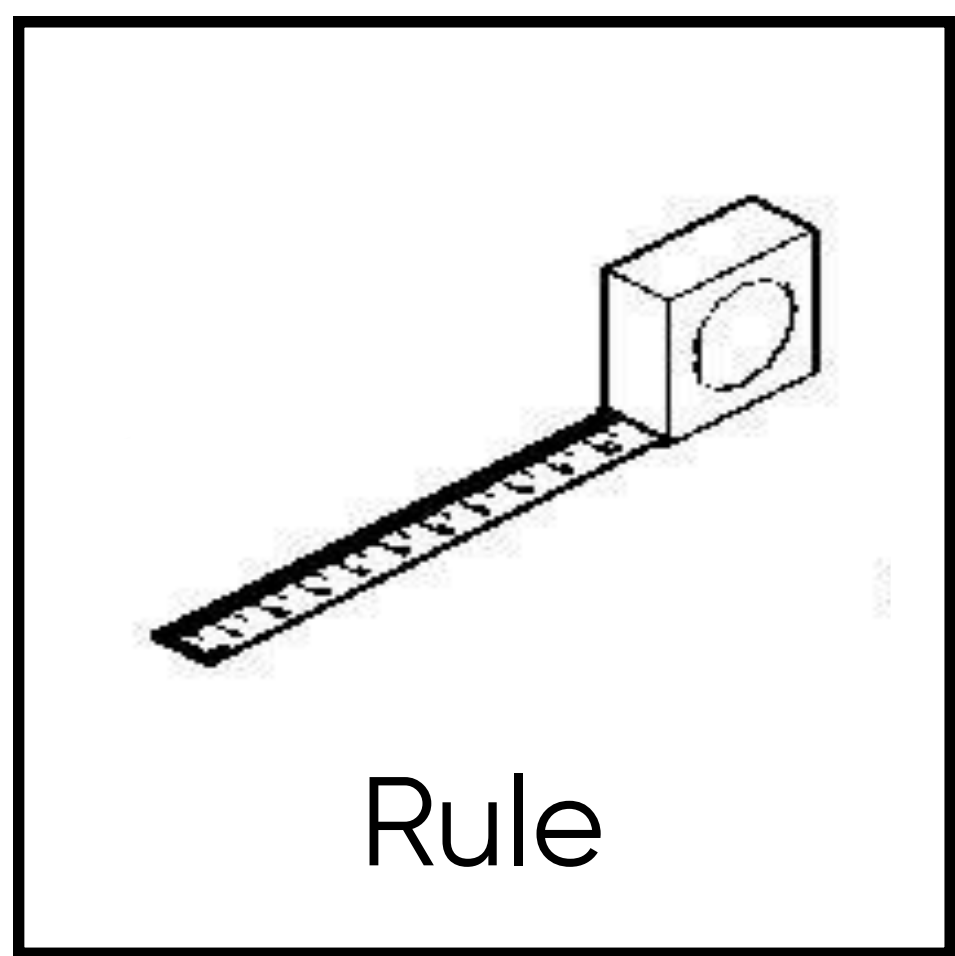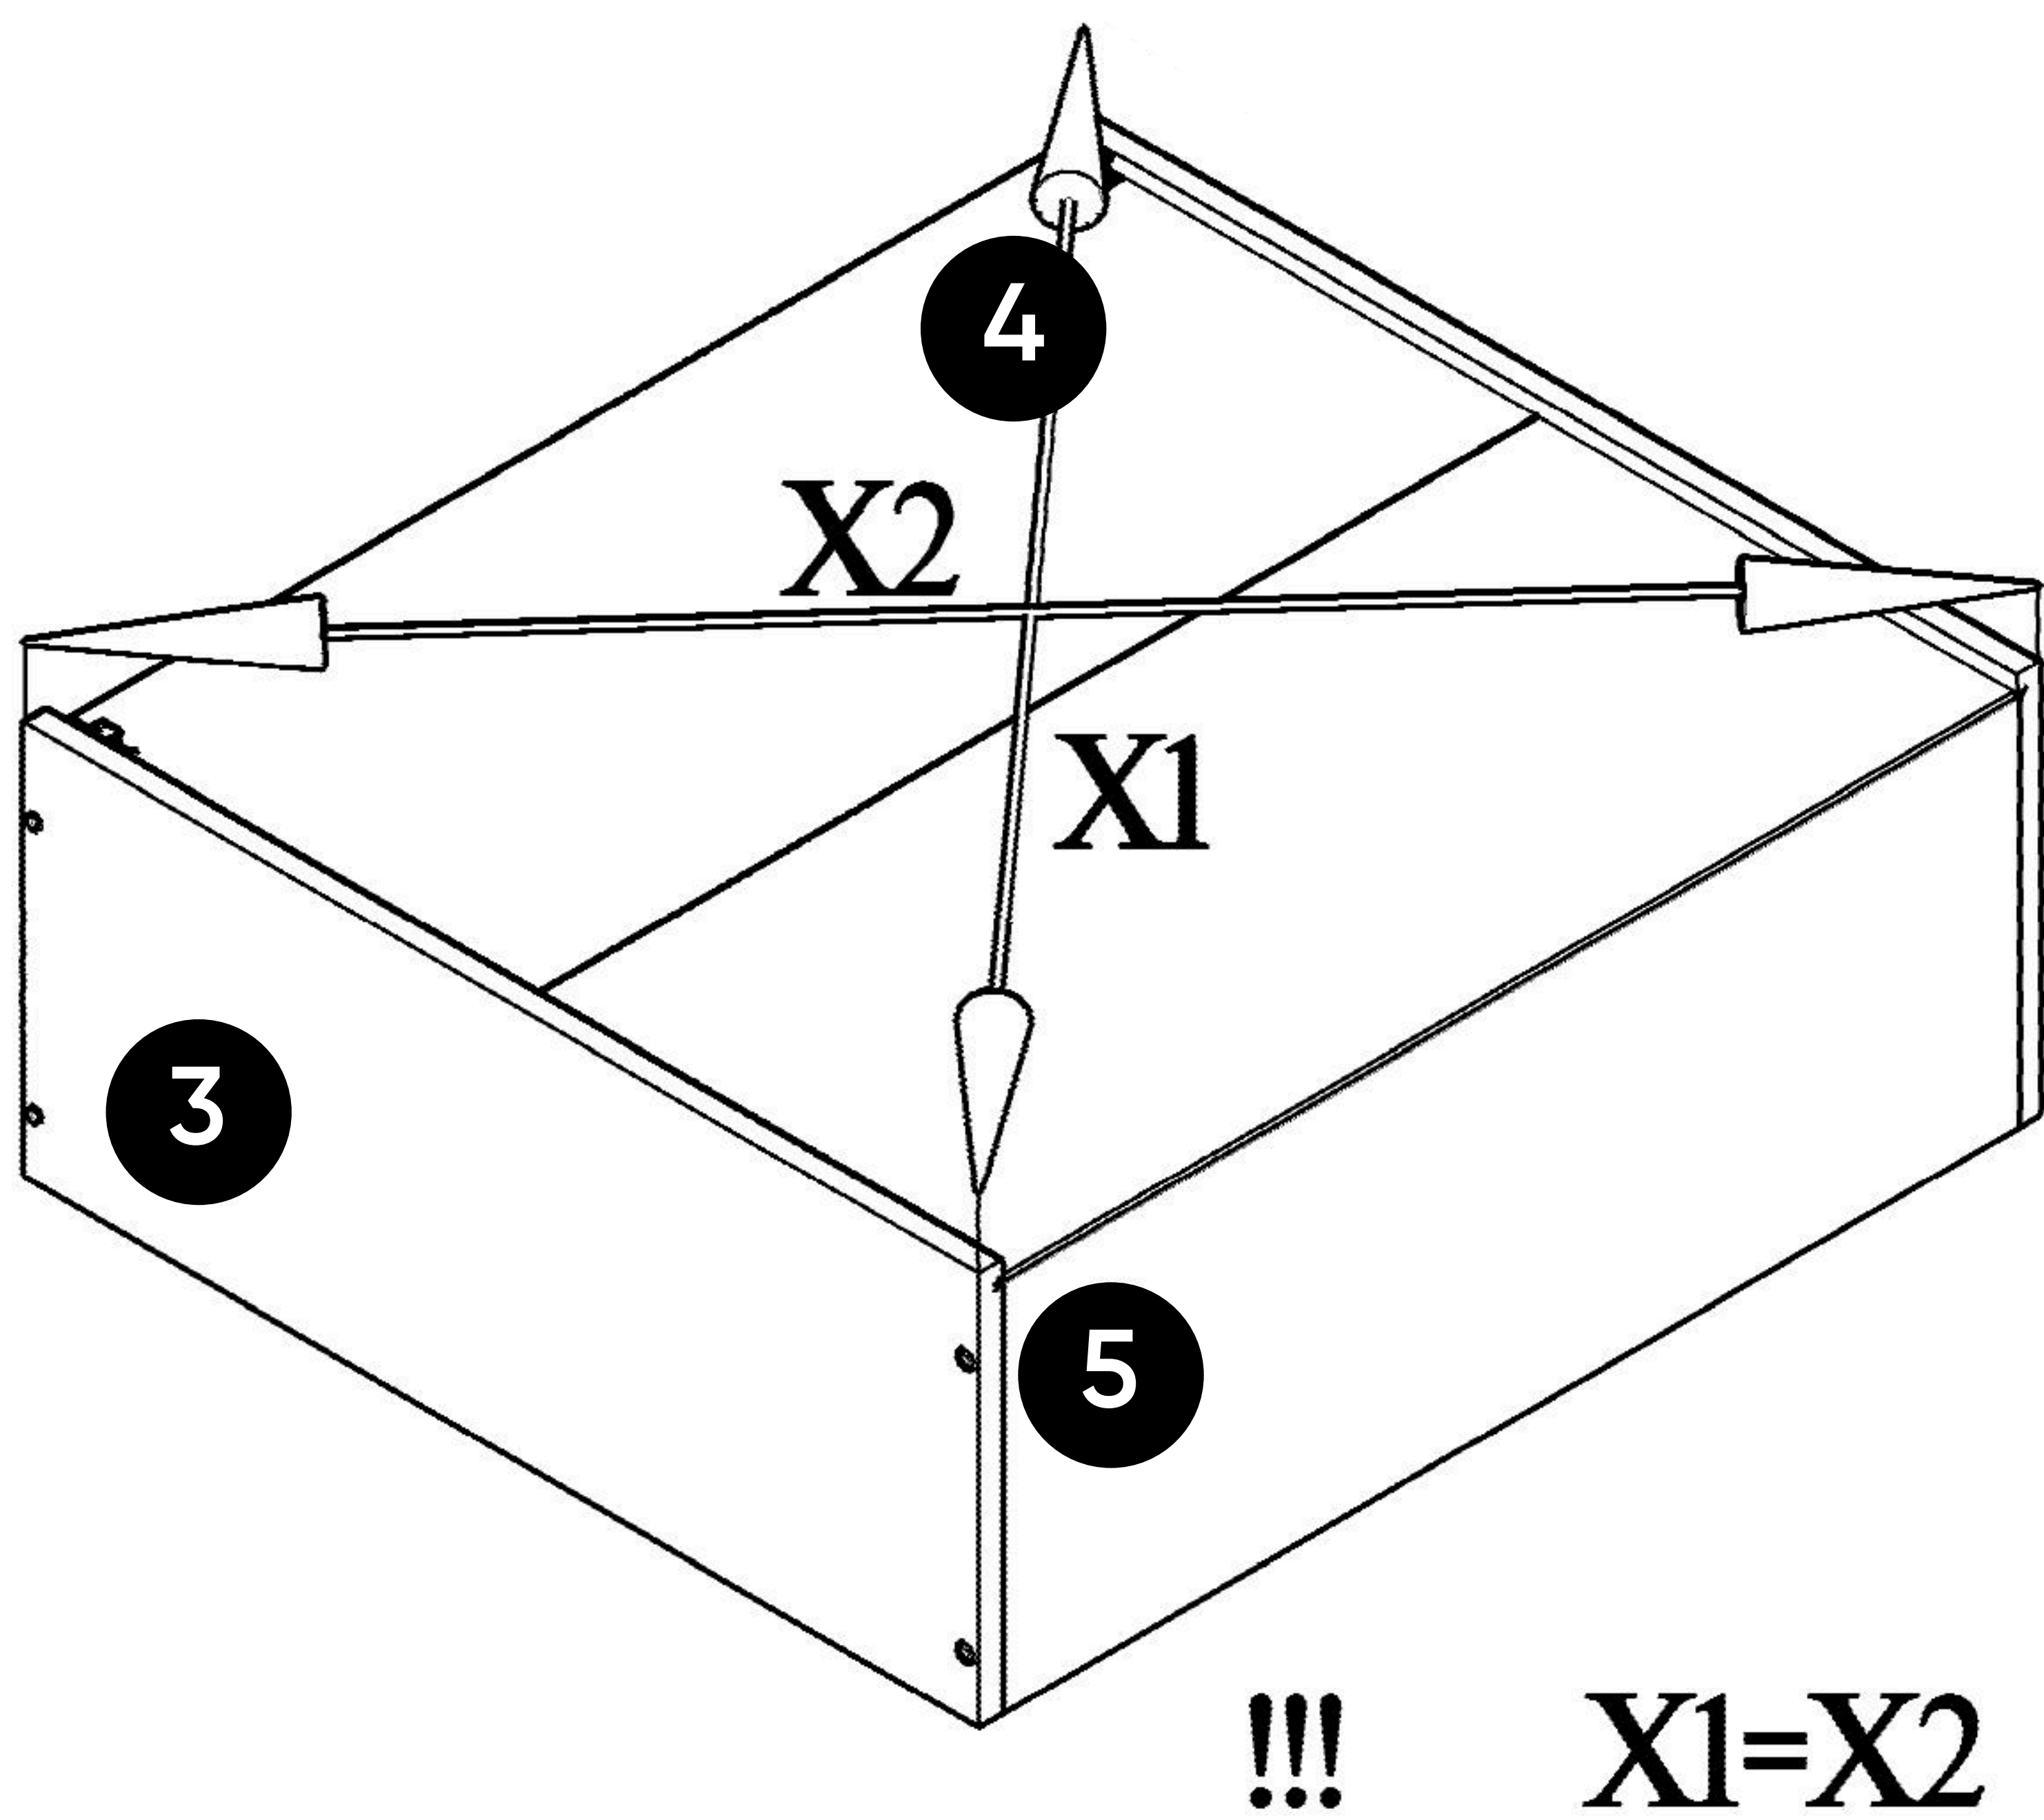

STEP - 5

H3 x12

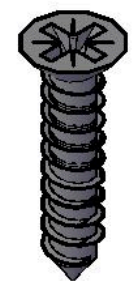



3x16

W x16




A4 x12

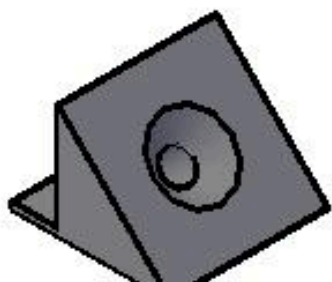

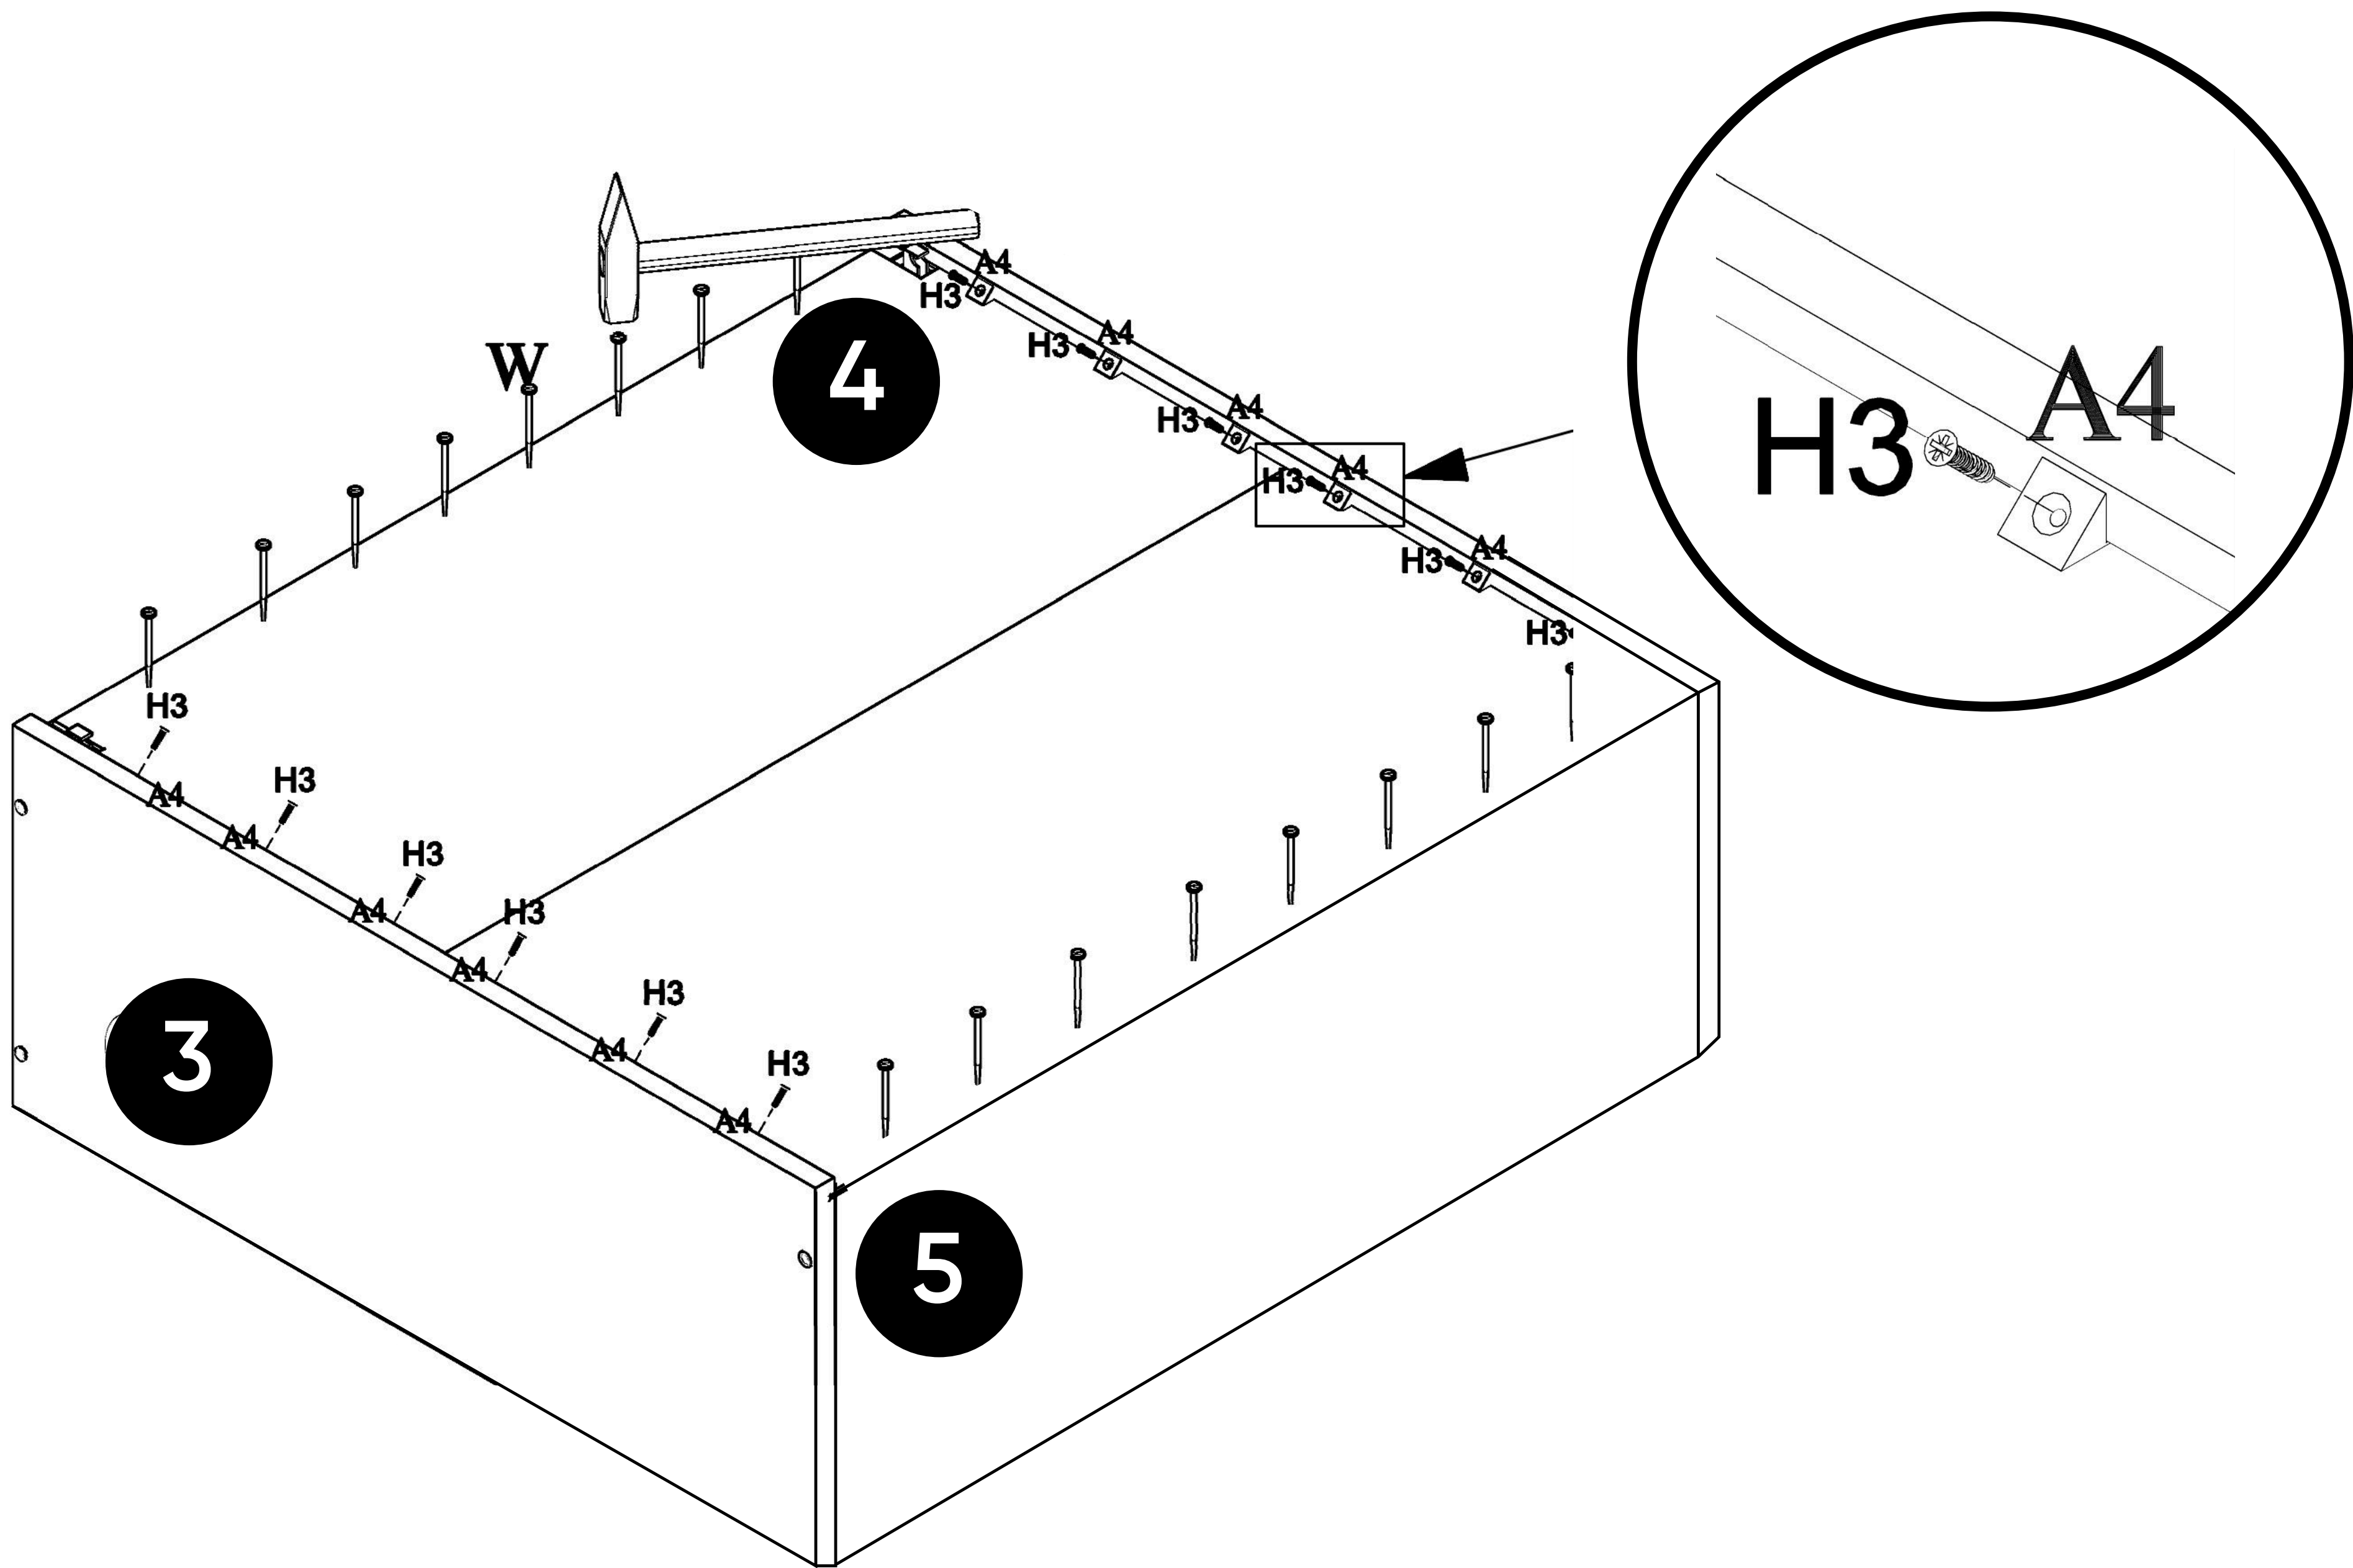

STEP - 6


G2 x4

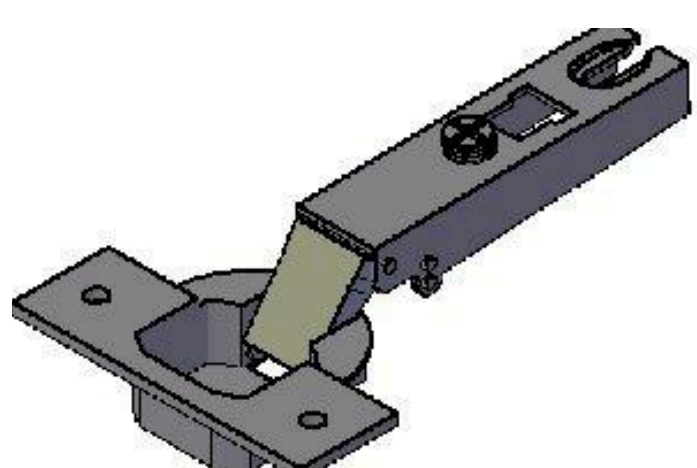



H x8 US 031.03







3.5x13

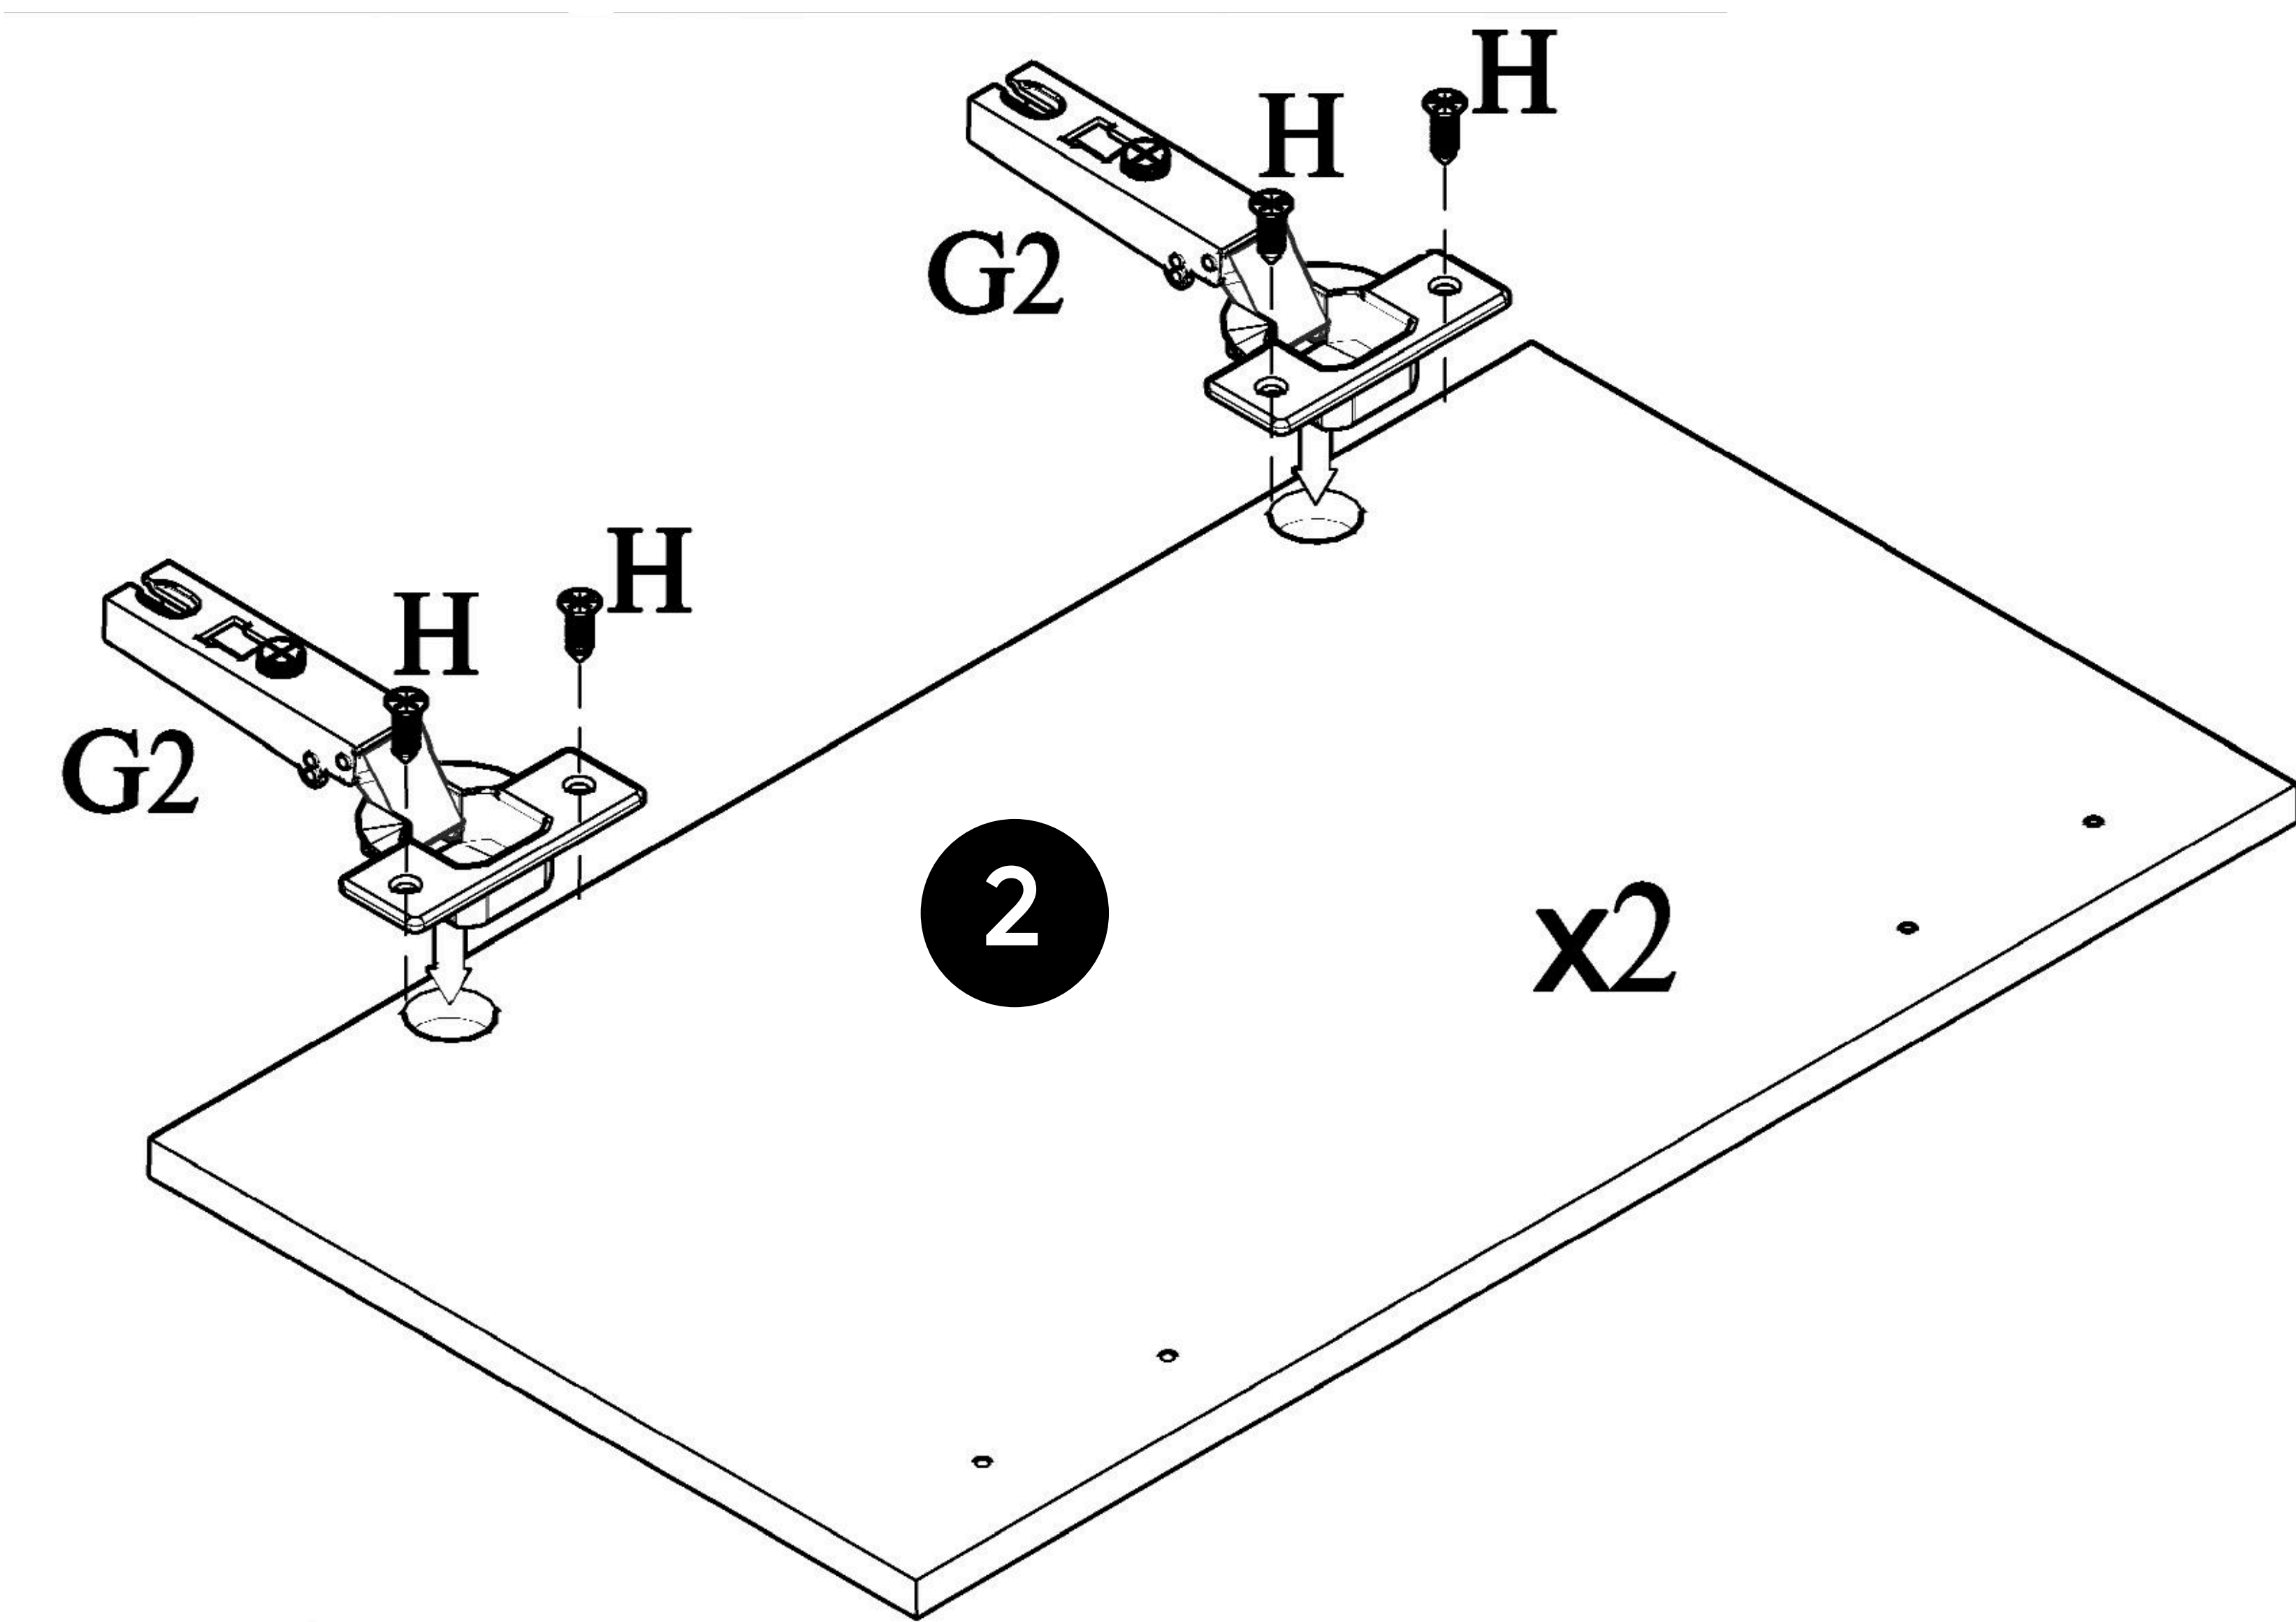

STEP - 7

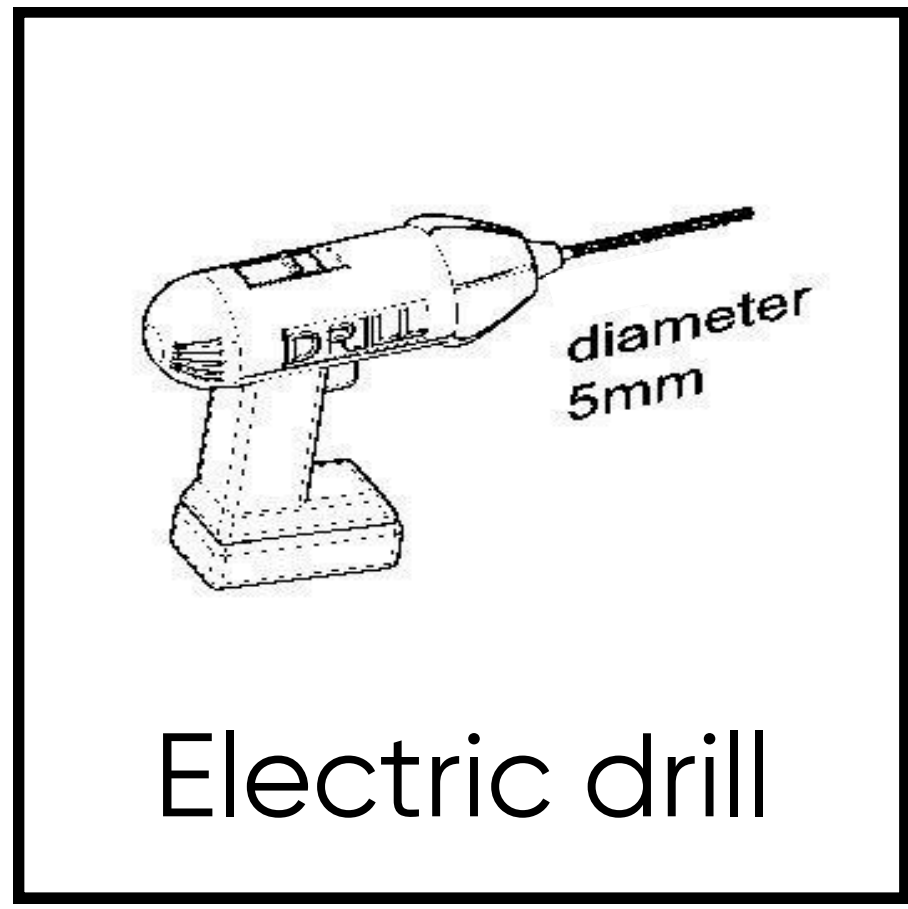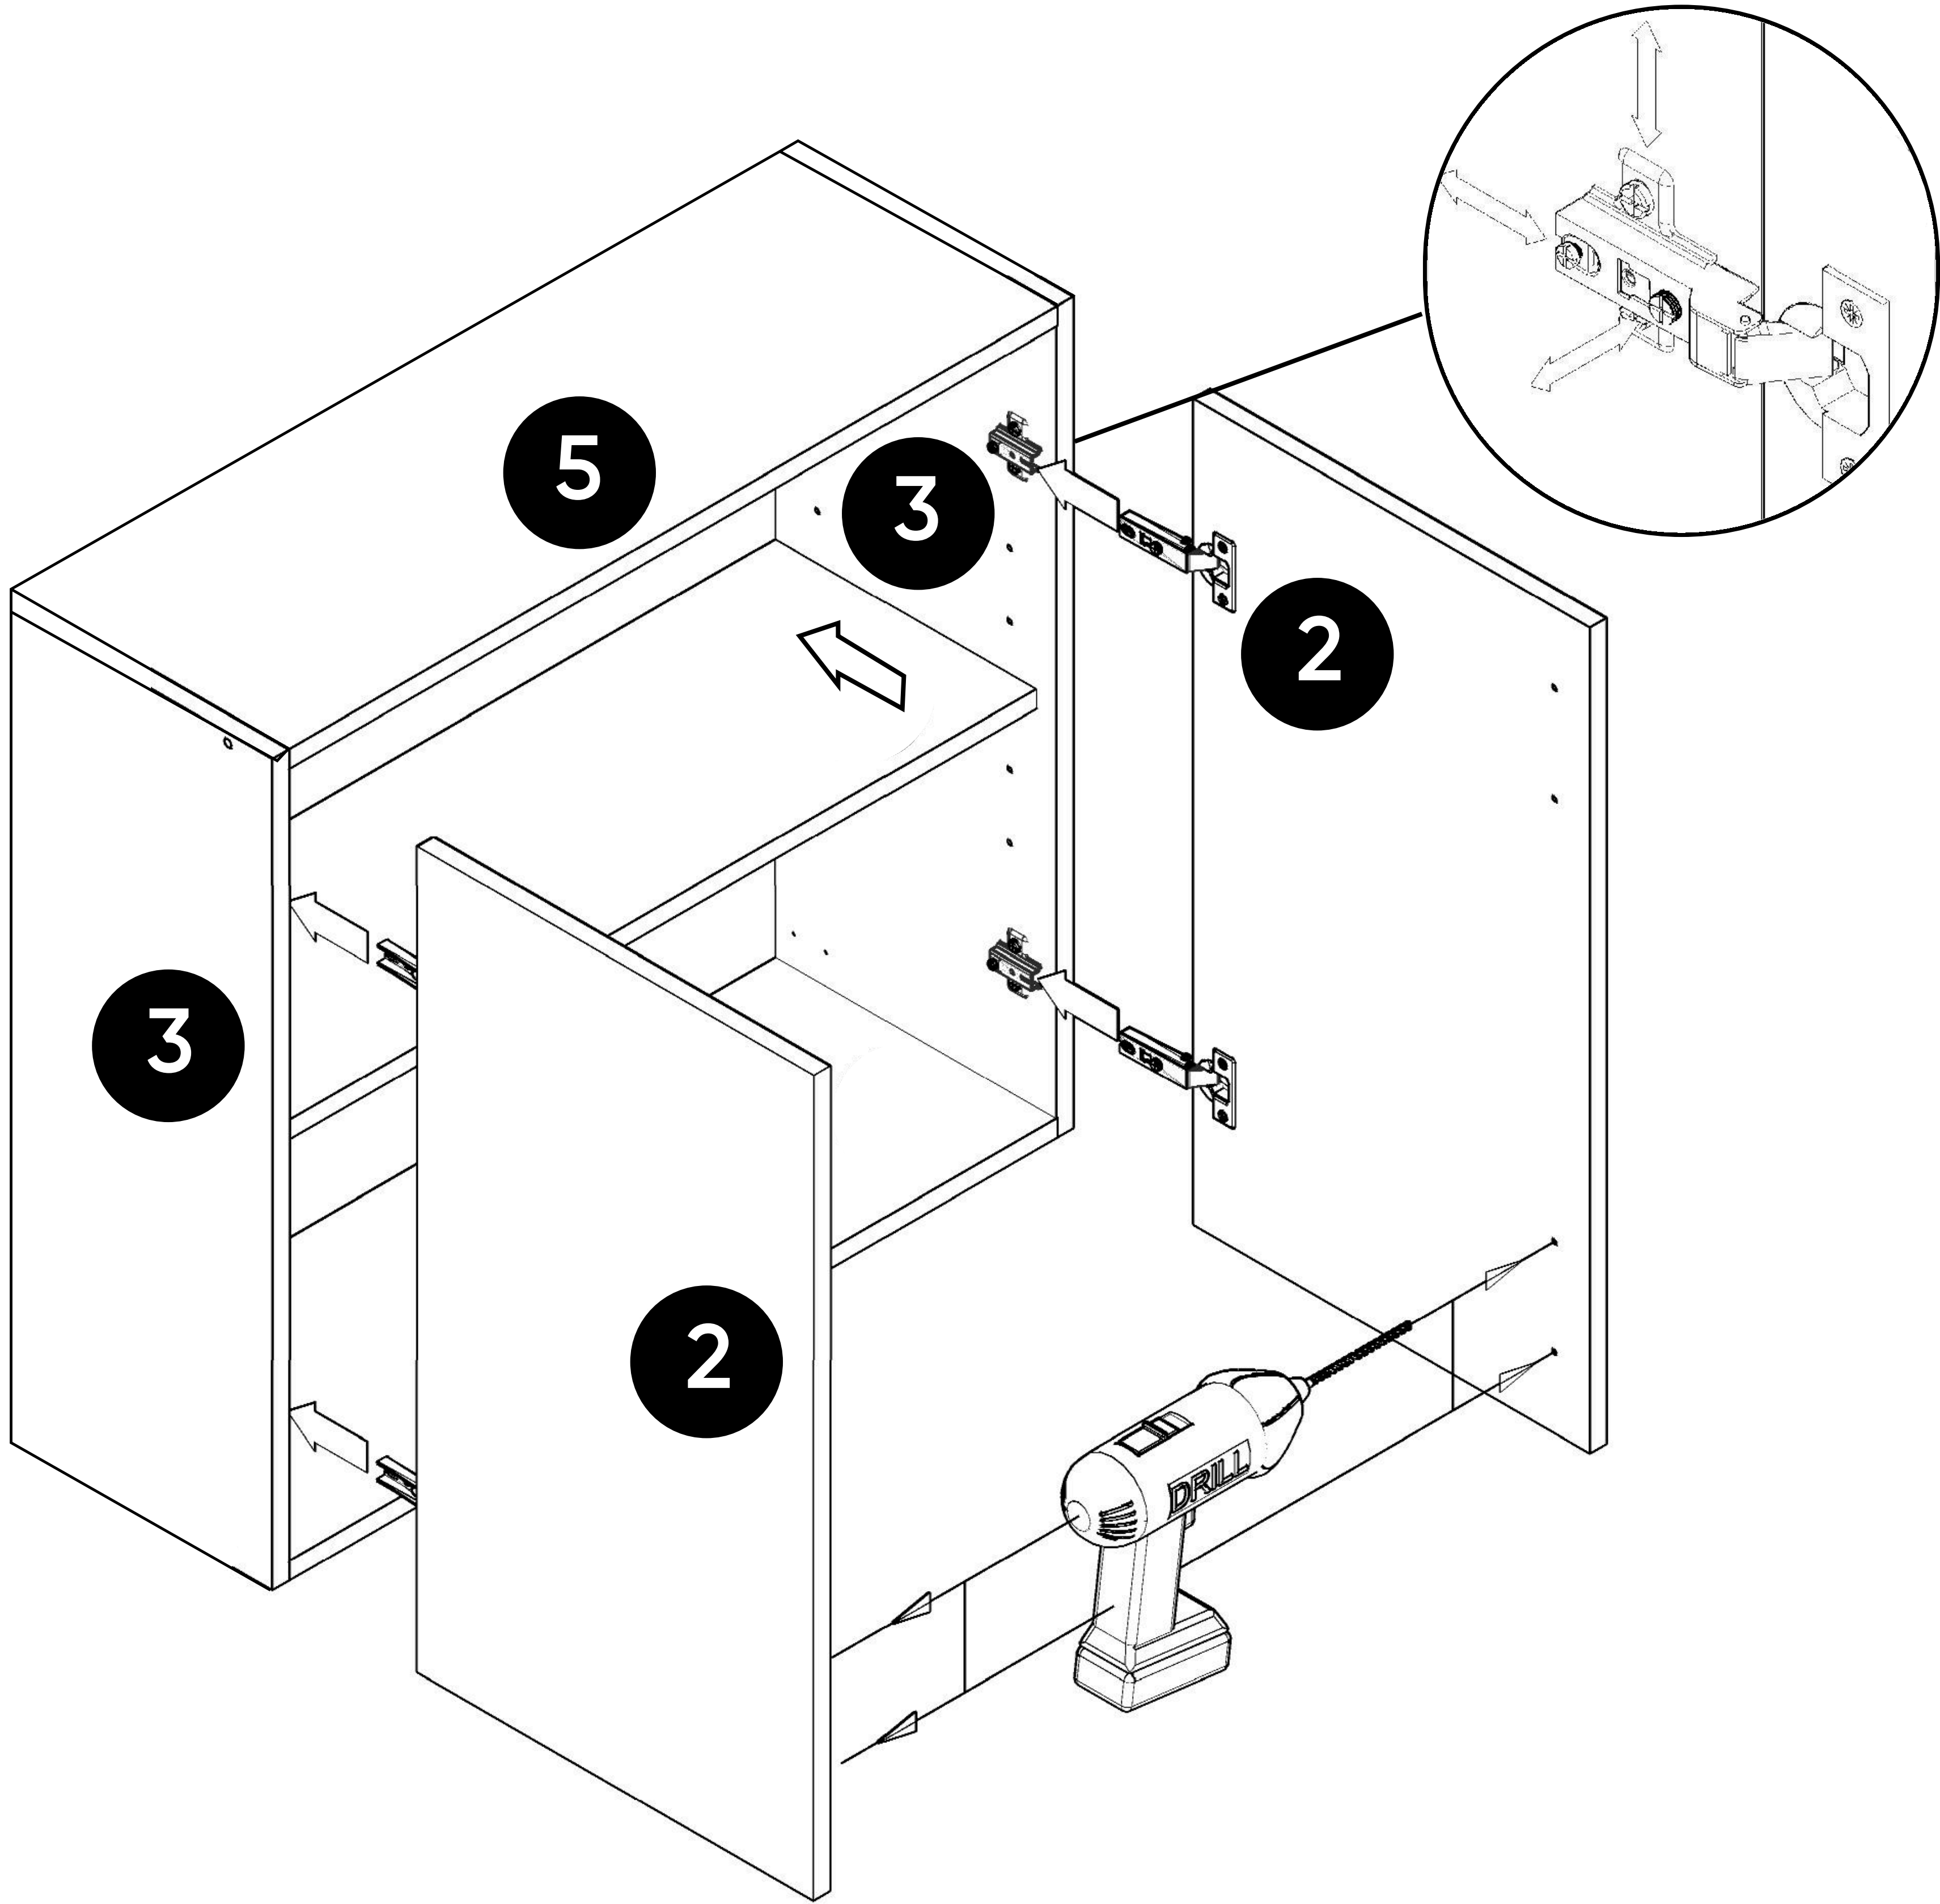


STEP - 8

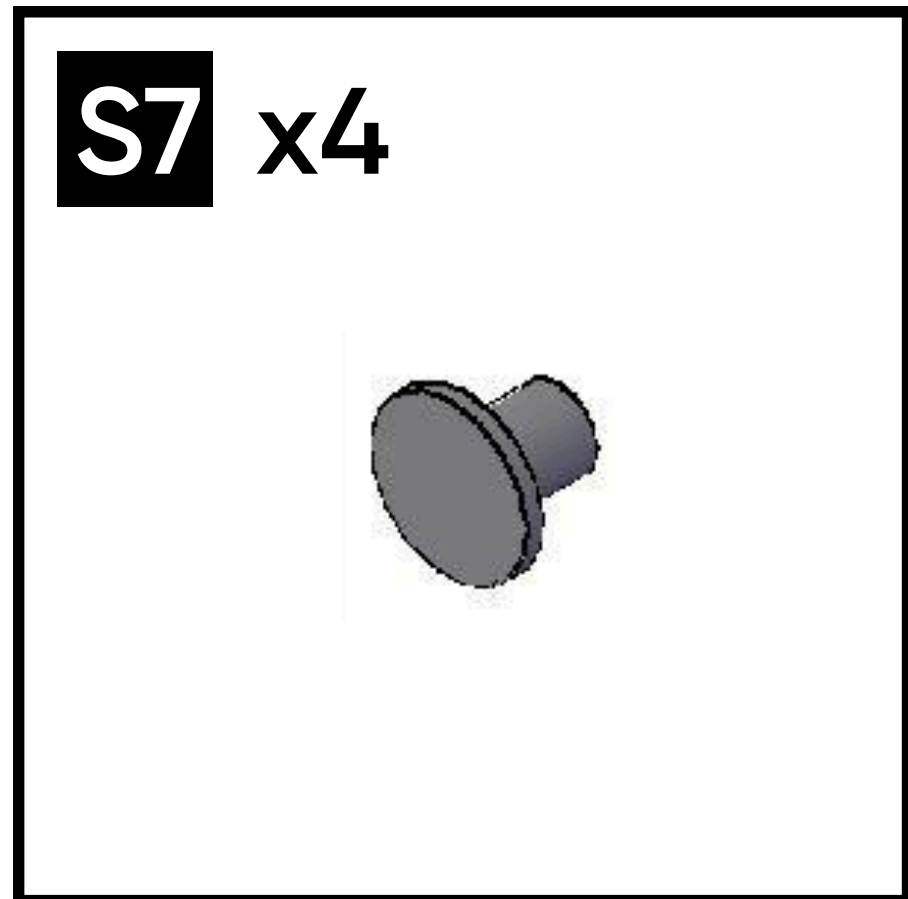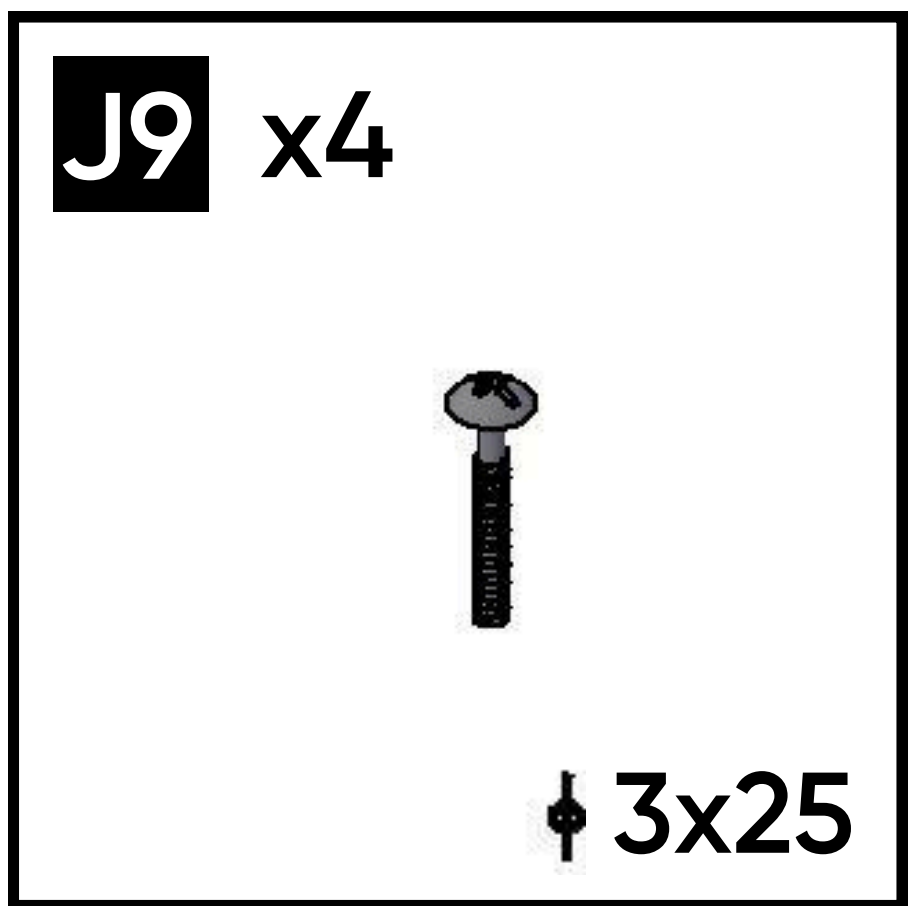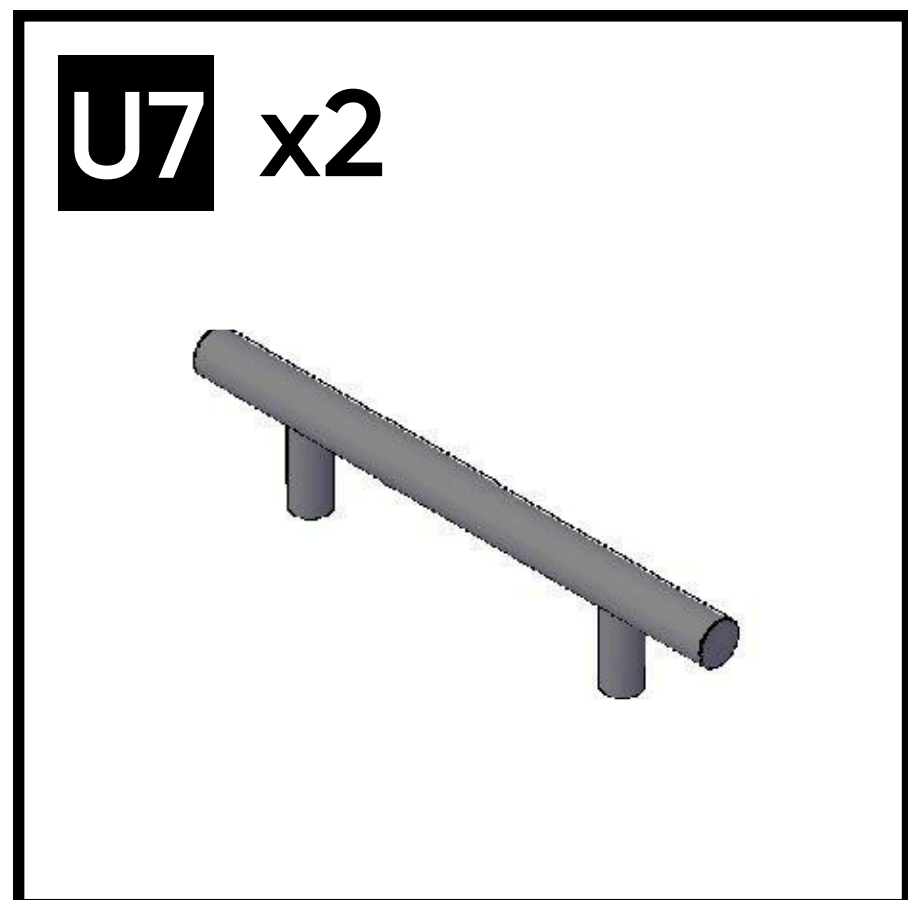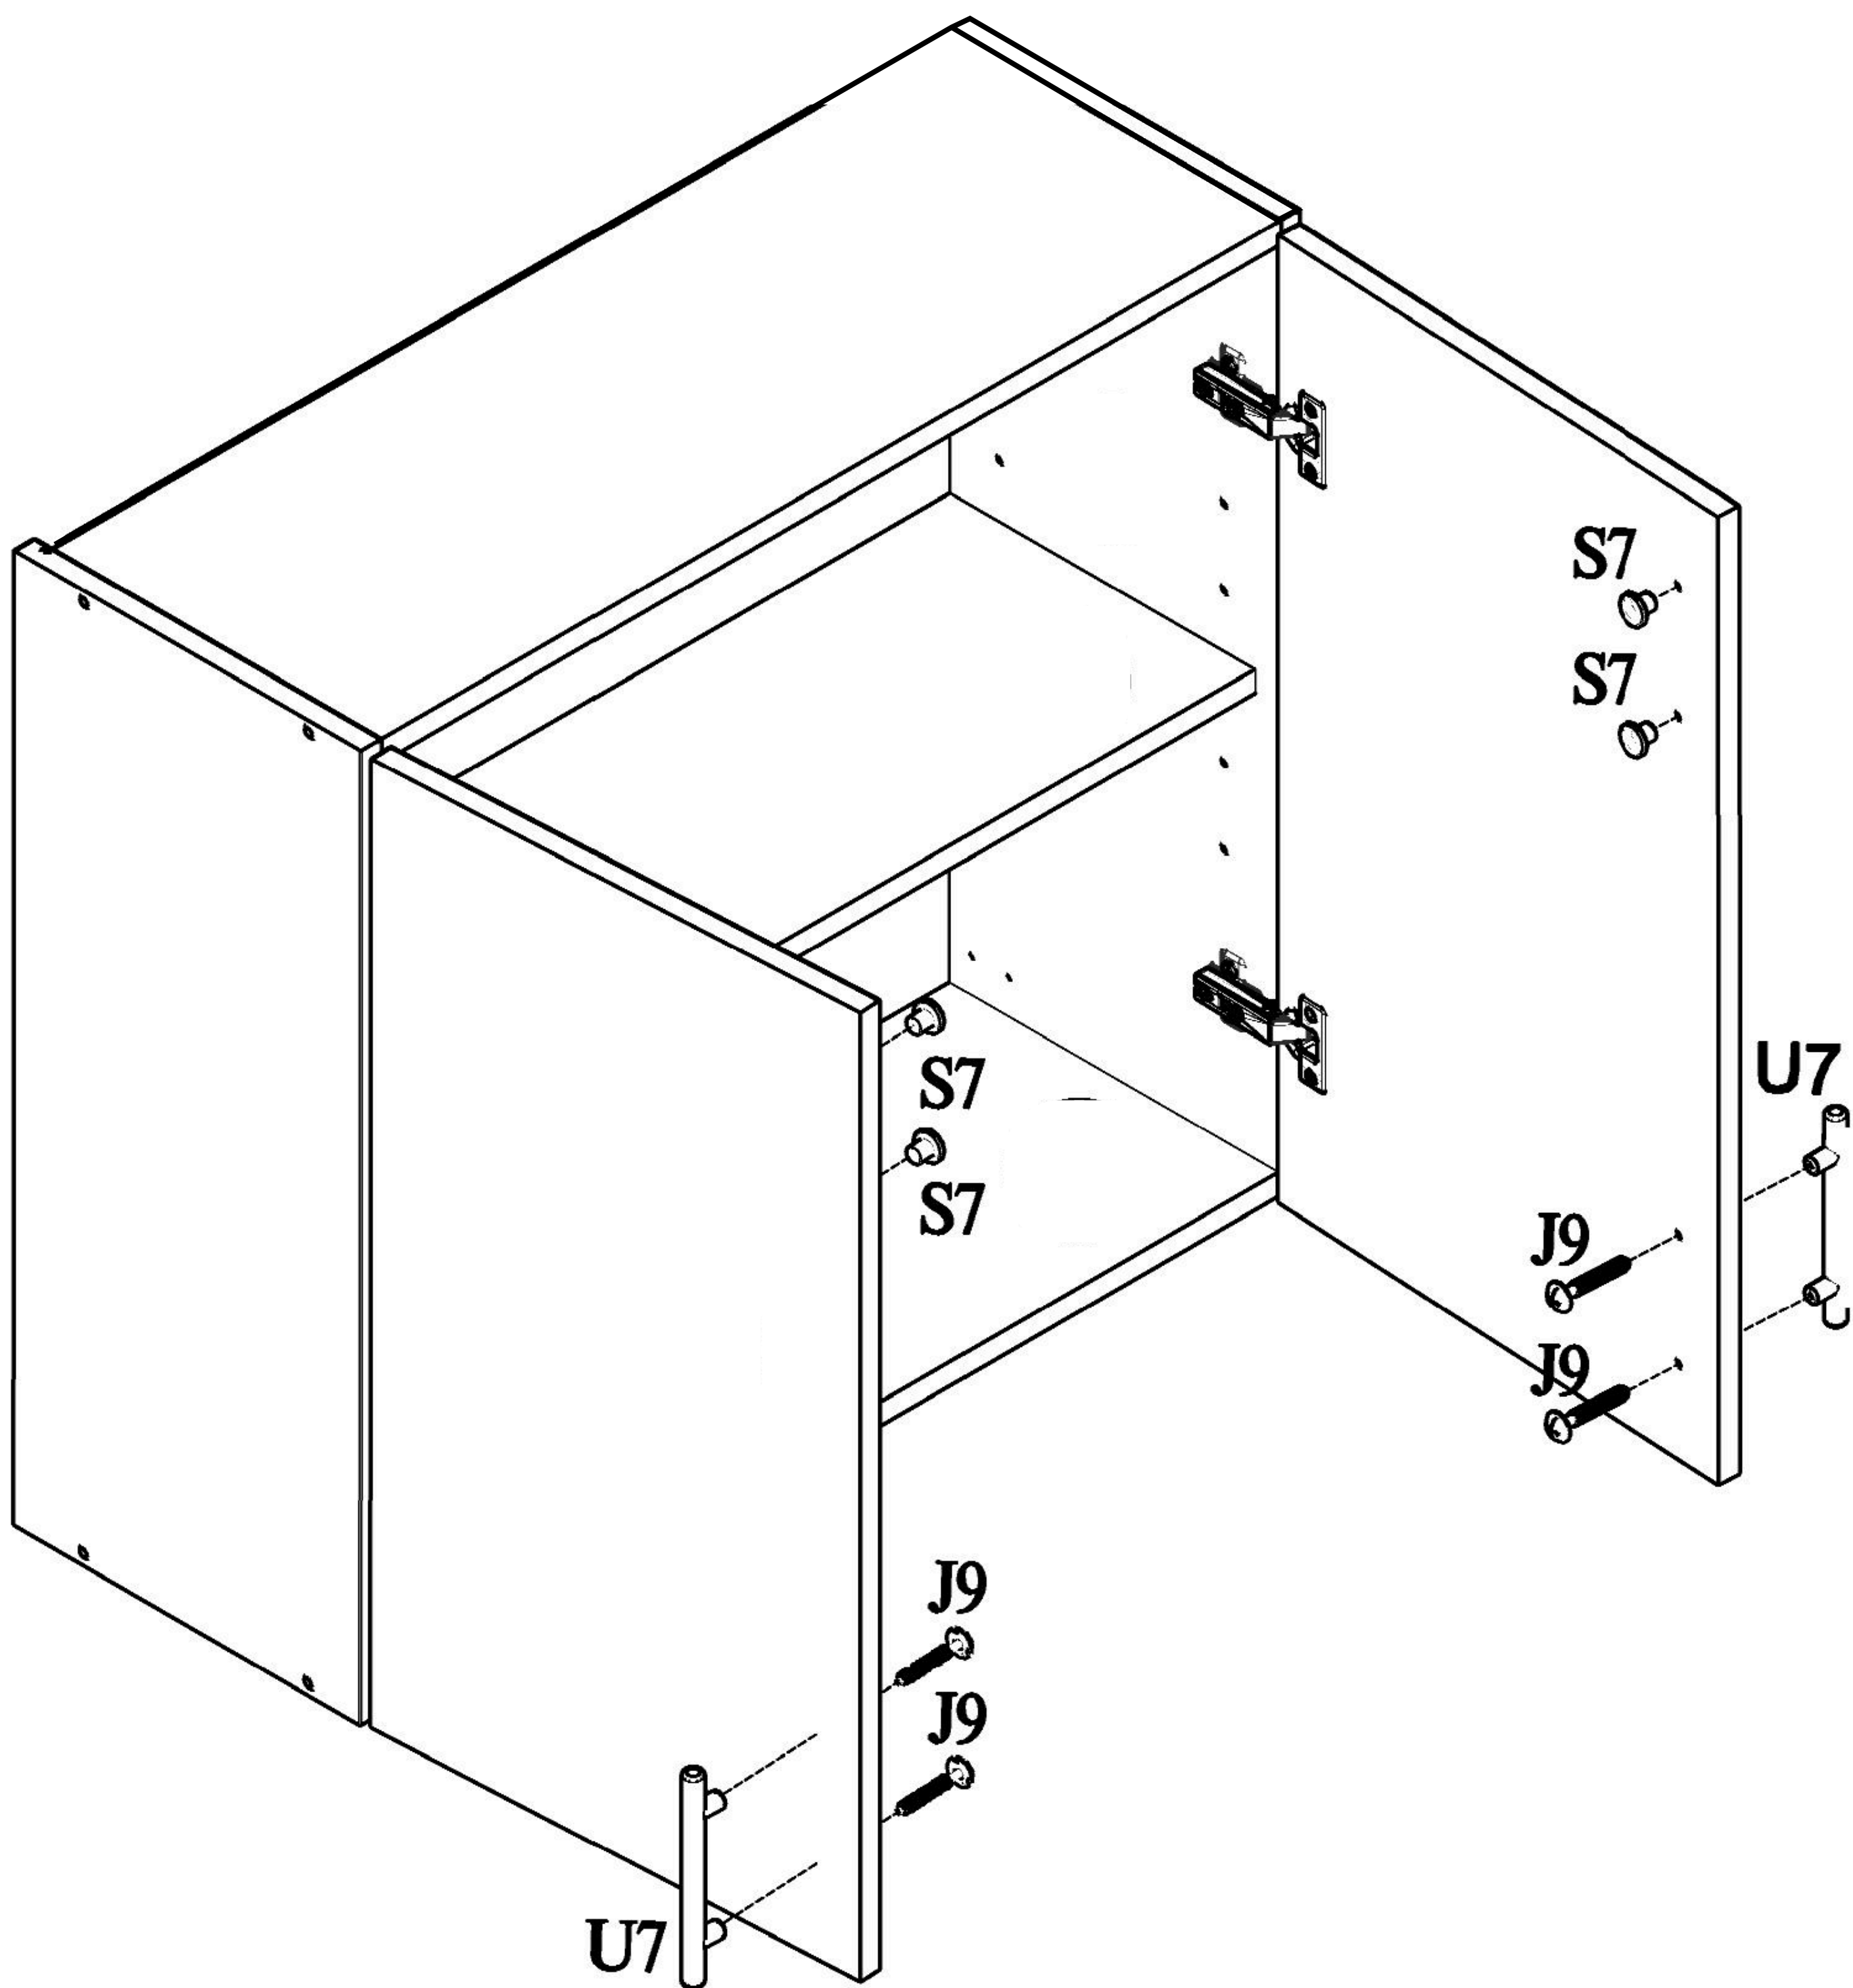


STEP - 9



! Mounting the Z9 component to the wall

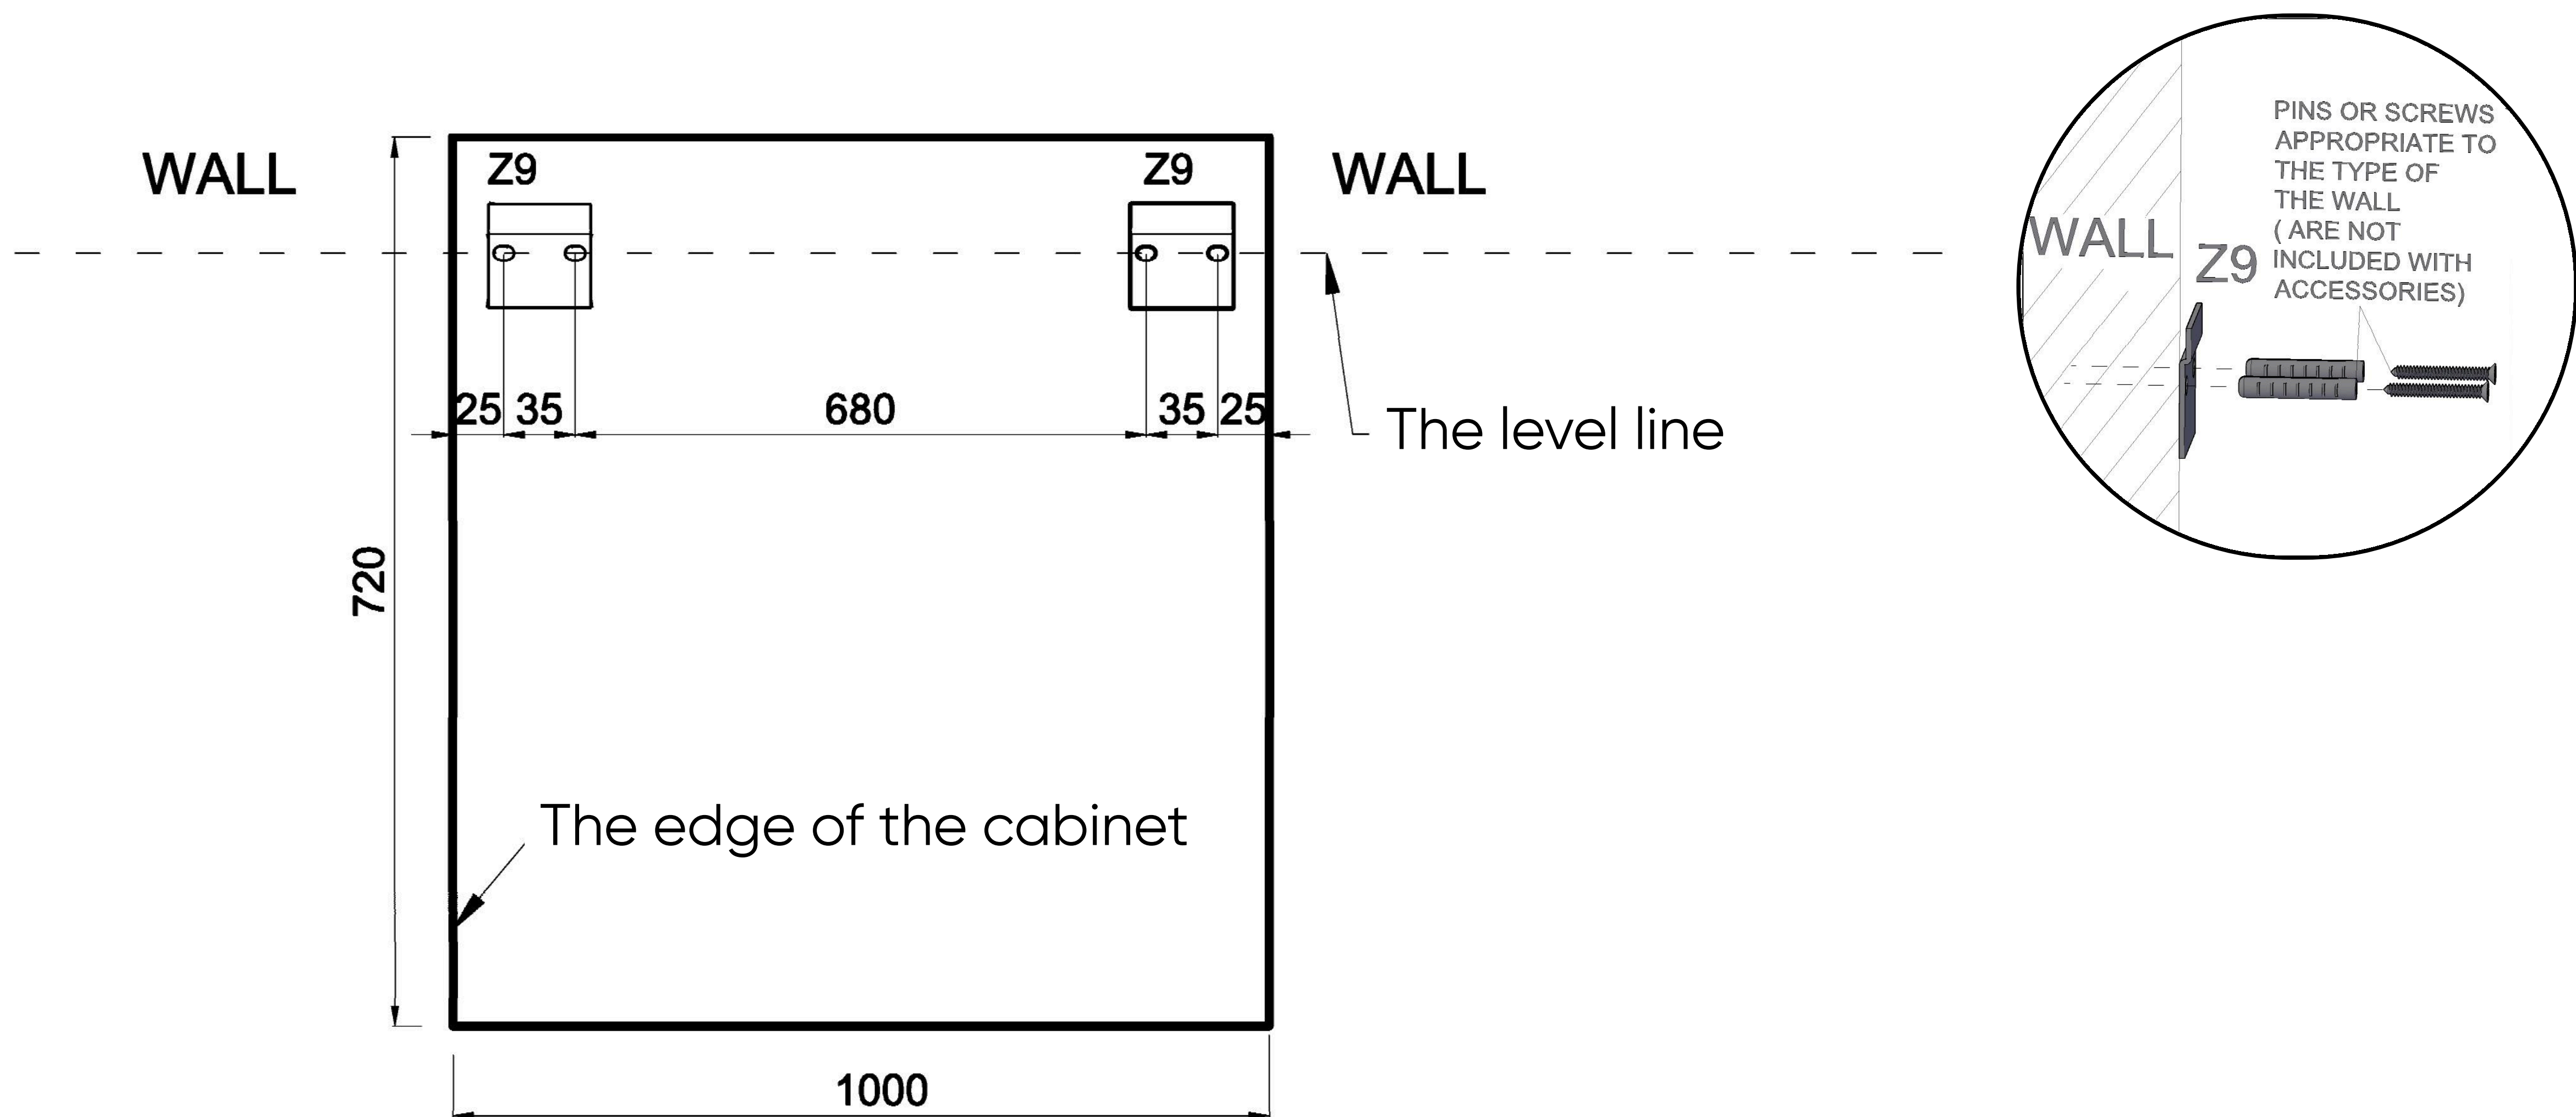

STEP - 10

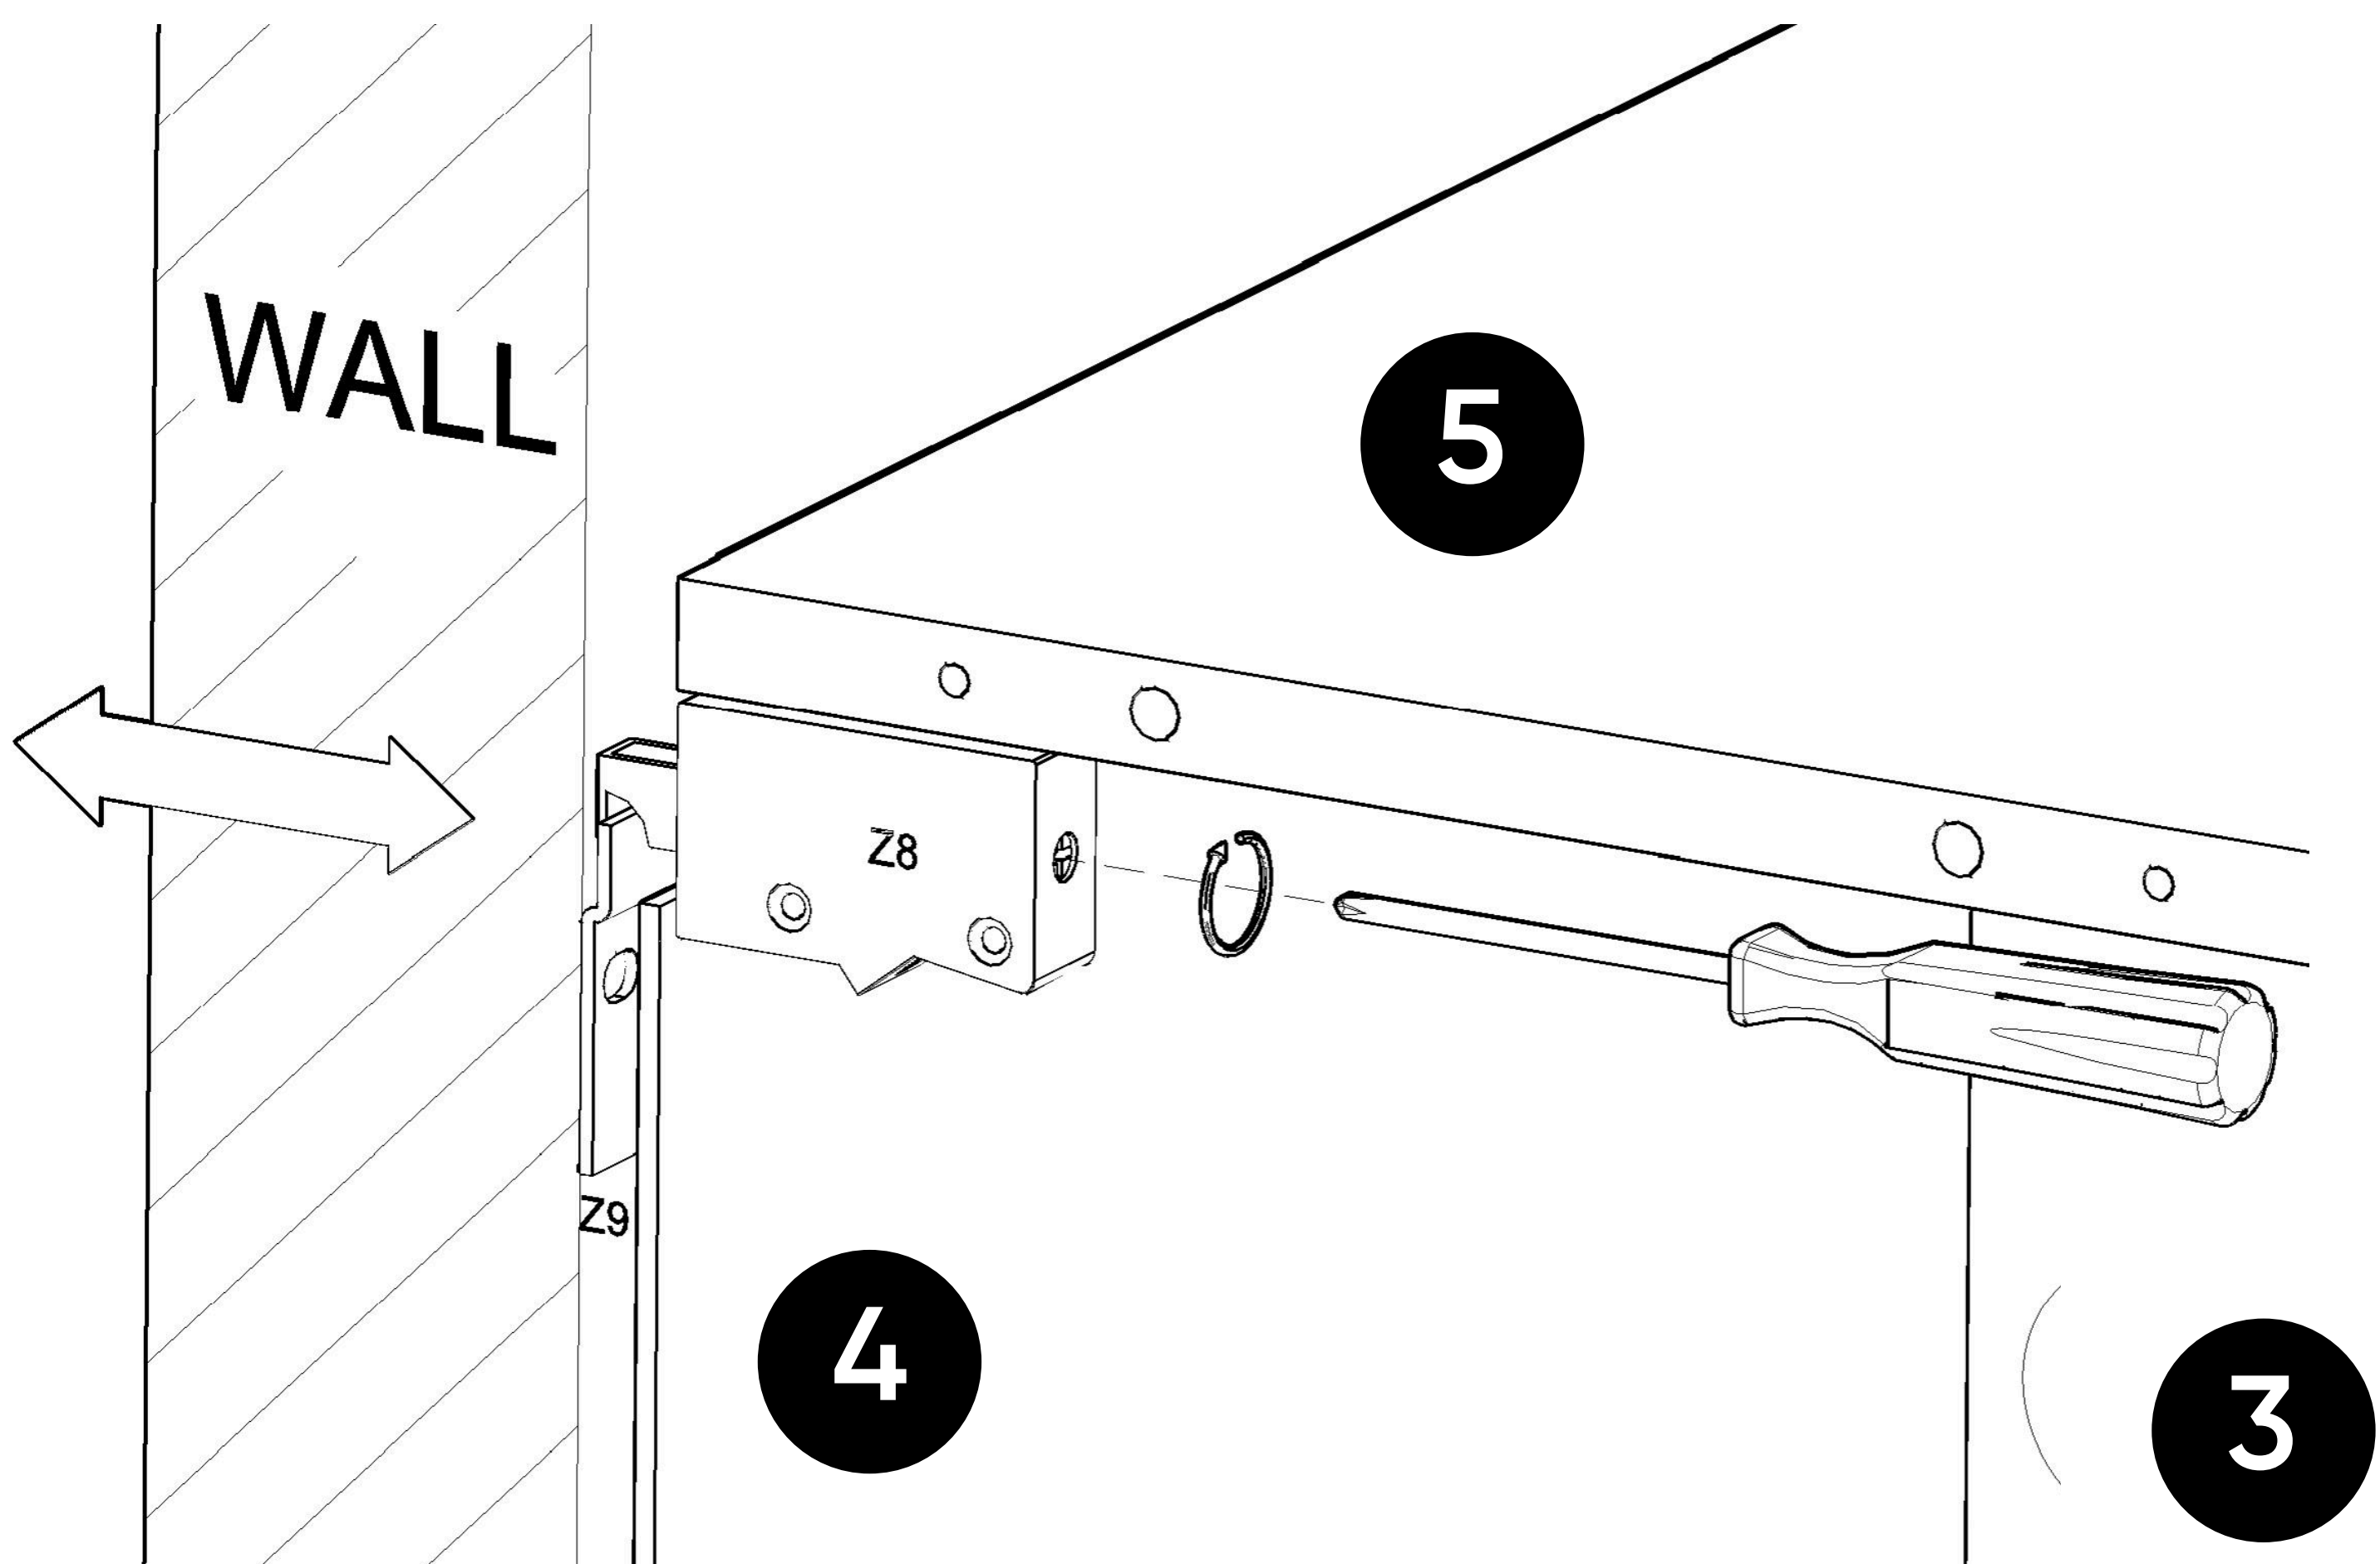

STEP - 11

