



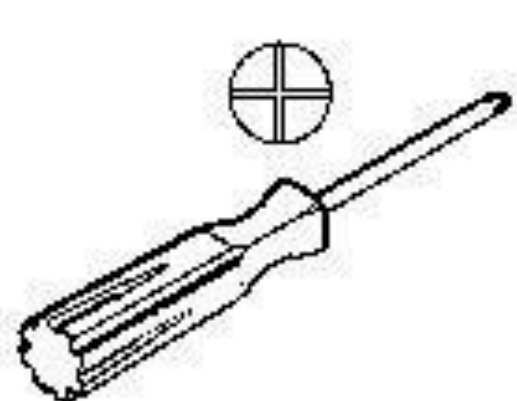


ASSEMBLY INSTRUCTIONS

KITCHEN WALL UNIT 500MM


MODEL W500

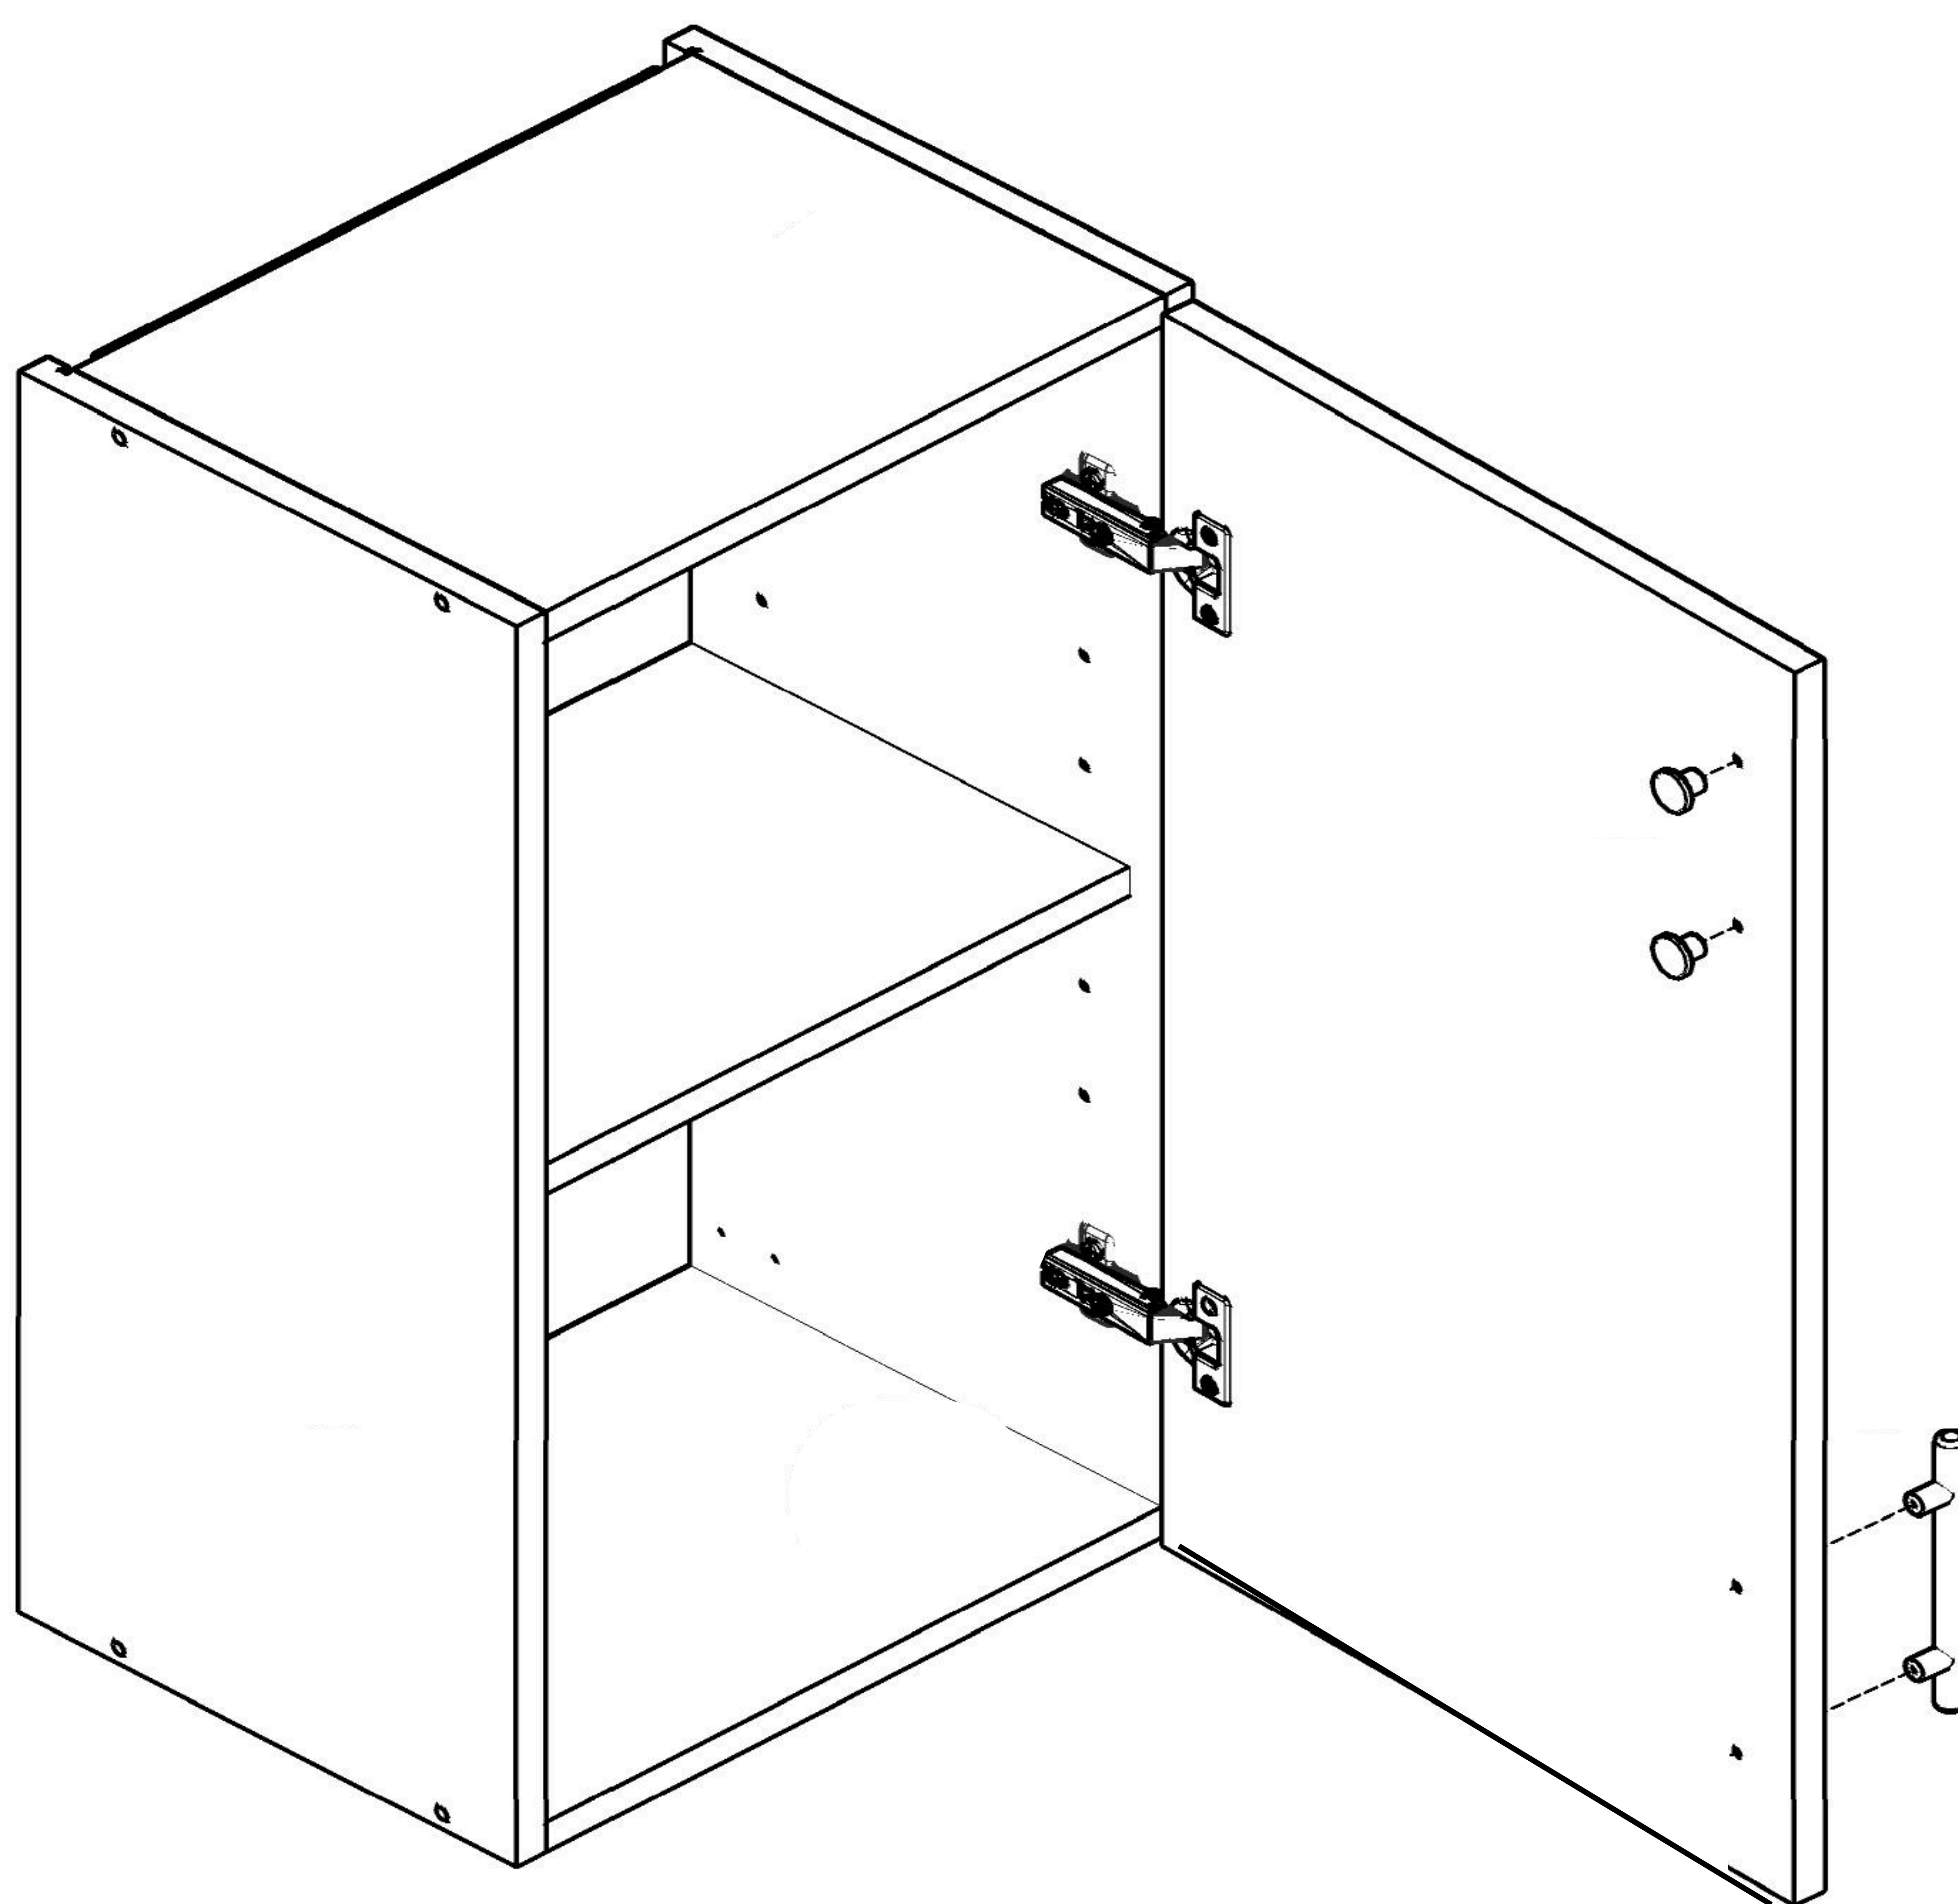


Cross-head
screwdriver

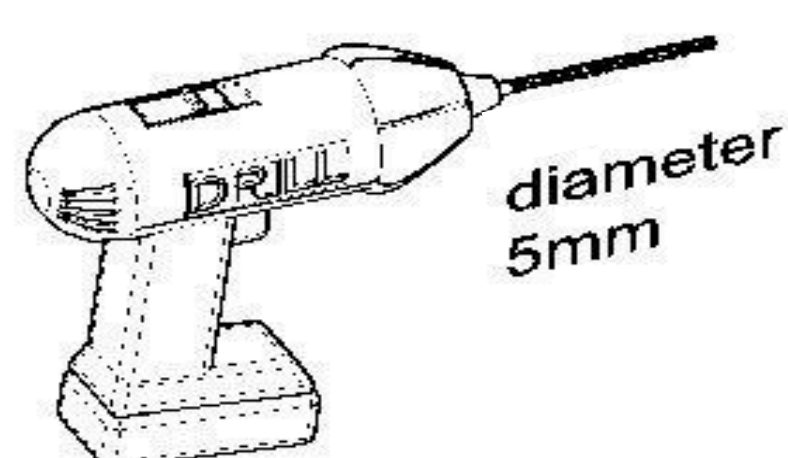

Electric
drill

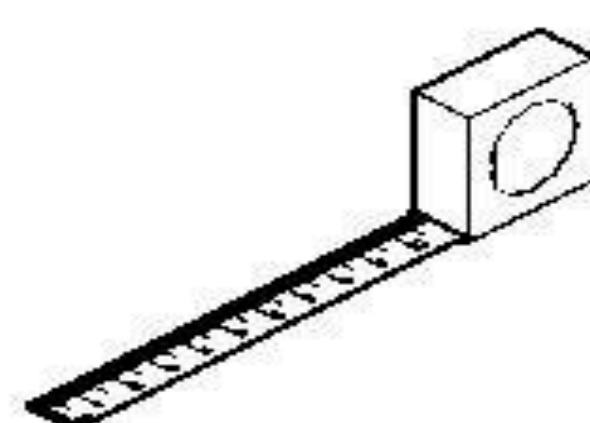

Rule

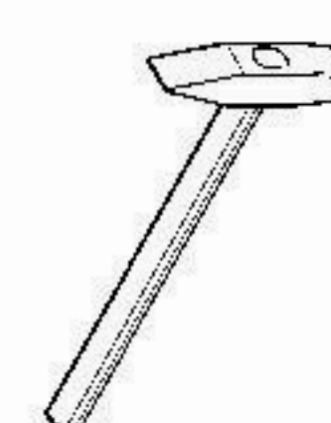

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below


1

x1

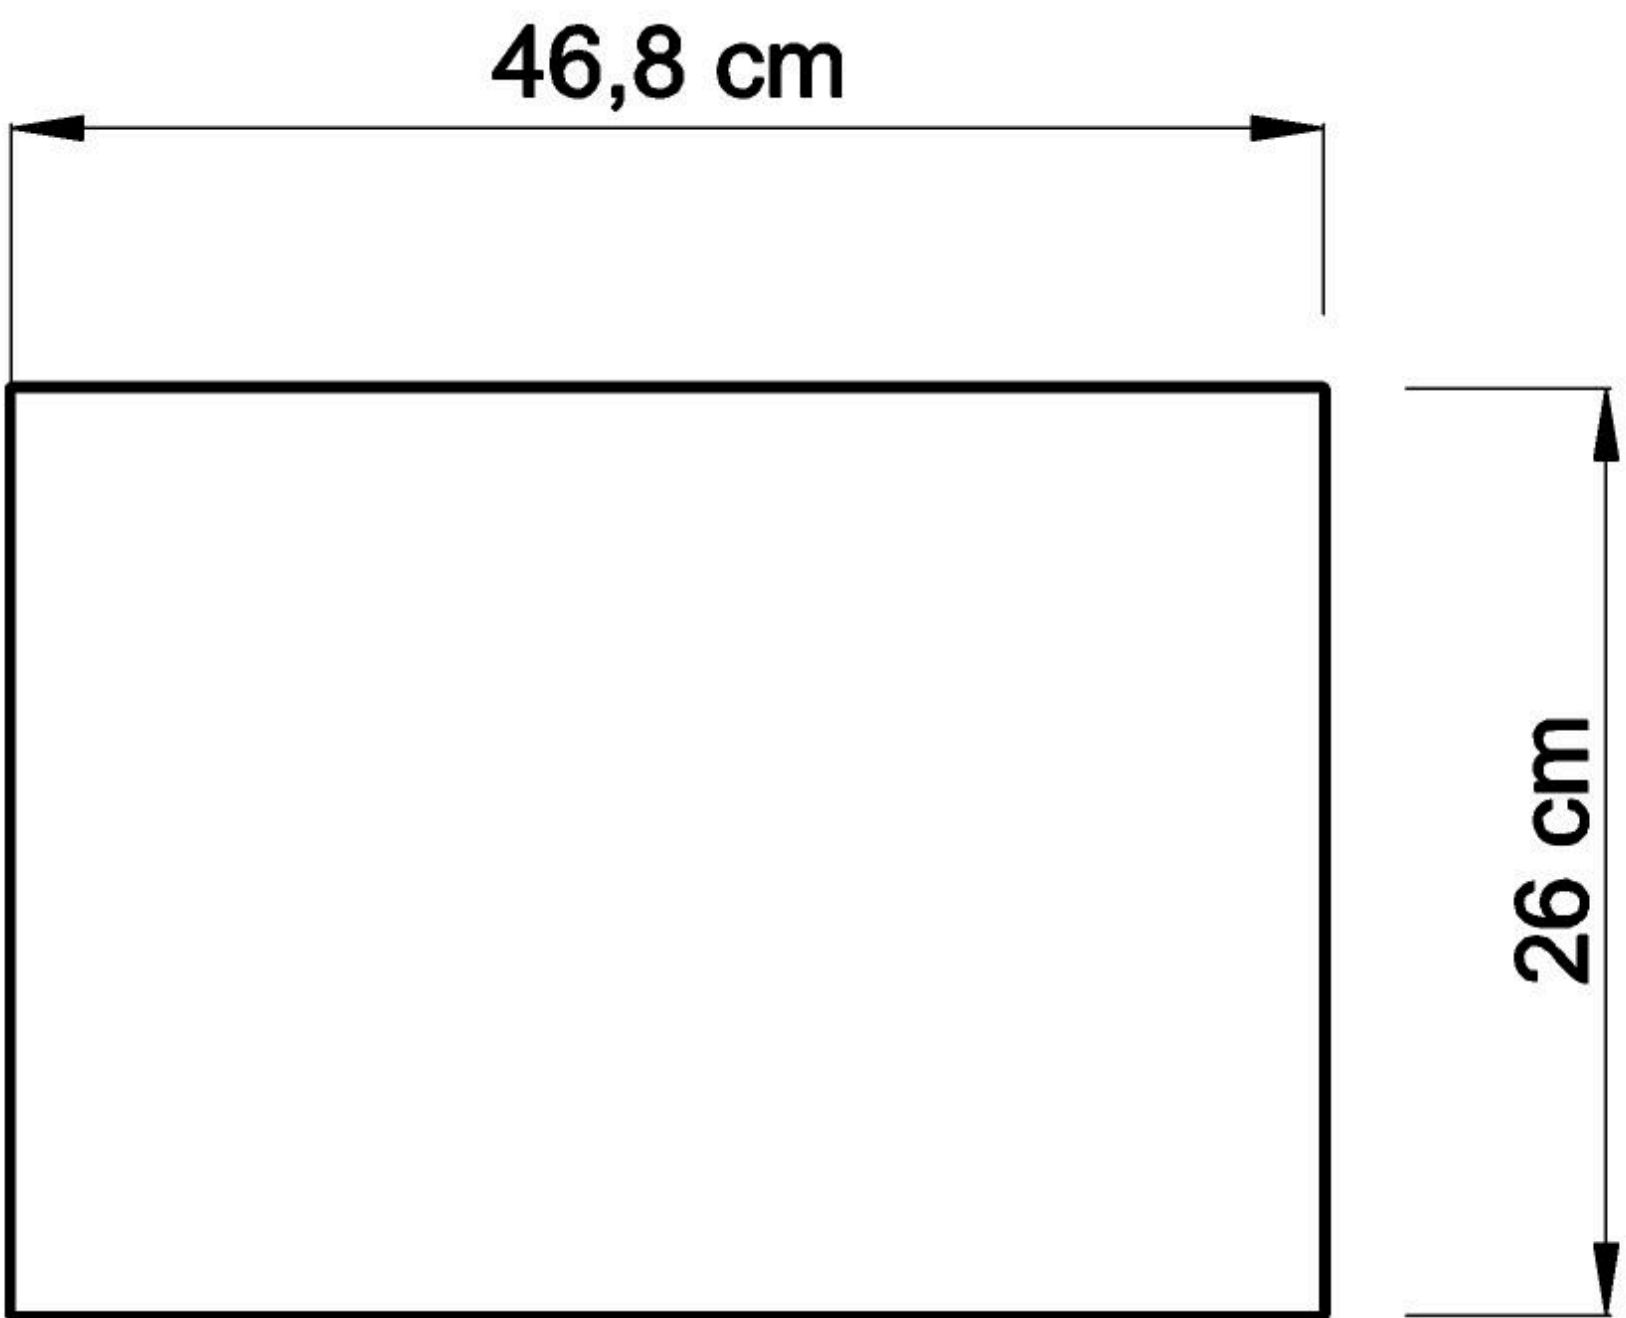


2

x1

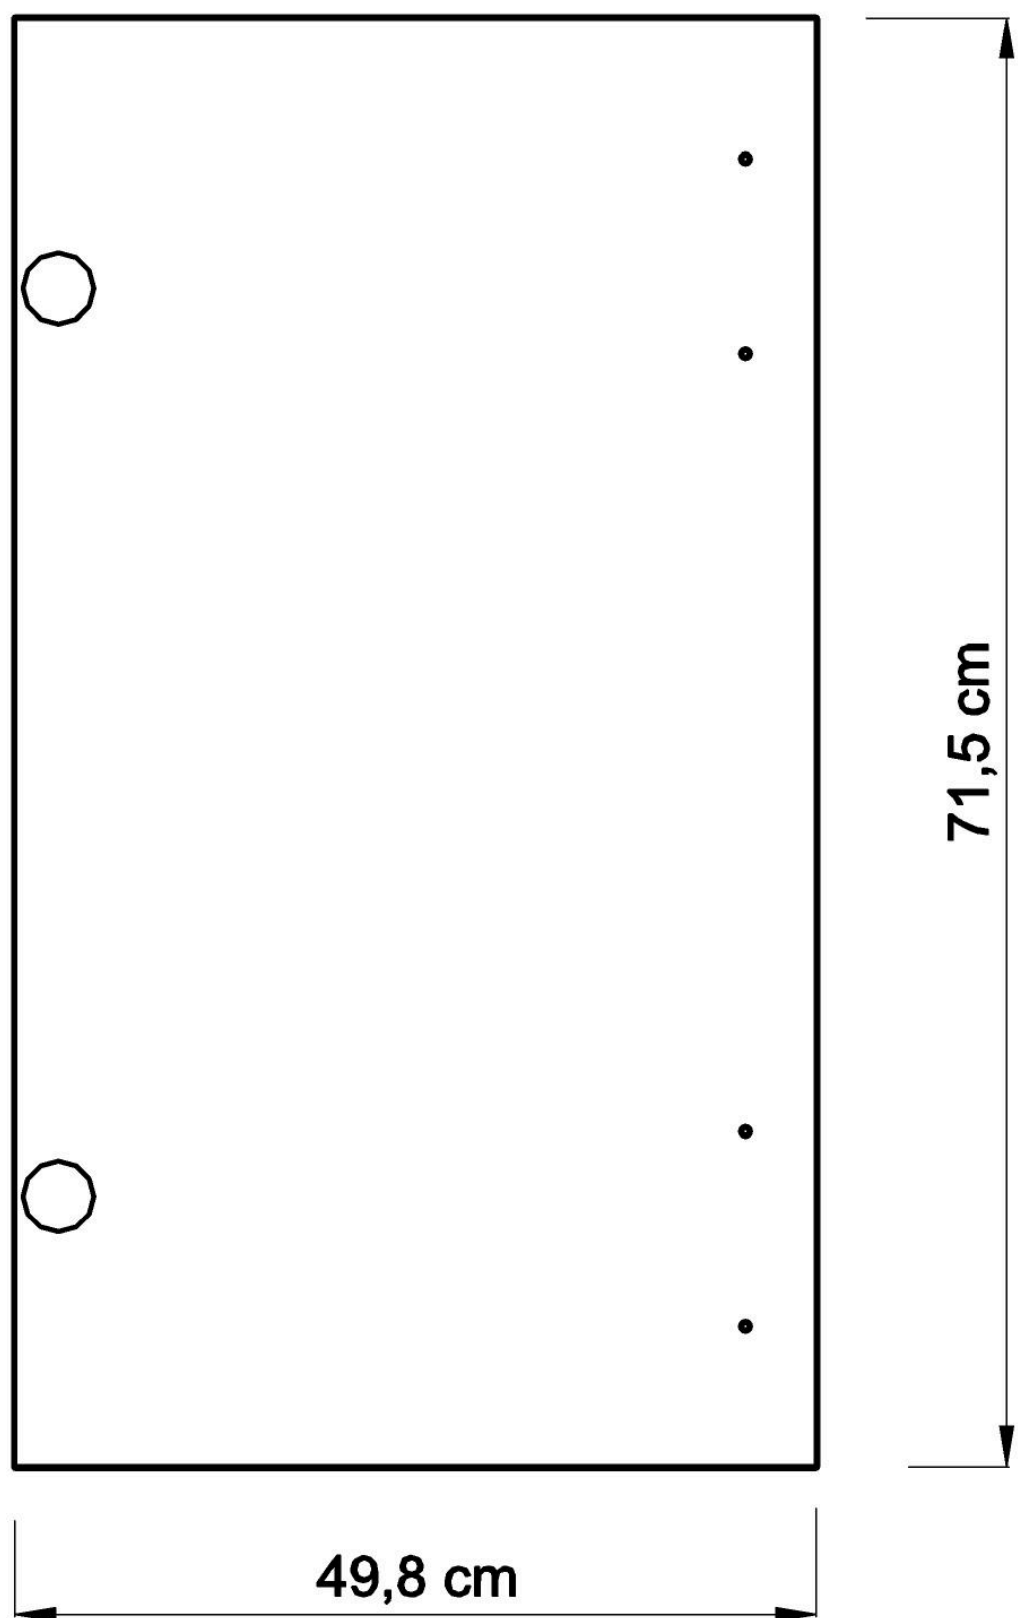


3

x2

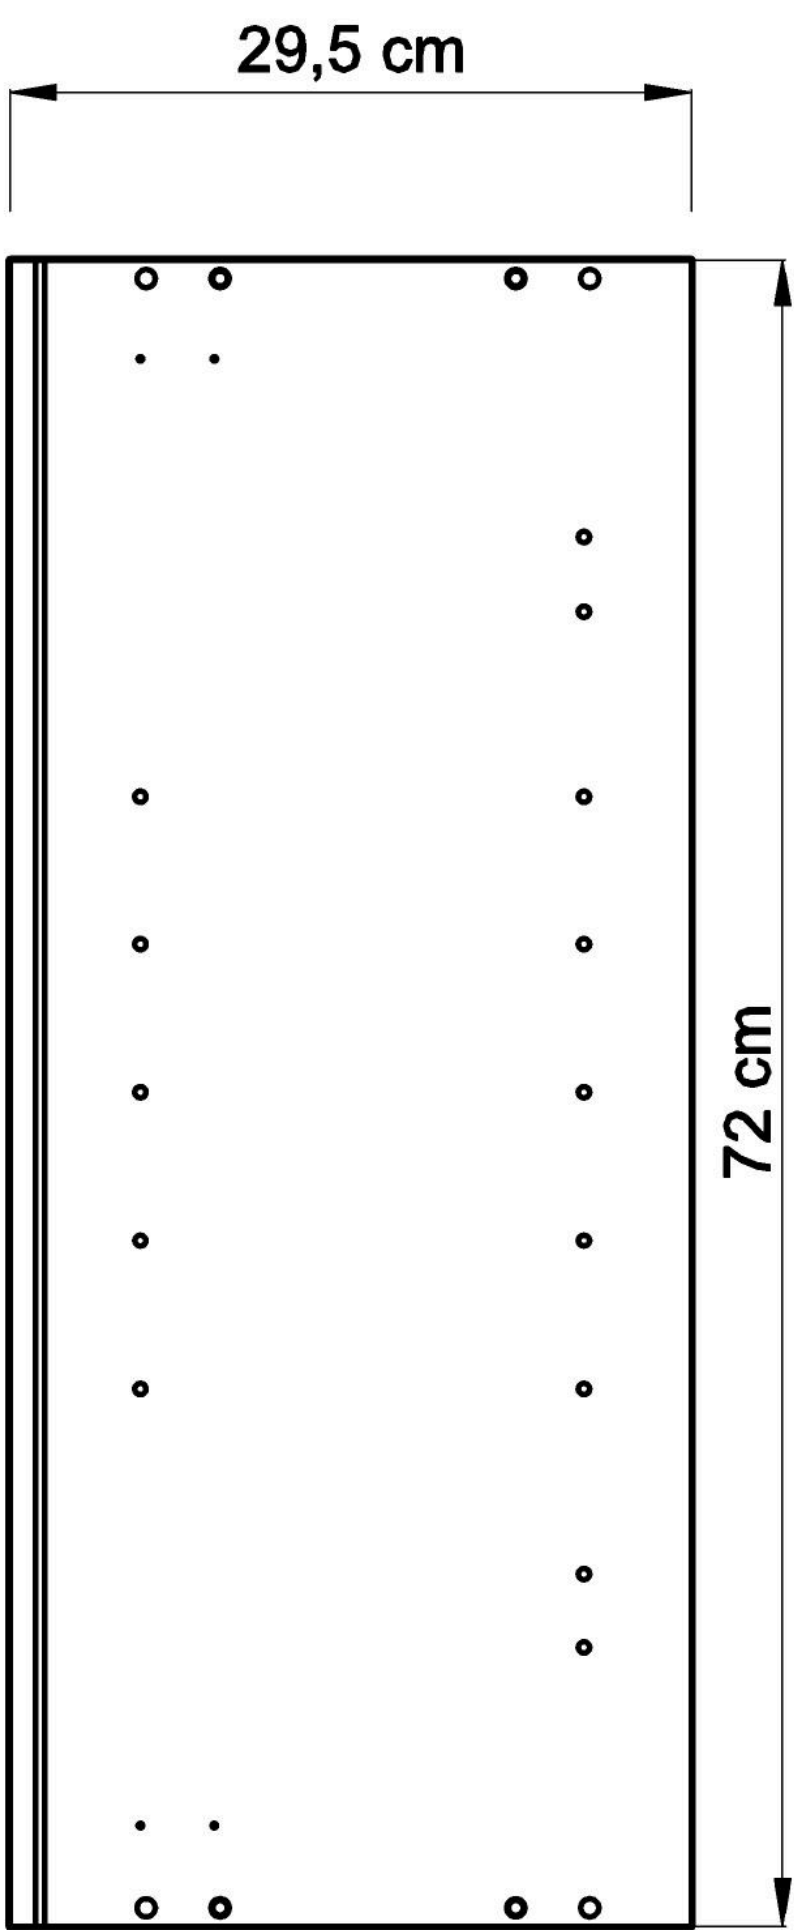


4

x1

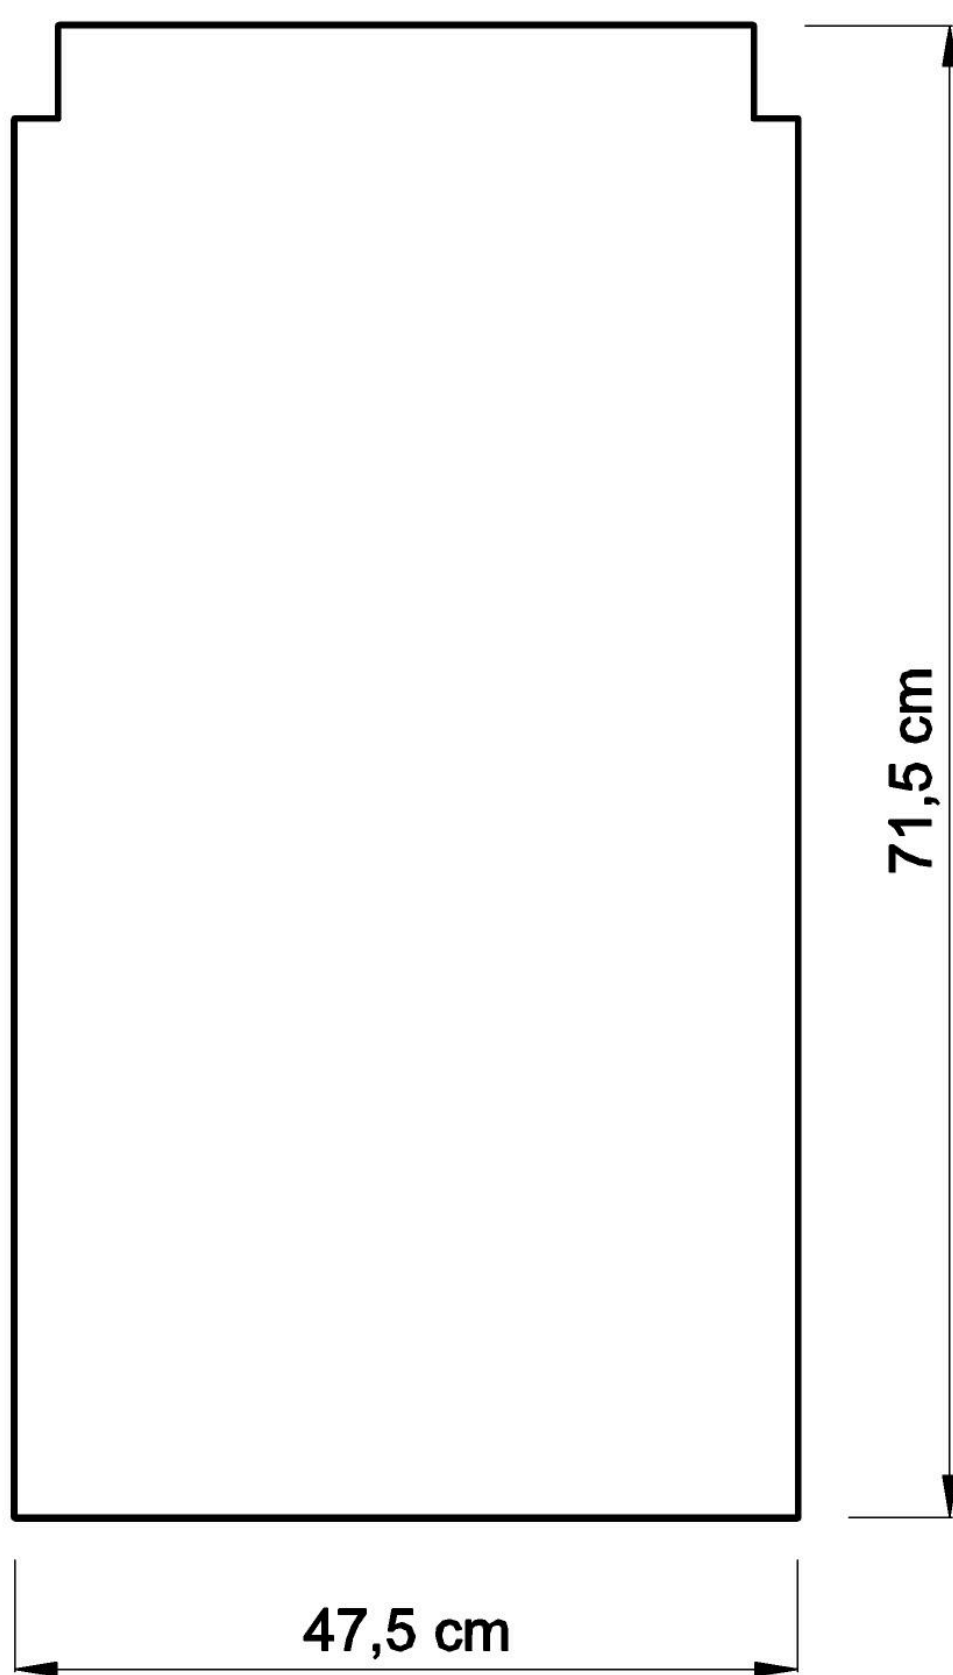











5

x2

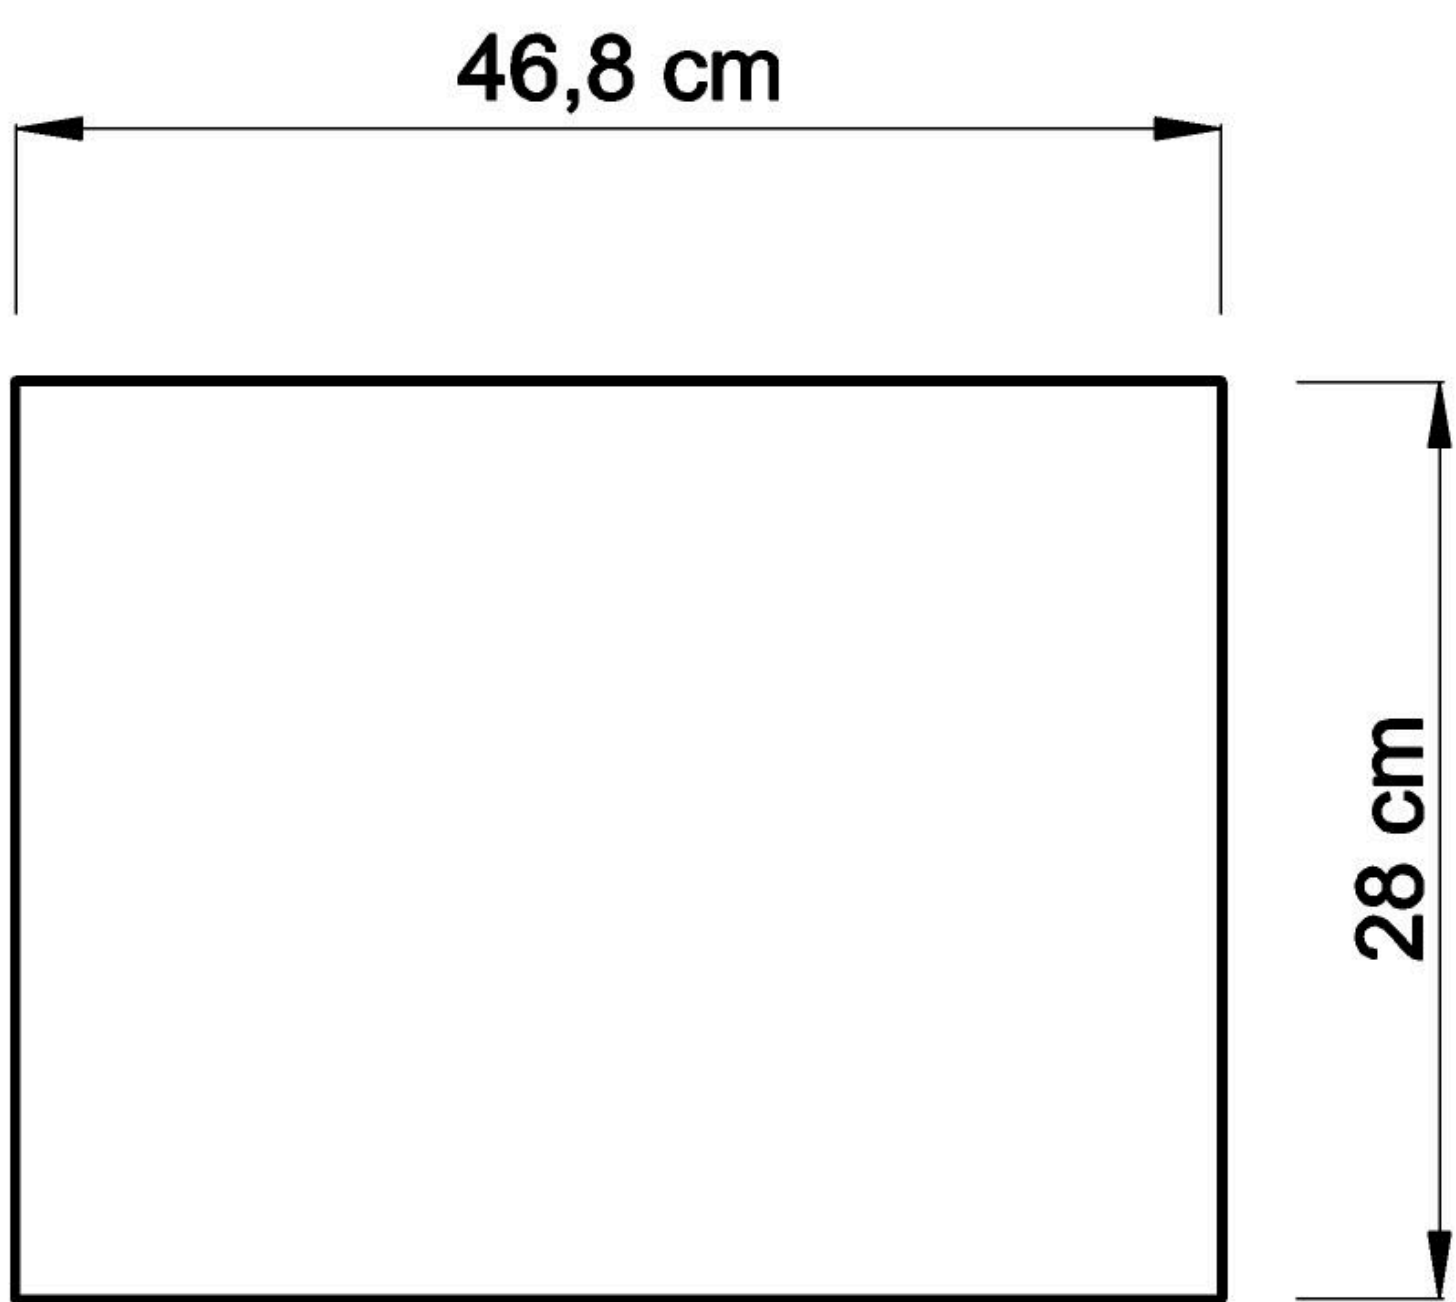

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

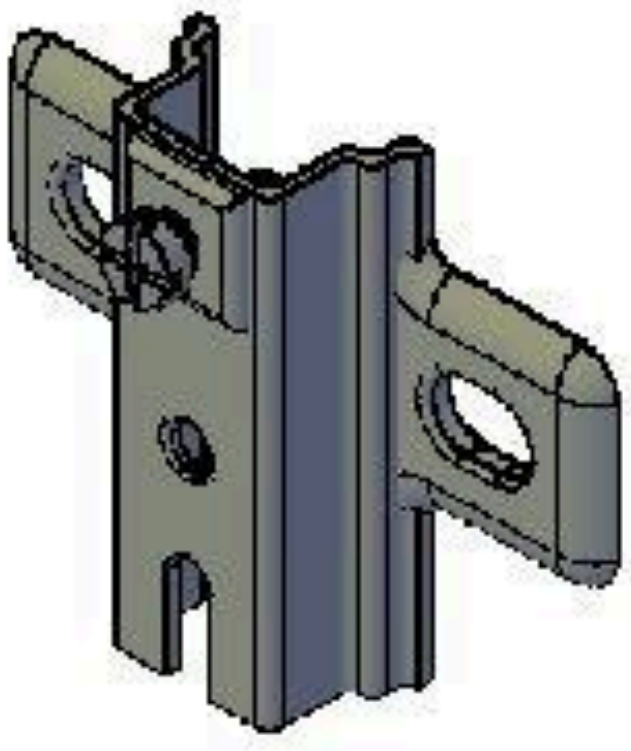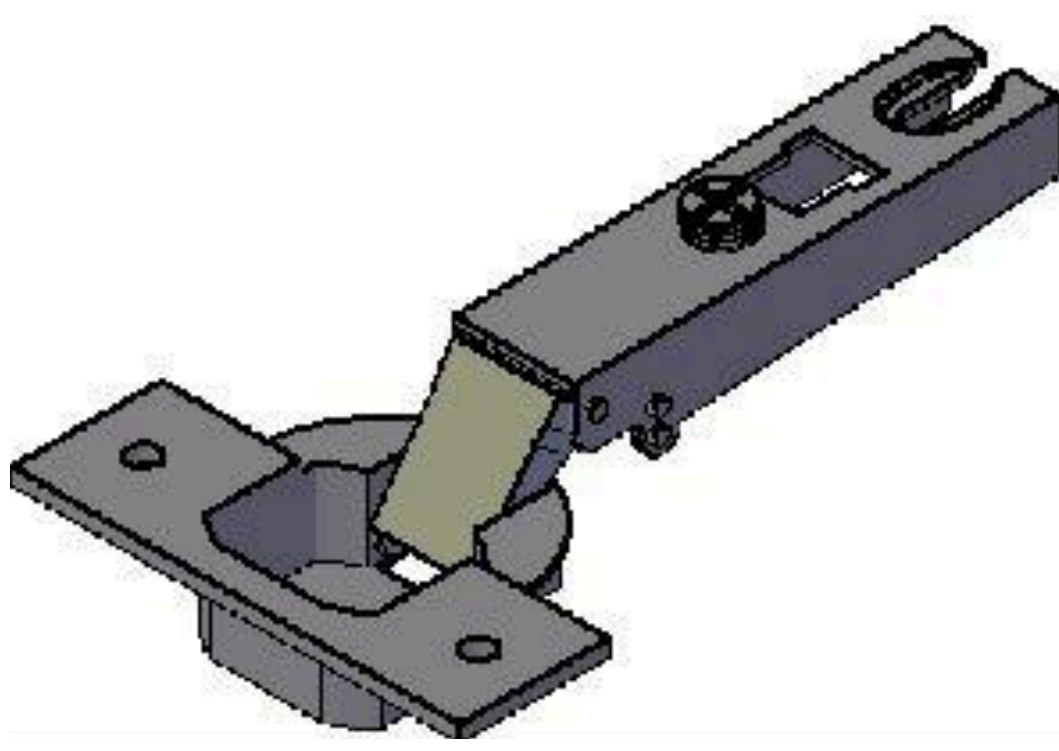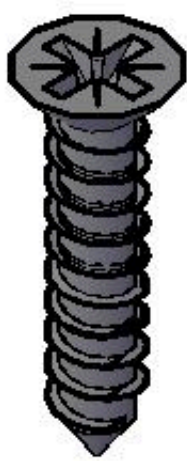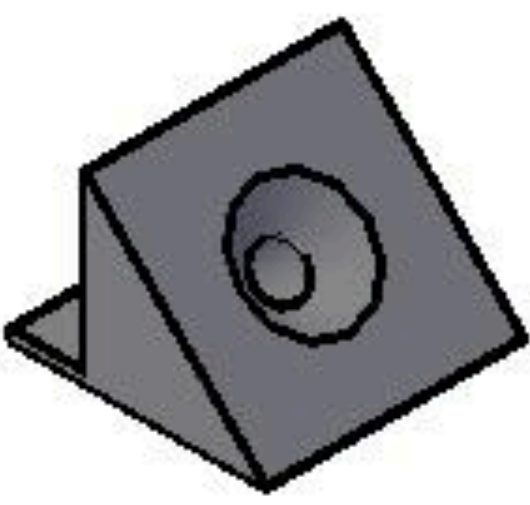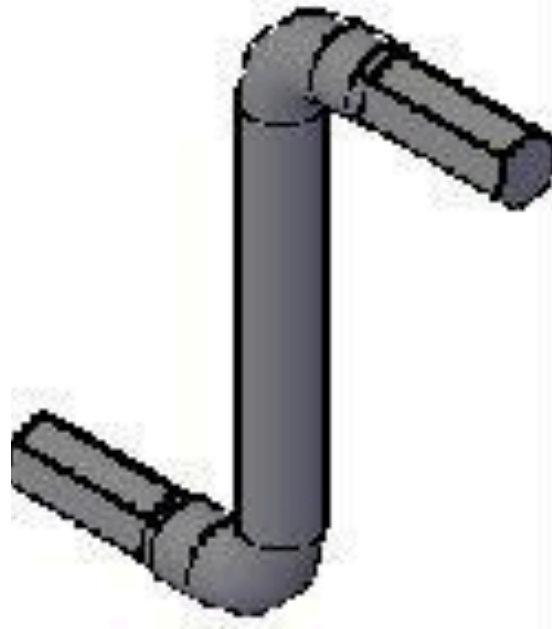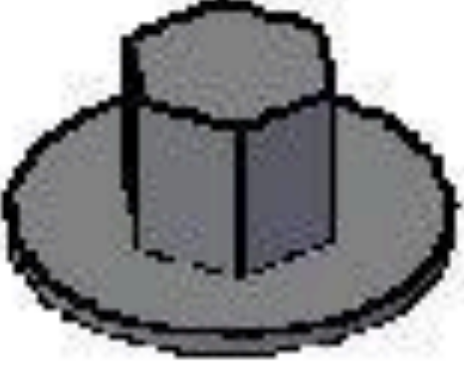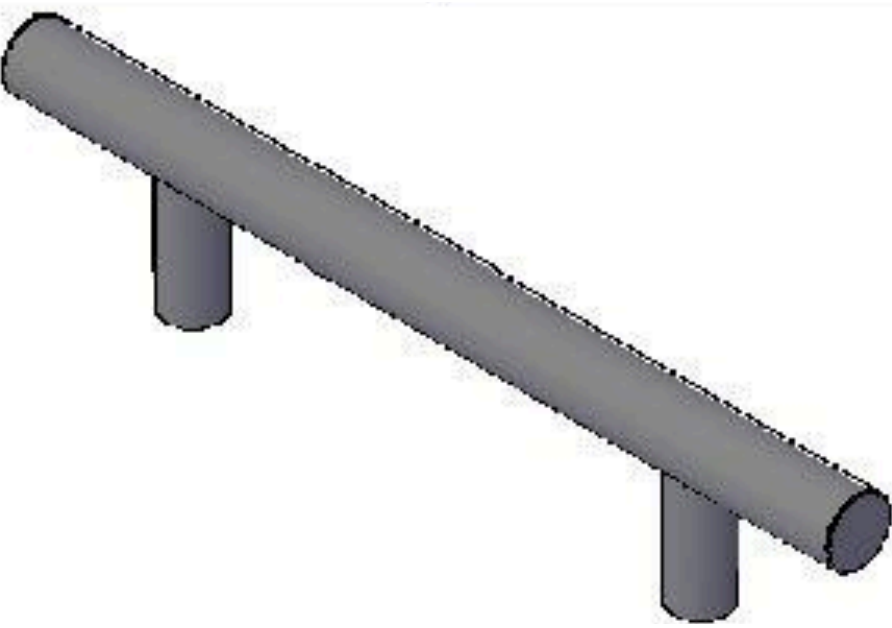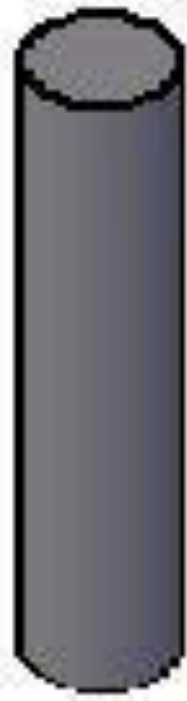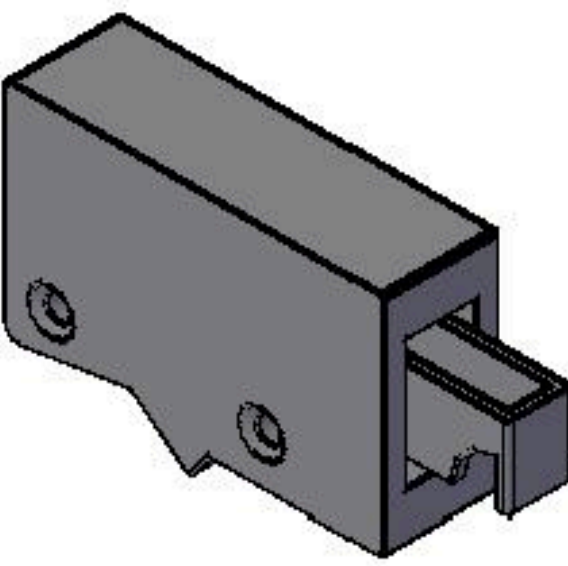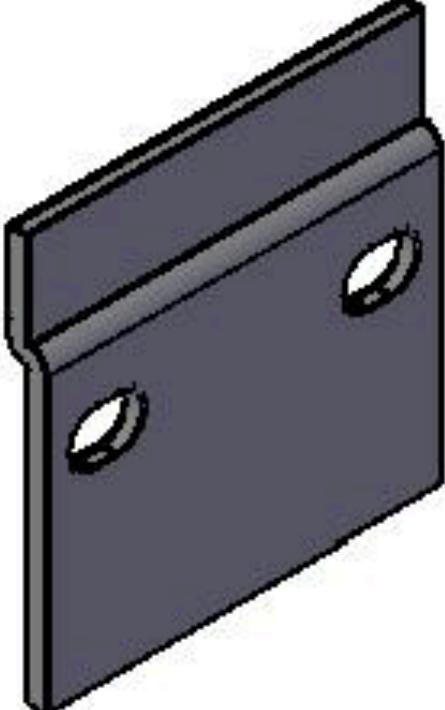
O x4  ⌀ 7x16	F x2 	G2 x2 	! PAY ATTENTION: O AND F ATTACHED TO G2
H3 x10  ⌀ 3x16	A4 x10 	Q7 x1 	C x8  ⌀ 7x50
S1 x8 	H9 x4 US 031.03  ⌀ 4x30	J9 x2  ⌀ 3x25	U7 x1 
H x4 US 031.03  ⌀ 3.5x13	W x10 	D8 x4 	A x8 
S7 x2 	Z8 x2 	Z9 x2 	

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x4


F x2

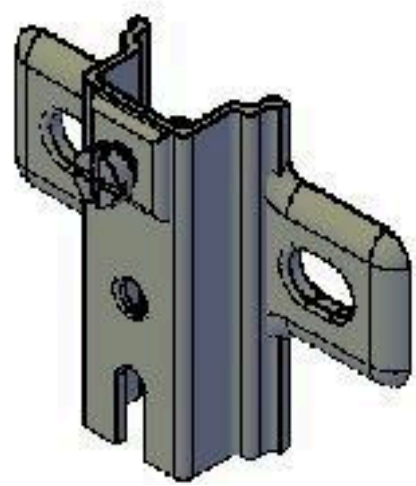

⌀7x16

D8 x4


H9 x4 US 031.03




⌀4x30

Z8 x2

A x8

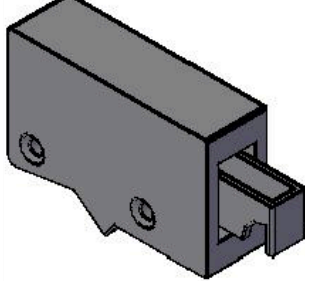


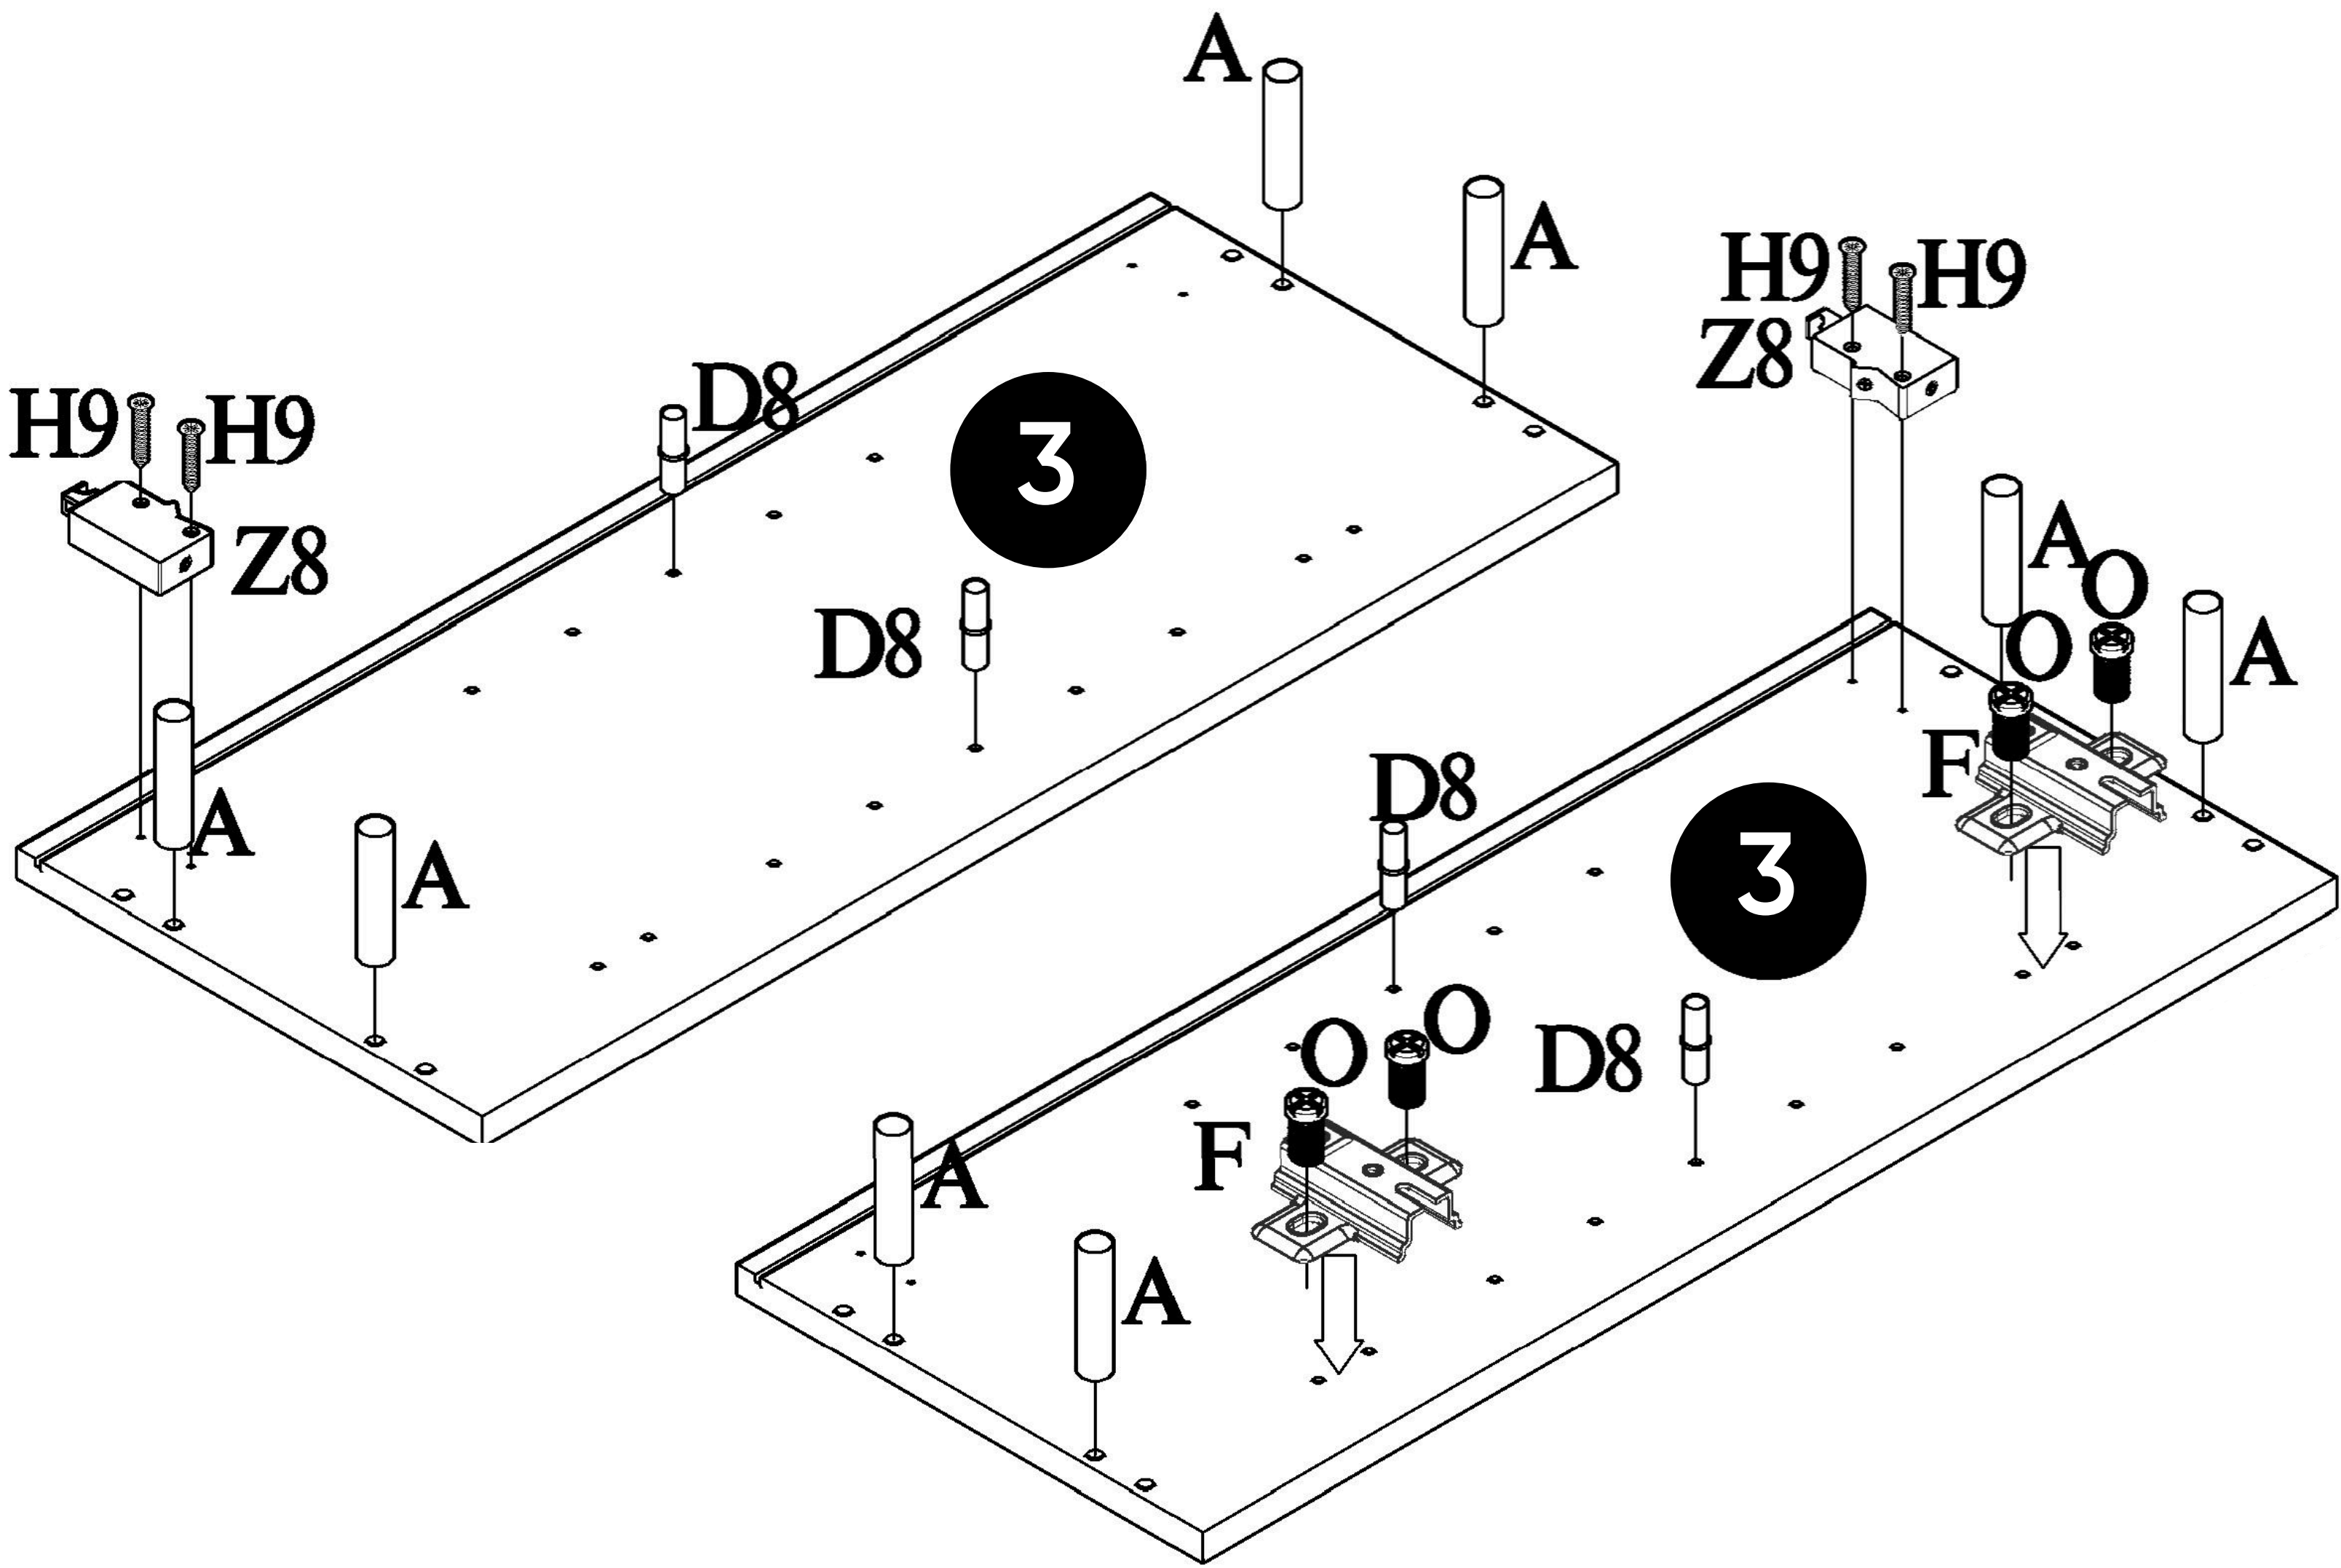


STEP - 2


Q7 x1

S1 x8


C x8

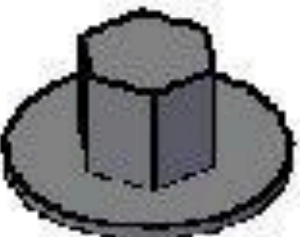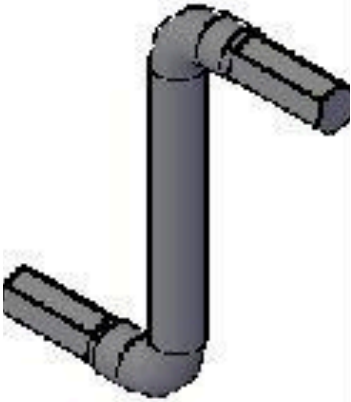



⌀7x50

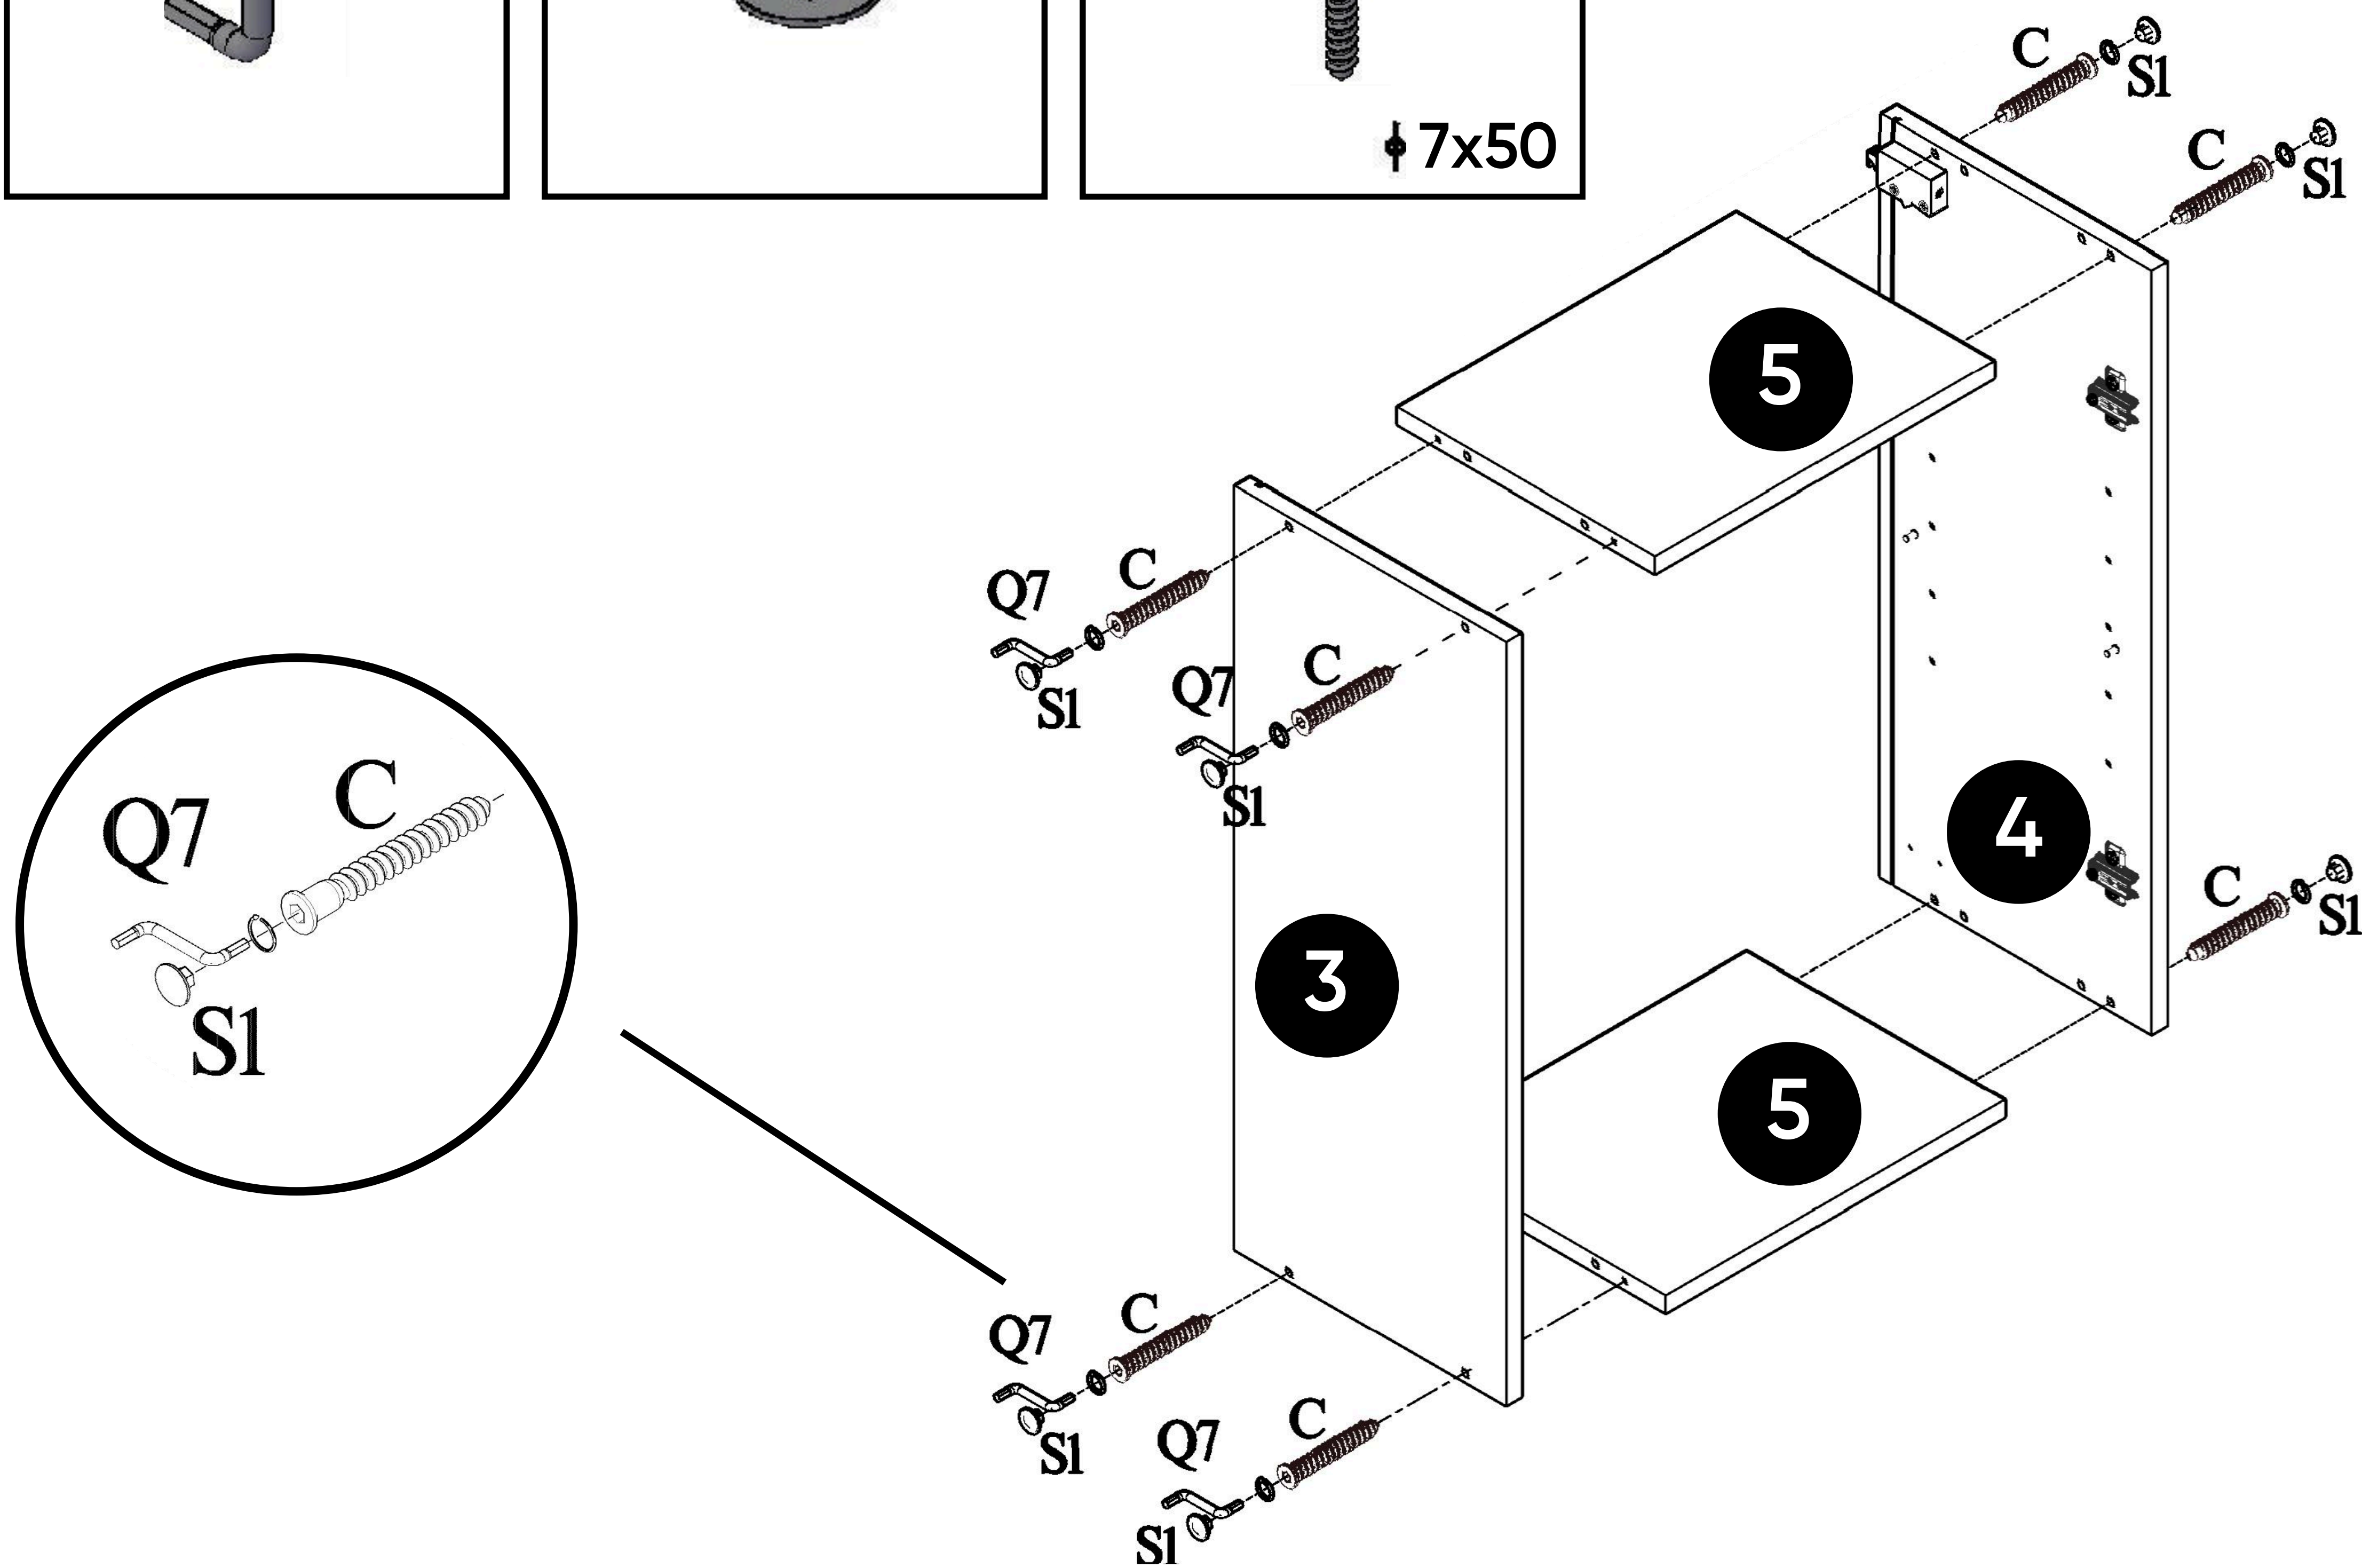

STEP - 3

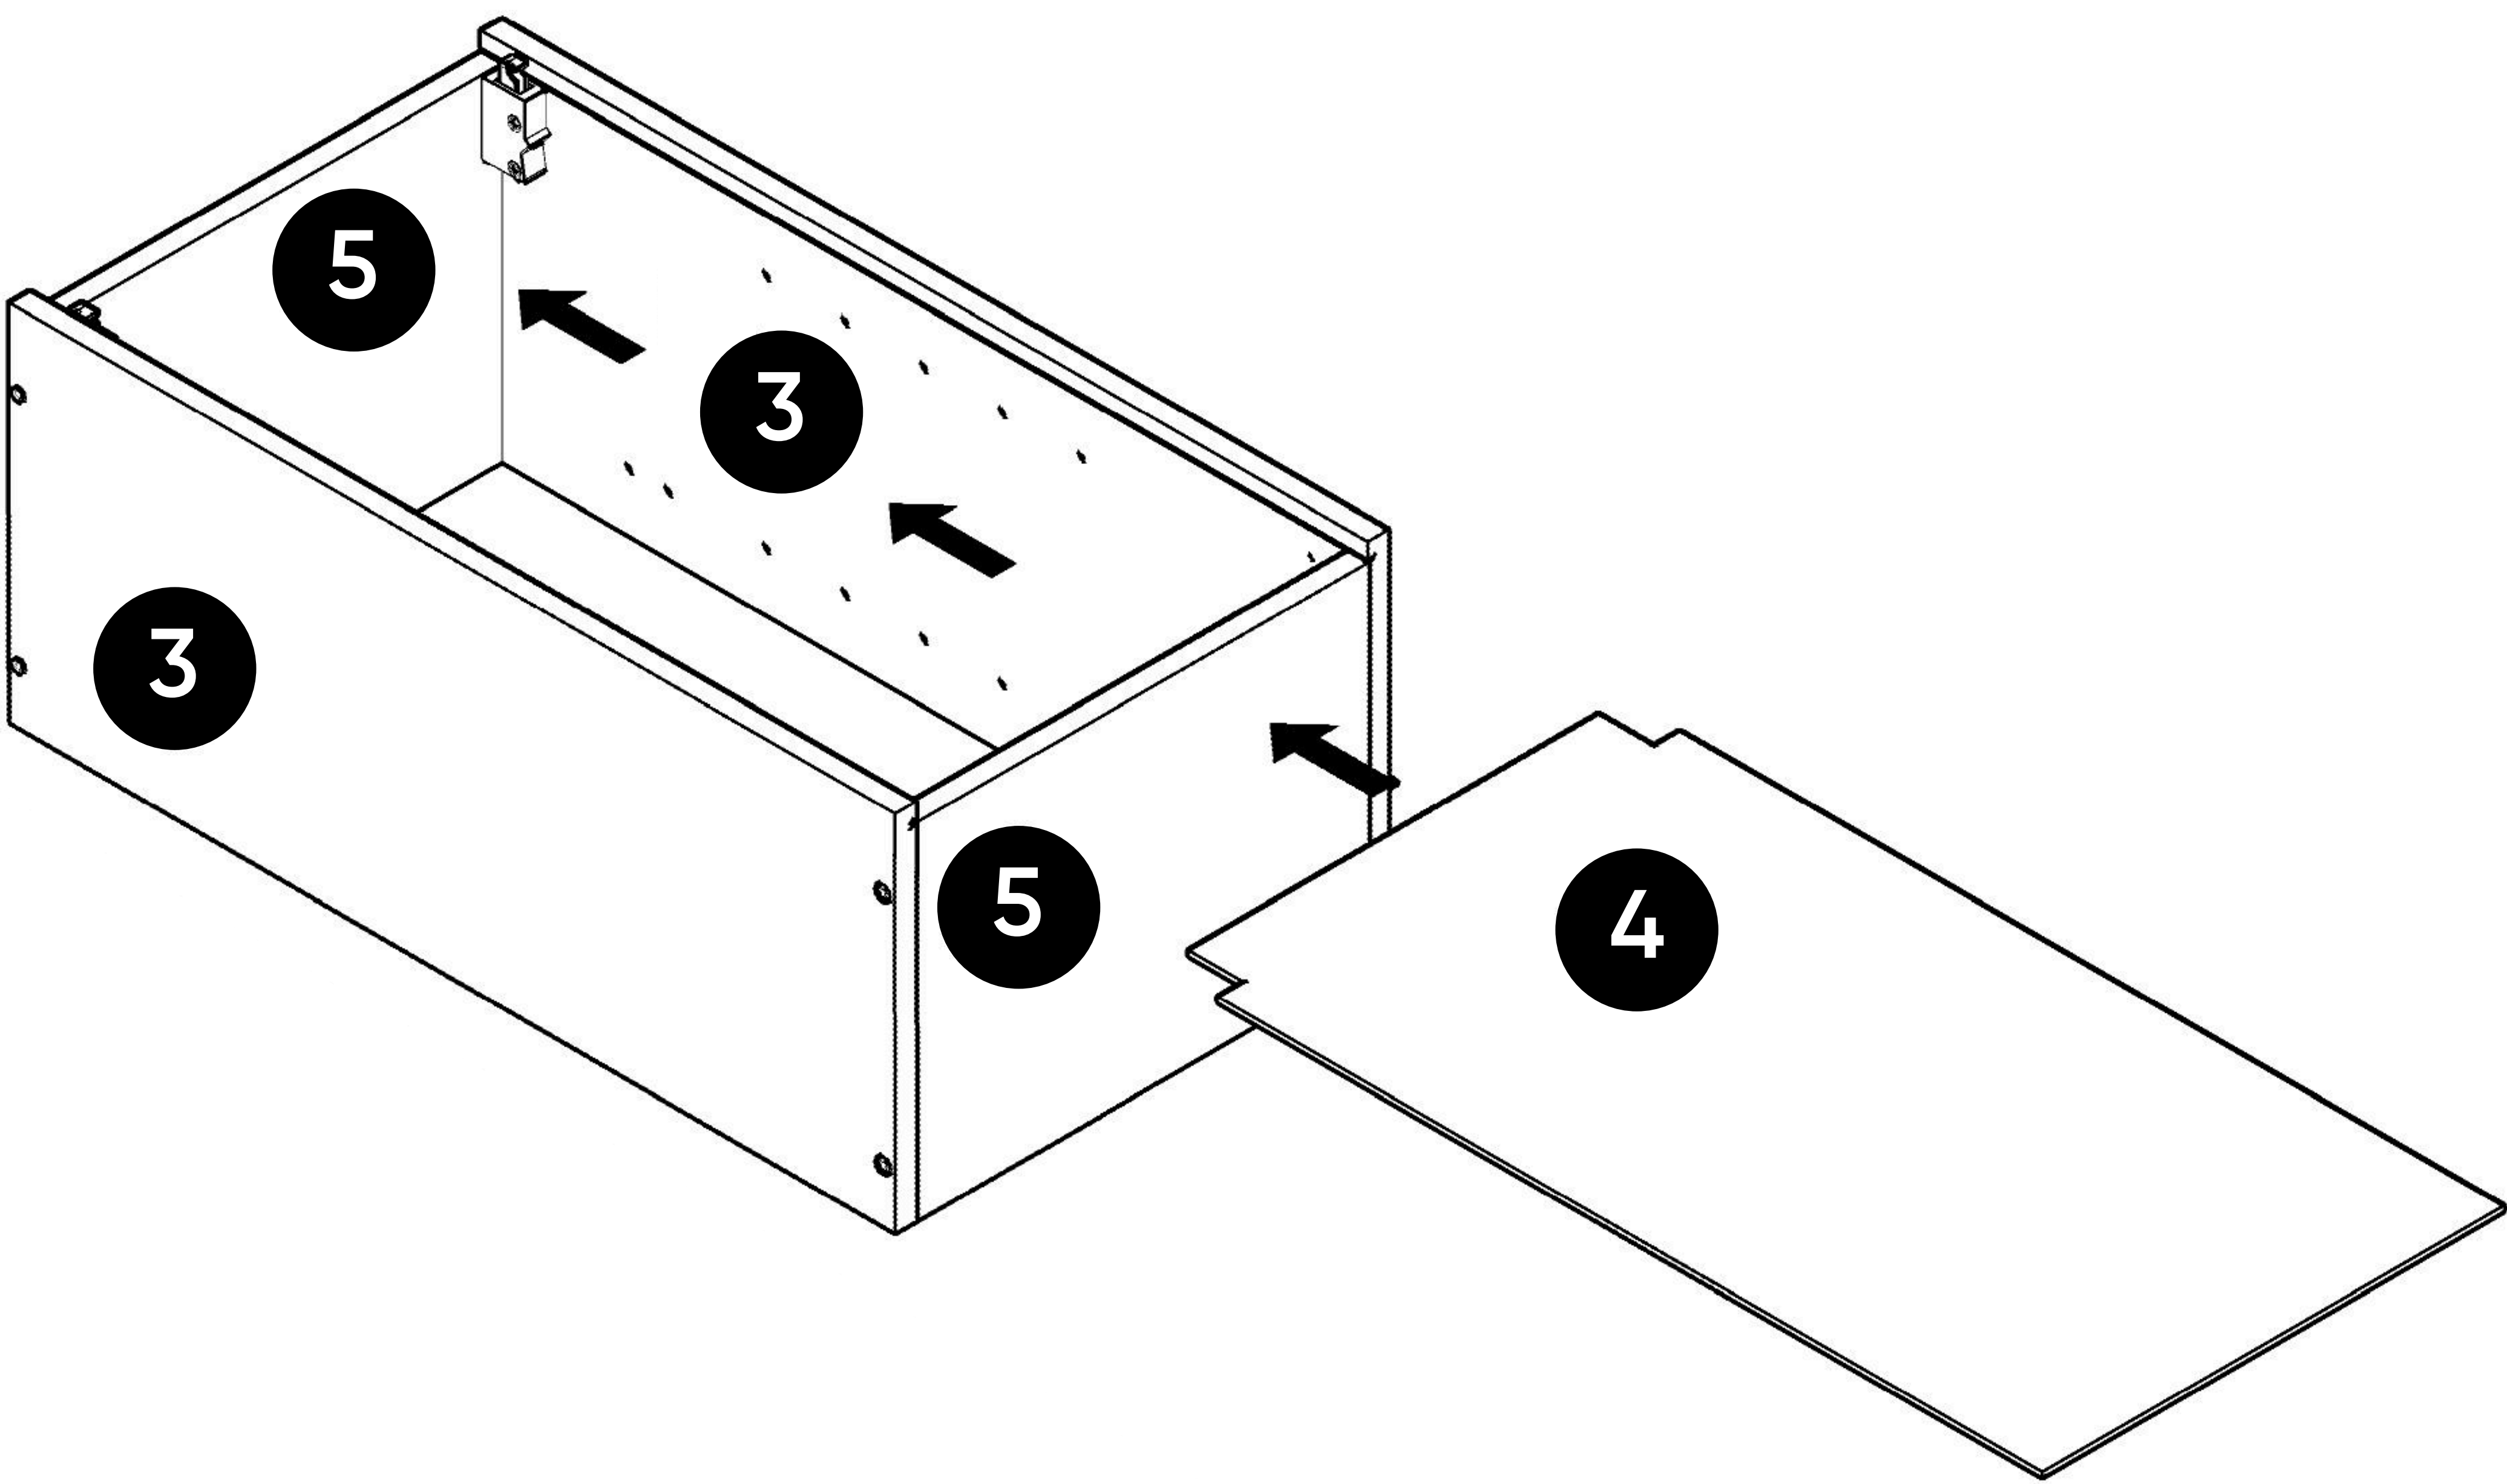

STEP - 4

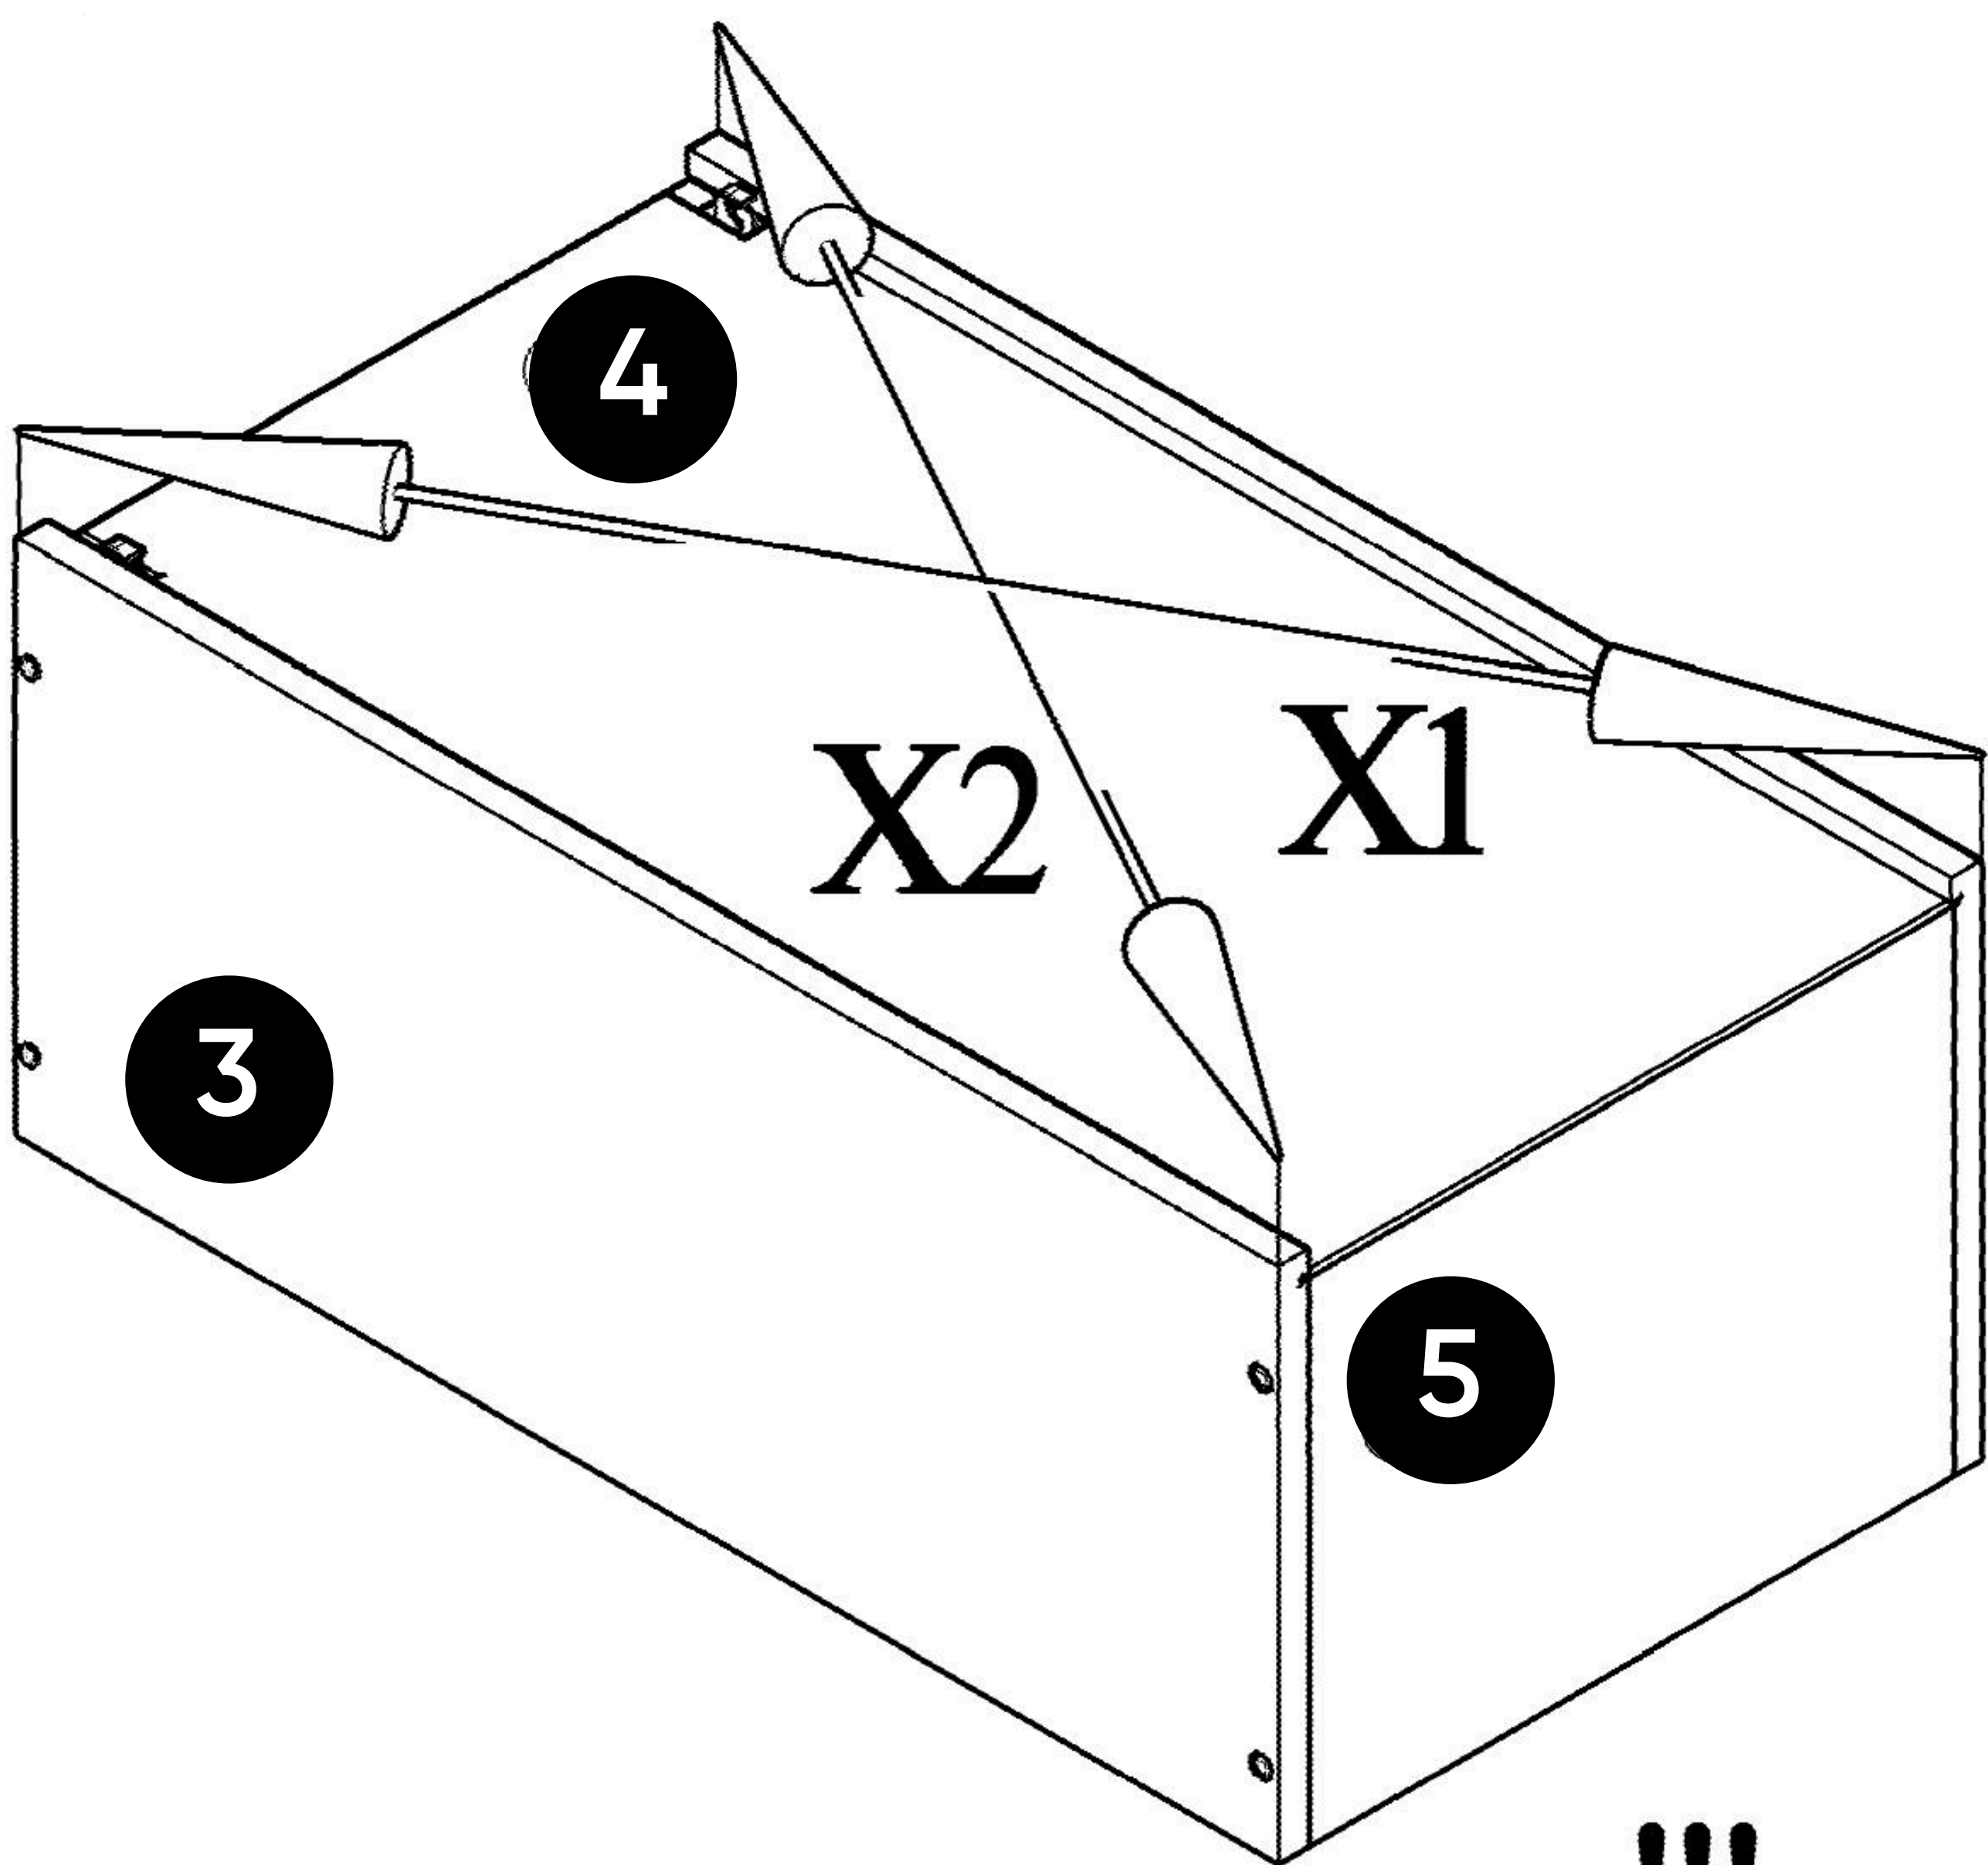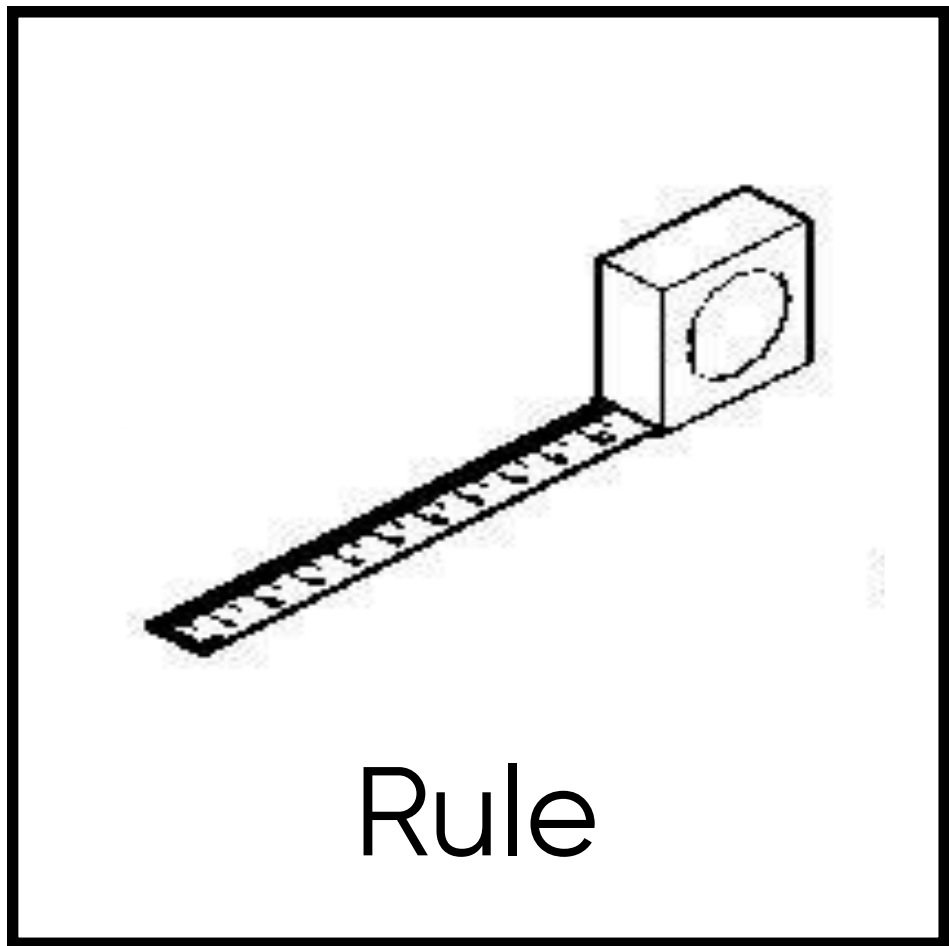

!!!


$X1=X2$

STEP - 5


W x10




A4 x10

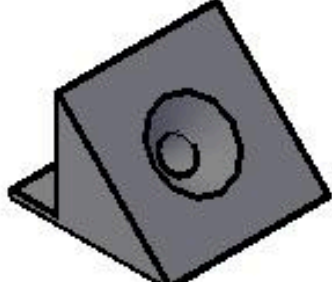

H3 x10




φ 3x16

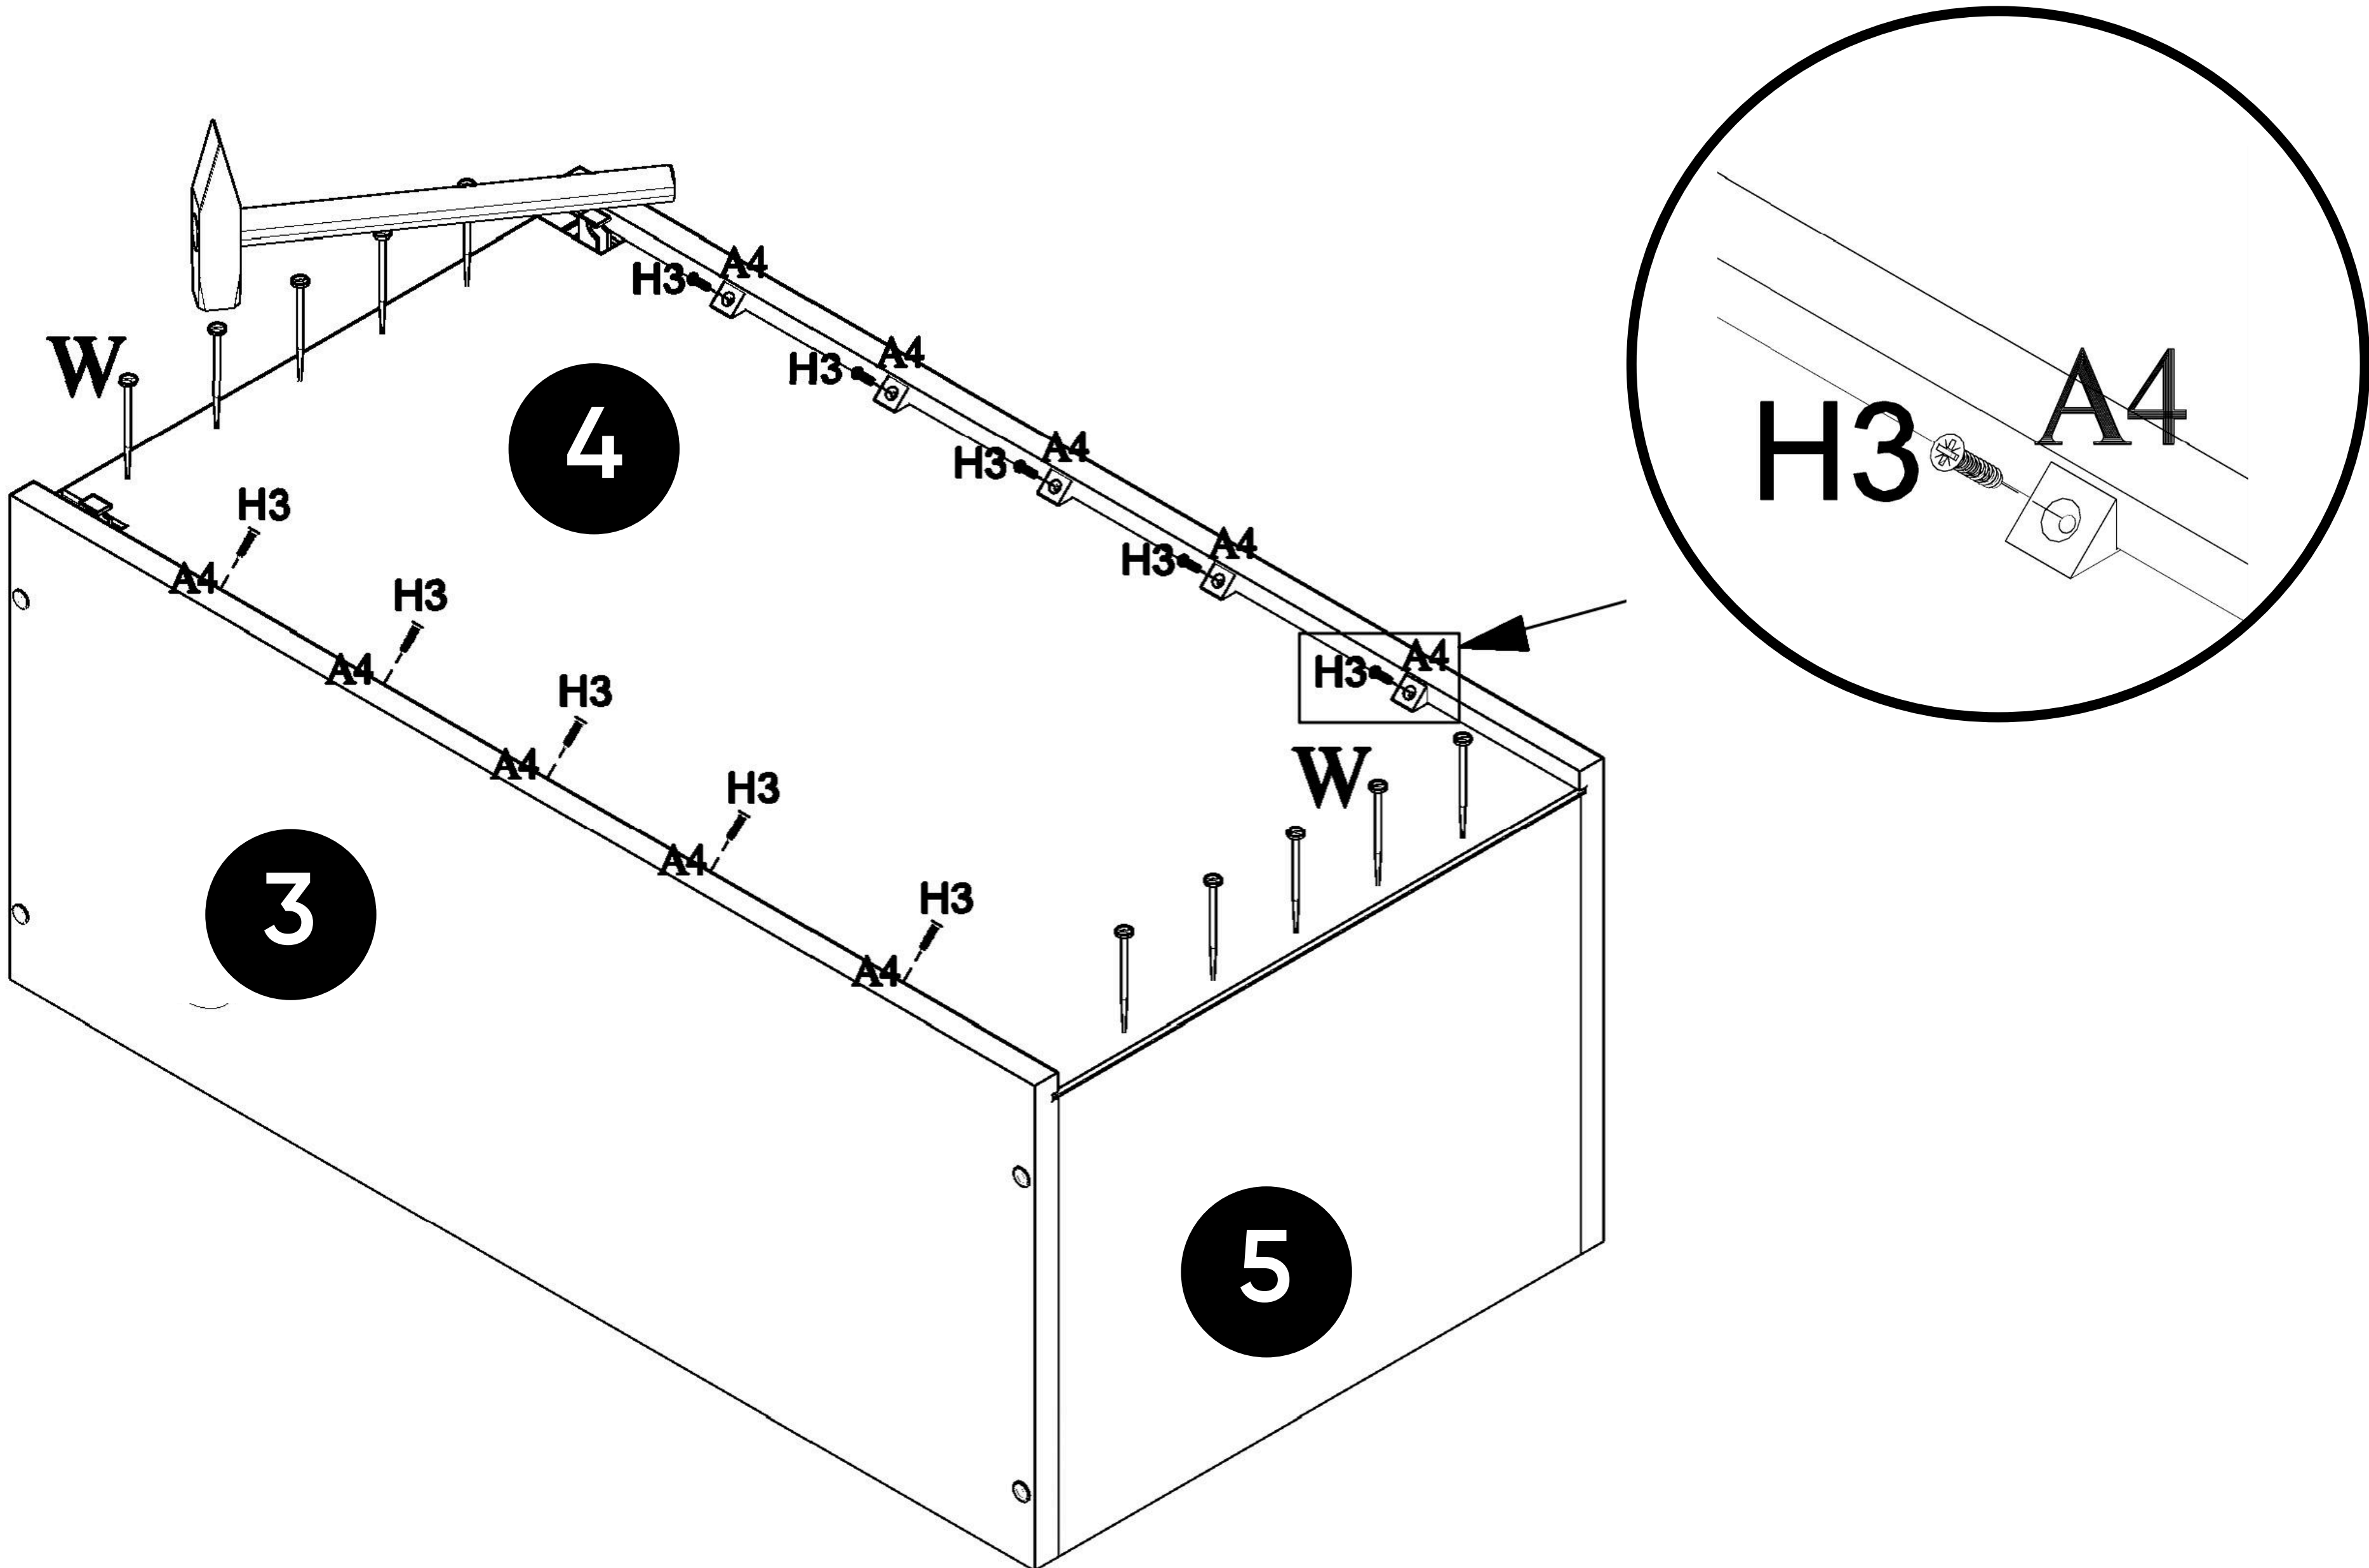

STEP - 6


G2 x2

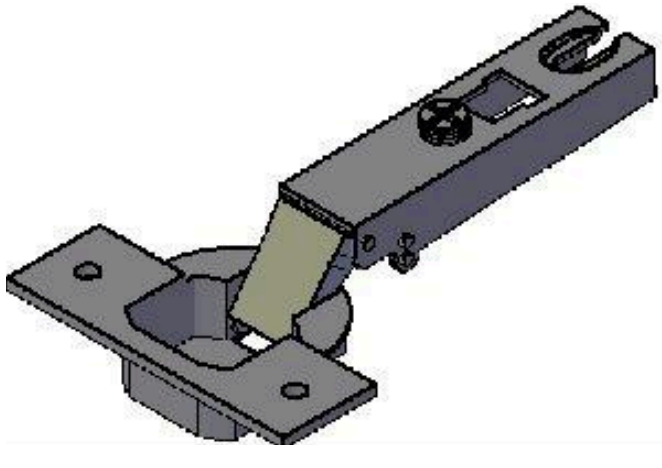



H x4 US 031.03



φ 3.5x13




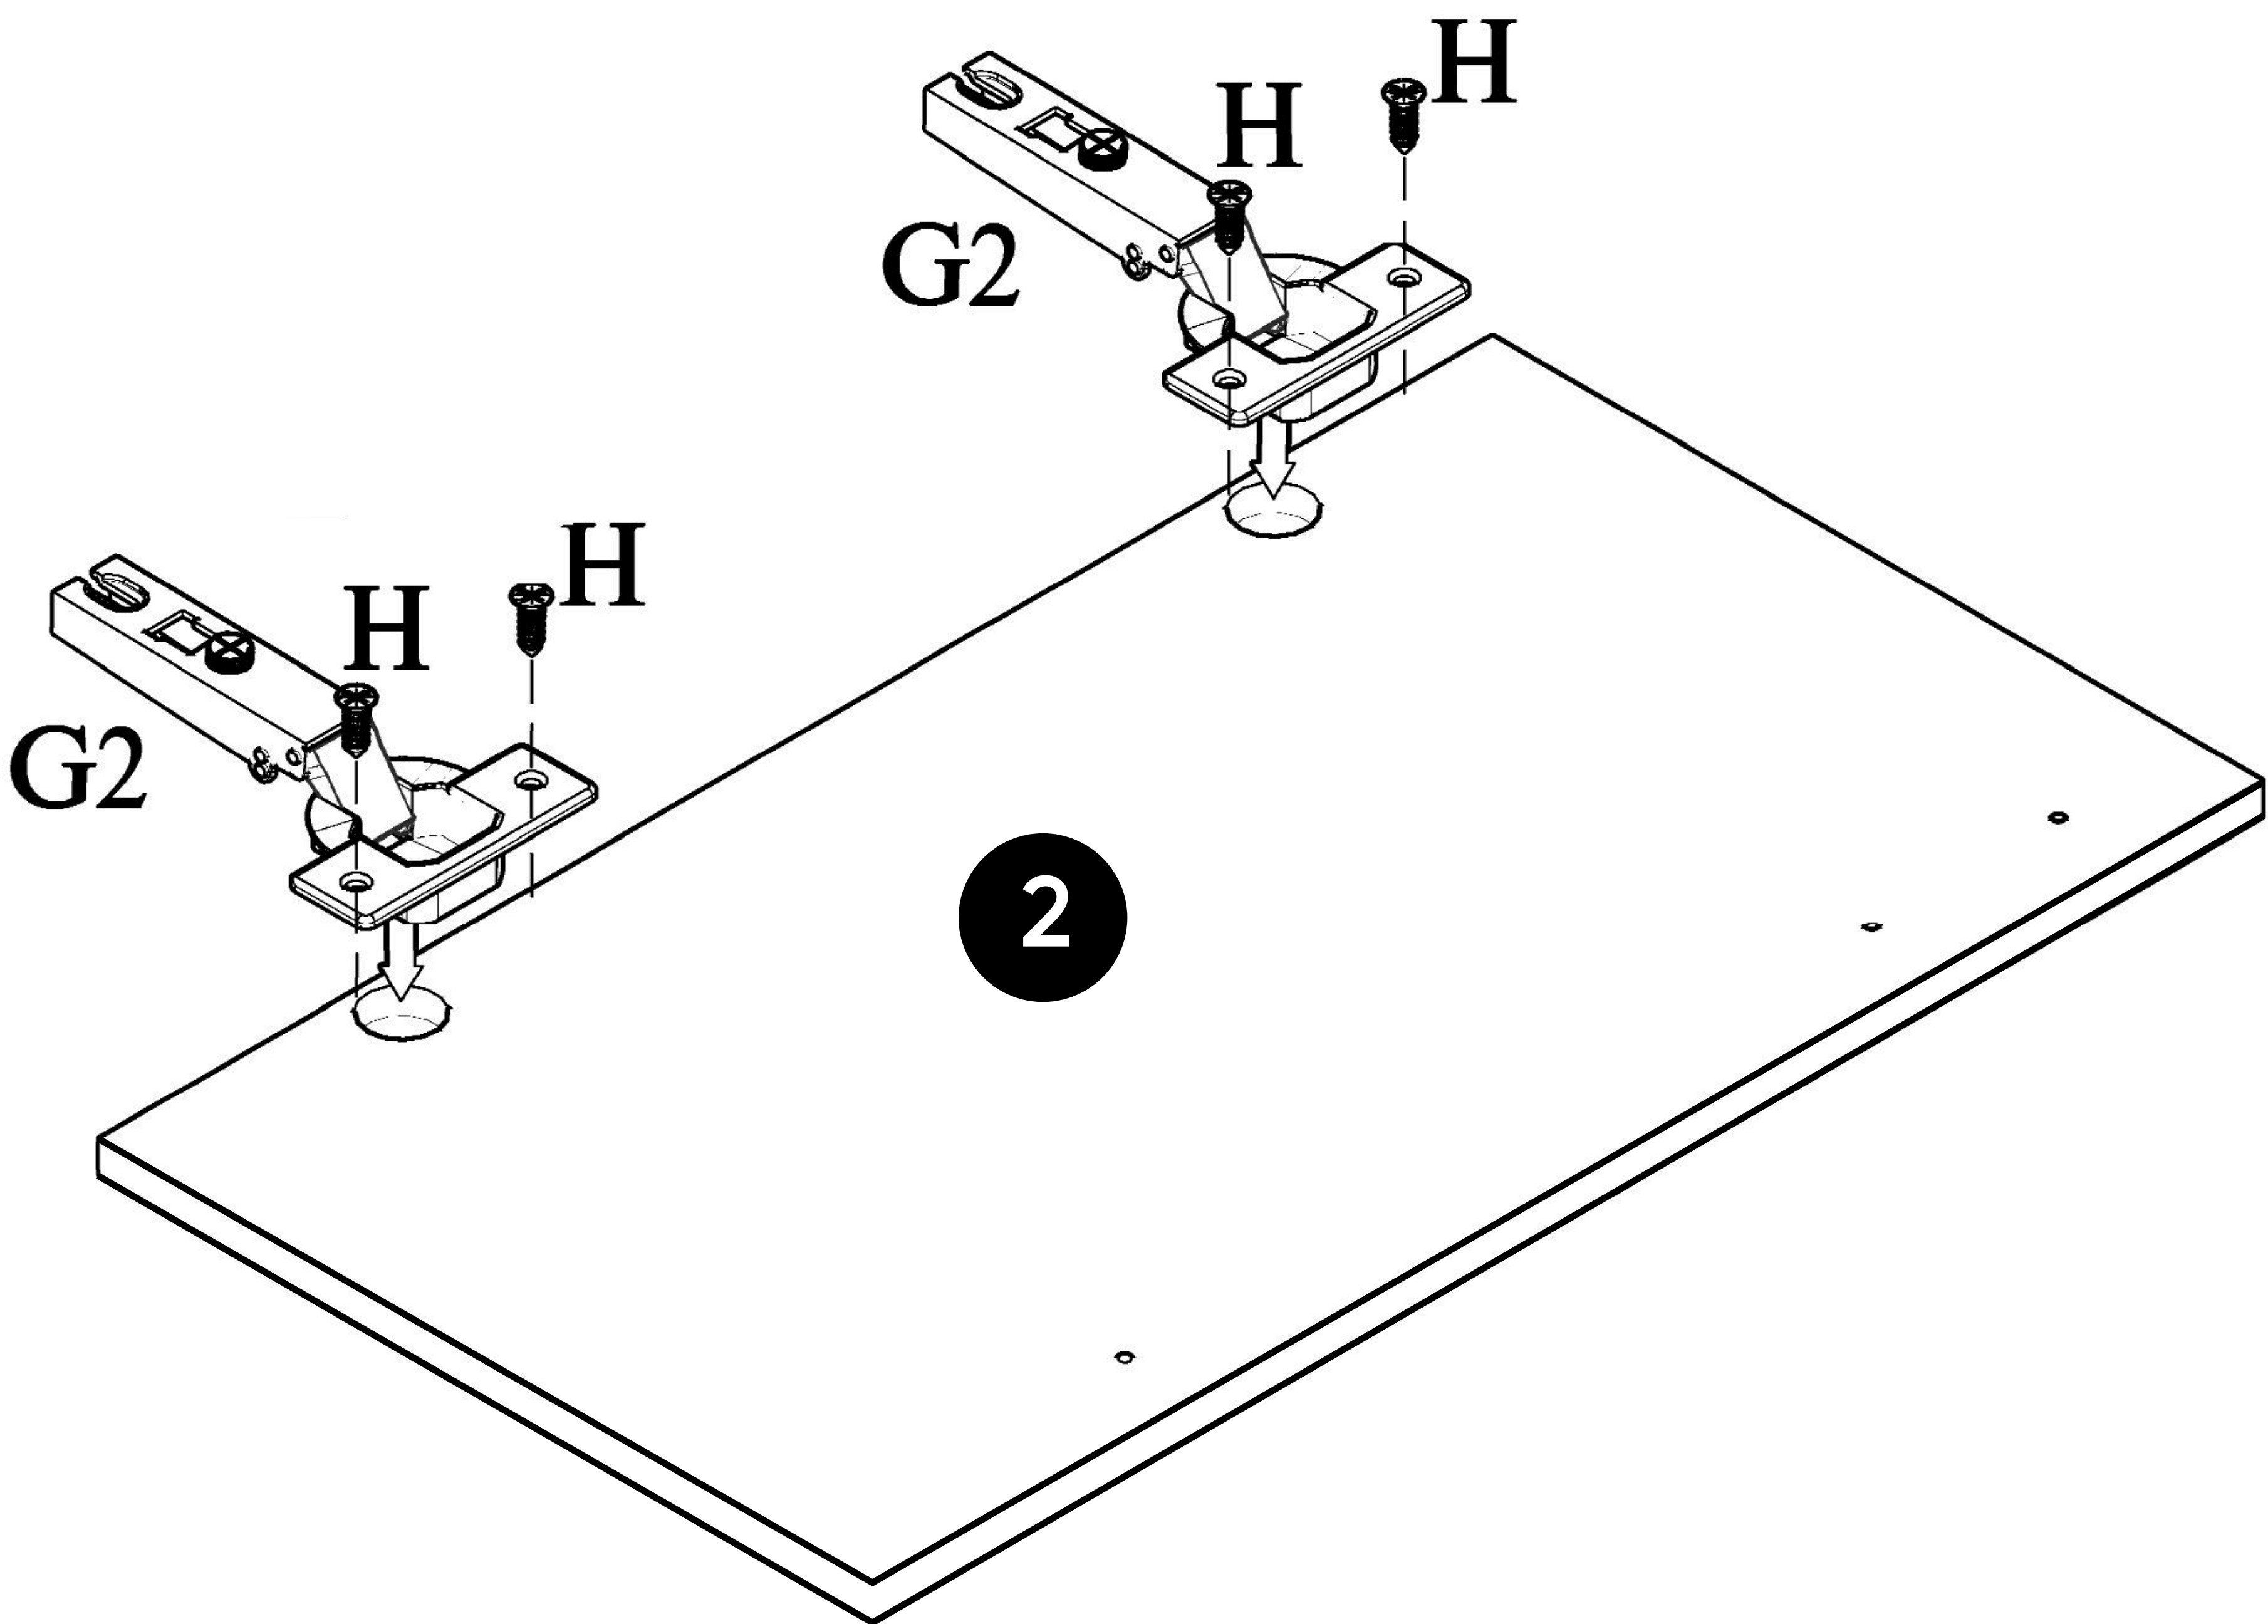


STEP - 7

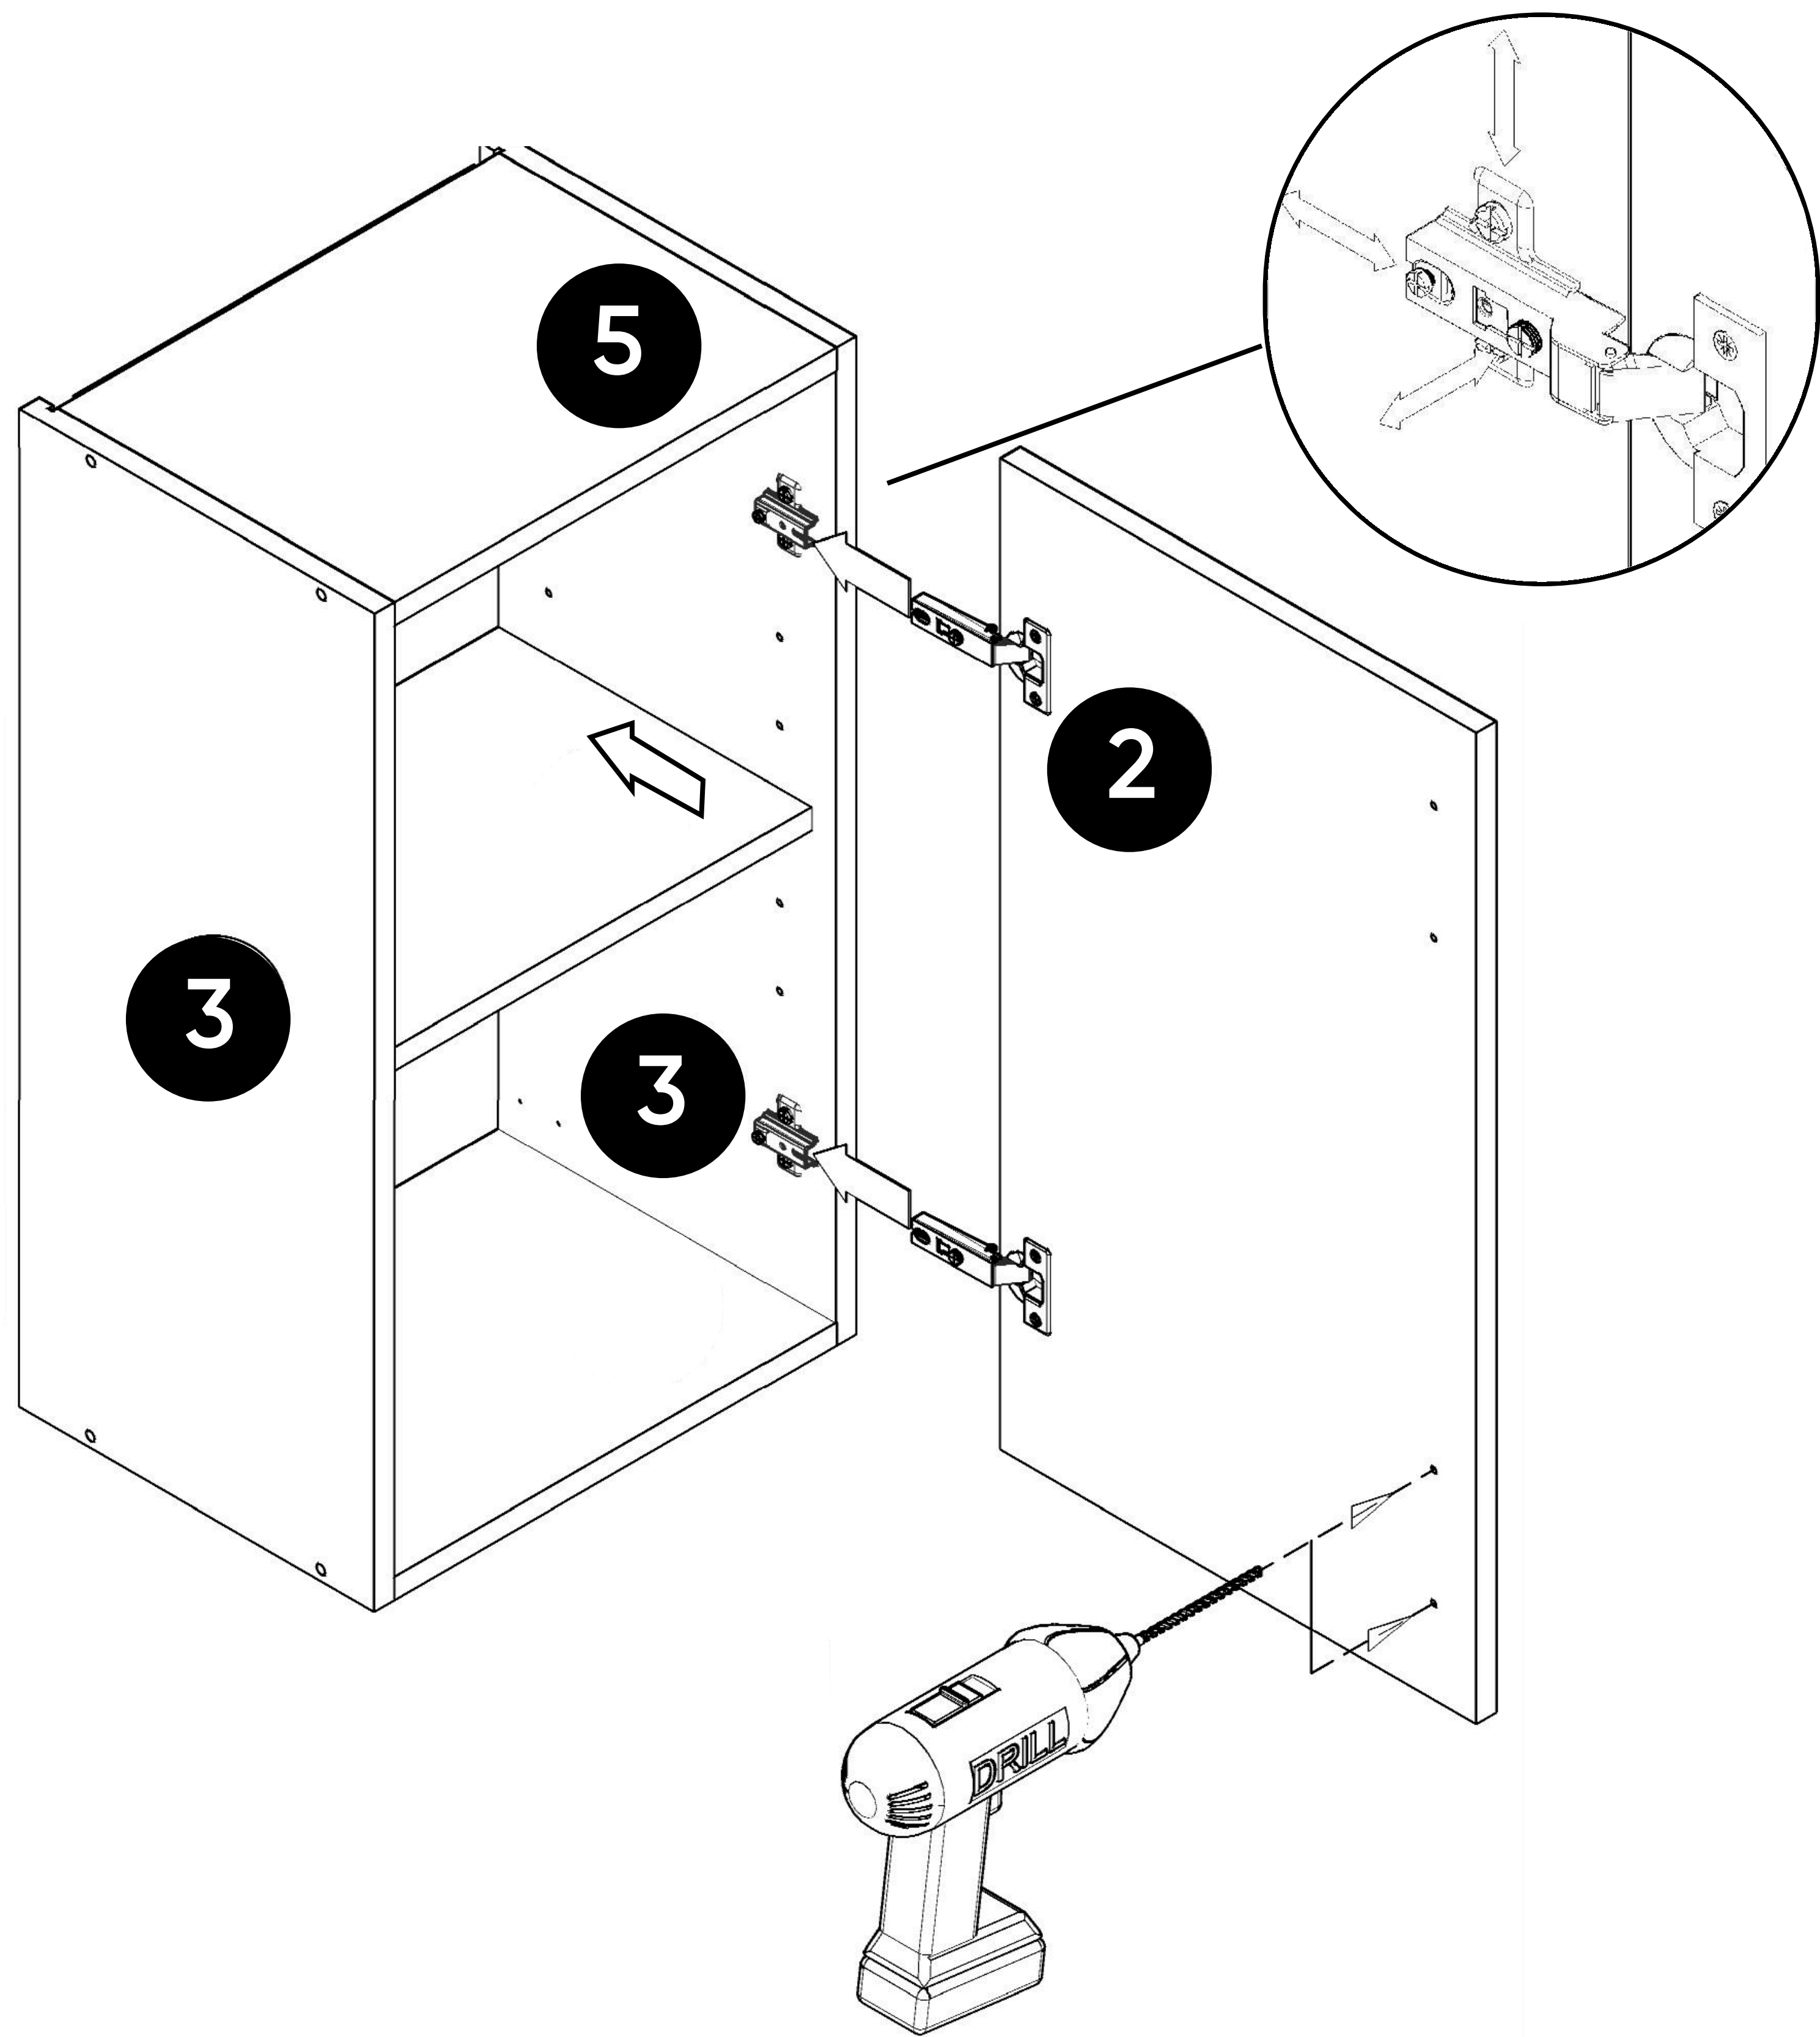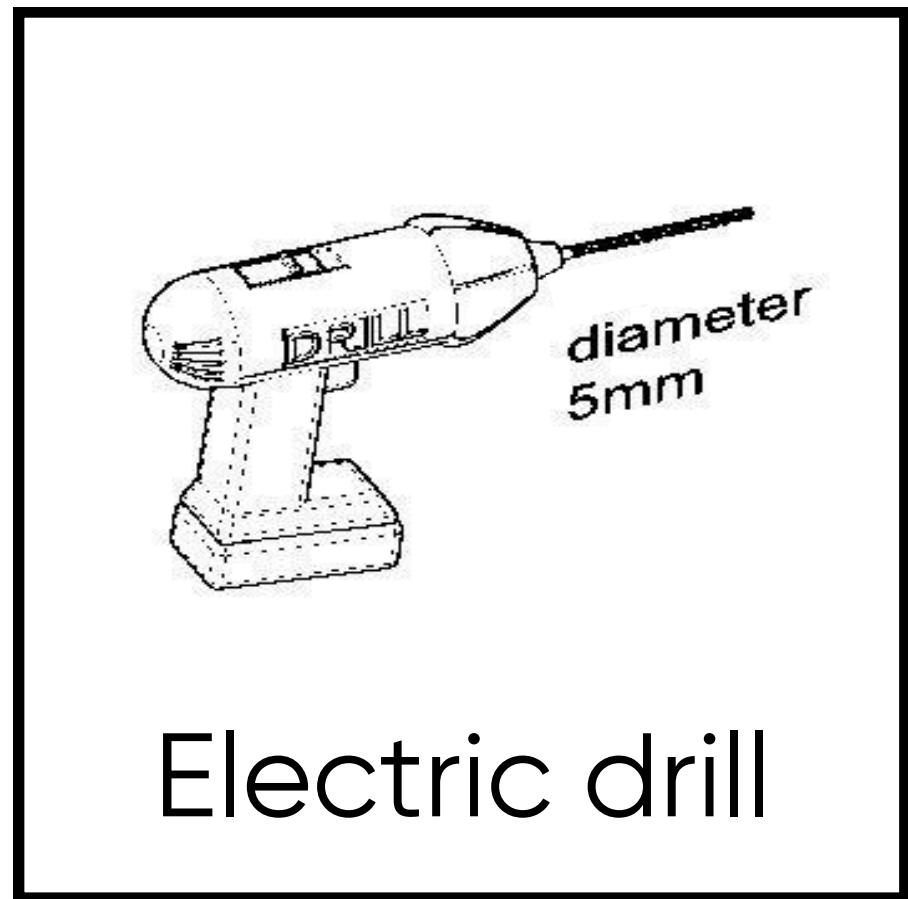


NOTE: Door can be fitted the left or right side

STEP - 8

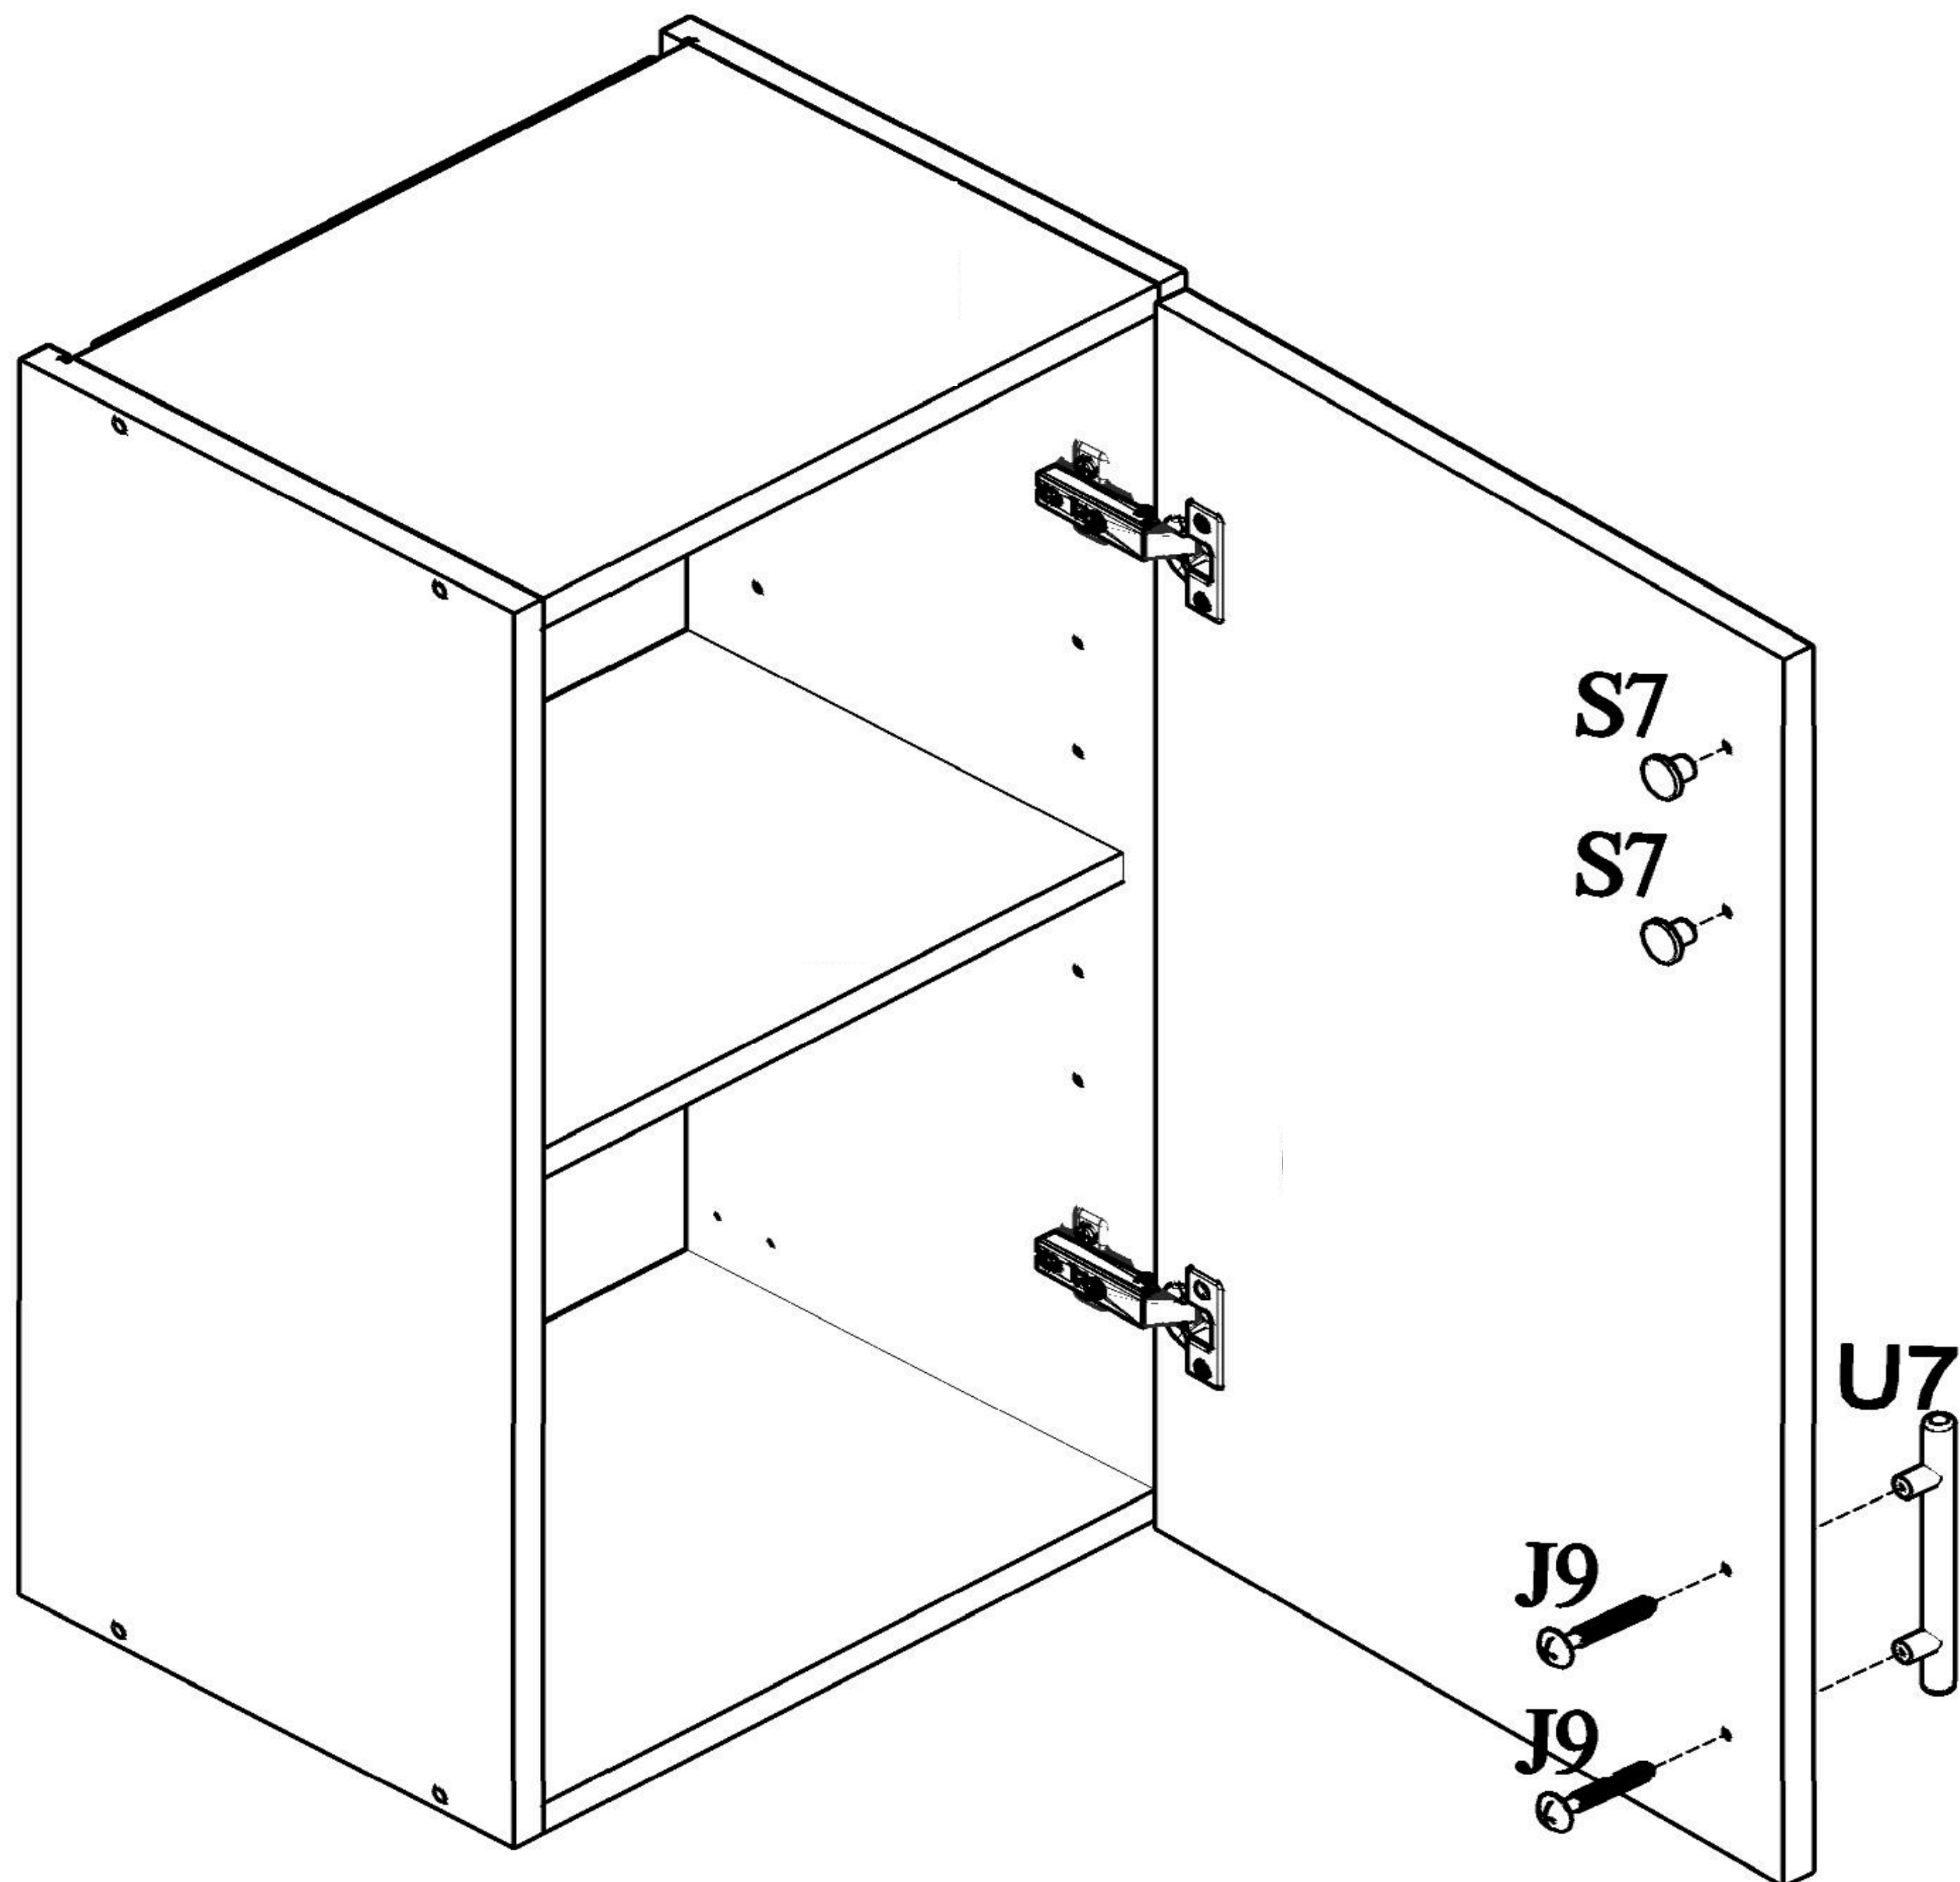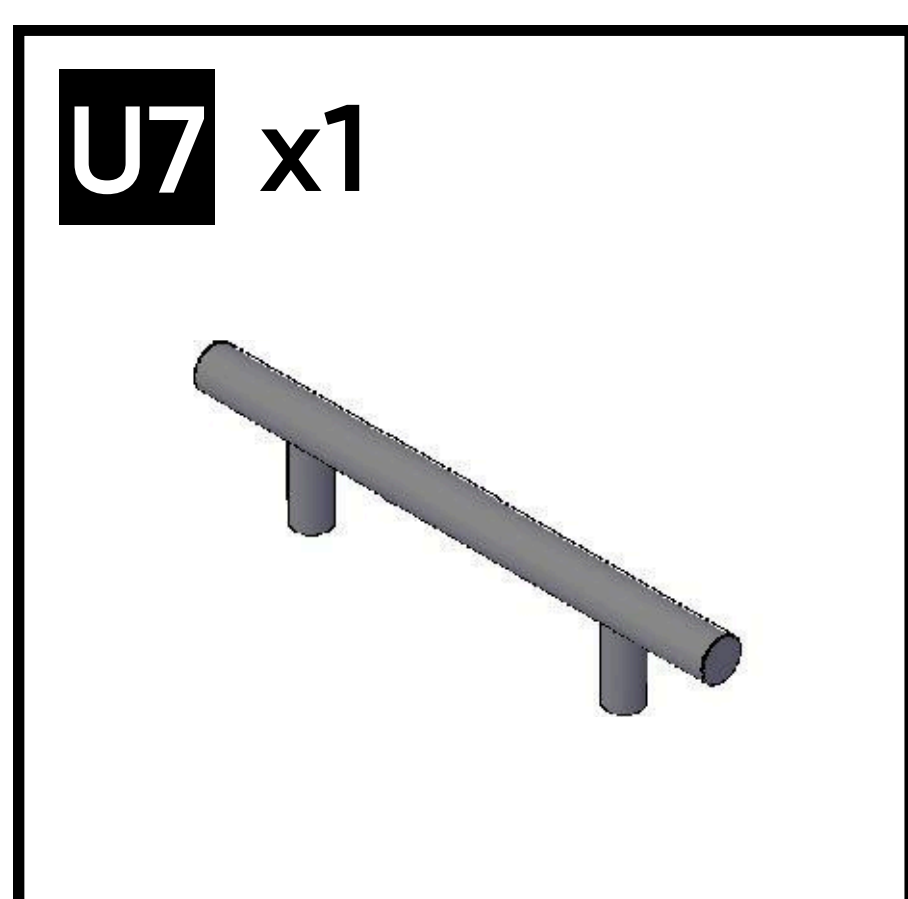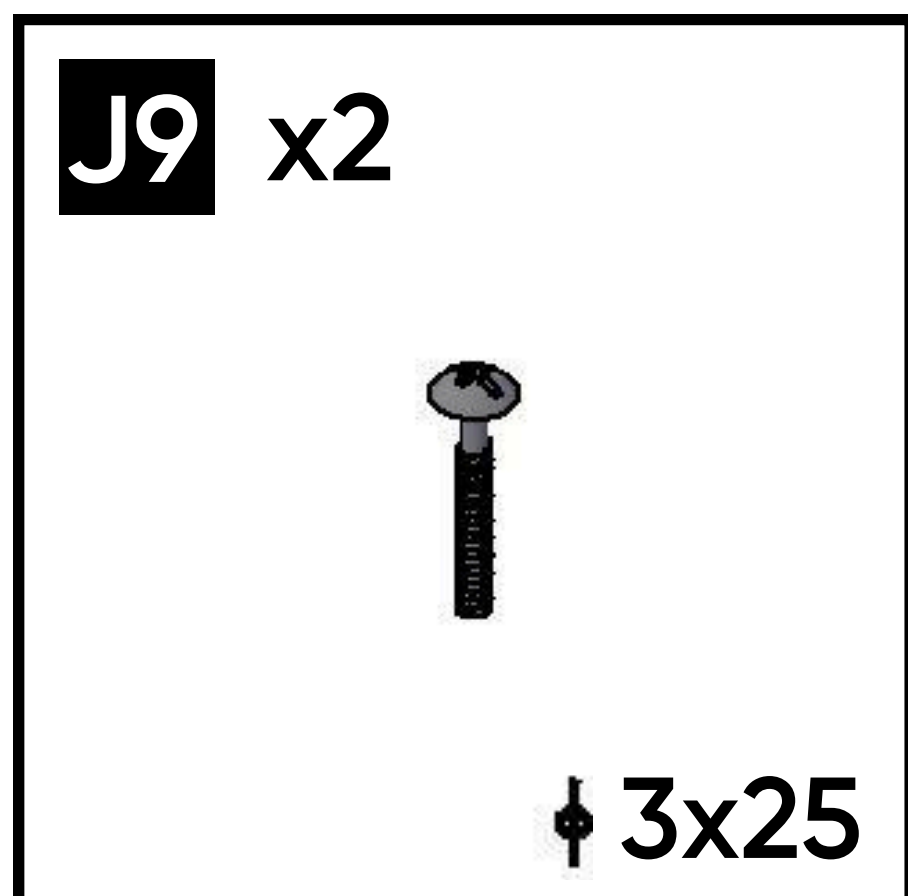
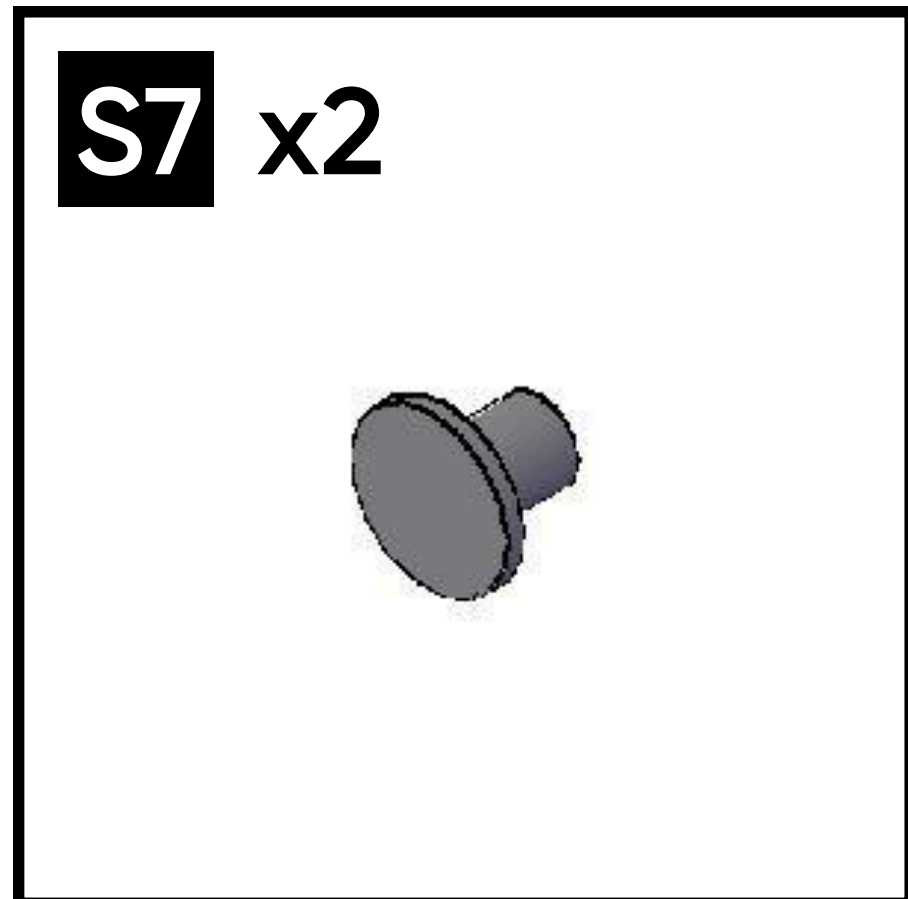


STEP - 9

Z9 x2

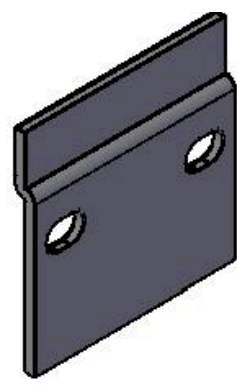

Mounting the Z9 component to the wall

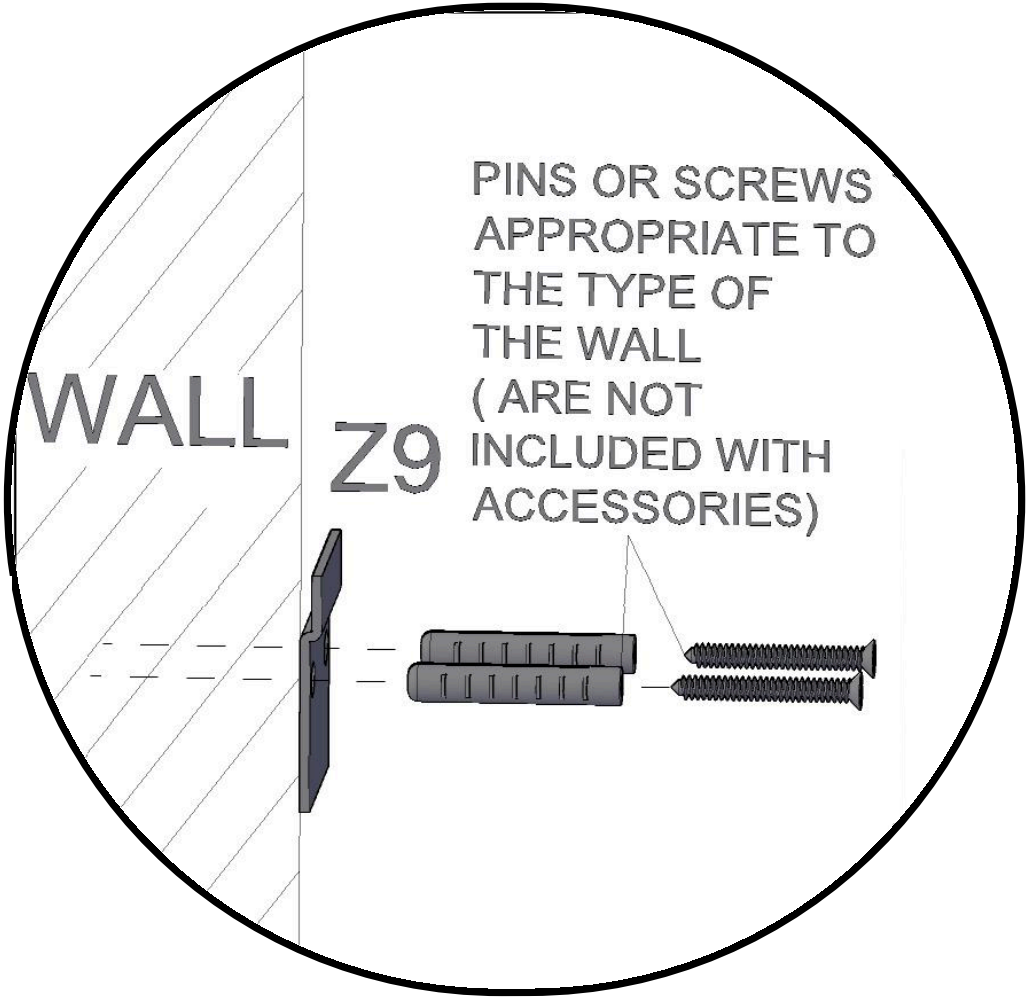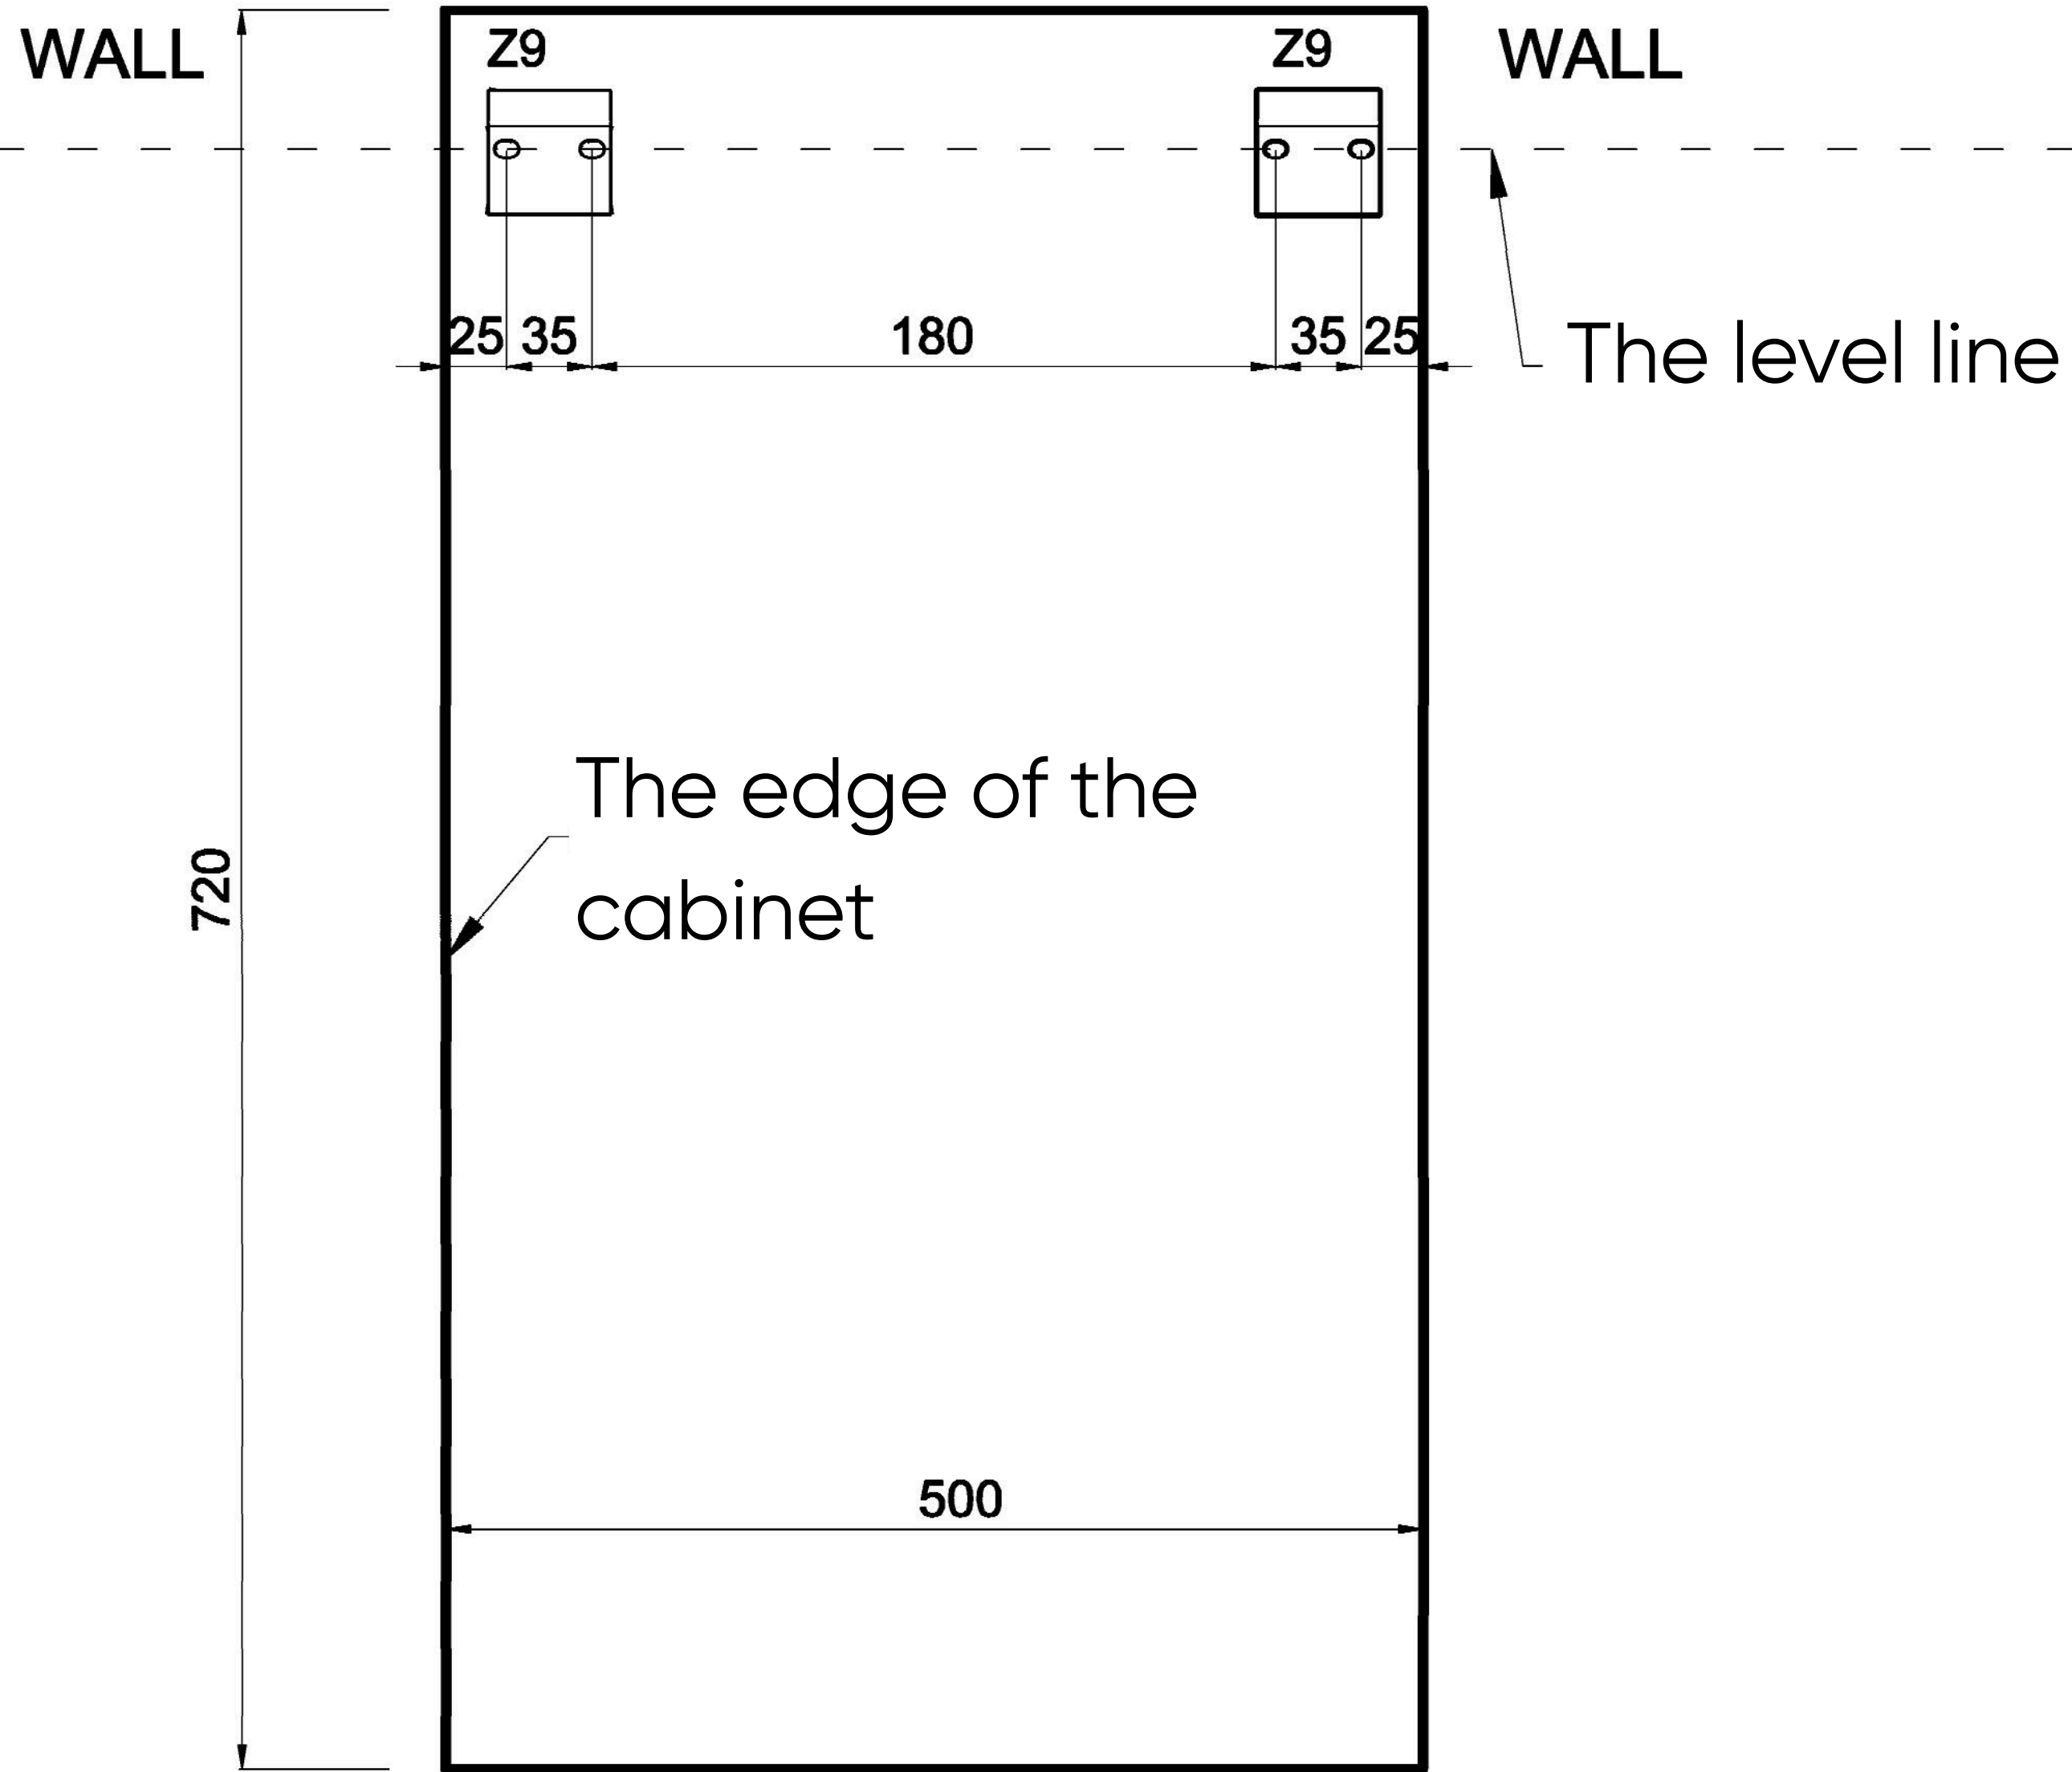

STEP - 10

STEP - 11

