



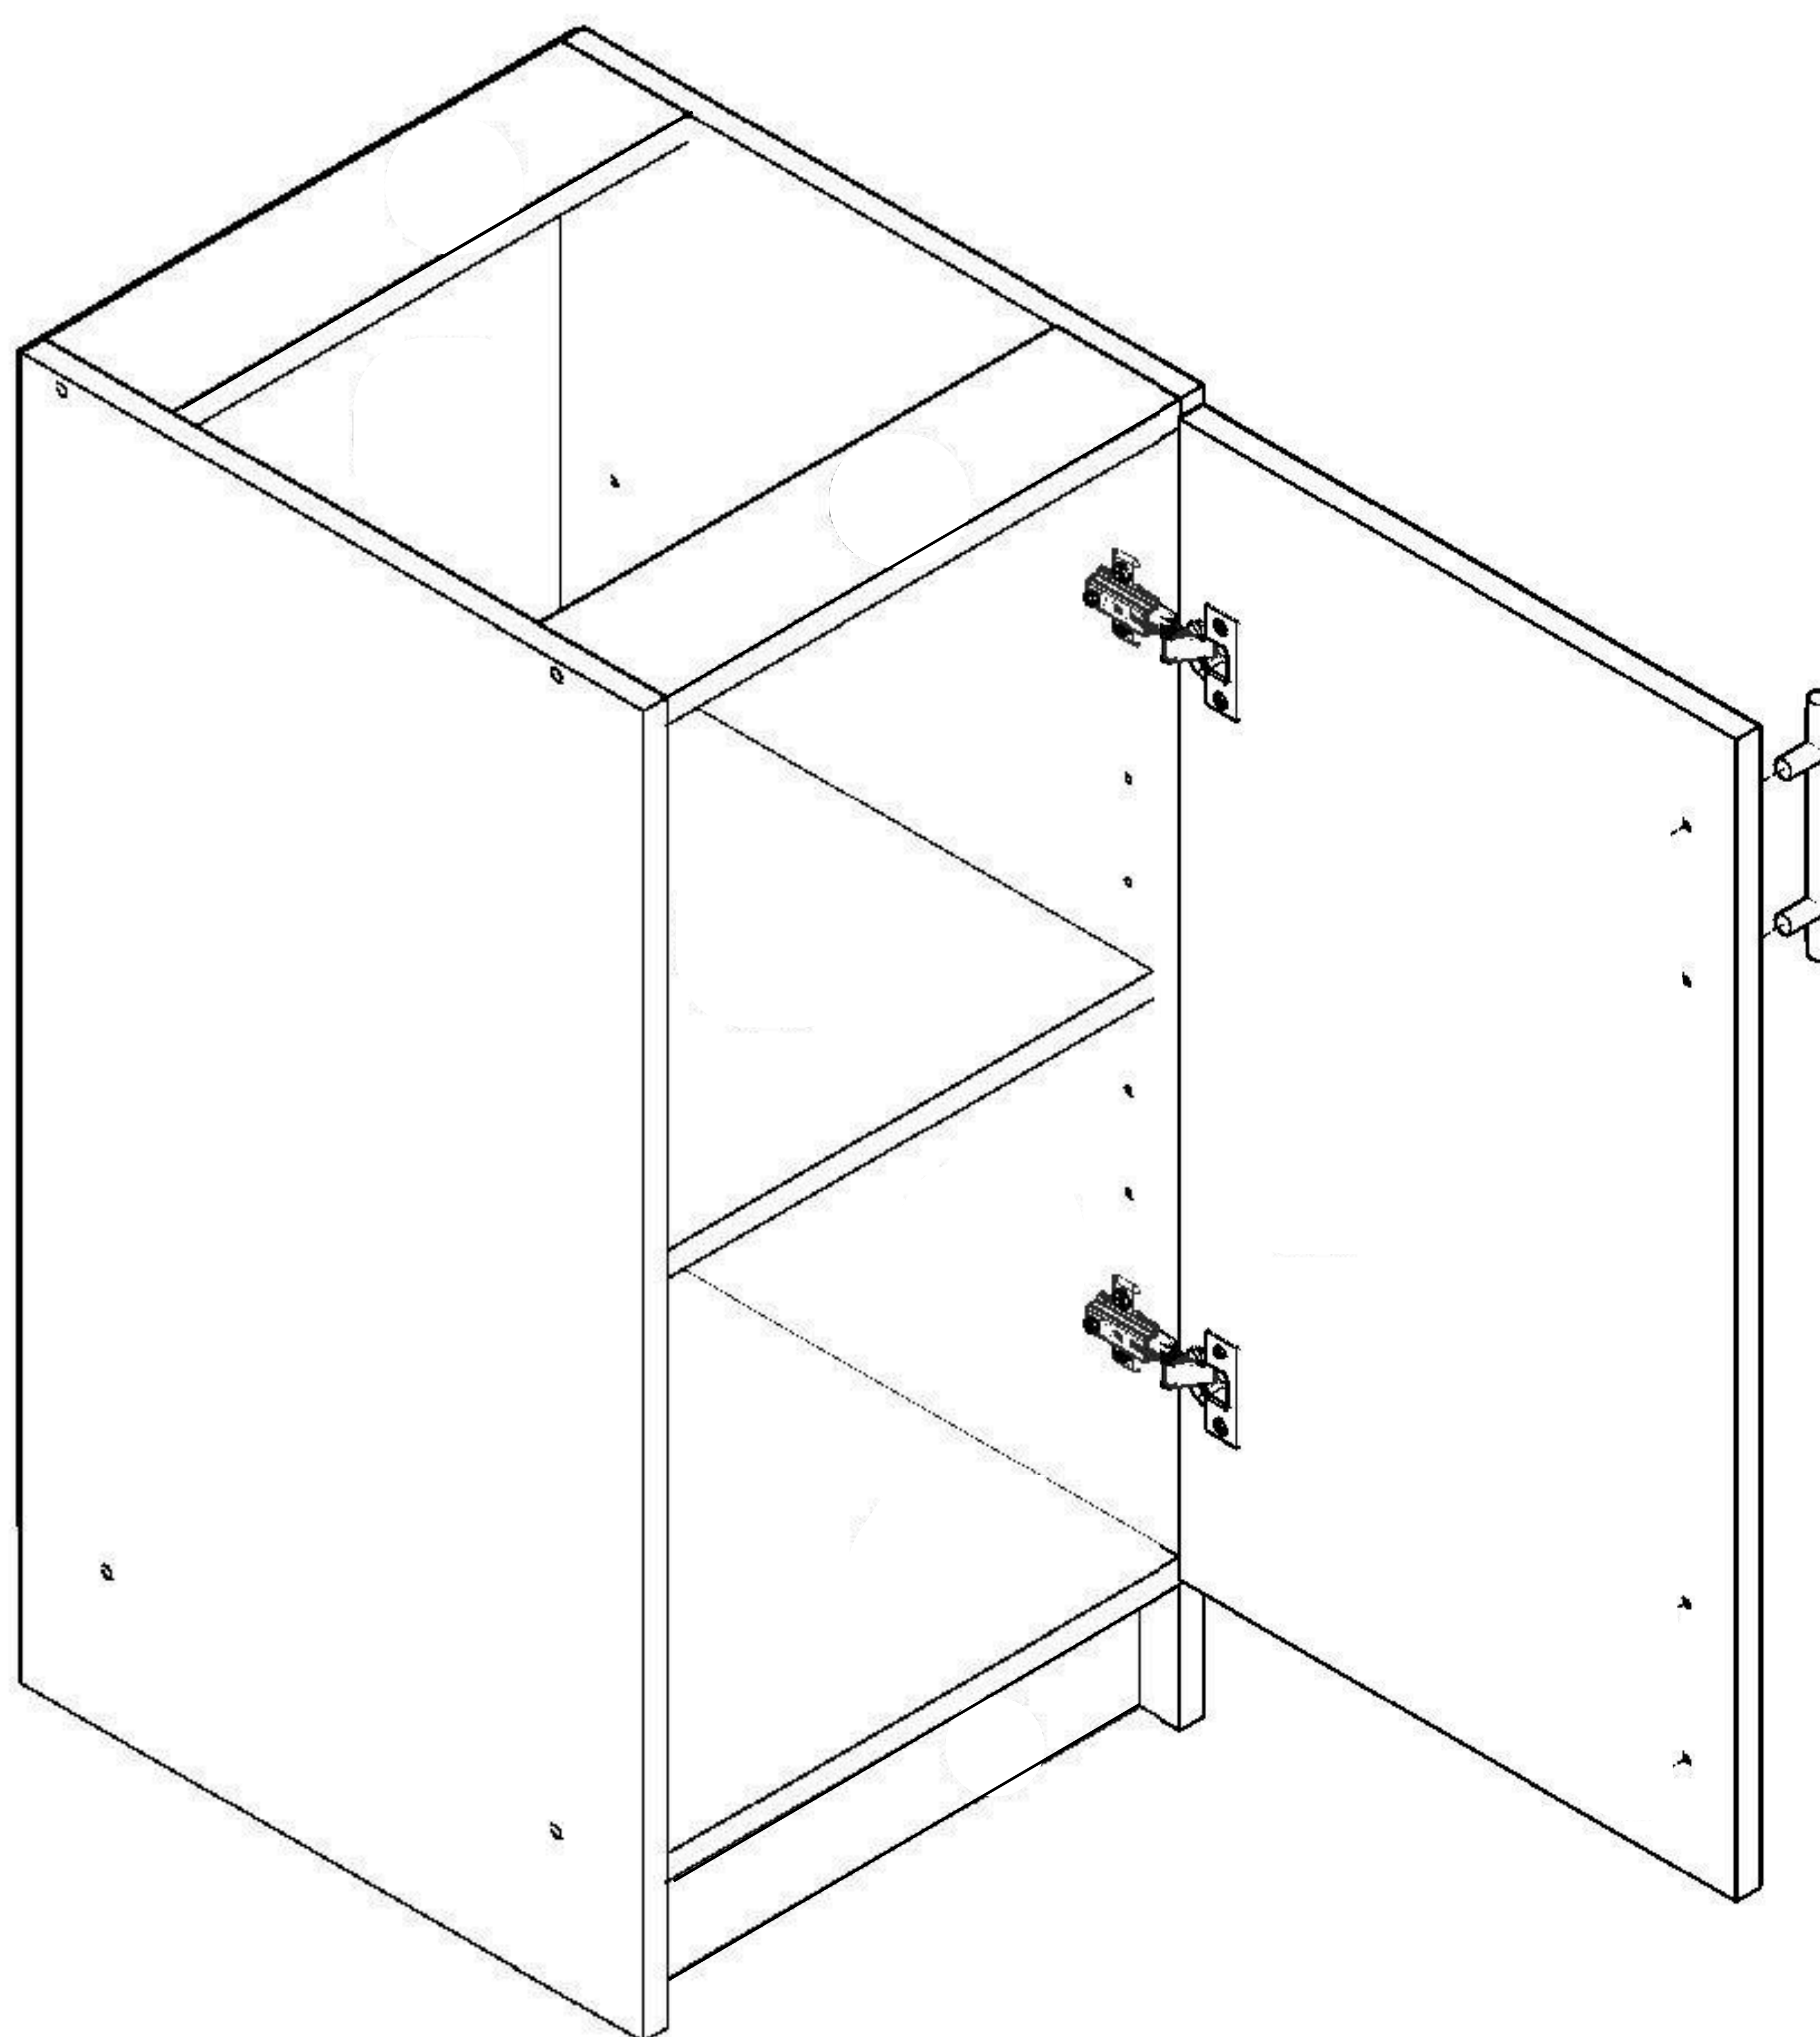


ASSEMBLY INSTRUCTIONS

KITCHEN BASE UNIT 300MM


MODEL B300

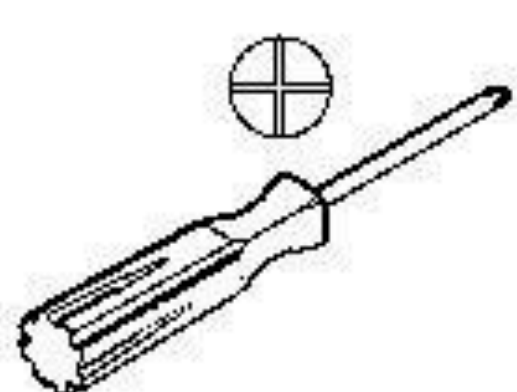


Cross-head
screwdriver

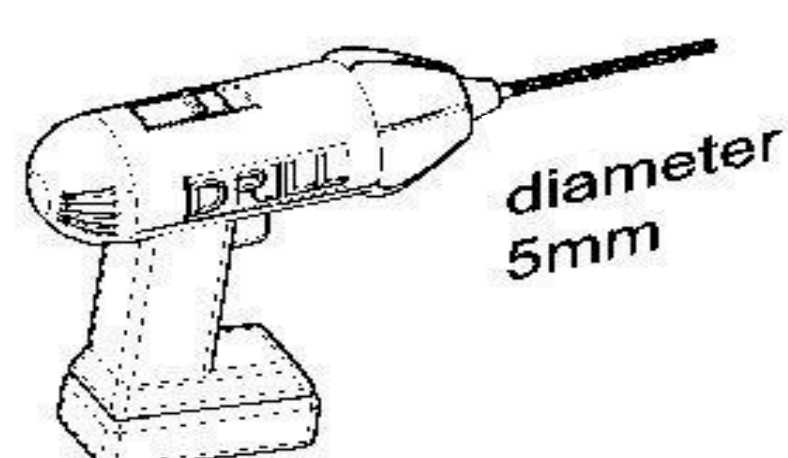

Electric
drill

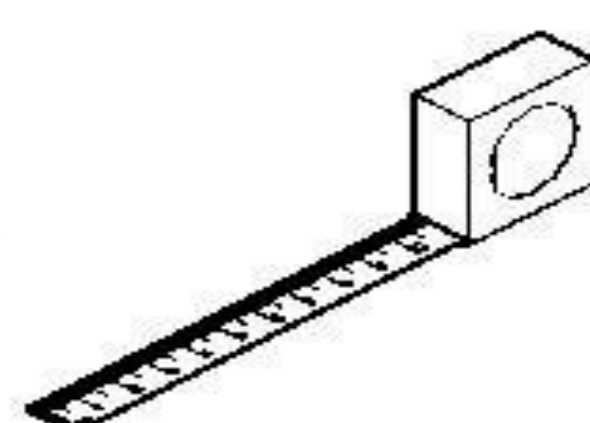

Rule

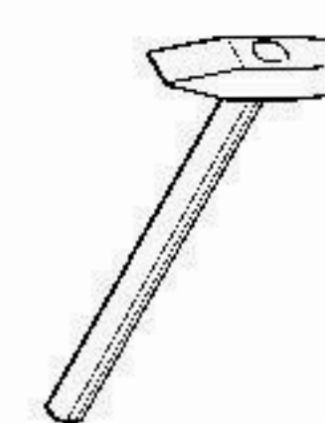

Hammer










**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346







COMPONENTS - PANELS

Please check you have all the panels listed below

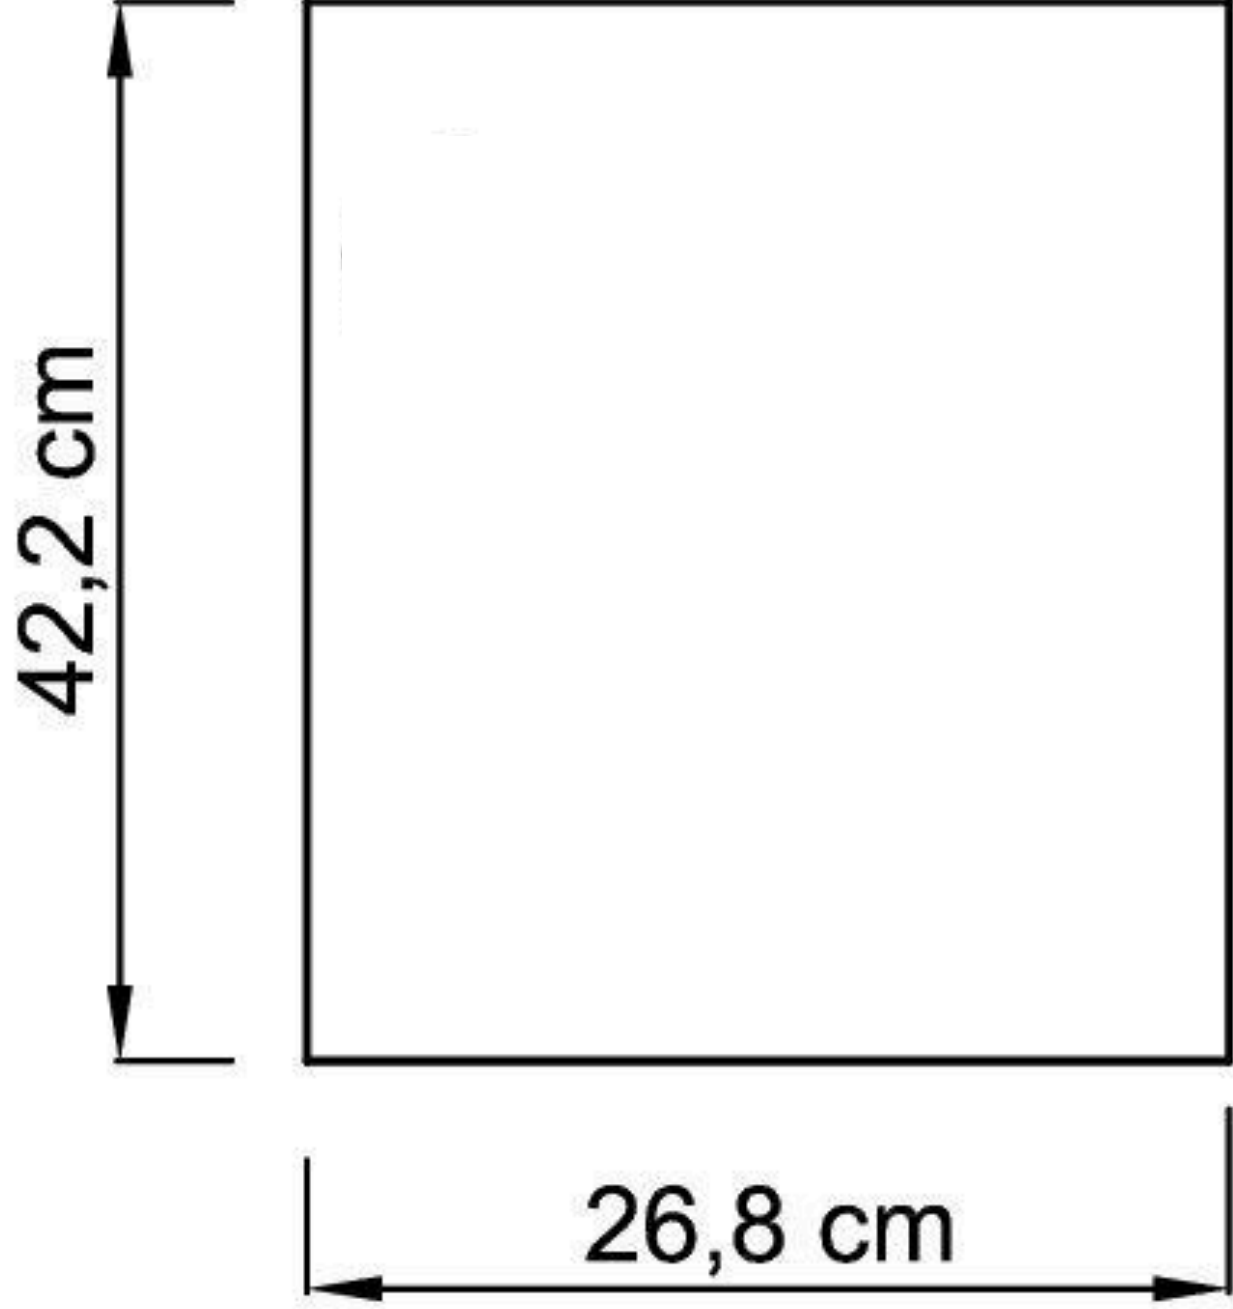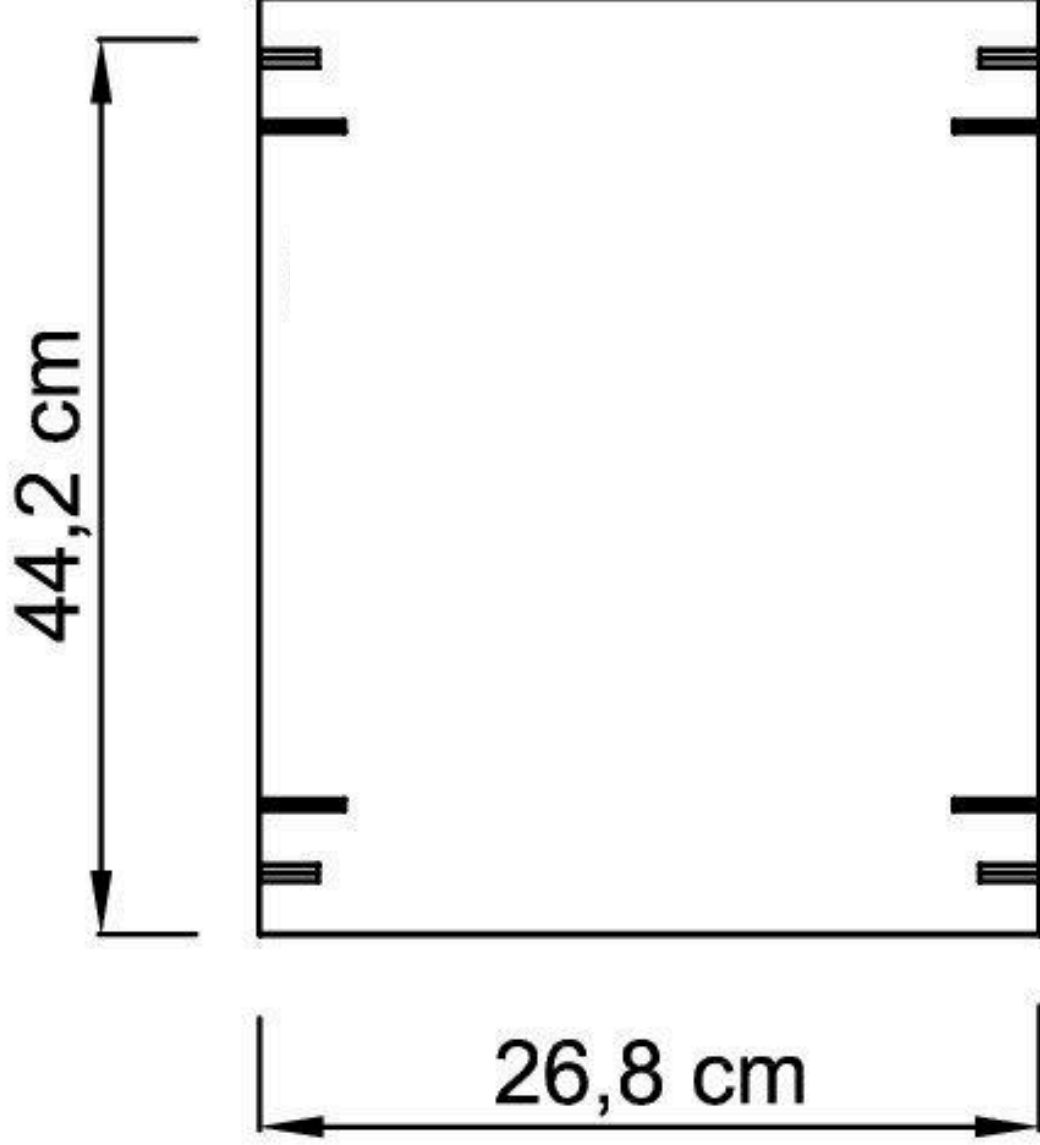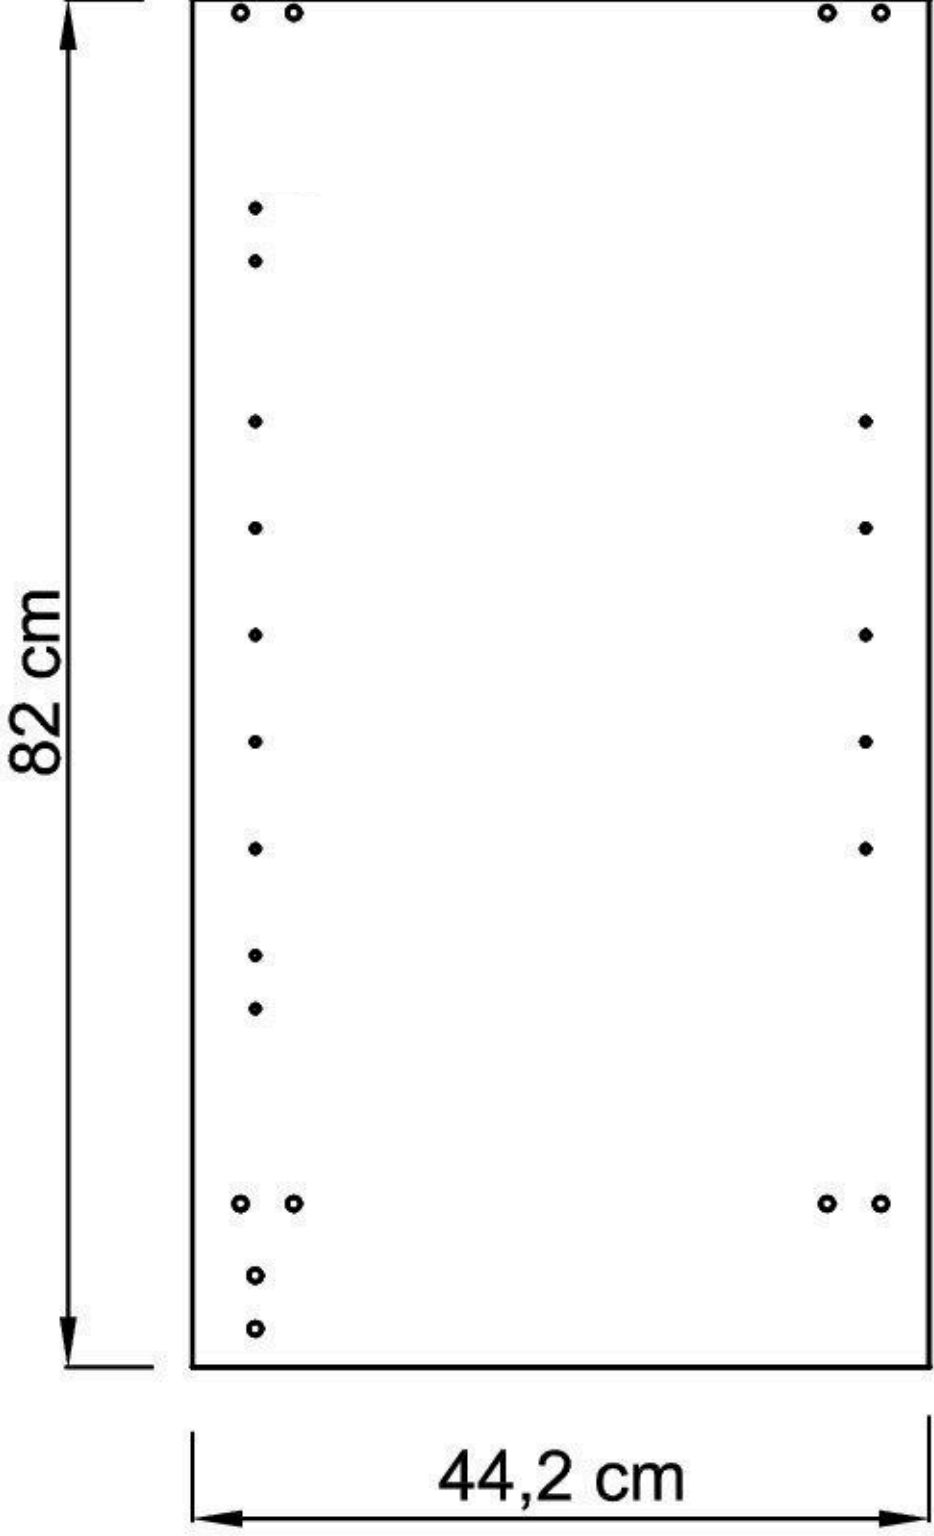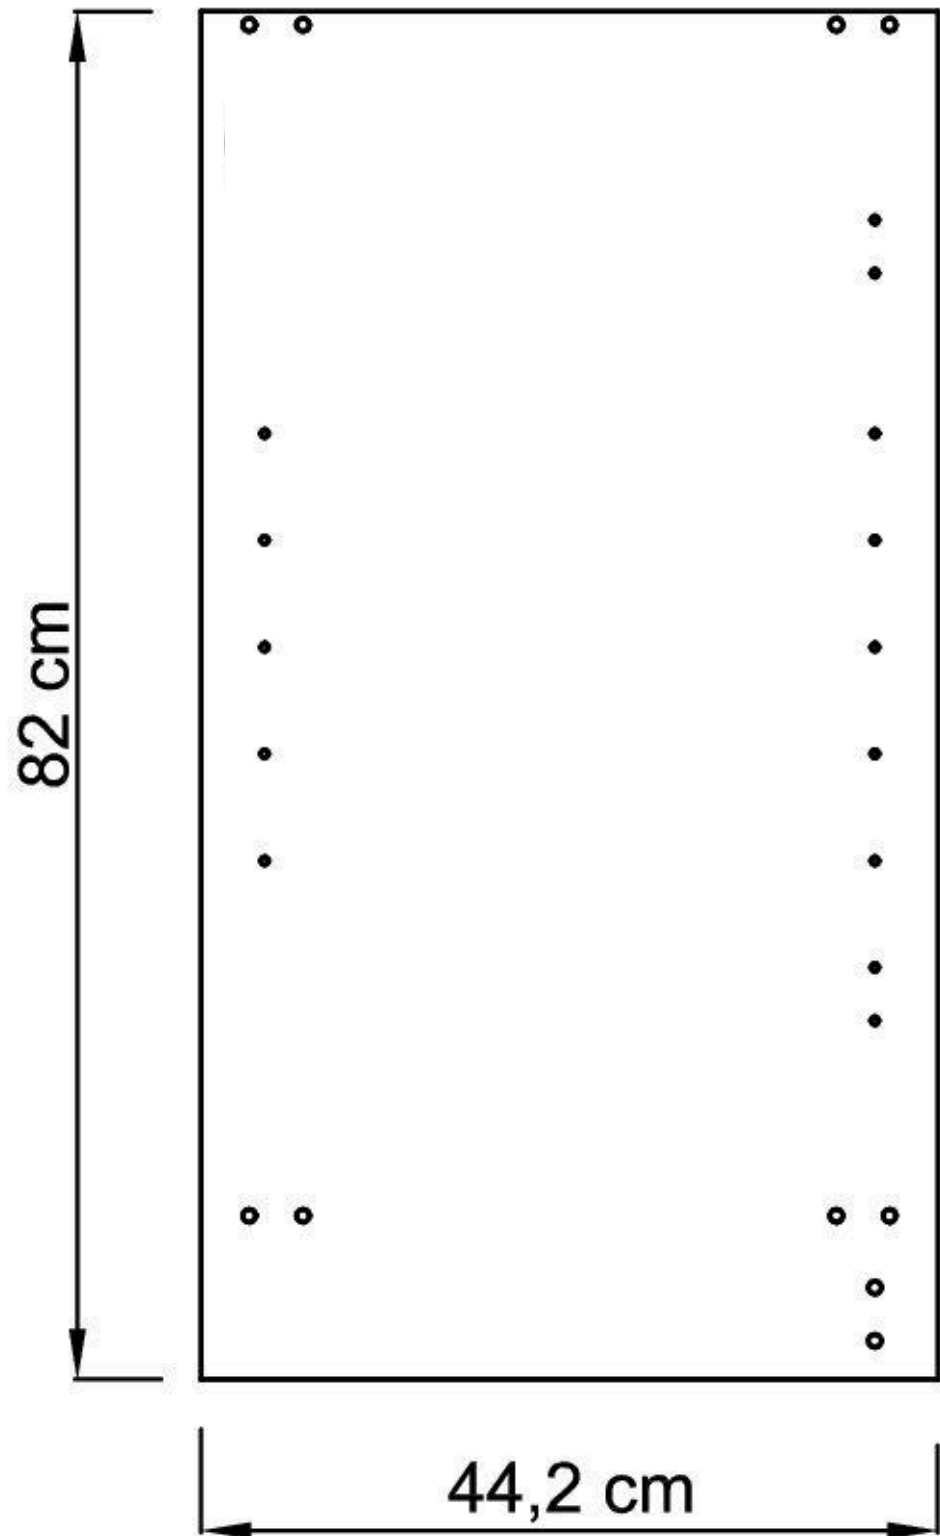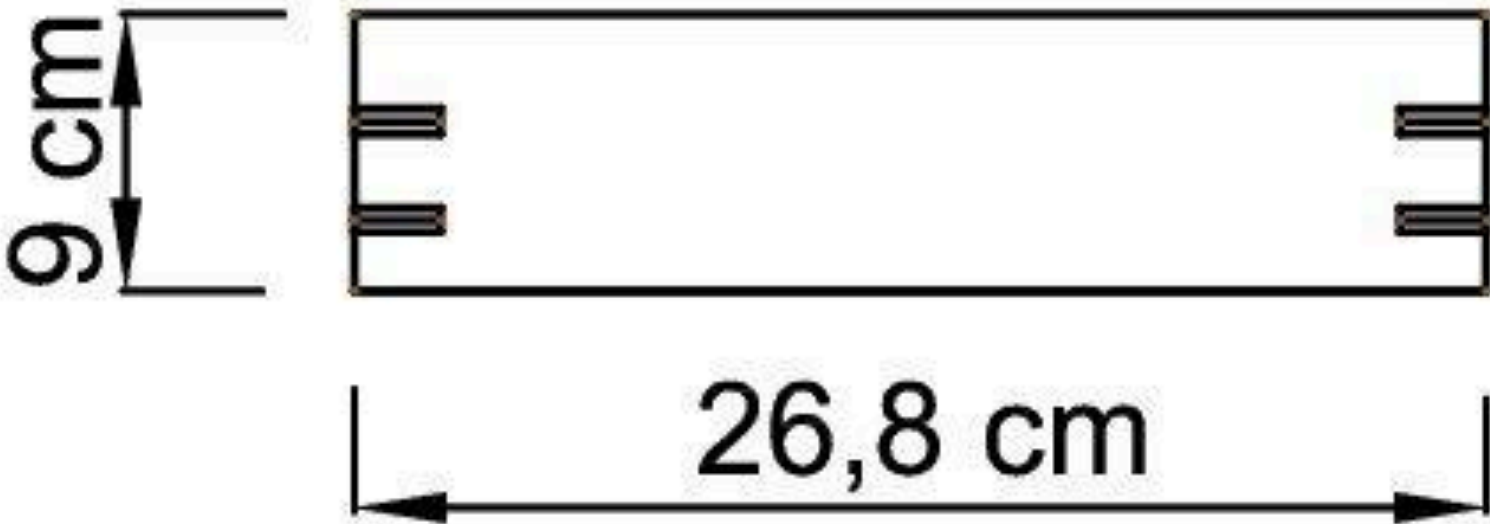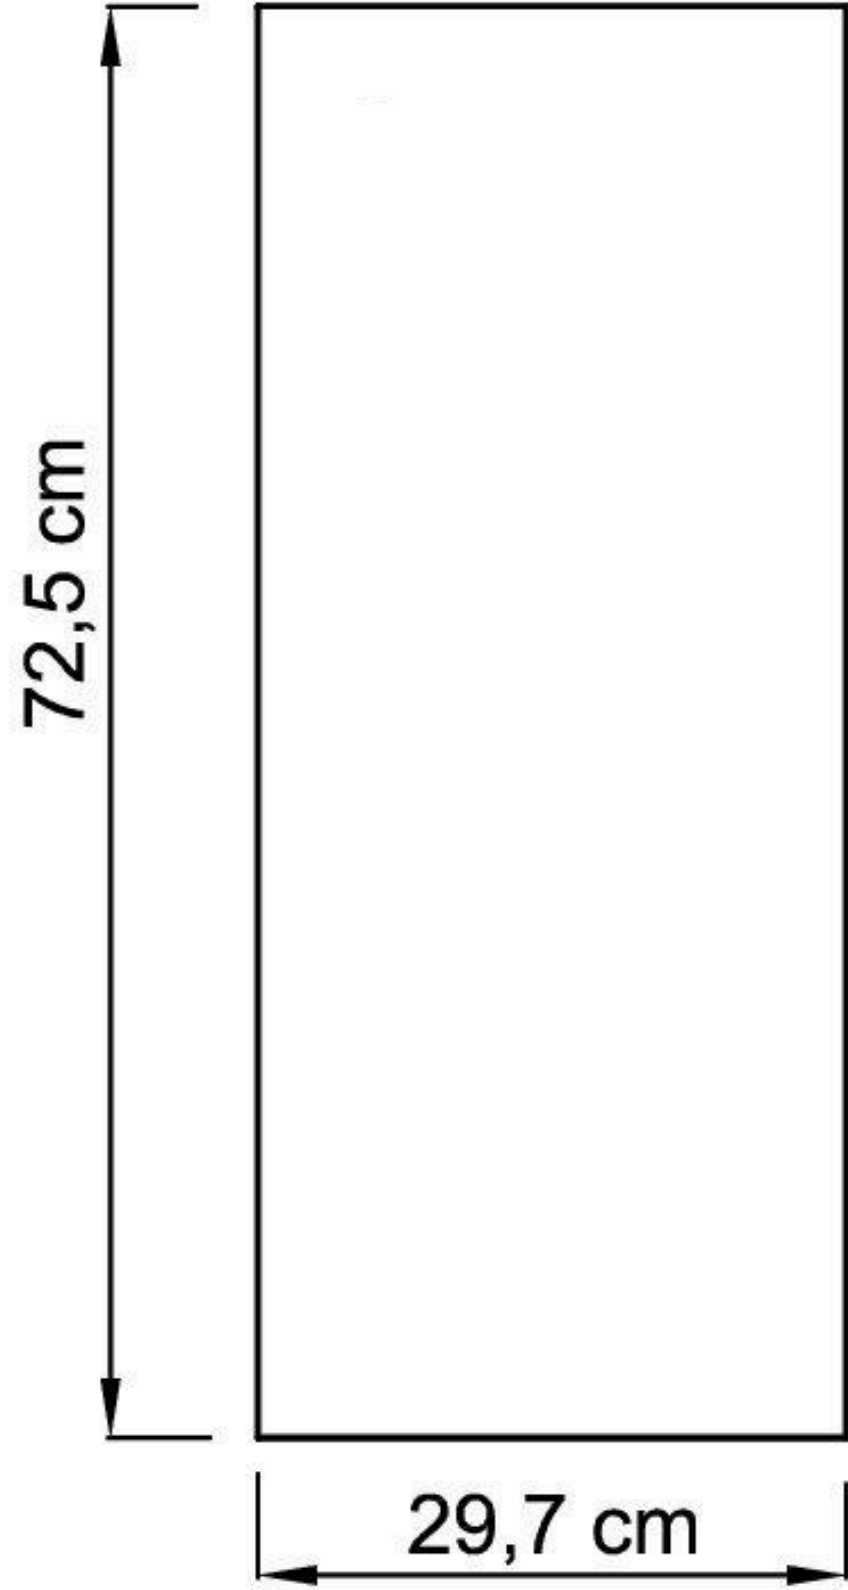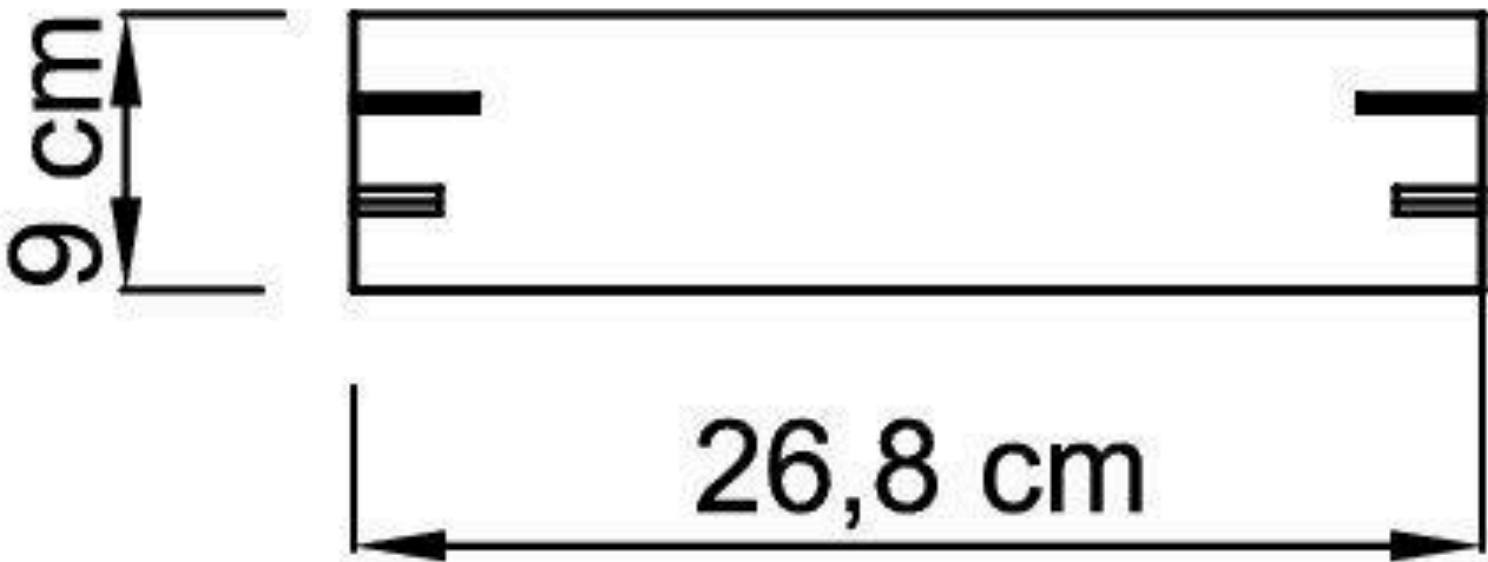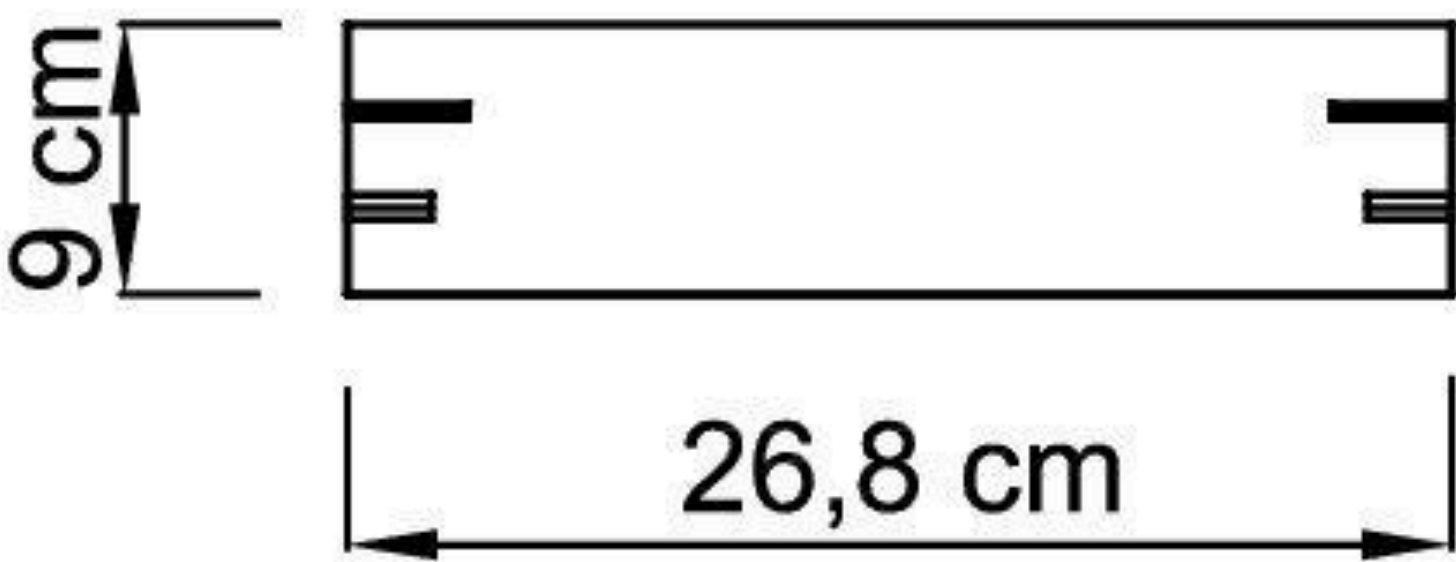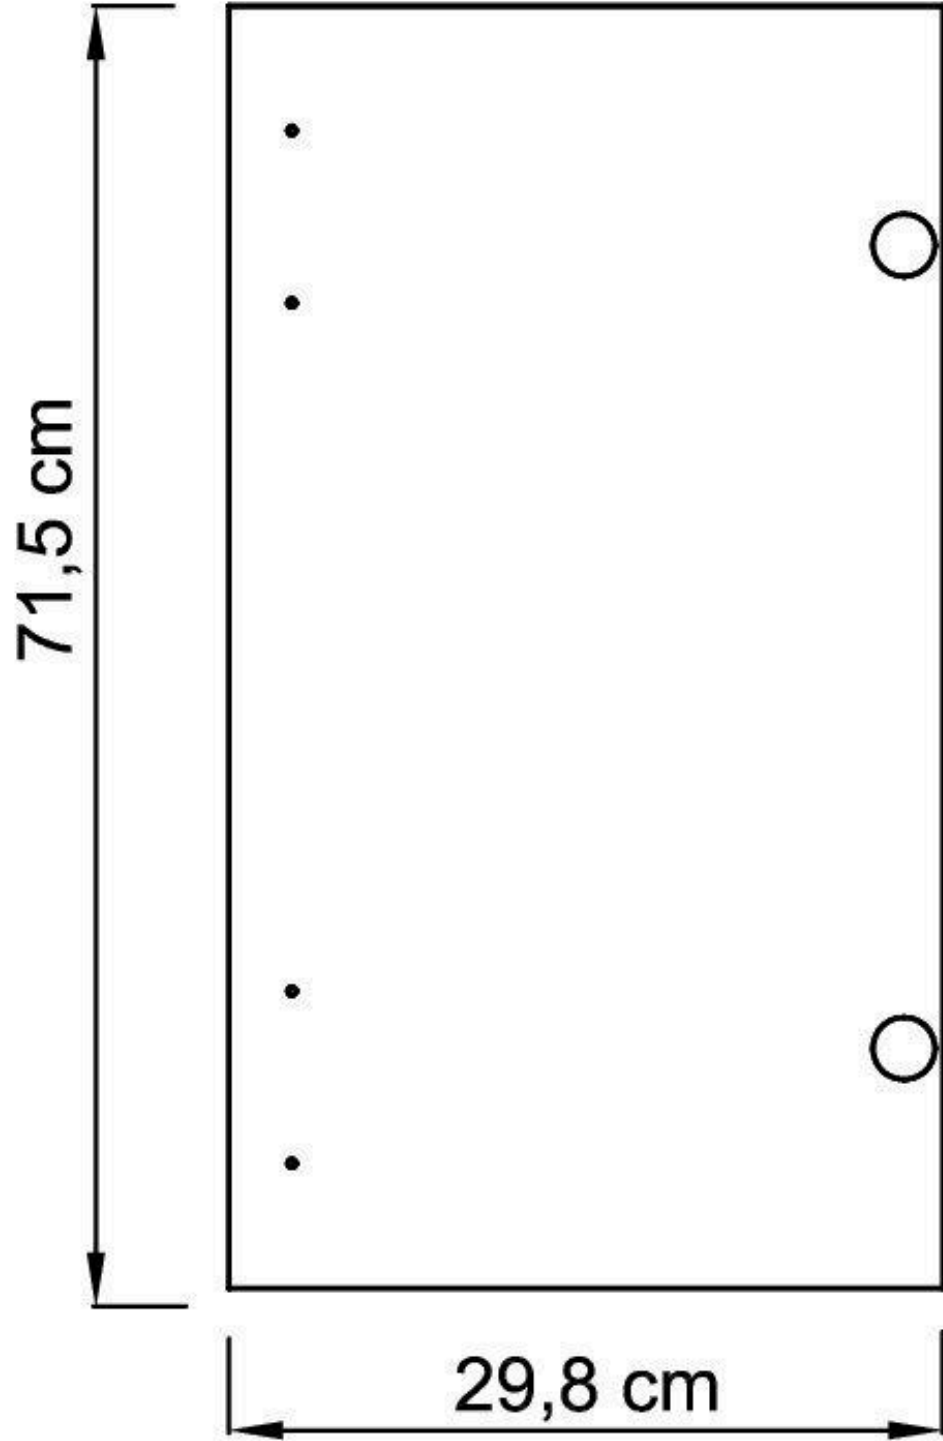
<div><div>1</div><div>x1</div><div></div></div>	<div><div>2</div><div>x1</div><div></div></div>	<div><div>3</div><div>x1</div><div></div></div>
<div><div>4</div><div>x1</div><div></div></div>	<div><div>5</div><div>x1</div><div></div></div>	<div><div>6</div><div>x1</div><div></div></div>
<div><div>7</div><div>x1</div><div></div></div>	<div><div>8</div><div>x1</div><div></div></div>	<div><div>9</div><div>x1 Front (separate package)</div><div></div></div>

COMPONENTS - FITTINGS

Please check you have all the fittings listed below
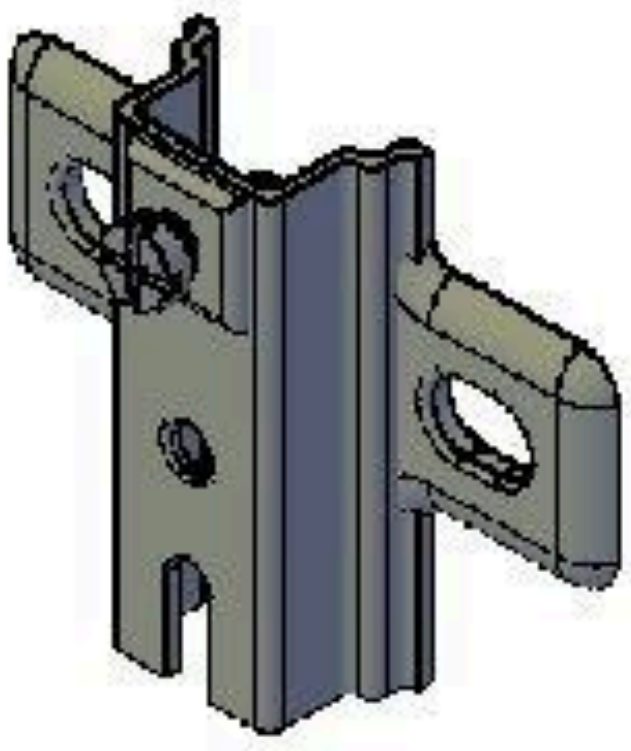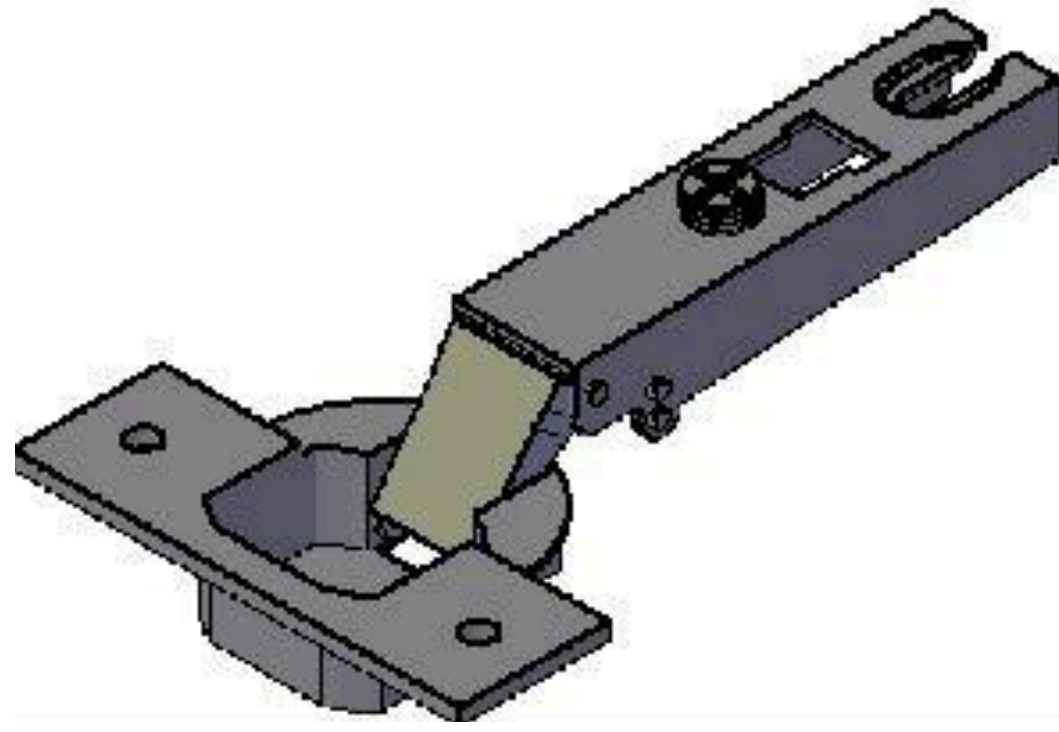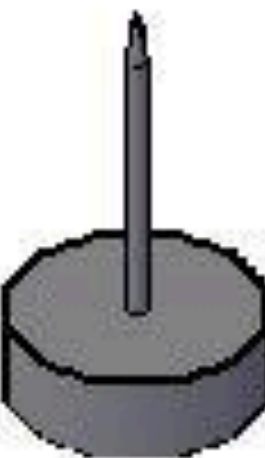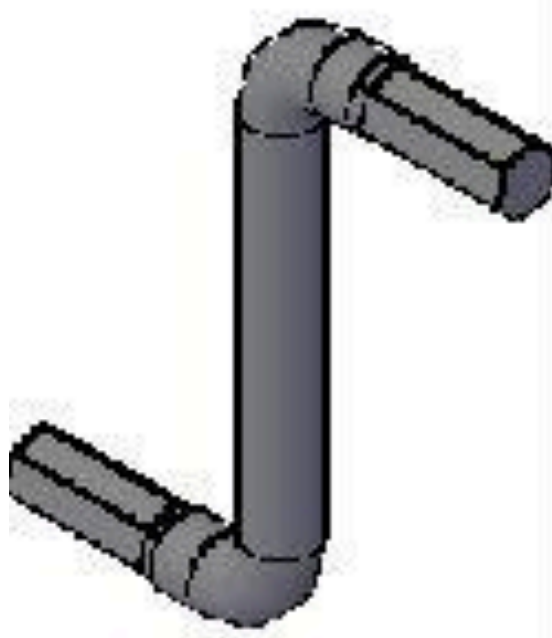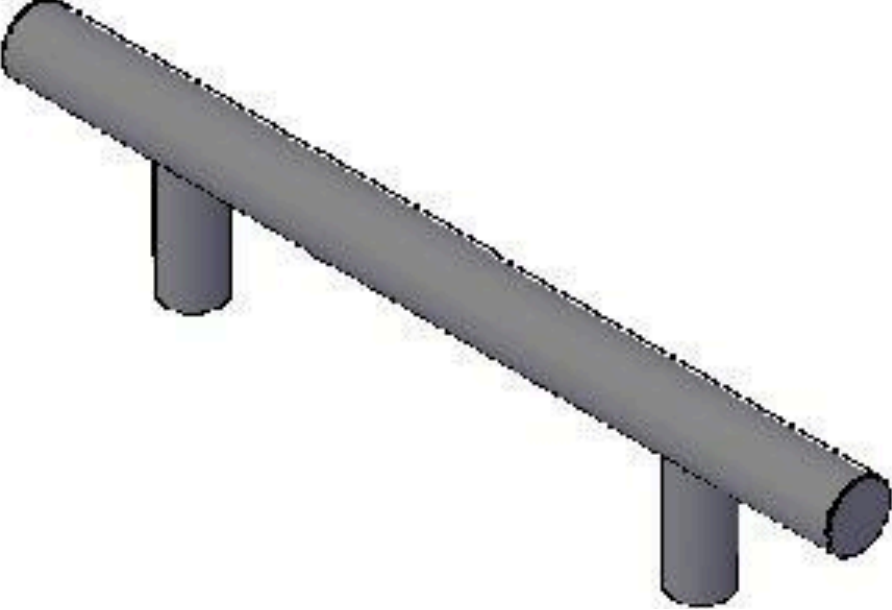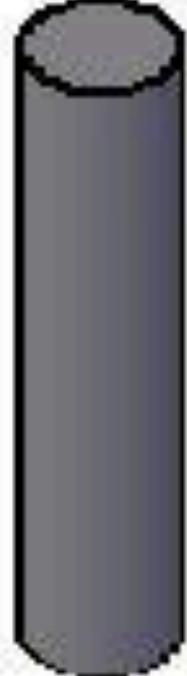
<div><div>O</div>x4</div> <div></div> <div>⌀ 7x16</div>	<div><div>F</div>x2</div> <div></div>	<div><div>G2</div>x2</div> <div></div>	<div><div>!</div></div> <div>PAY ATTENTION: O AND F ATTACHED TO G2</div>
<div><div>E</div>x4</div> <div></div>	<div><div>D8</div>x4</div> <div></div>	<div><div>Q7</div>x1</div> <div></div>	<div><div>C</div>x8</div> <div></div> <div>⌀ 7x50</div>
<div><div>S1</div>x8</div> <div></div>	<div><div>S7</div>x2</div> <div></div>	<div><div>J9</div>x2</div> <div></div> <div>⌀ 3x25</div>	<div><div>U7</div>x1</div> <div></div>
<div><div>H</div>x4 US 031.03</div> <div></div> <div>⌀ 3.5x13</div>	<div><div>W</div>x30</div> <div></div>	<div><div>H5</div>x4</div> <div></div> <div>⌀ 3.5x25</div>	<div><div>A</div>x12</div> <div></div>

Ruler - Use this ruler to help correctly identify the screws

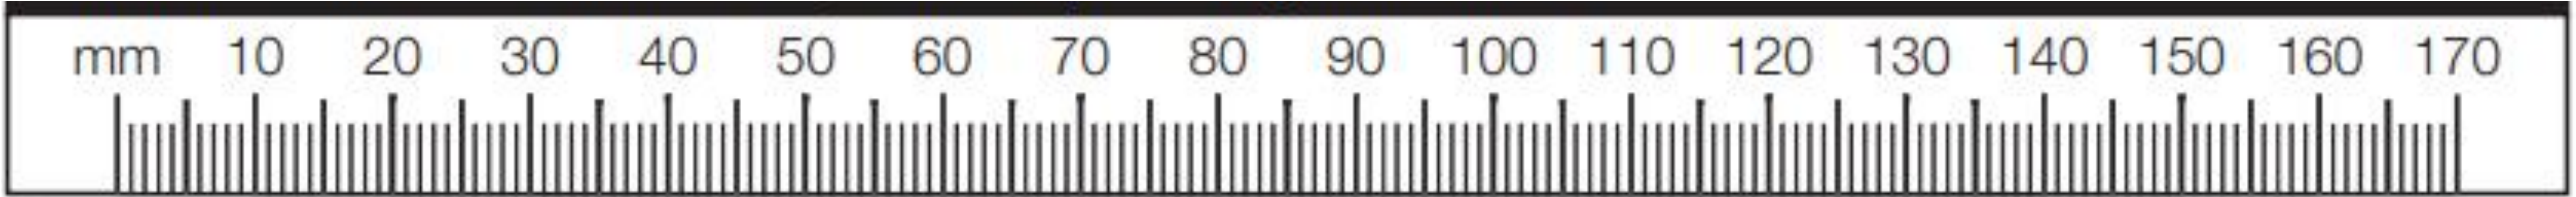

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x4


F x2

D8 x4

A x12

E x4

7x16

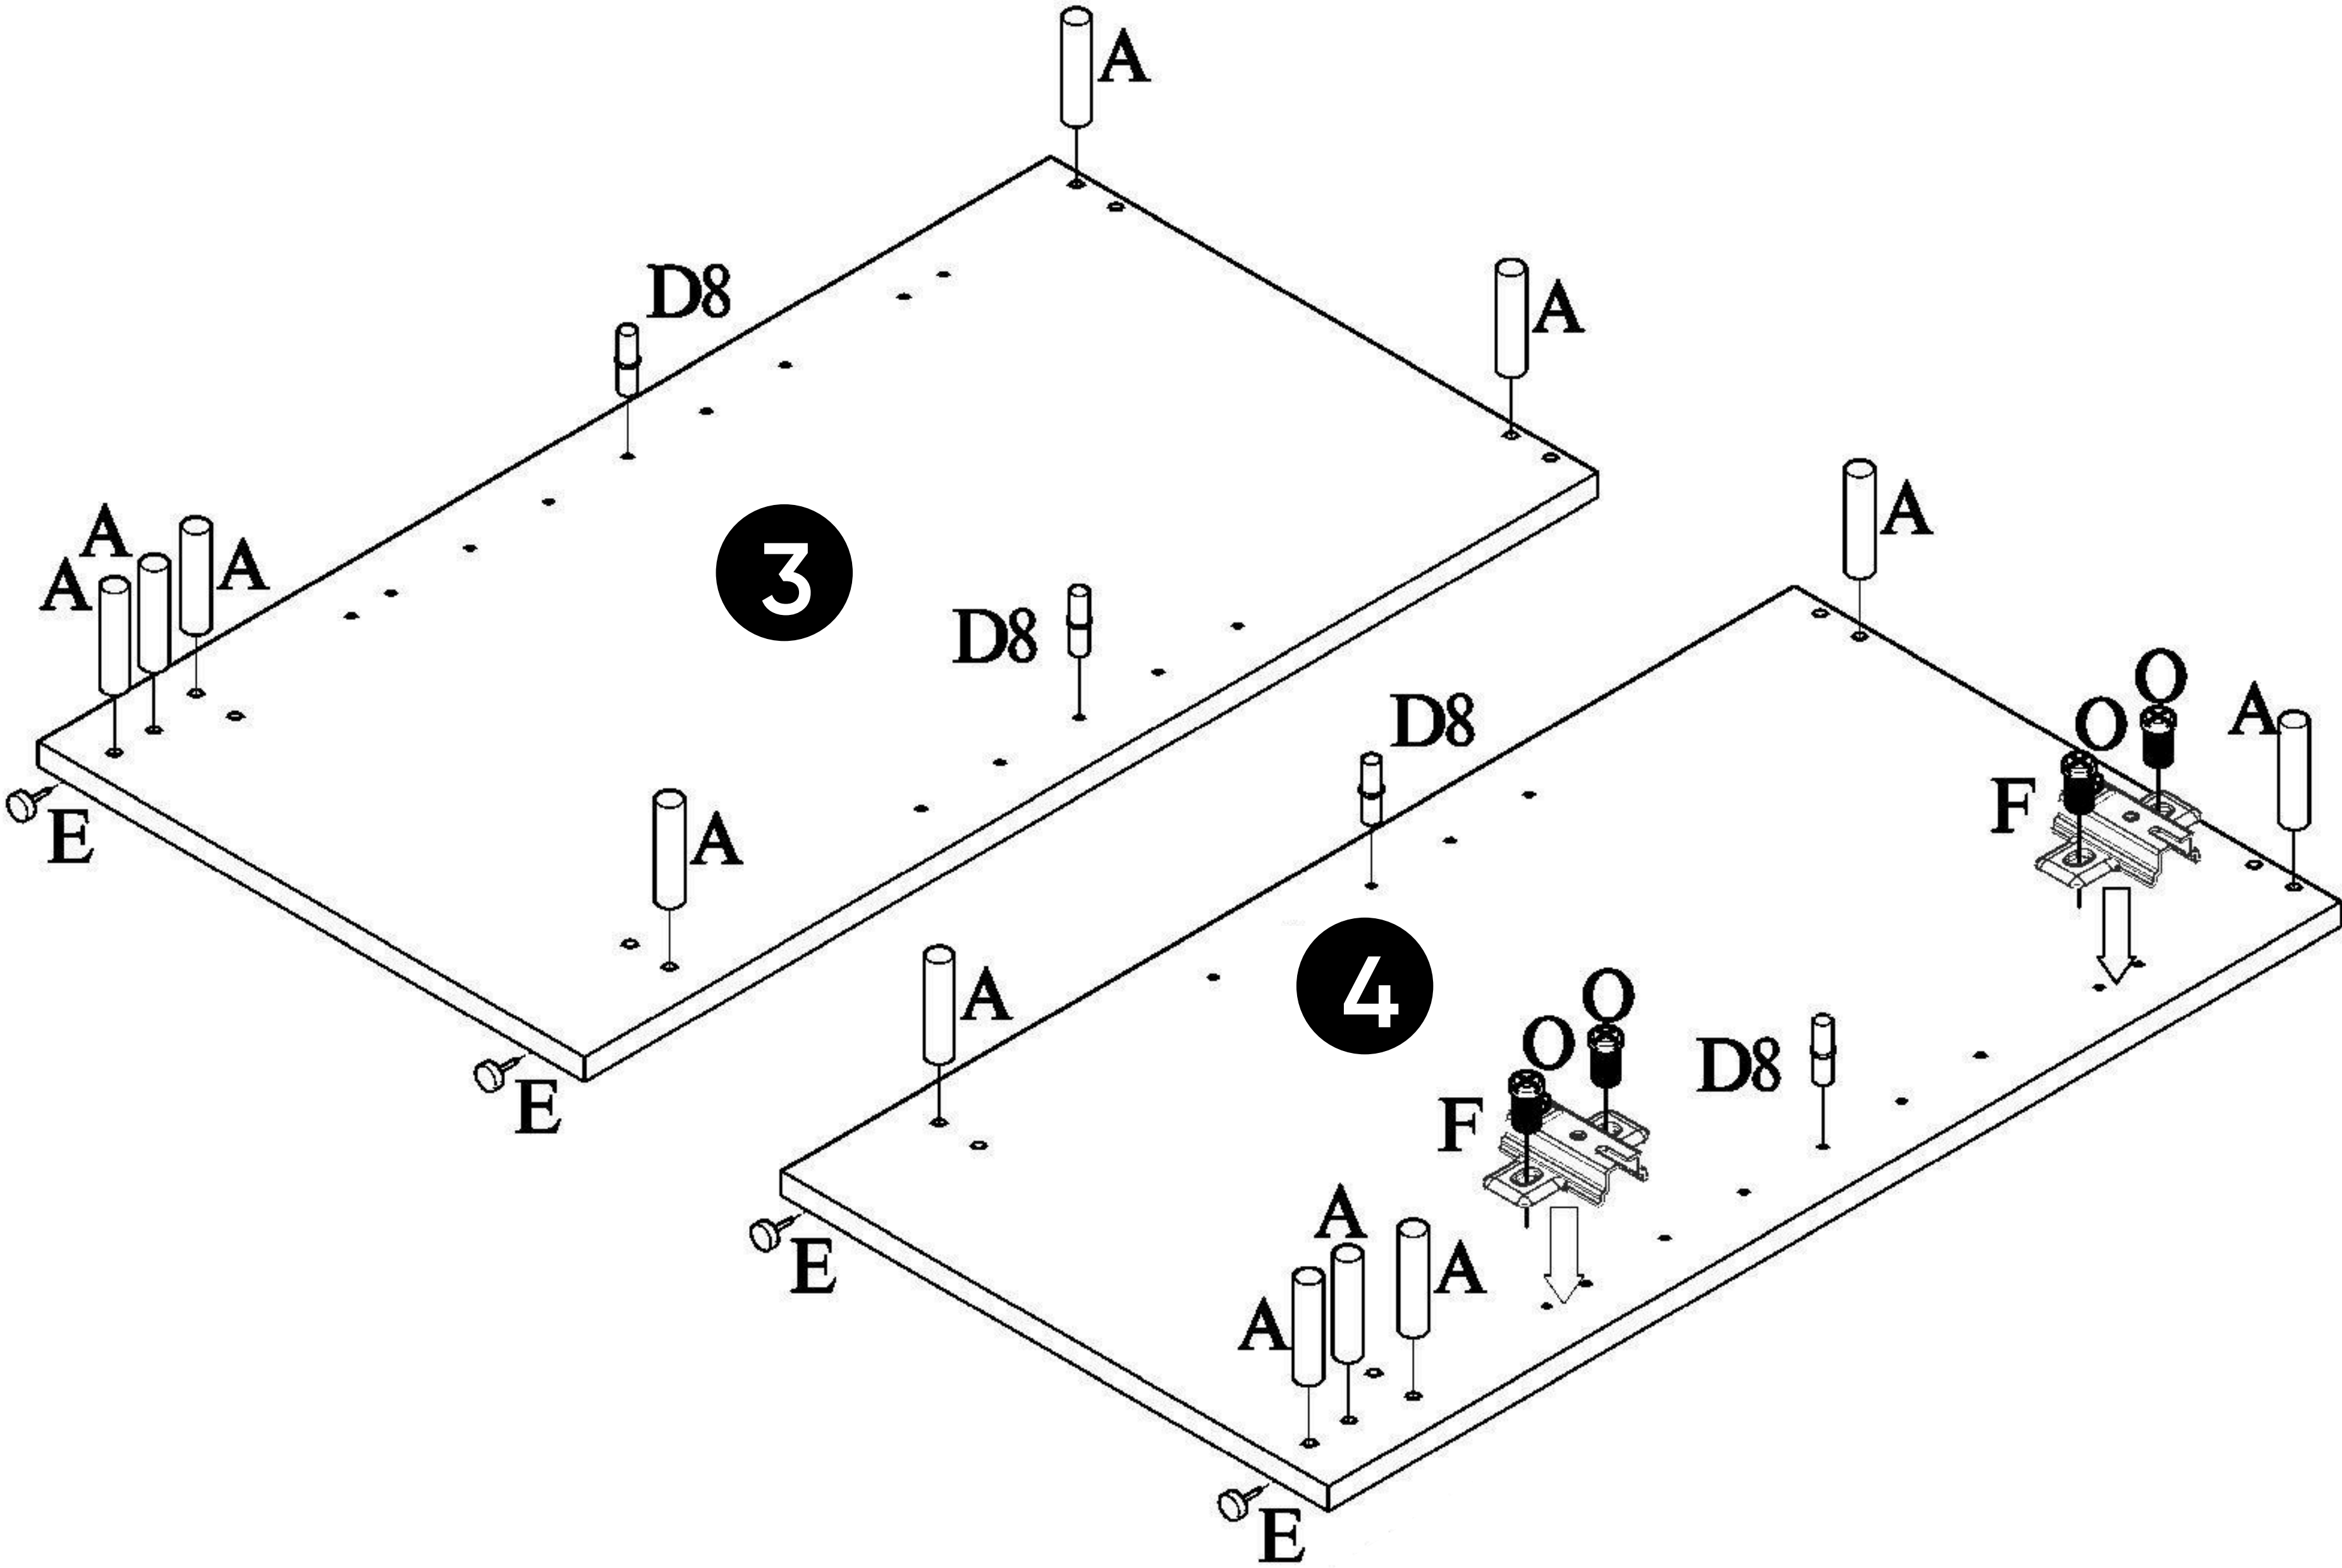


STEP - 2

Q7 x1



S1 x8

C x8


7x50

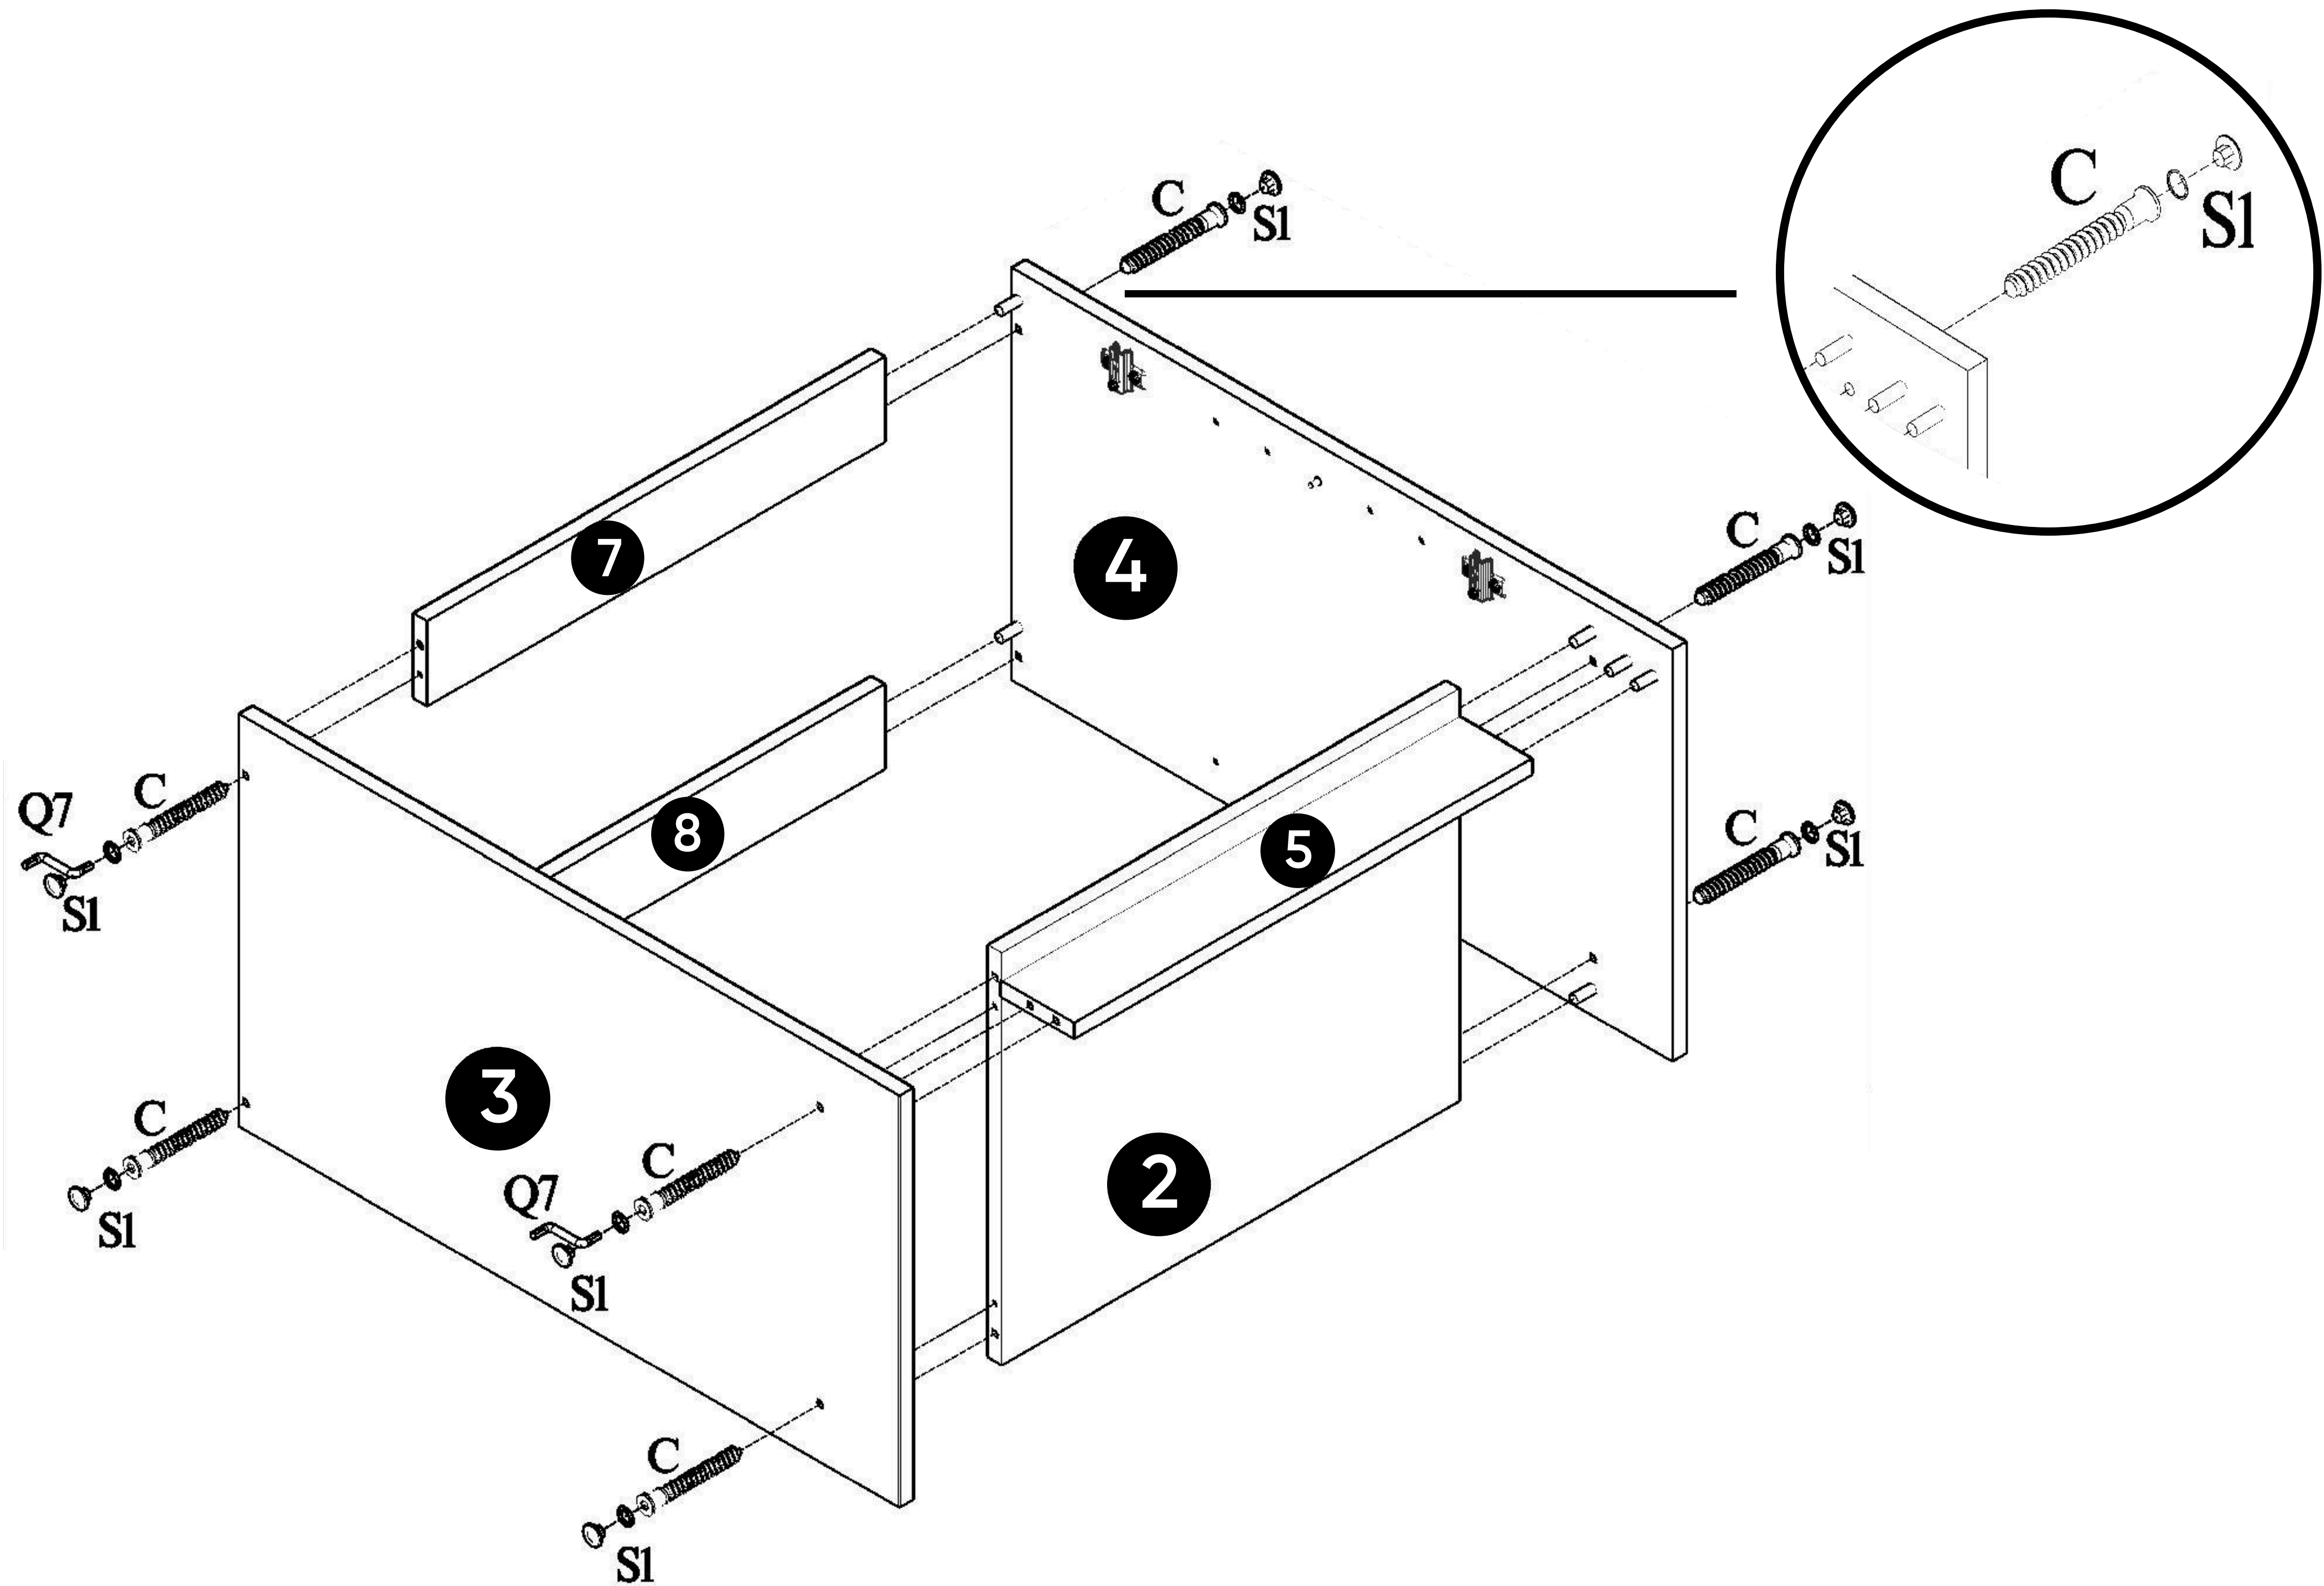



STEP - 3

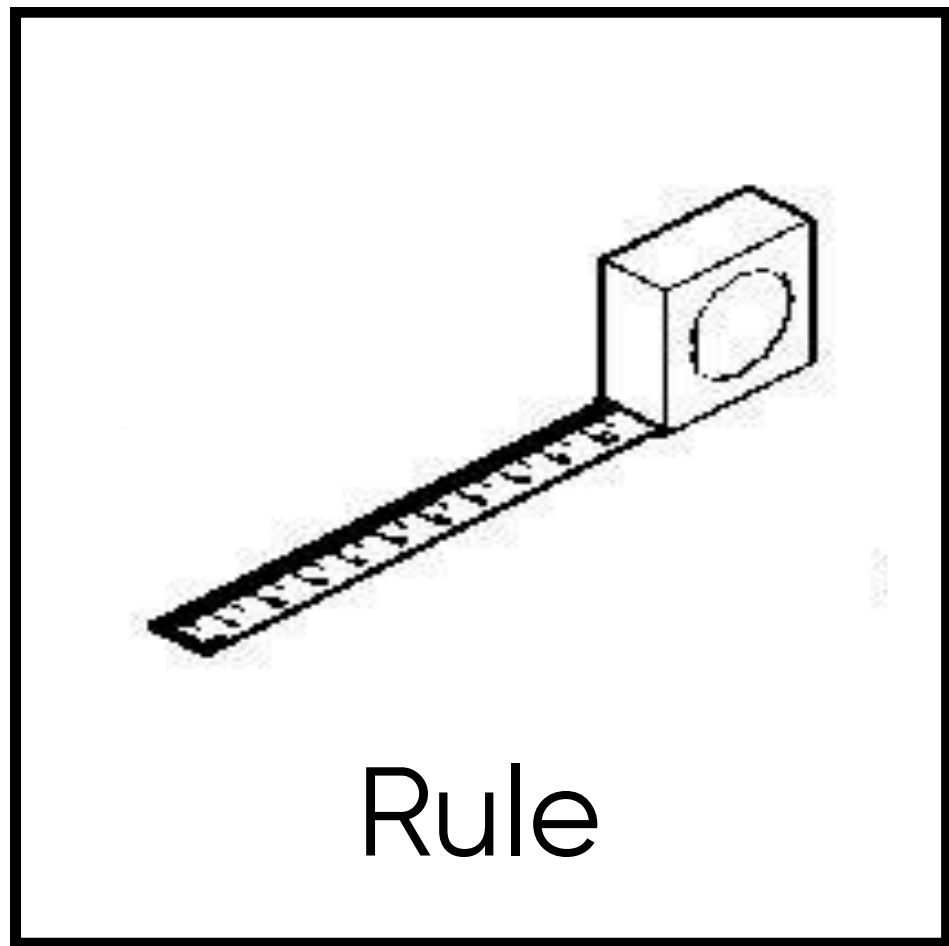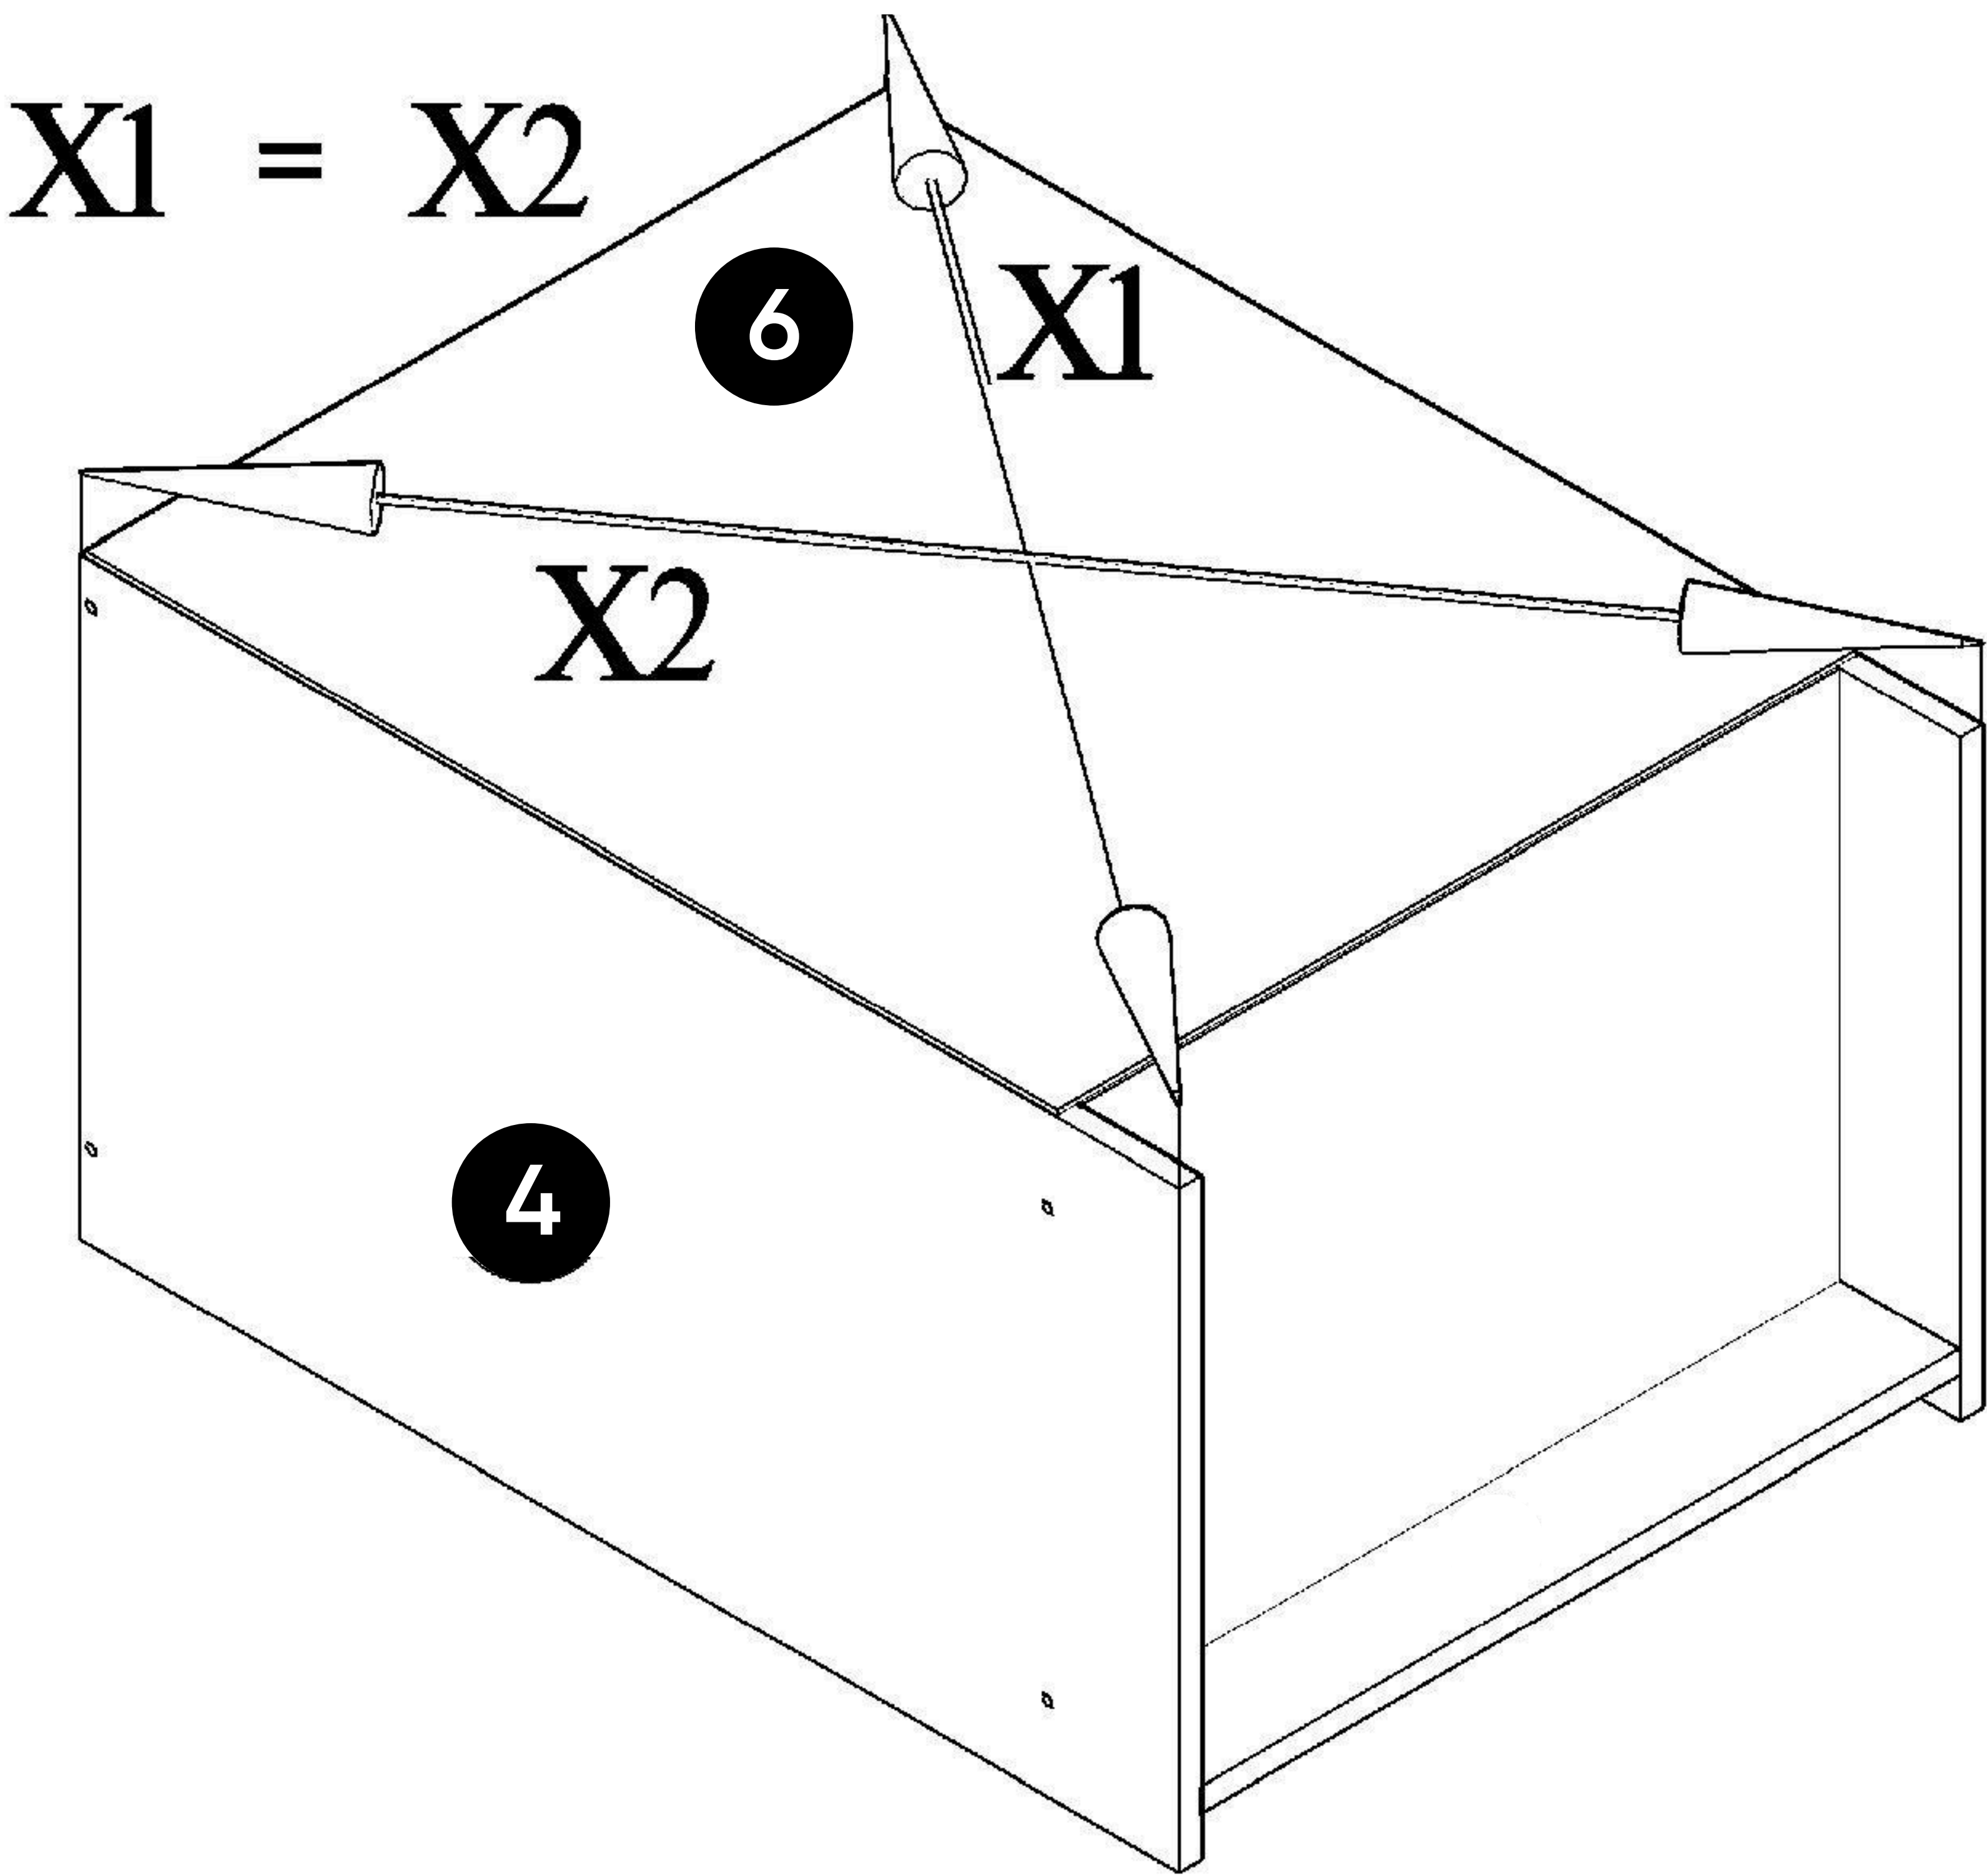



STEP - 4

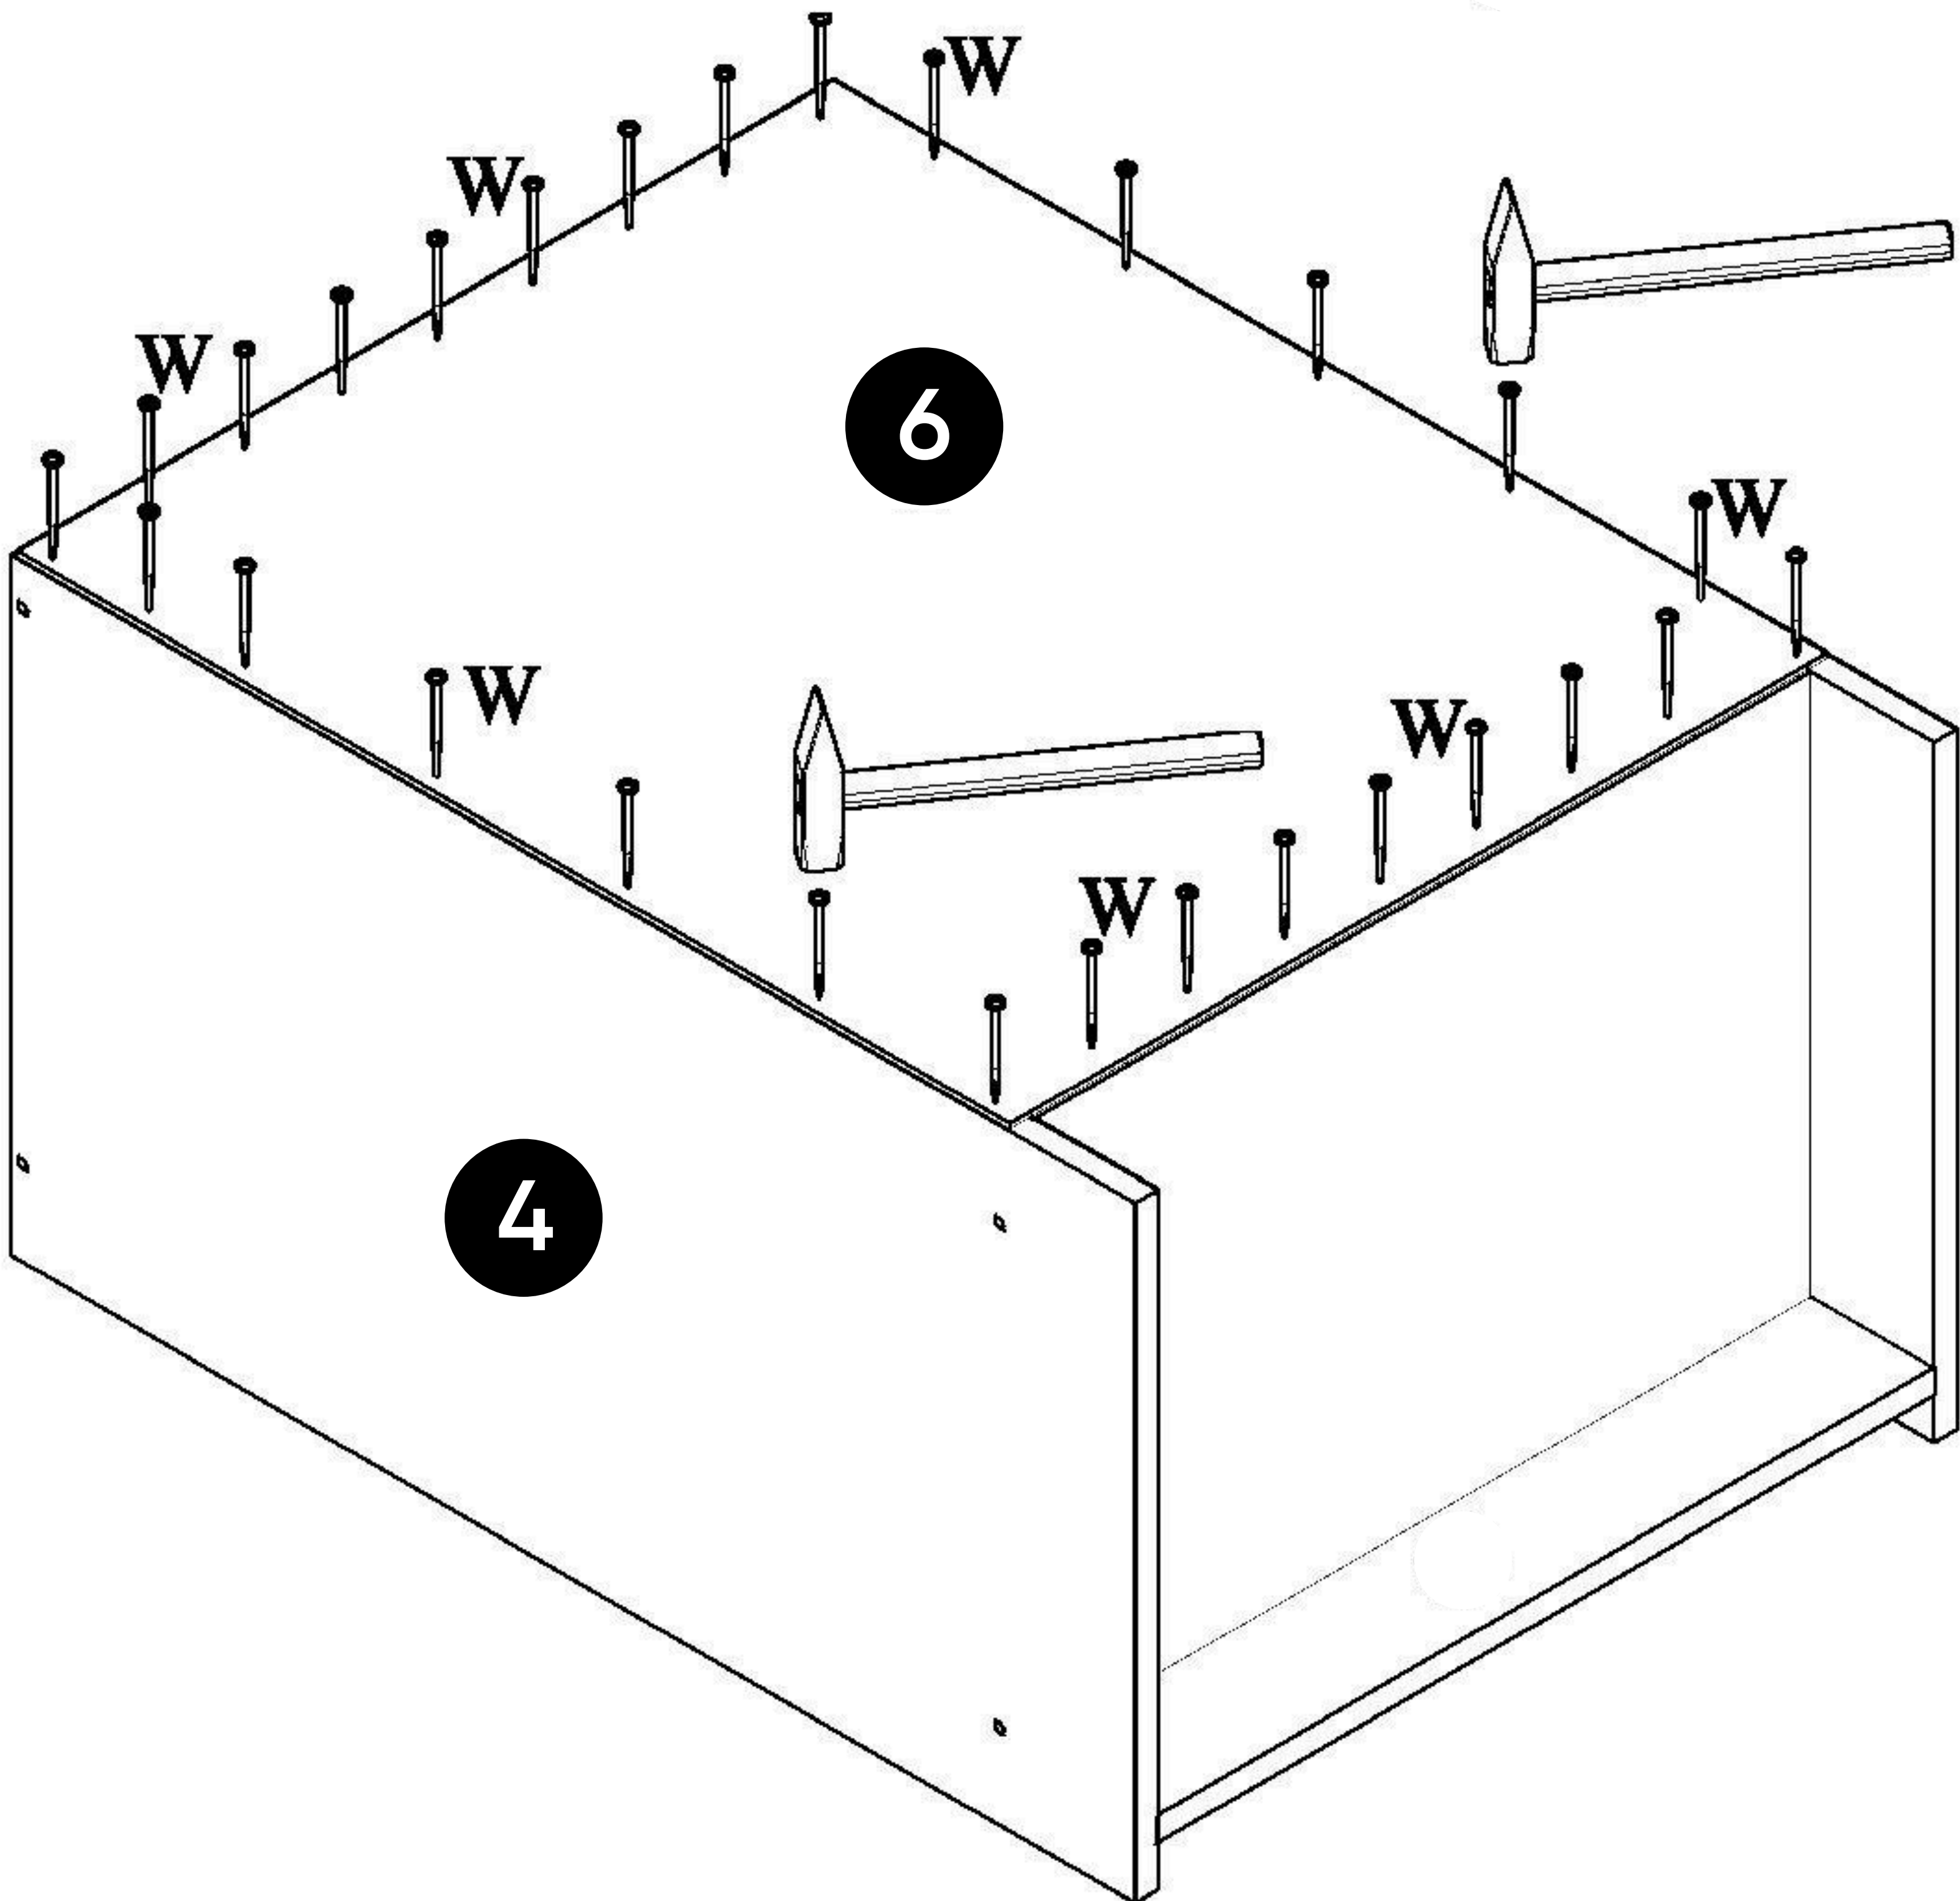

STEP - 5

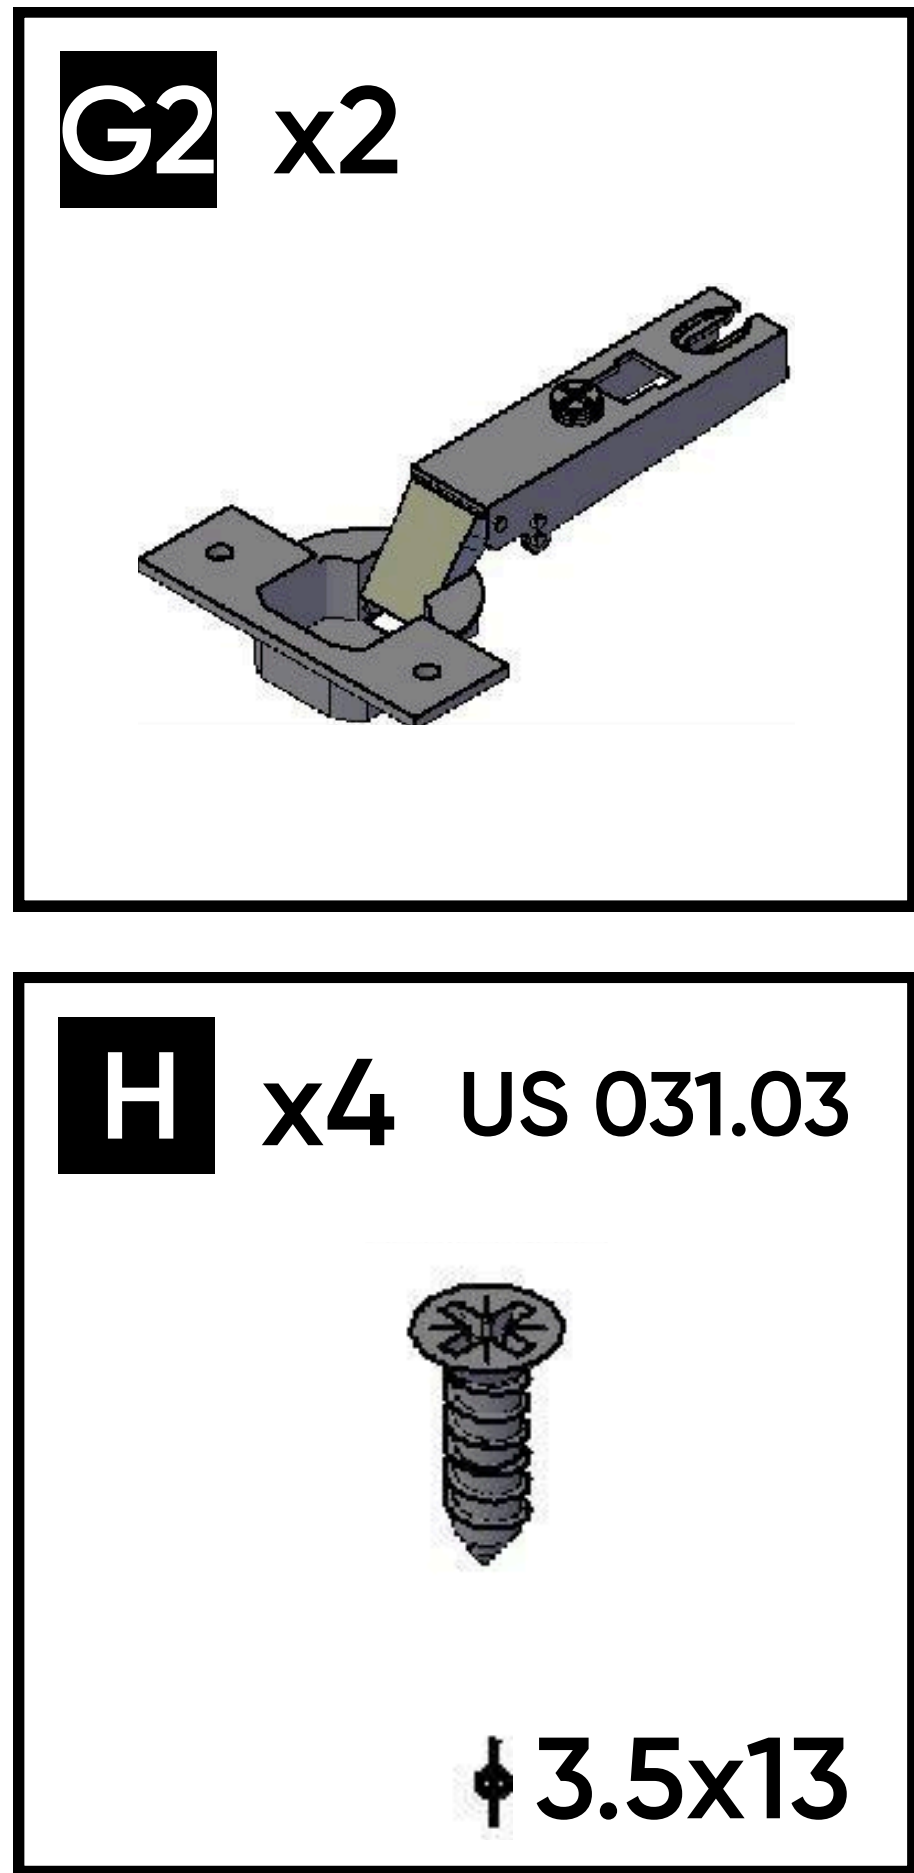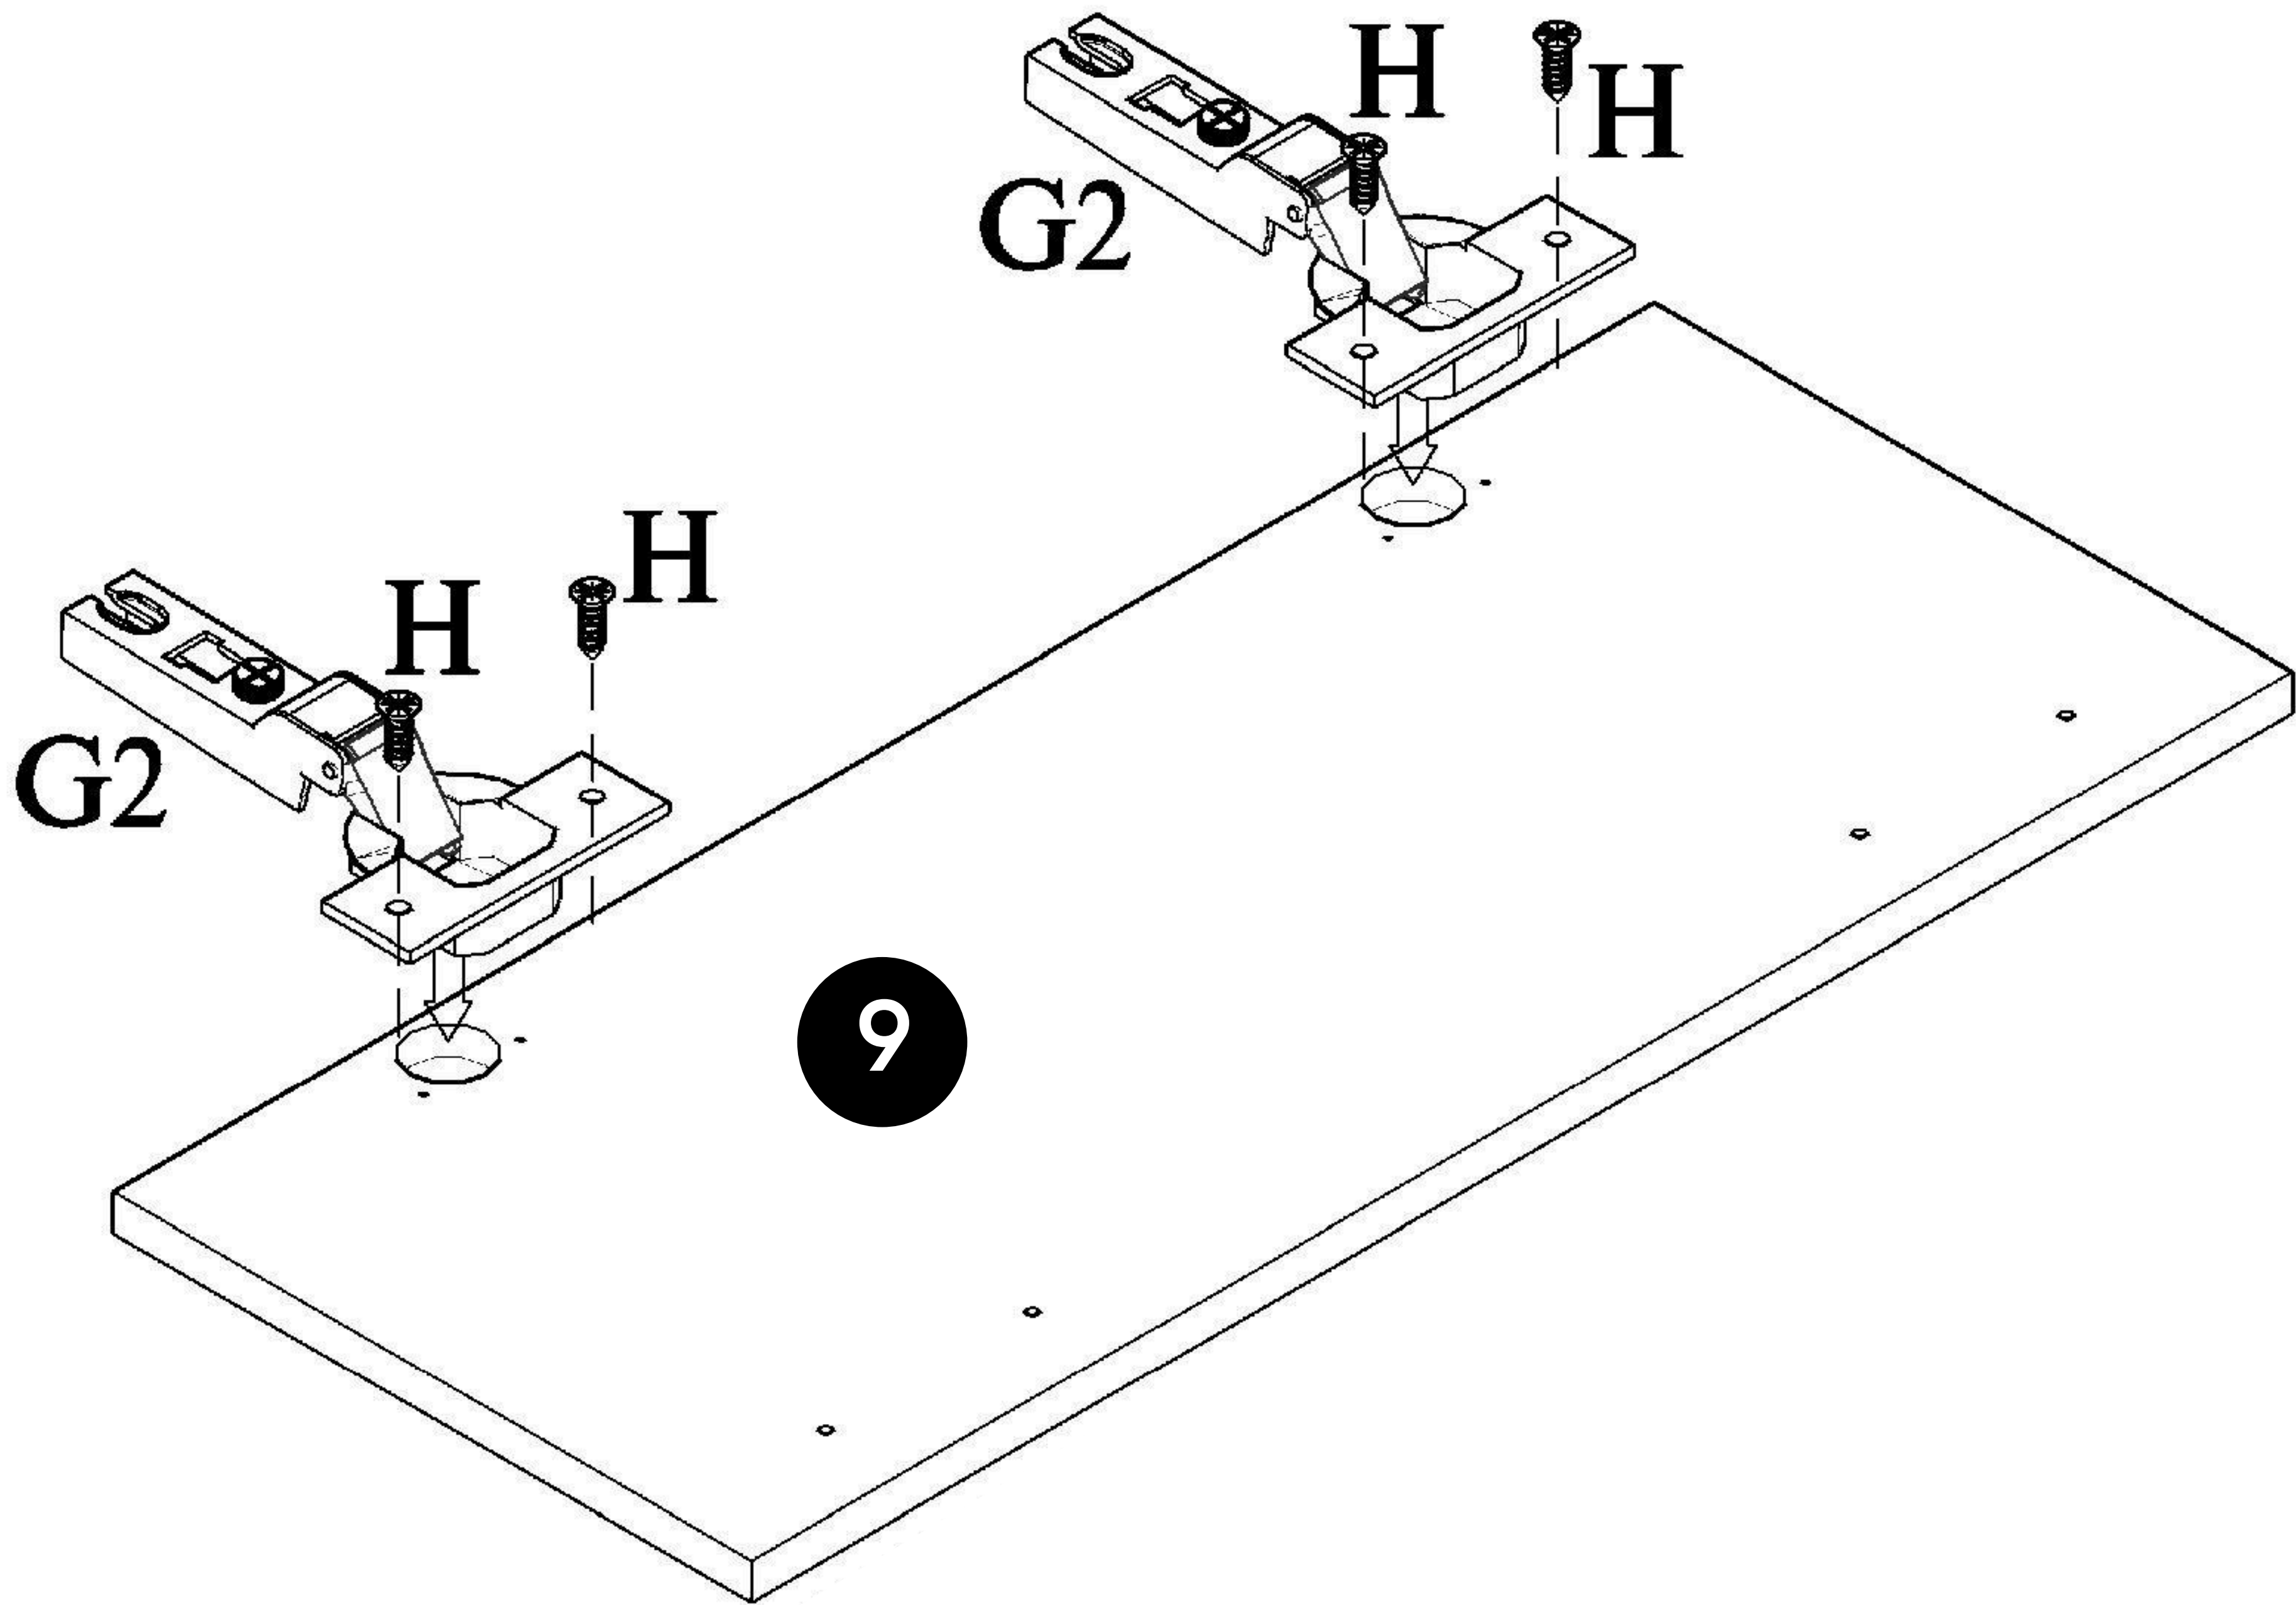



STEP - 6

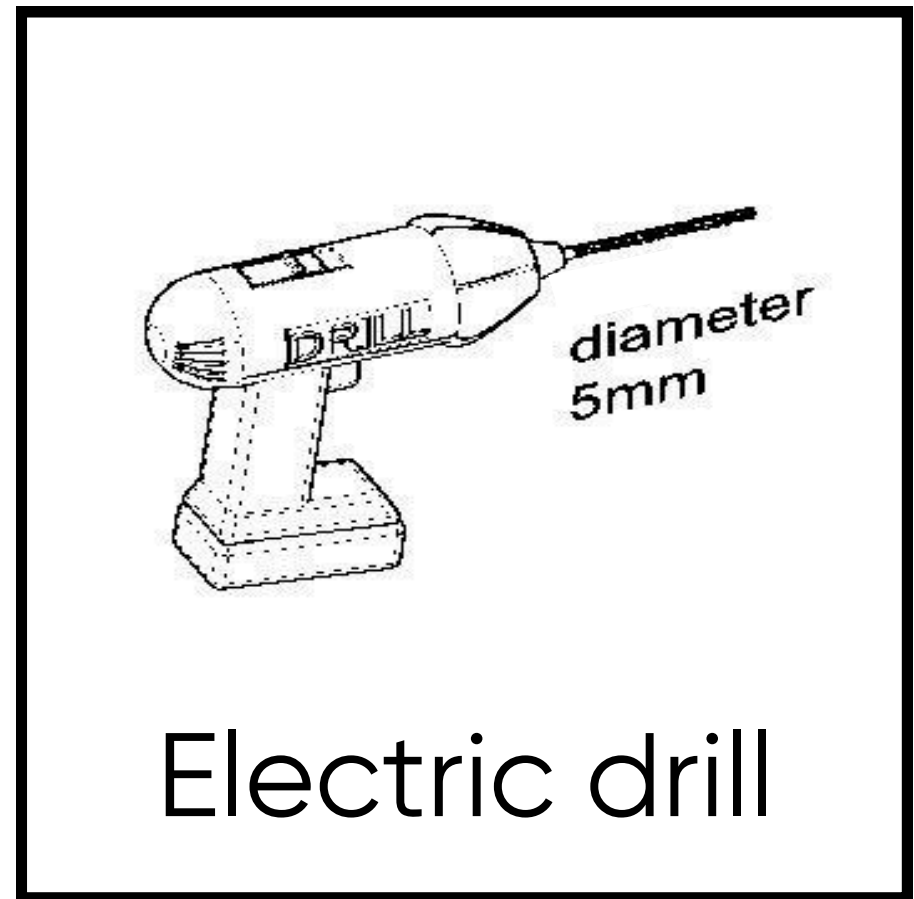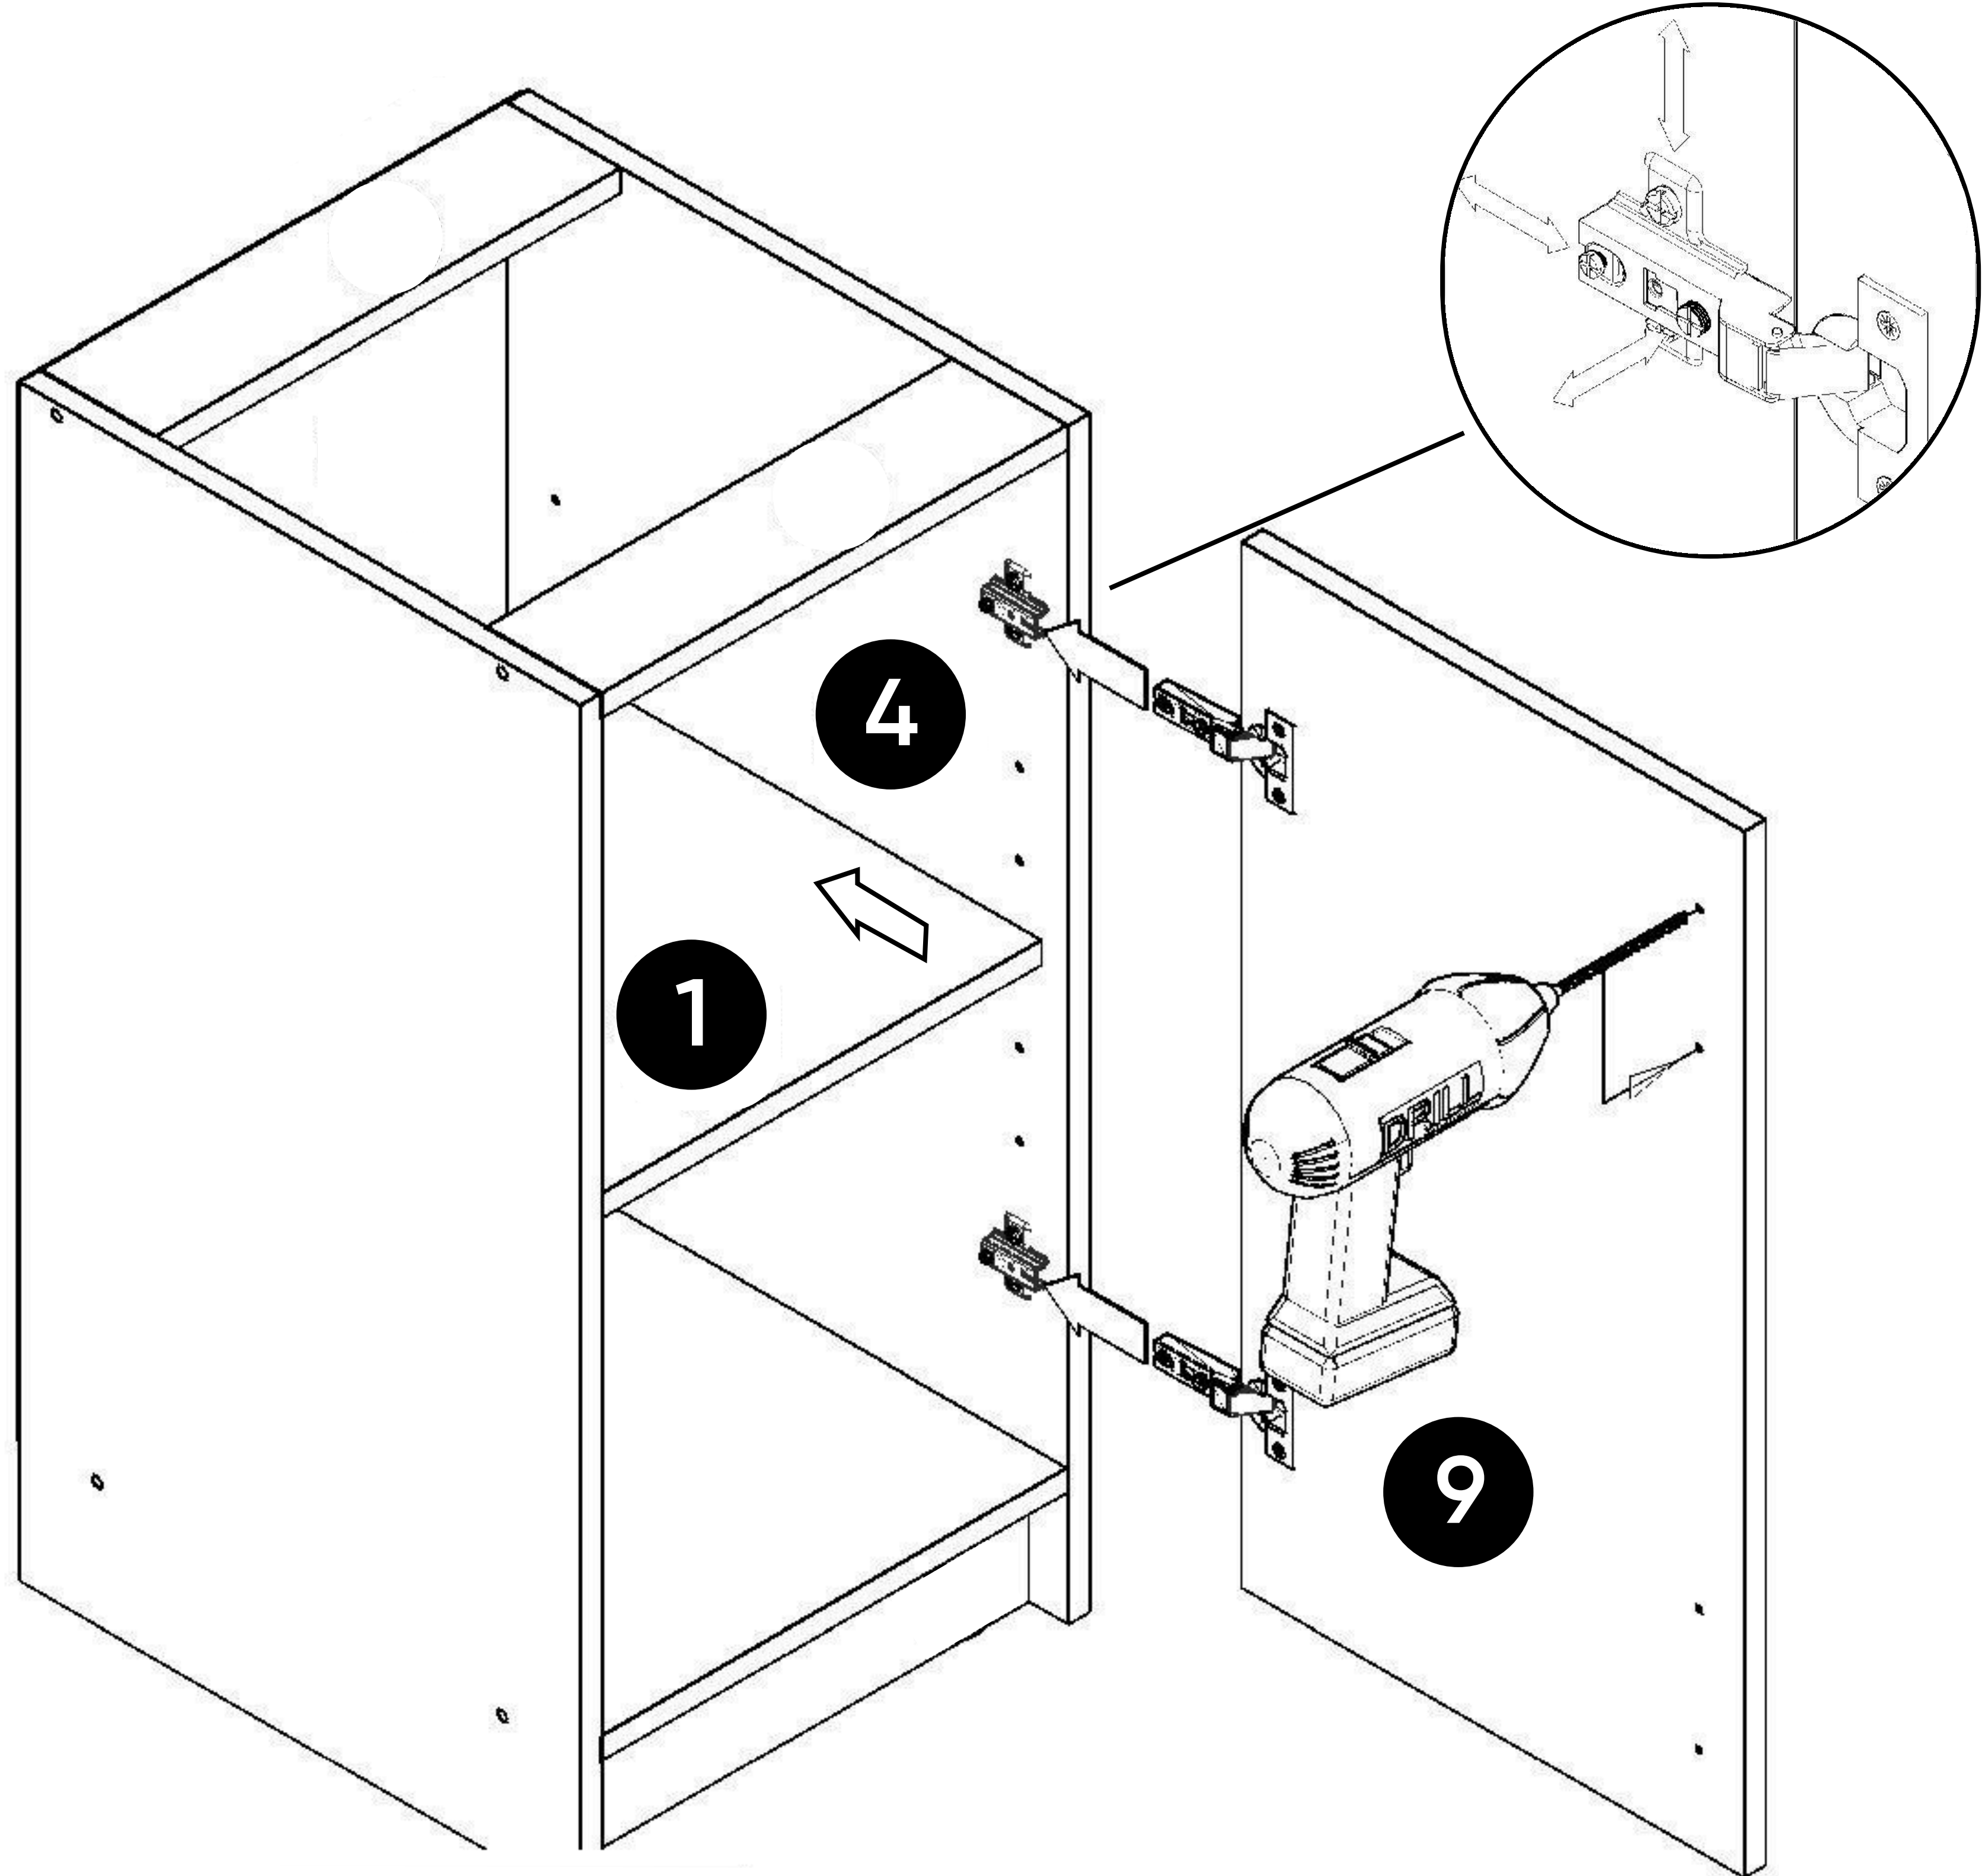


6 **NOTE:** Door can be fitted the left or right side

MODEL B300

STEP - 7

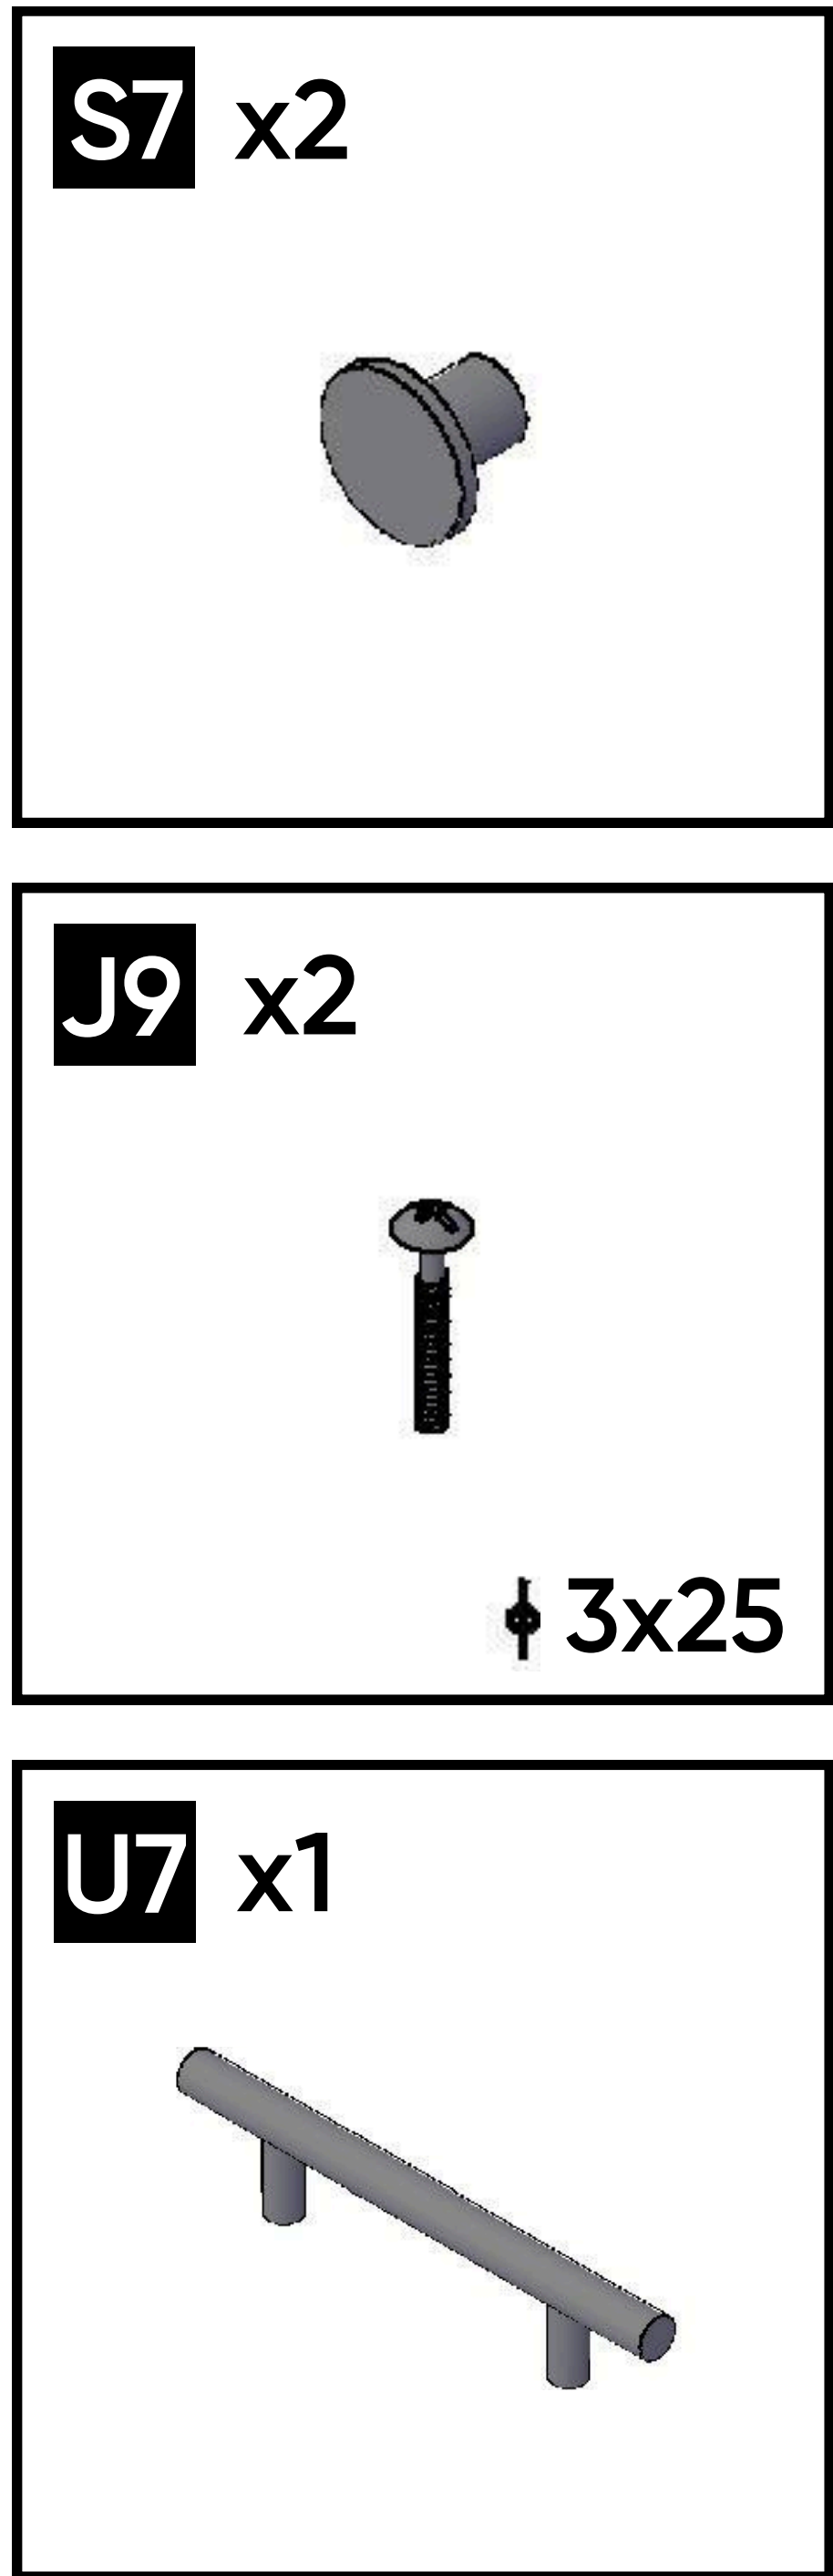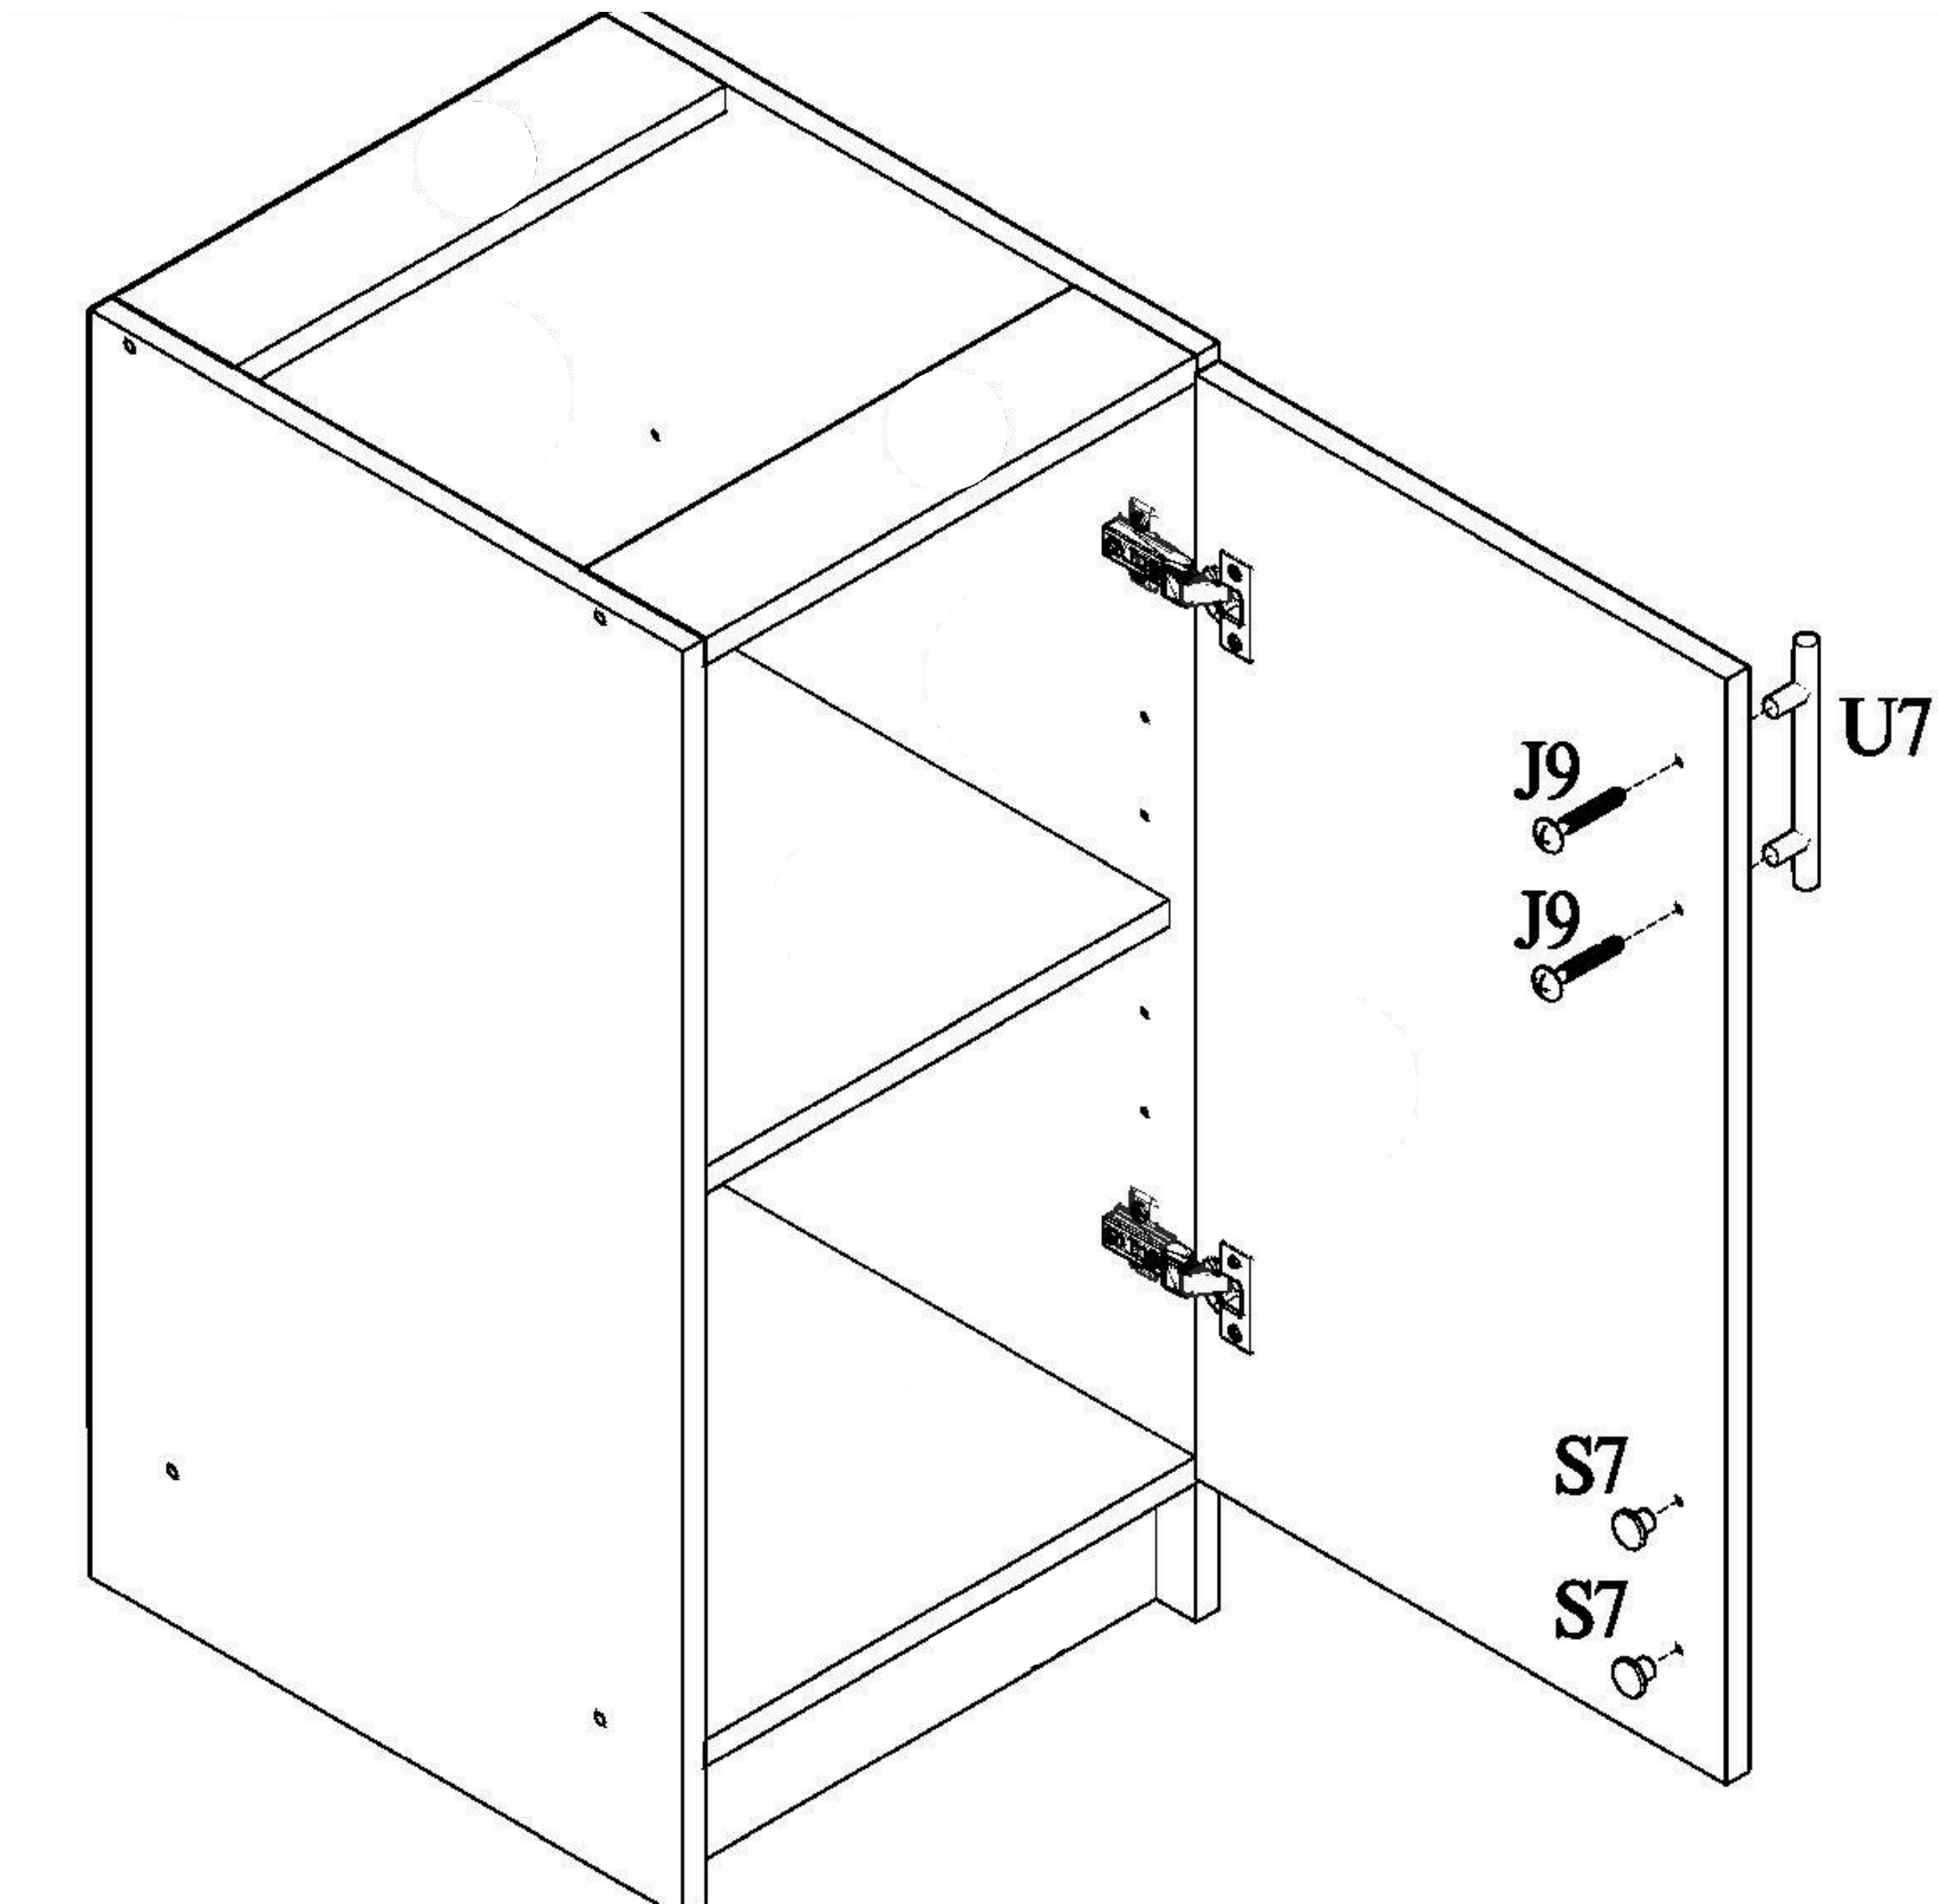

STEP - 8

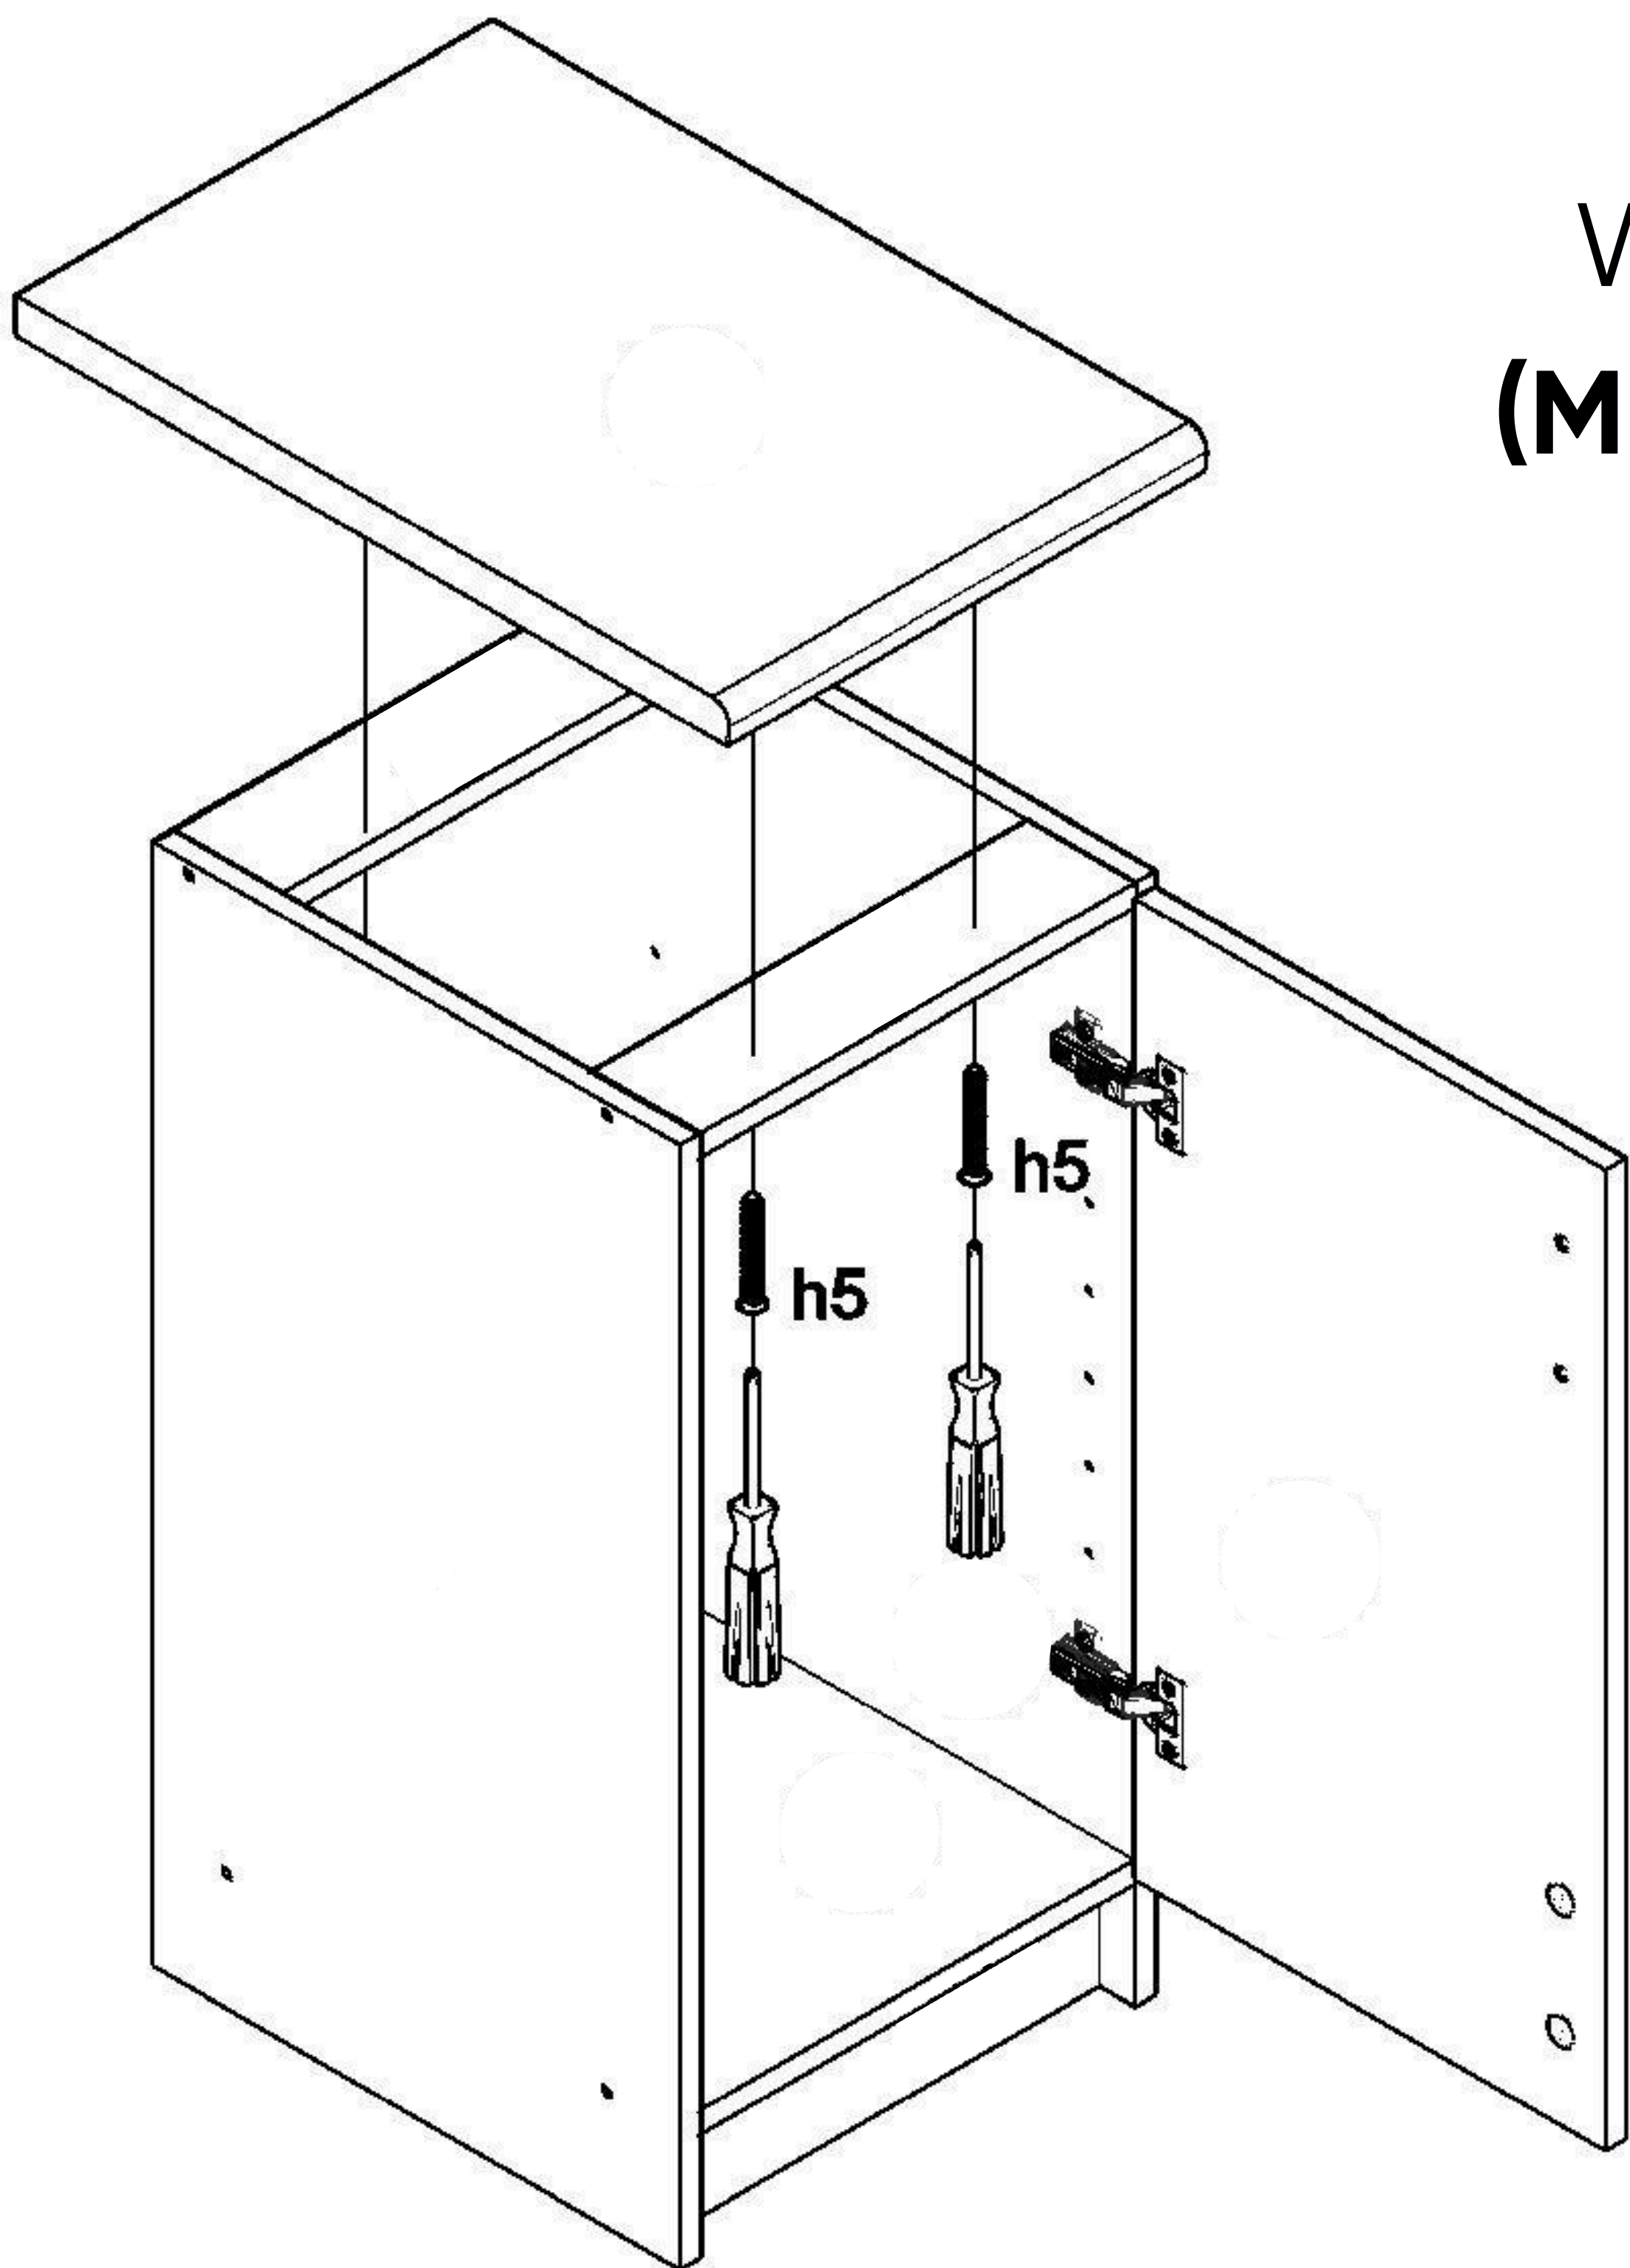

!

PAY ATTENTION:
WORKTOP IS OPTIONAL
(MIGHT NOT BE INCLUDED)