



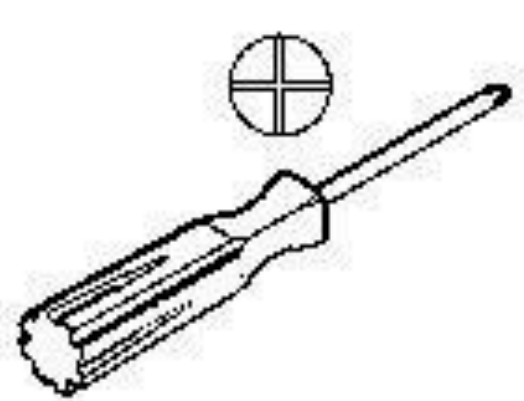


ASSEMBLY INSTRUCTIONS

KITCHEN BASE UNIT 800MM


MODEL B800

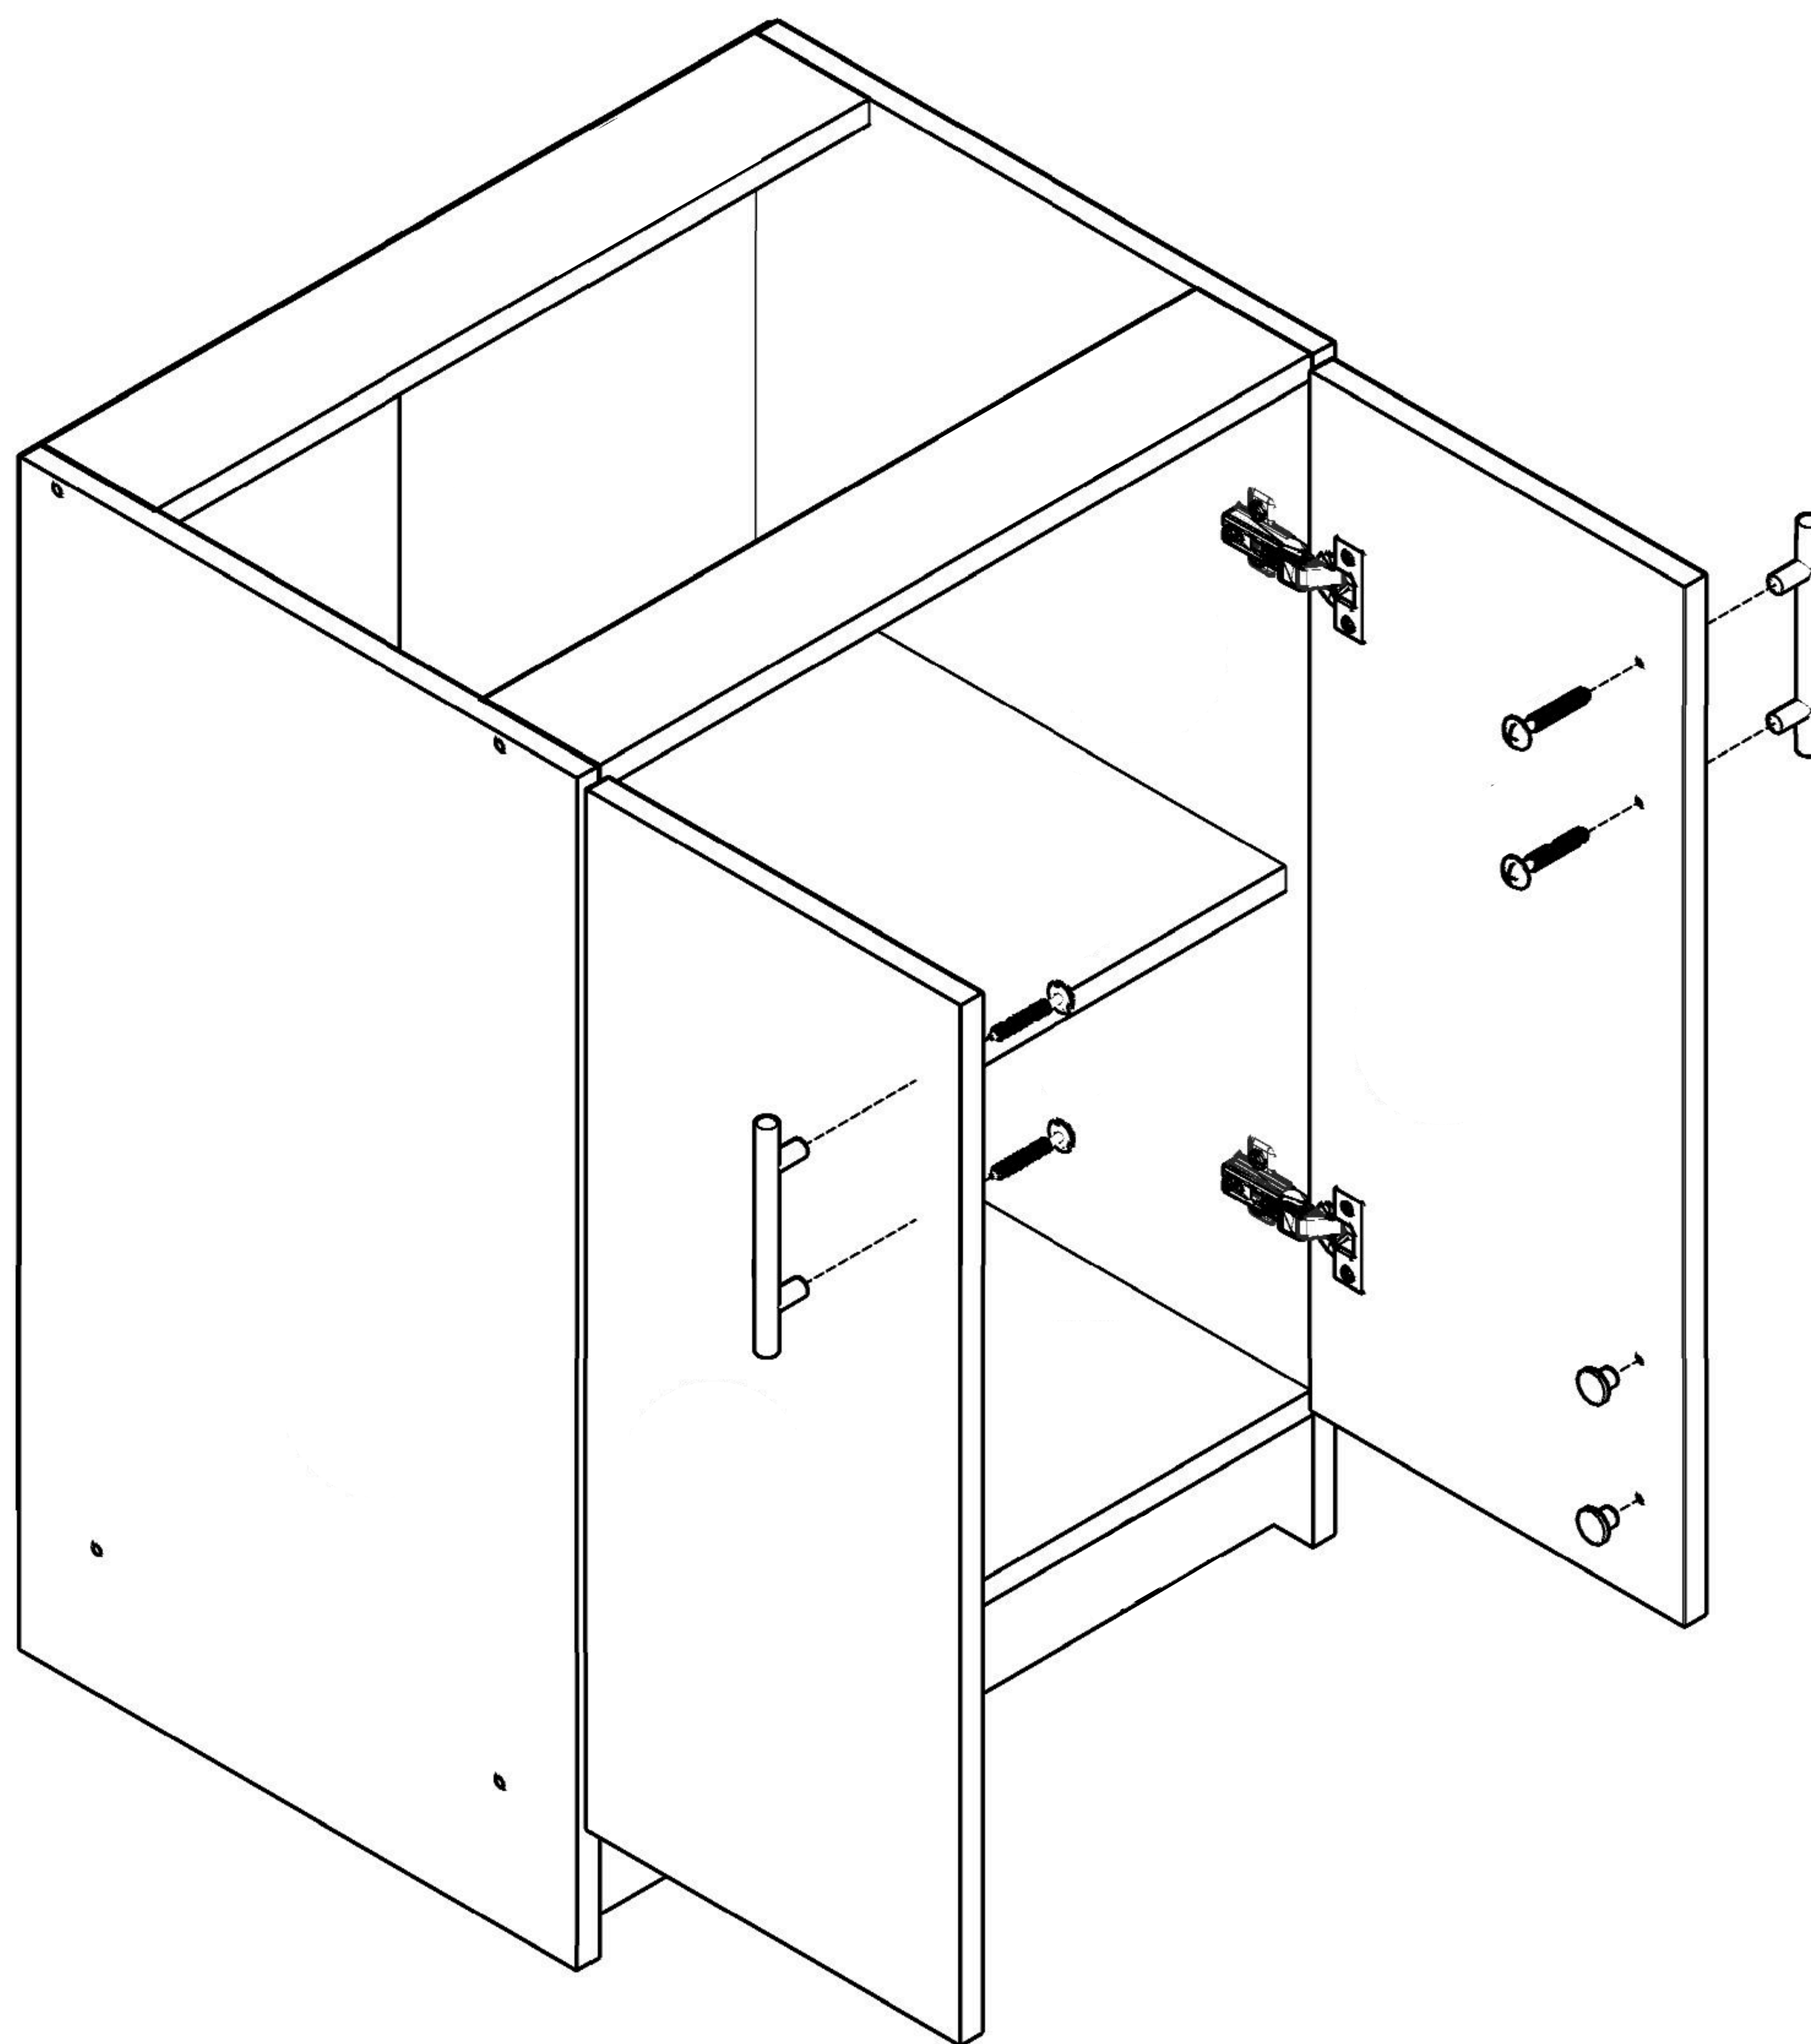


Cross-head
screwdriver

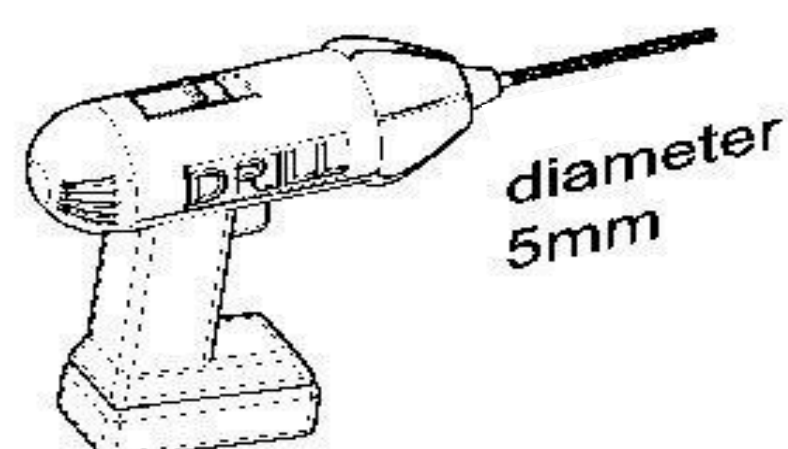

Electric
drill

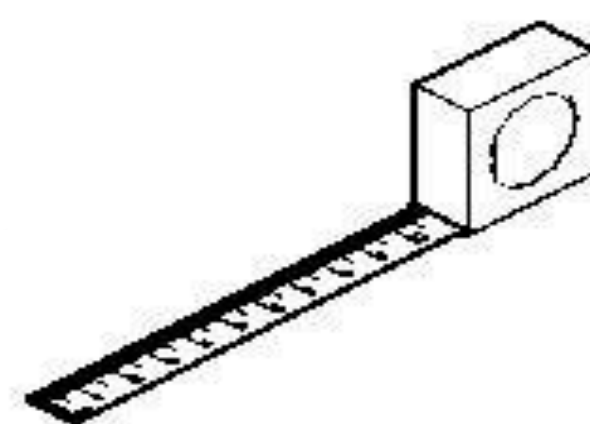

Rule

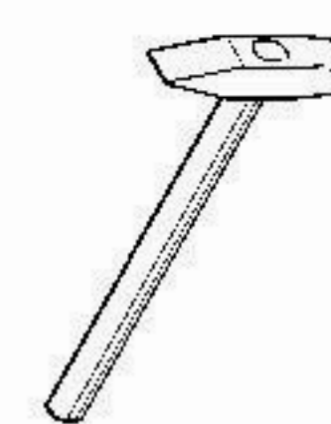

Hammer










**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346







COMPONENTS - PANELS

Please check you have all the panels listed below

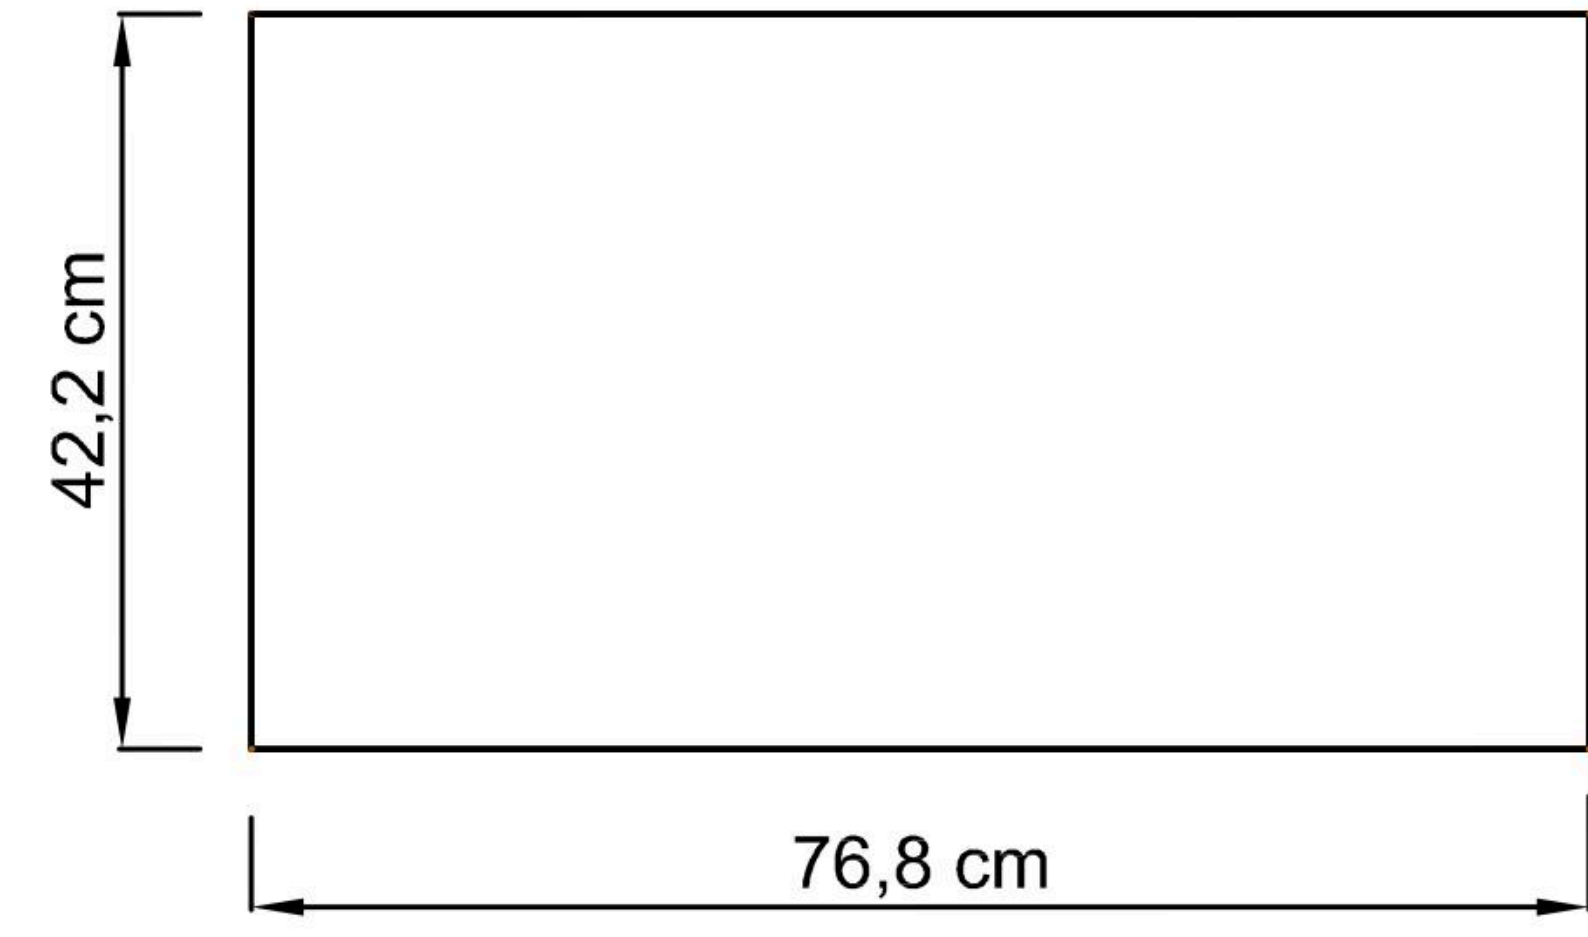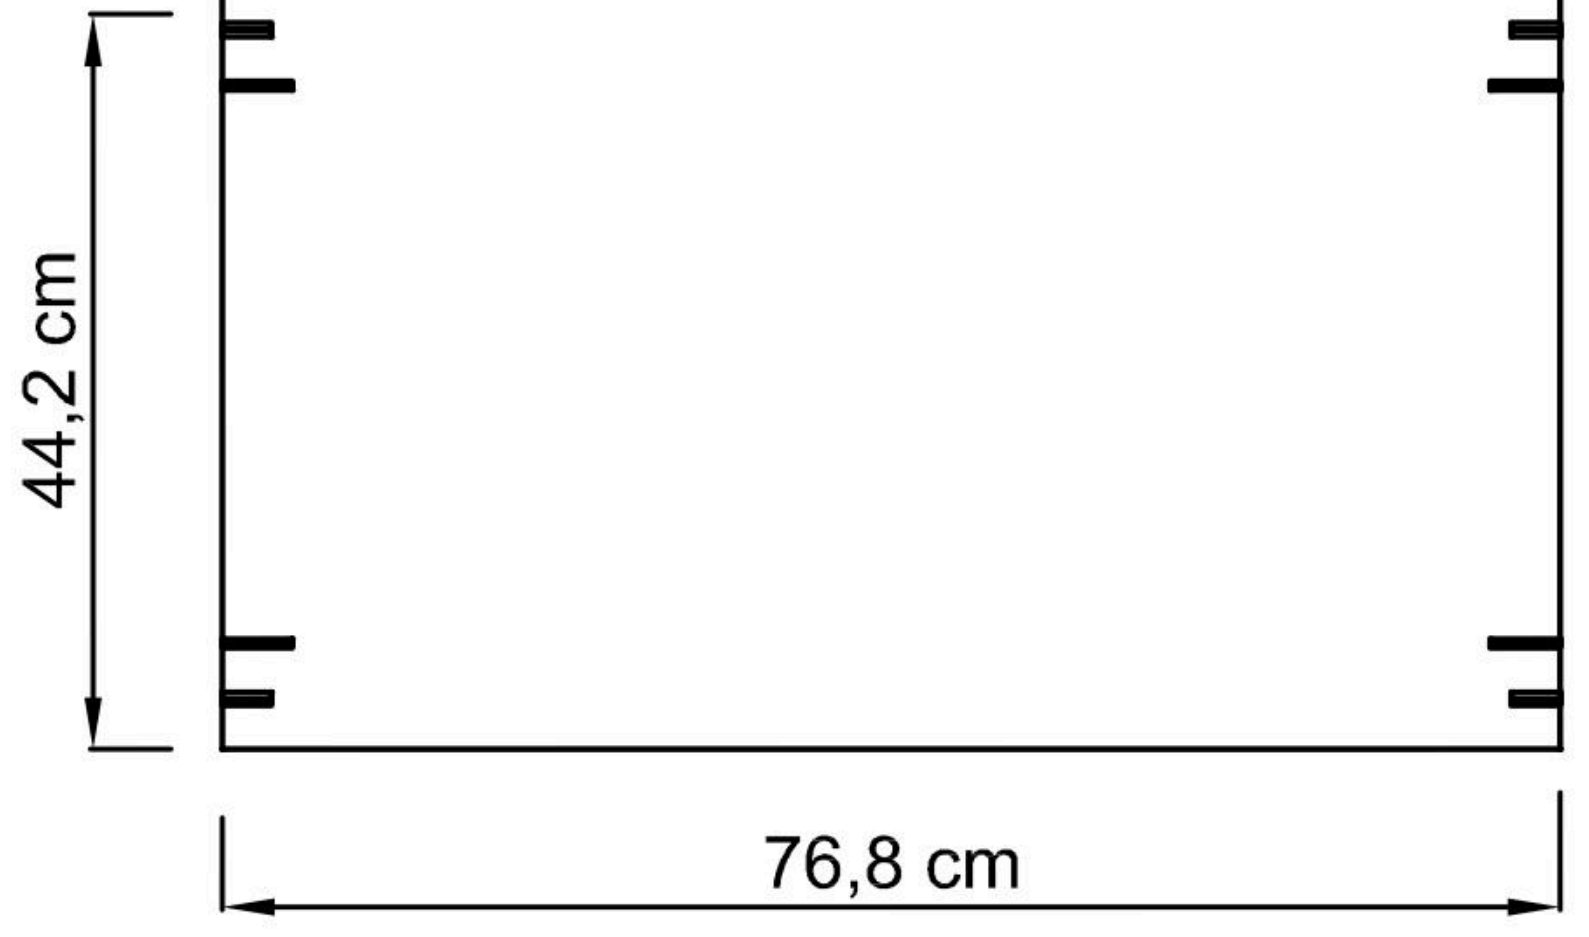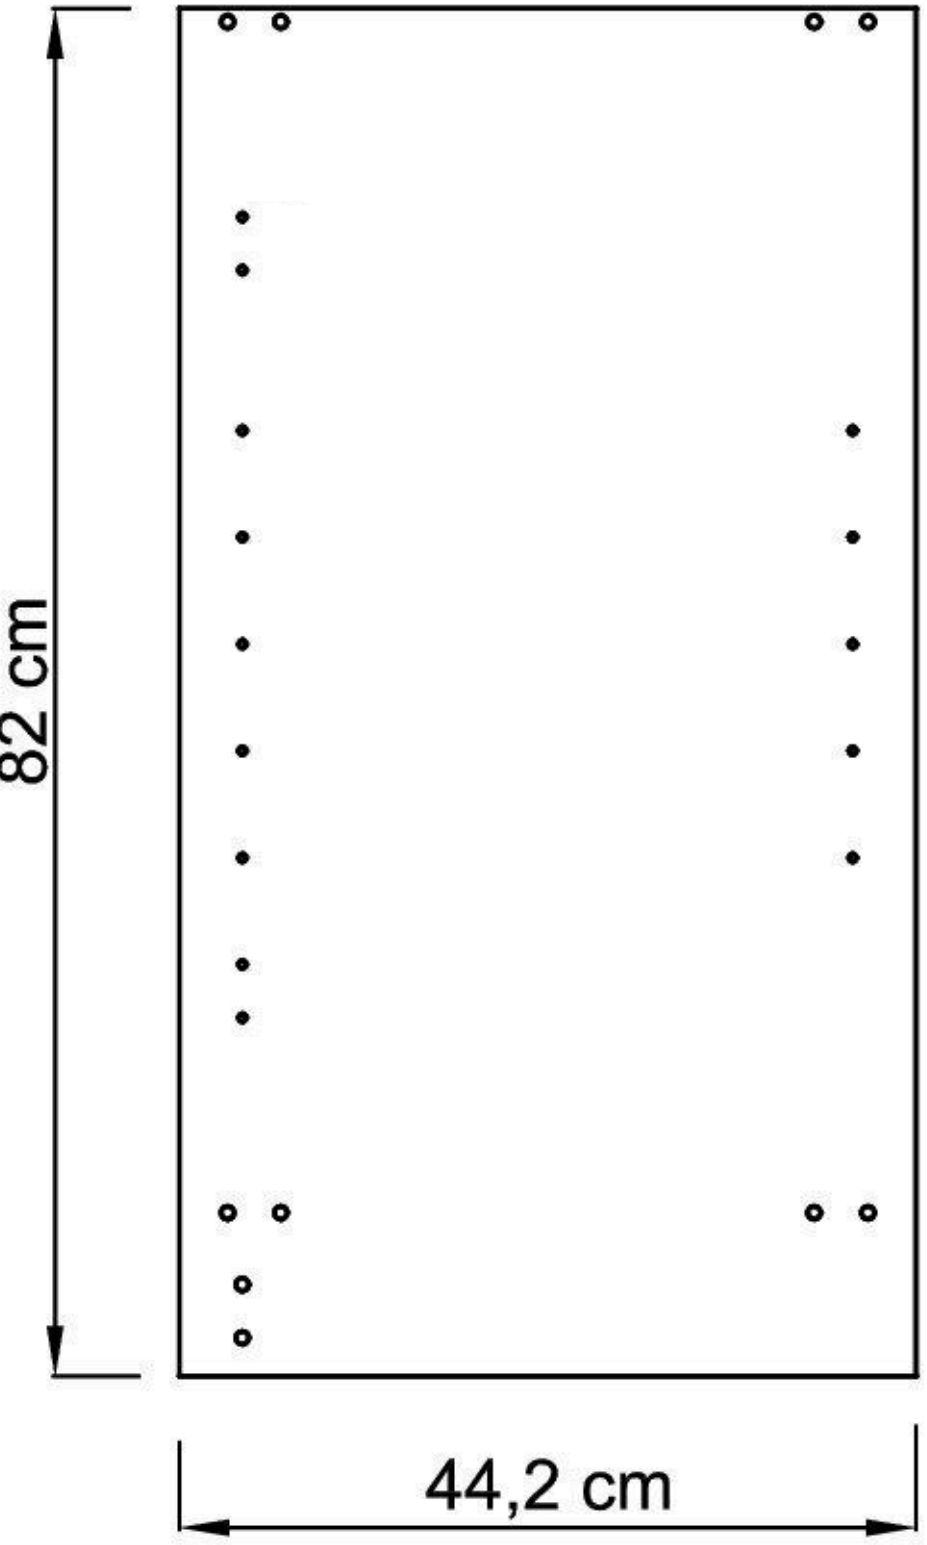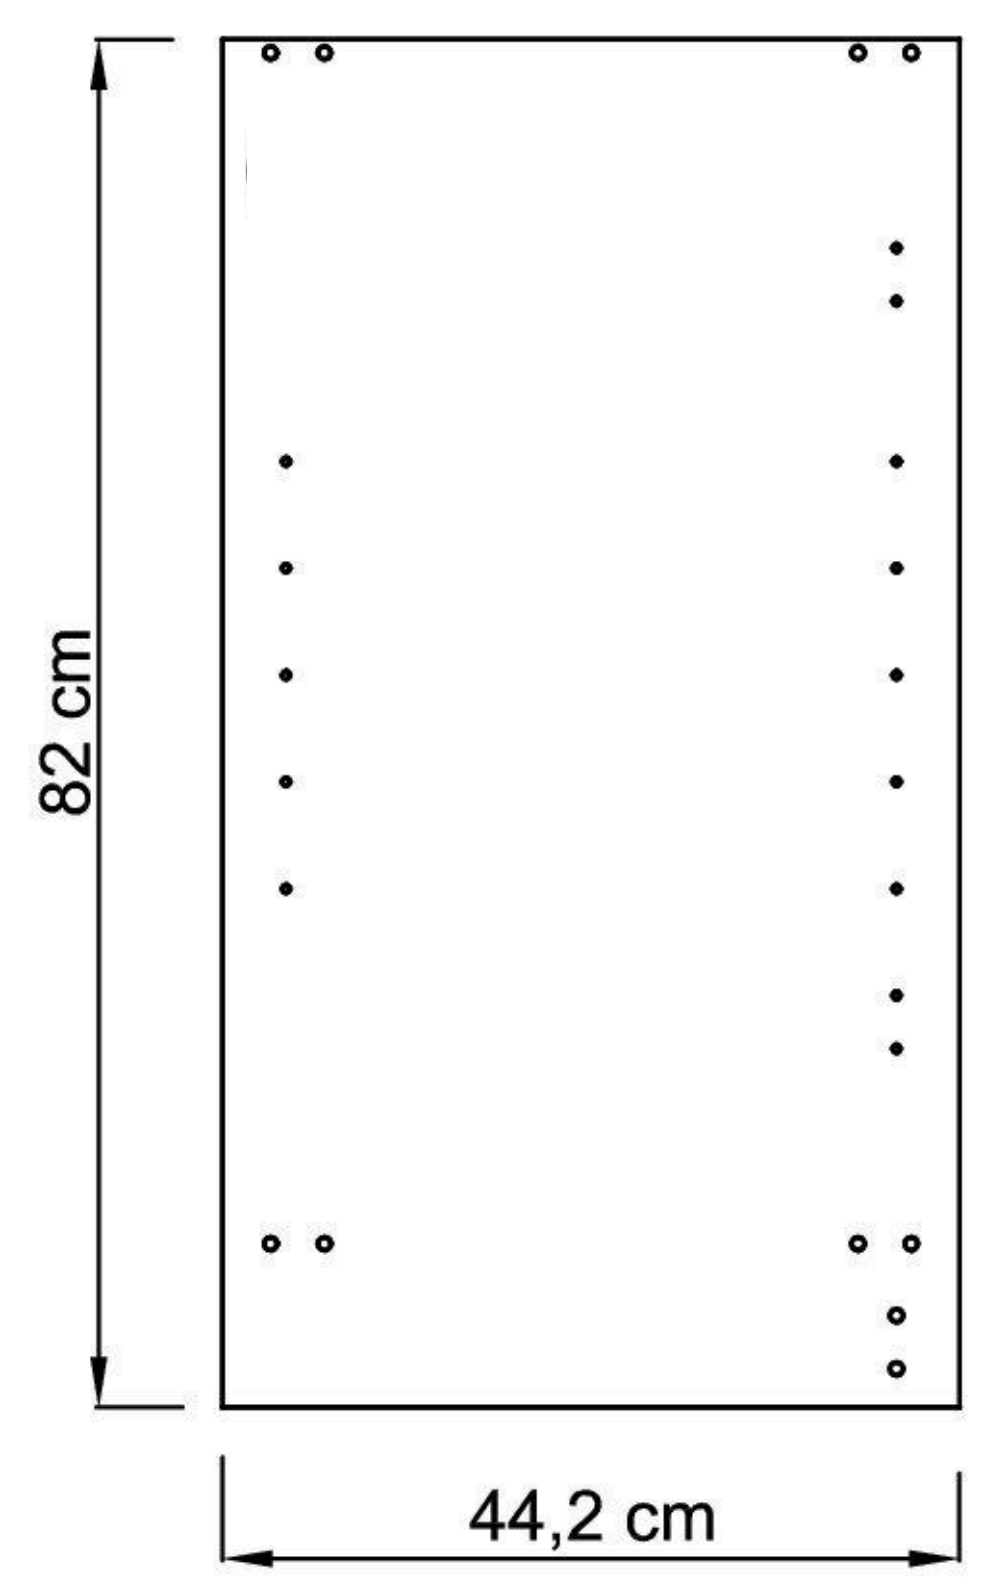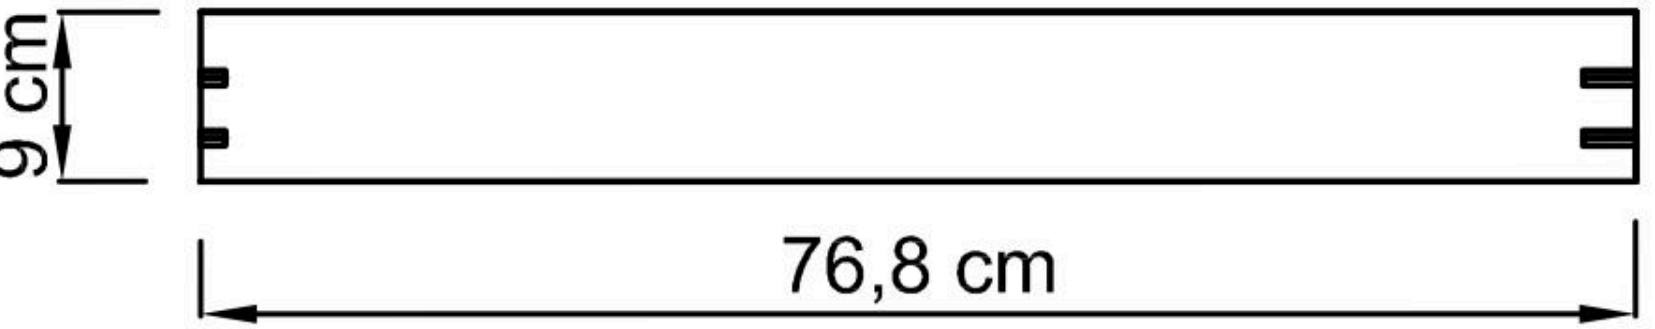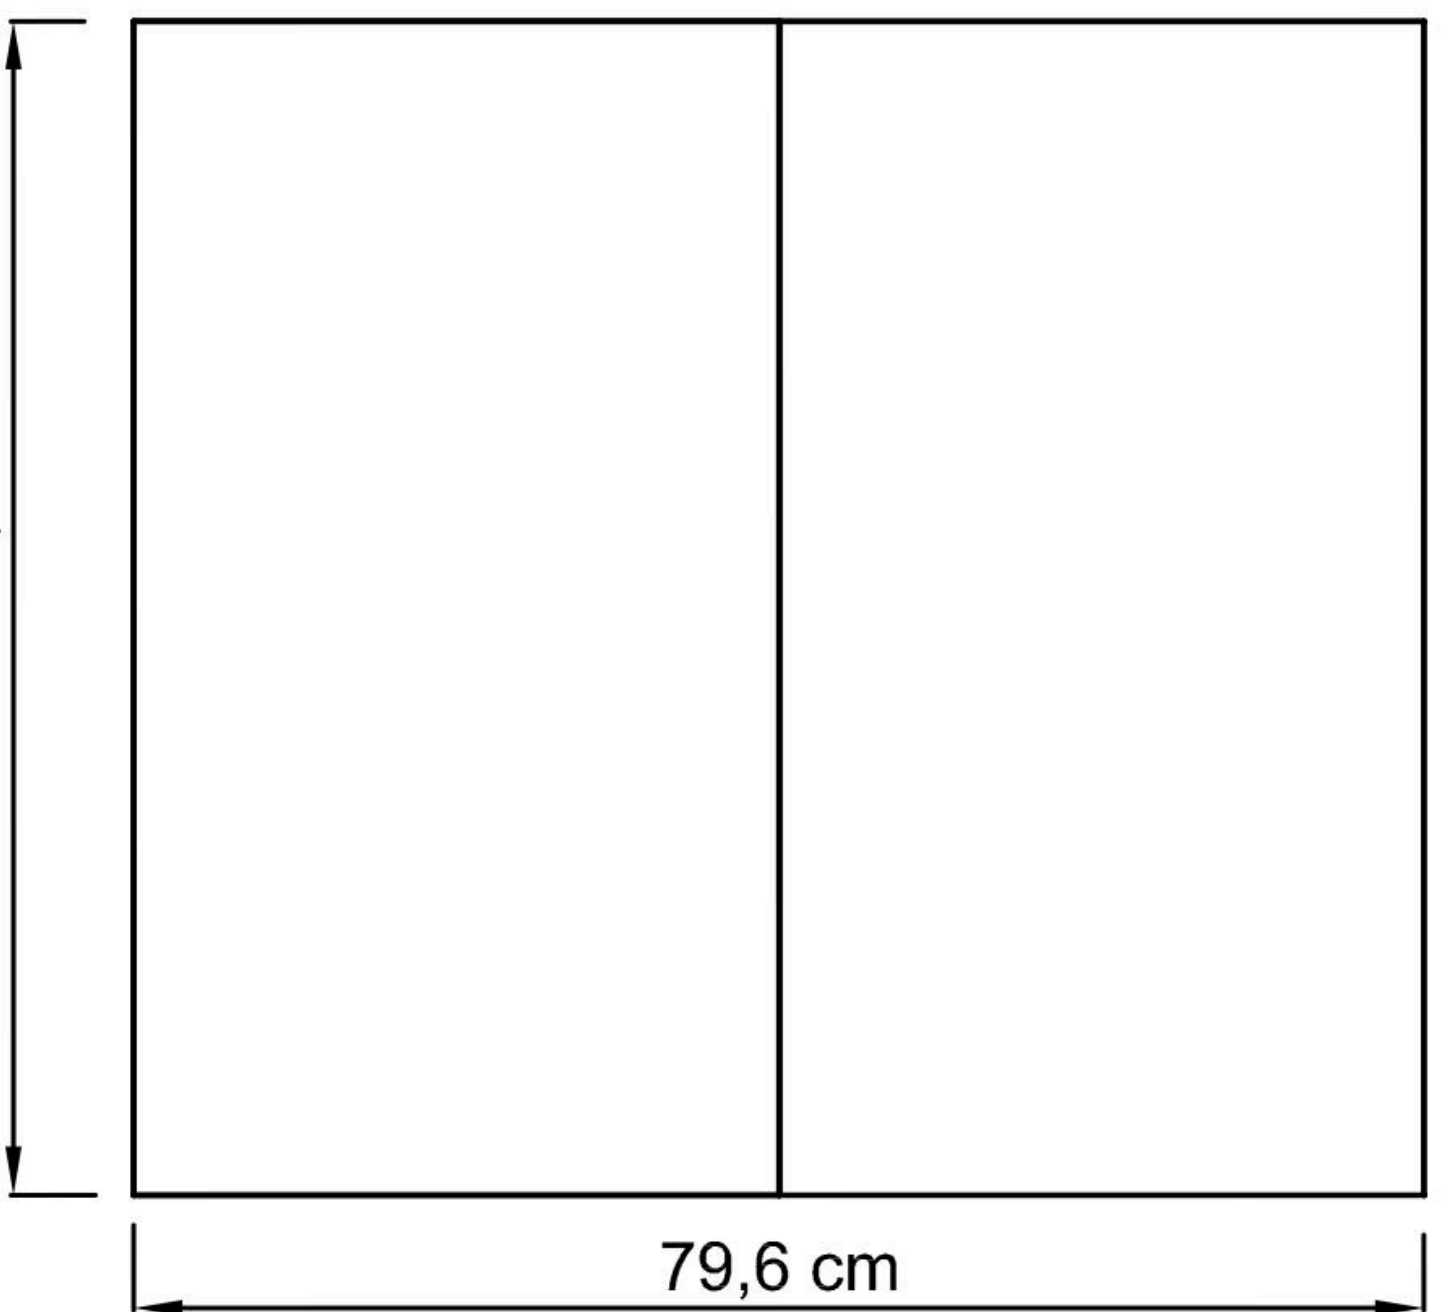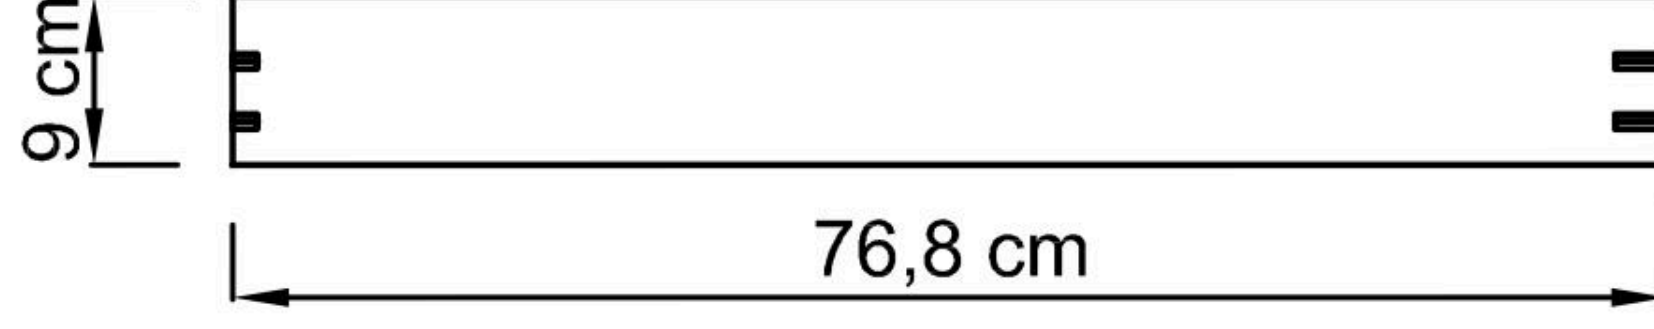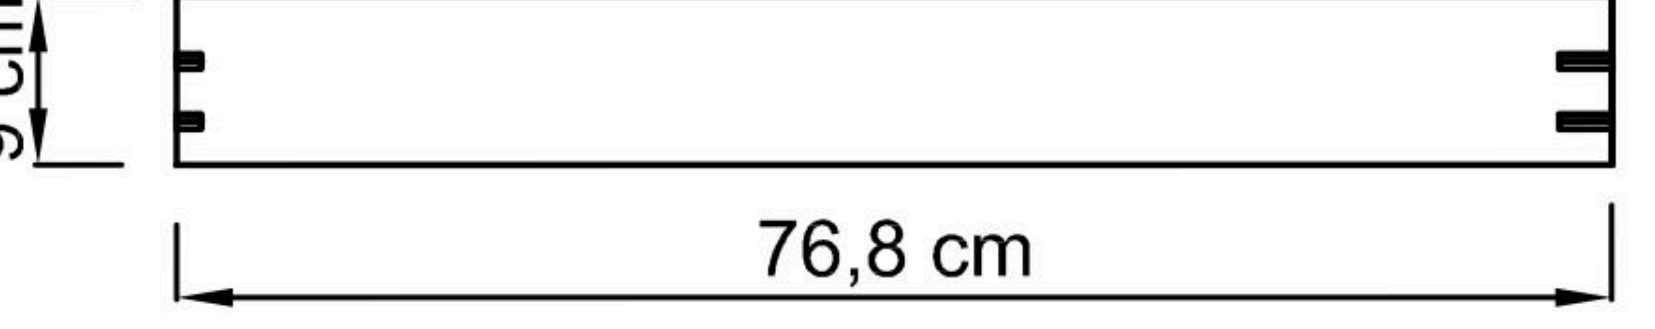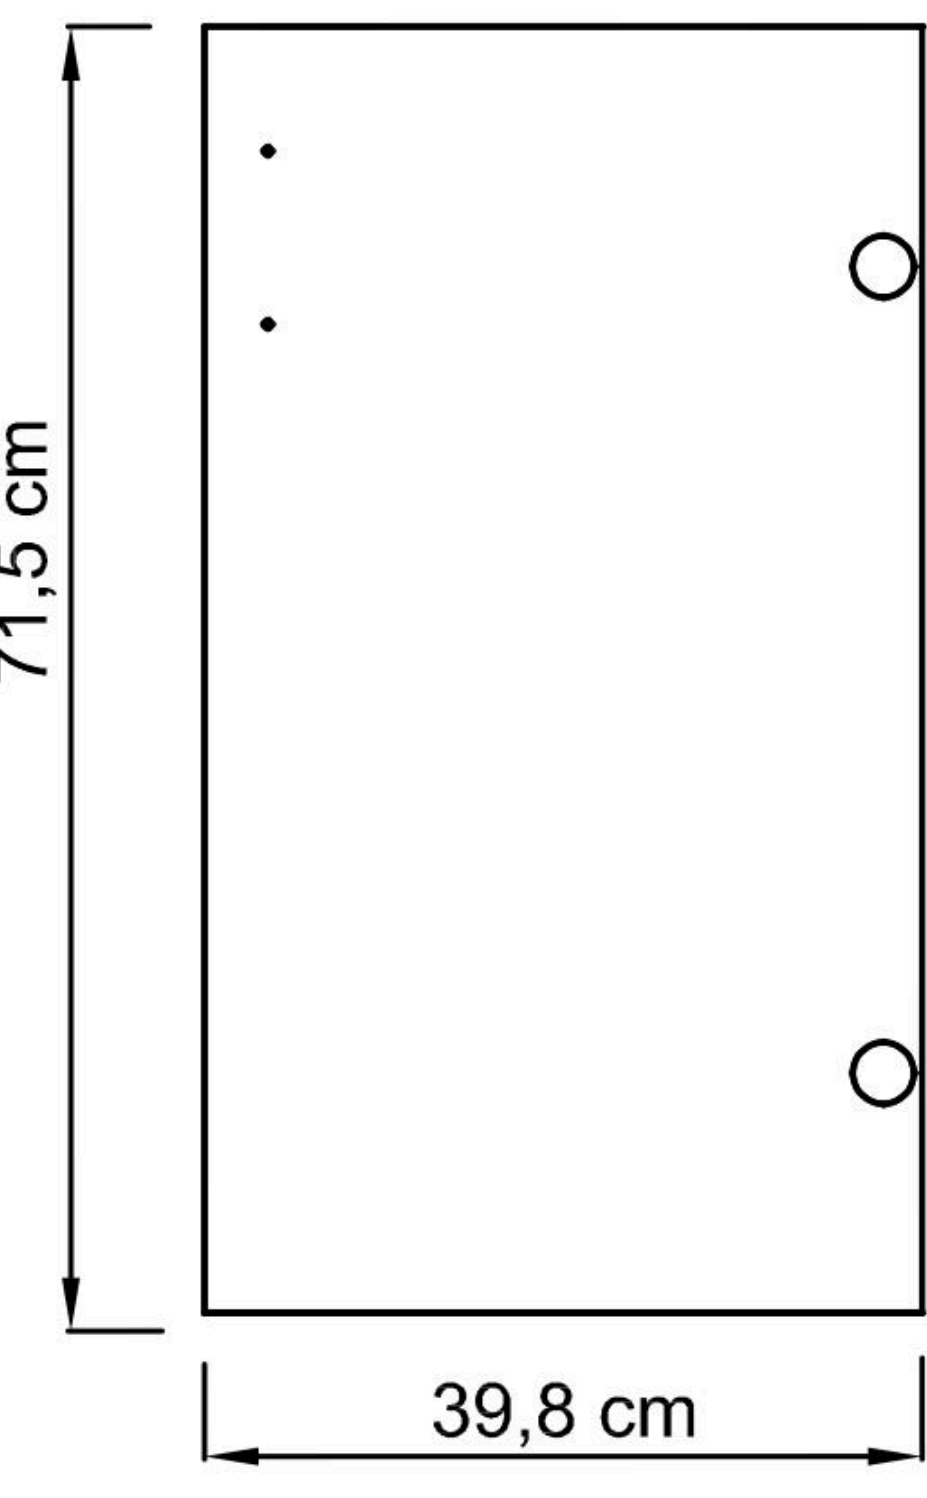
1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
7 x1 	8 x1 	9 x2 Front (separate package) 

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

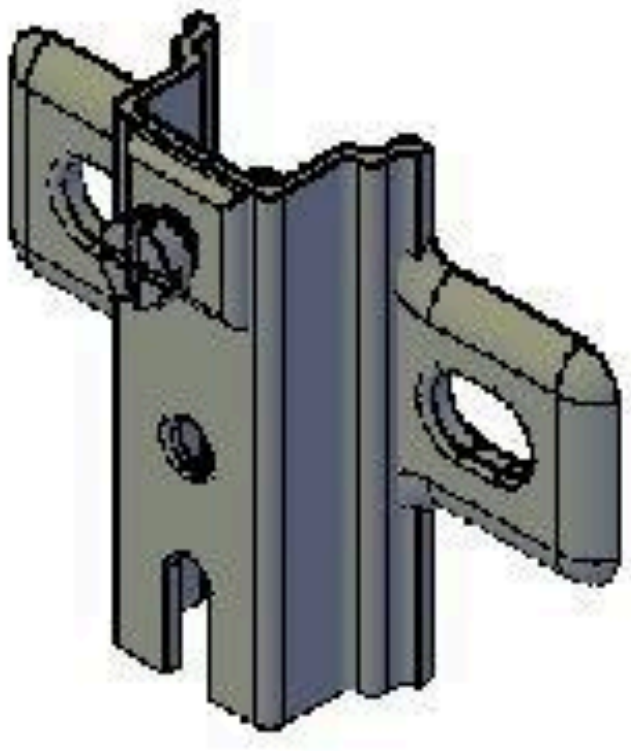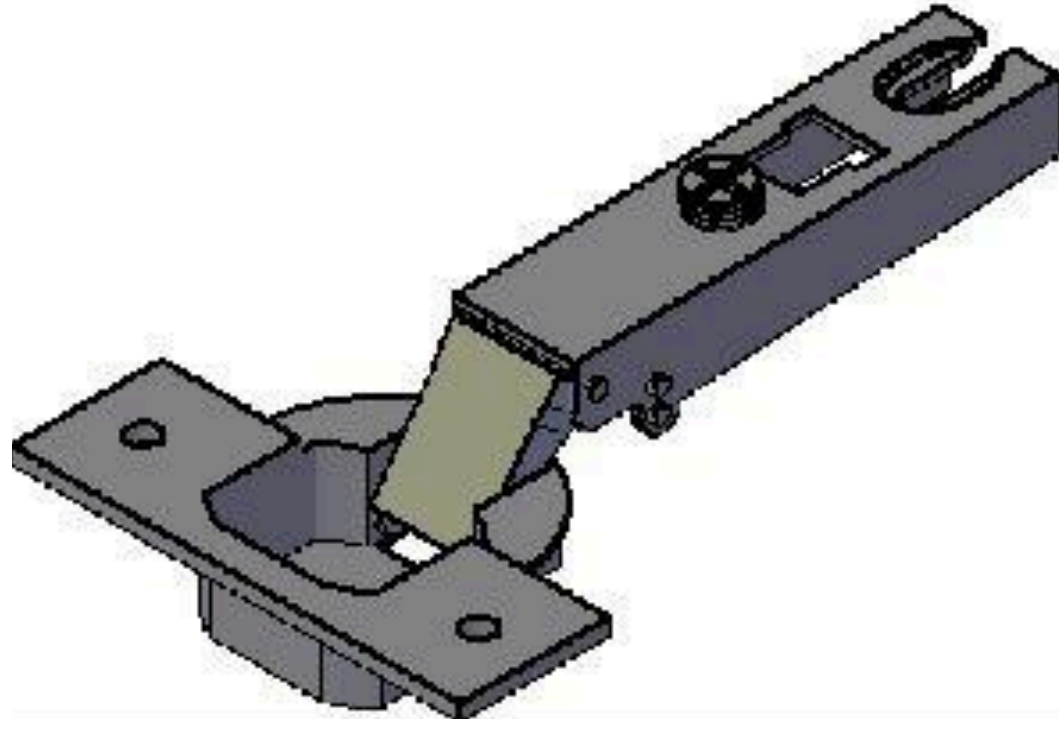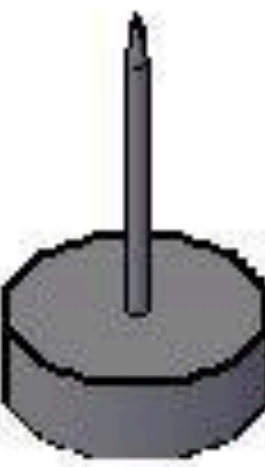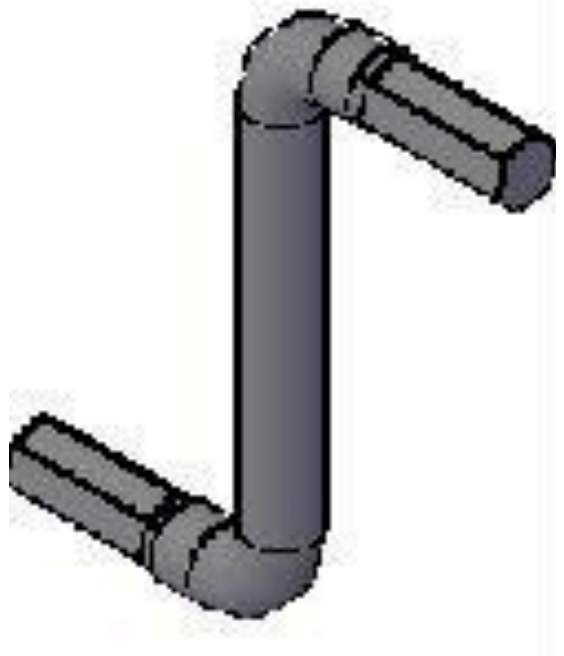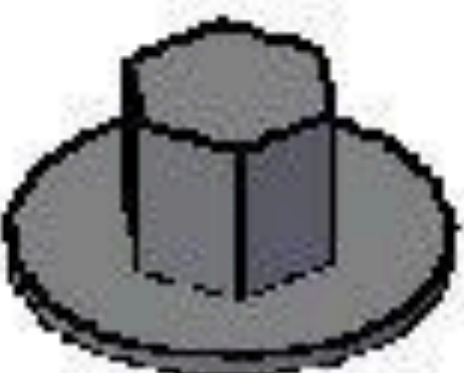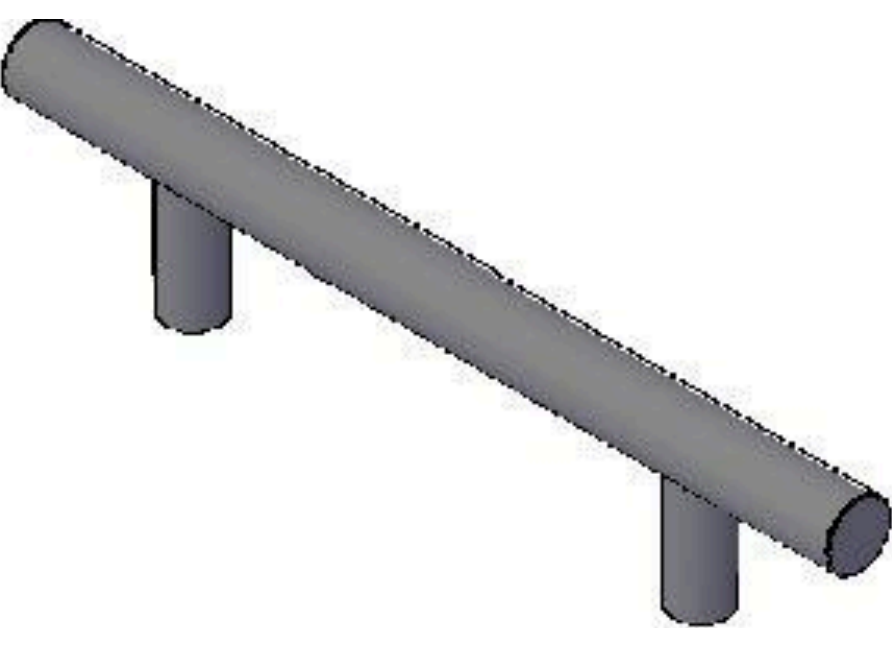O x8  ⌀ 7x16	F x4 	G2 x4 	! PAY ATTENTION: O AND F ATTACHED TO G2
E x4 	D8 x4 	Q7 x1 	C x8  ⌀ 7x50
S1 x8 	S7 x4 	J9 x4  ⌀ 3x25	U7 x2 
H x8 US 031.03  ⌀ 3.5x13	W x40 	H5 x4  ⌀ 3.5x25	A x12 

Ruler - Use this ruler to help correctly identify the screws

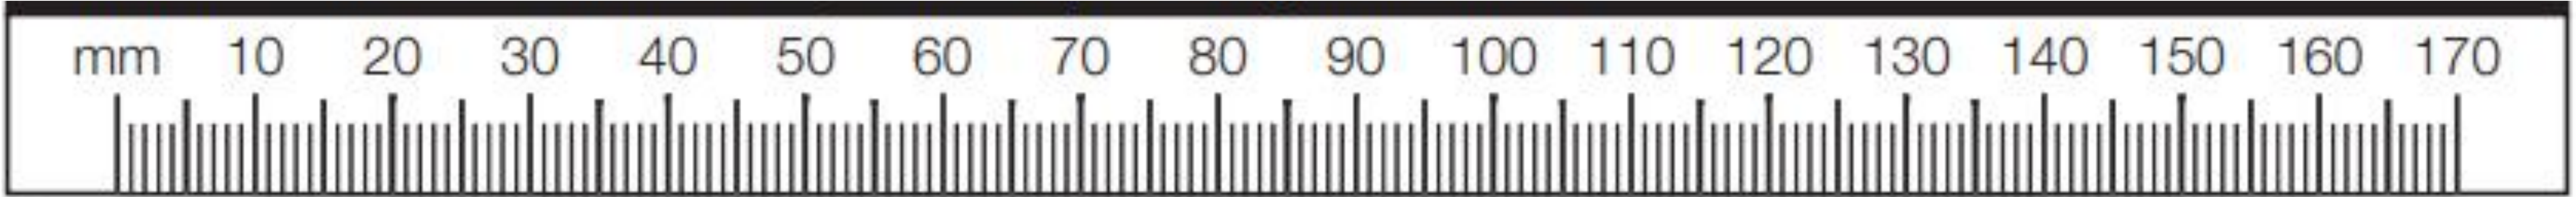


STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x8

F x4

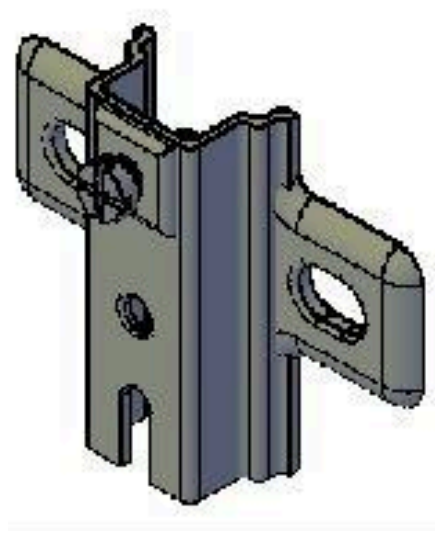



7x16

E x4

D8 x4

A x12

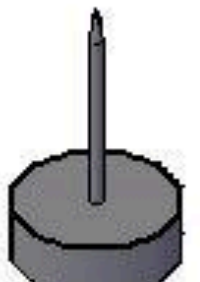

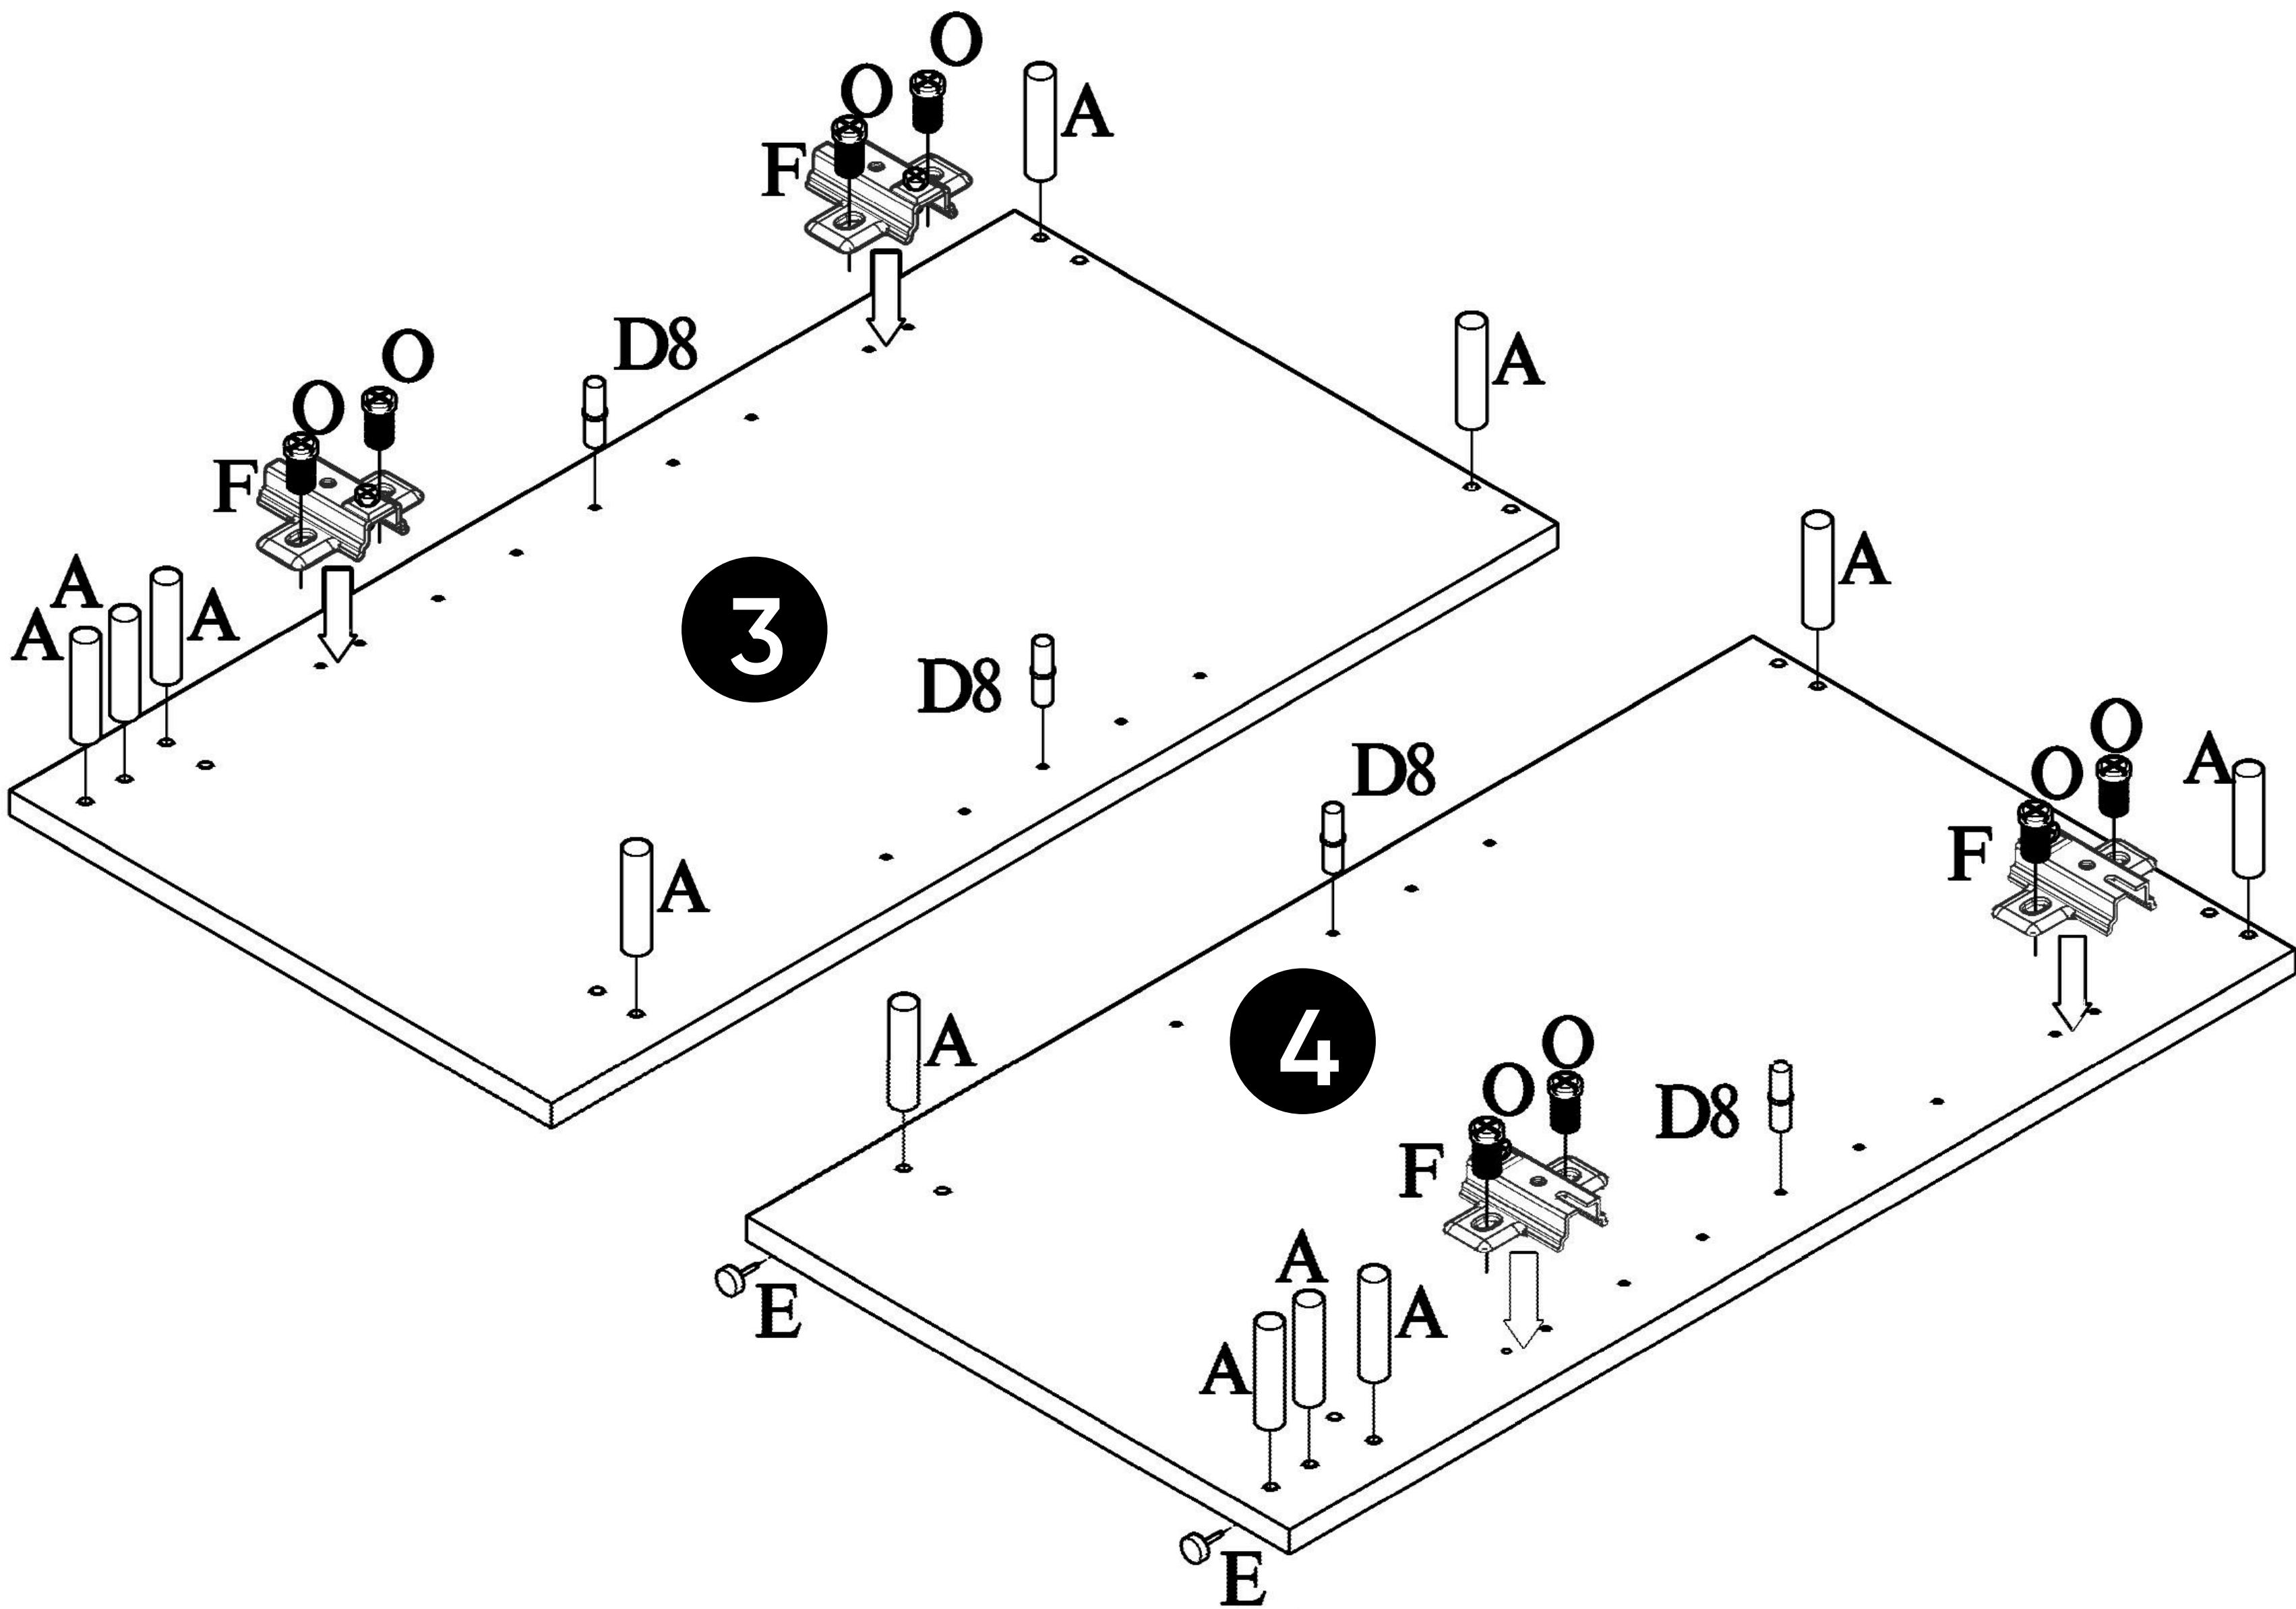


STEP - 2


Q7 x1

S1 x8



C x8

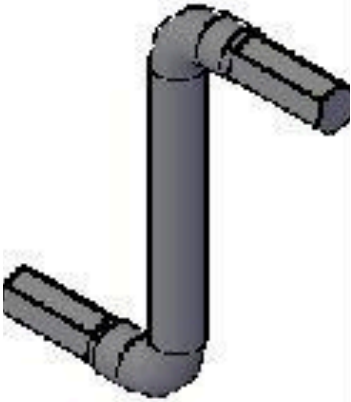


7x50

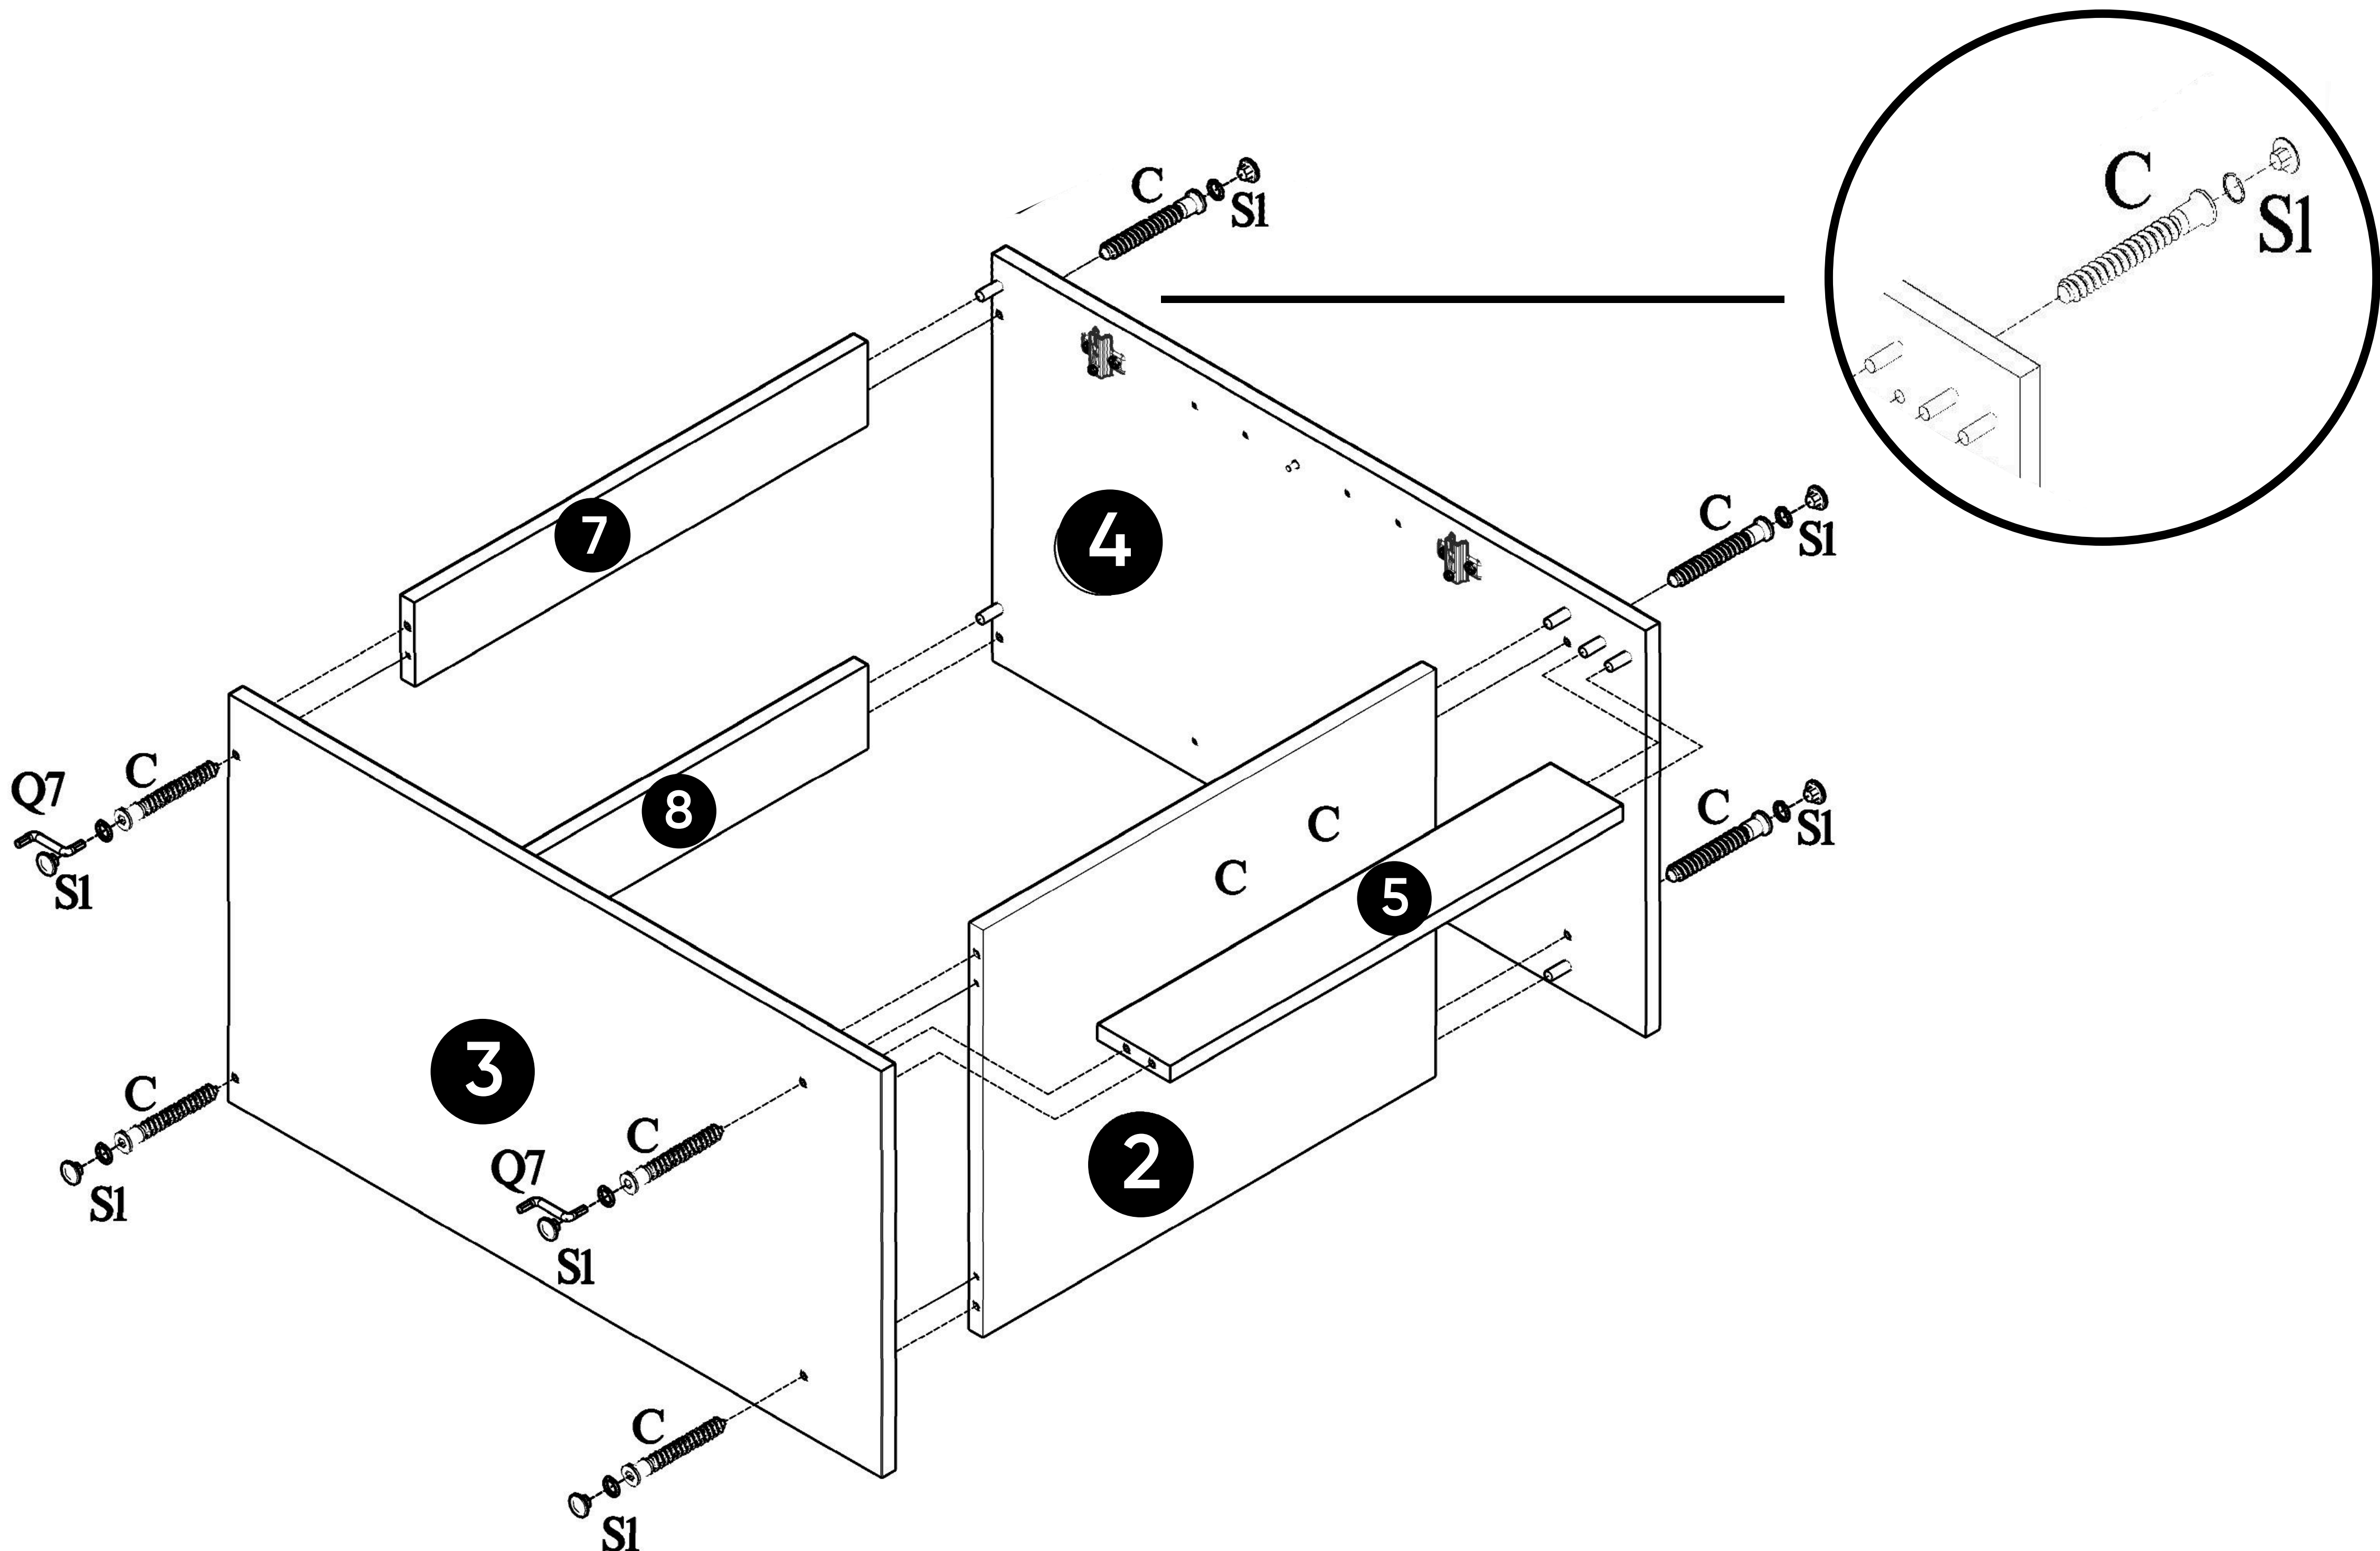



STEP - 3

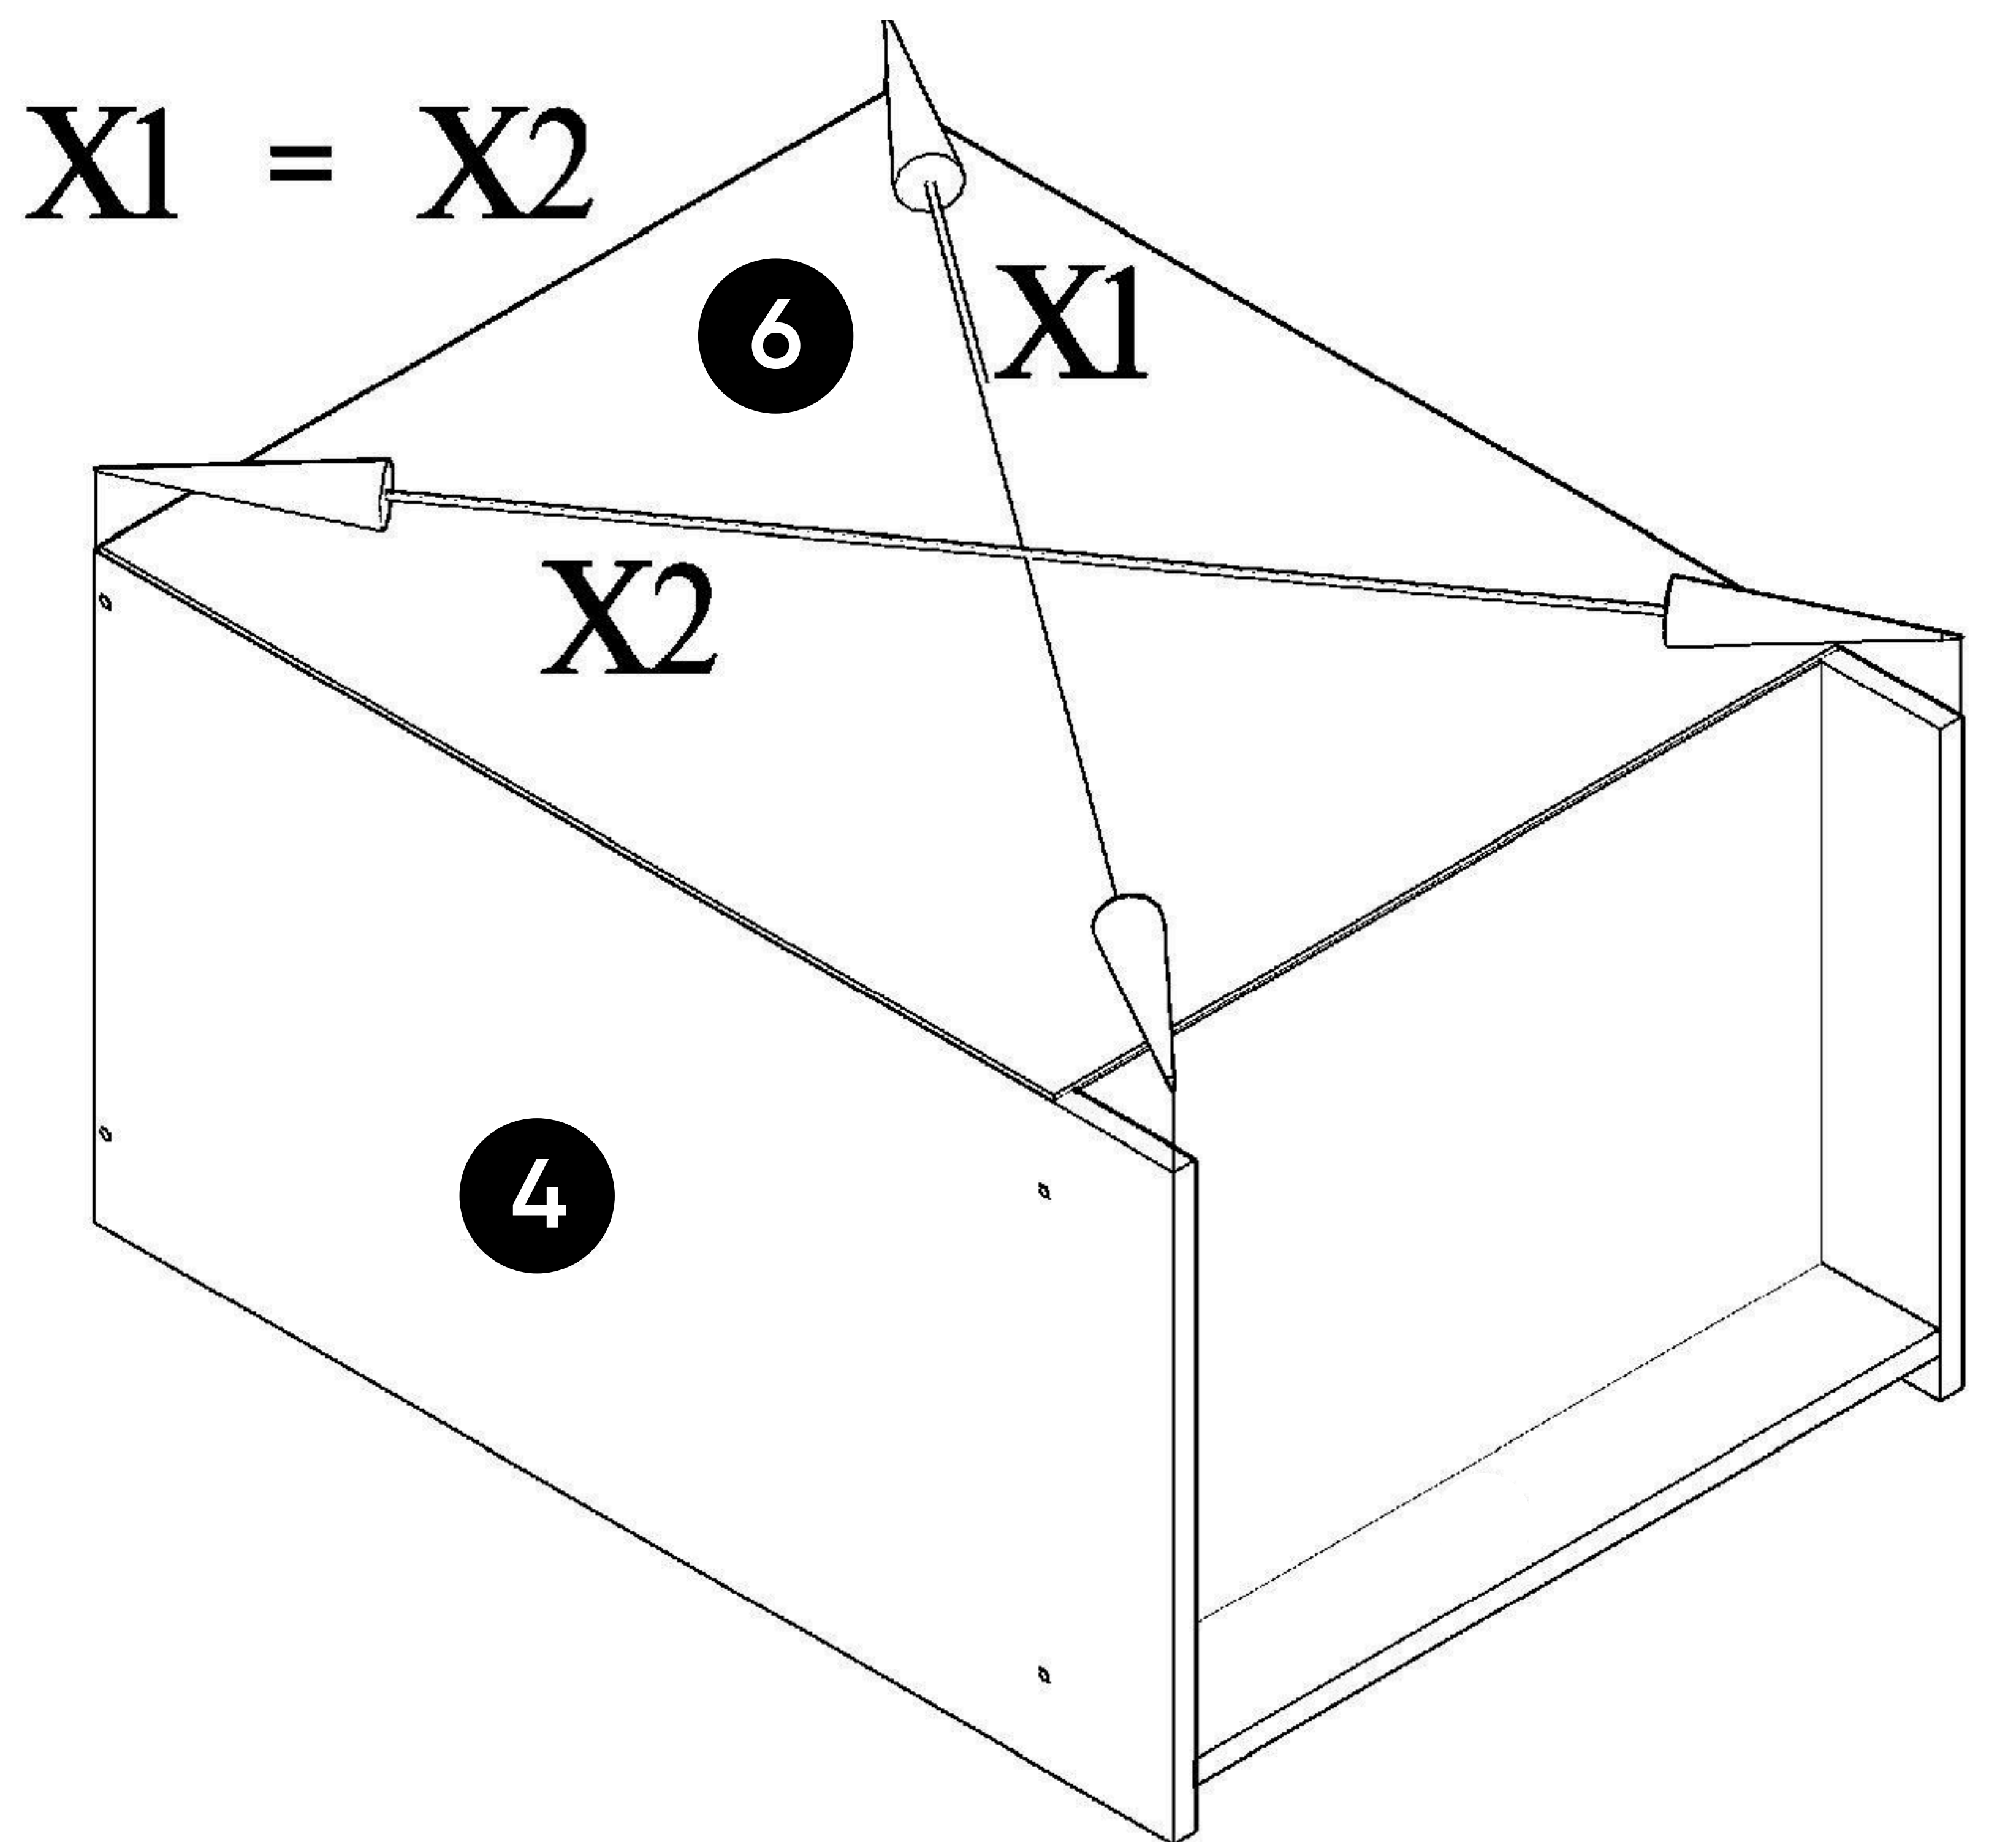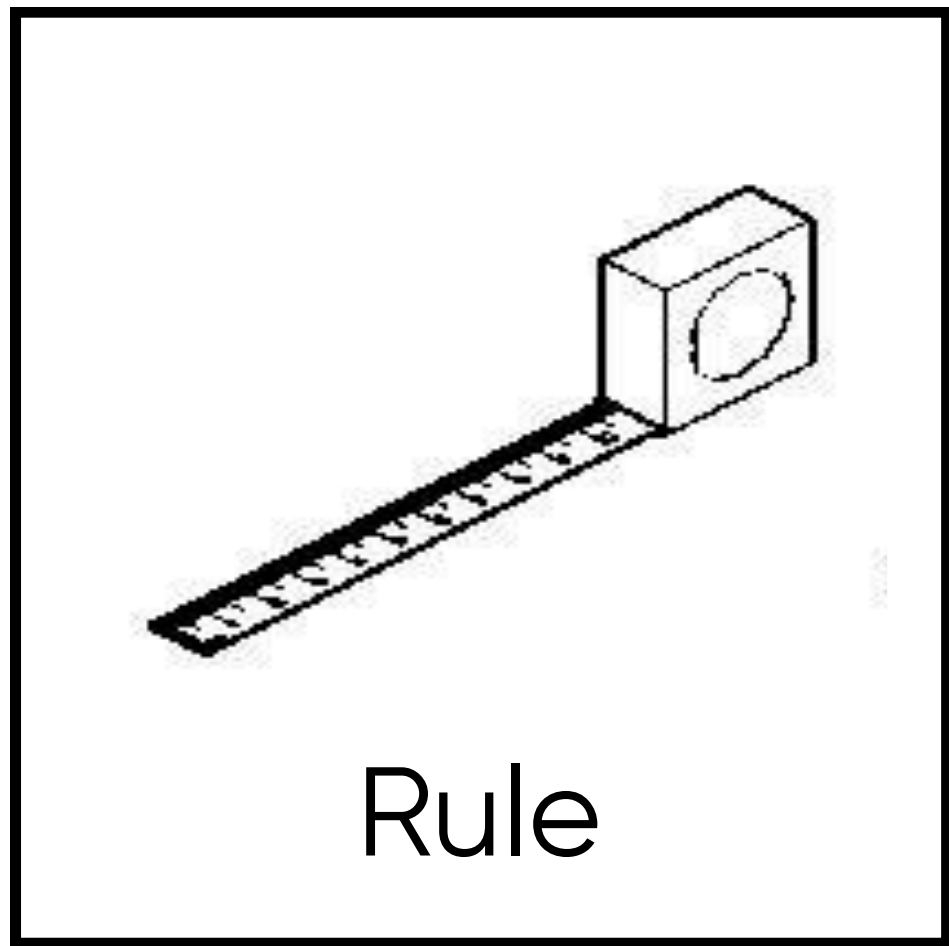



STEP - 4

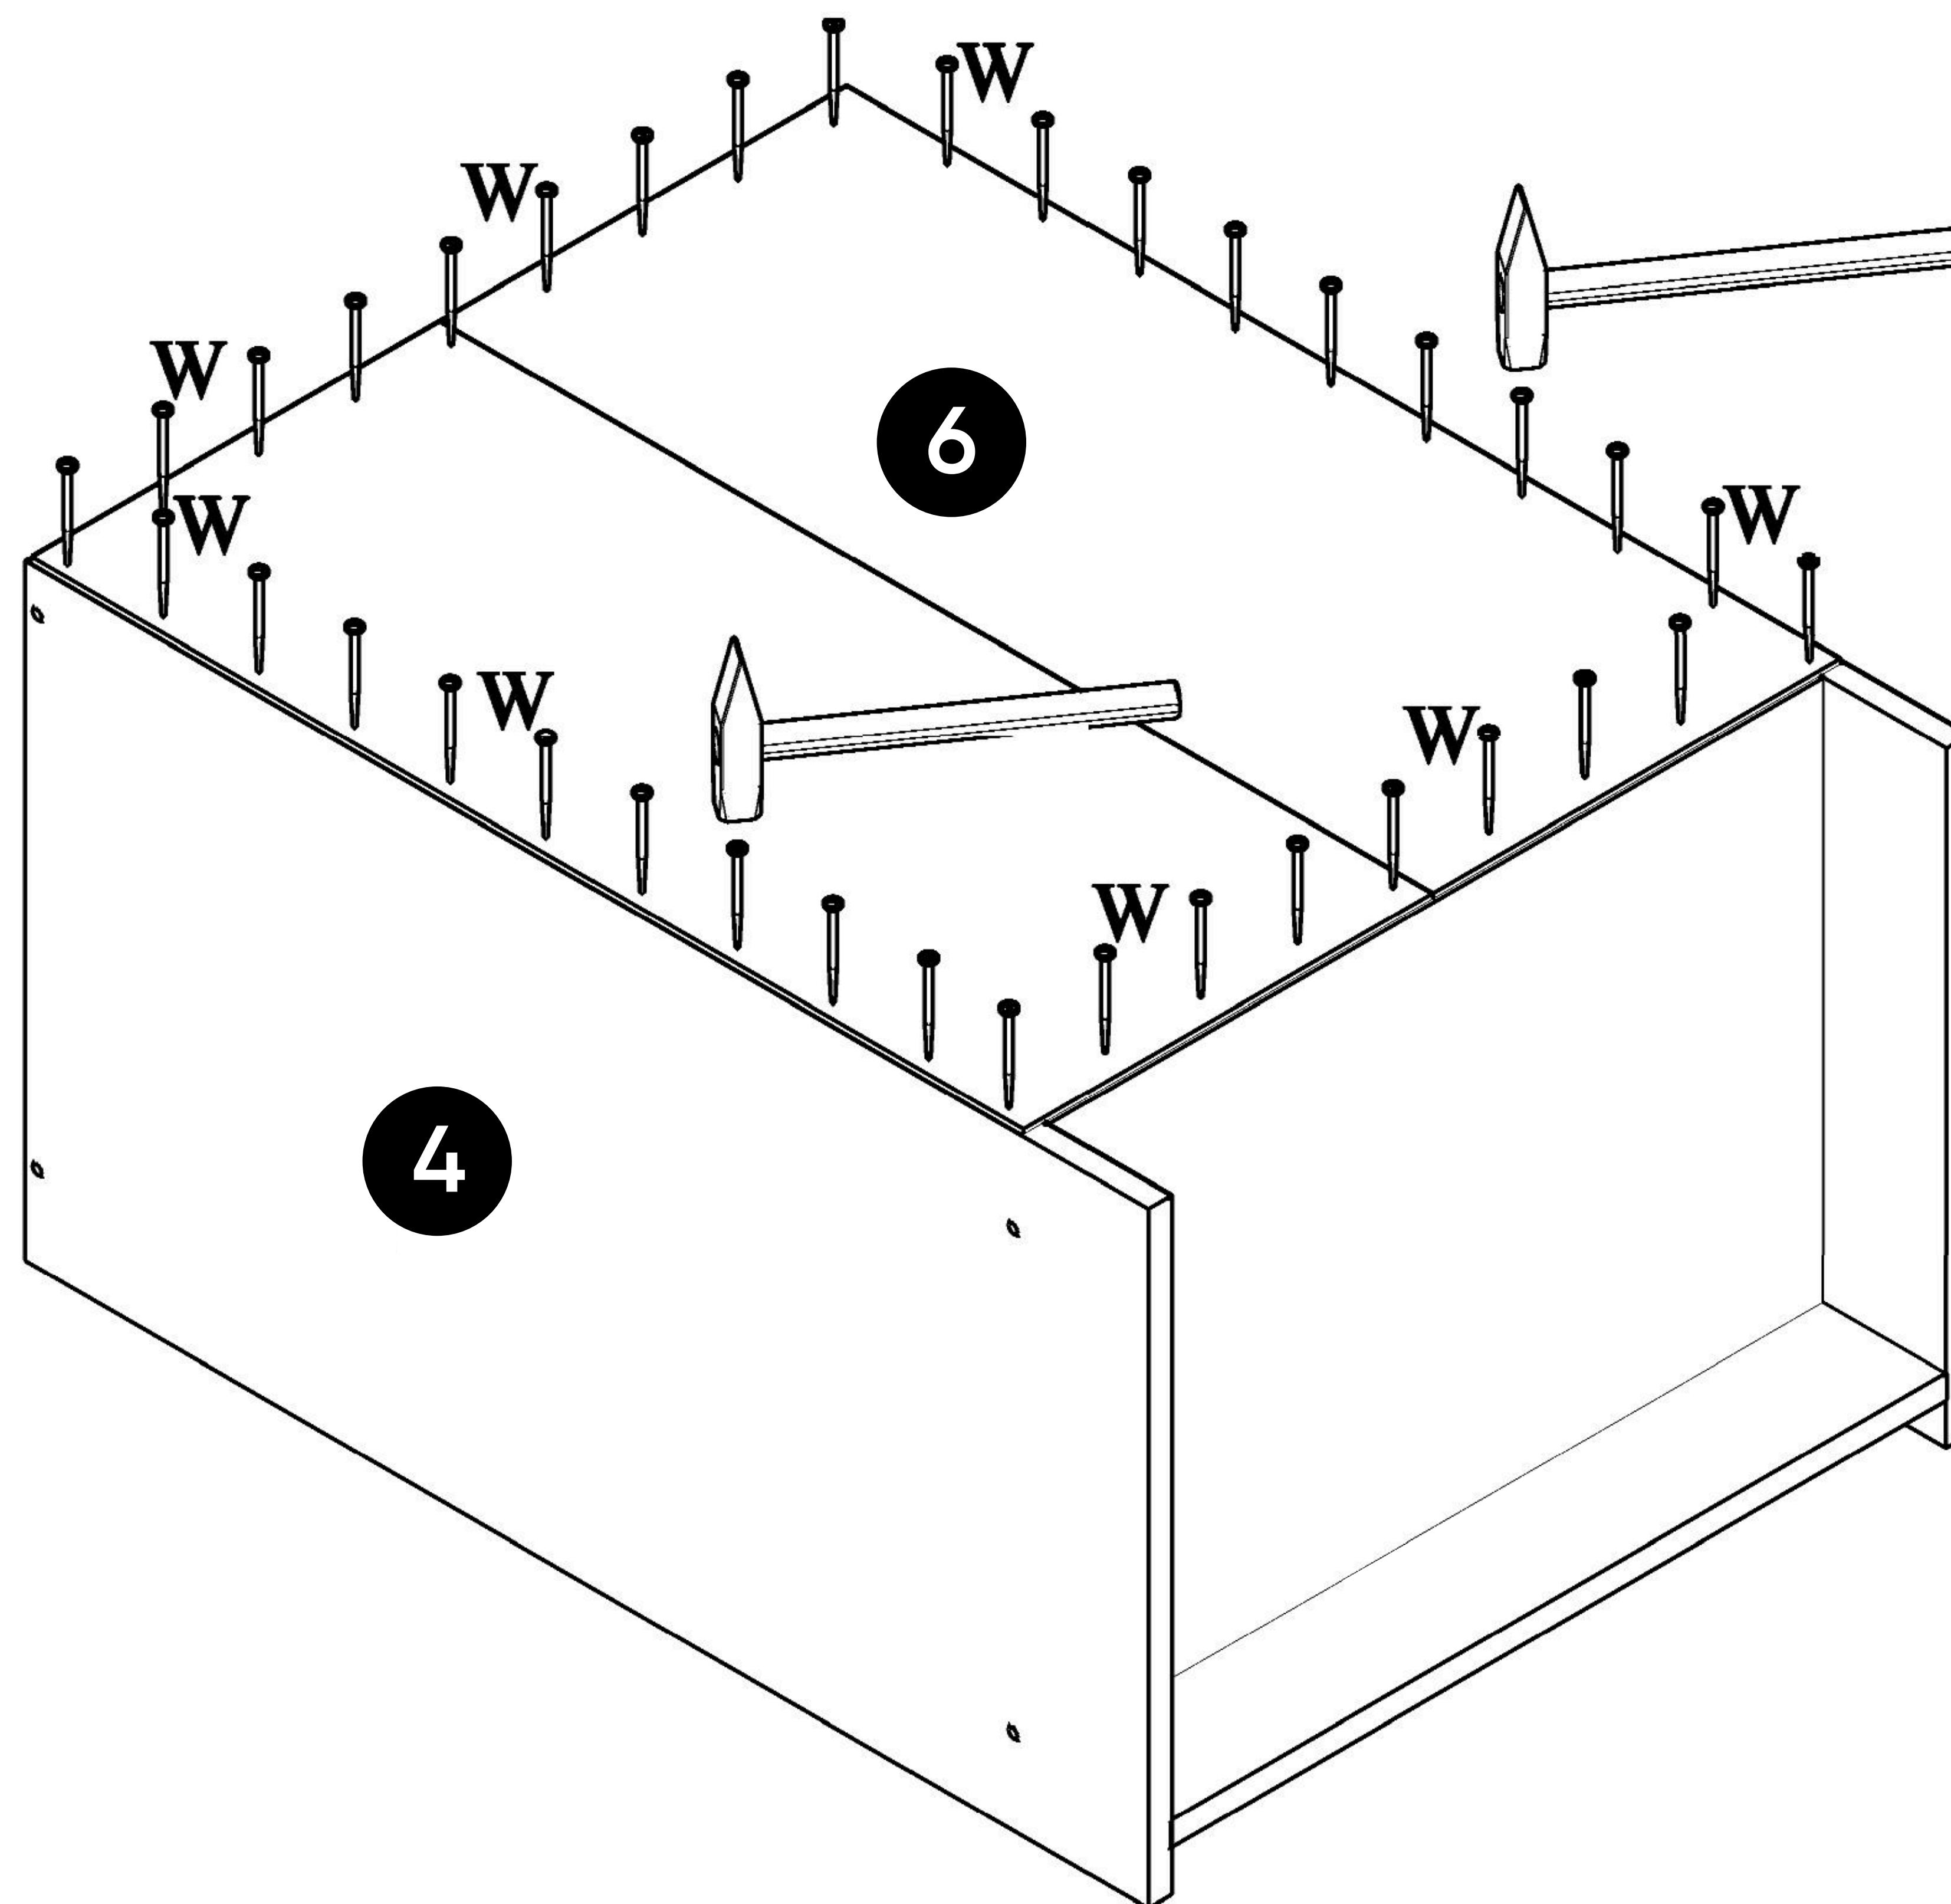

STEP - 5

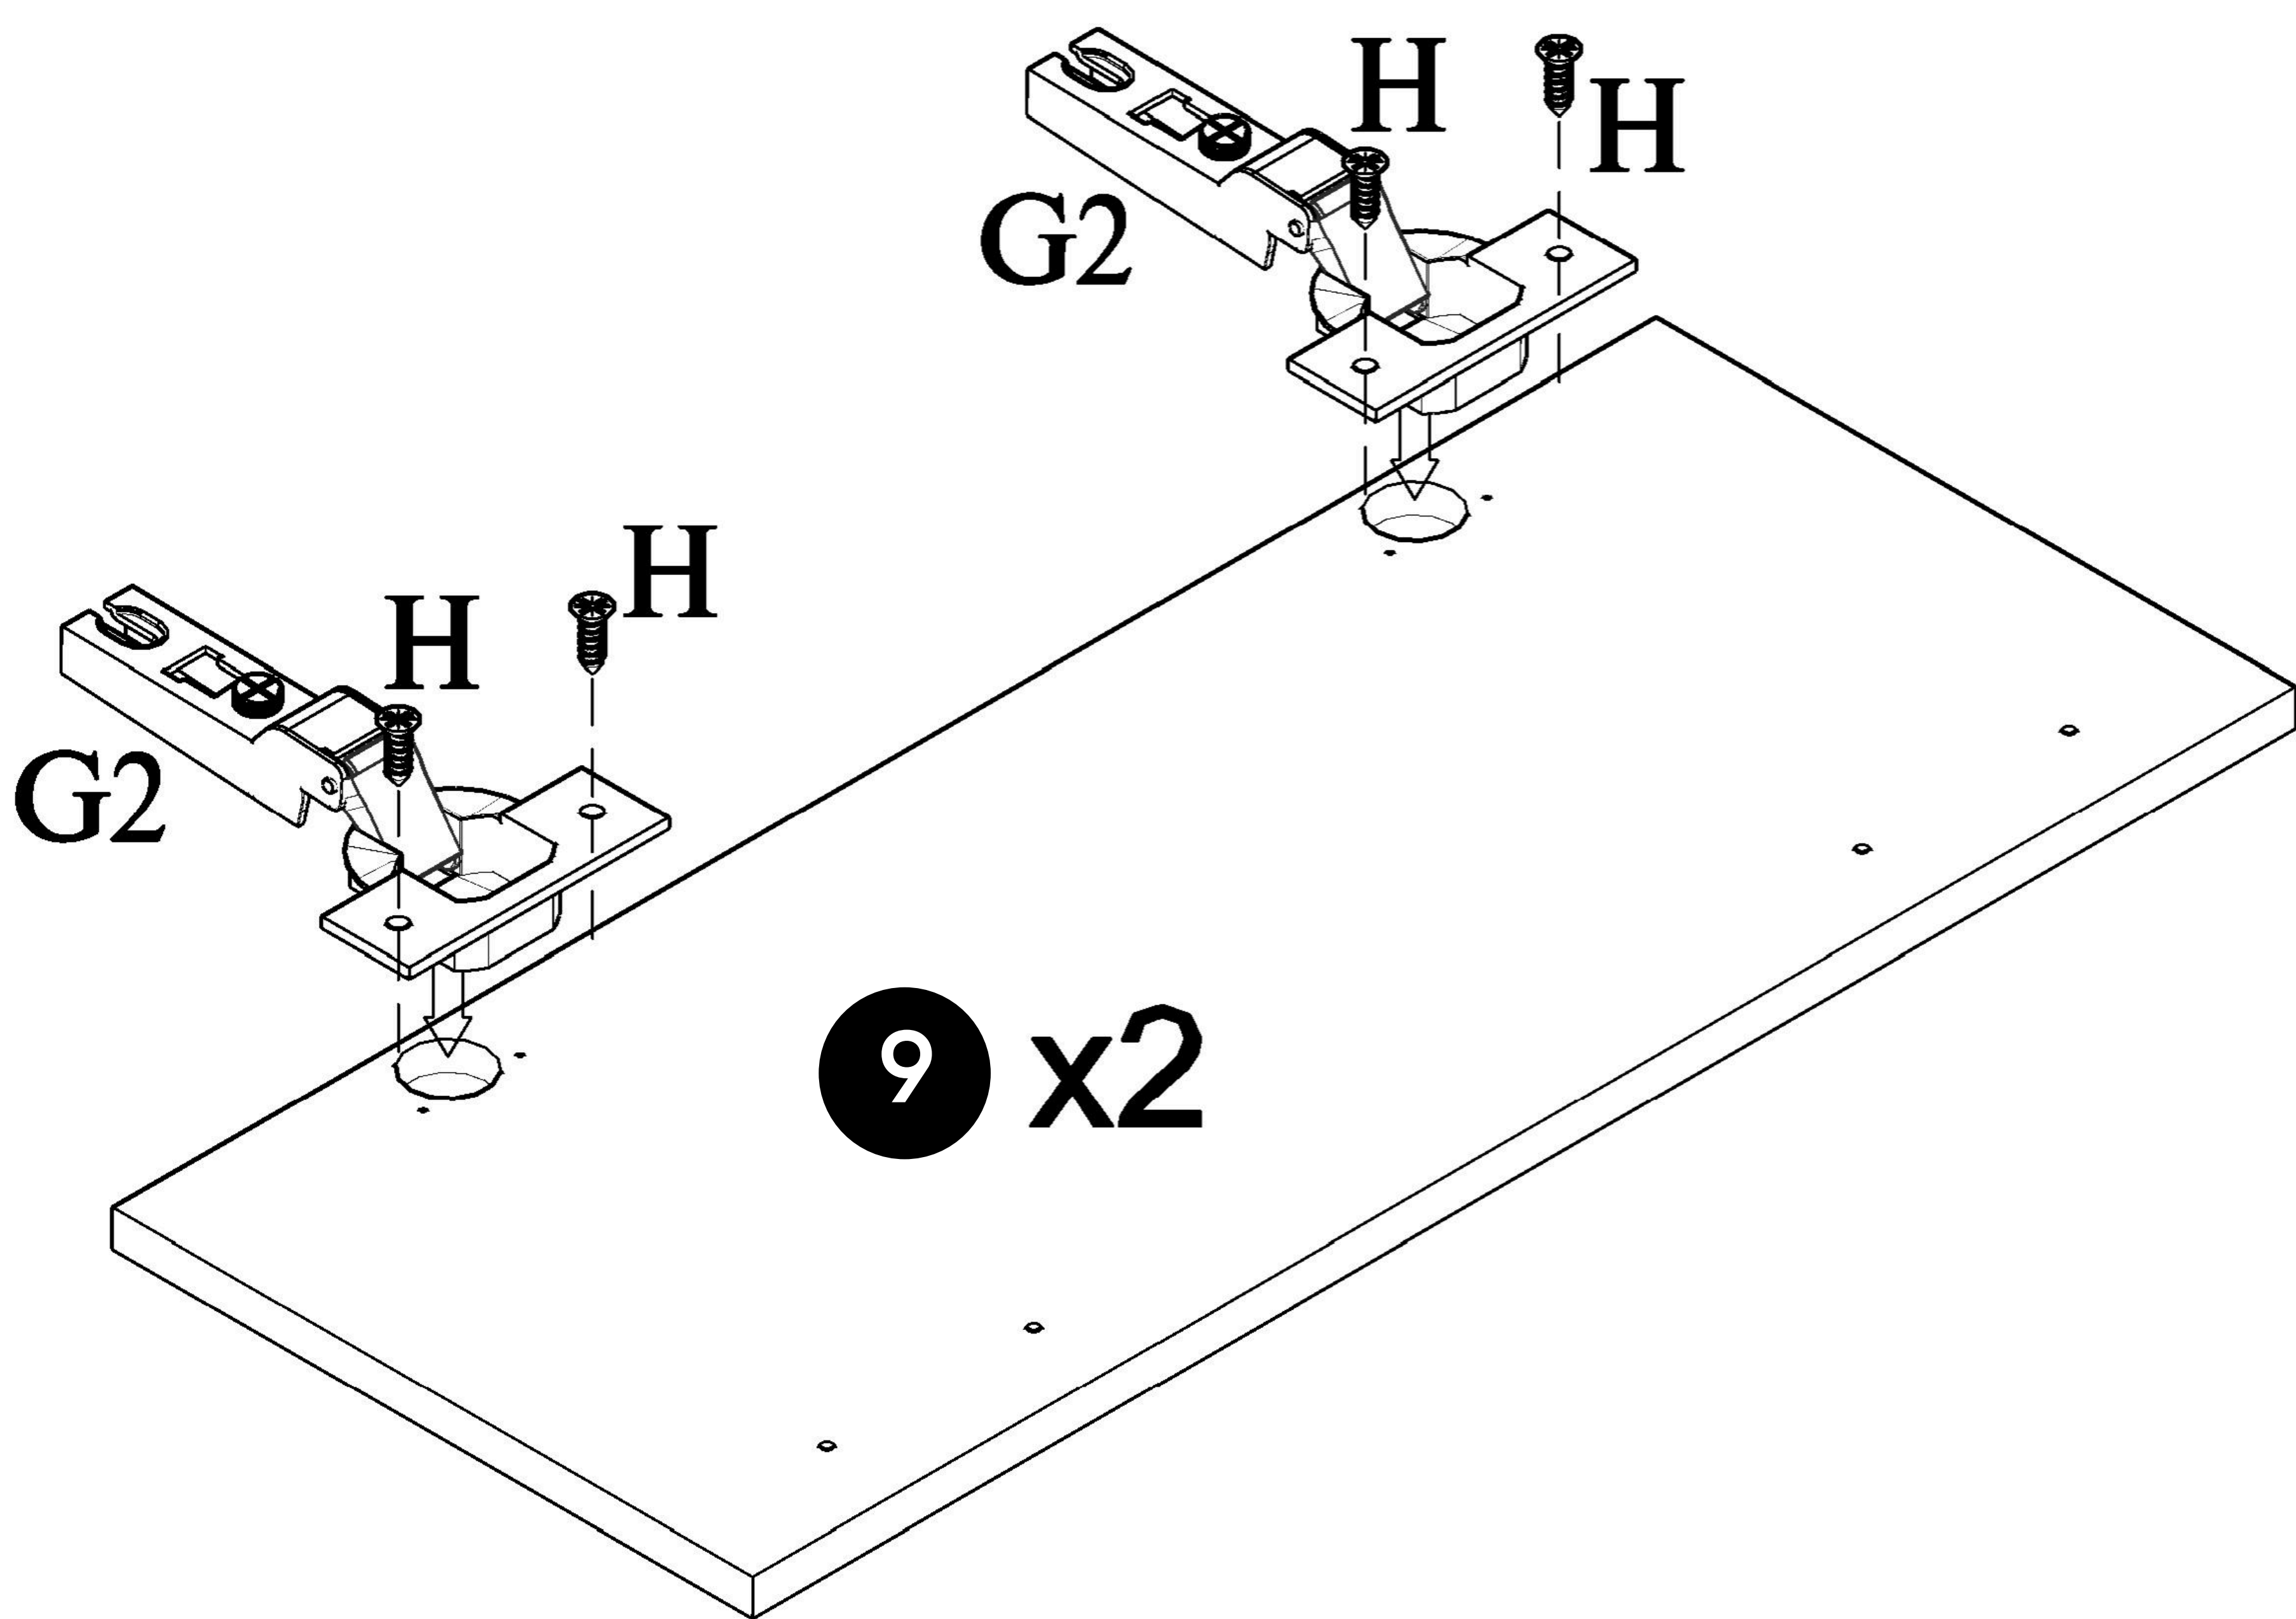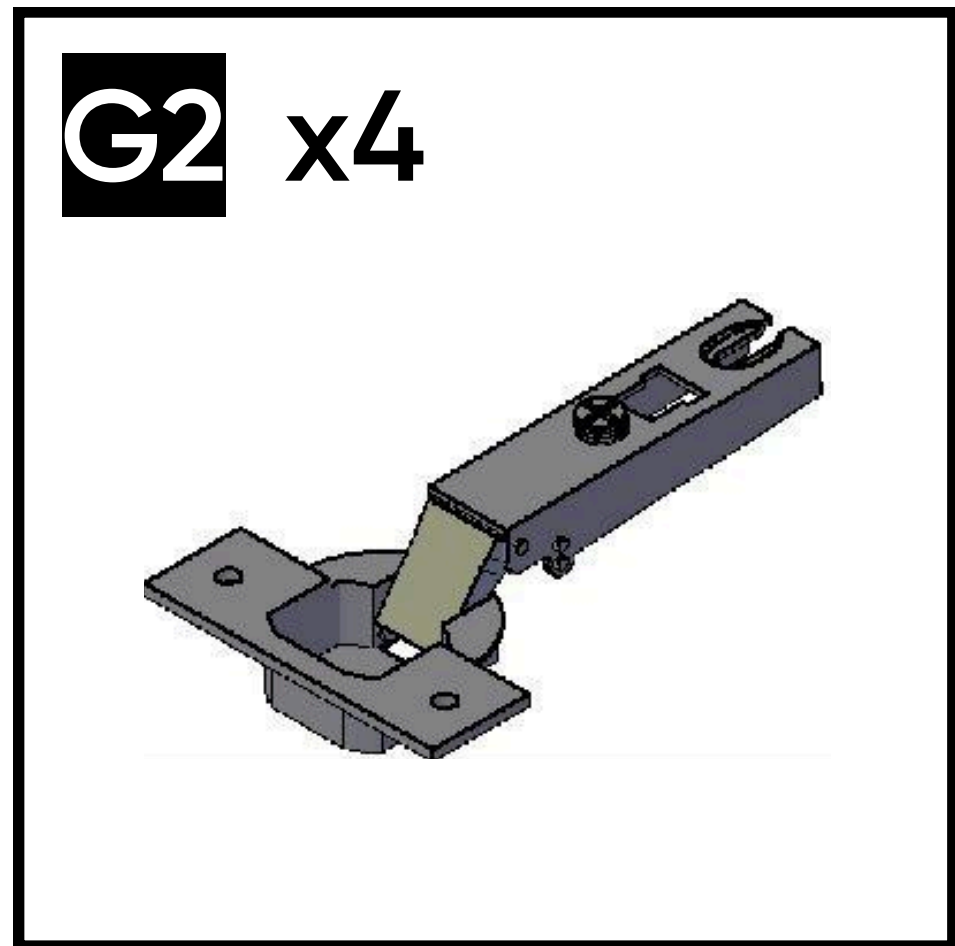


STEP - 6

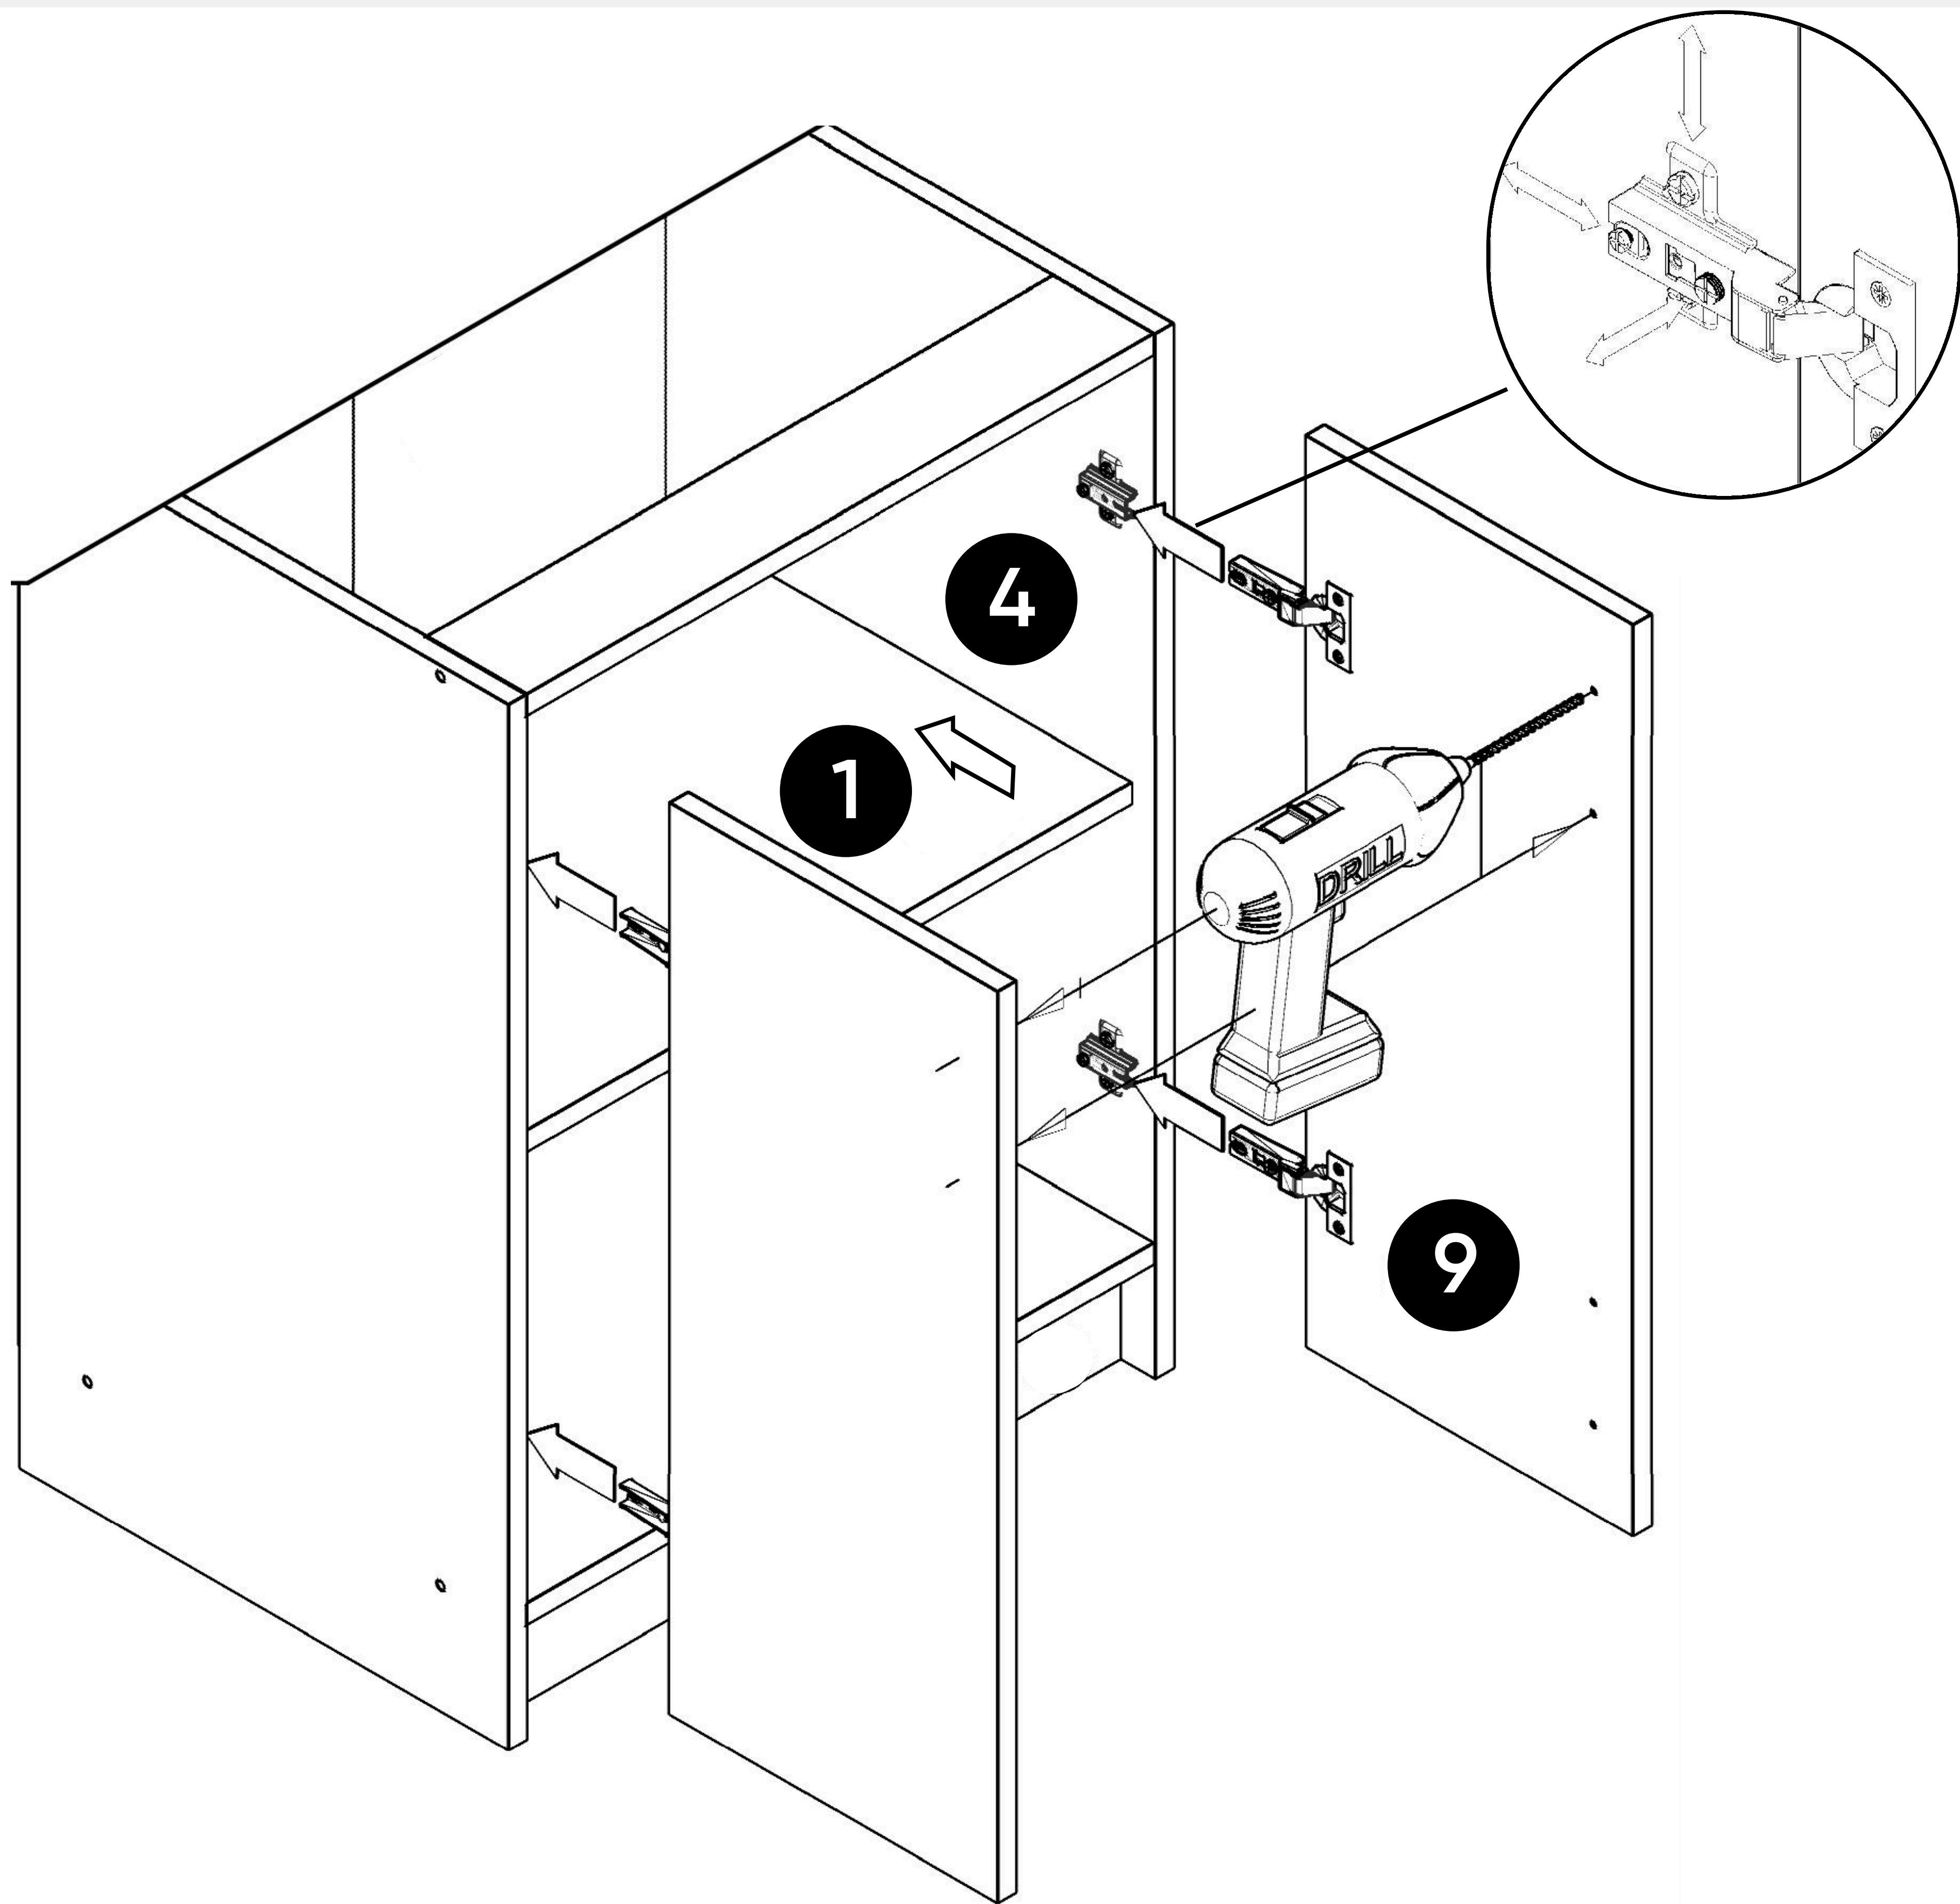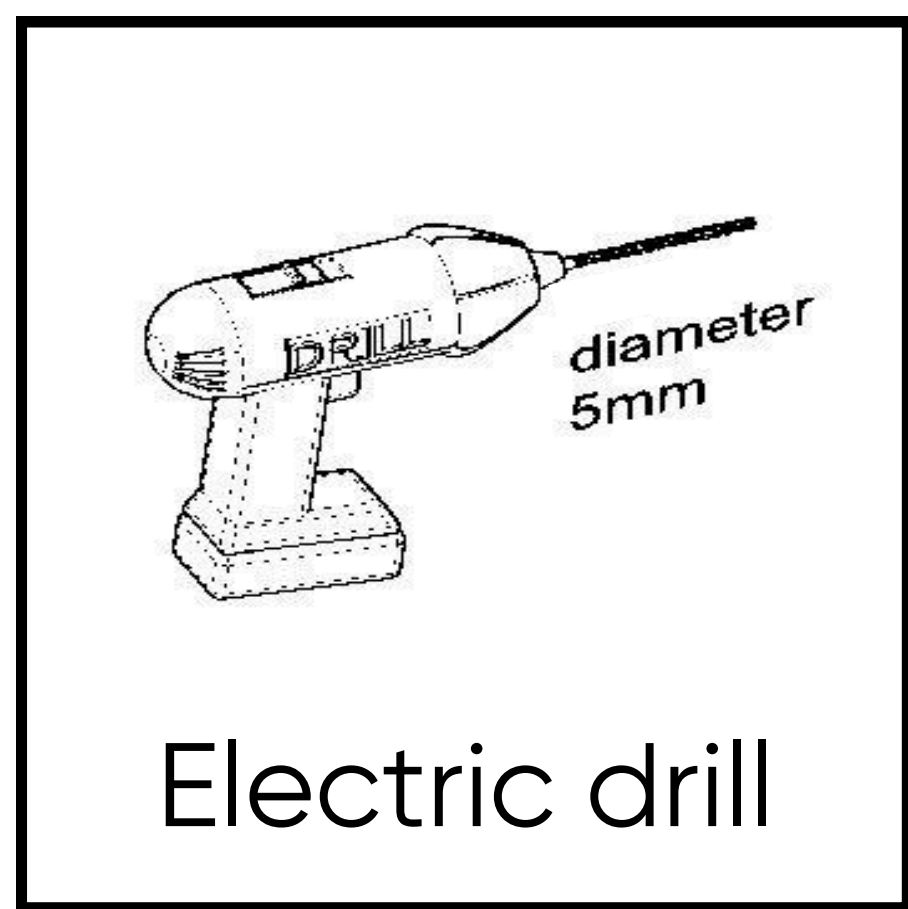

STEP - 7

U7 x2

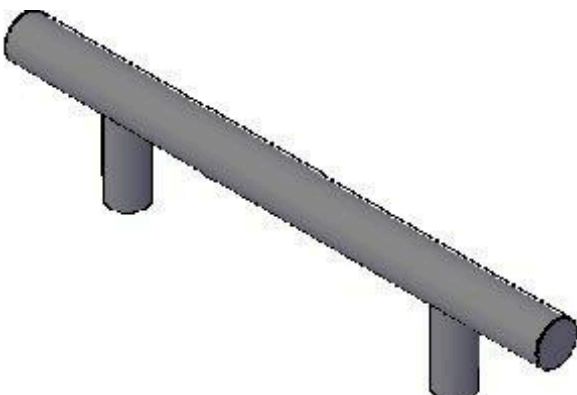


S7 x4



J9 x4



⬇ 3x25

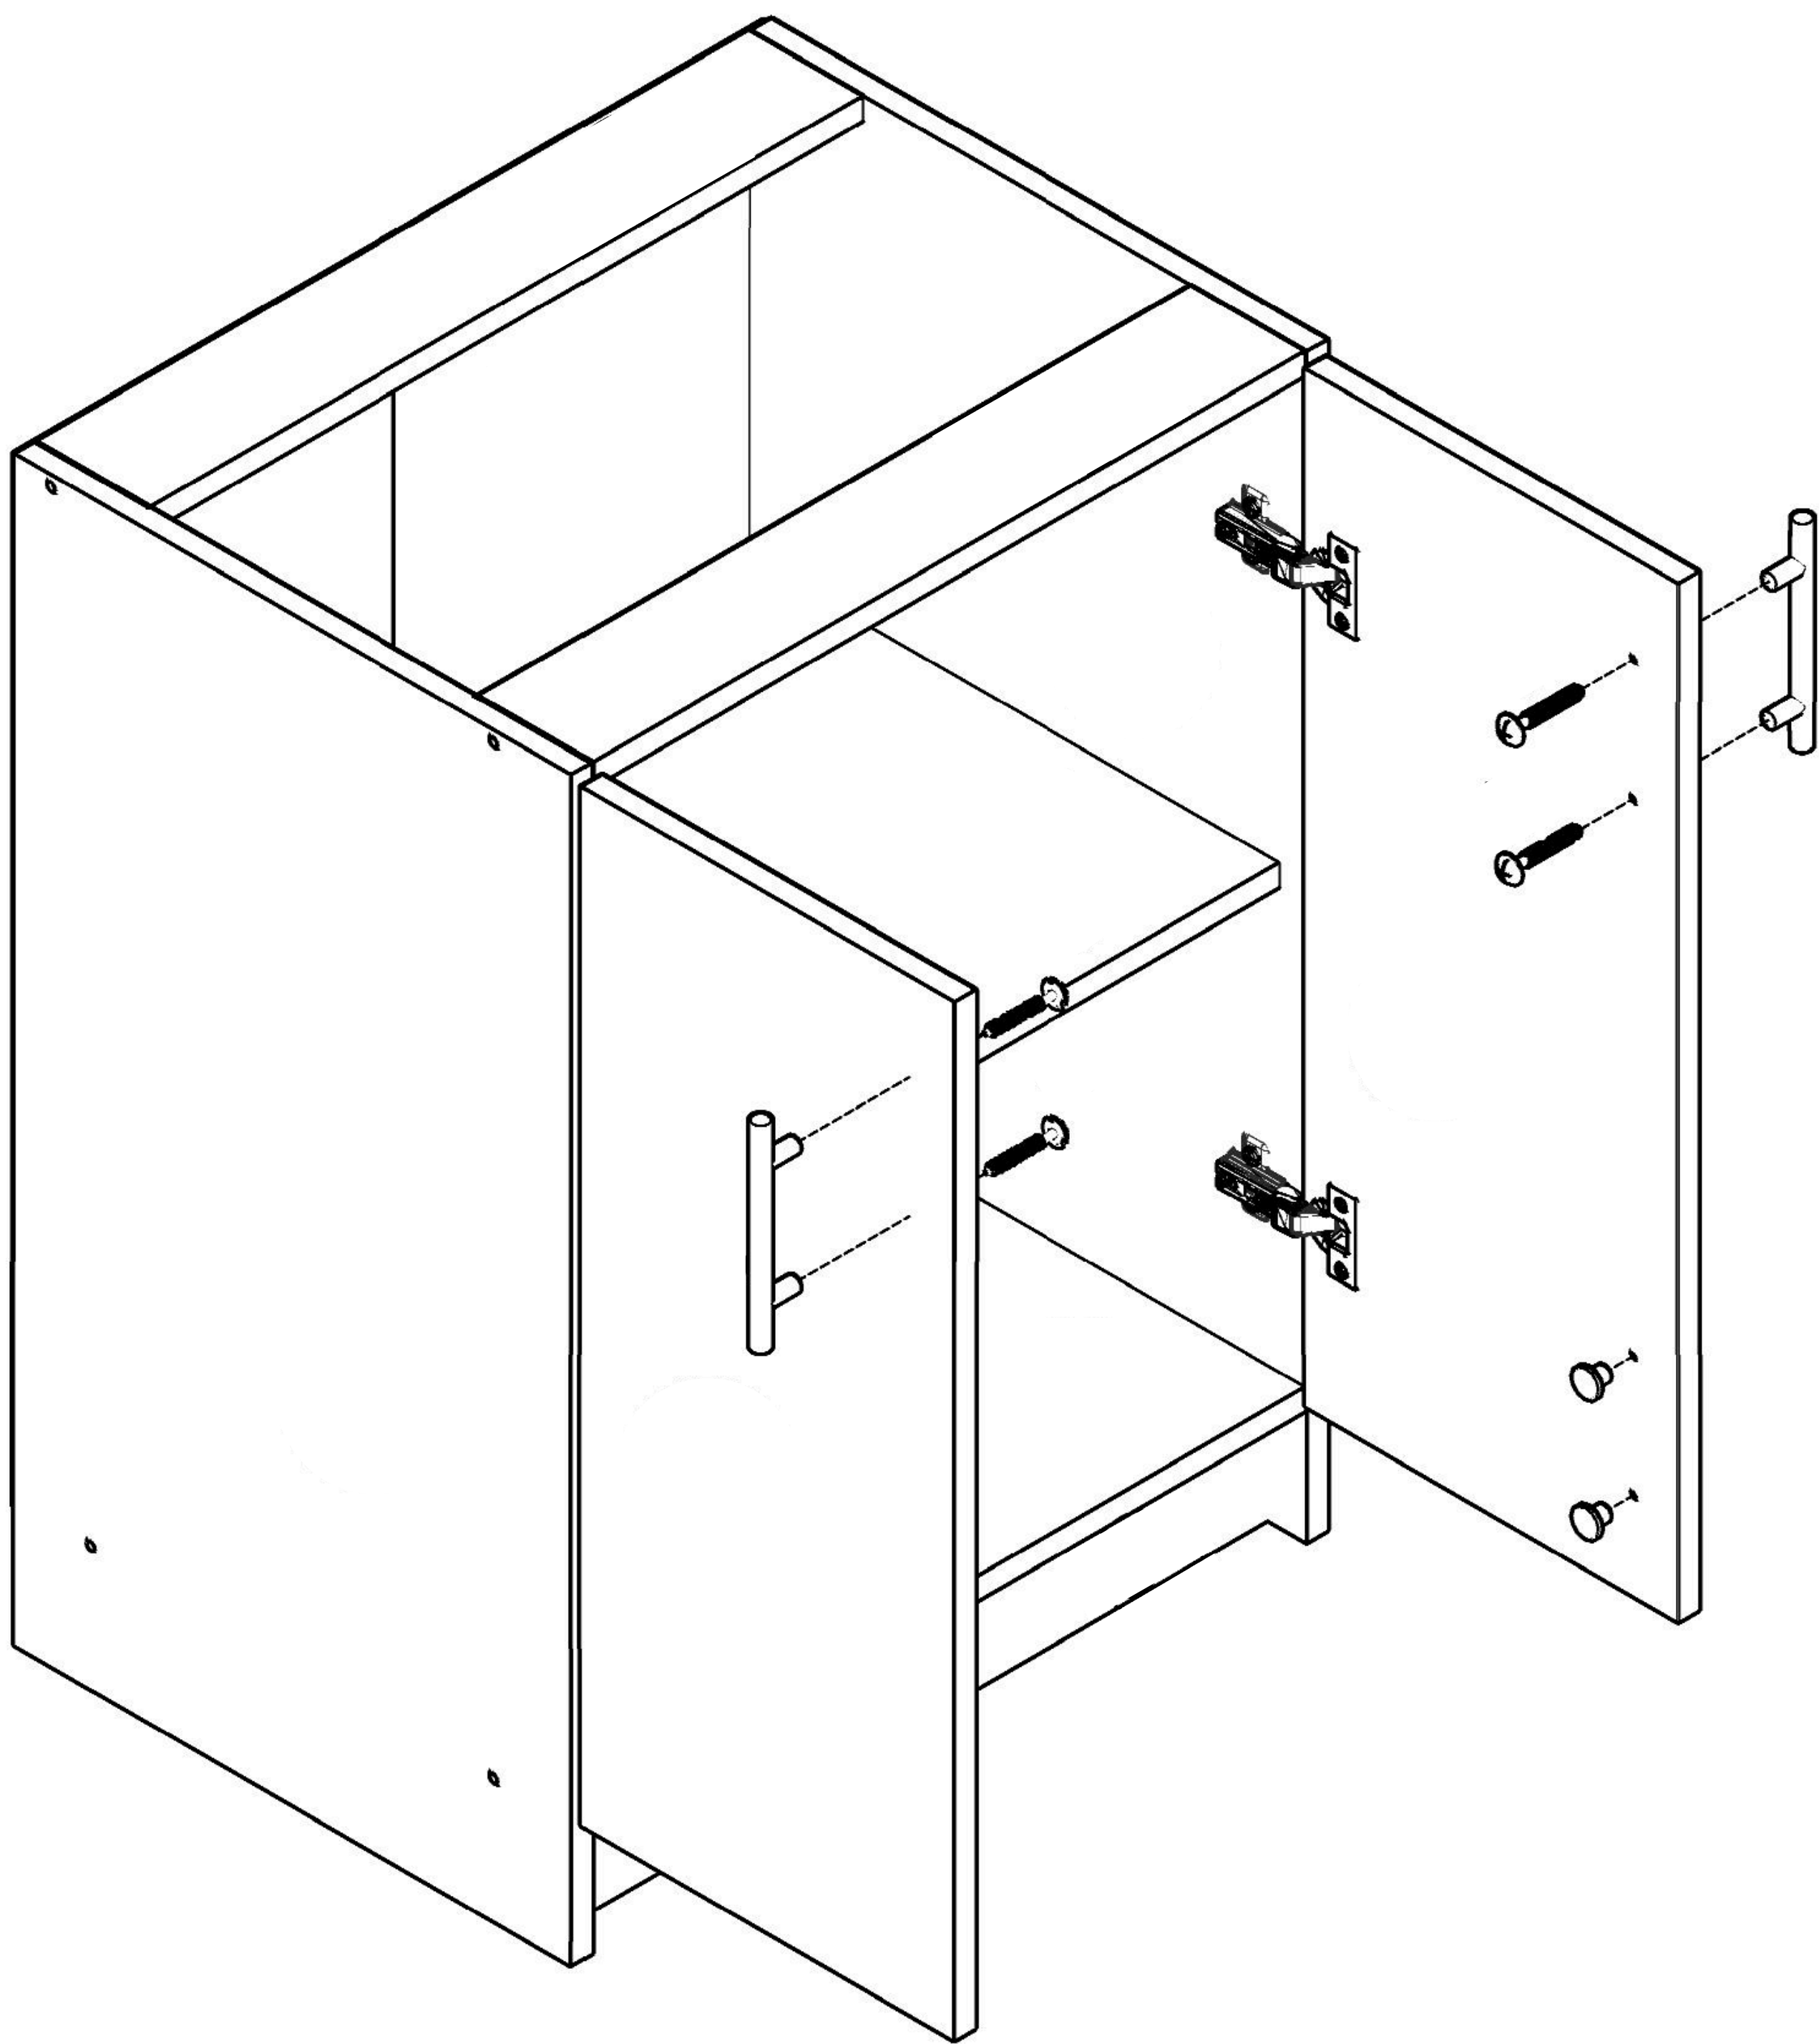

STEP - 8

H5 x4



⬇ 3.5x25



PAY ATTENTION:
WORKTOP IS OPTIONAL
(MIGHT NOT BE INCLUDED)

