



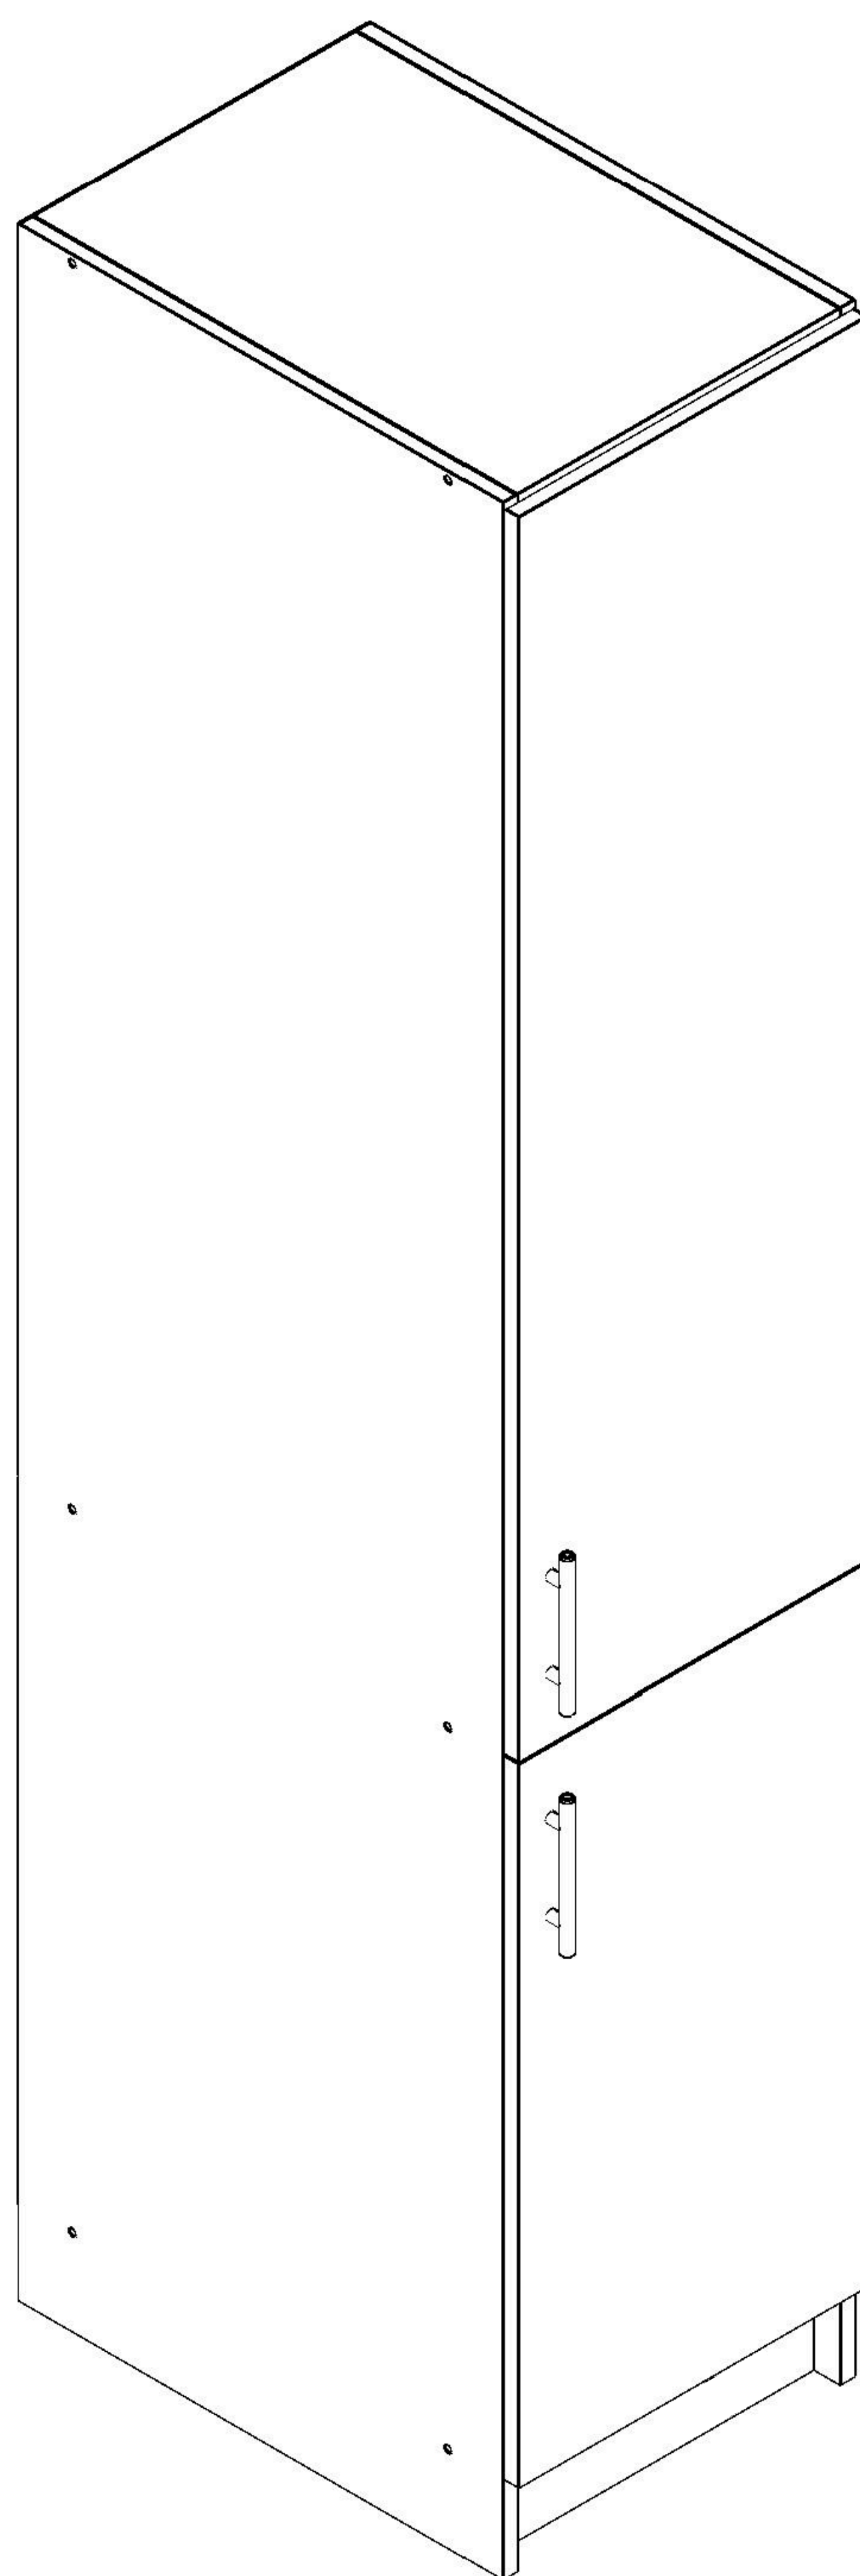


ASSEMBLY INSTRUCTIONS


KITCHEN BASE TALL LADDER UNIT 400MM MODEL T400

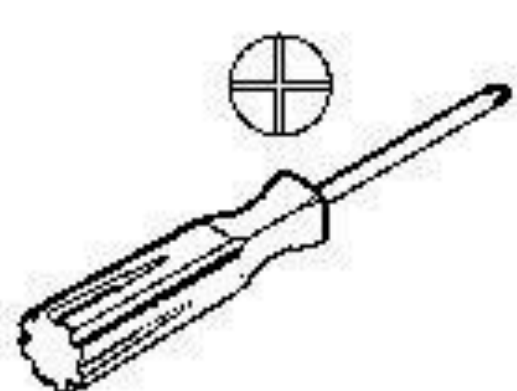


Cross-head
screwdriver

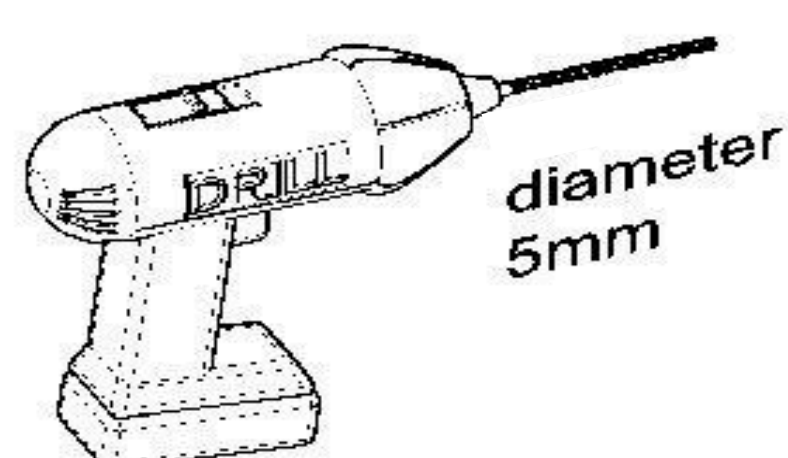

Electric
drill

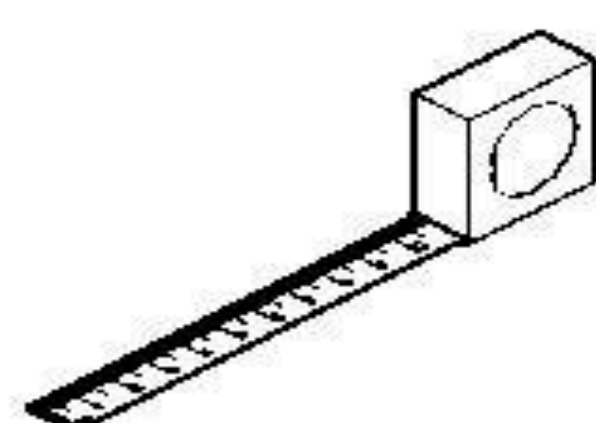

Rule

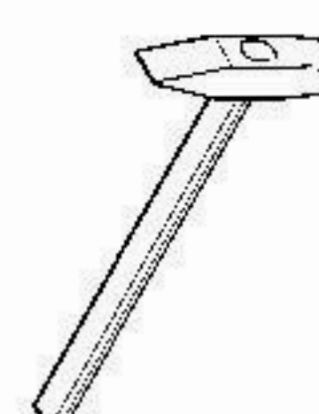

Hammer










**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346








COMPONENTS - PANELS

Please check you have all the panels listed below
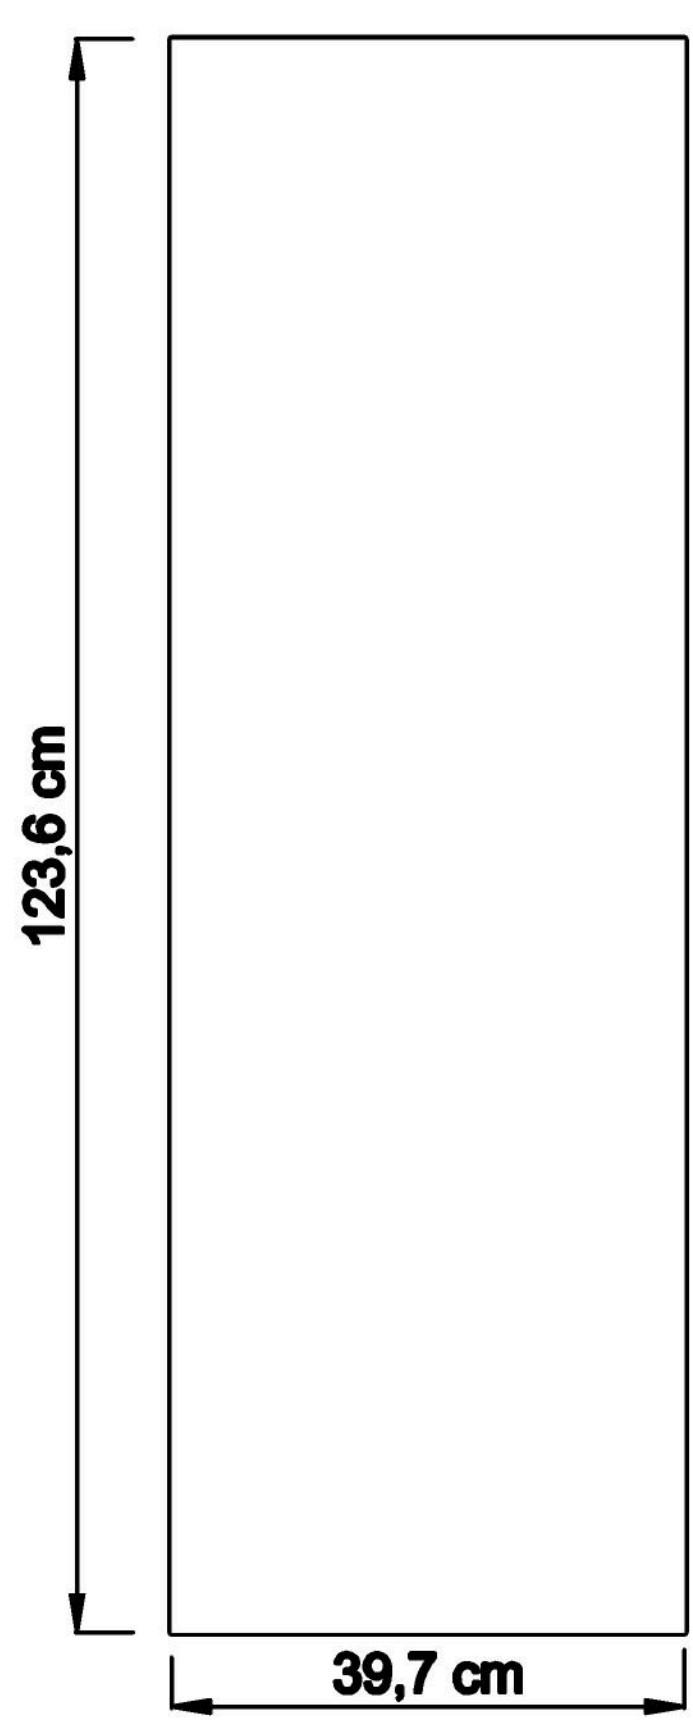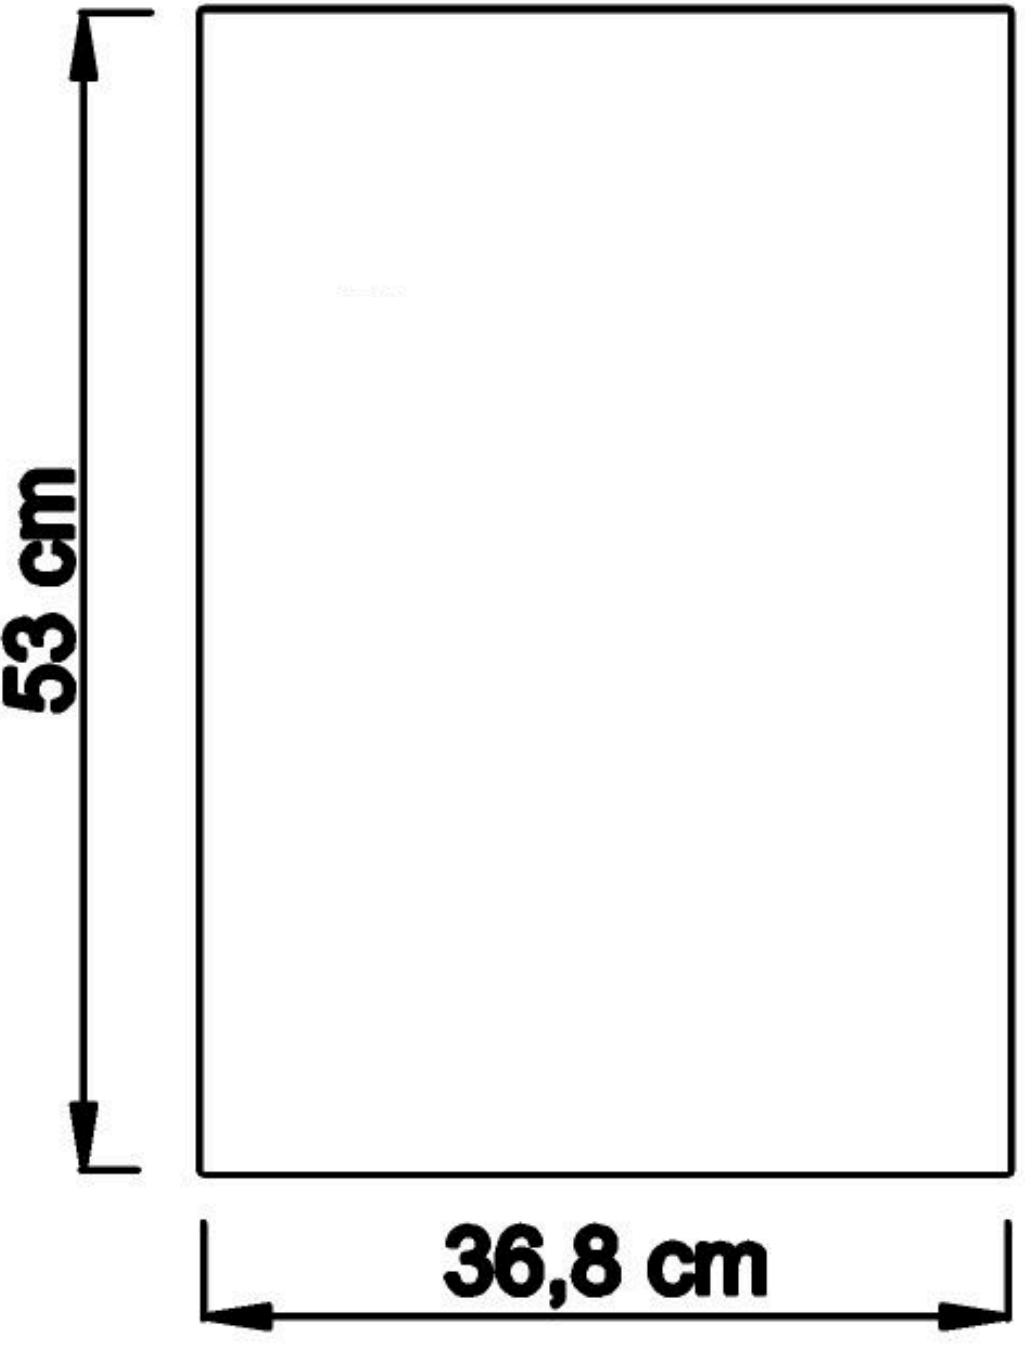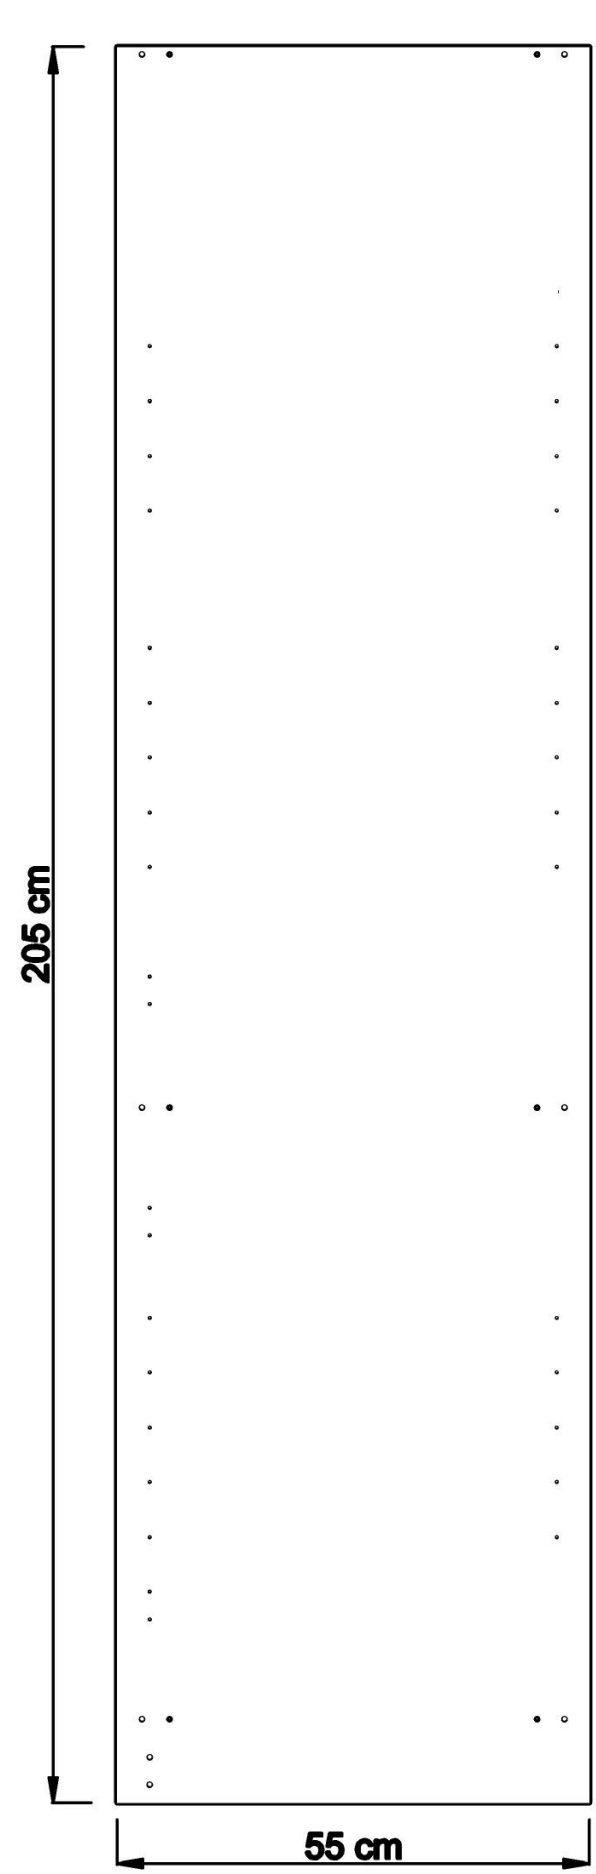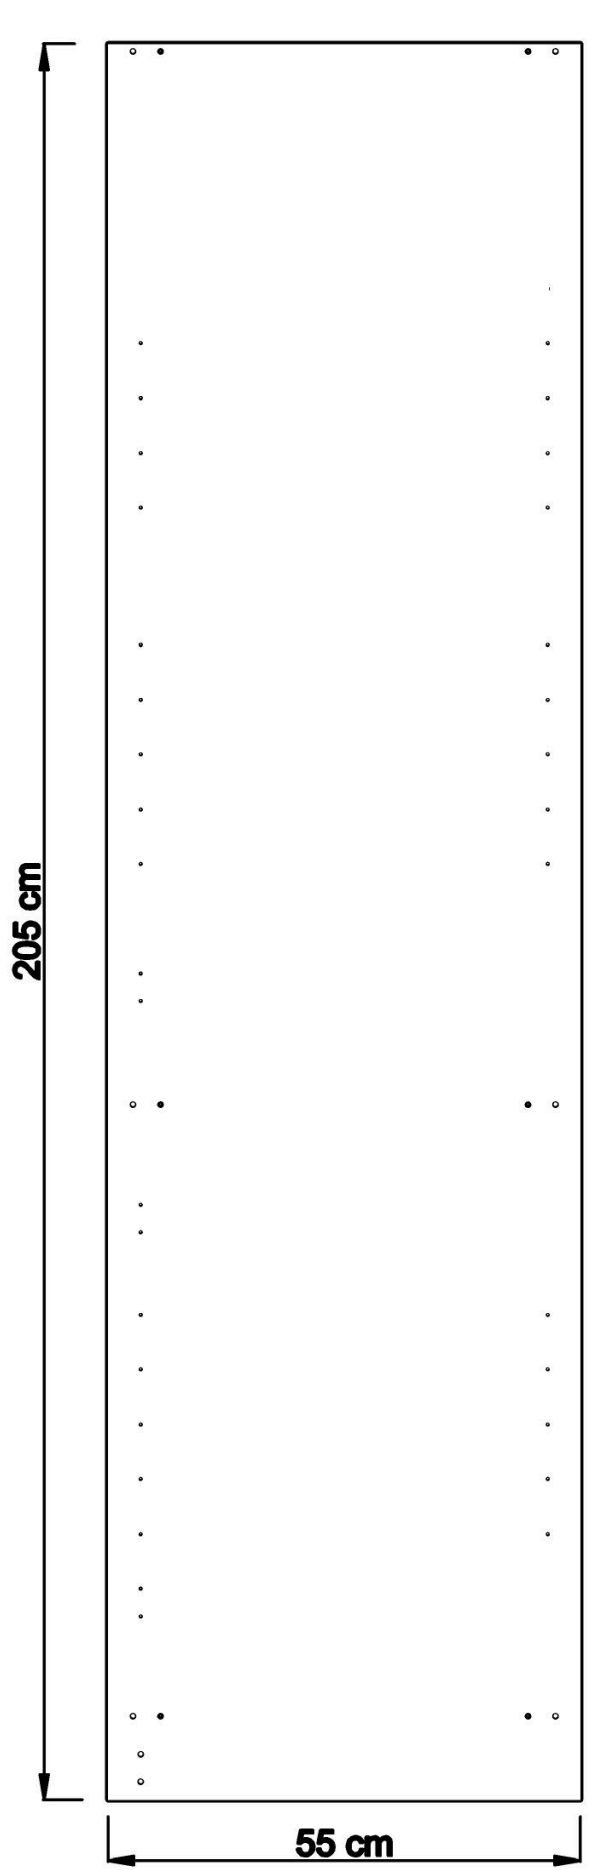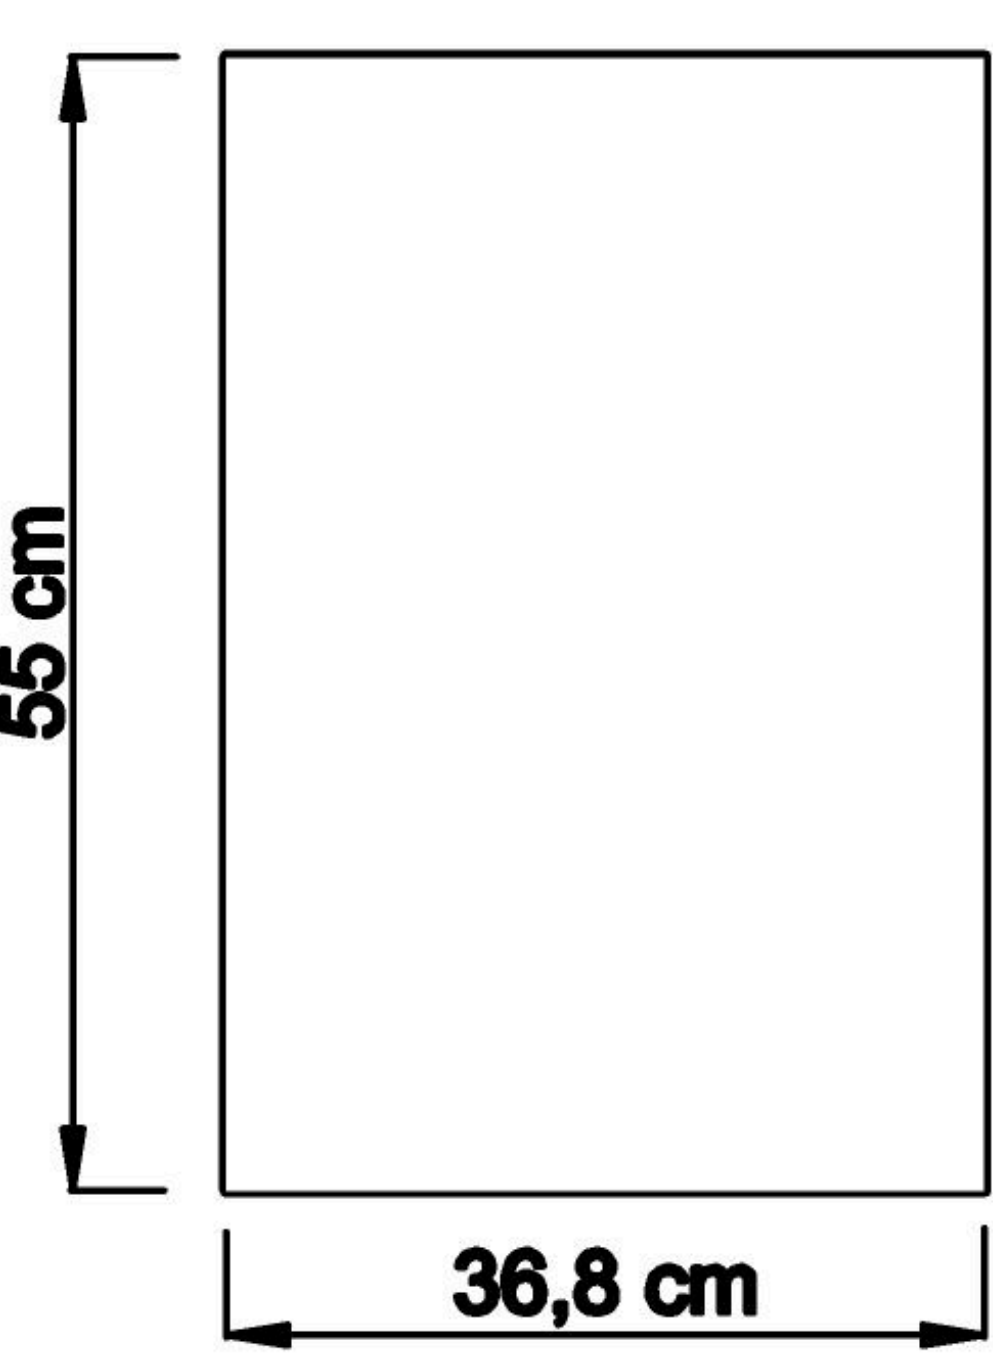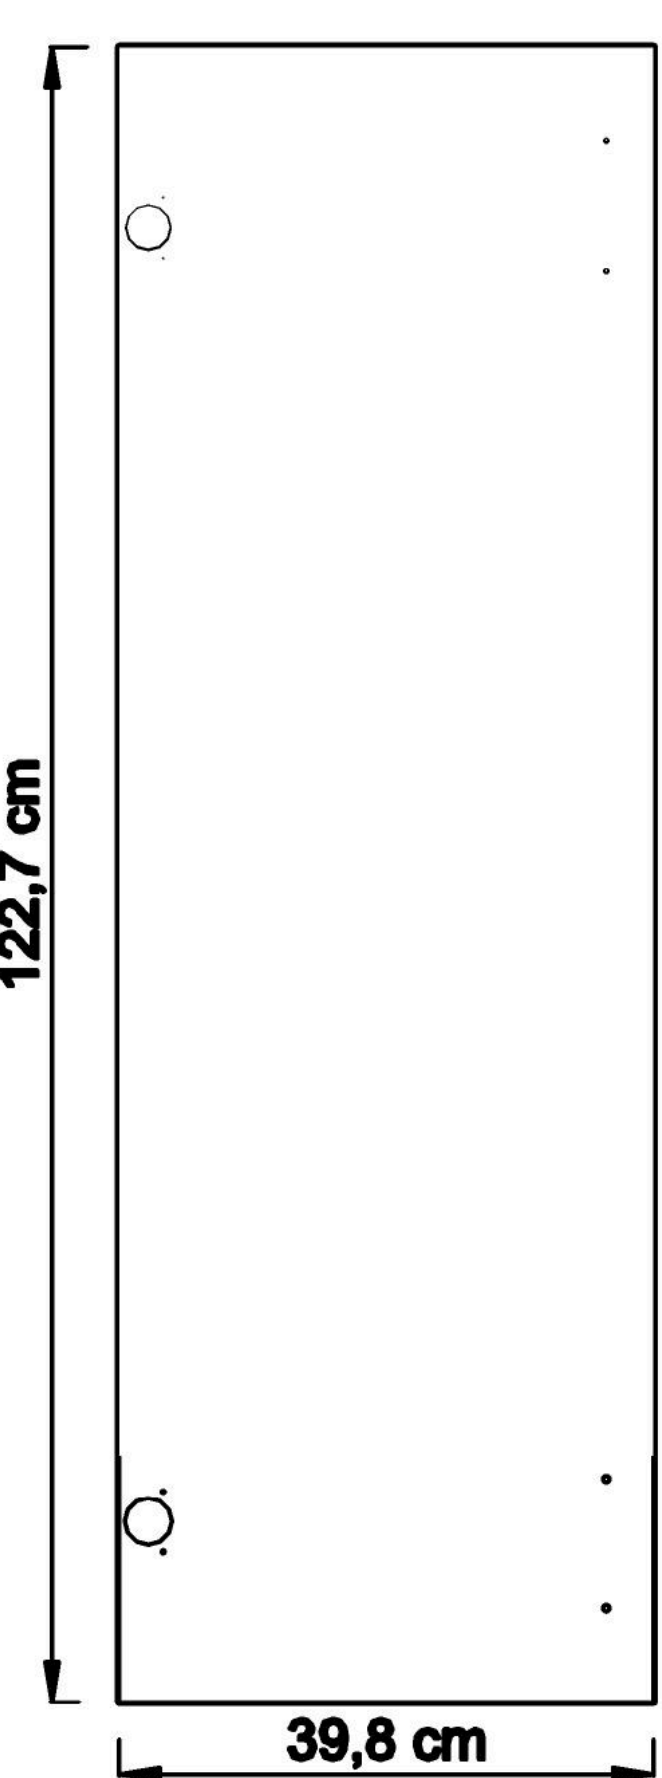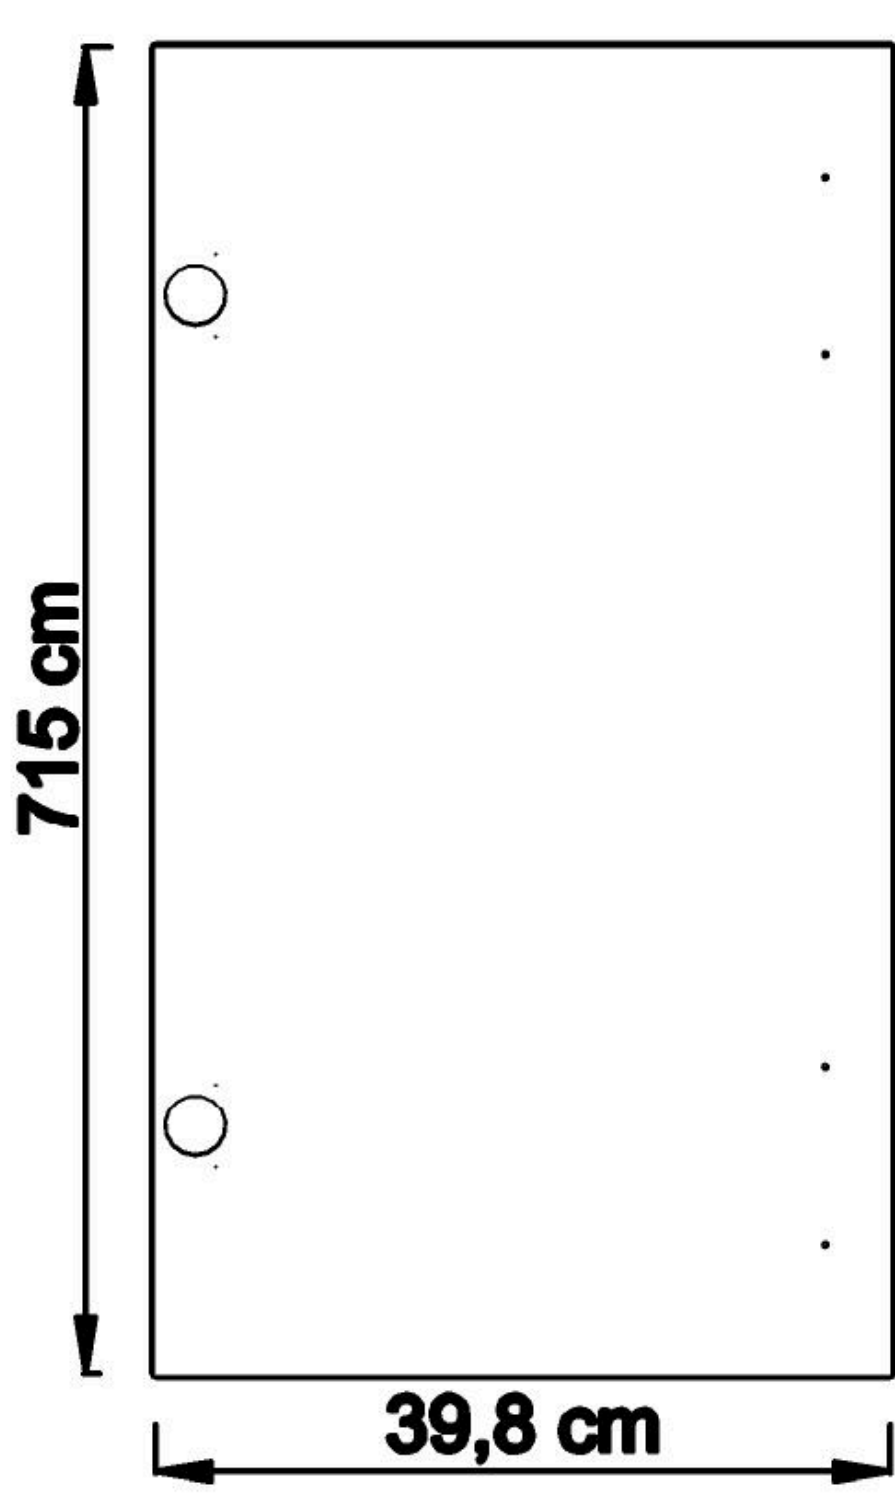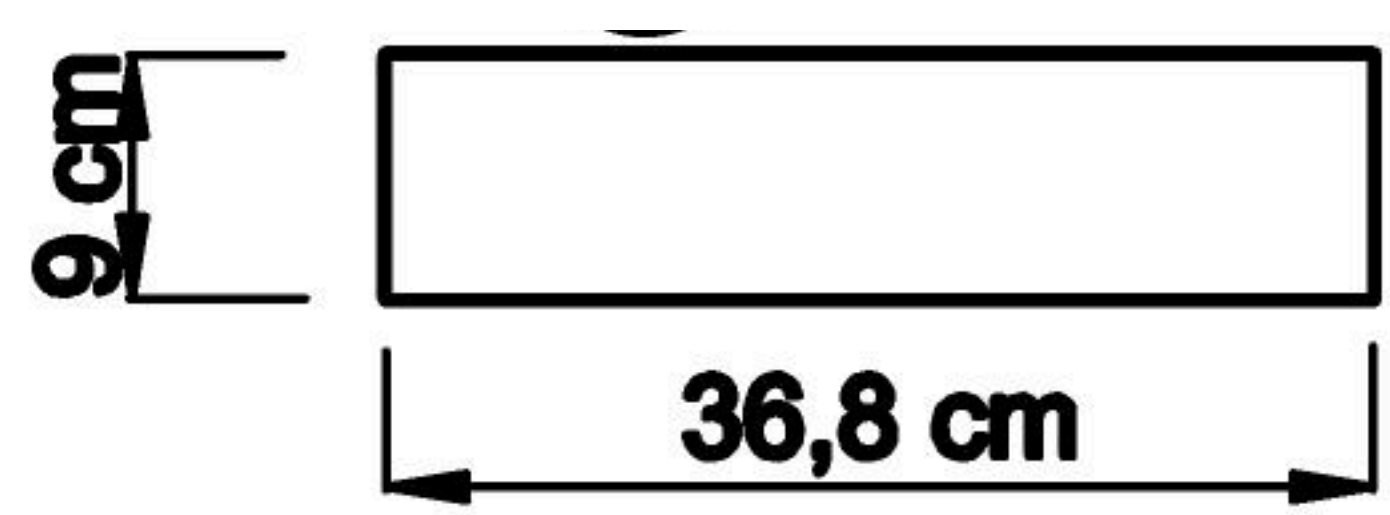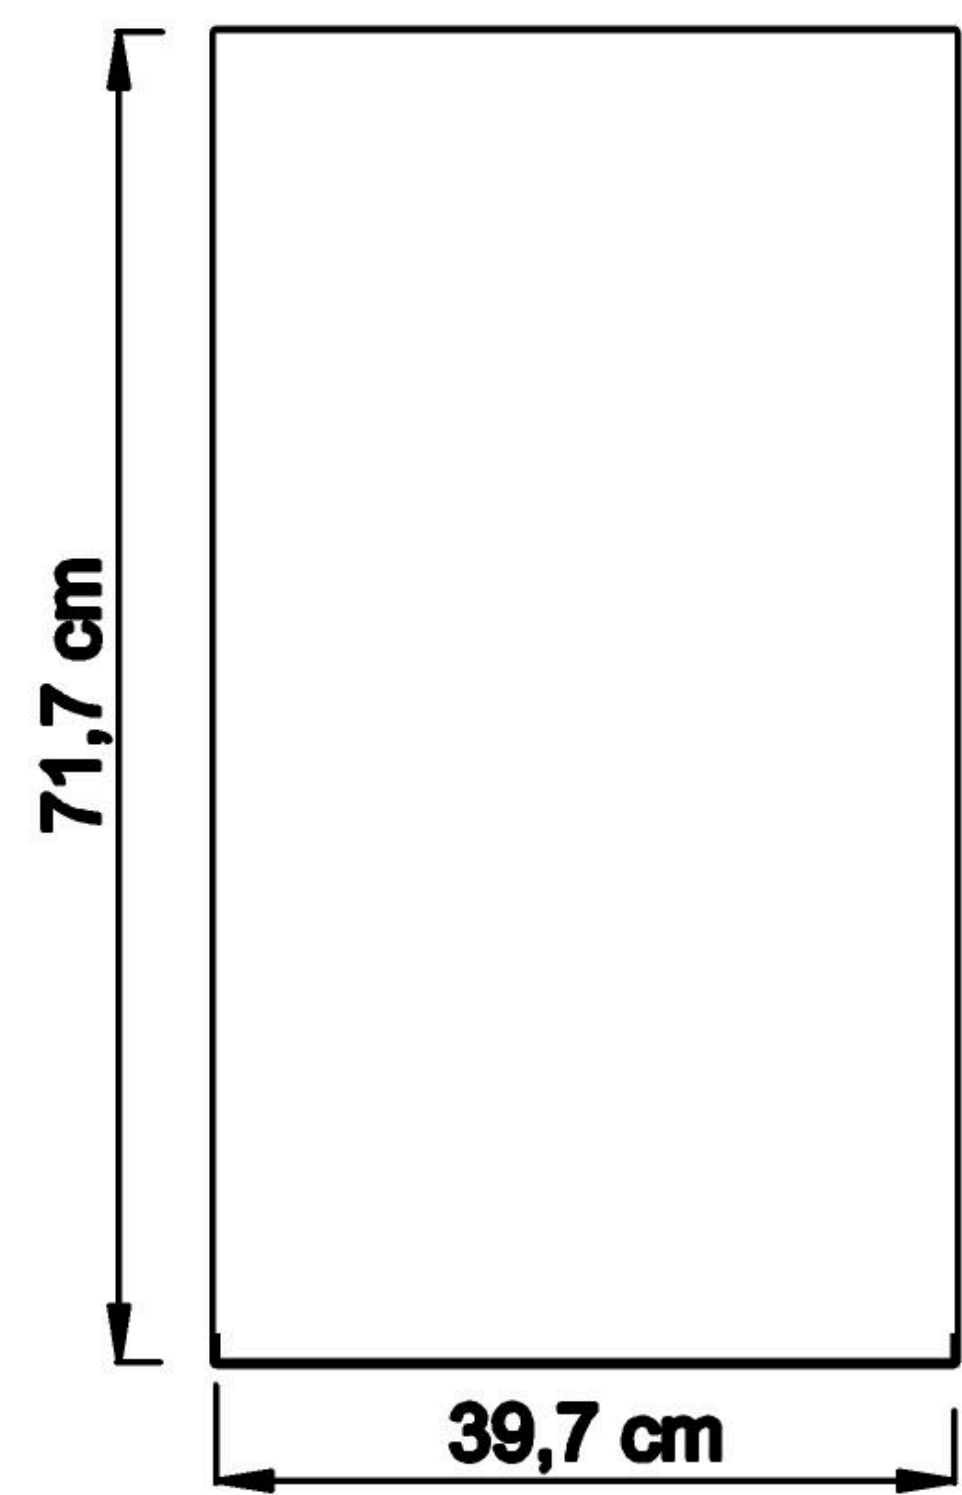
<div><div>1</div><div>x1</div><div></div></div>	<div><div>2</div><div>x3</div><div></div></div>	<div><div>3</div><div>x1</div><div></div></div>
<div><div>4</div><div>x1</div><div></div></div>	<div><div>5</div><div>x2</div><div></div></div>	<div><div>6</div><div>x1</div><div></div></div>
<div><div>7</div><div>x1</div><div></div></div>	<div><div>8</div><div>x1</div><div></div></div>	<div><div>9</div><div>x1</div><div></div></div>

COMPONENTS - FITTINGS

Please check you have all the fittings listed below
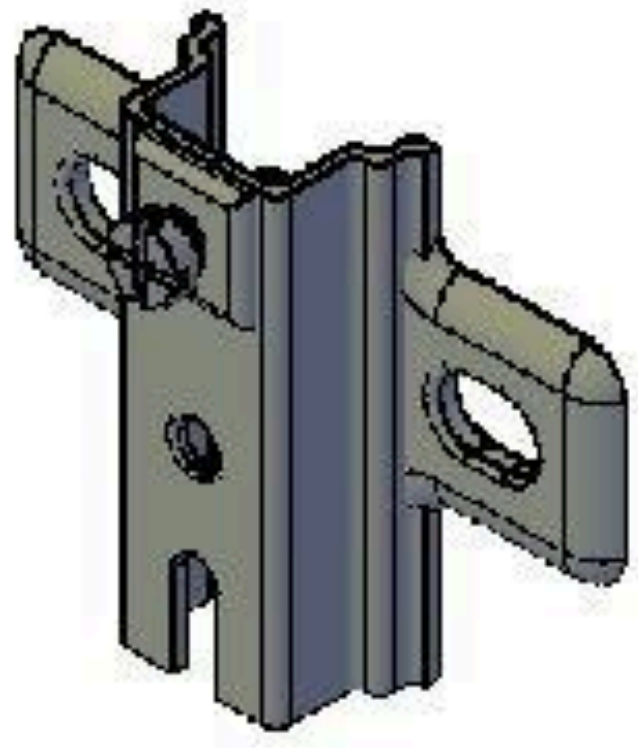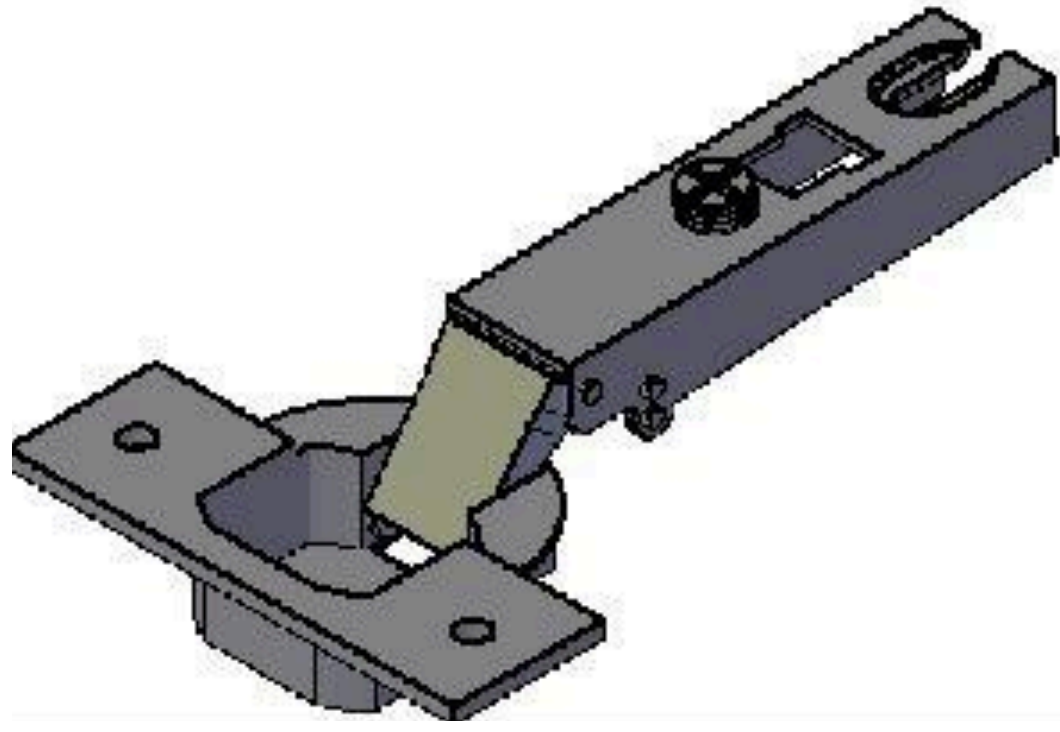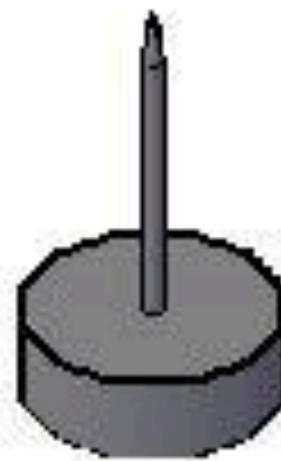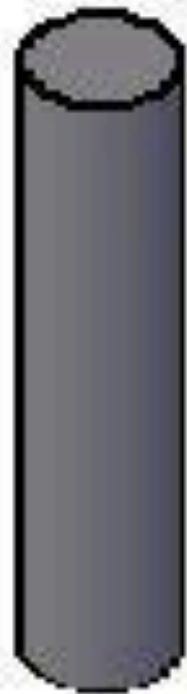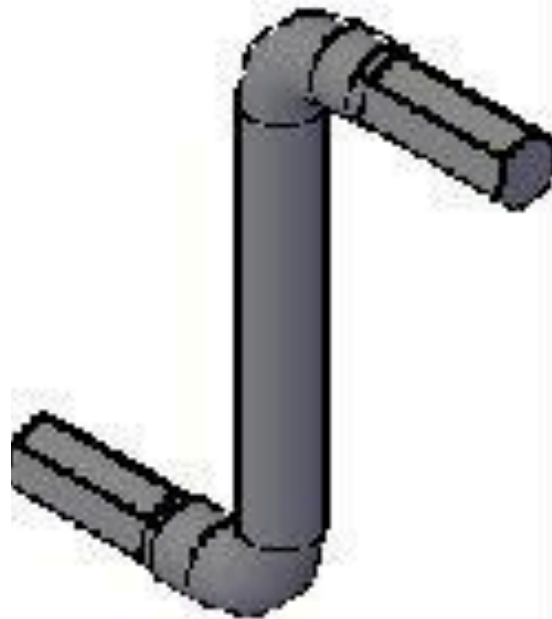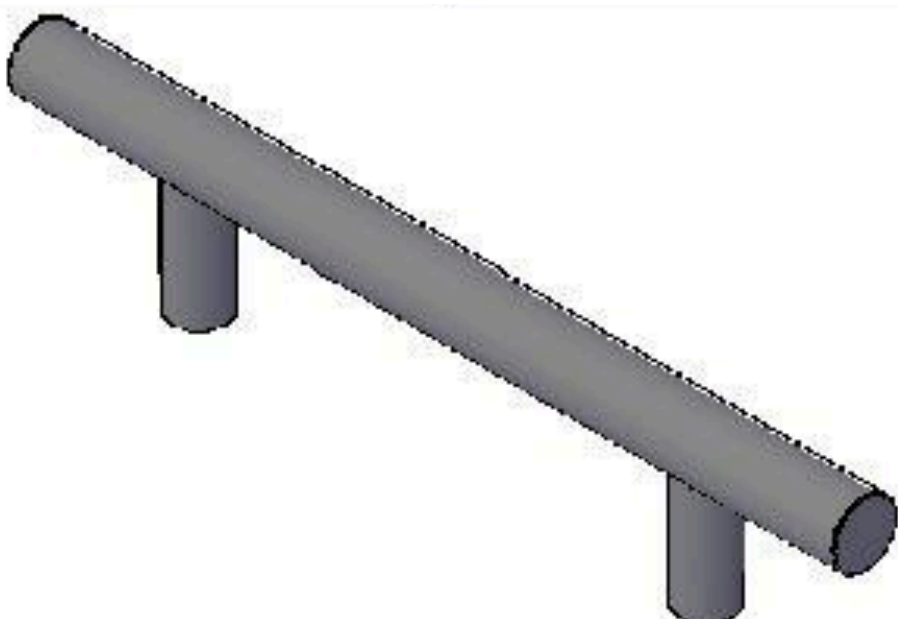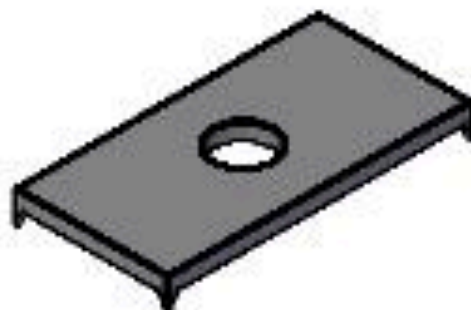
<div><div><div>O</div><div>x8</div></div><div></div><div><div>⌀ 7x16</div></div></div>	<div><div><div>F</div><div>x4</div></div><div></div></div>	<div><div><div>G2</div><div>x4</div></div><div></div></div>	<div><div><div>!</div><div>PAY ATTENTION: O AND F ATTACHED TO G2</div></div></div>
<div><div><div>E</div><div>x4</div></div><div></div></div>	<div><div><div>A</div><div>x16</div></div><div></div></div>	<div><div><div>Q7</div><div>x1</div></div><div></div></div>	<div><div><div>C</div><div>x12</div></div><div></div><div><div>⌀ 7x50</div></div></div>
<div><div><div>S1</div><div>x12</div></div><div></div></div>	<div><div><div>D8</div><div>x12</div></div><div></div></div>	<div><div><div>J9</div><div>x4</div></div><div></div><div><div>⌀ 3x25</div></div></div>	<div><div><div>U7</div><div>x2</div></div><div></div></div>
<div><div><div>H</div><div>x8</div><div>US 031.03</div></div><div></div><div><div>⌀ 3.5x13</div></div></div>	<div><div><div>W</div><div>x60</div></div><div></div></div>	<div><div><div>H3</div><div>x5</div><div>US 031.03</div></div><div></div><div><div>⌀ 3x16</div></div></div>	<div><div><div>M</div><div>x5</div></div><div></div></div>
<div><div><div>S7</div><div>x4</div></div><div></div></div>			

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x8


F x4



7x16


E x4

A x16

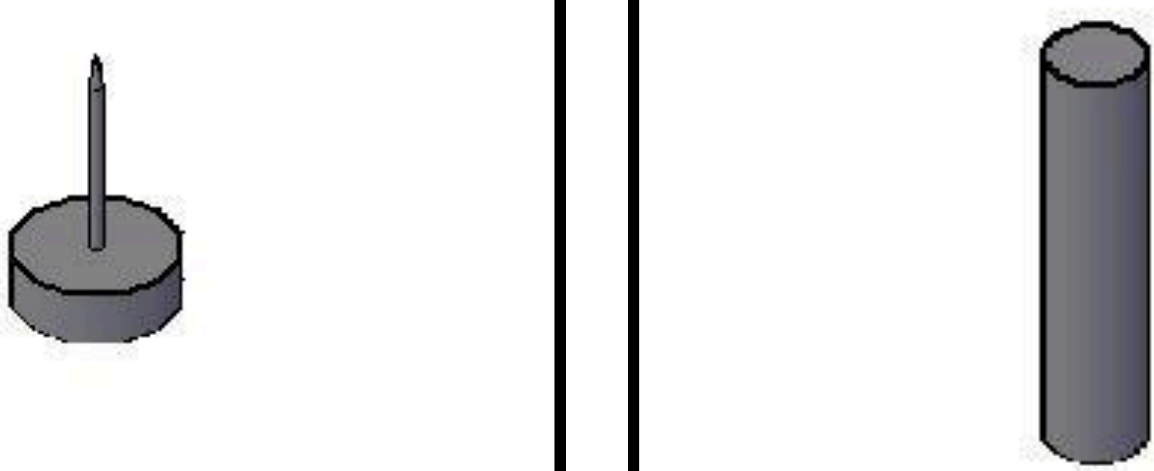


D8 x12



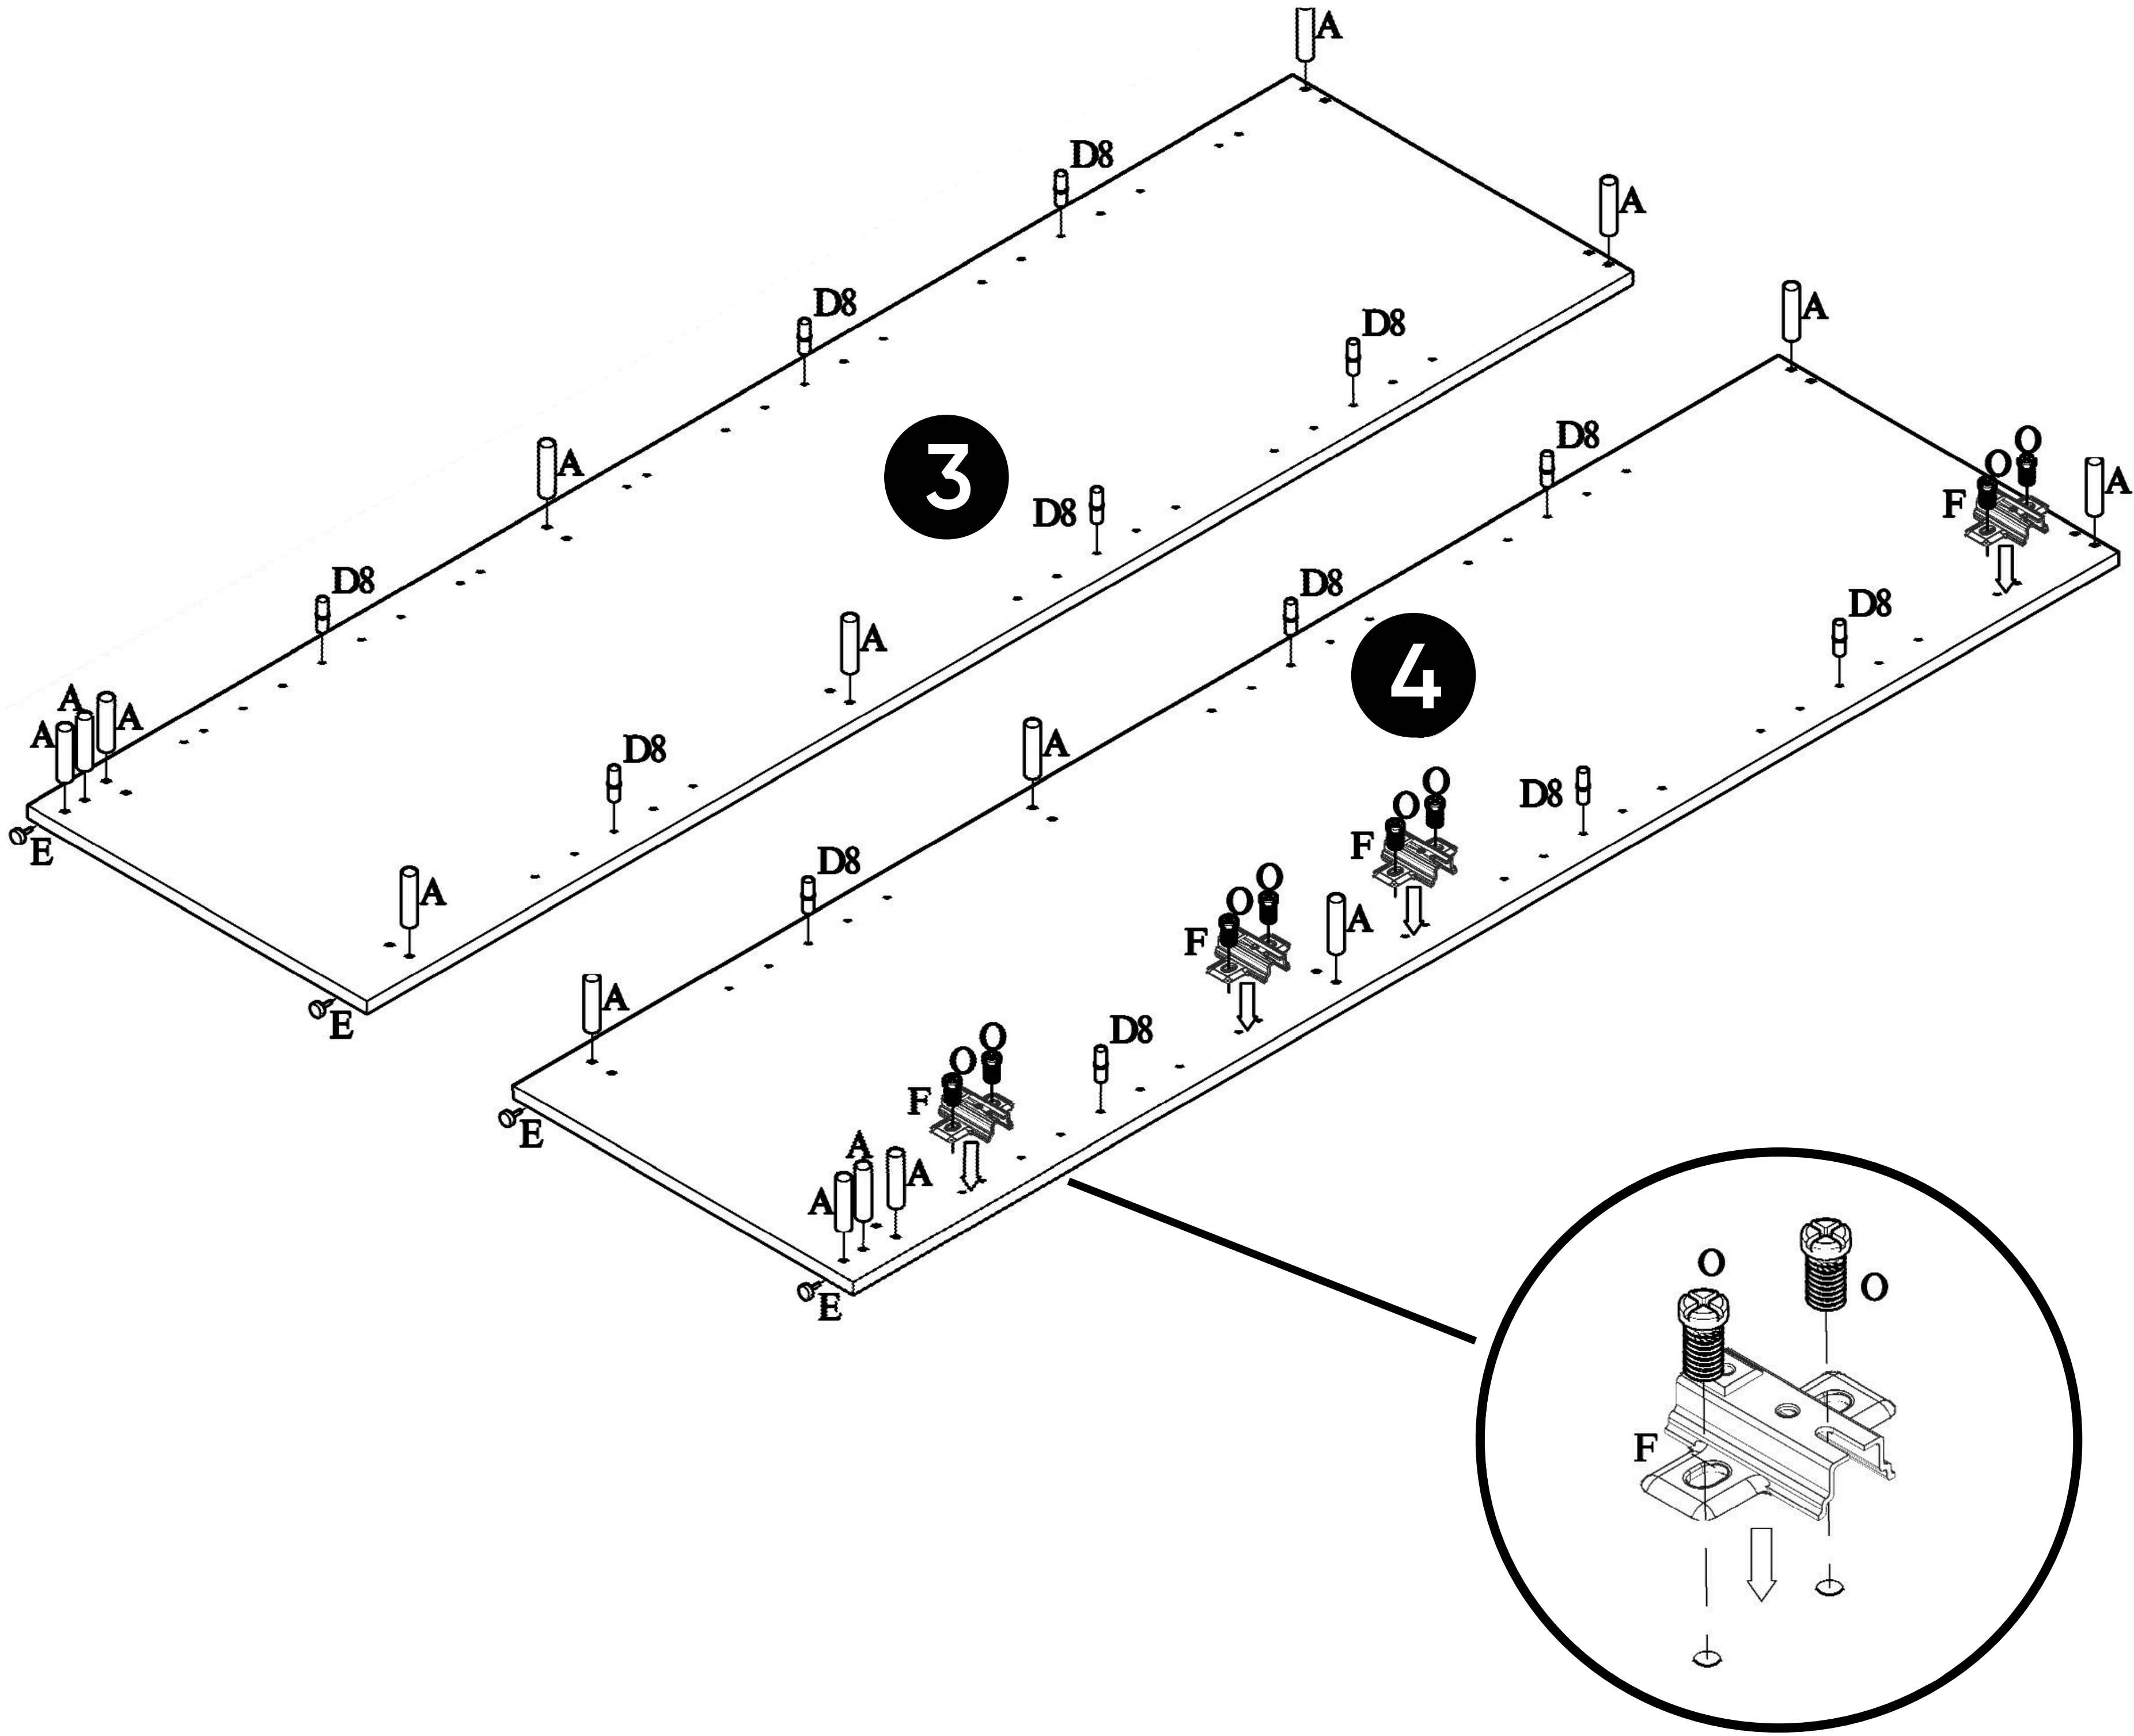


STEP - 2

Q7 x1

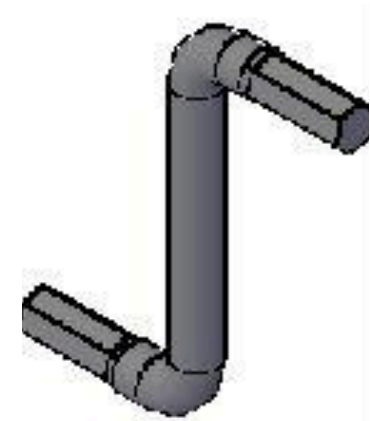


S1 x12

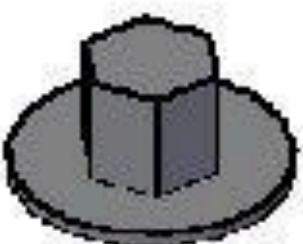



C x12





7x50

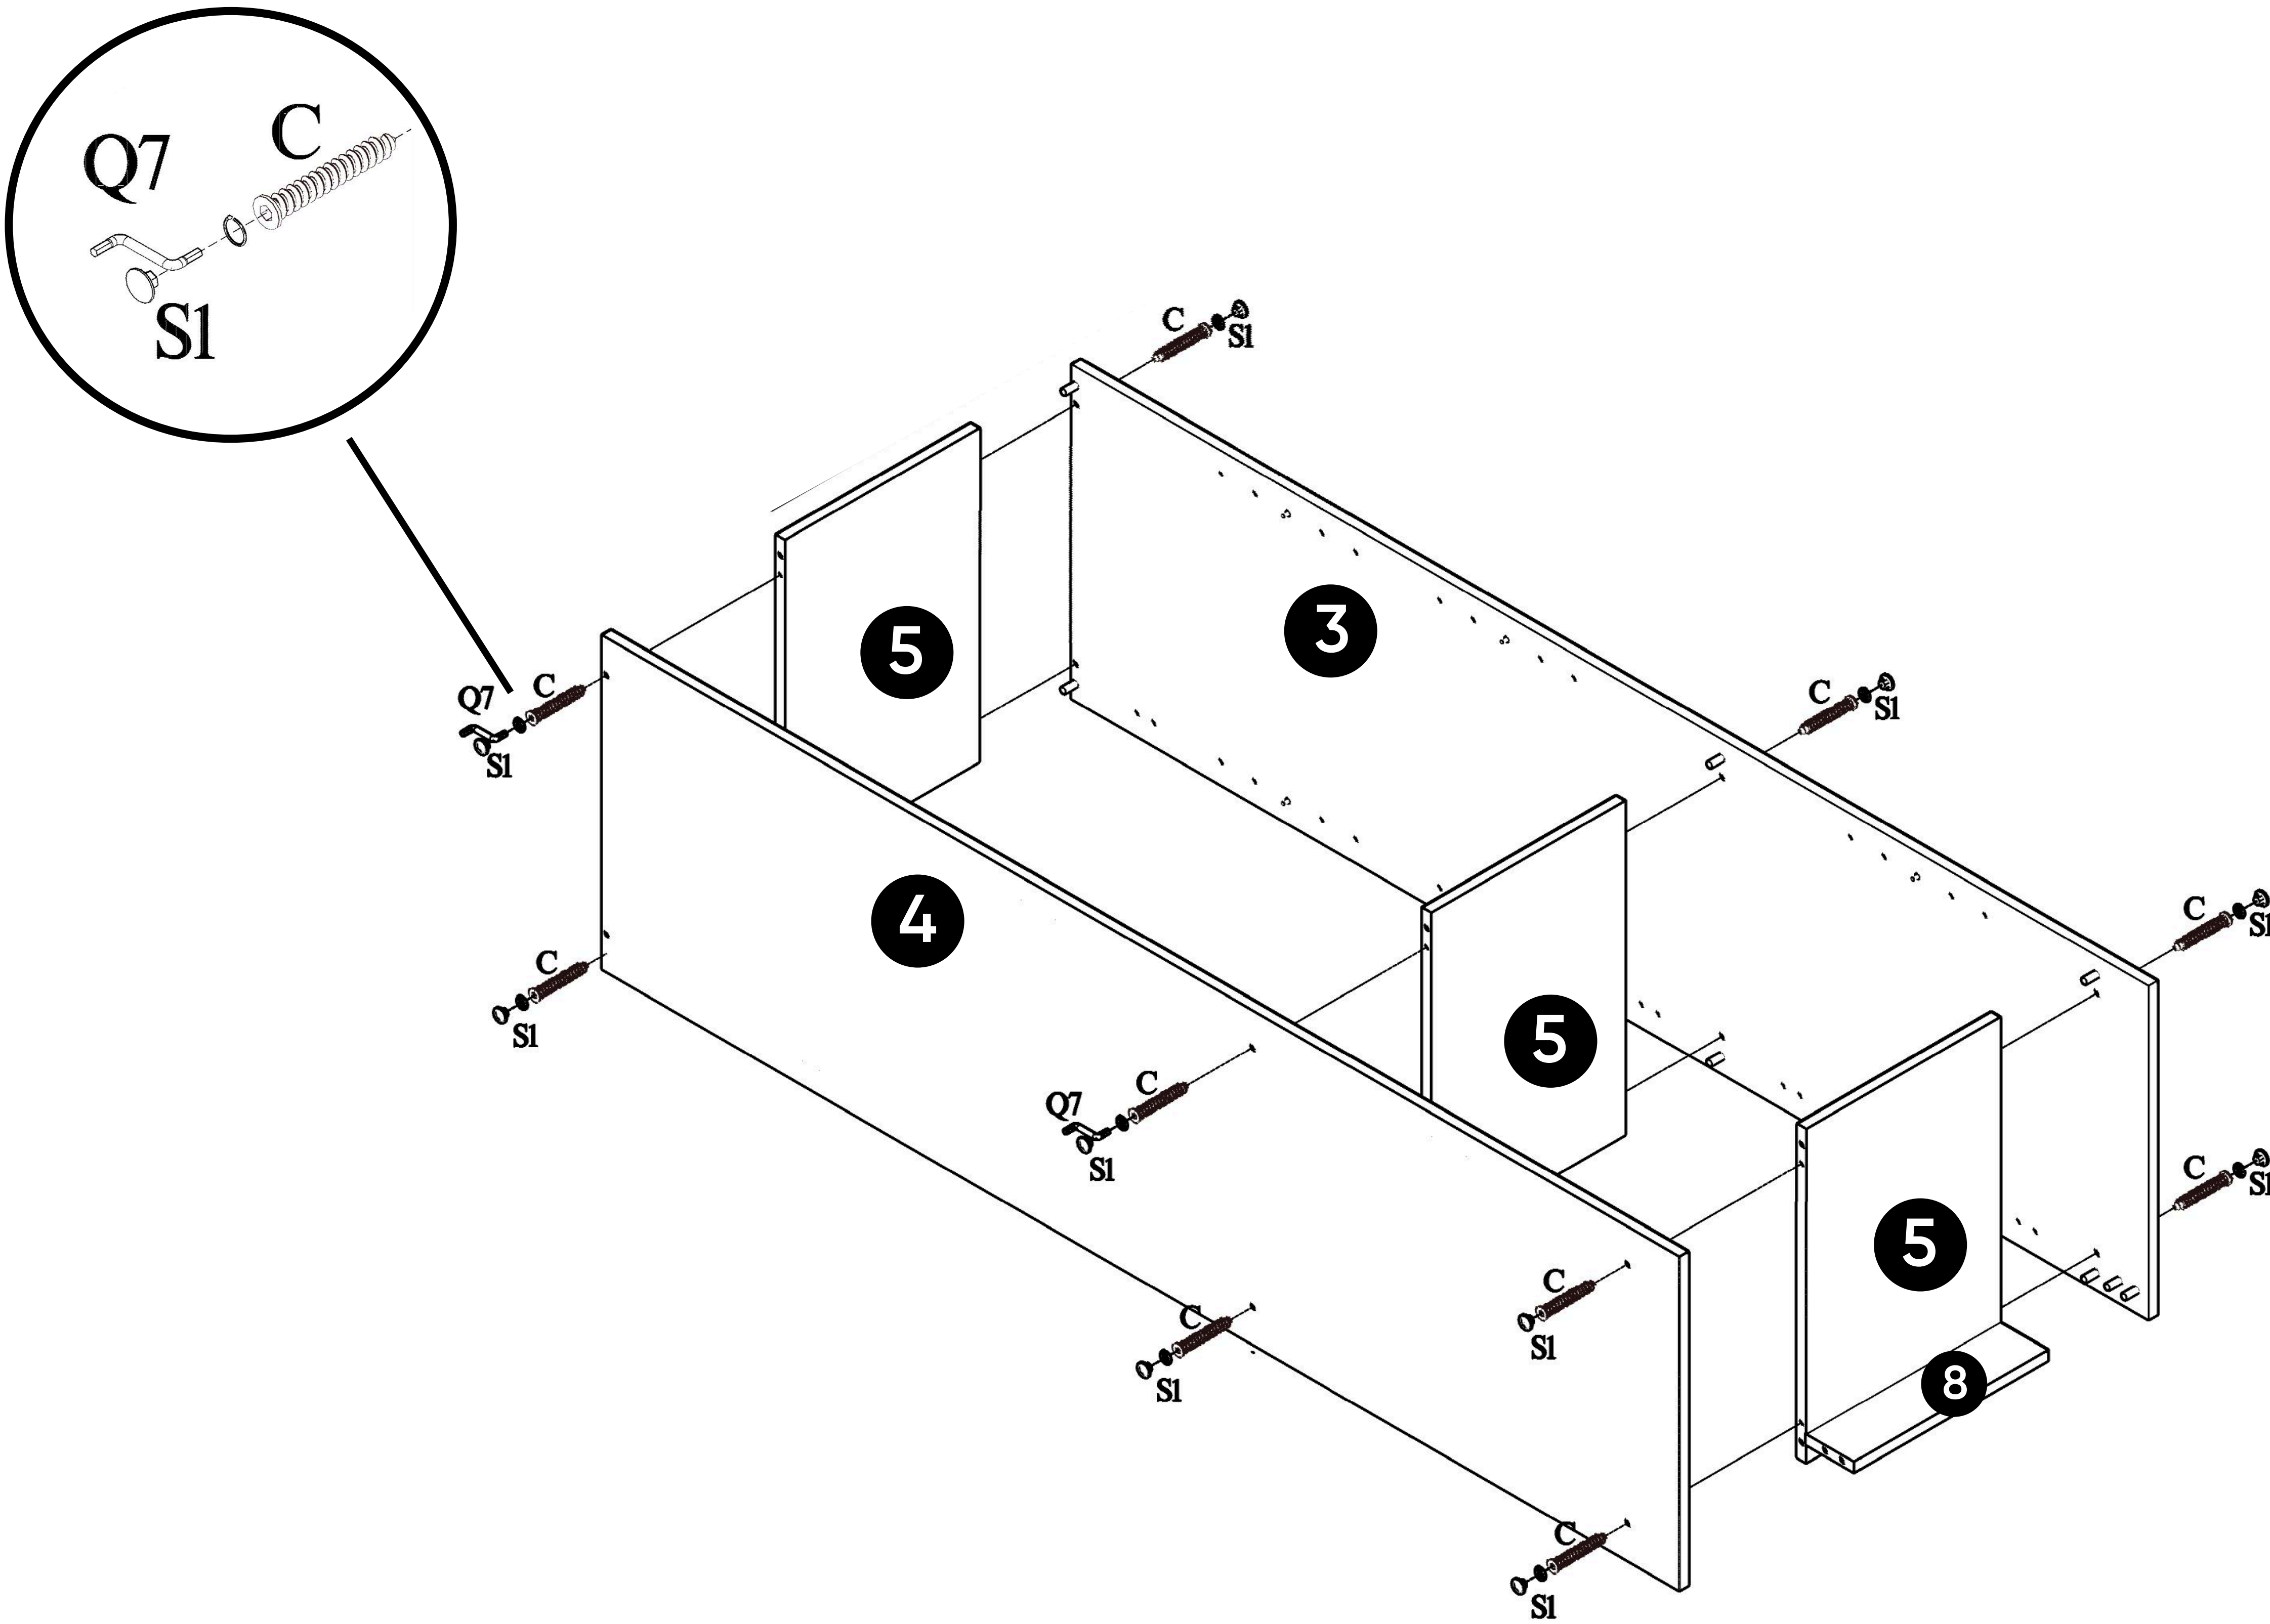

STEP - 3

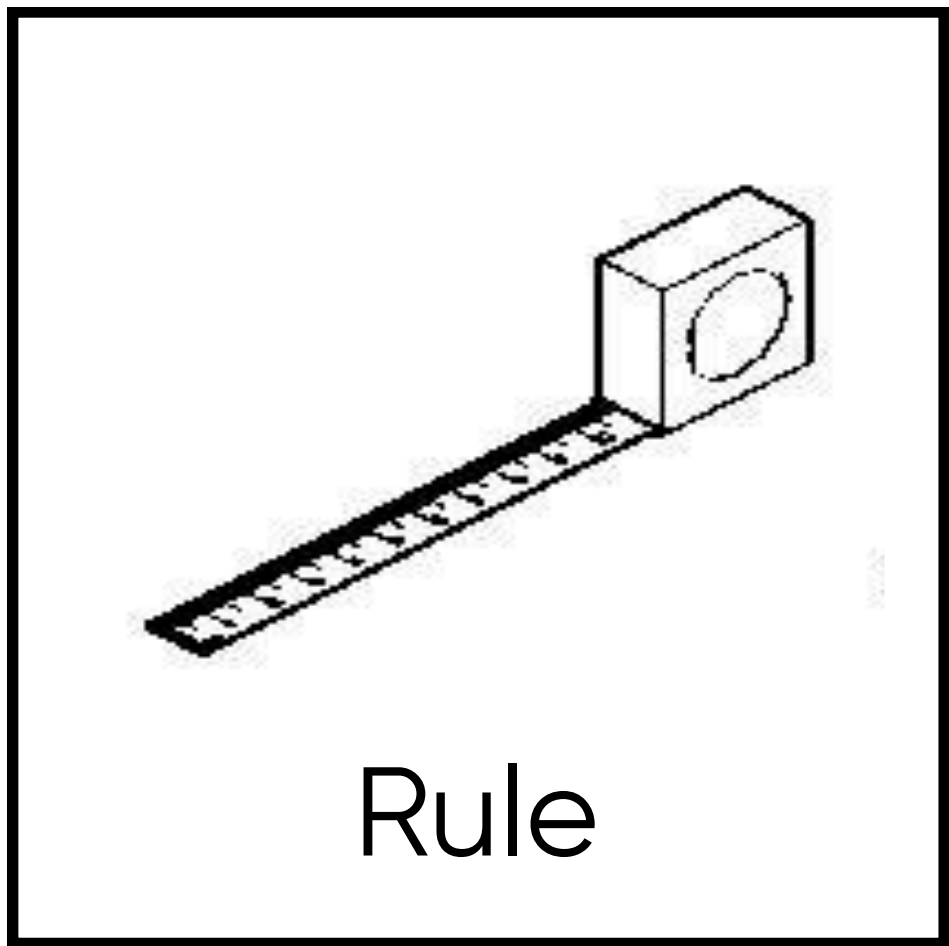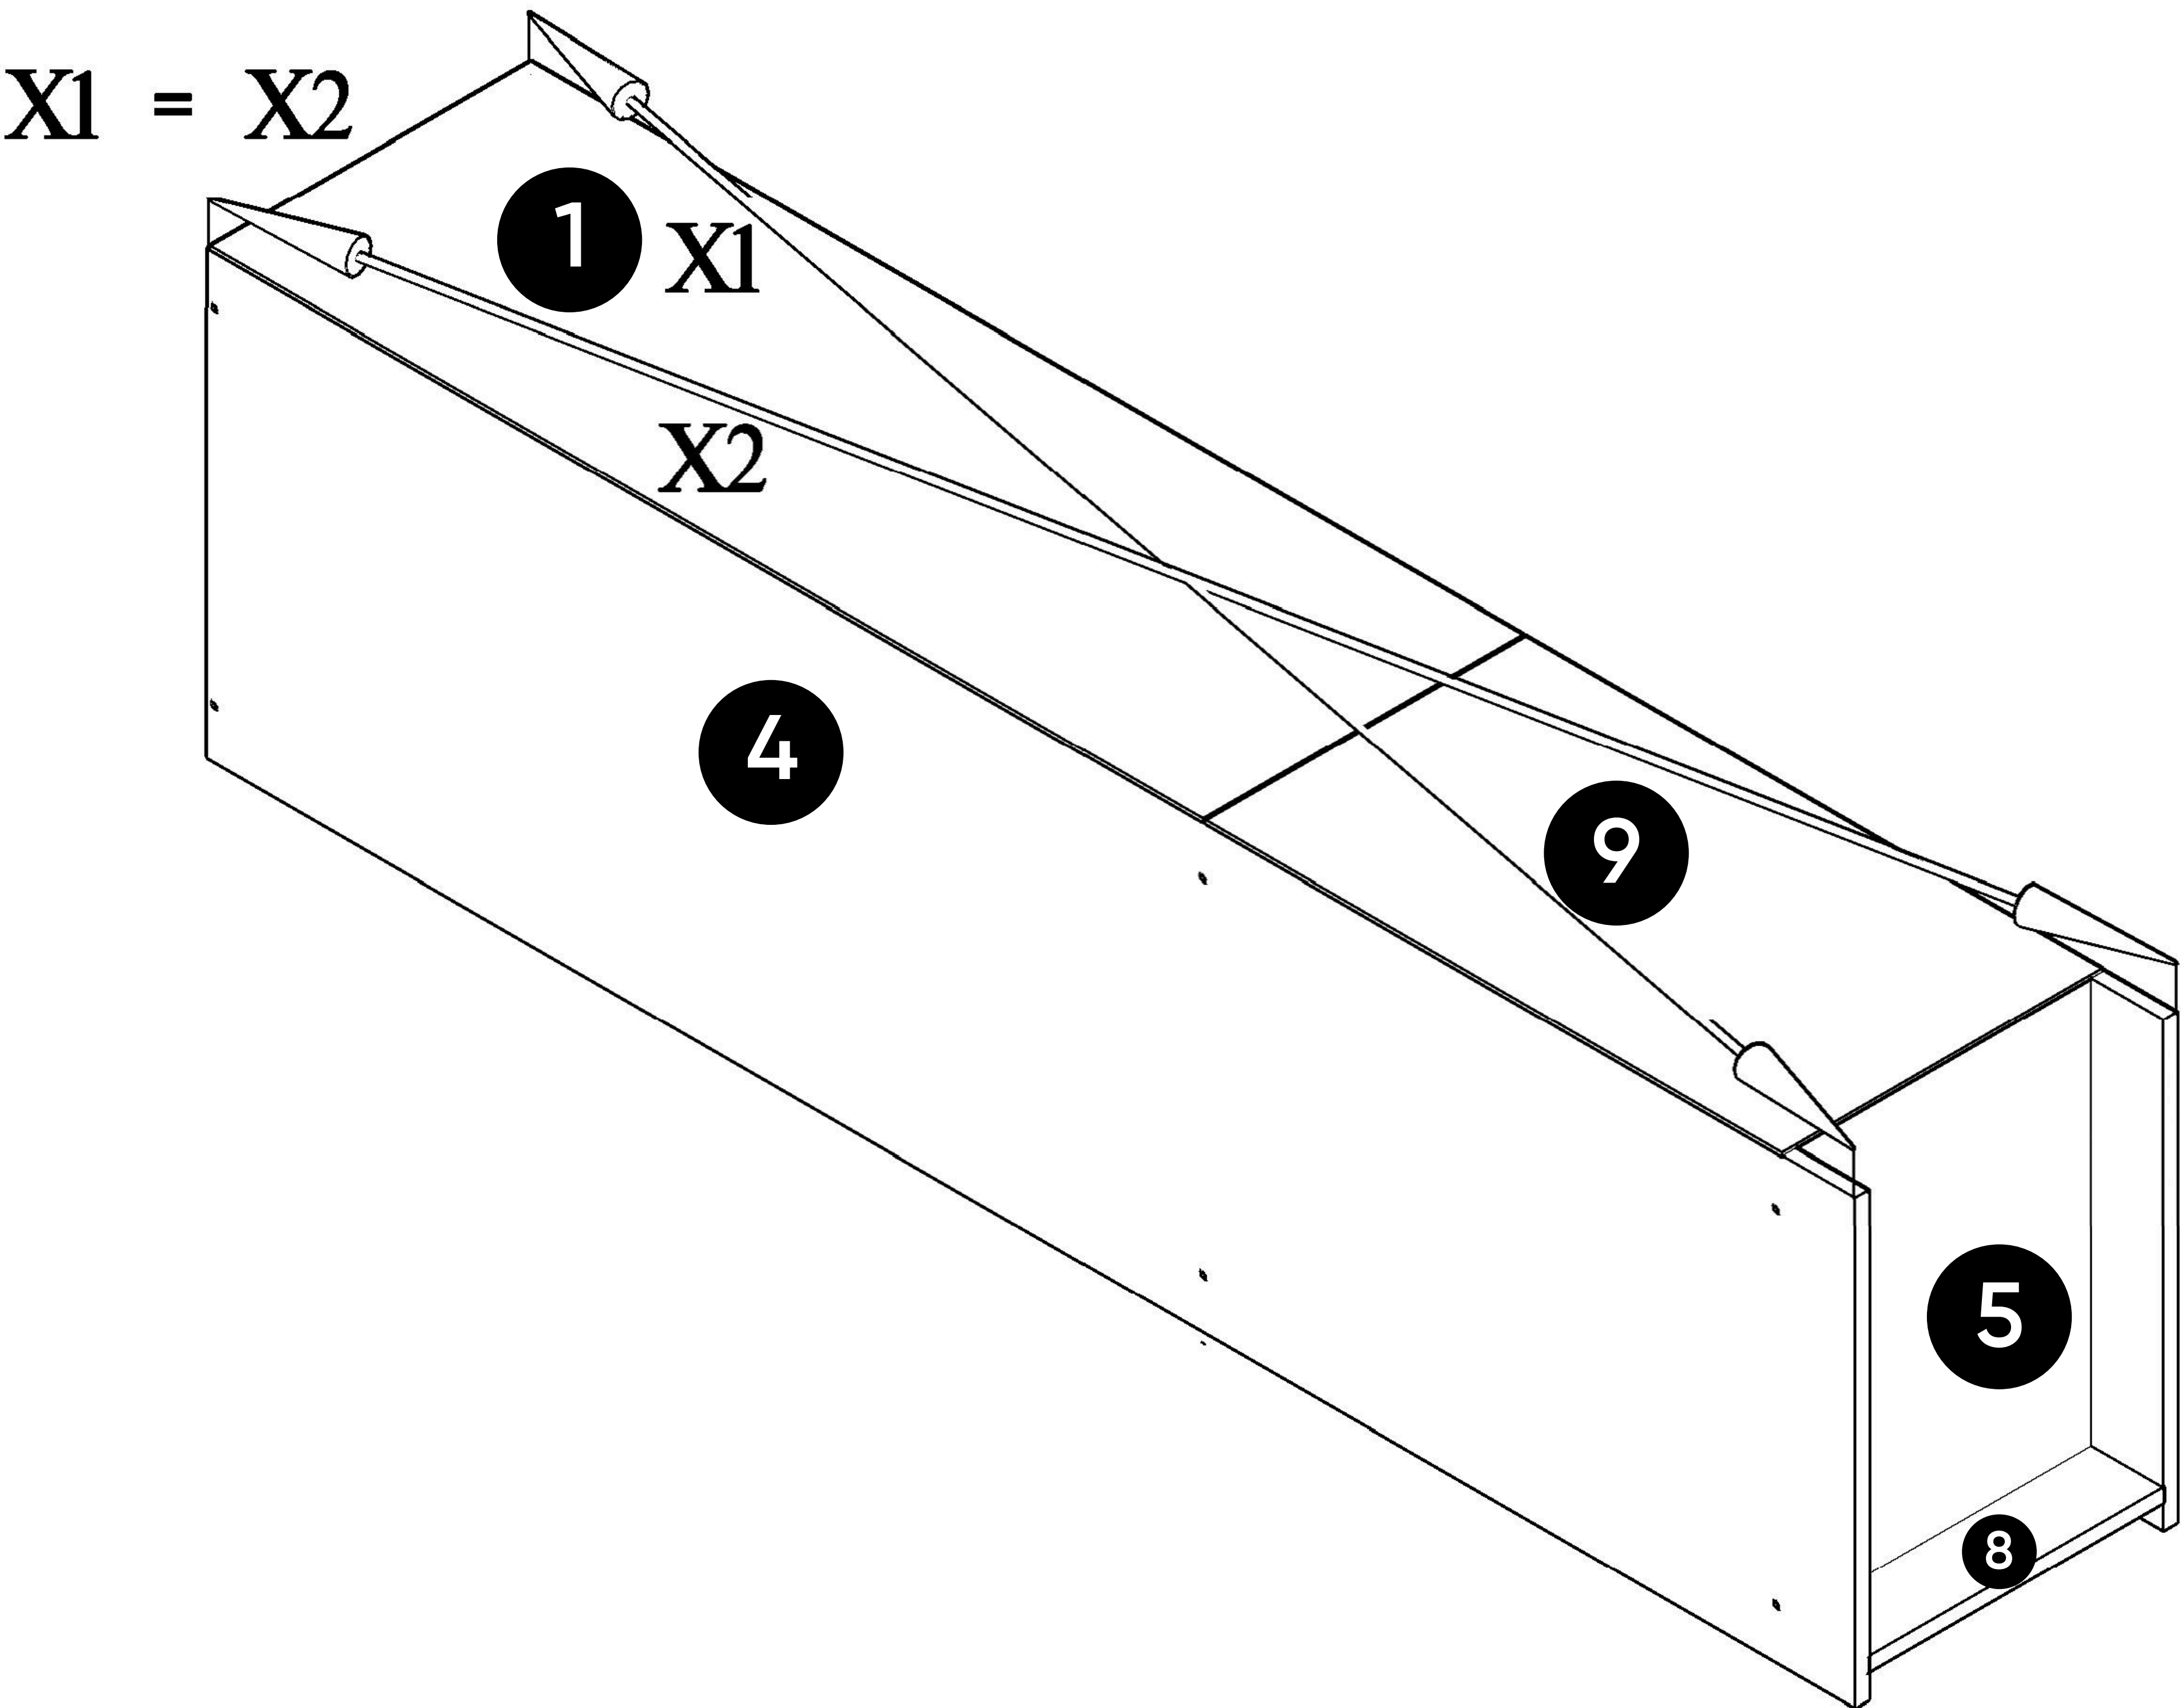


STEP - 4

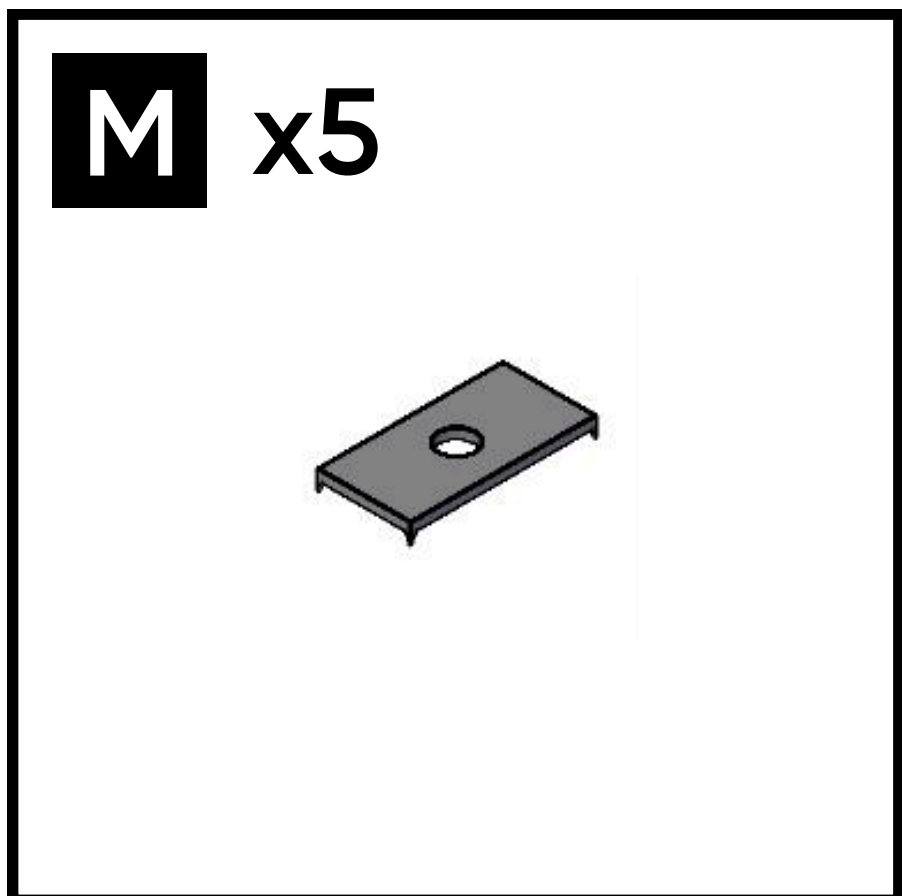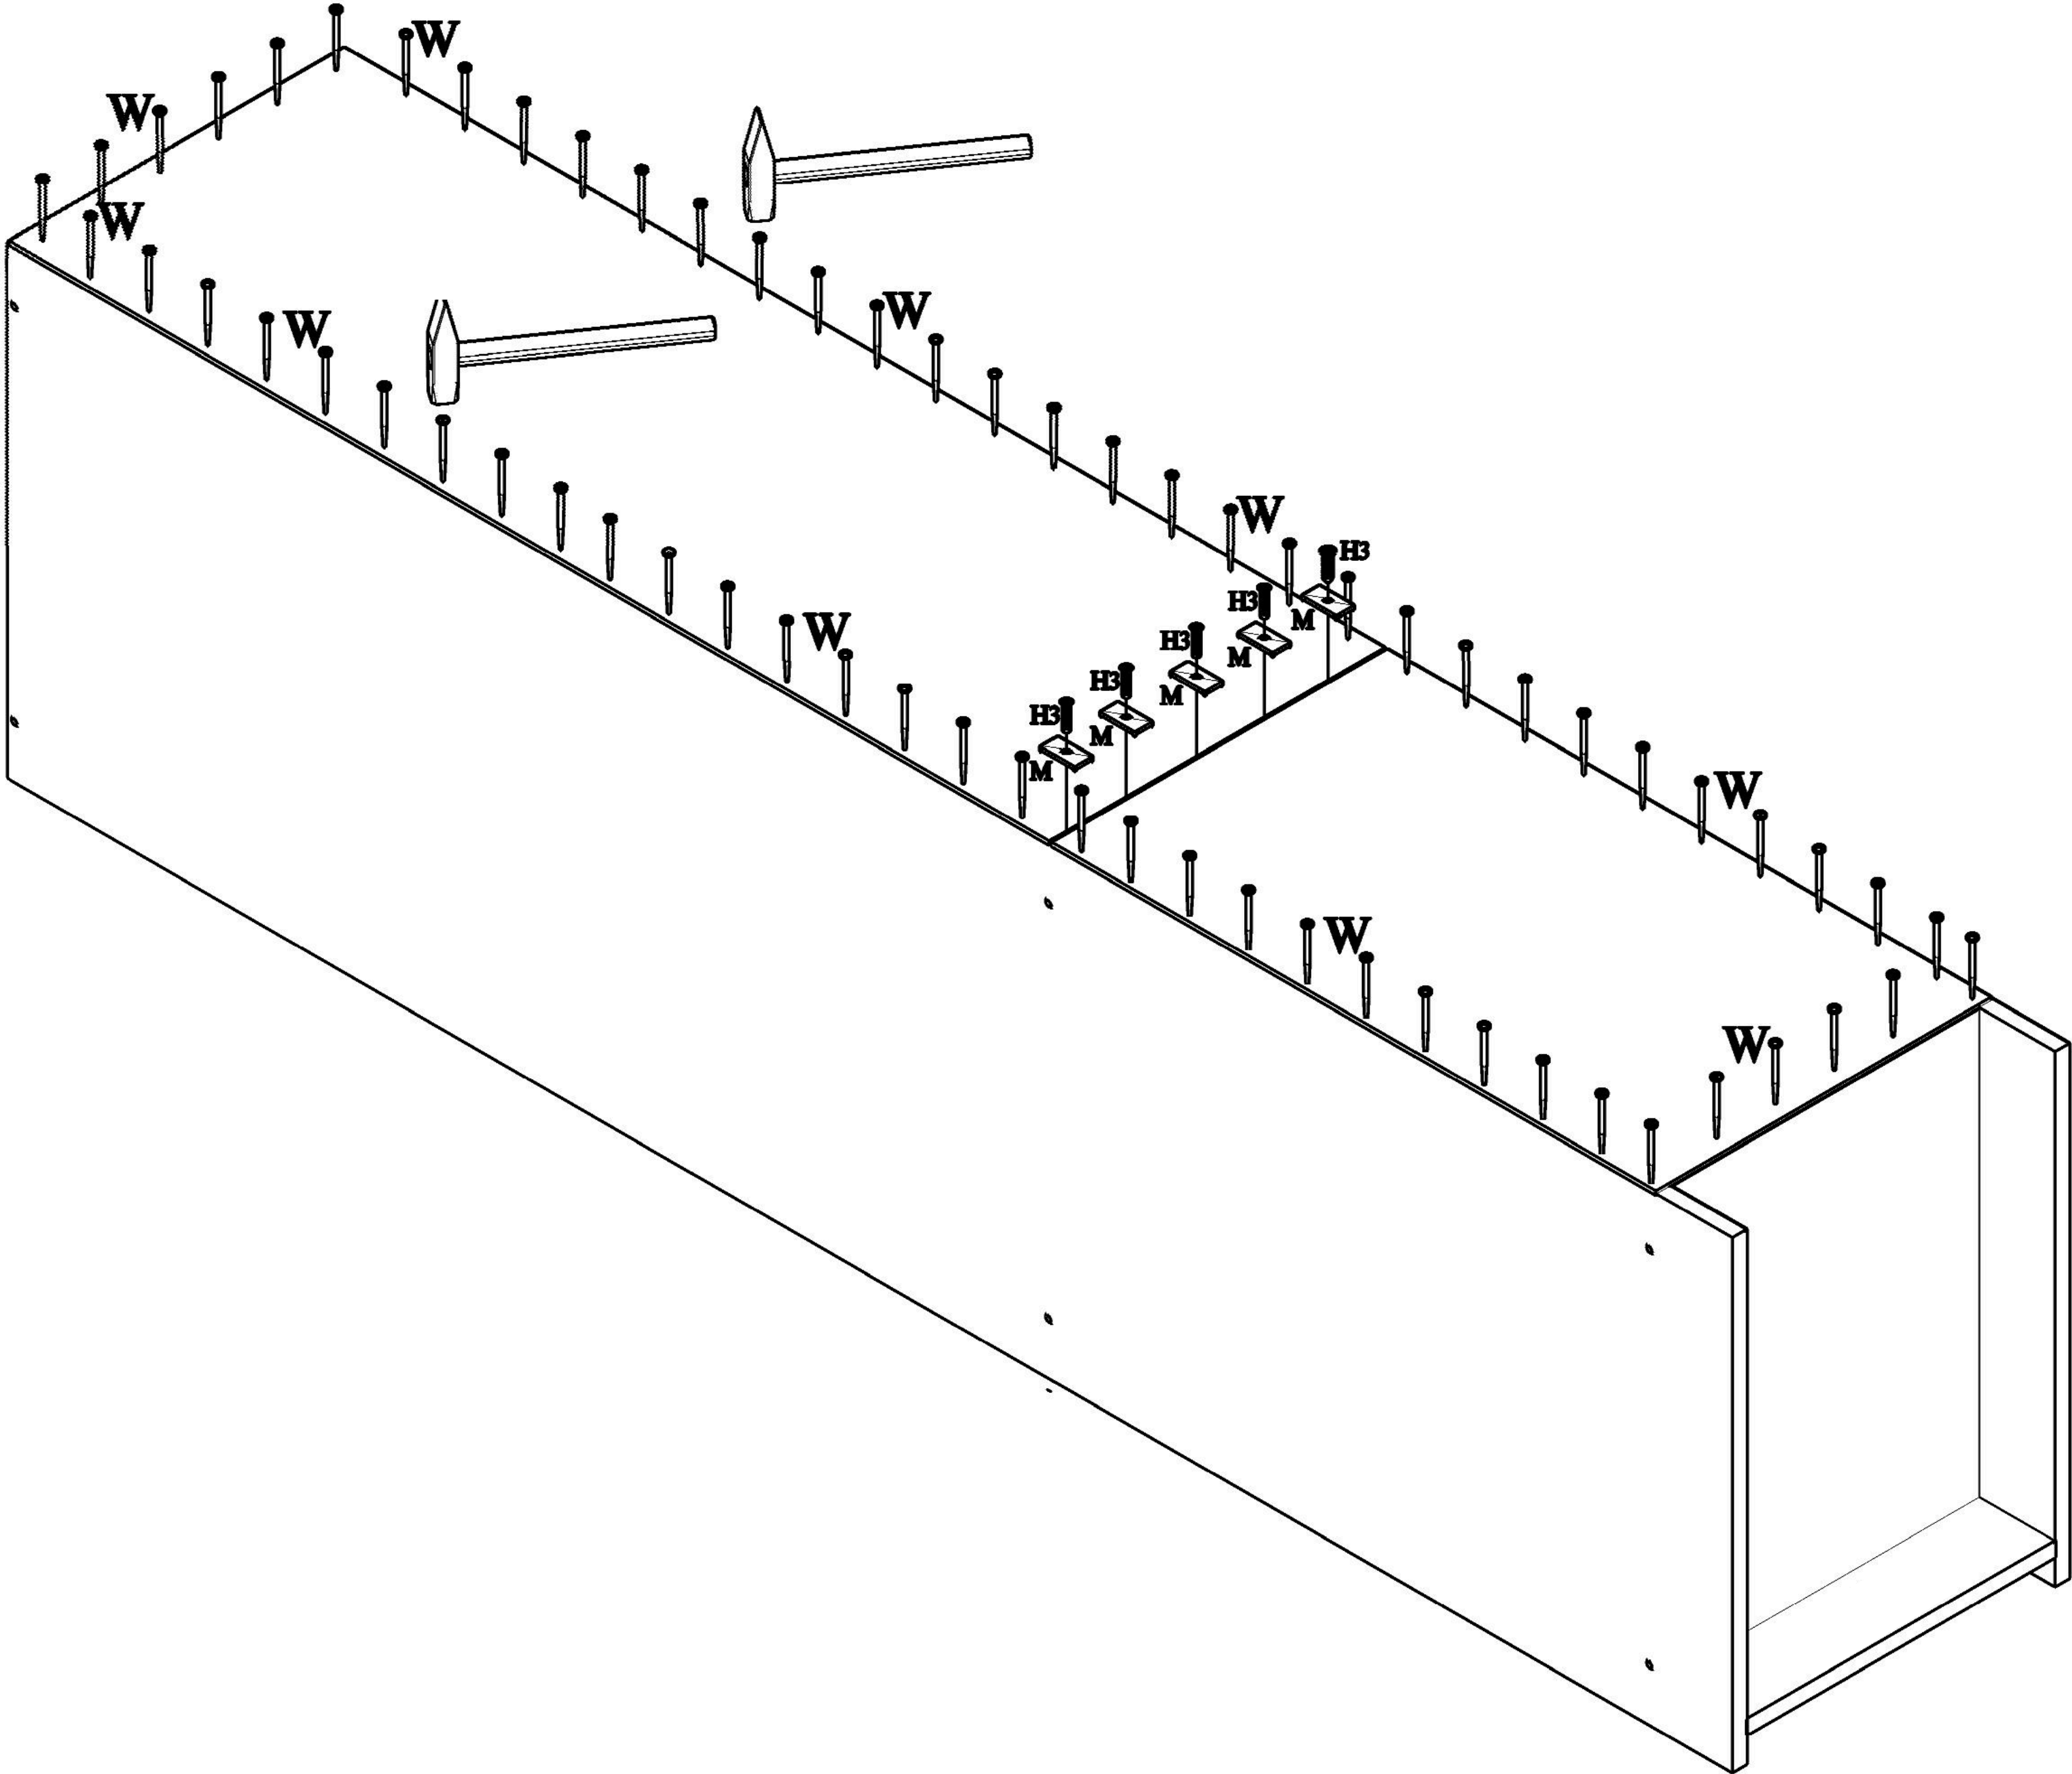

STEP - 5


G2 x4

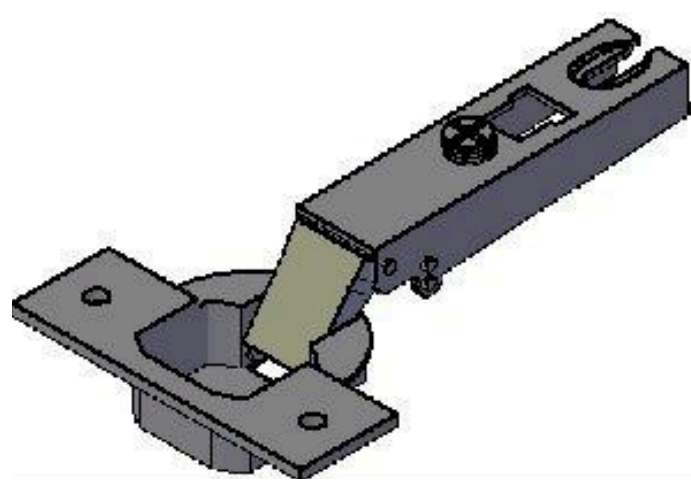


H x8 US 031.03



3.5x13

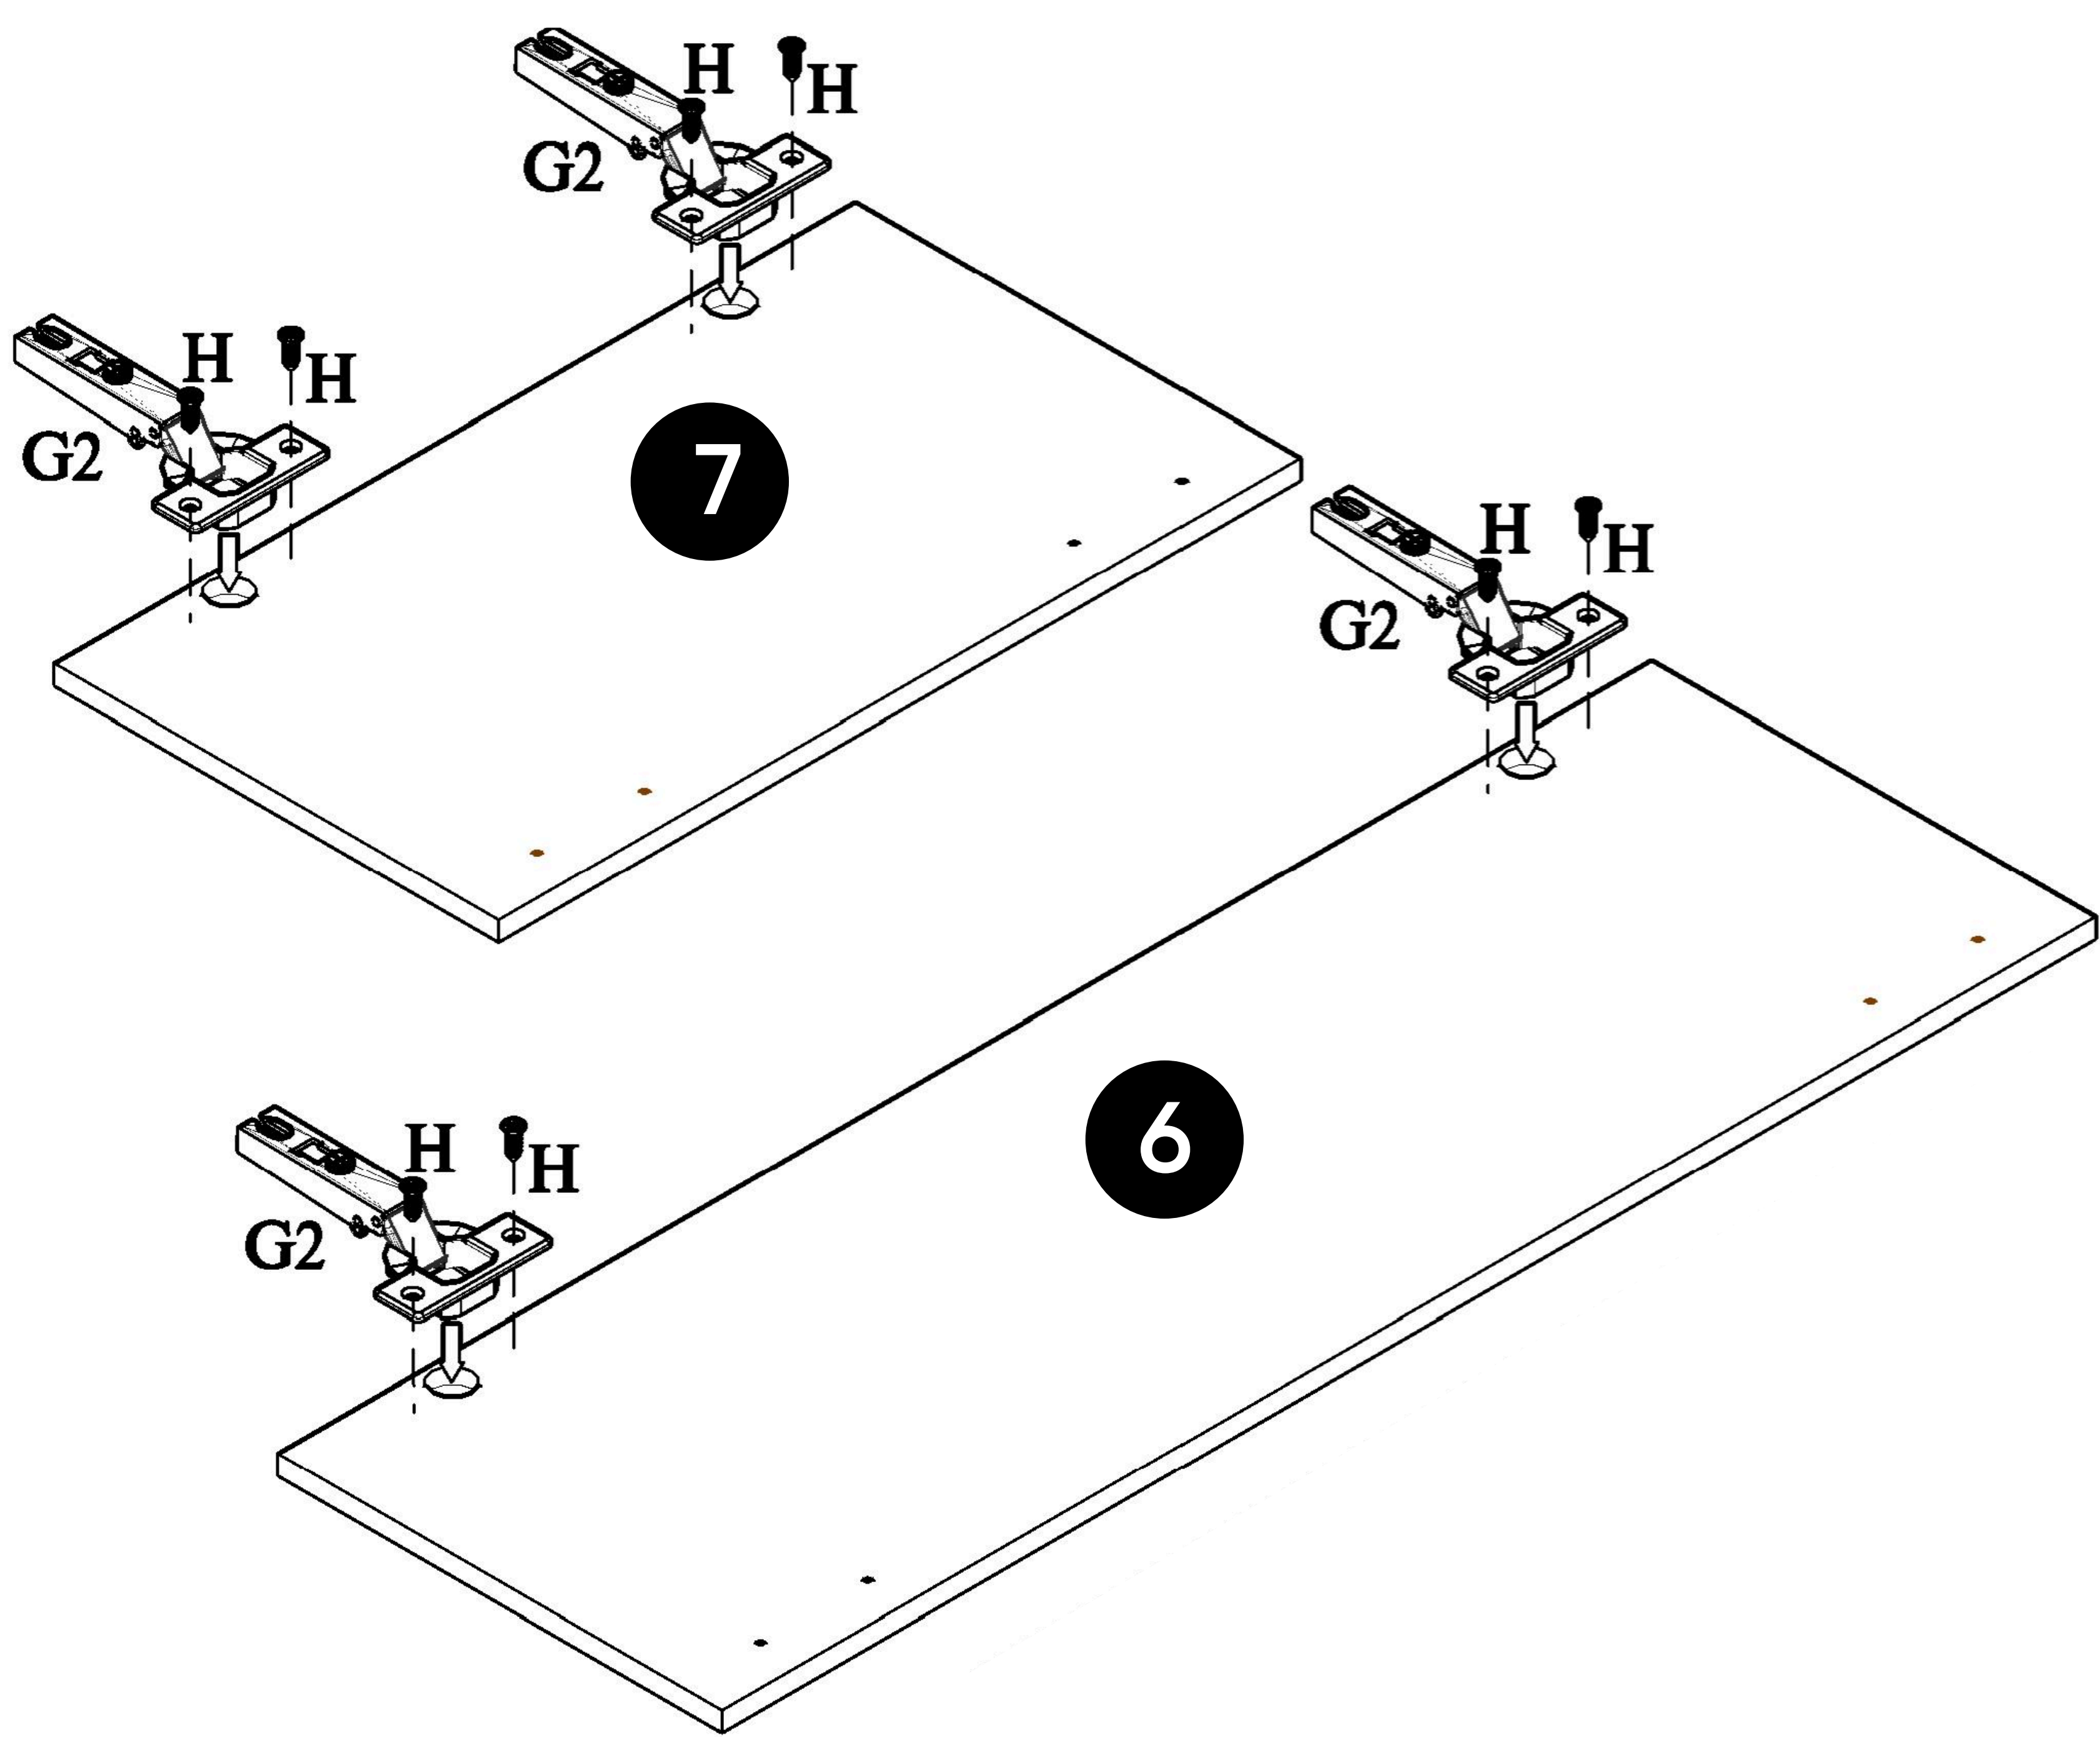


STEP - 6

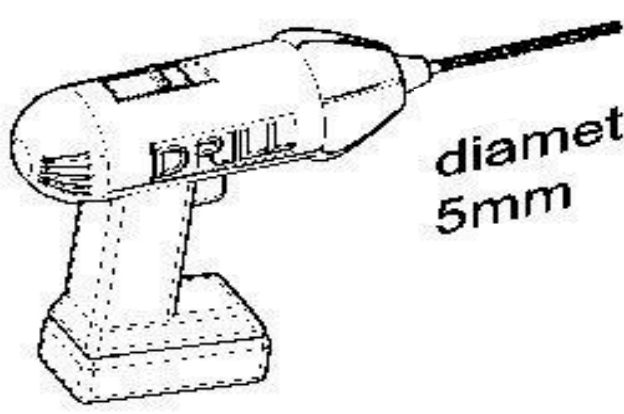

diameter 5mm

Electric drill

NOTE: Door can be fitted the left or right side

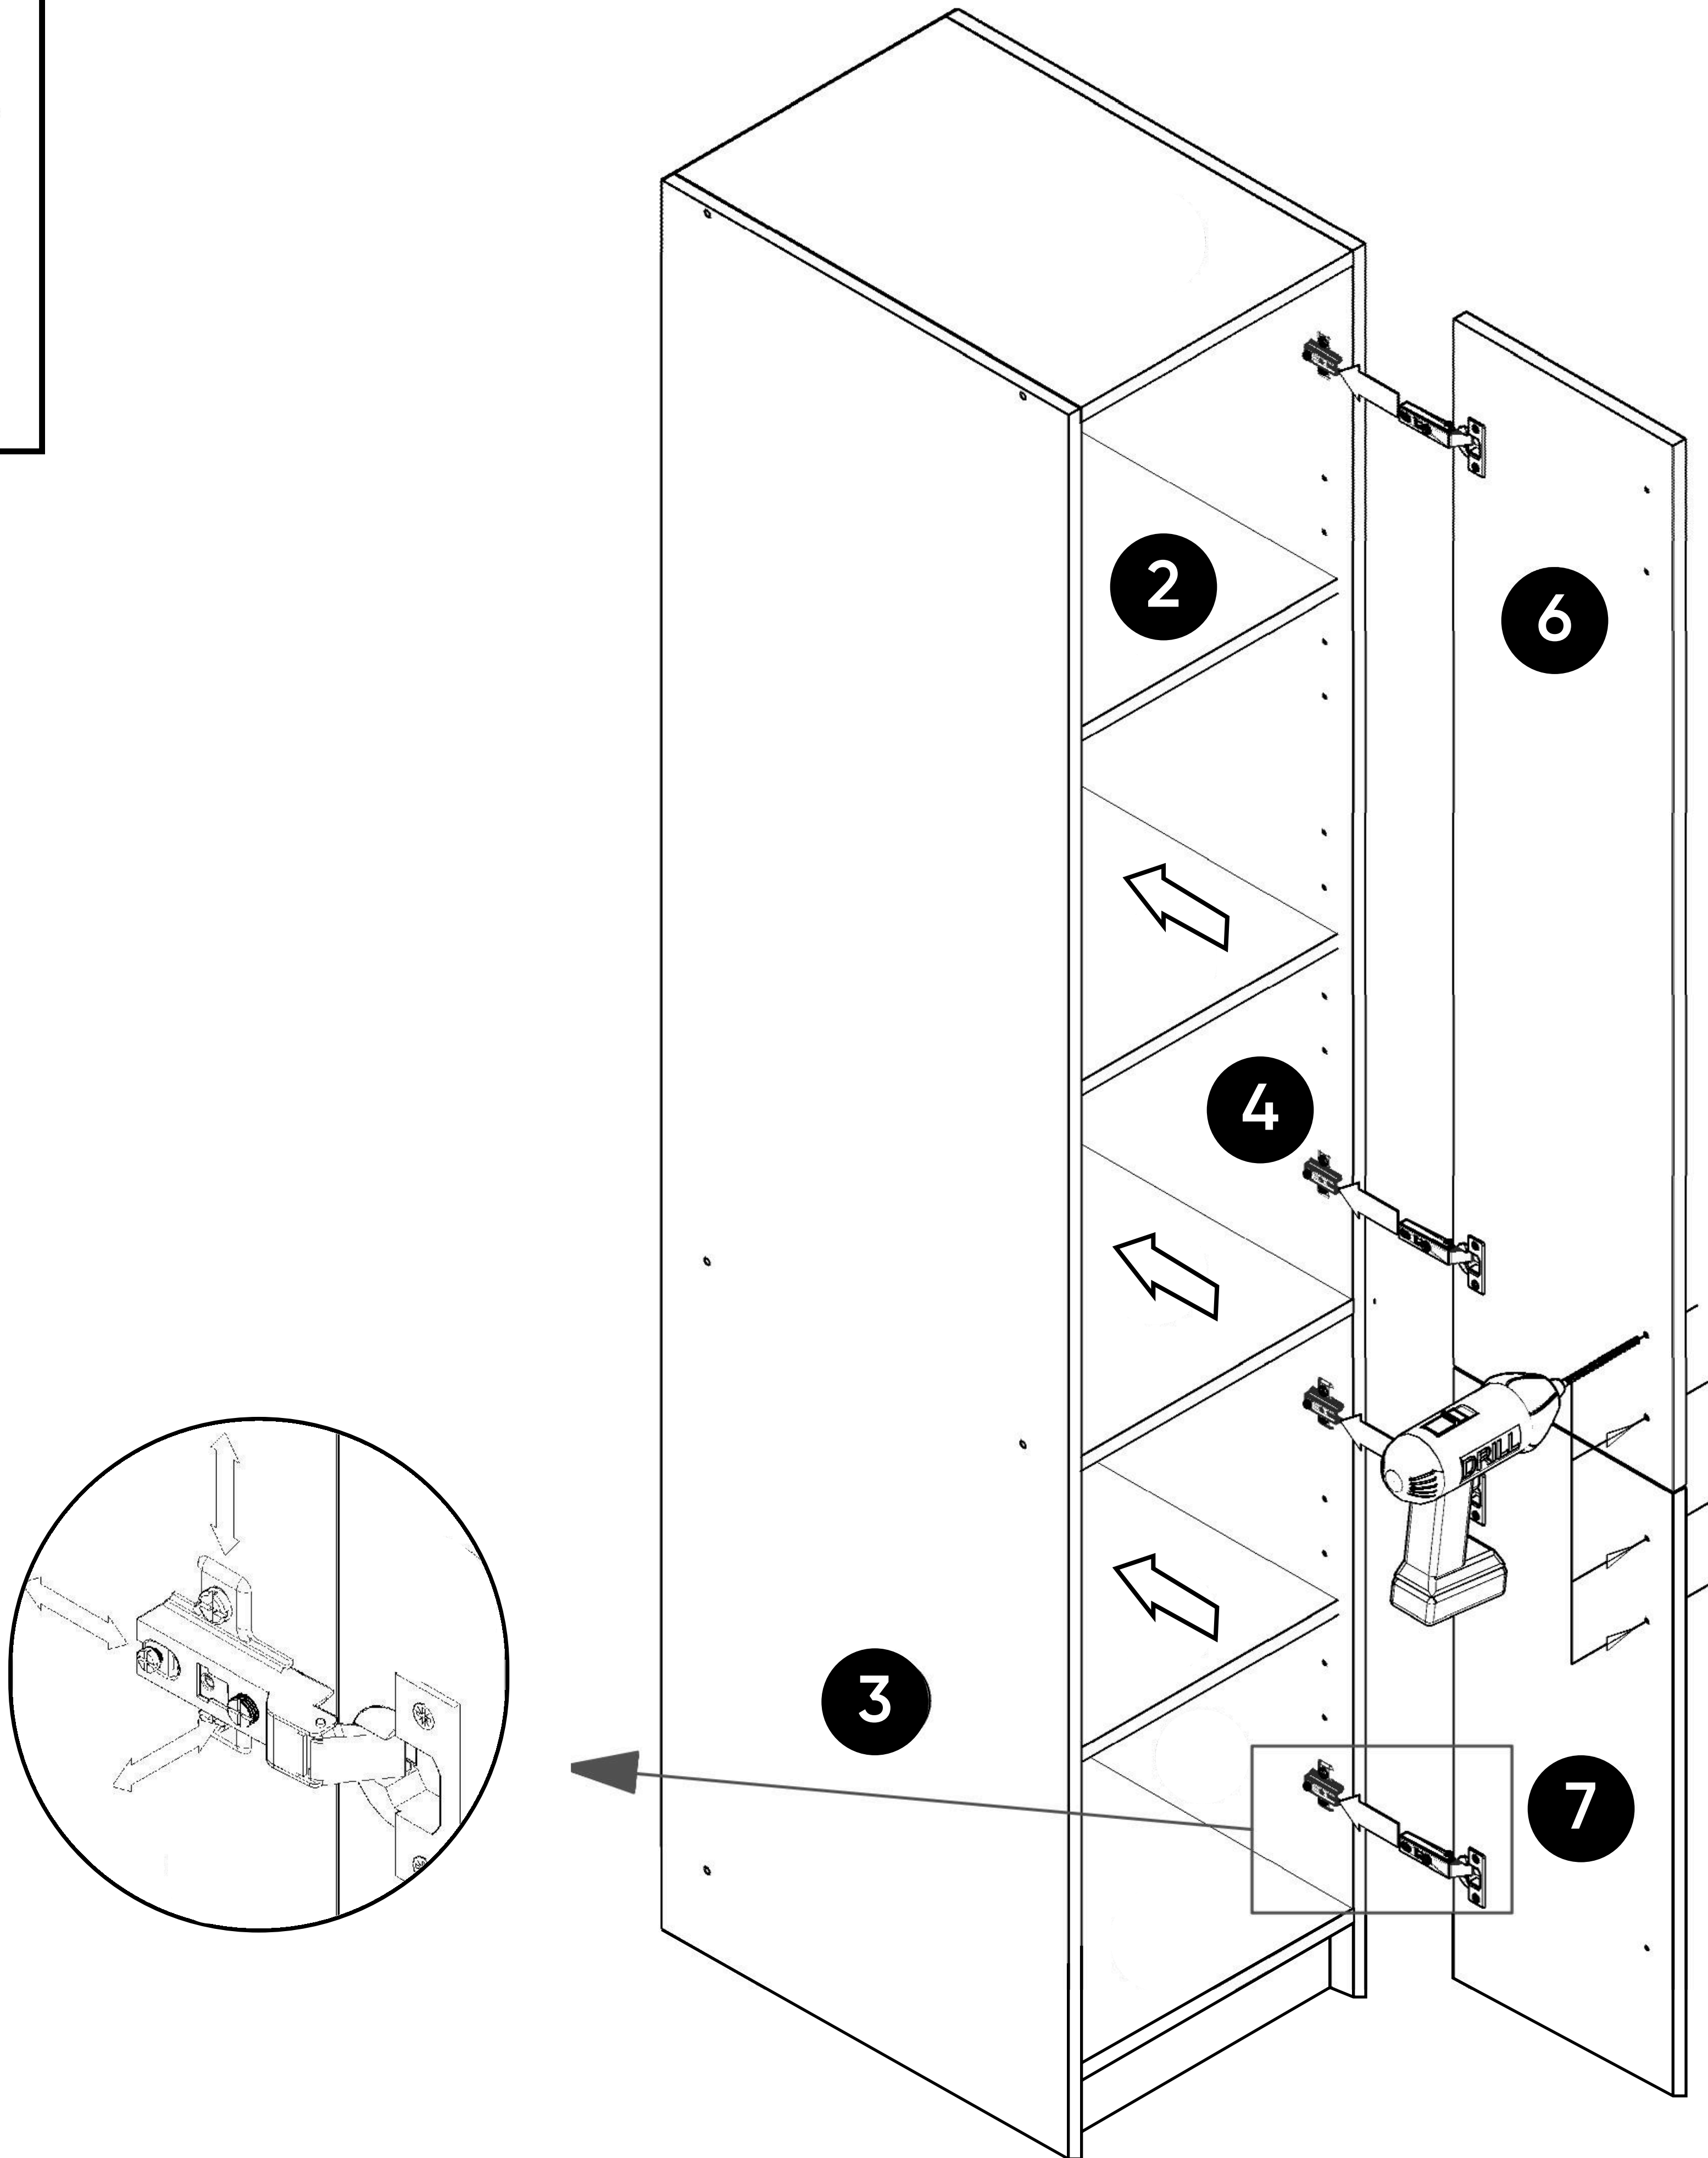

STEP - 7

