



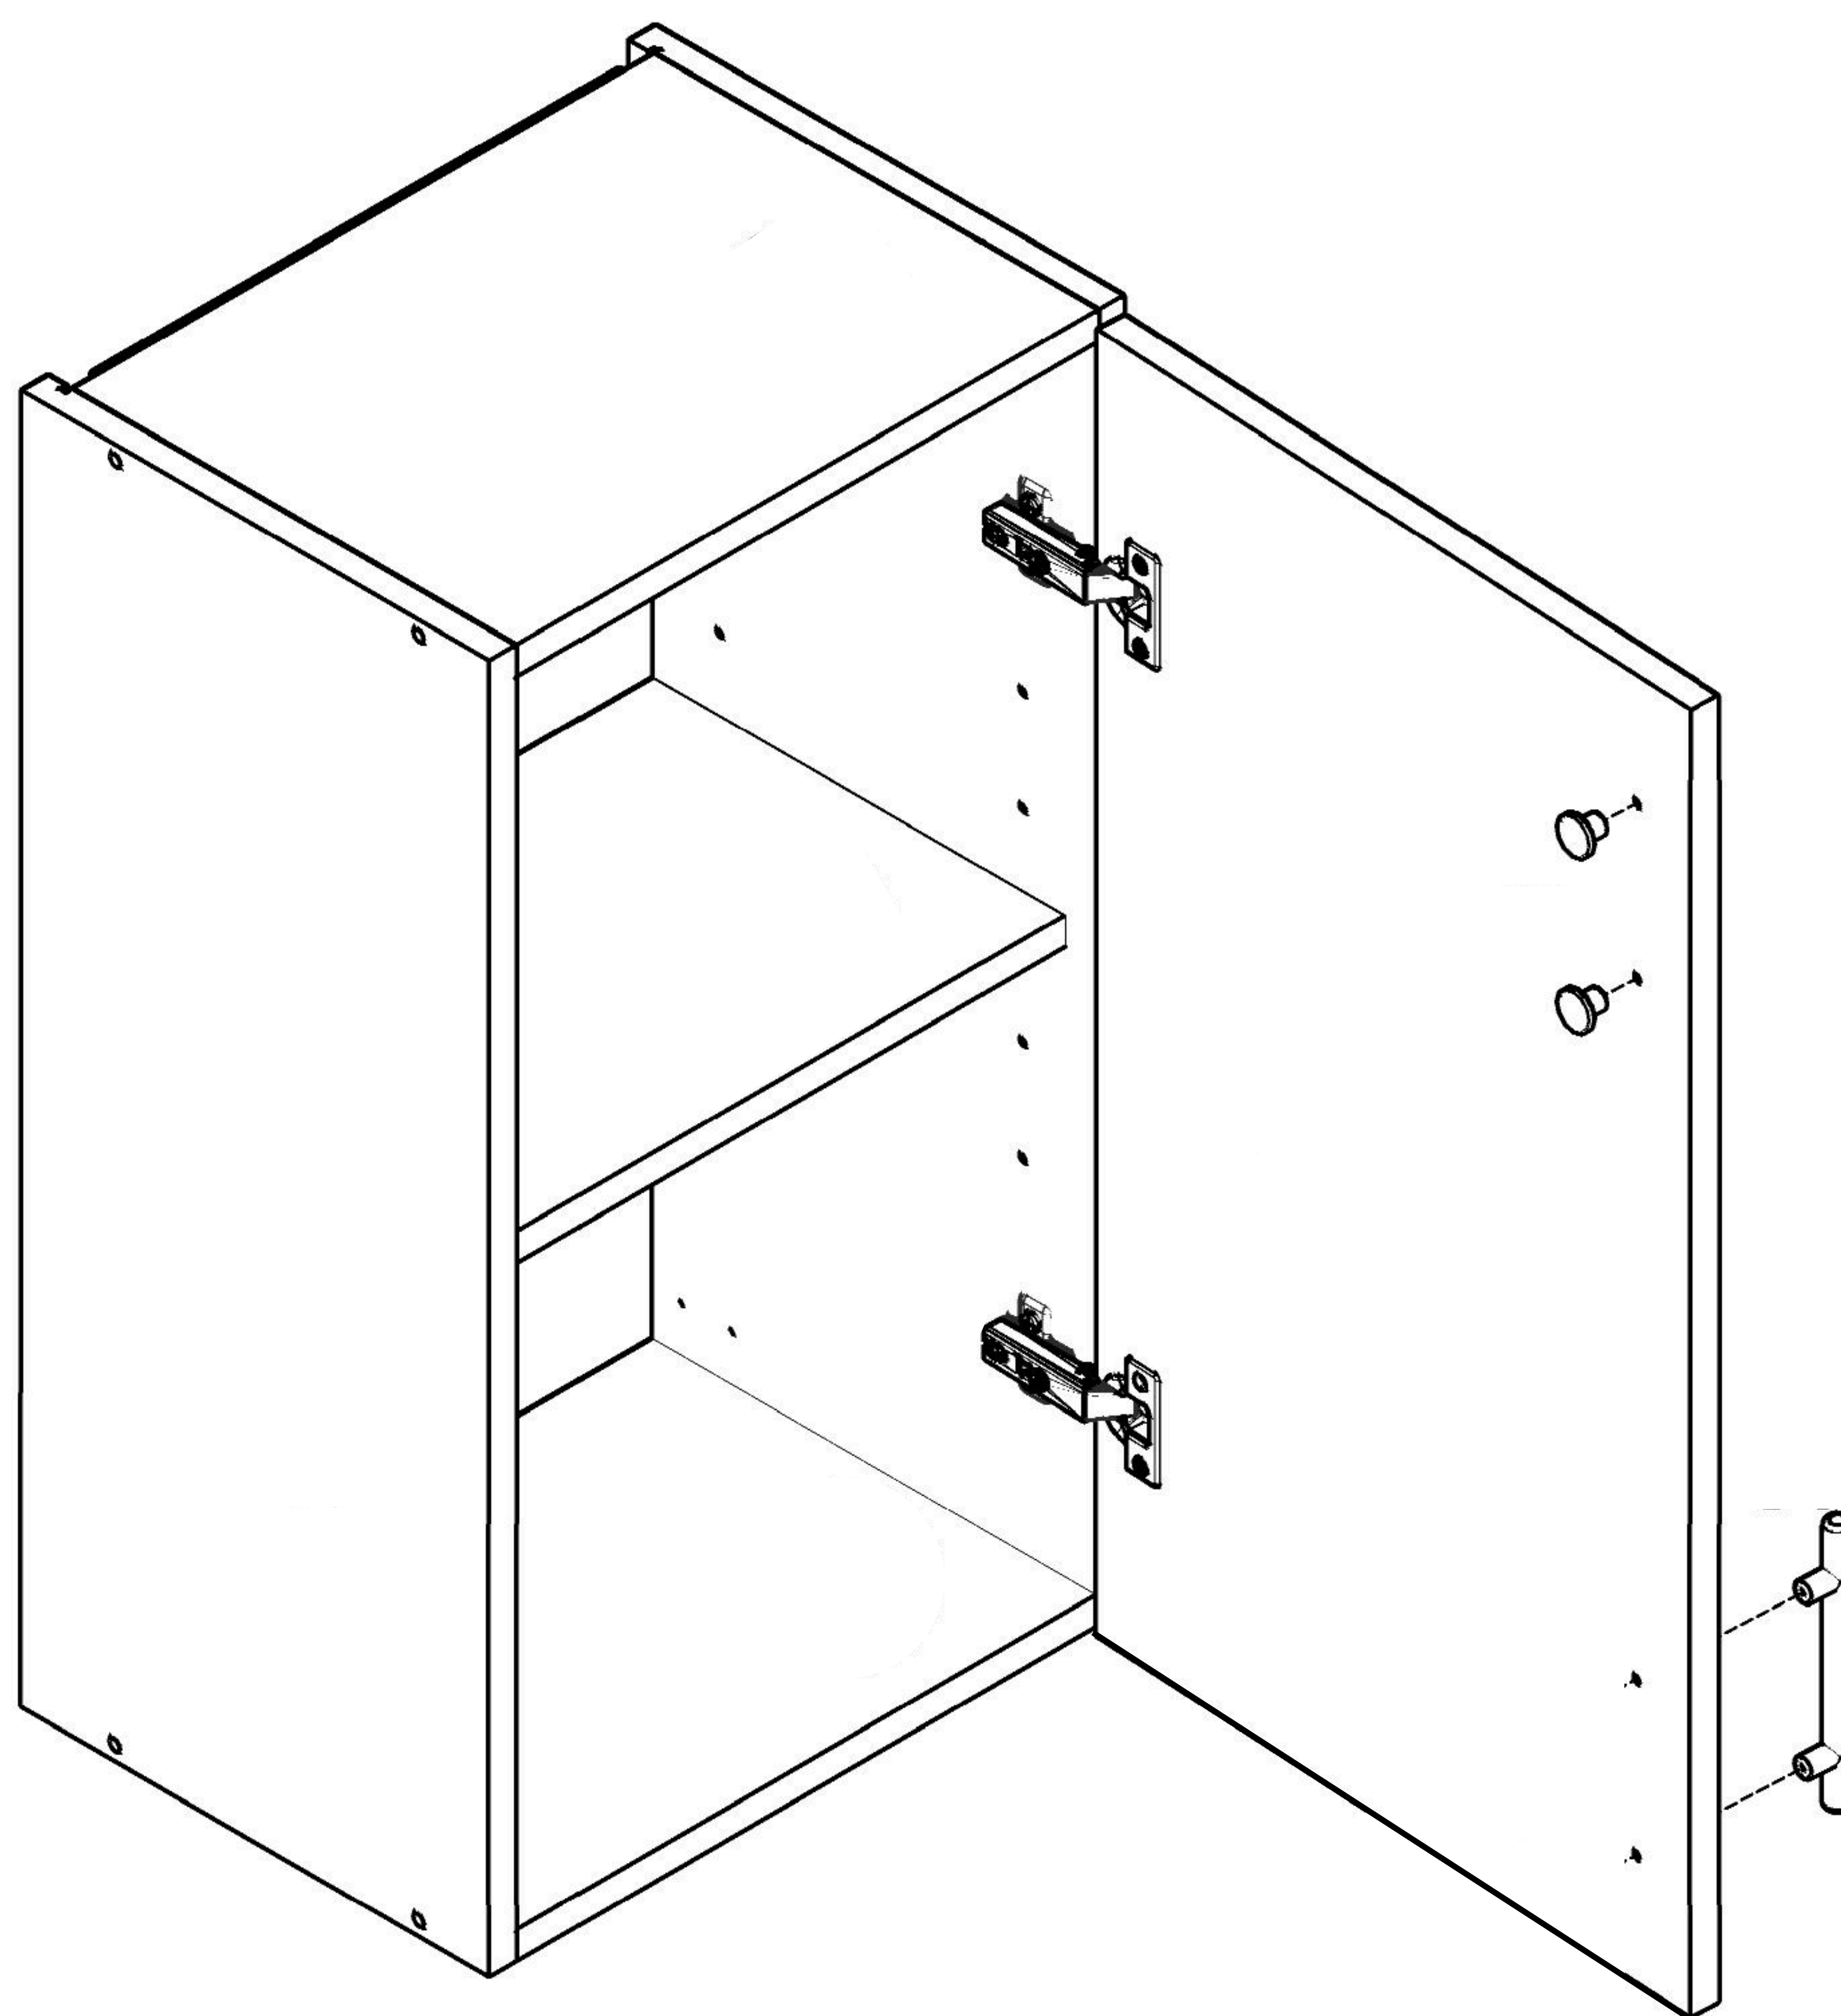


ASSEMBLY INSTRUCTIONS

KITCHEN WALL UNIT 300MM


MODEL W300

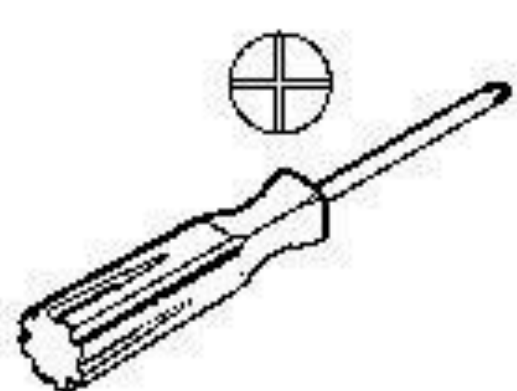


Cross-head
screwdriver

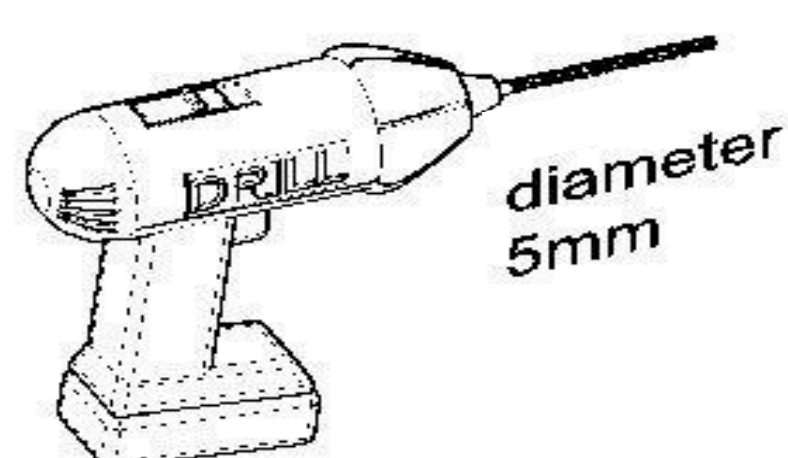

Electric
drill

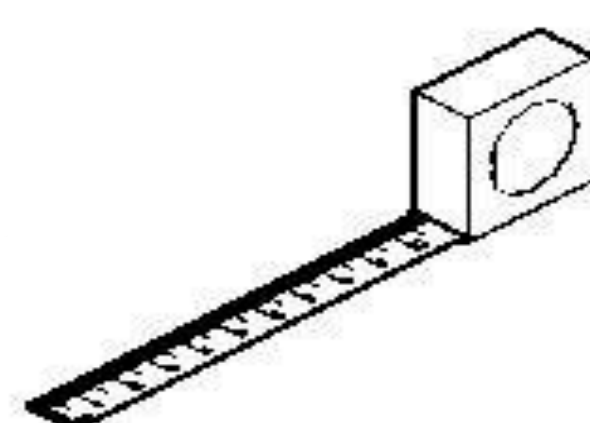

Rule

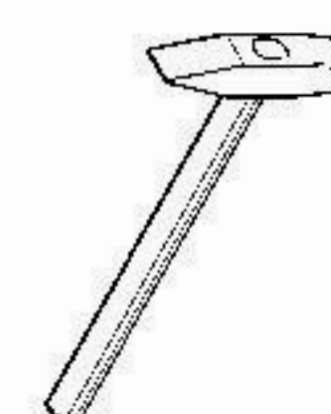

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below


1

x1

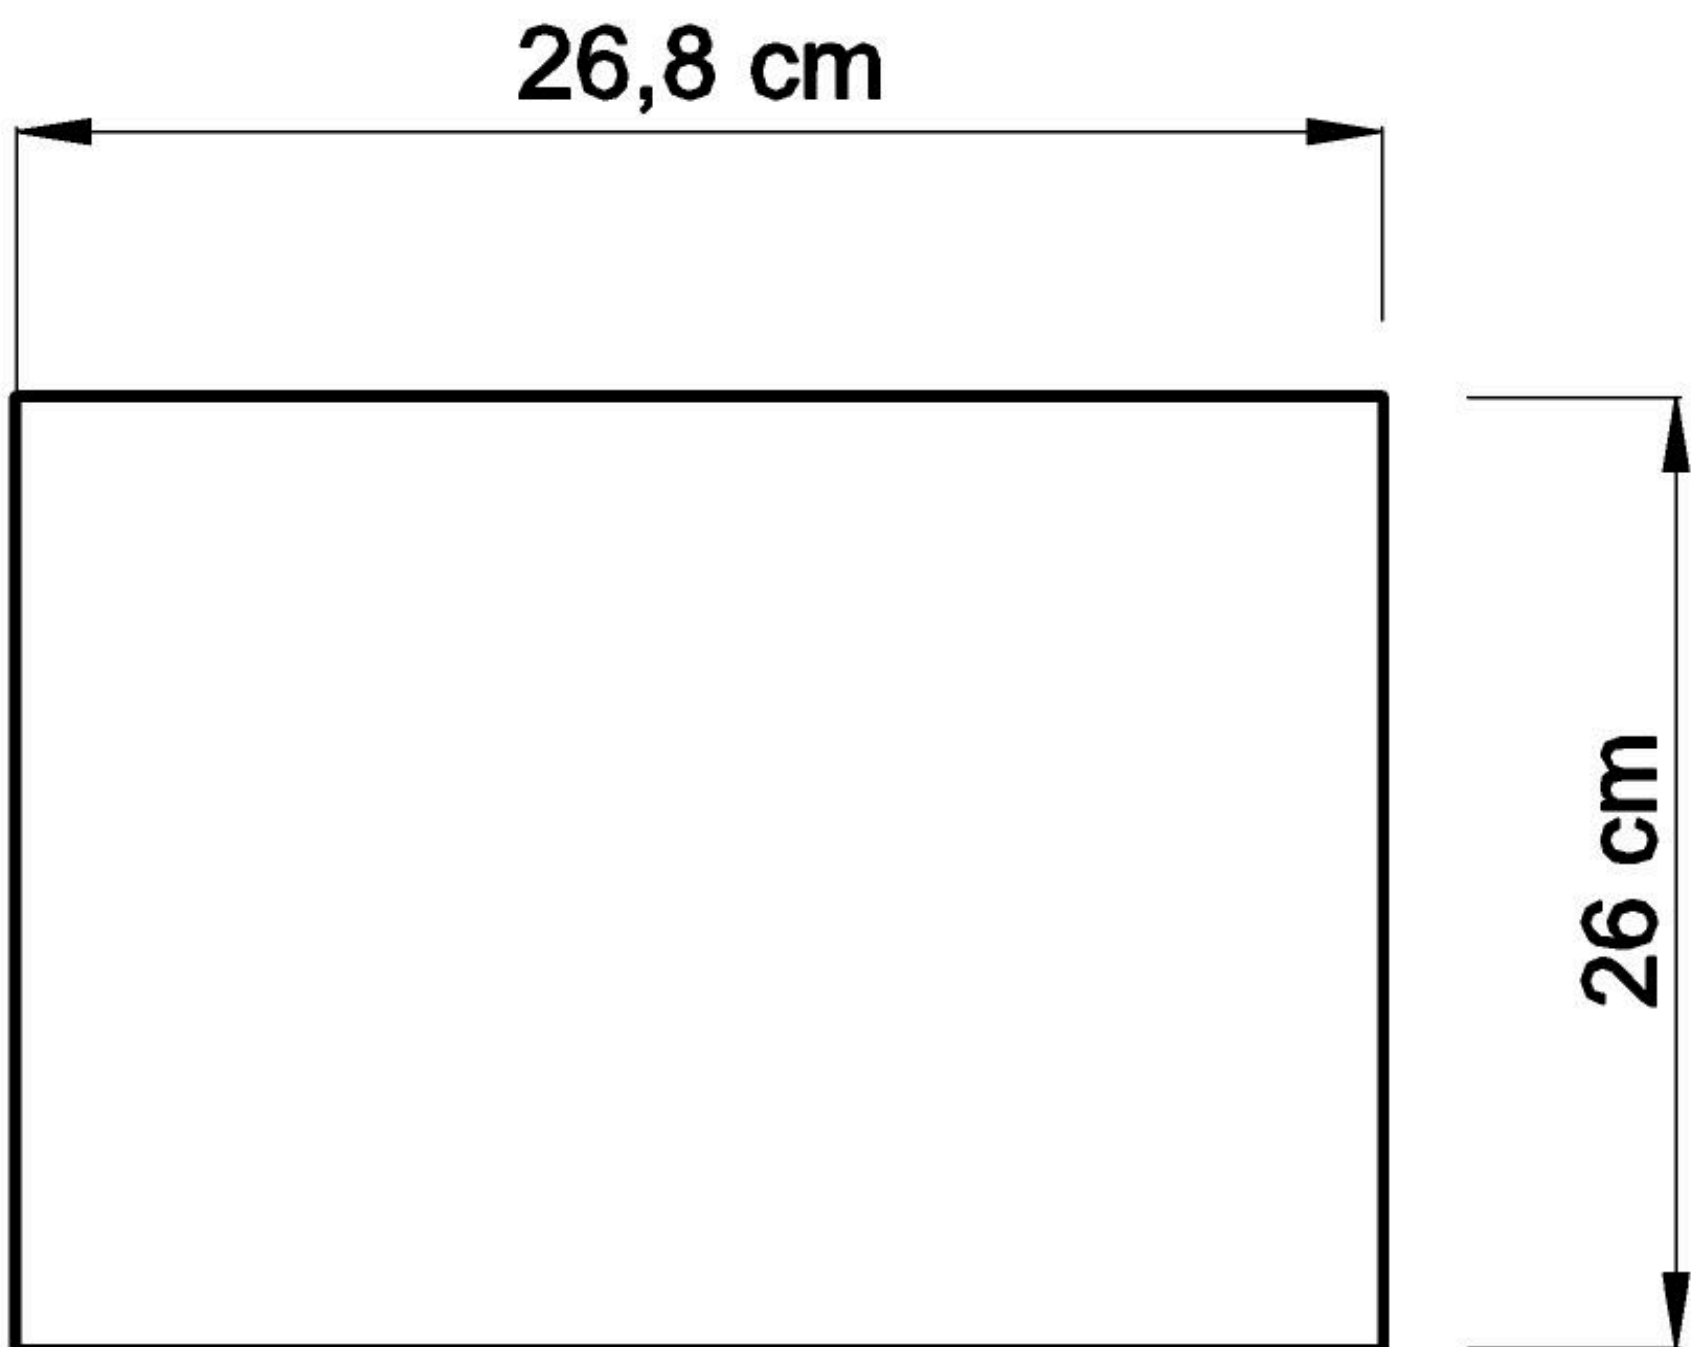


2

x1

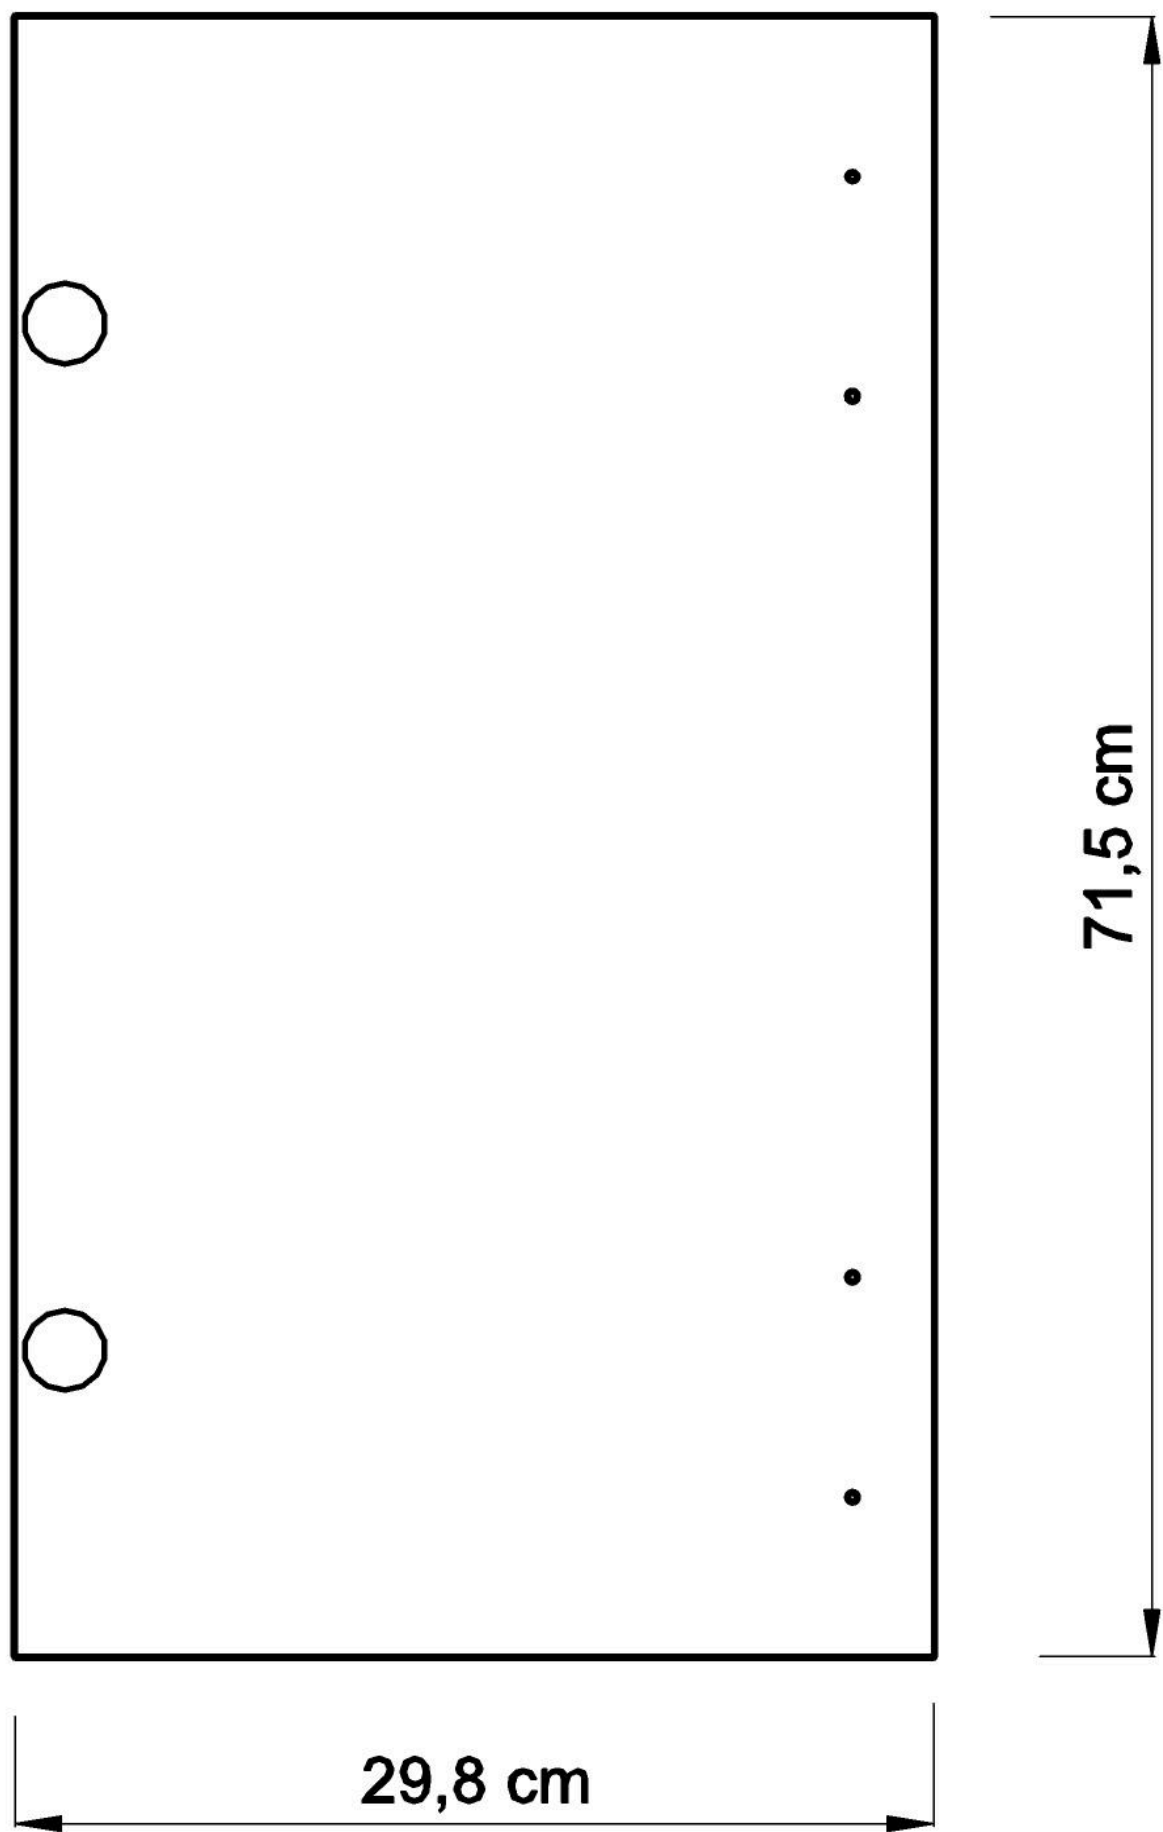


3

x2

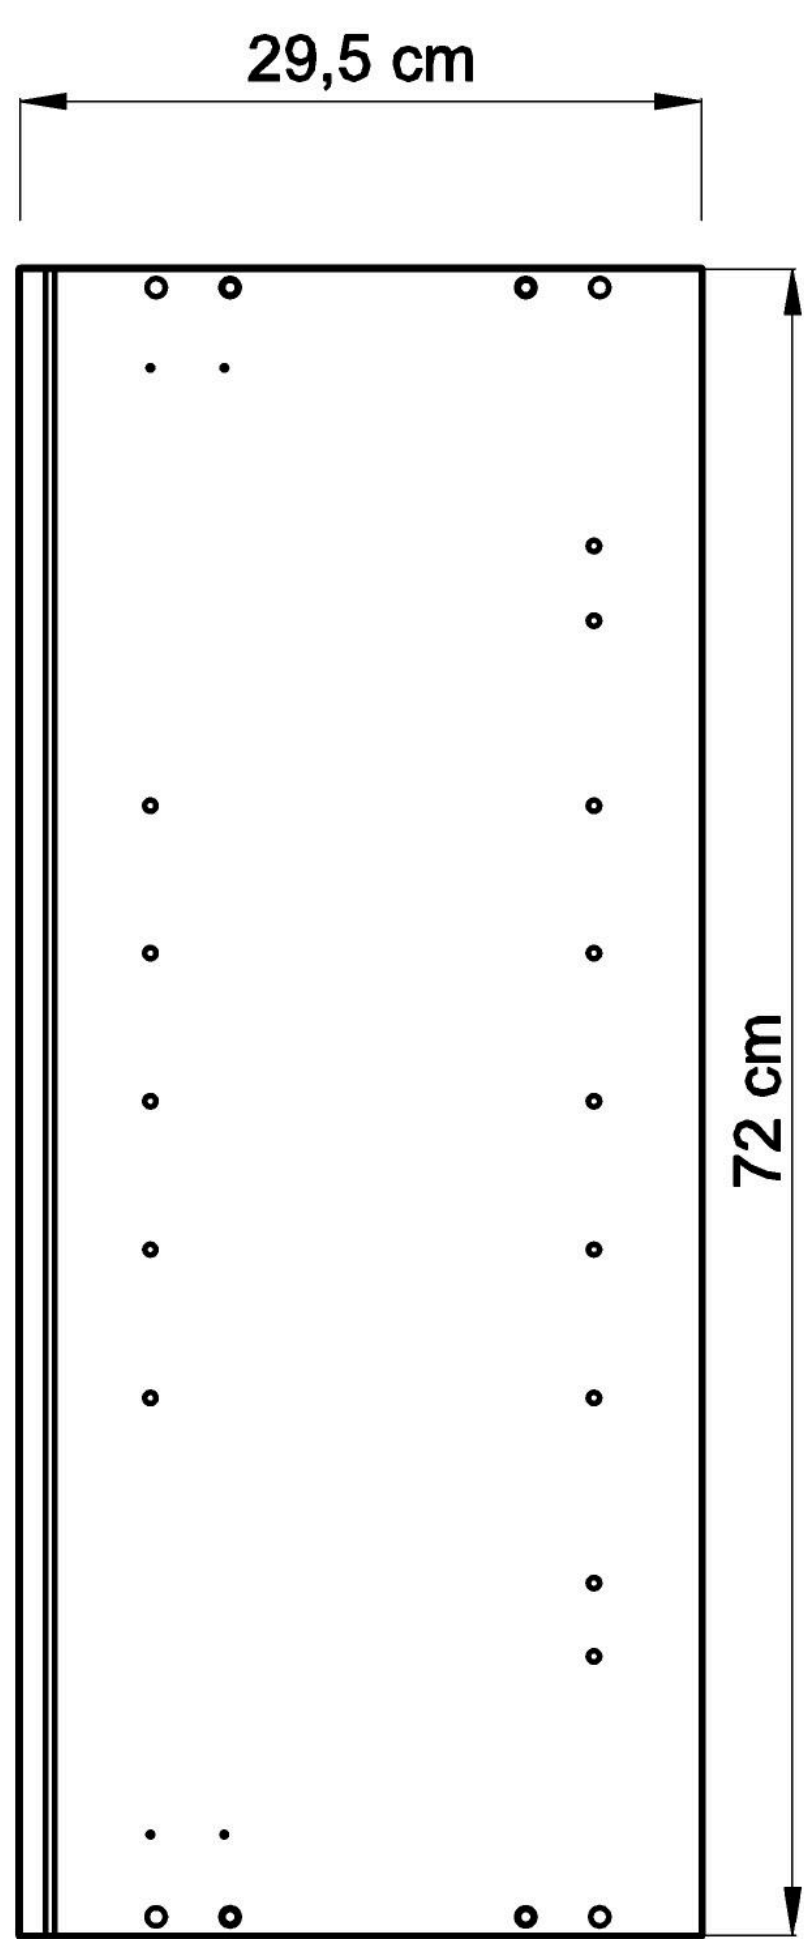


4

x1

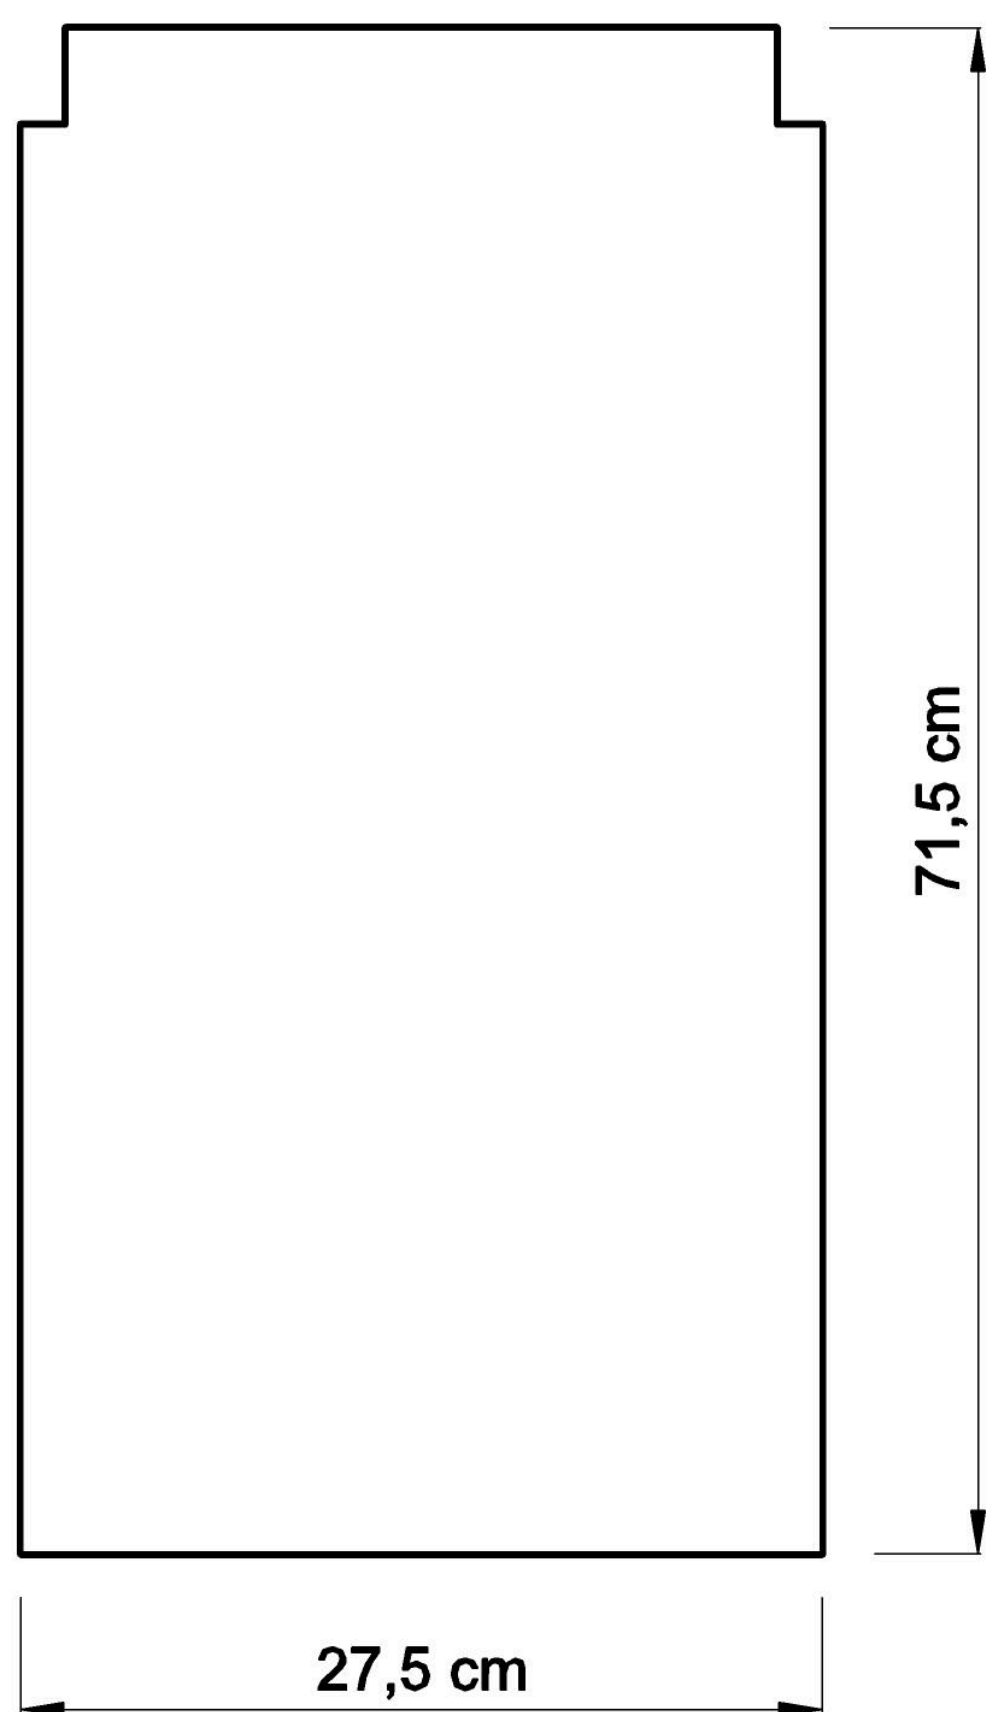












5

x2

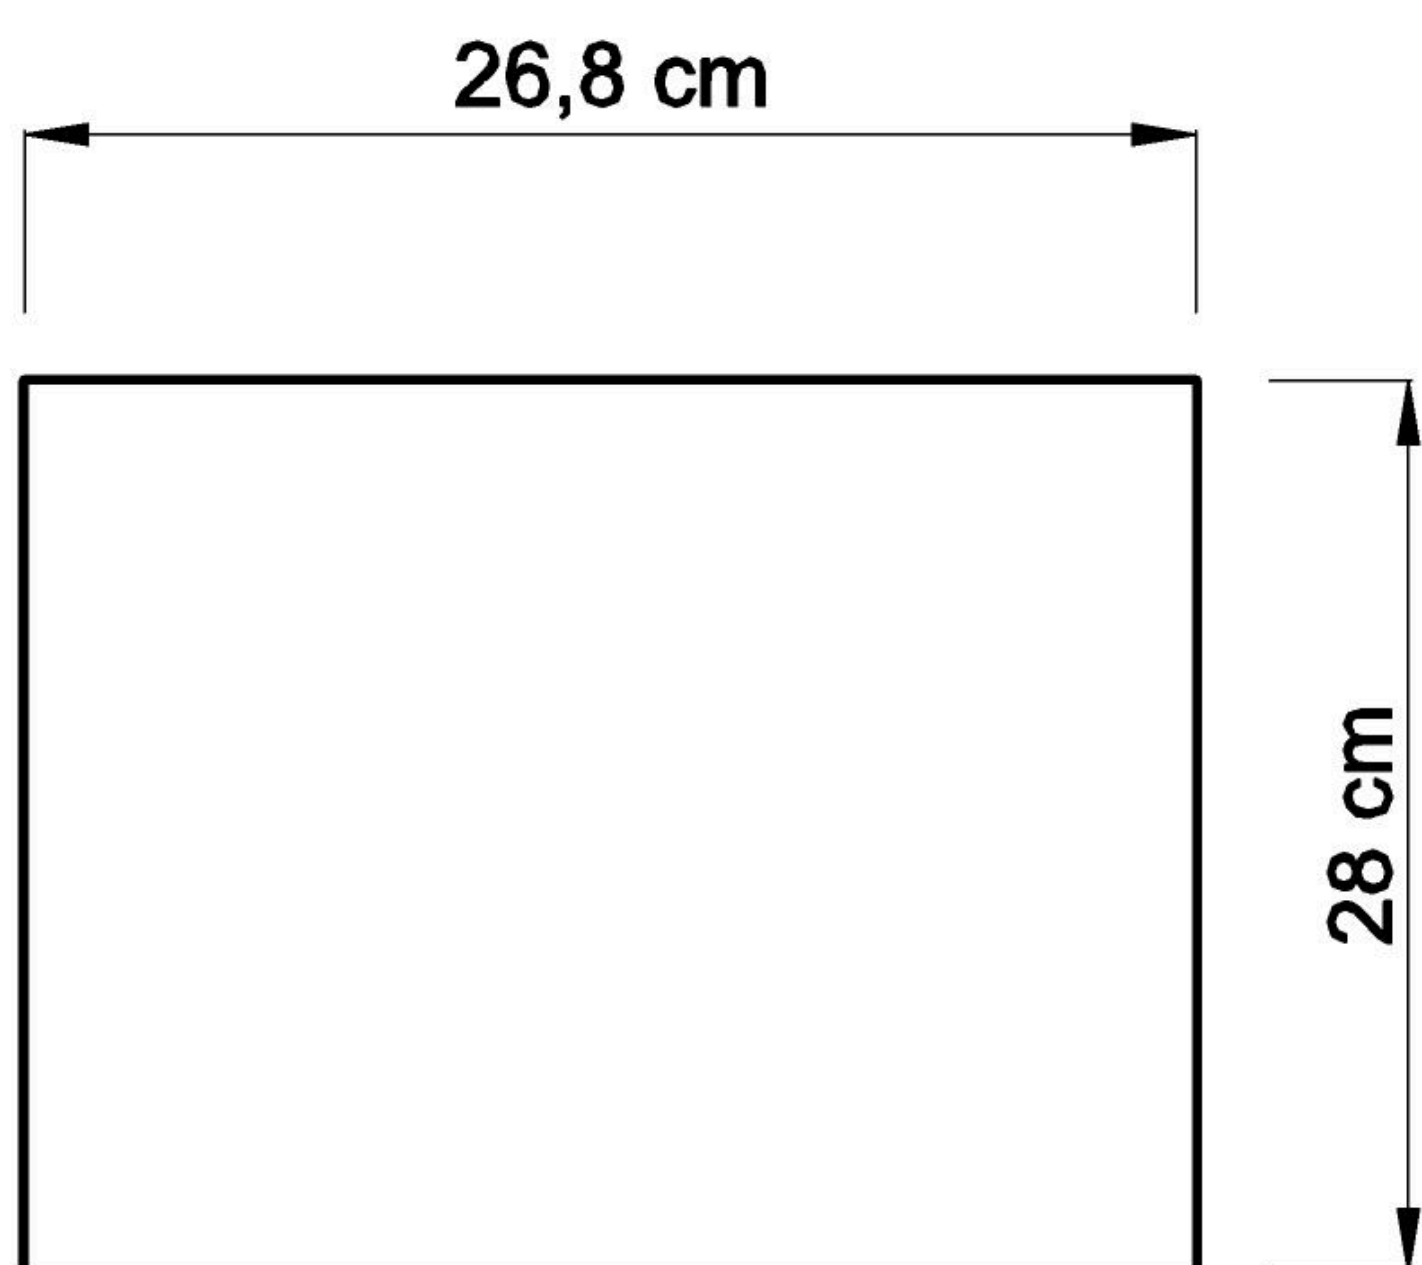

COMPONENTS - FITTINGS

Please check you have all the fittings listed below
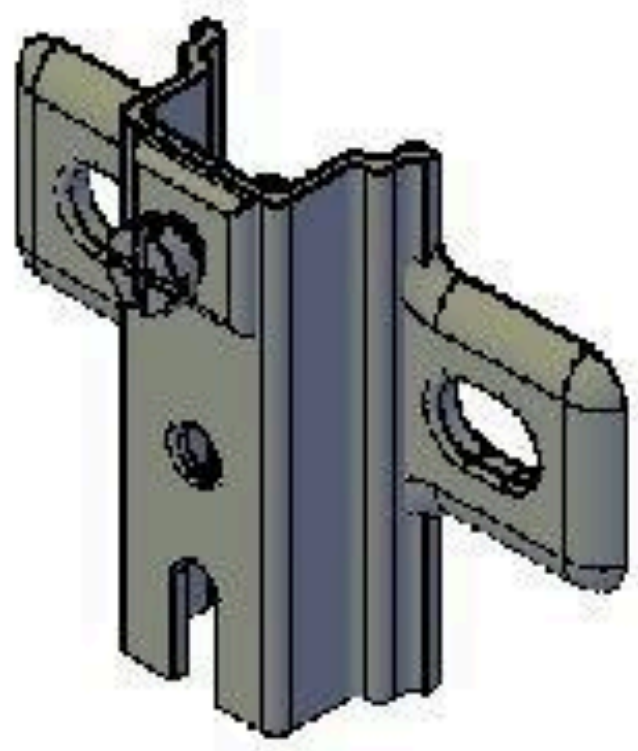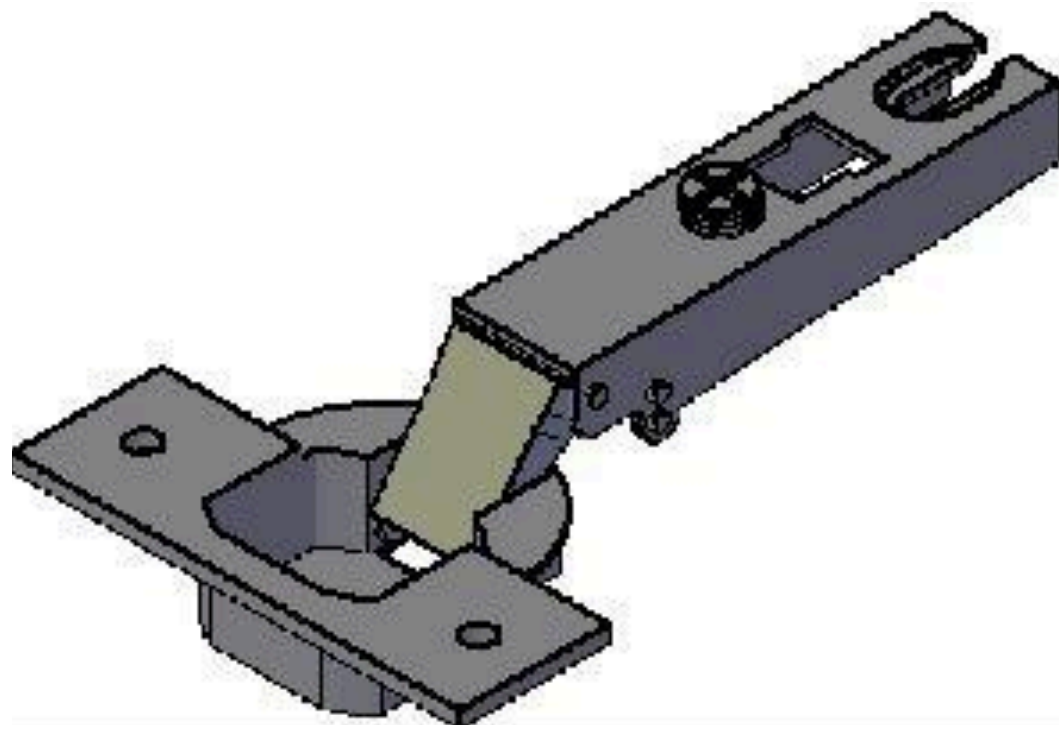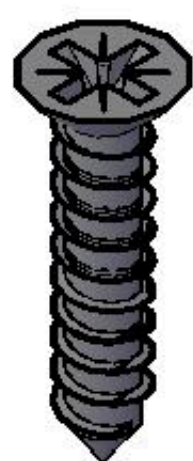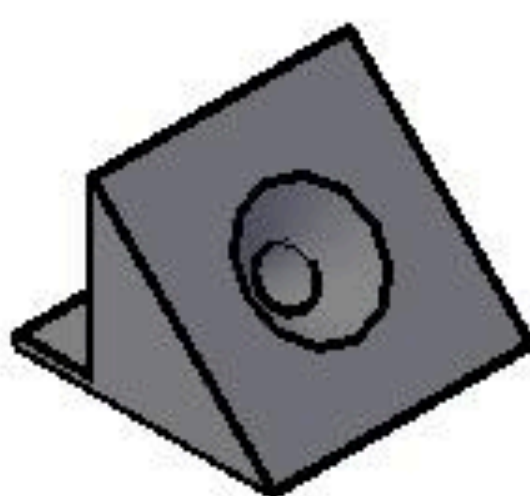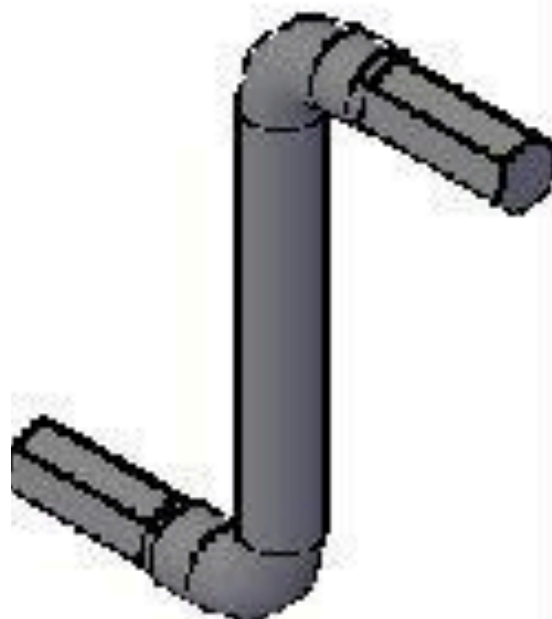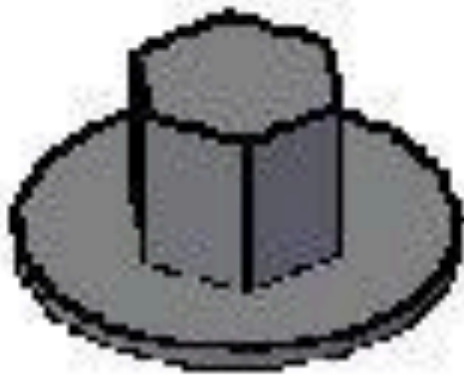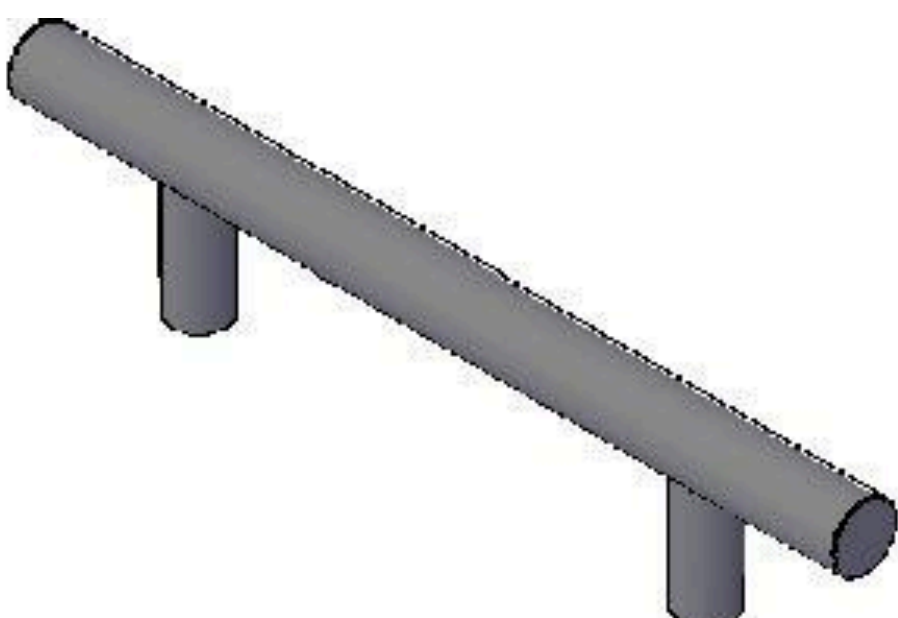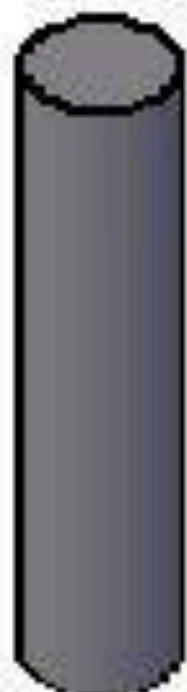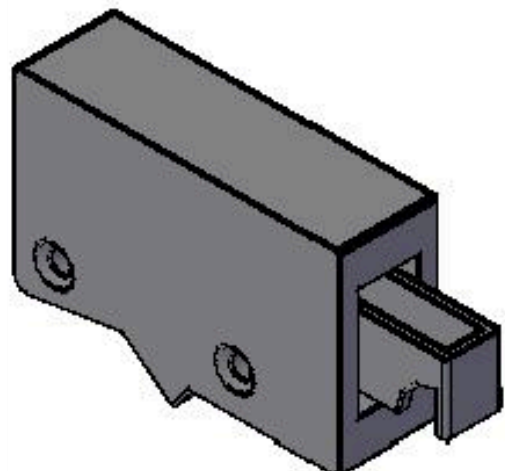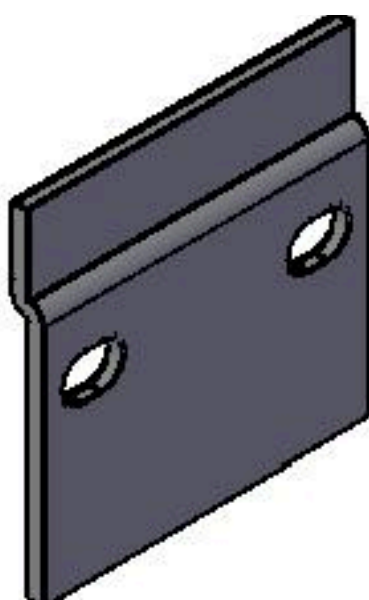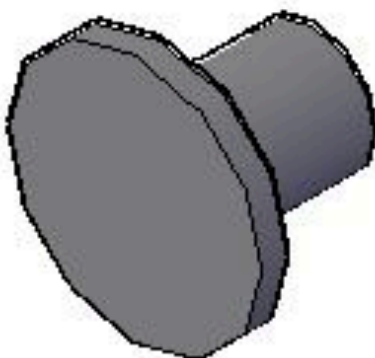
<div><div>O</div>x4</div> <div></div> <div>⌀ 7x16</div>	<div><div>F</div>x2</div> <div></div> <div></div>	<div><div>G2</div>x2</div> <div></div> <div></div>	<div><div>!</div></div> <div>PAY ATTENTION: O AND F ATTACHED TO G2</div>
<div><div>H3</div>x10</div> <div></div> <div>⌀ 3x16</div>	<div><div>A4</div>x10</div> <div></div> <div></div>	<div><div>Q7</div>x1</div> <div></div> <div></div>	<div><div>C</div>x8</div> <div></div> <div>⌀ 7x50</div>
<div><div>S1</div>x8</div> <div></div> <div></div>	<div><div>H9</div>x4 US 031.03</div> <div></div> <div>⌀ 4x30</div>	<div><div>J9</div>x2</div> <div></div> <div>⌀ 3x25</div>	<div><div>U7</div>x1</div> <div></div> <div></div>
<div><div>H</div>x4 US 031.03</div> <div></div> <div>⌀ 3.5x13</div>	<div><div>W</div>x10</div> <div></div> <div></div>	<div><div>D8</div>x4</div> <div></div> <div></div>	<div><div>A</div>x8</div> <div></div> <div></div>
<div><div>Z8</div>x2</div> <div></div> <div></div>	<div><div>Z9</div>x2</div> <div></div> <div></div>	<div><div>S7</div>x2</div> <div></div> <div></div>	

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x4

F x2

D8 x4

H9 x4 US 031.03

Z8 x2

A x8

7x16

4x30

STEP - 2

Q7 x1


S1 x8

C x8



7x50

Q7 C S1

STEP - 3

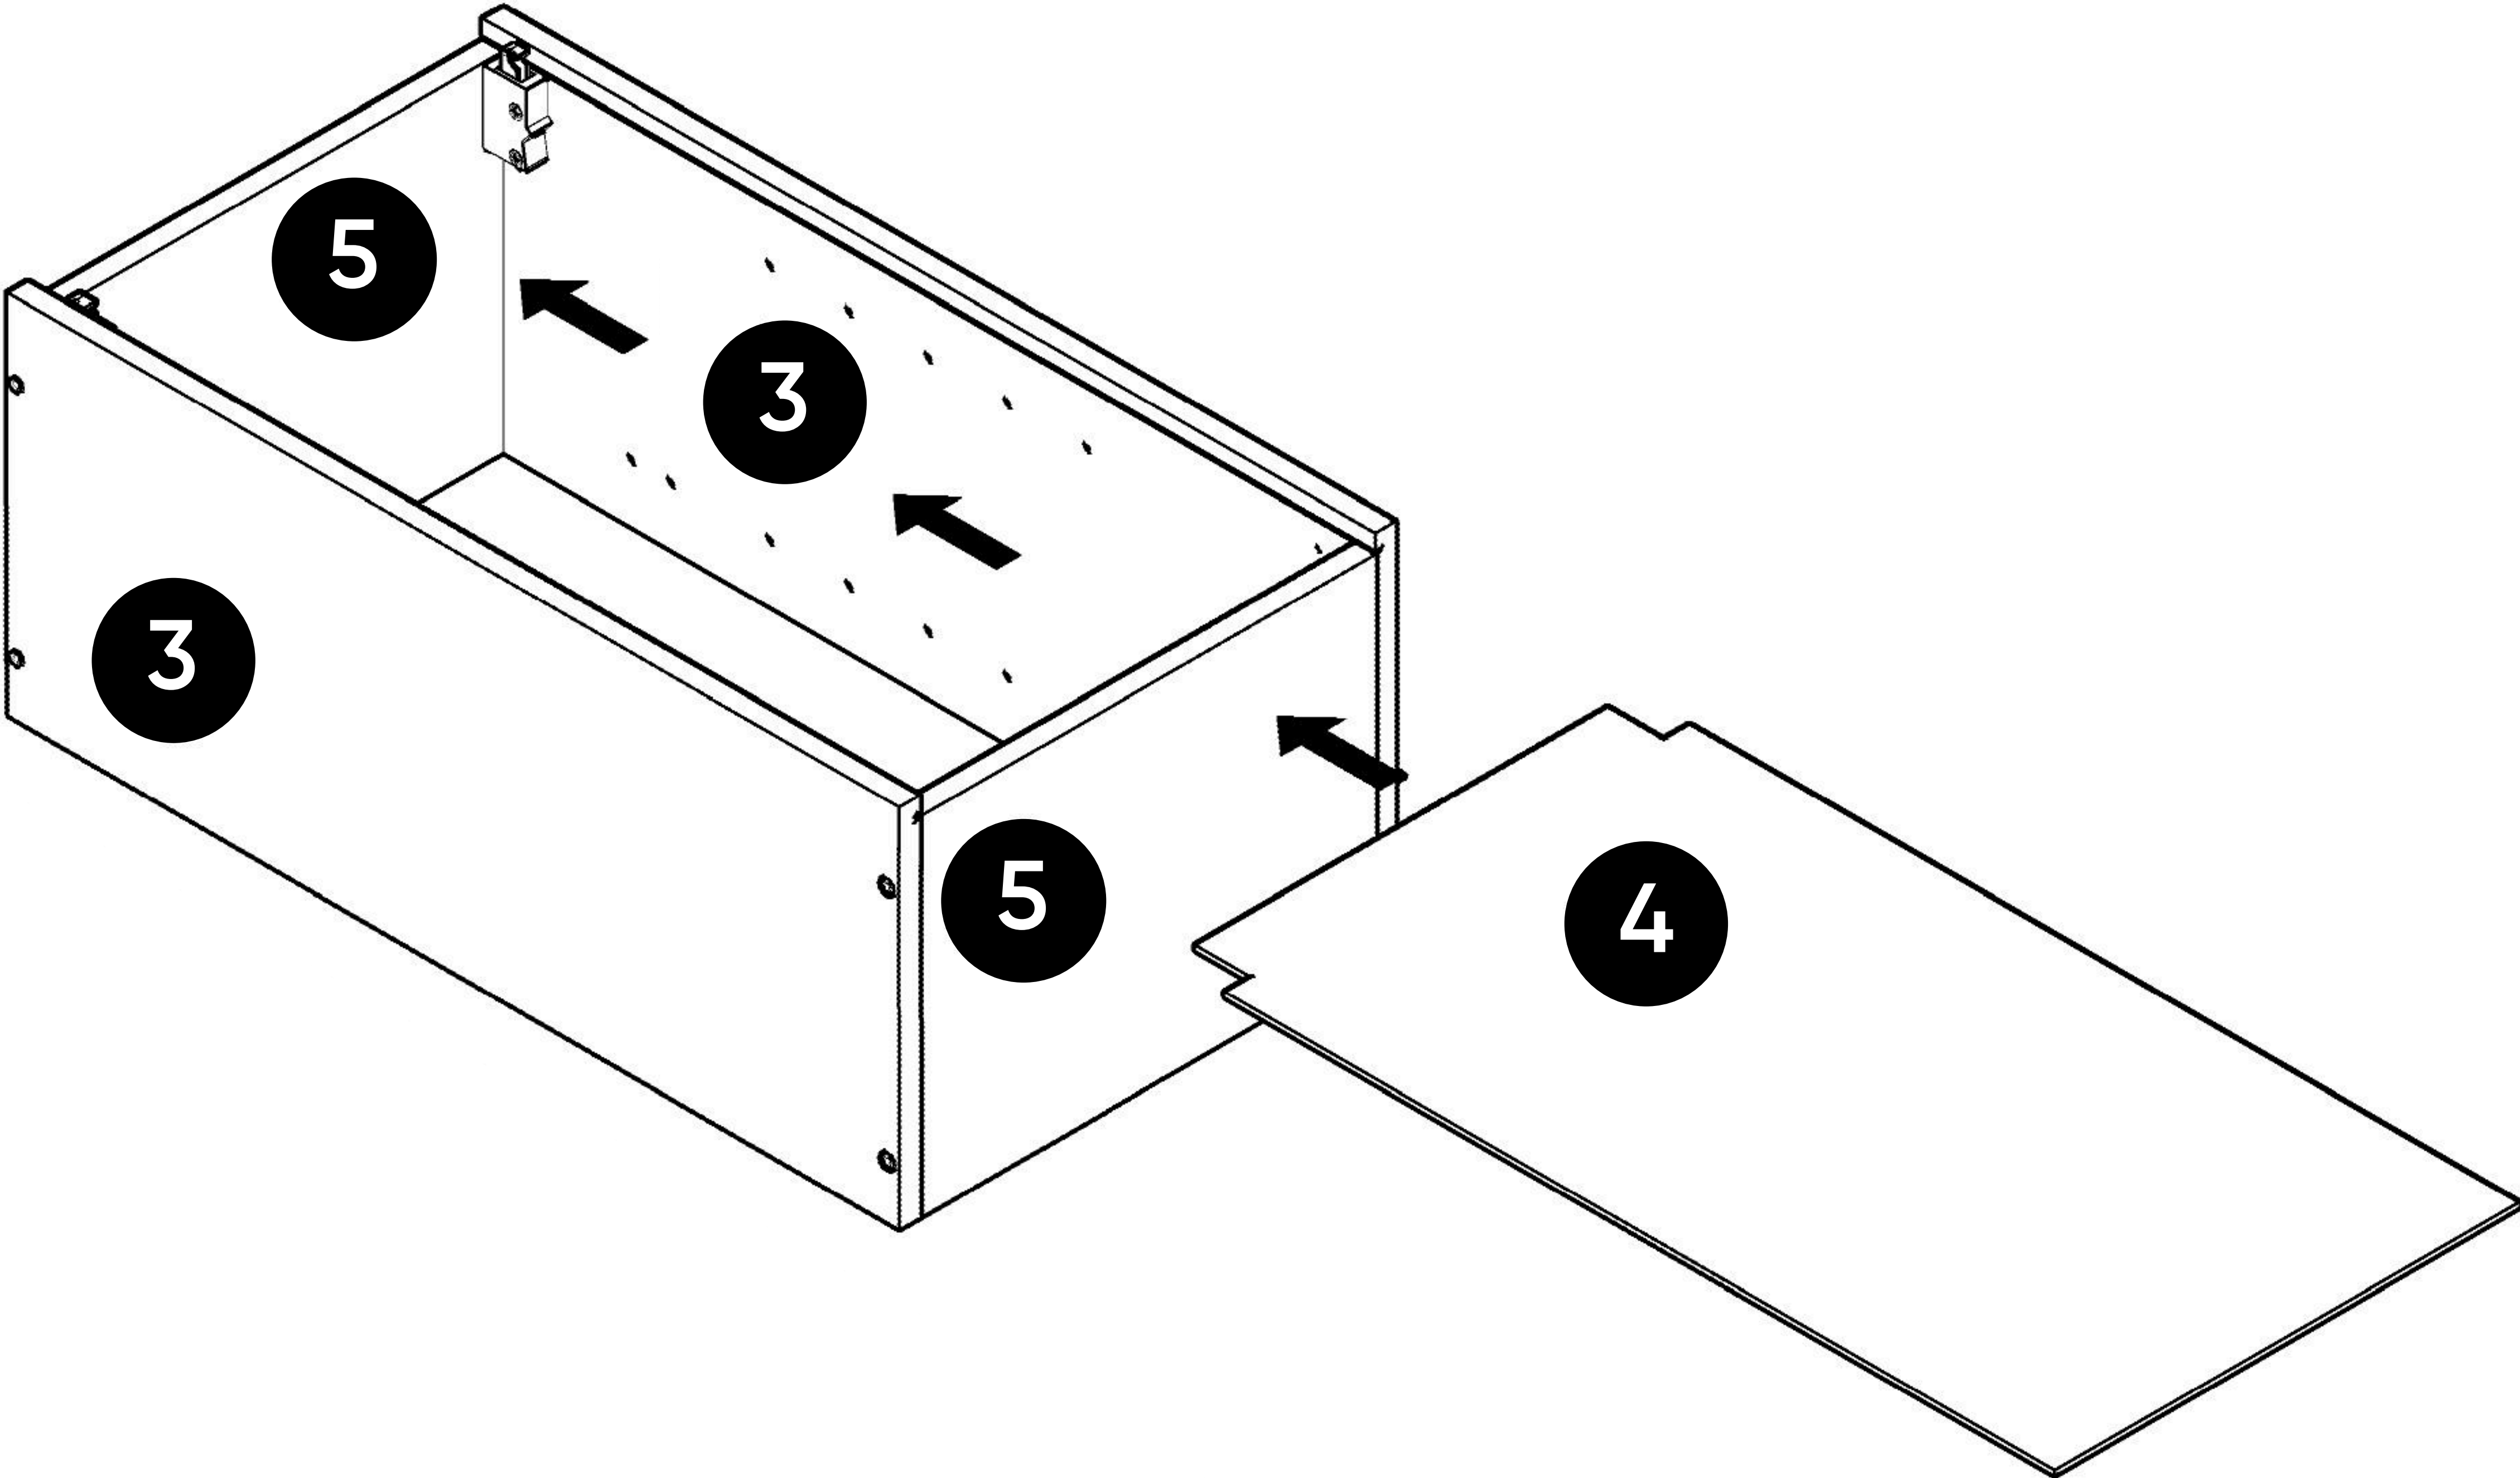

STEP - 4

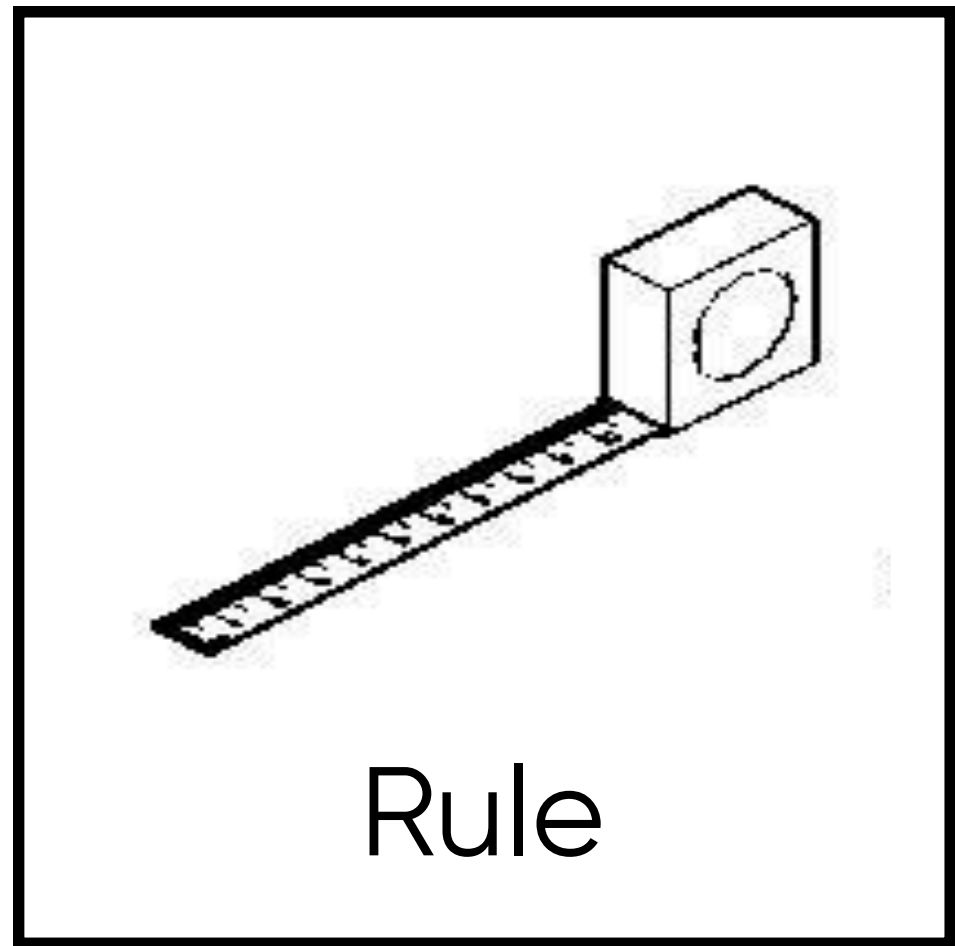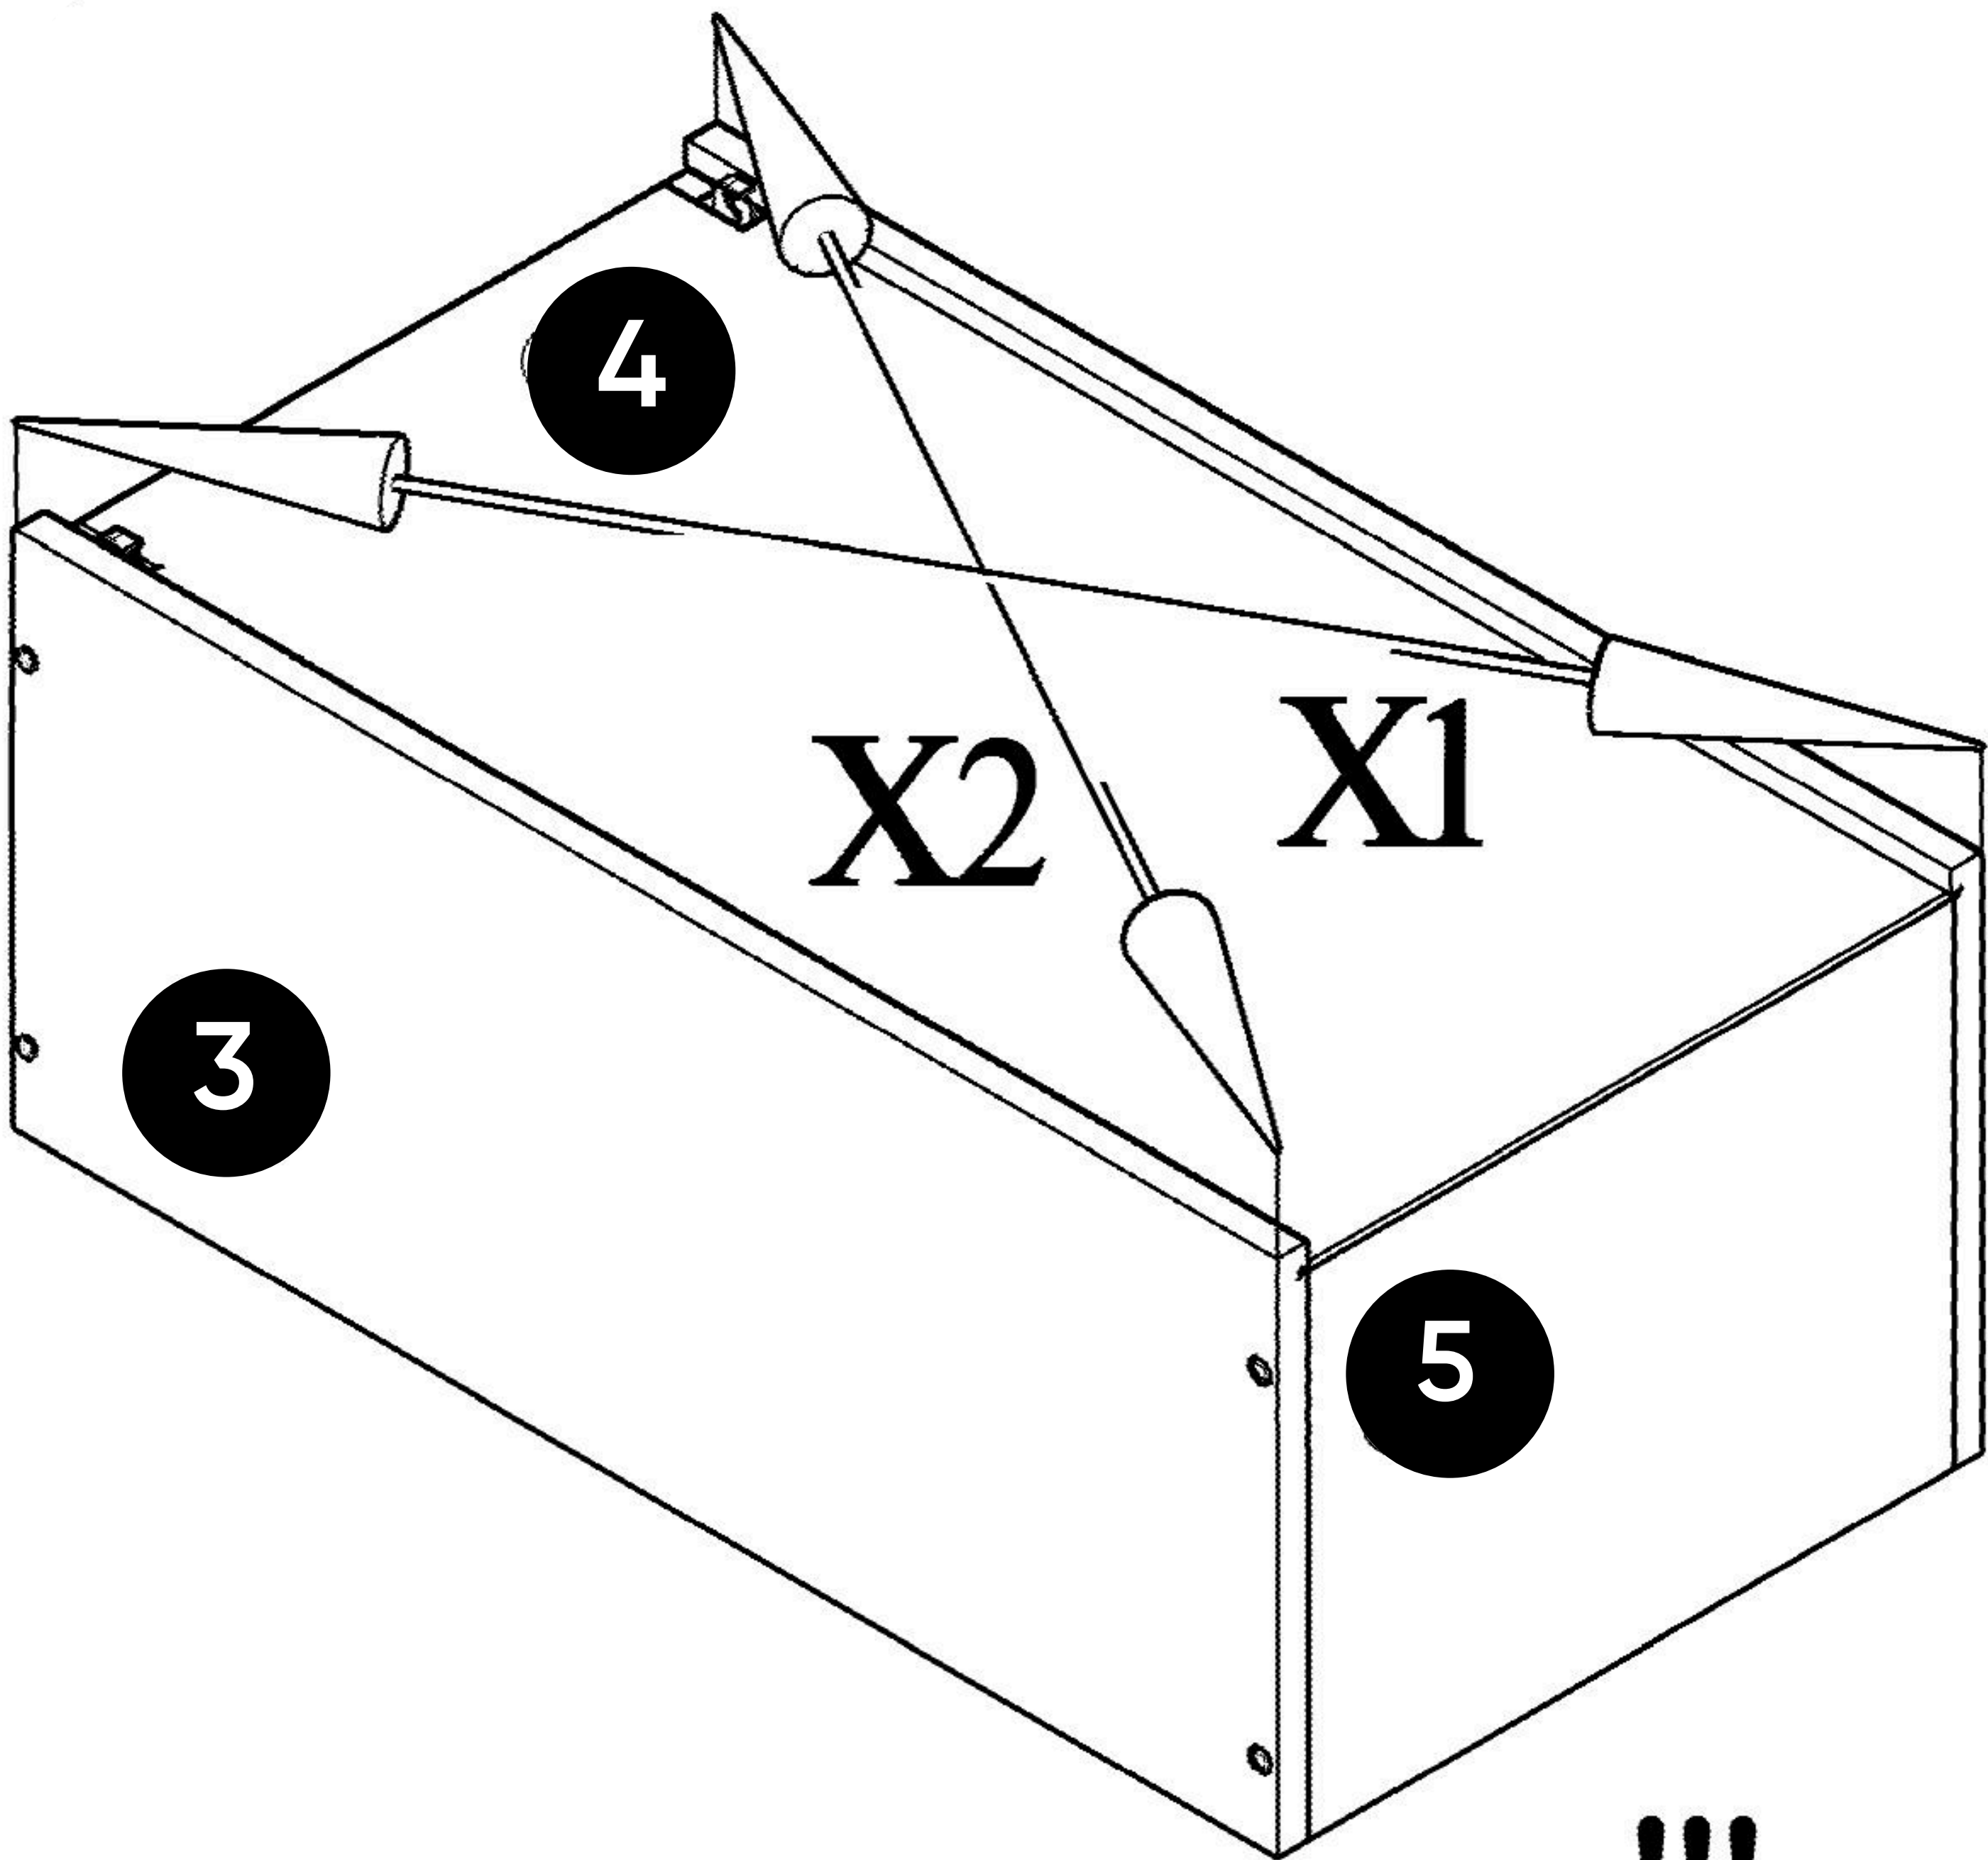


!!! $X1=X2$

STEP - 5


W x10




A4 x10

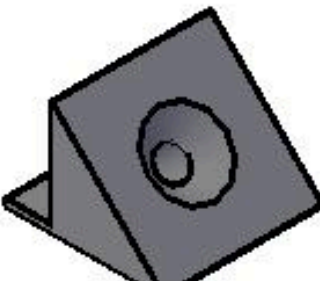

H3 x10




⌀ 3x16

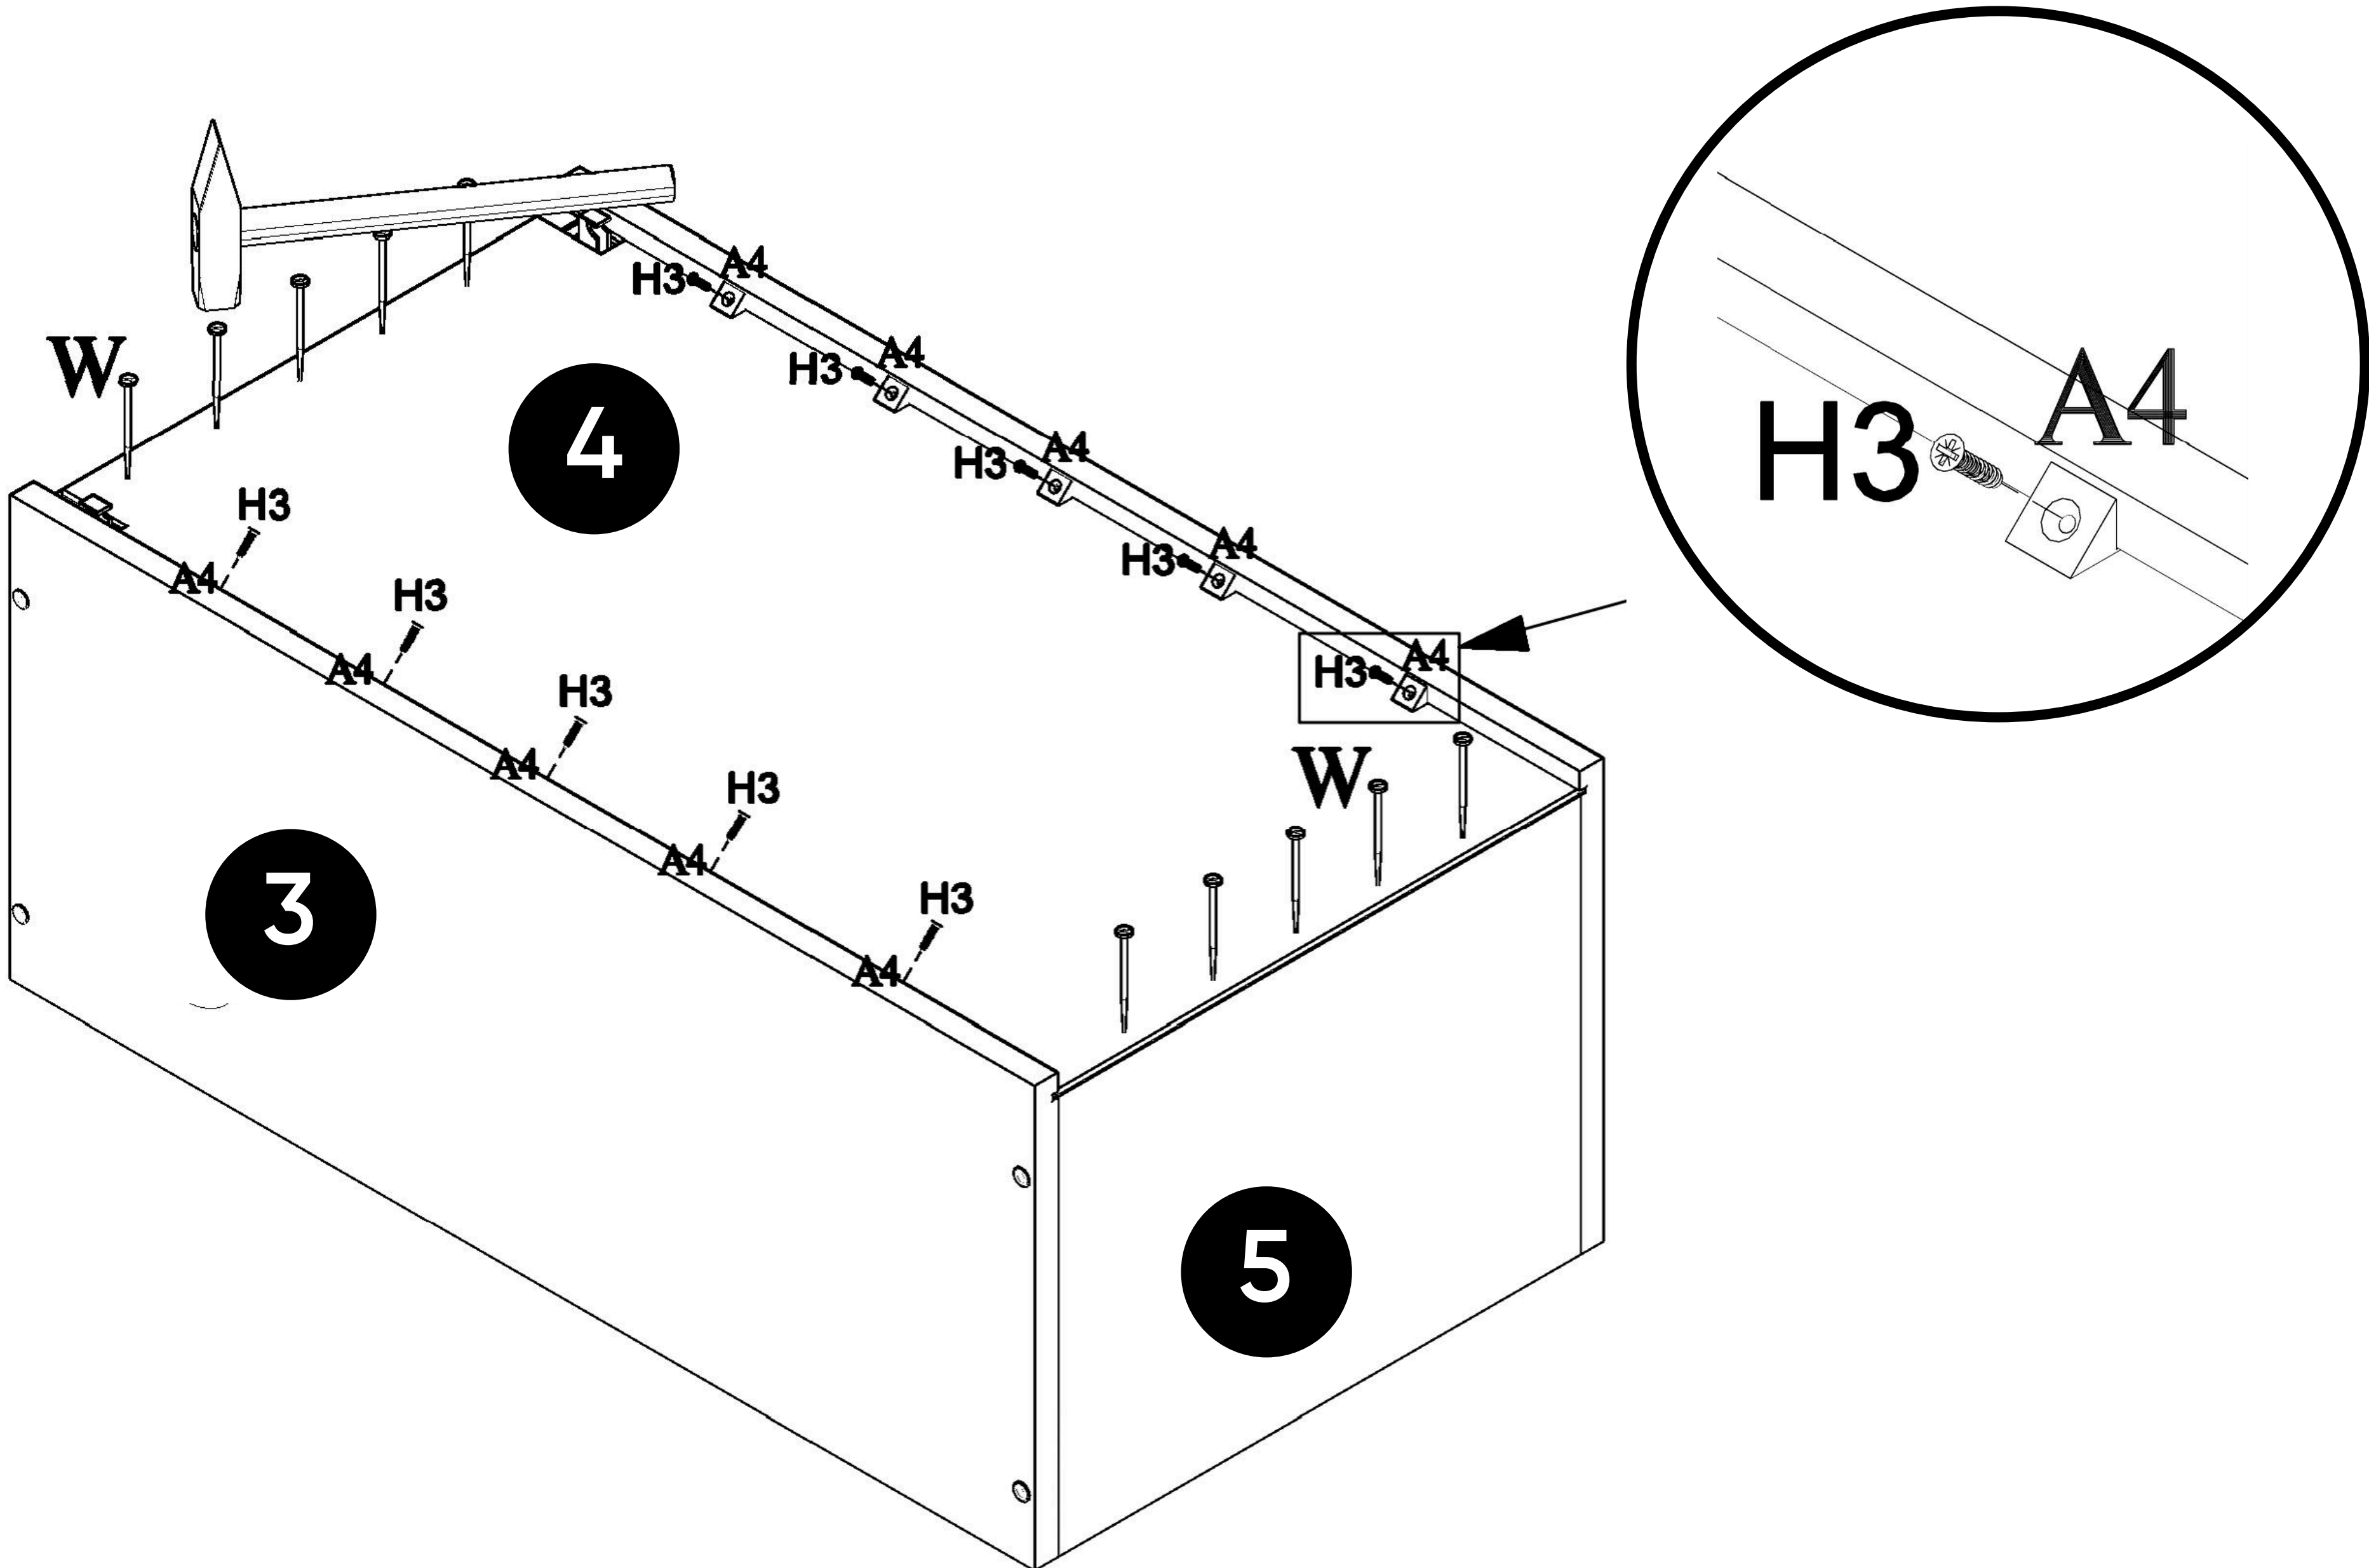

STEP - 6


G2 x2

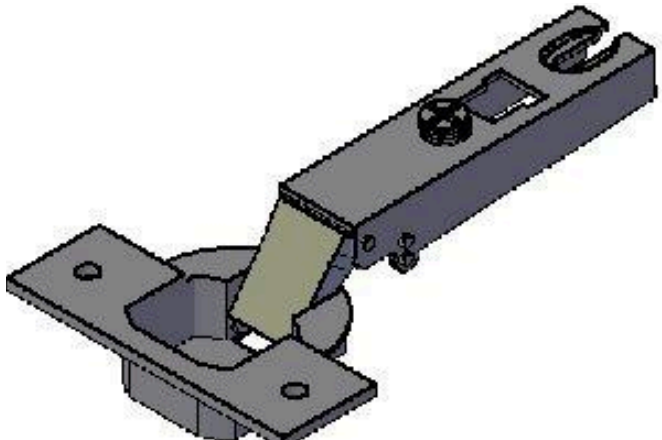



H x4 US 031.03



⌀ 3.5x13



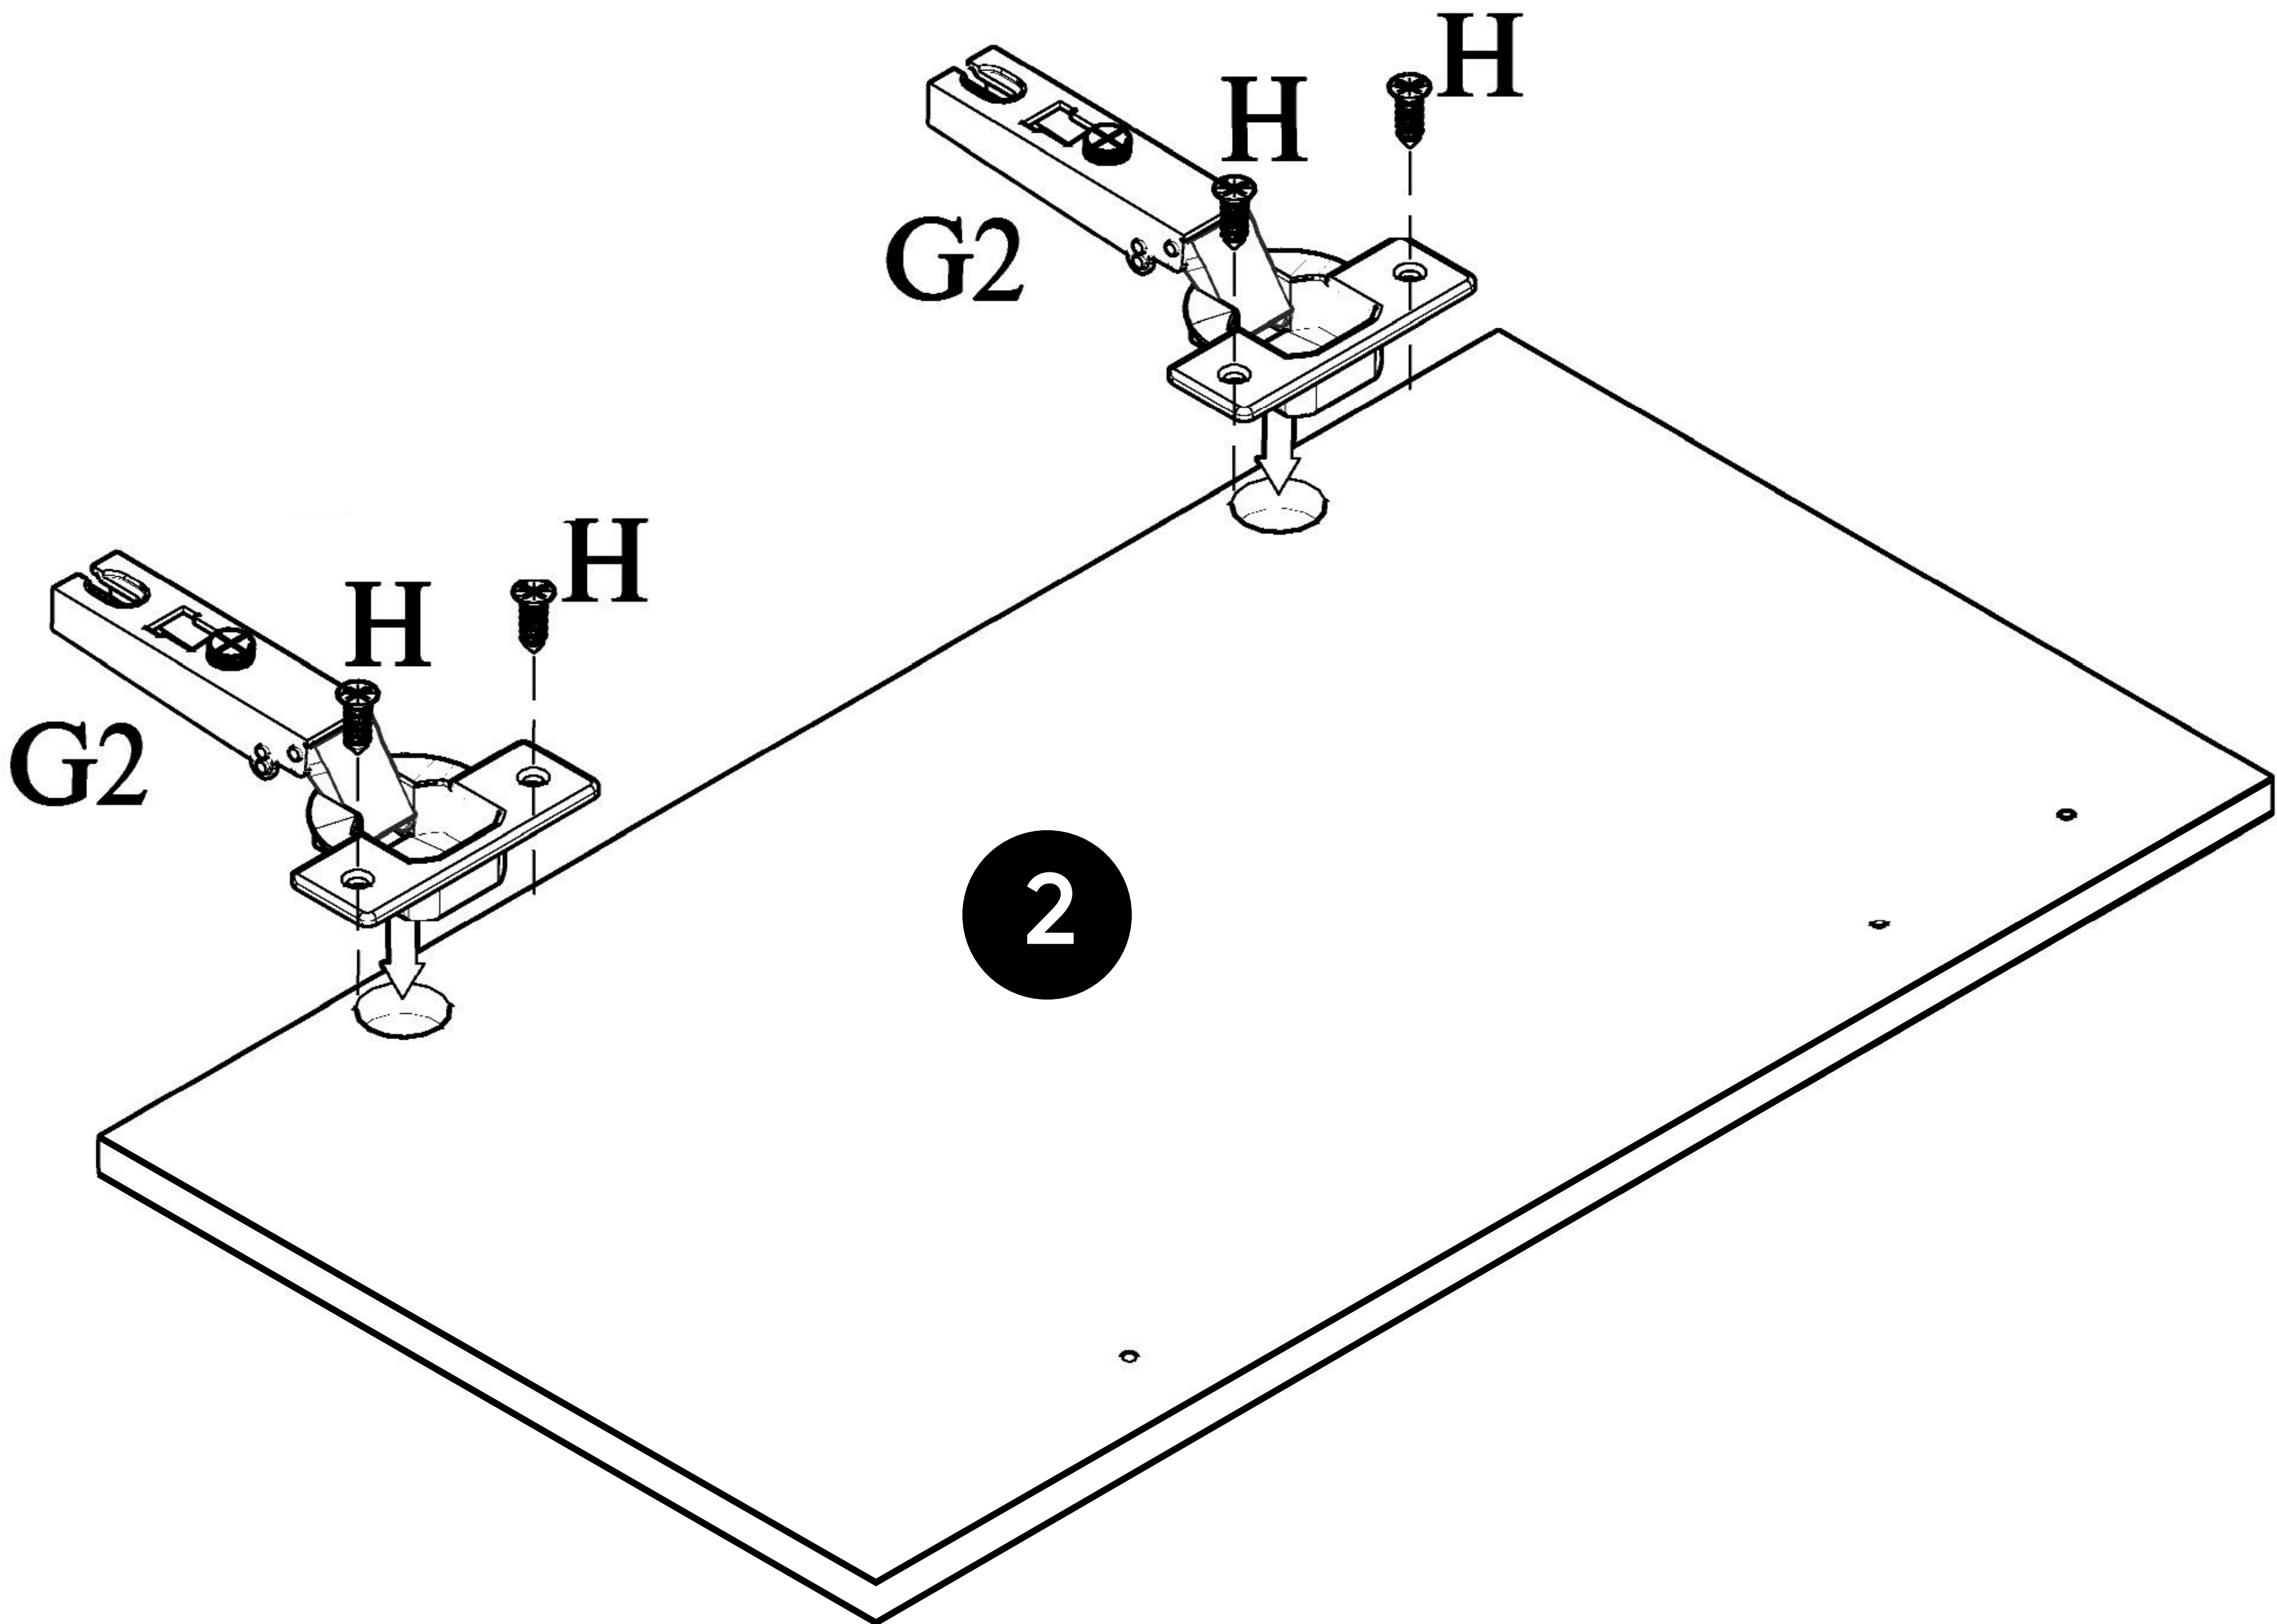


STEP - 7

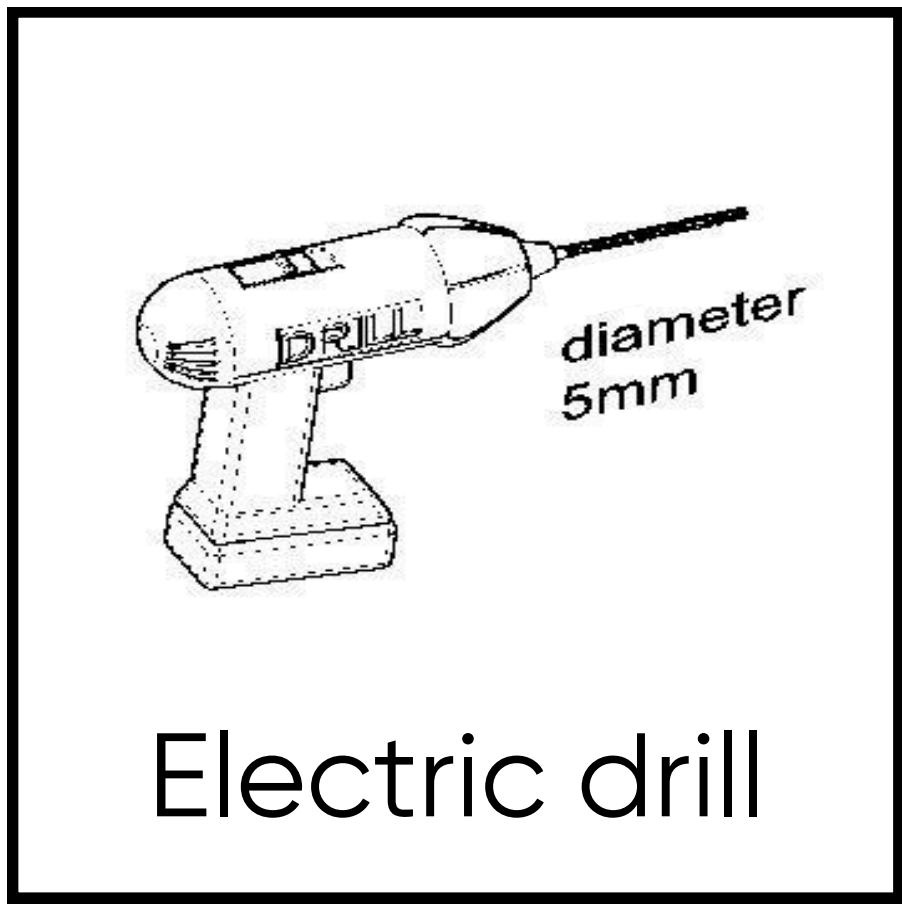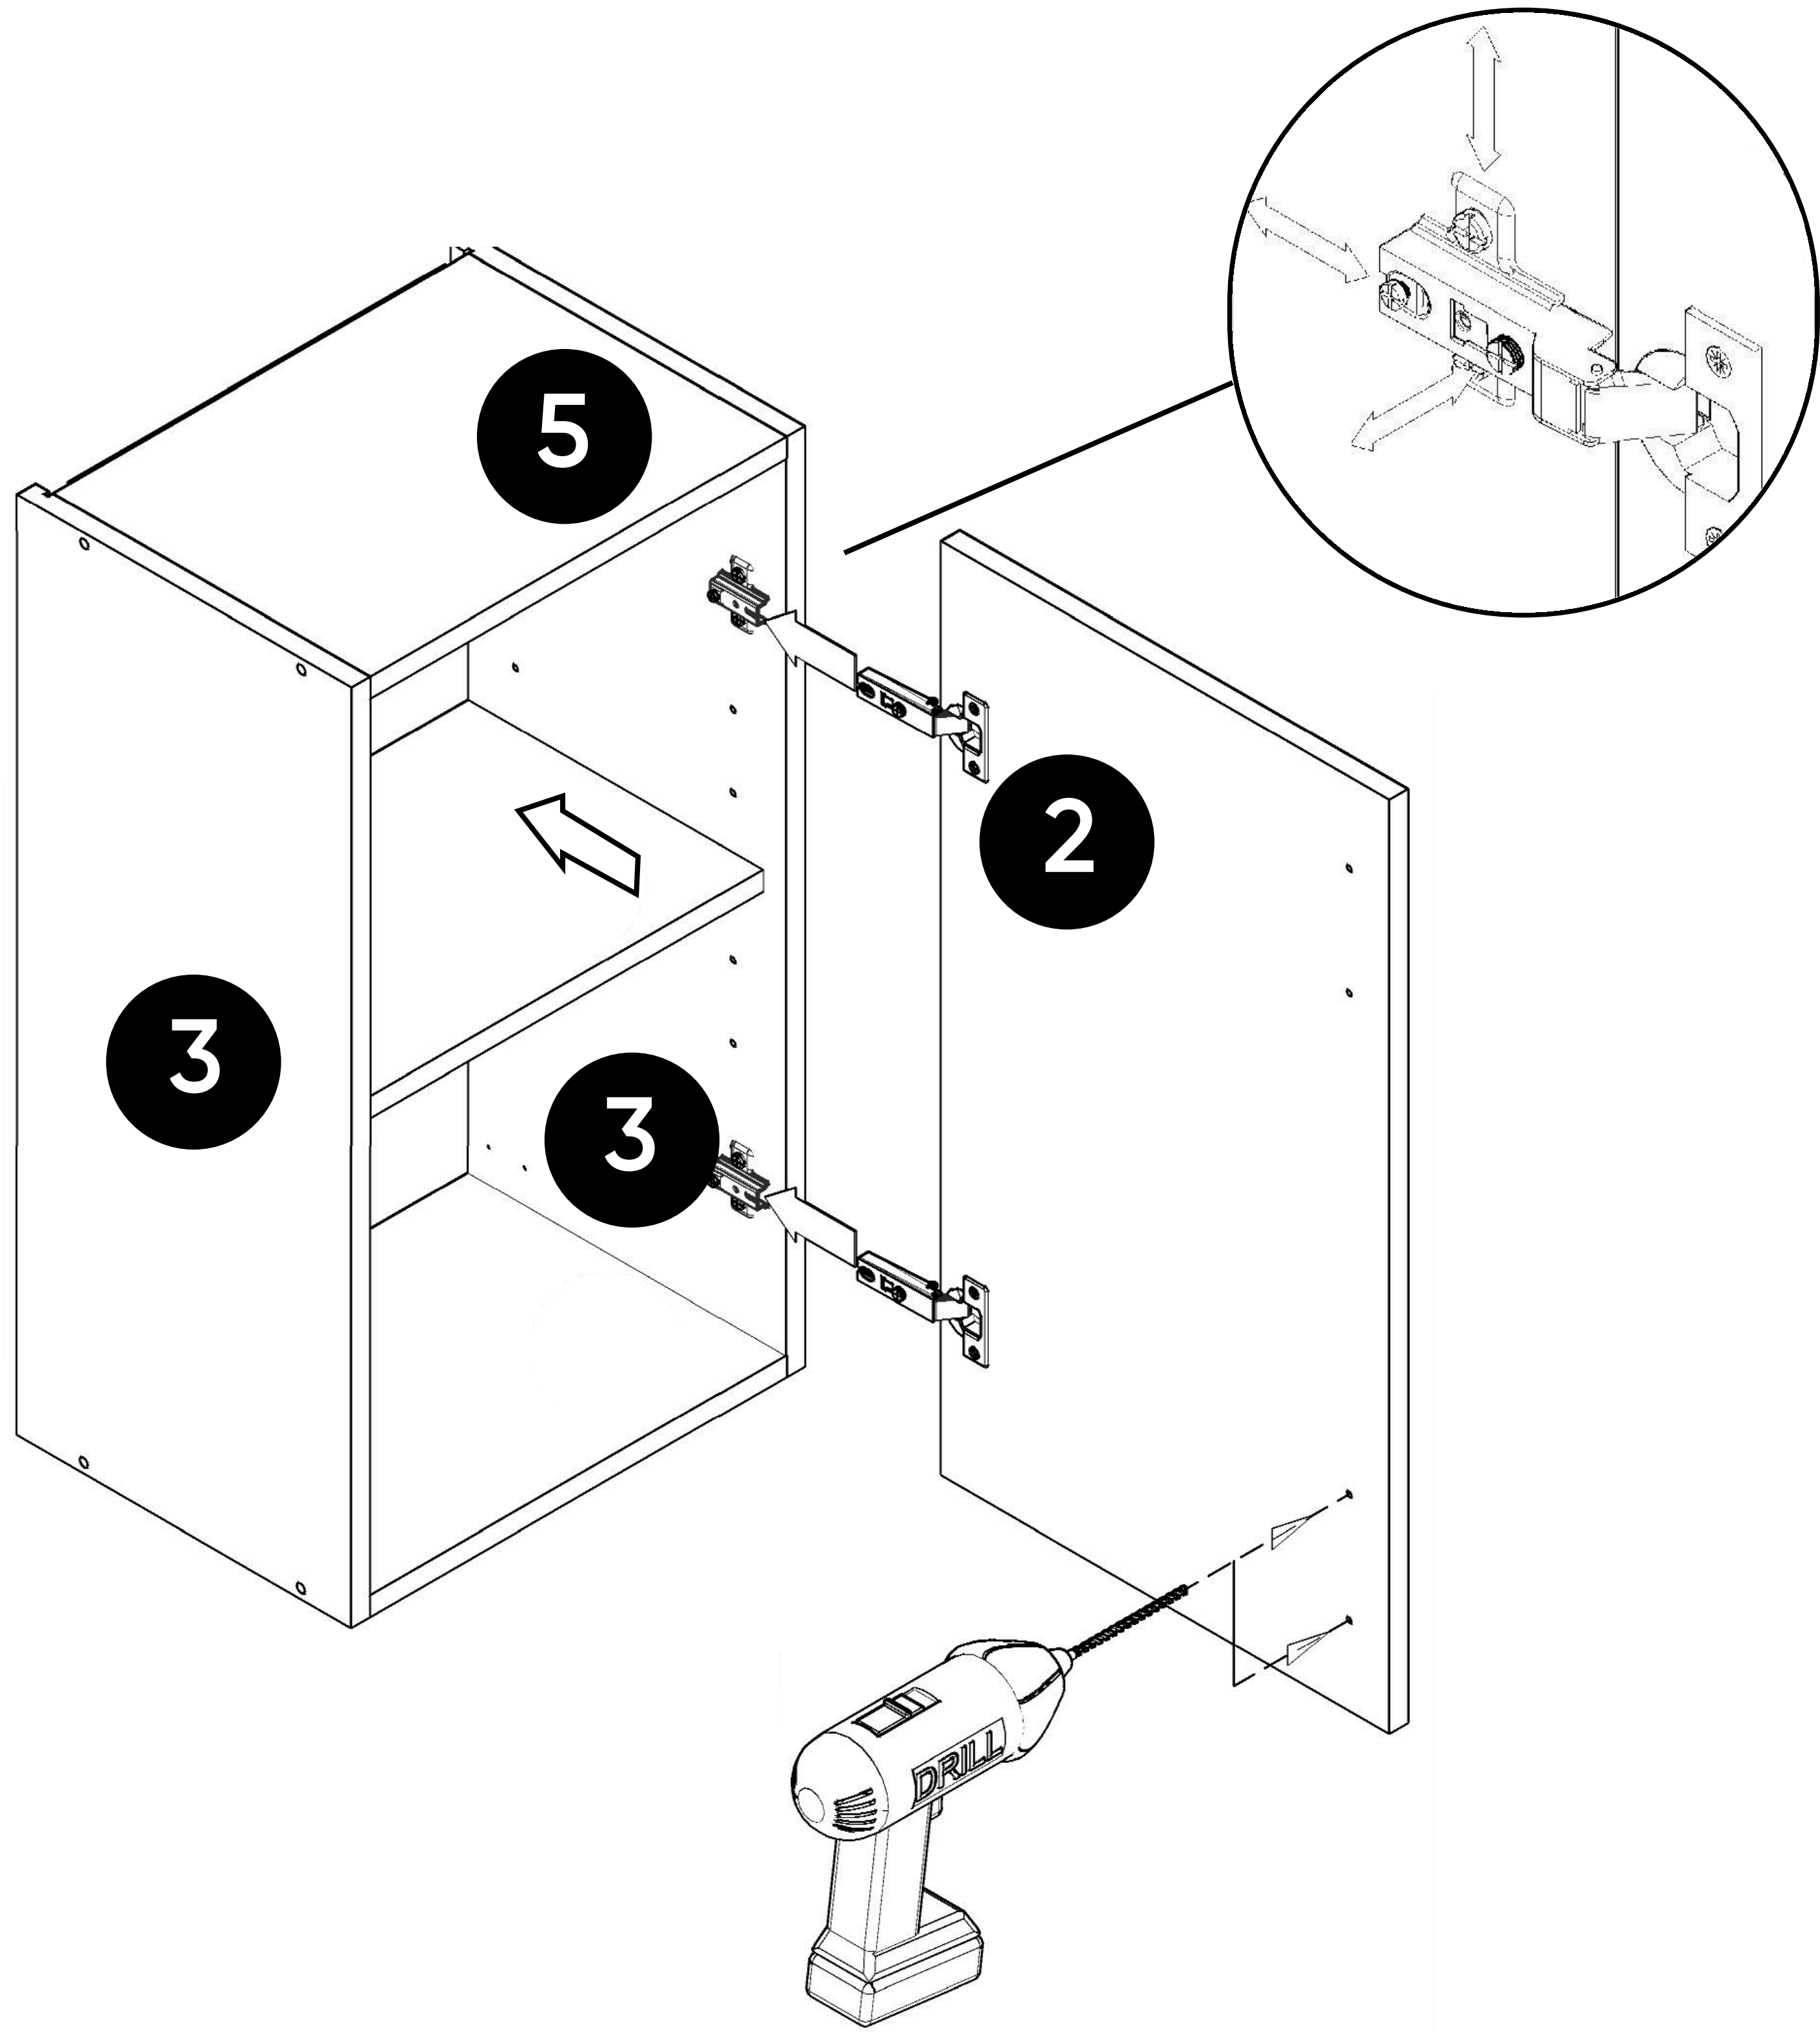


NOTE: Door can be fitted the left or right side

STEP - 8

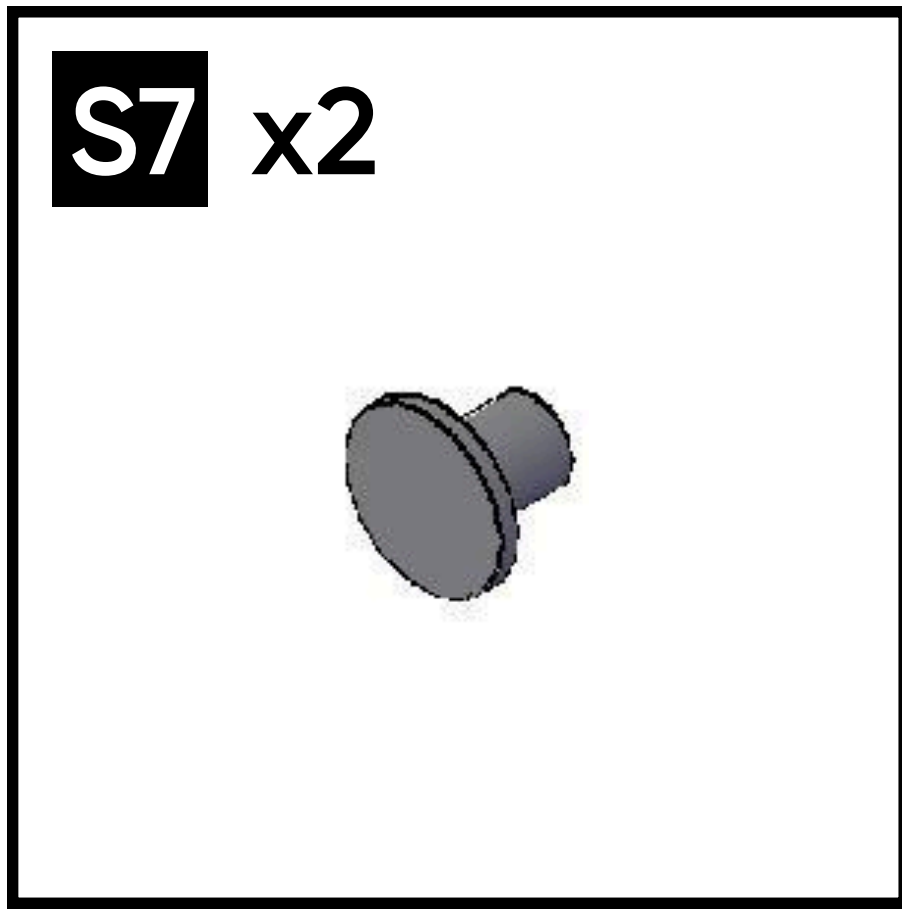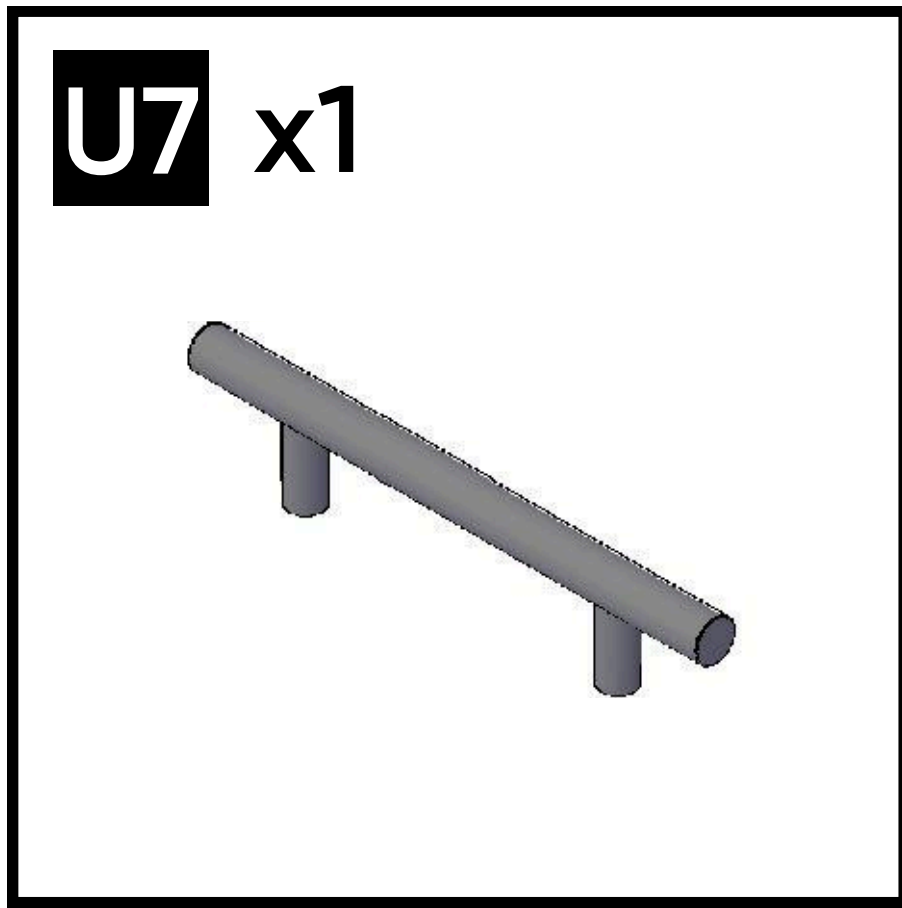
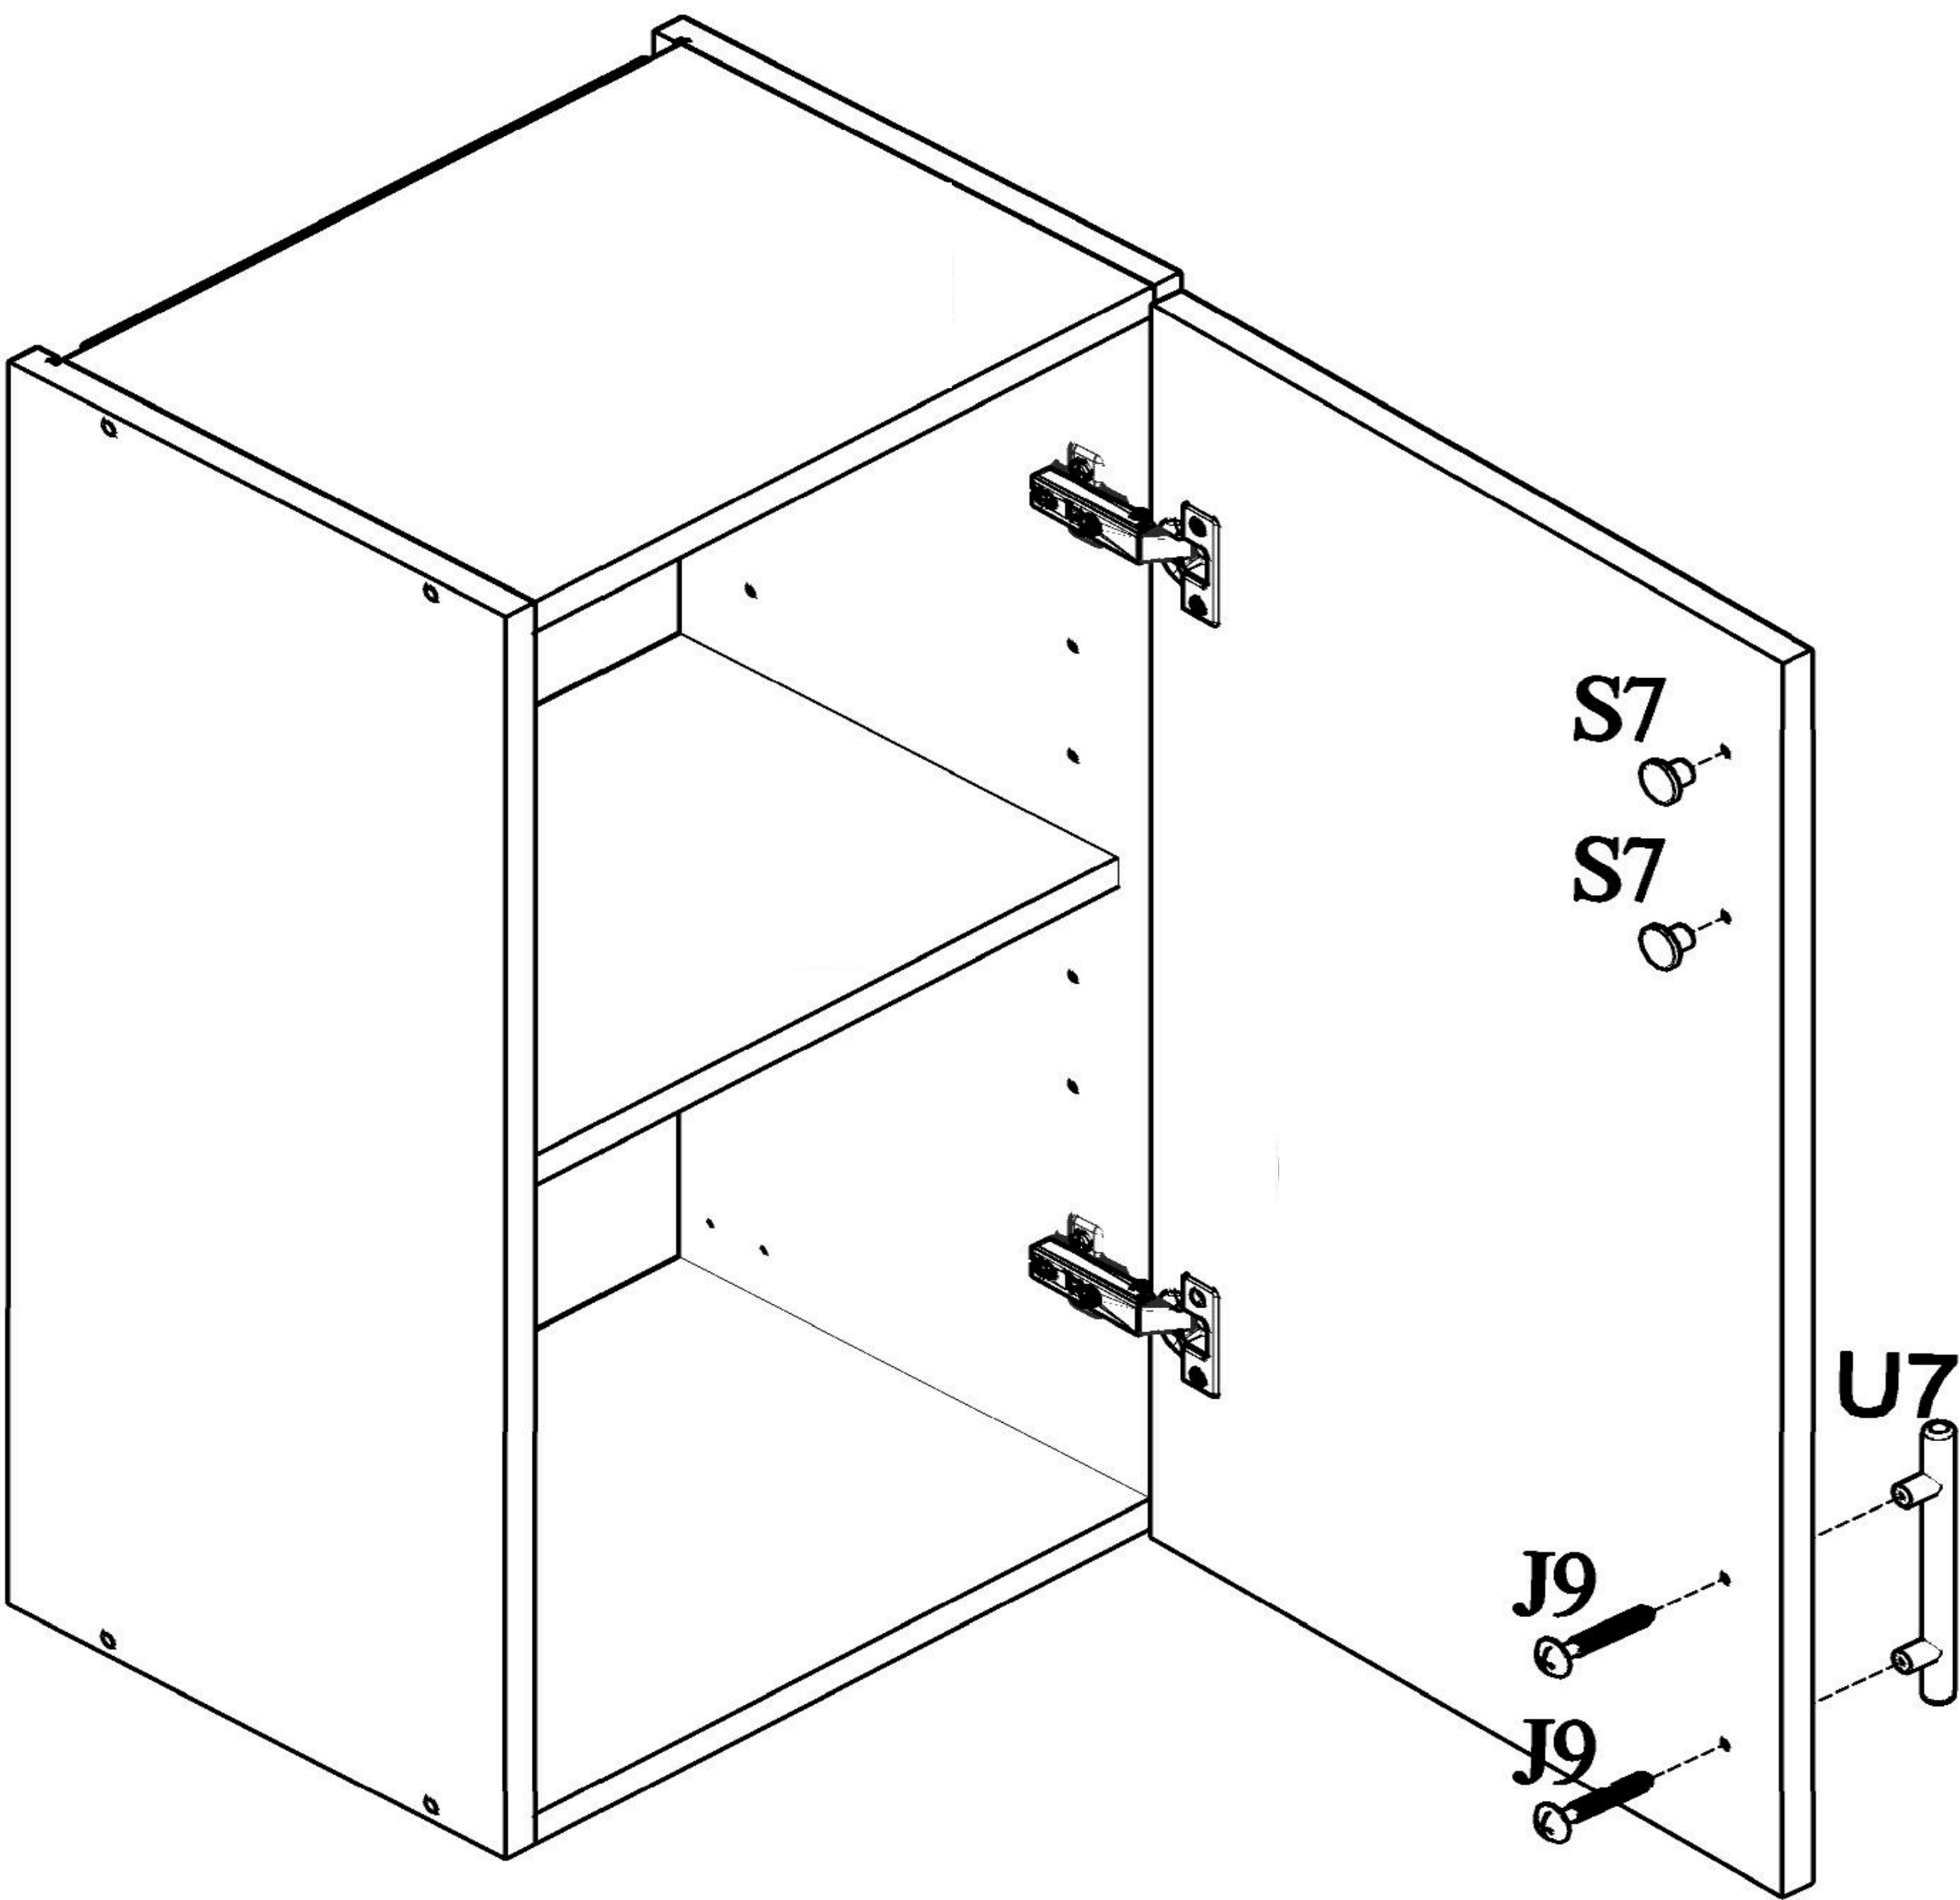


STEP - 9

Z9 x2

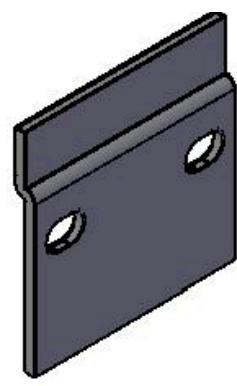

! Mounting the Z9 component to the wall

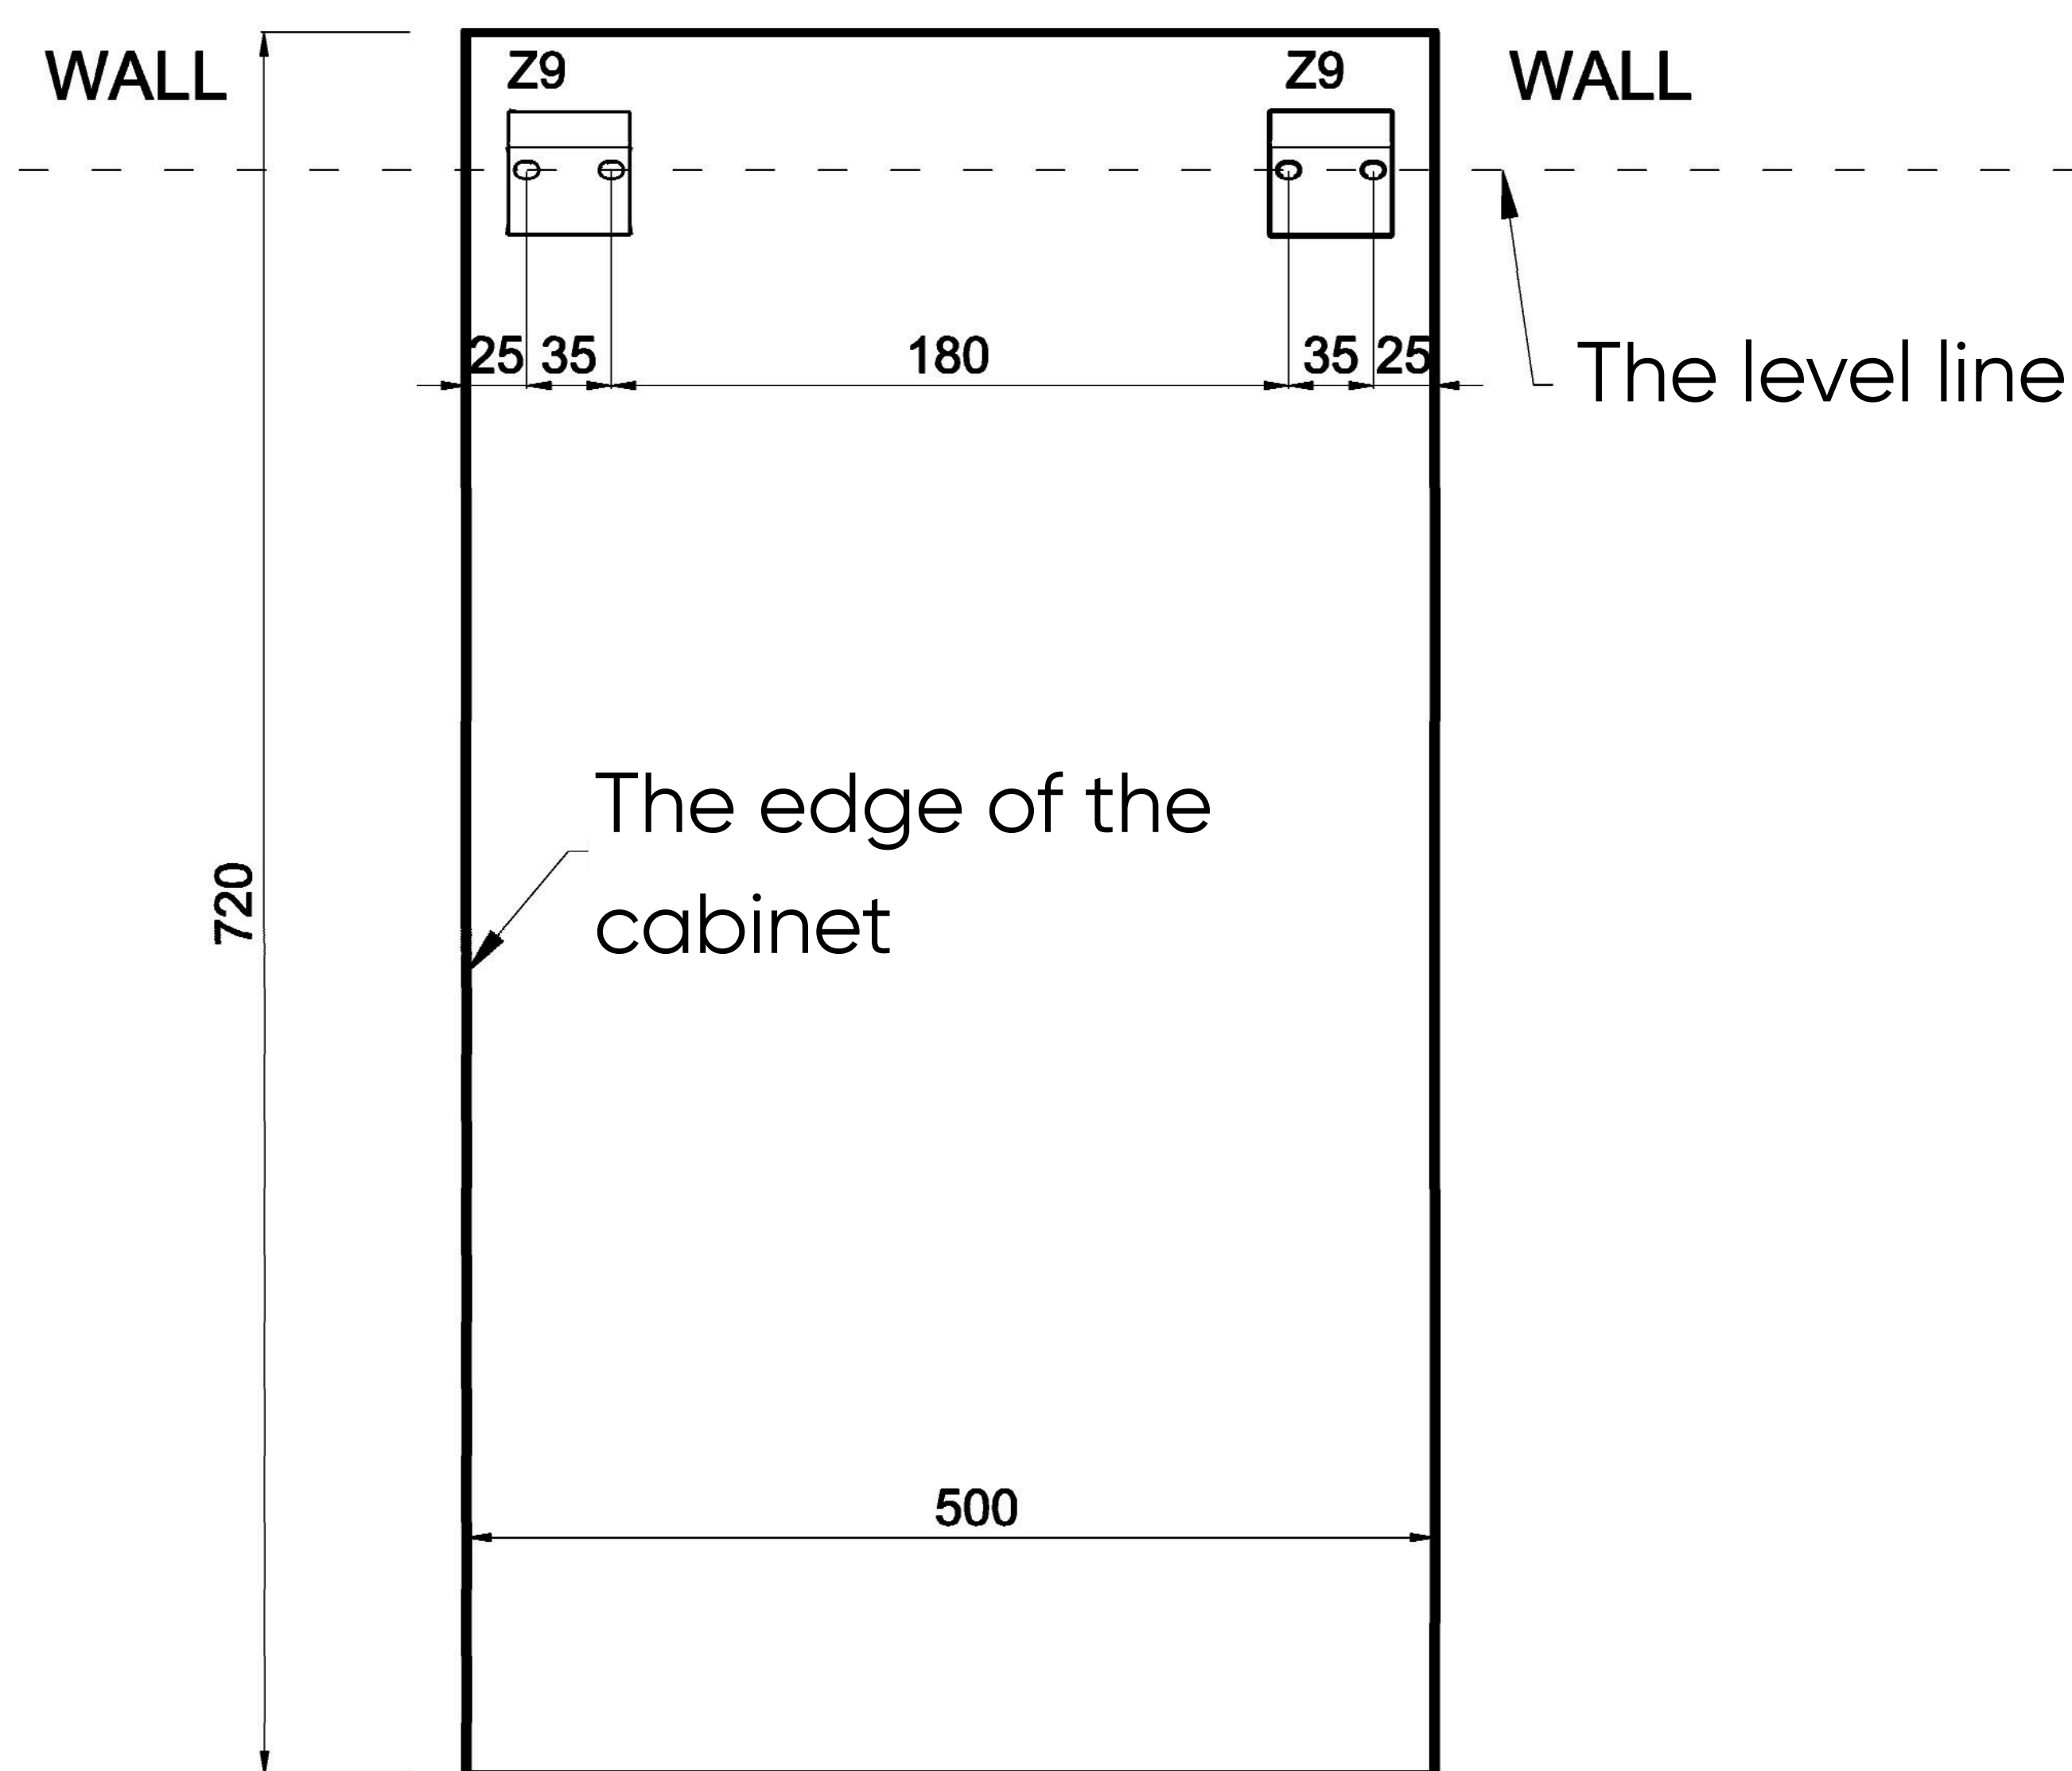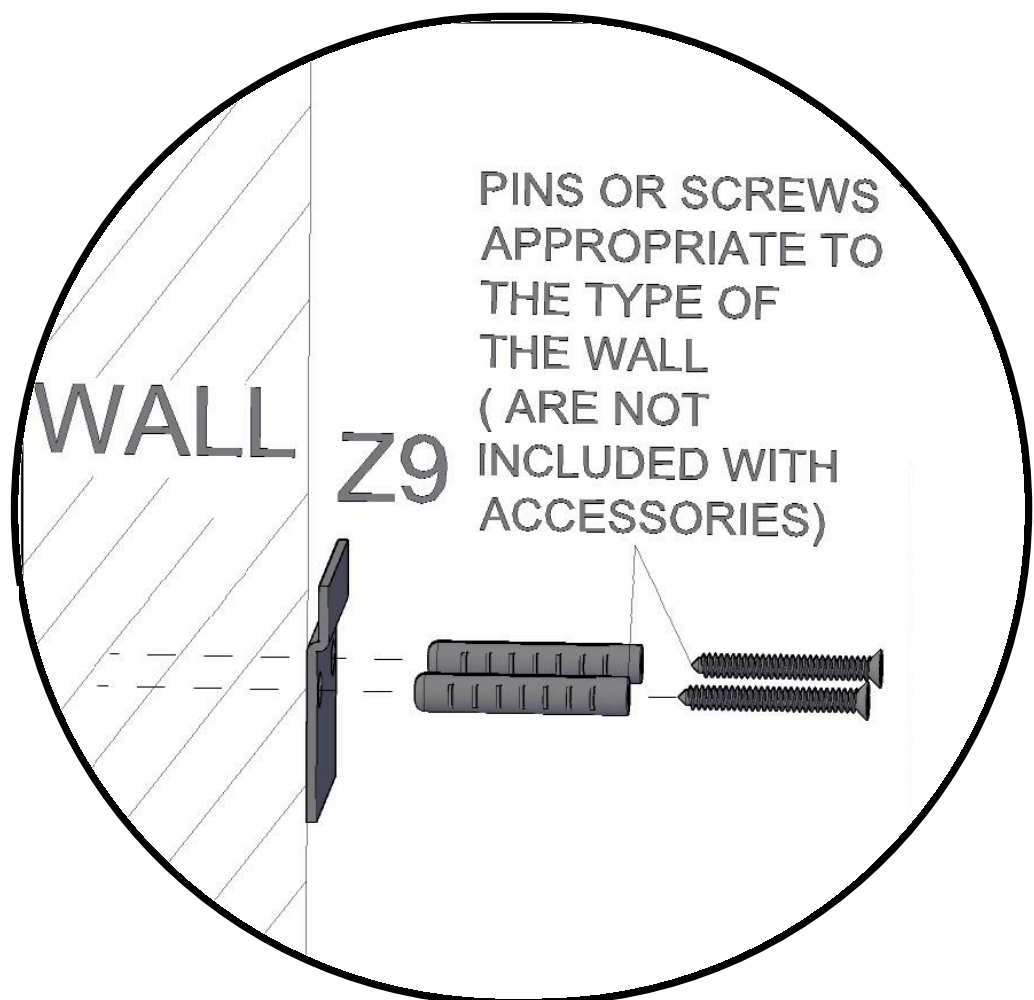

STEP - 10

