



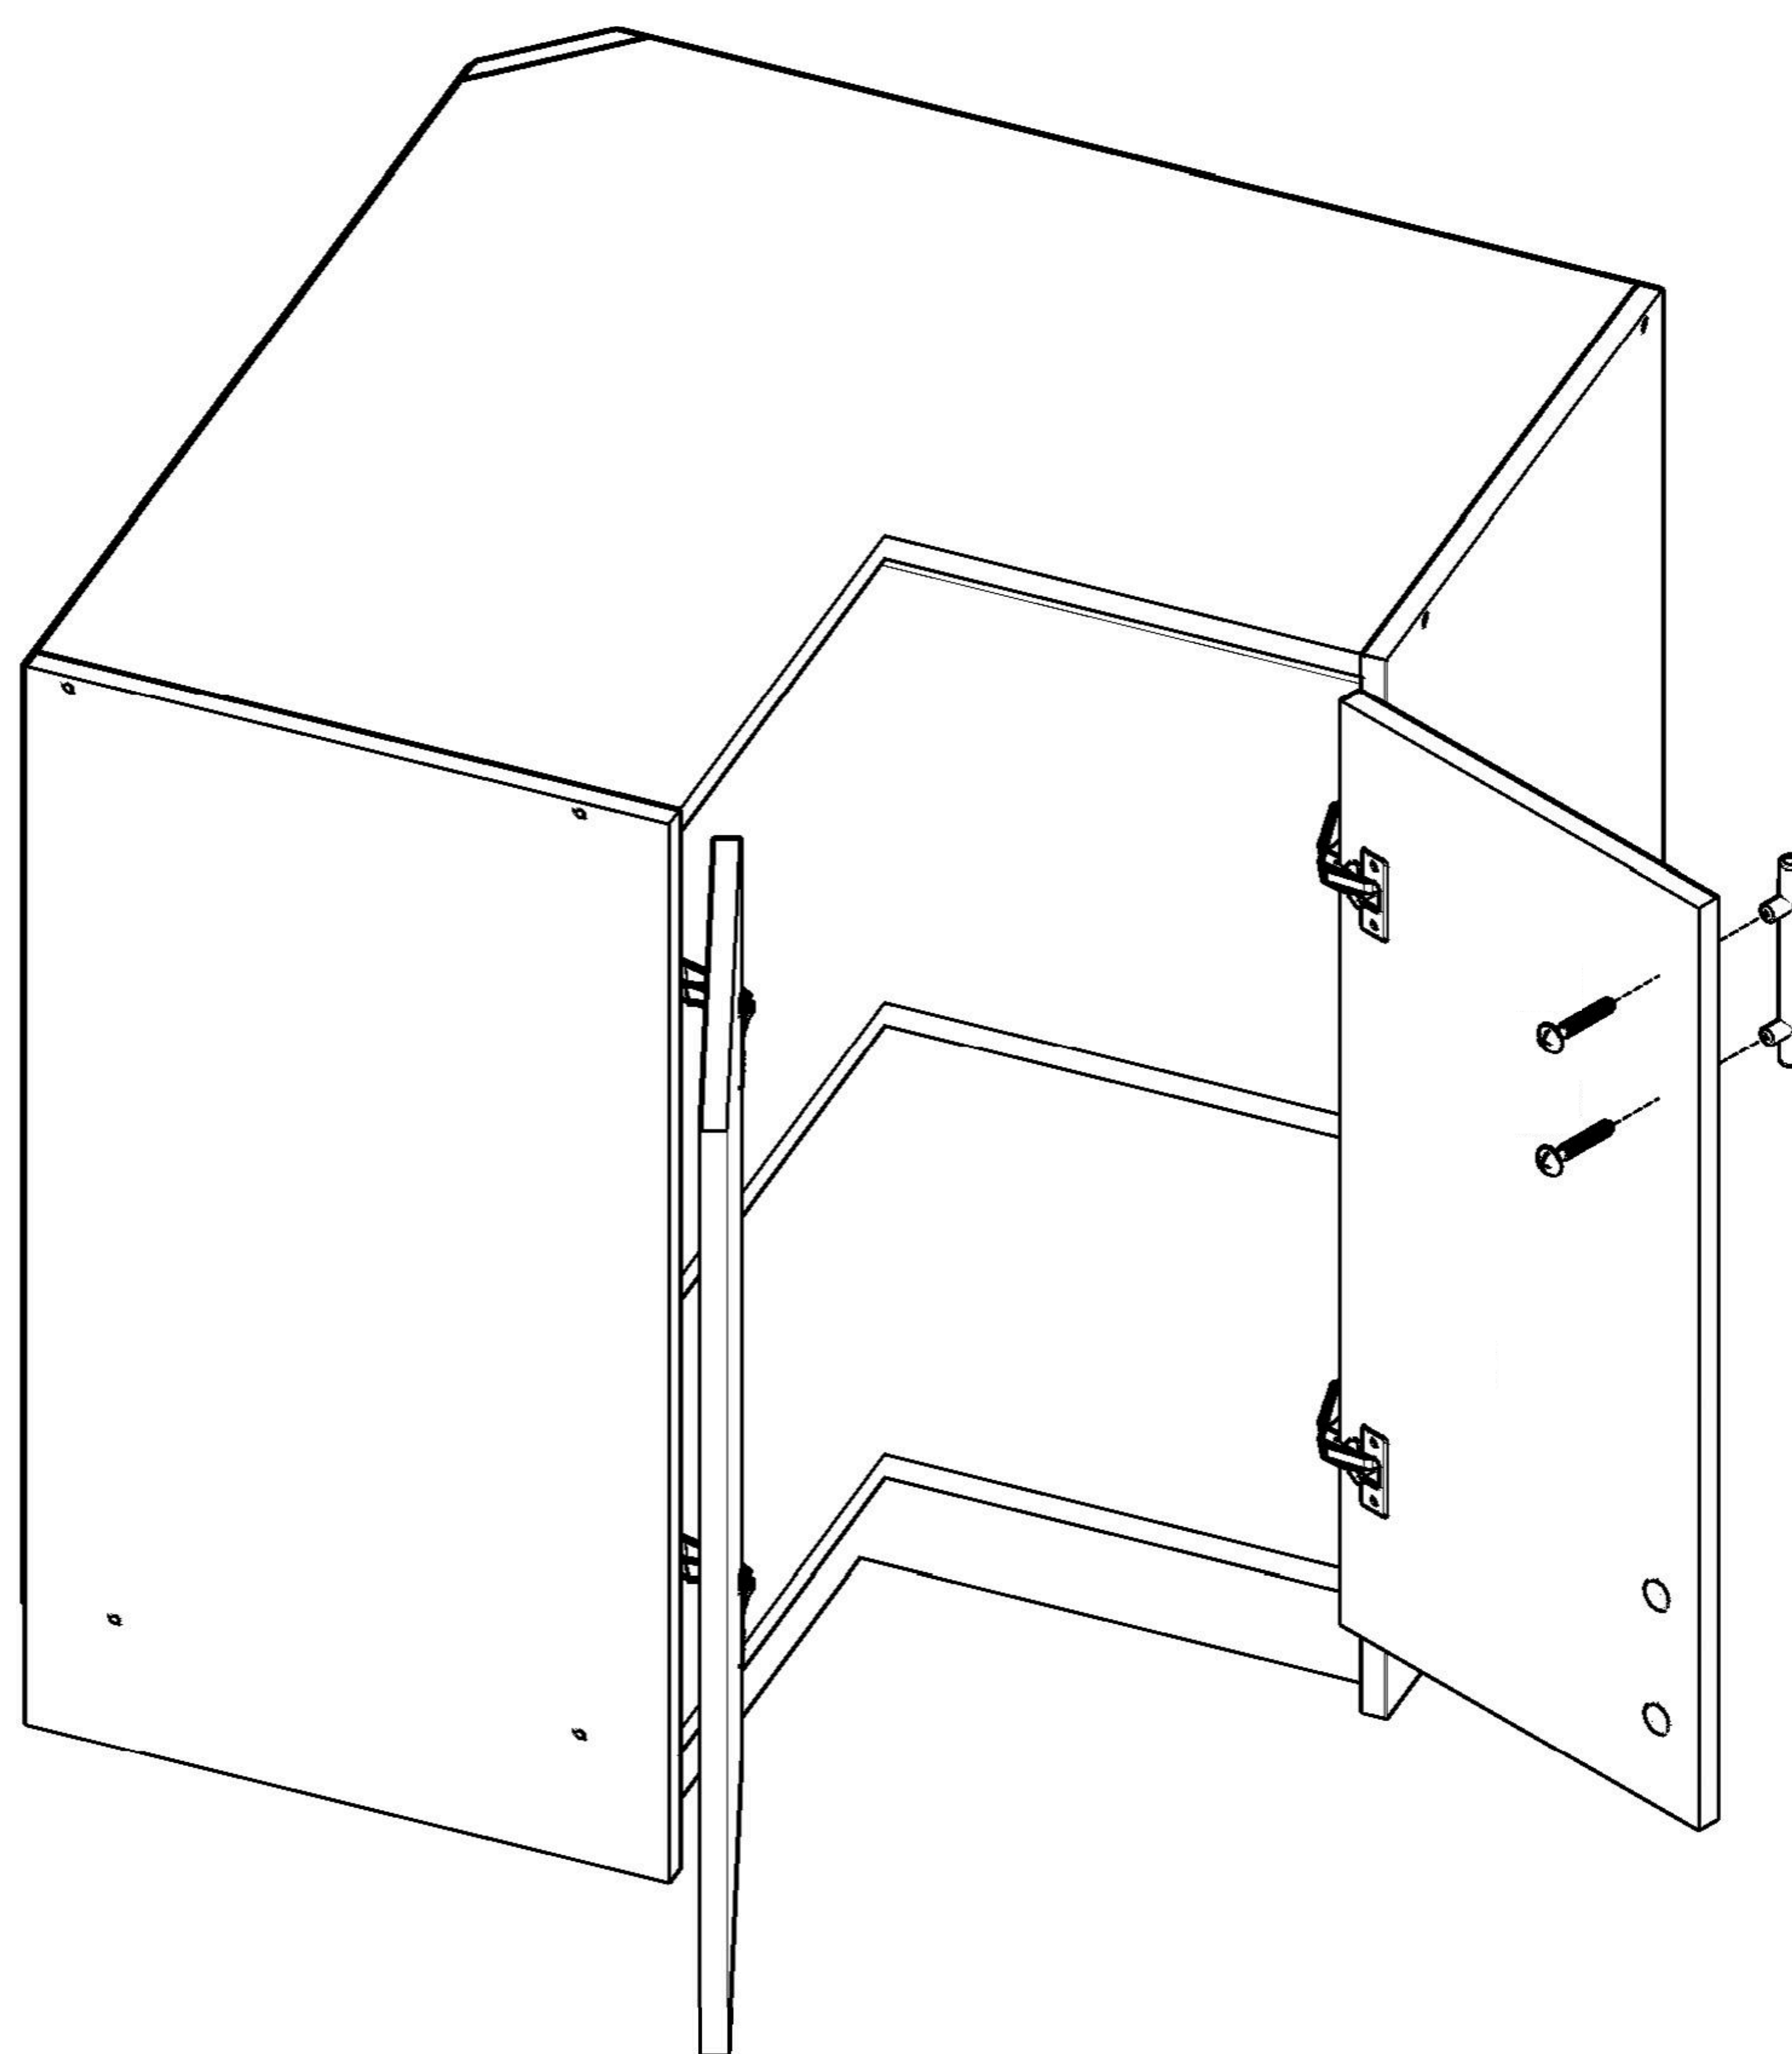


ASSEMBLY INSTRUCTIONS

KITCHEN BASE CORNER UNIT 800MM


MODEL BC800

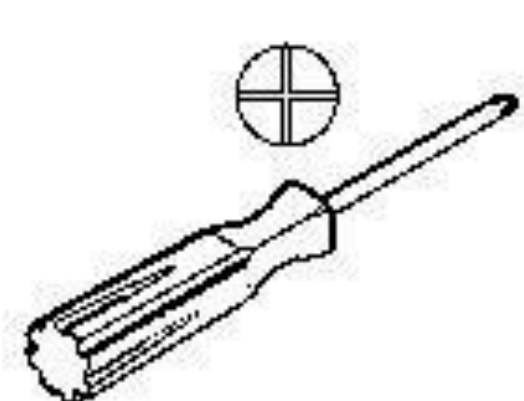


Cross-head
screwdriver

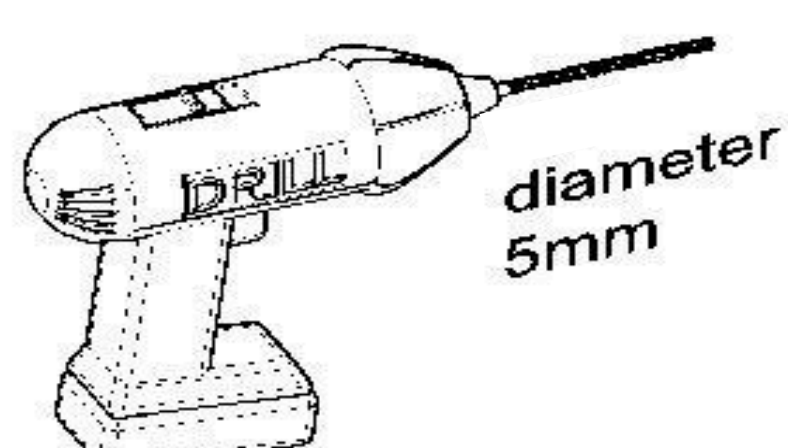

Electric
drill

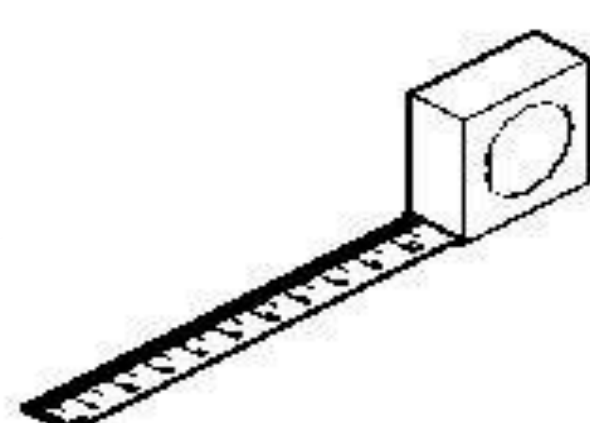

Rule

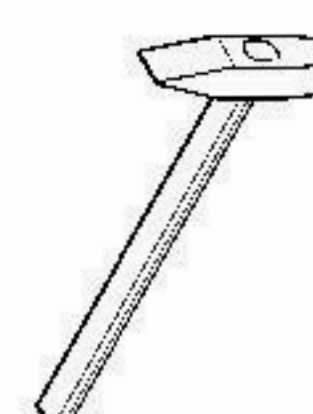

Hammer











TOOLS REQUIRED

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346







COMPONENTS - PANELS

Please check you have all the panels listed below
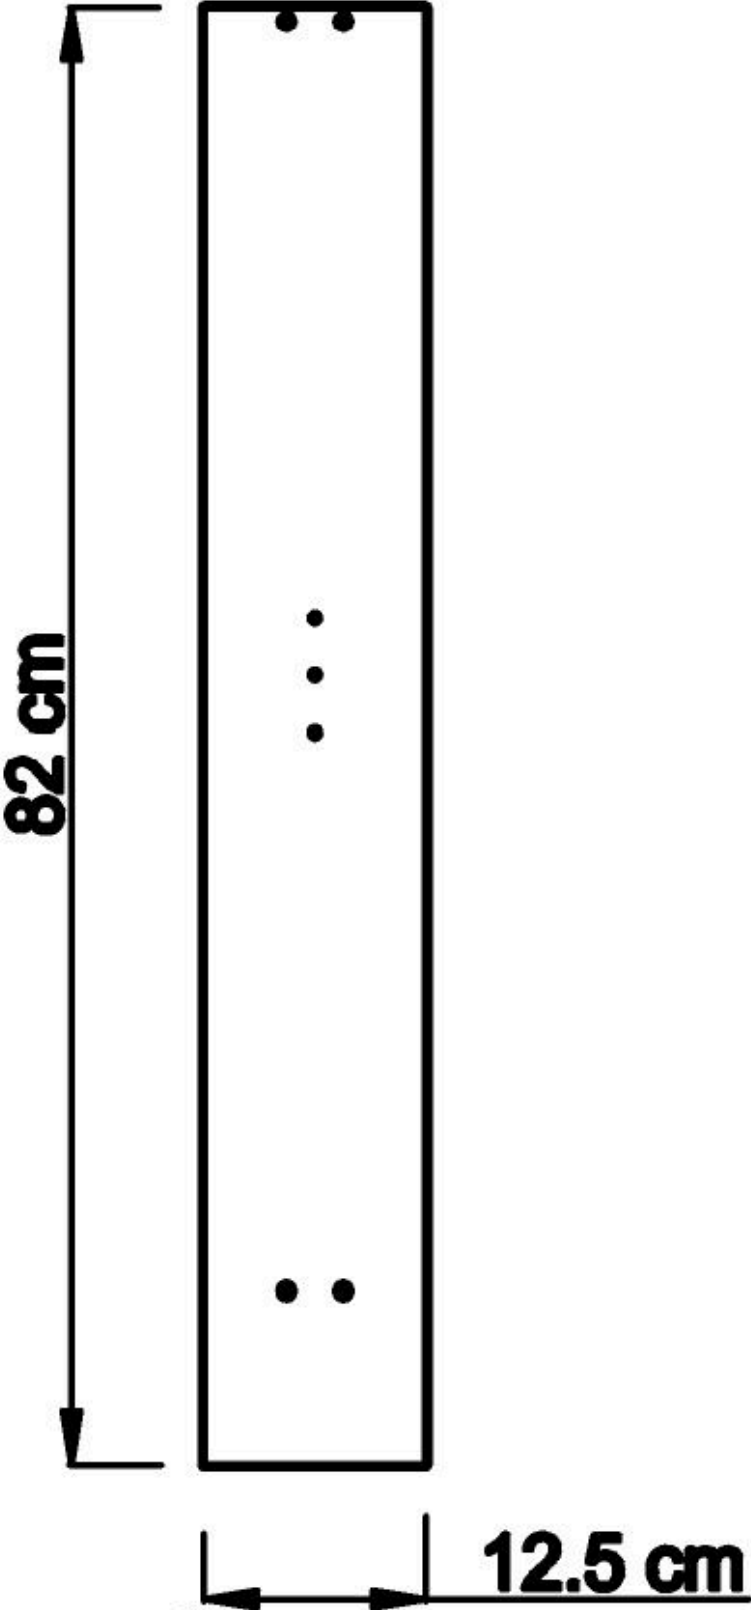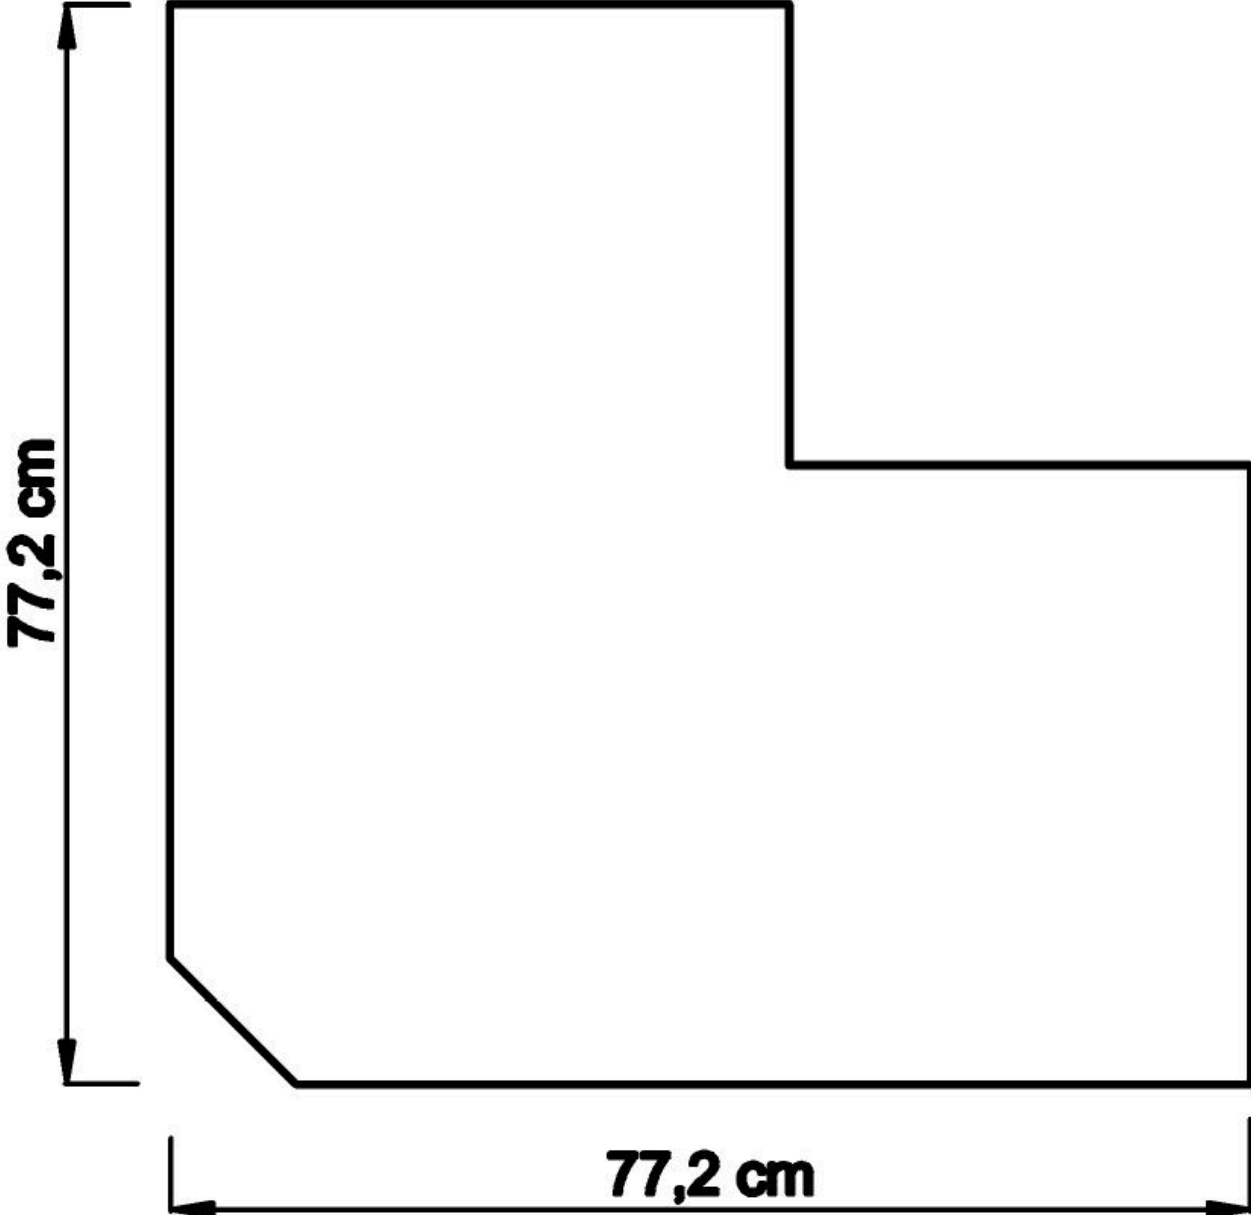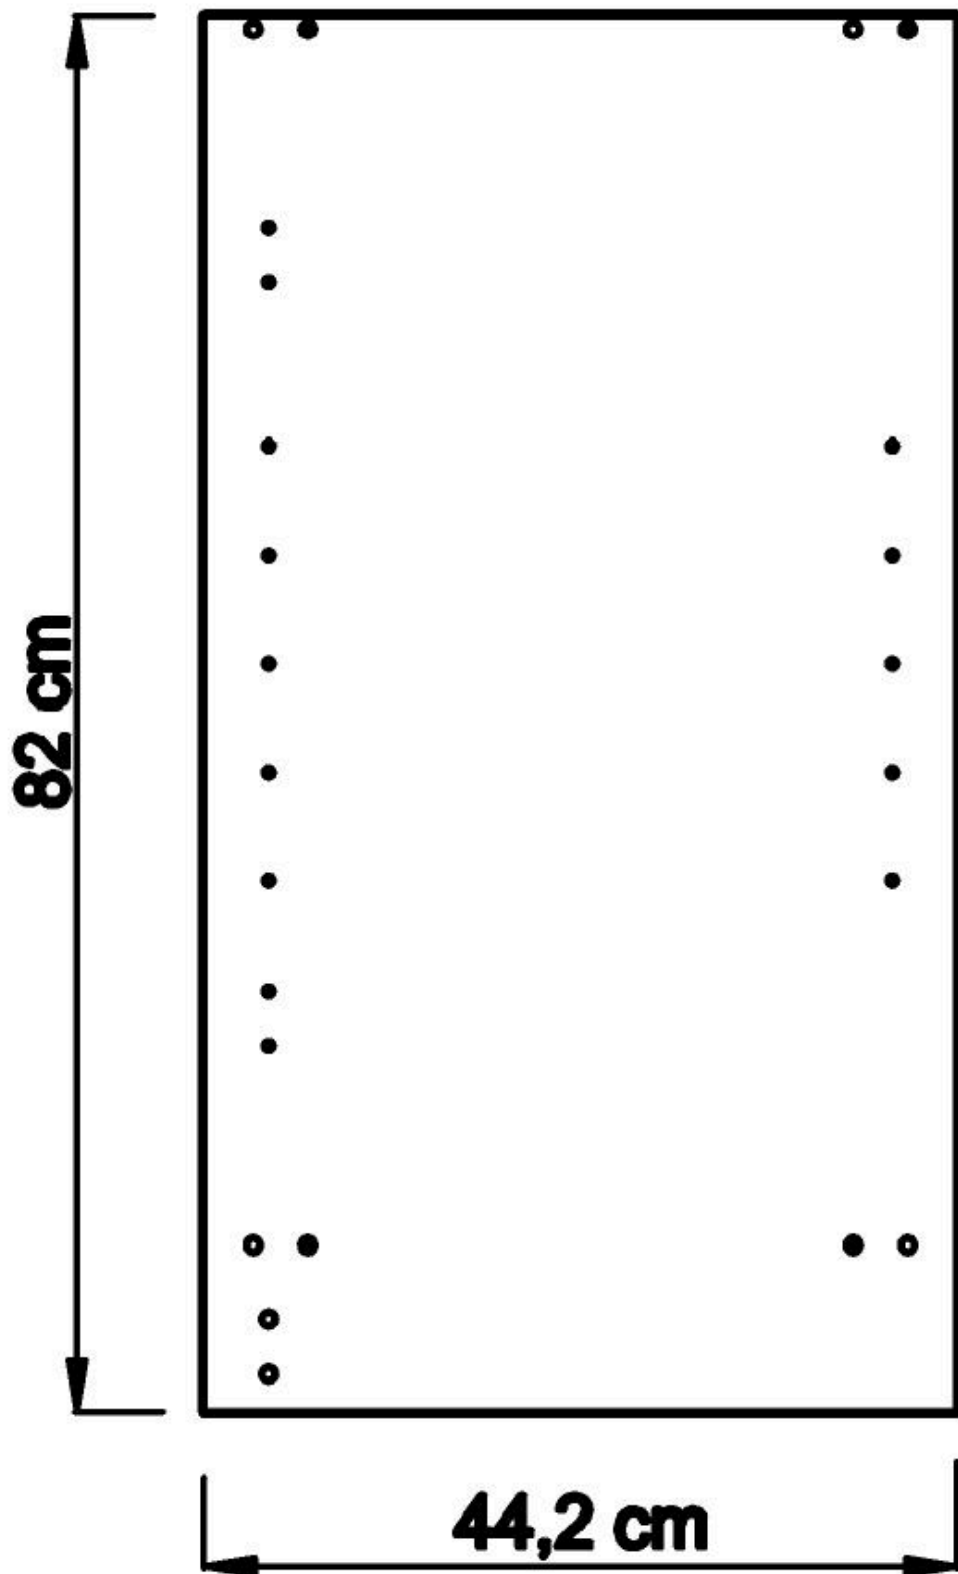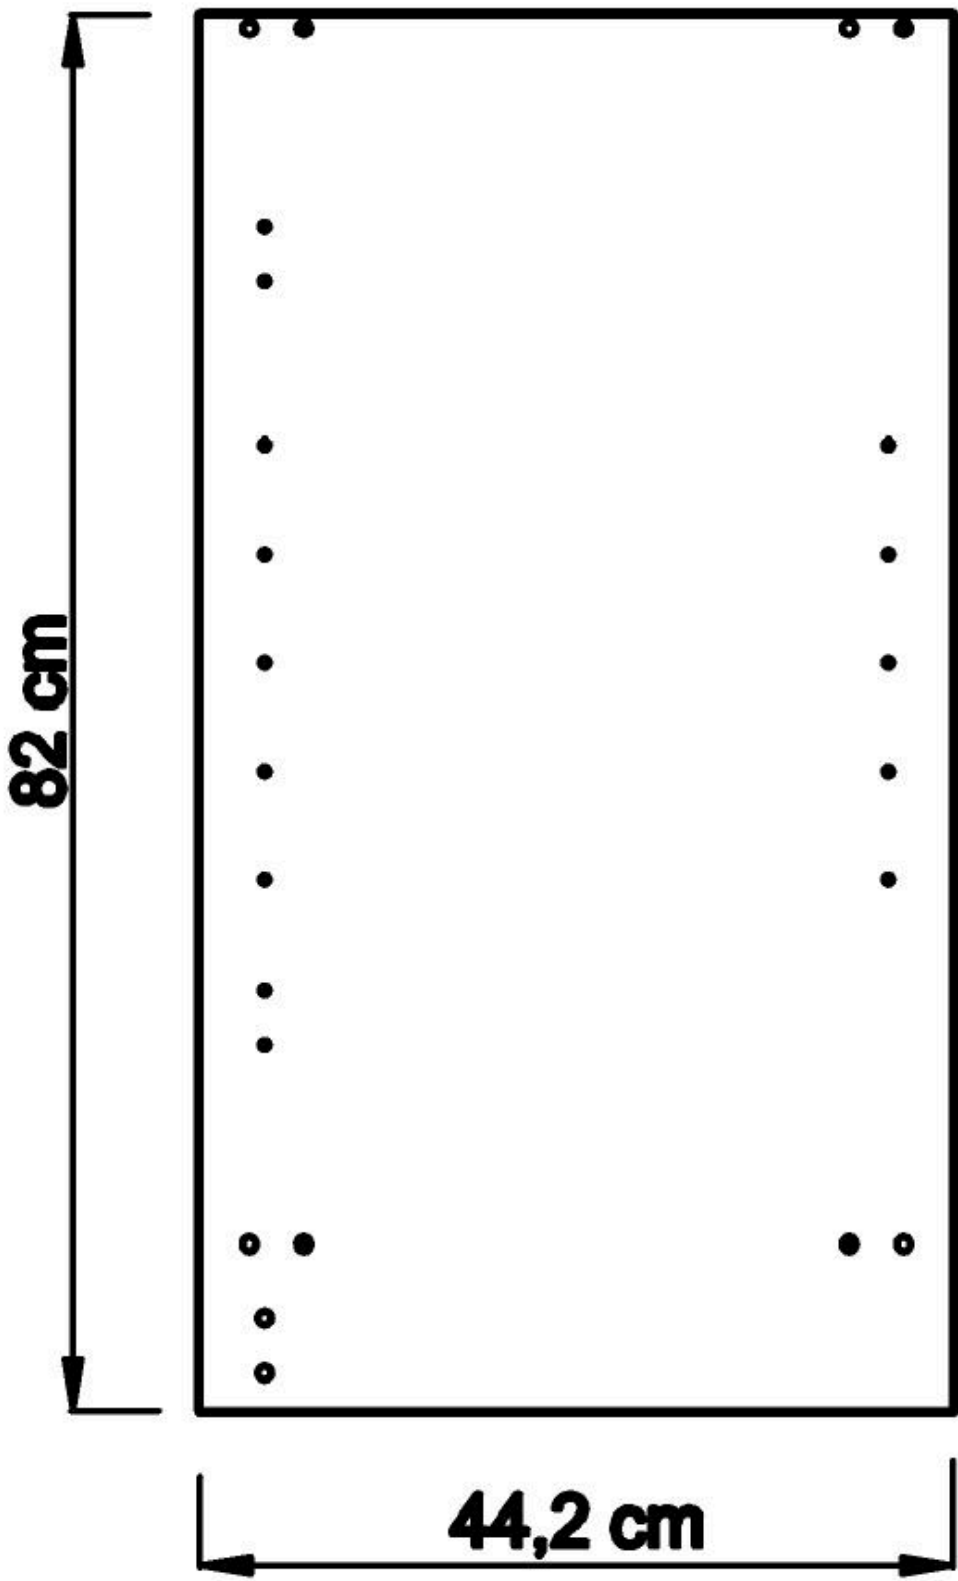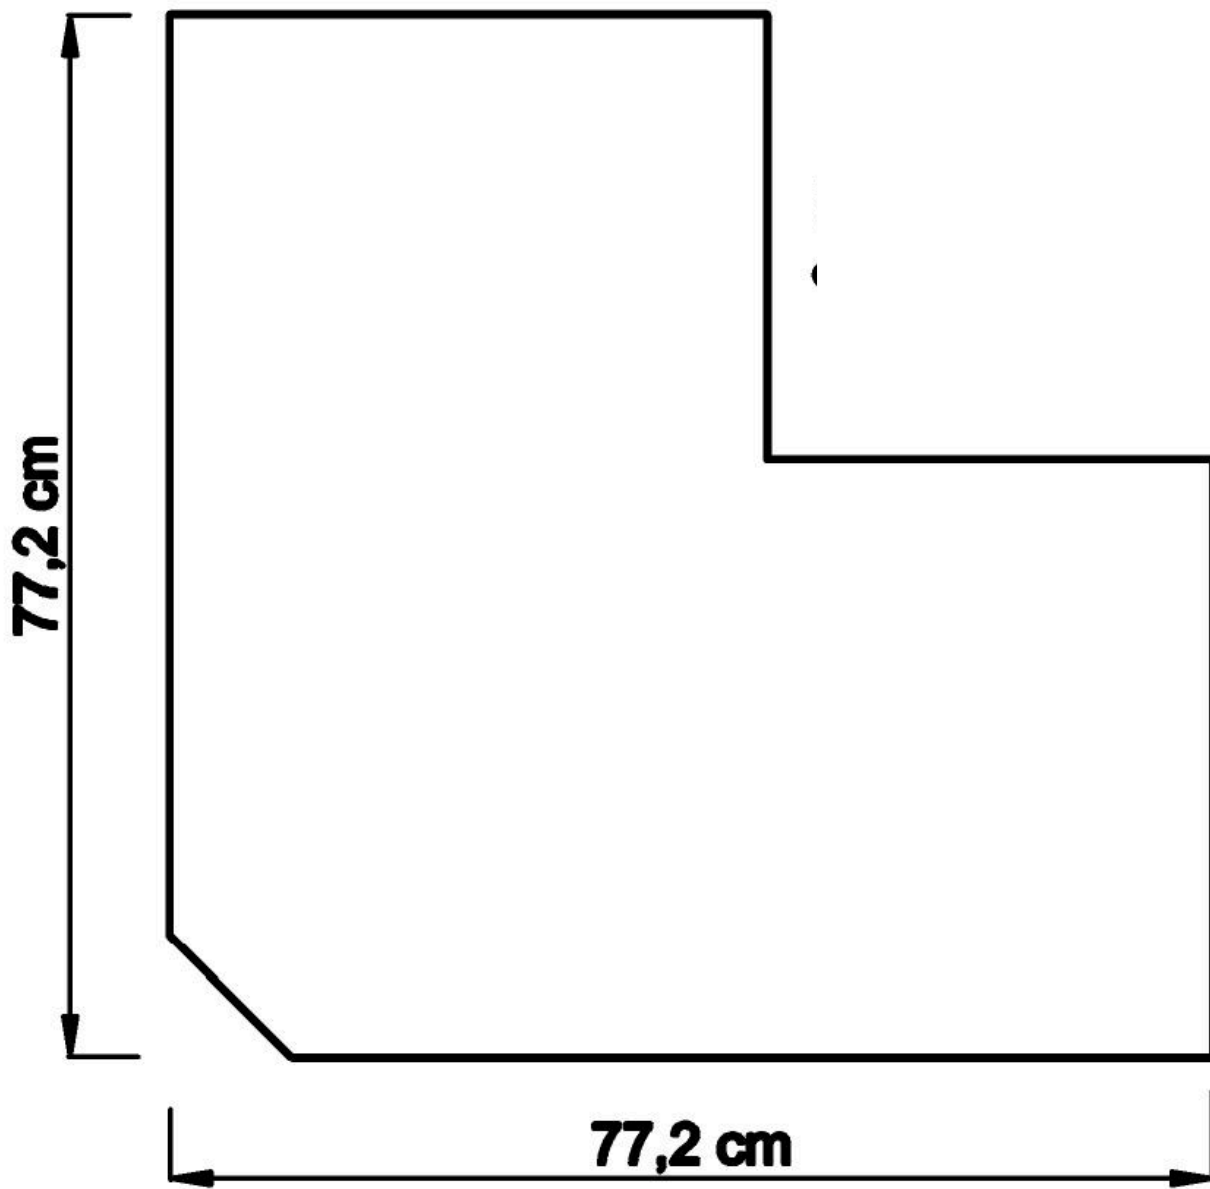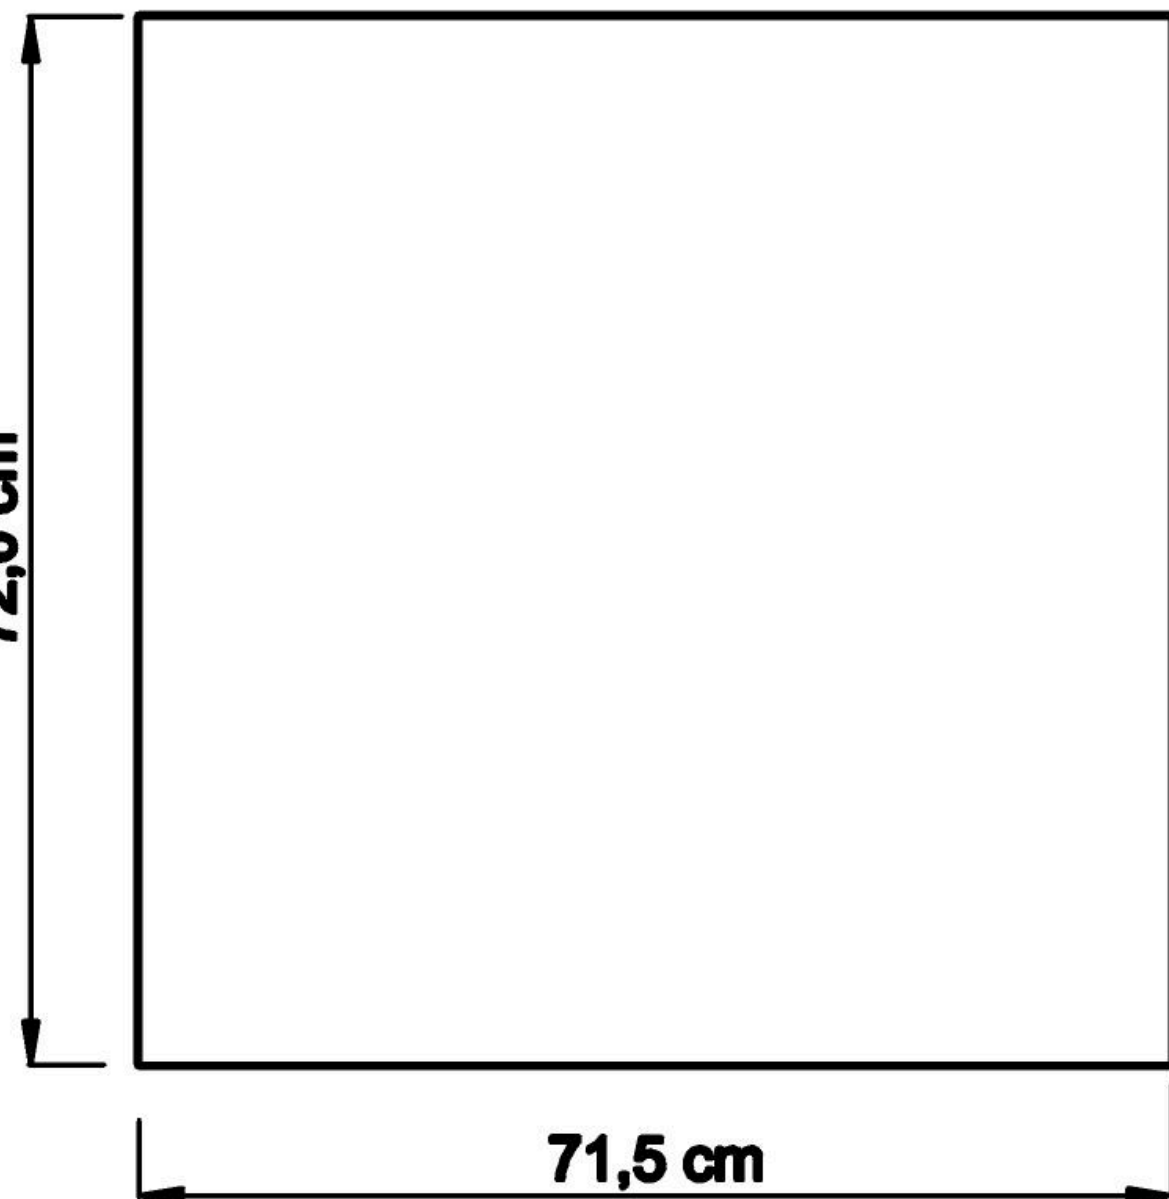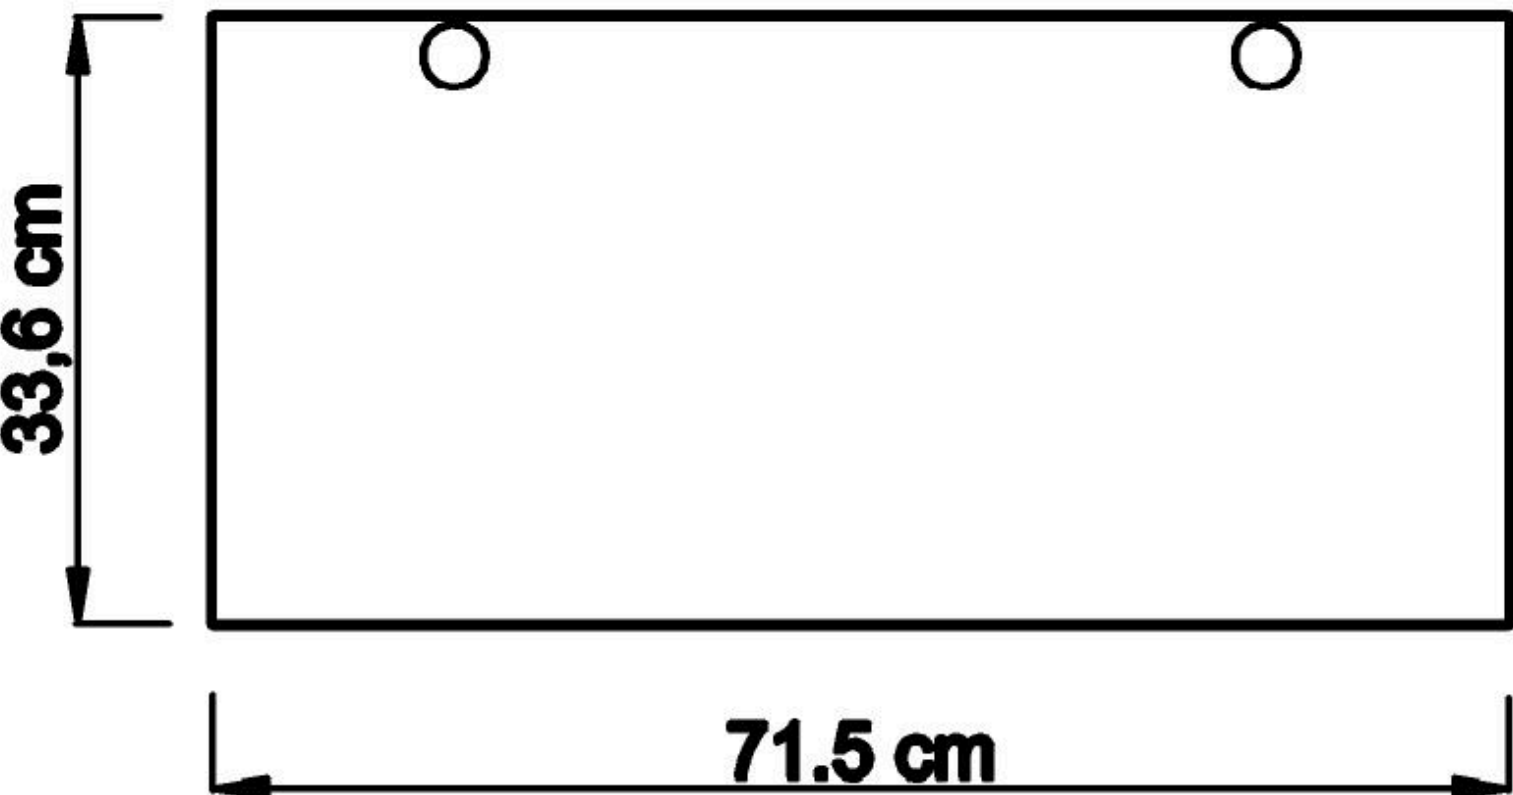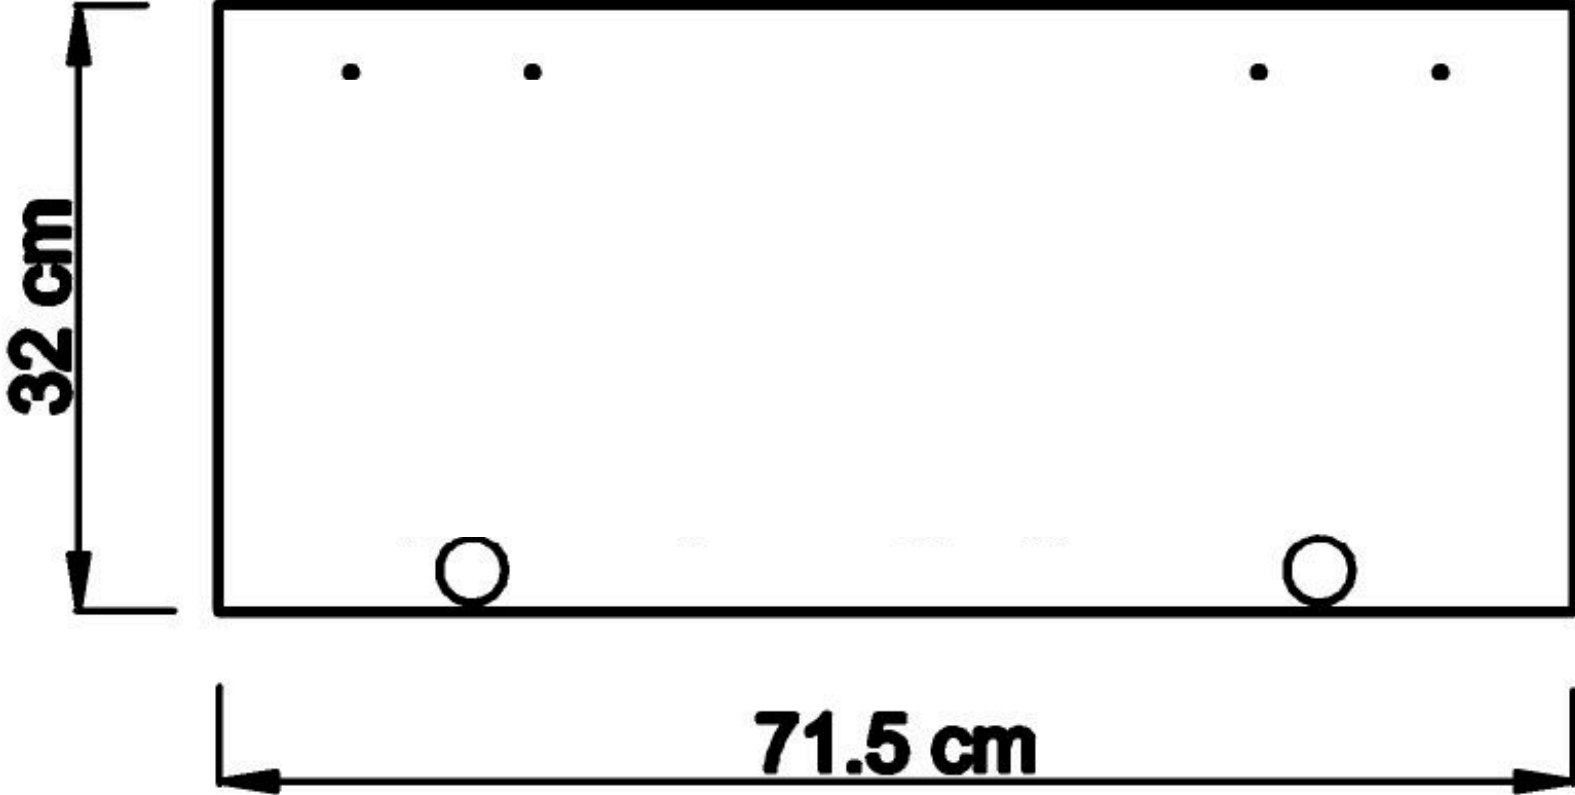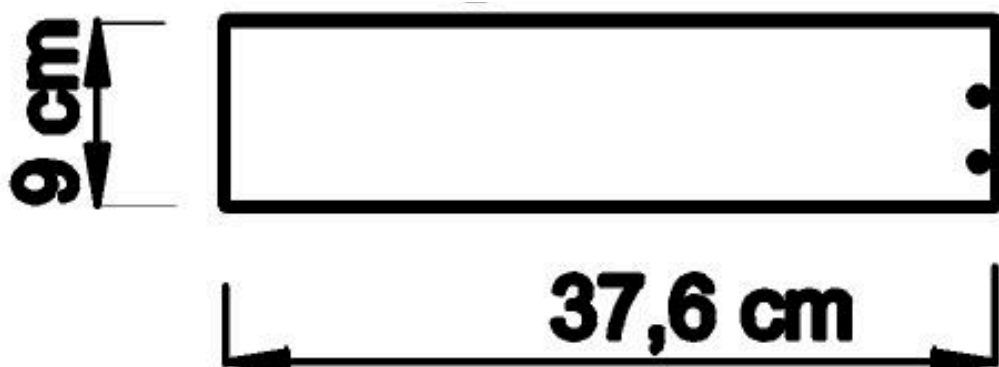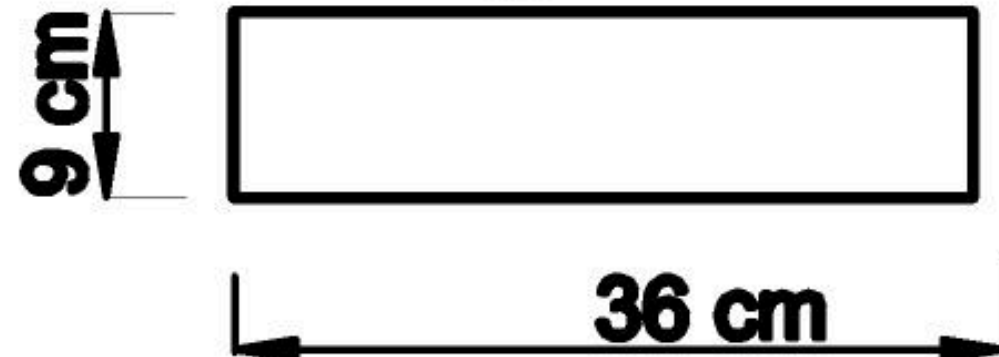
<div>1x1</div> <div></div>	<div>2x1</div> <div></div>	<div>3x1</div> <div></div>
<div>4x1</div> <div></div>	<div>5x2</div> <div></div>	<div>6x2</div> <div></div>
<div>7x1 Front (separate package)</div> <div></div>	<div>8x1 Front (separate package)</div> <div></div>	<div>9x1</div> <div></div>
		<div>10x1</div> <div></div>

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

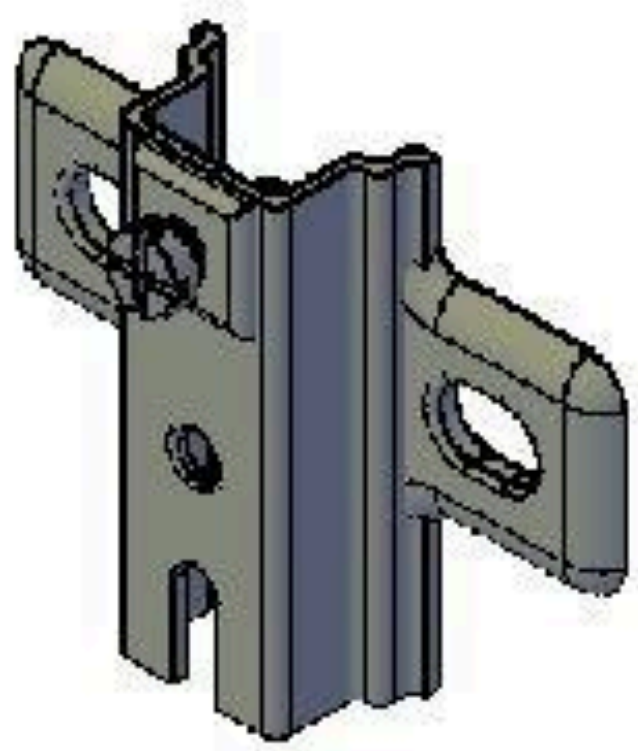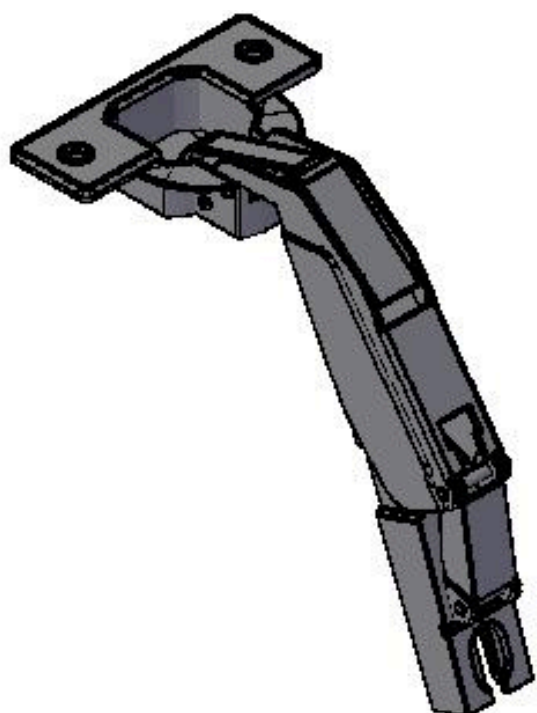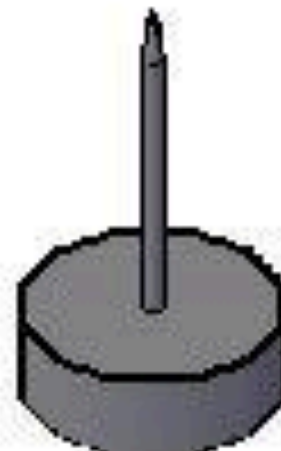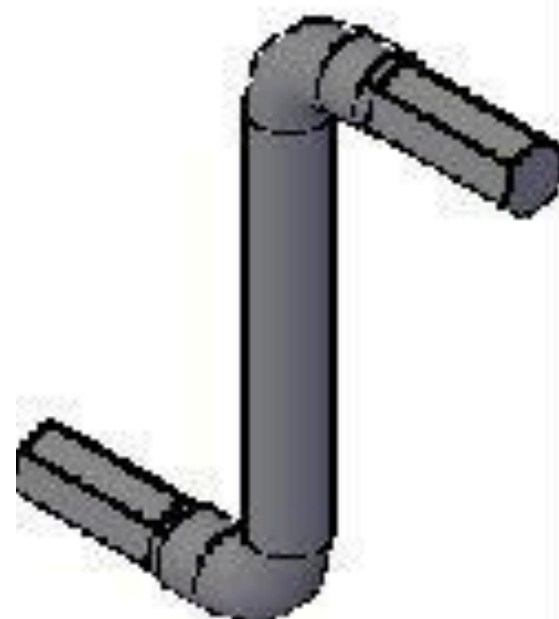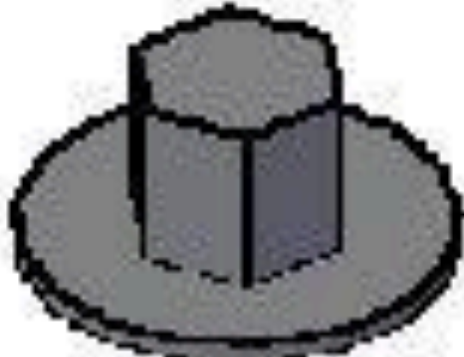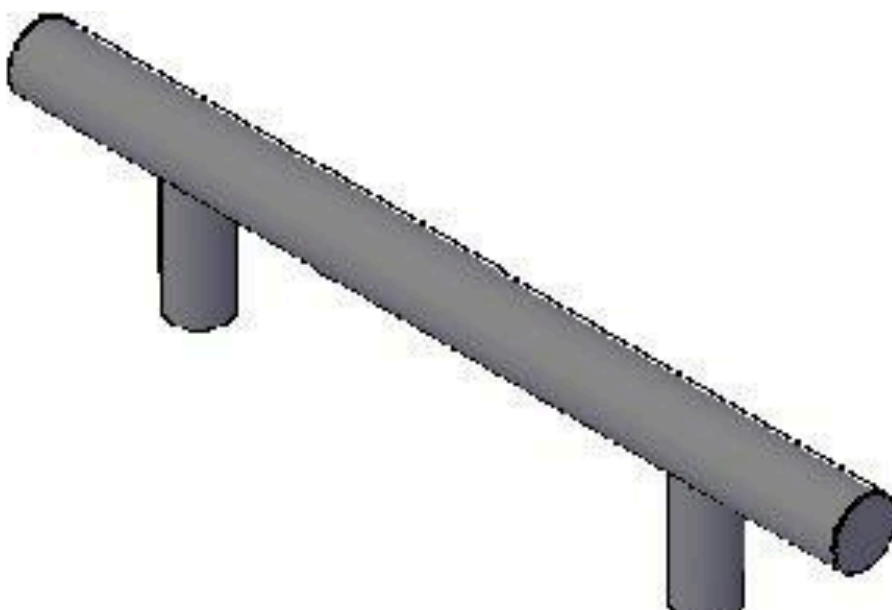
<div><div>O</div><div>x8</div></div> <div></div> <div><div>φ 7x16</div></div>	<div><div>F</div><div>x4</div></div> <div></div>	<div><div>G3</div><div>x4</div></div> <div></div>	<div><div>!</div><div>PAY ATTENTION: O AND F ATTACHED TO G3</div></div>
<div><div>E</div><div>x6</div></div> <div></div>	<div><div>D8</div><div>x5</div></div> <div></div>	<div><div>Q7</div><div>x1</div></div> <div></div>	<div><div>C</div><div>x14</div></div> <div></div> <div><div>φ 7x50</div></div>
<div><div>S1</div><div>x8</div></div> <div></div>	<div><div>L4</div><div>x1</div></div> <div></div>	<div><div>J9</div><div>x2</div></div> <div></div> <div><div>φ 3x25</div></div>	<div><div>U7</div><div>x1</div></div> <div></div>
<div><div>H</div><div>x11</div><div>US 031.03</div></div> <div></div> <div><div>φ 3.5x13</div></div>	<div><div>W</div><div>x70</div></div> <div></div>	<div><div>H5</div><div>x8</div><div>US 031.03</div></div> <div></div> <div><div>φ 3.5x25</div></div>	<div><div>A</div><div>x12</div></div> <div></div>
<div><div>S7</div><div>x2</div></div> <div></div>			

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x8


F x4

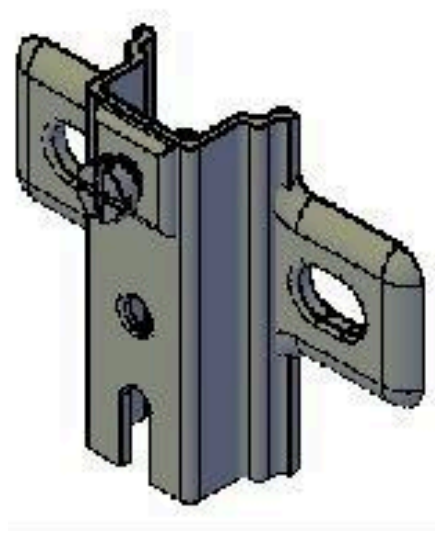

7x16


E x4

D8 x4

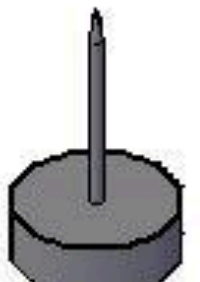


A x12



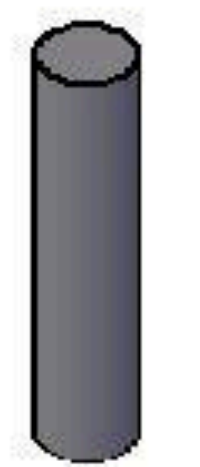


Glue

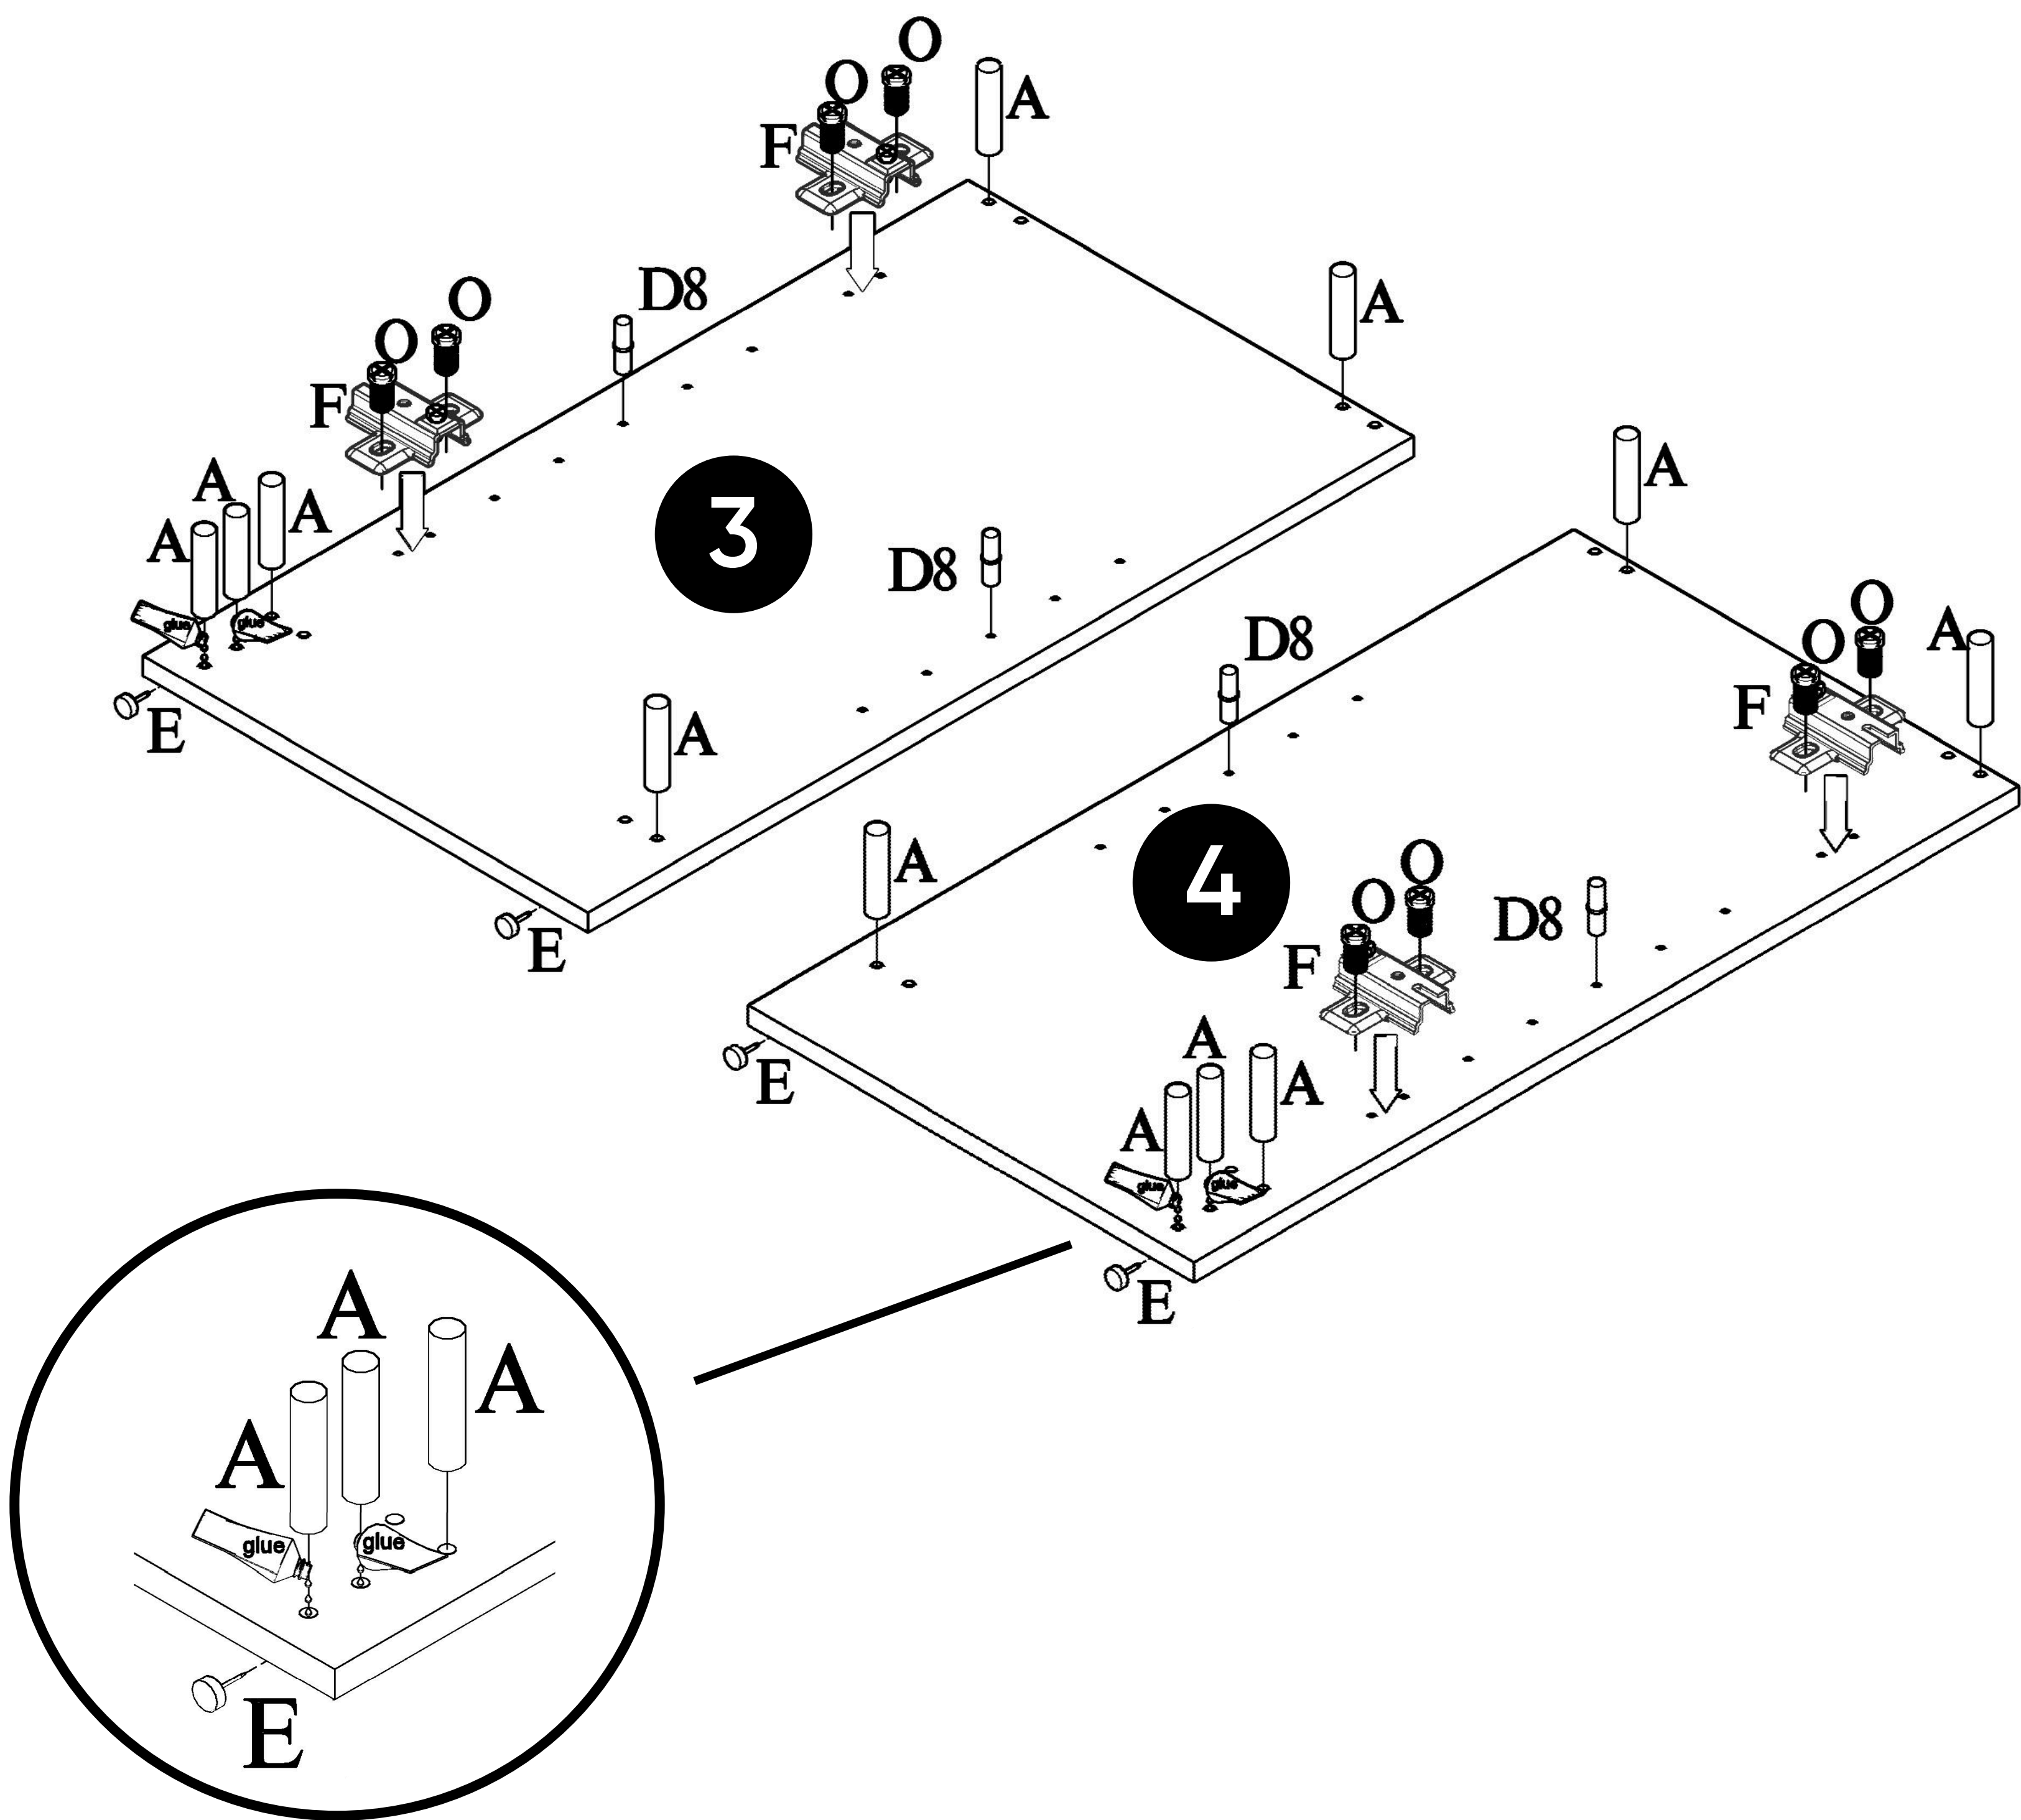

STEP - 2

Q7 x1

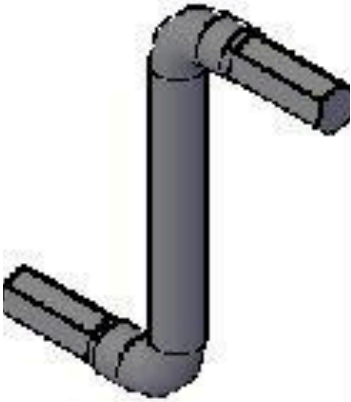


C x2



7x50




Glue

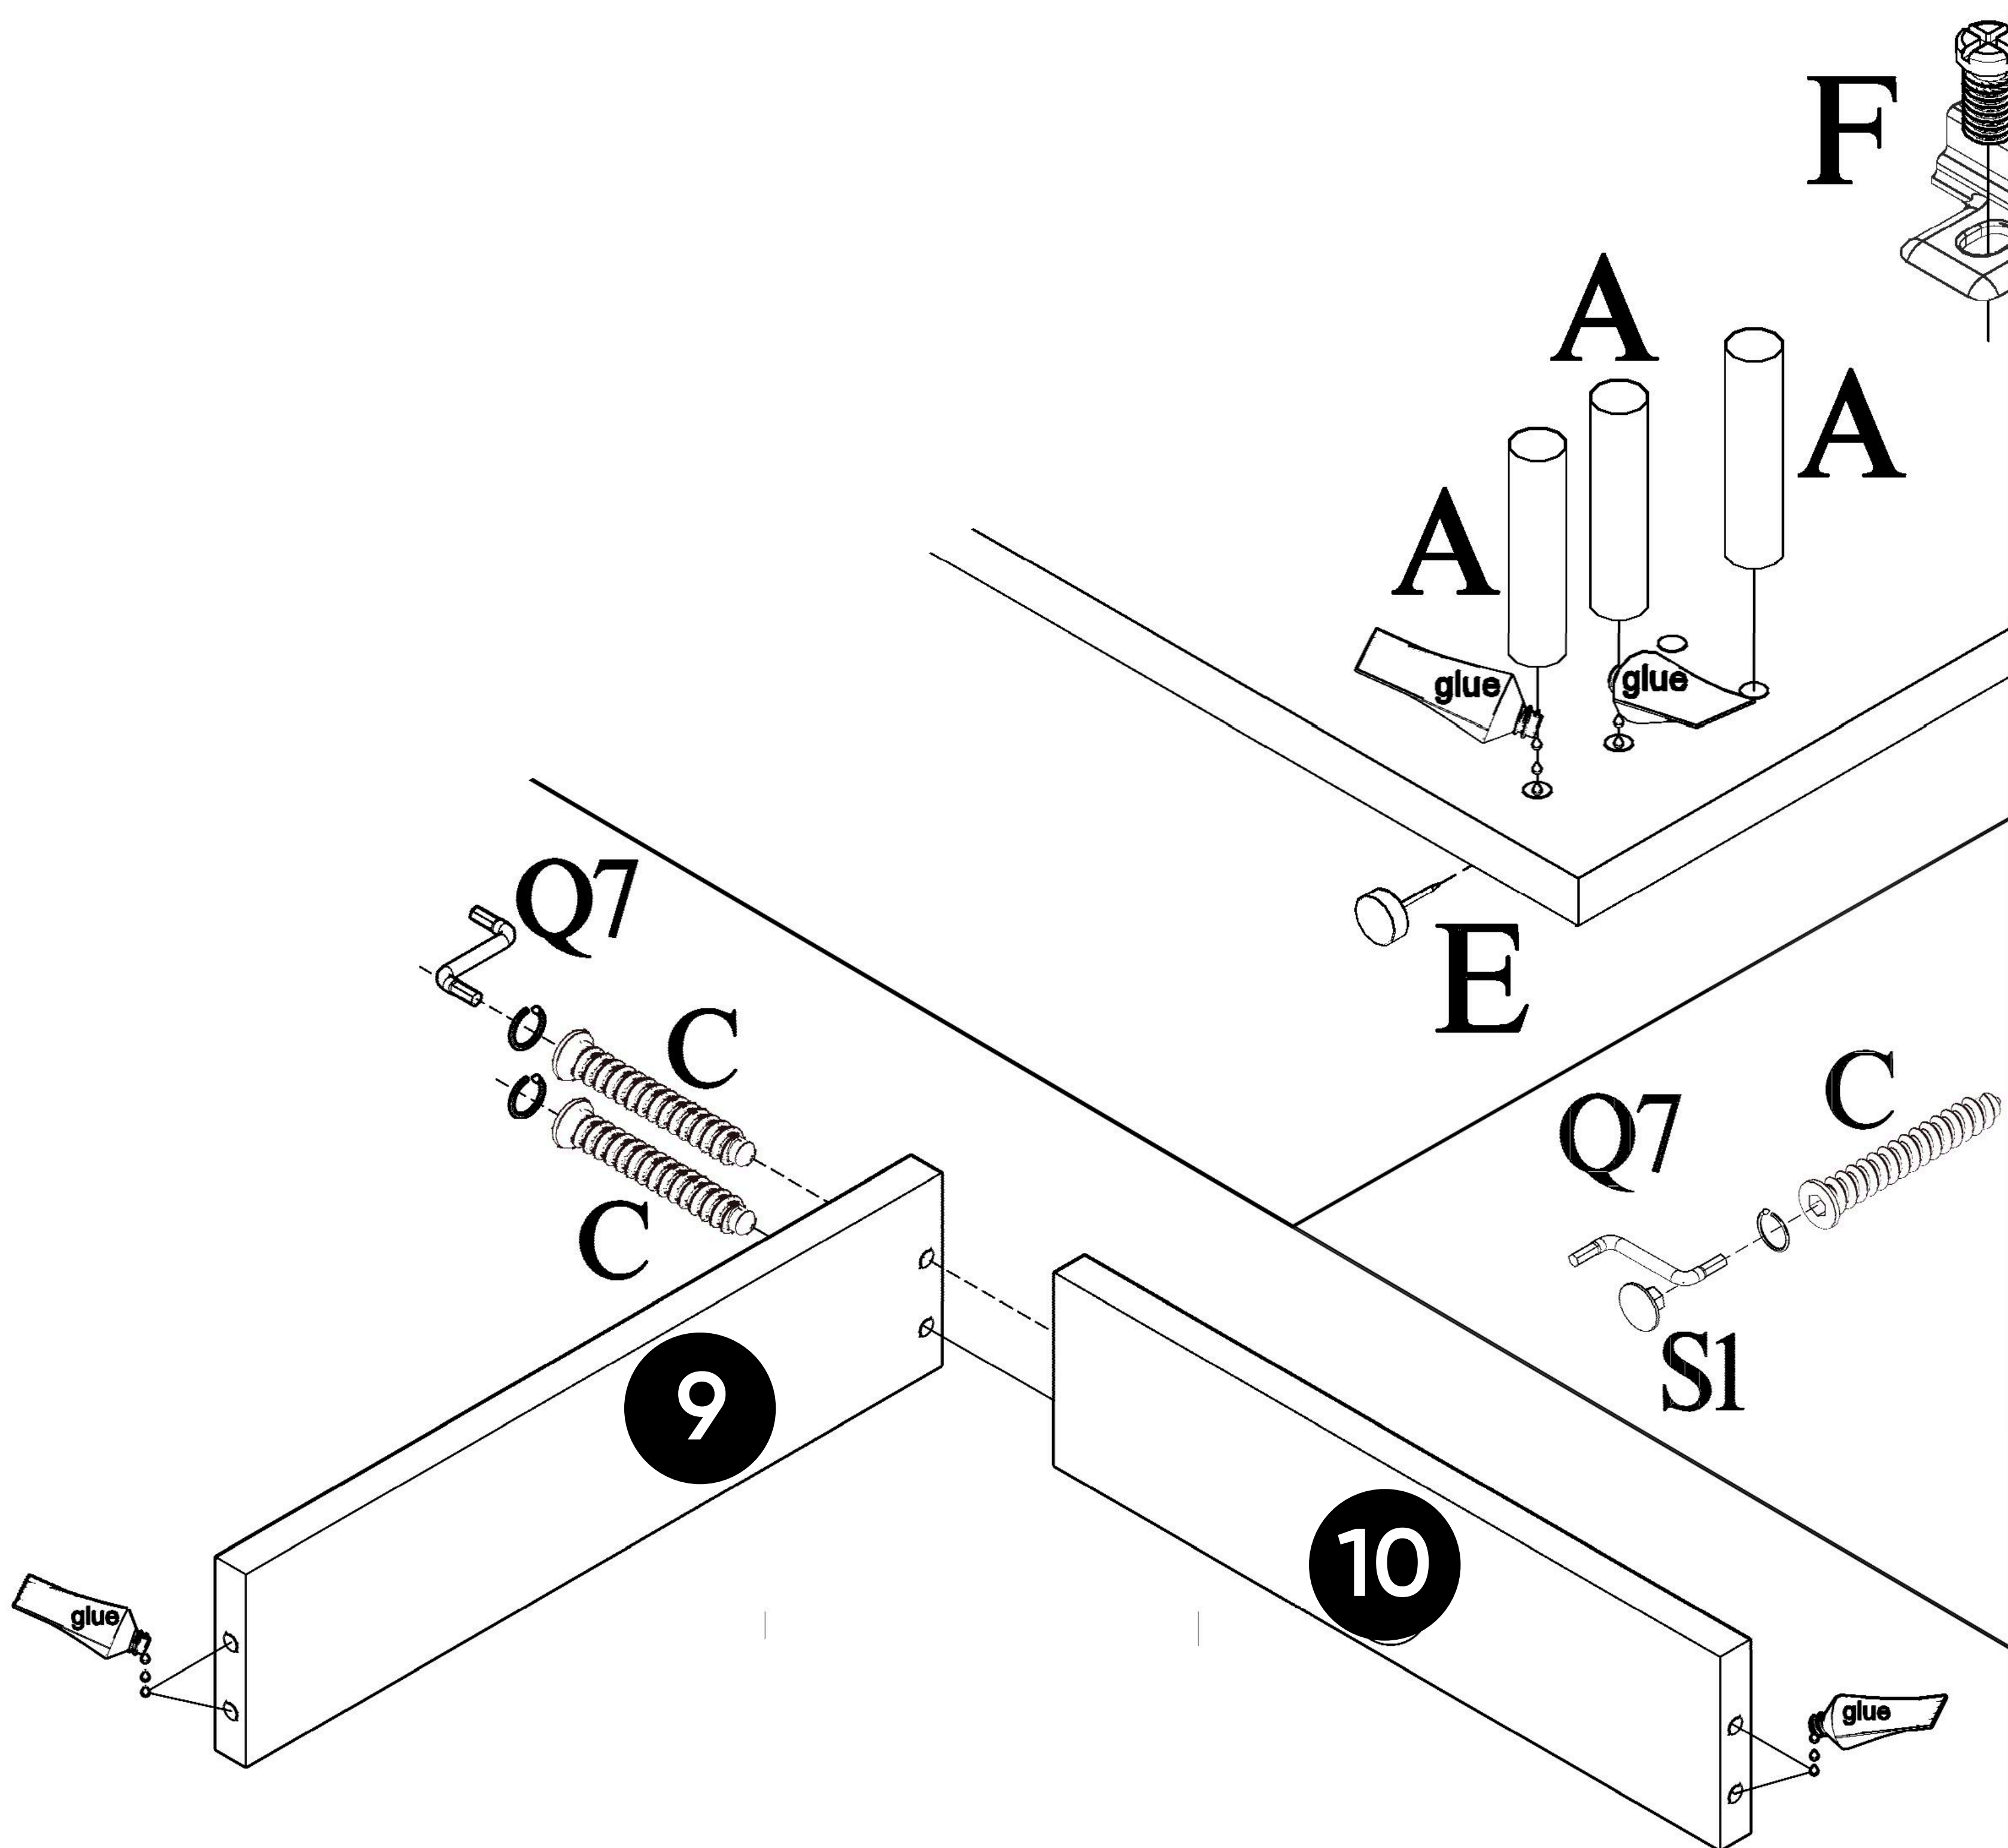

STEP - 3

Q7 x1

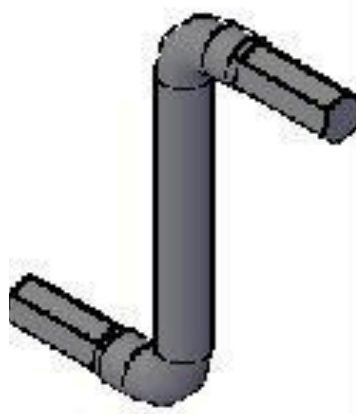


S1 x8



C x8




φ 7x50

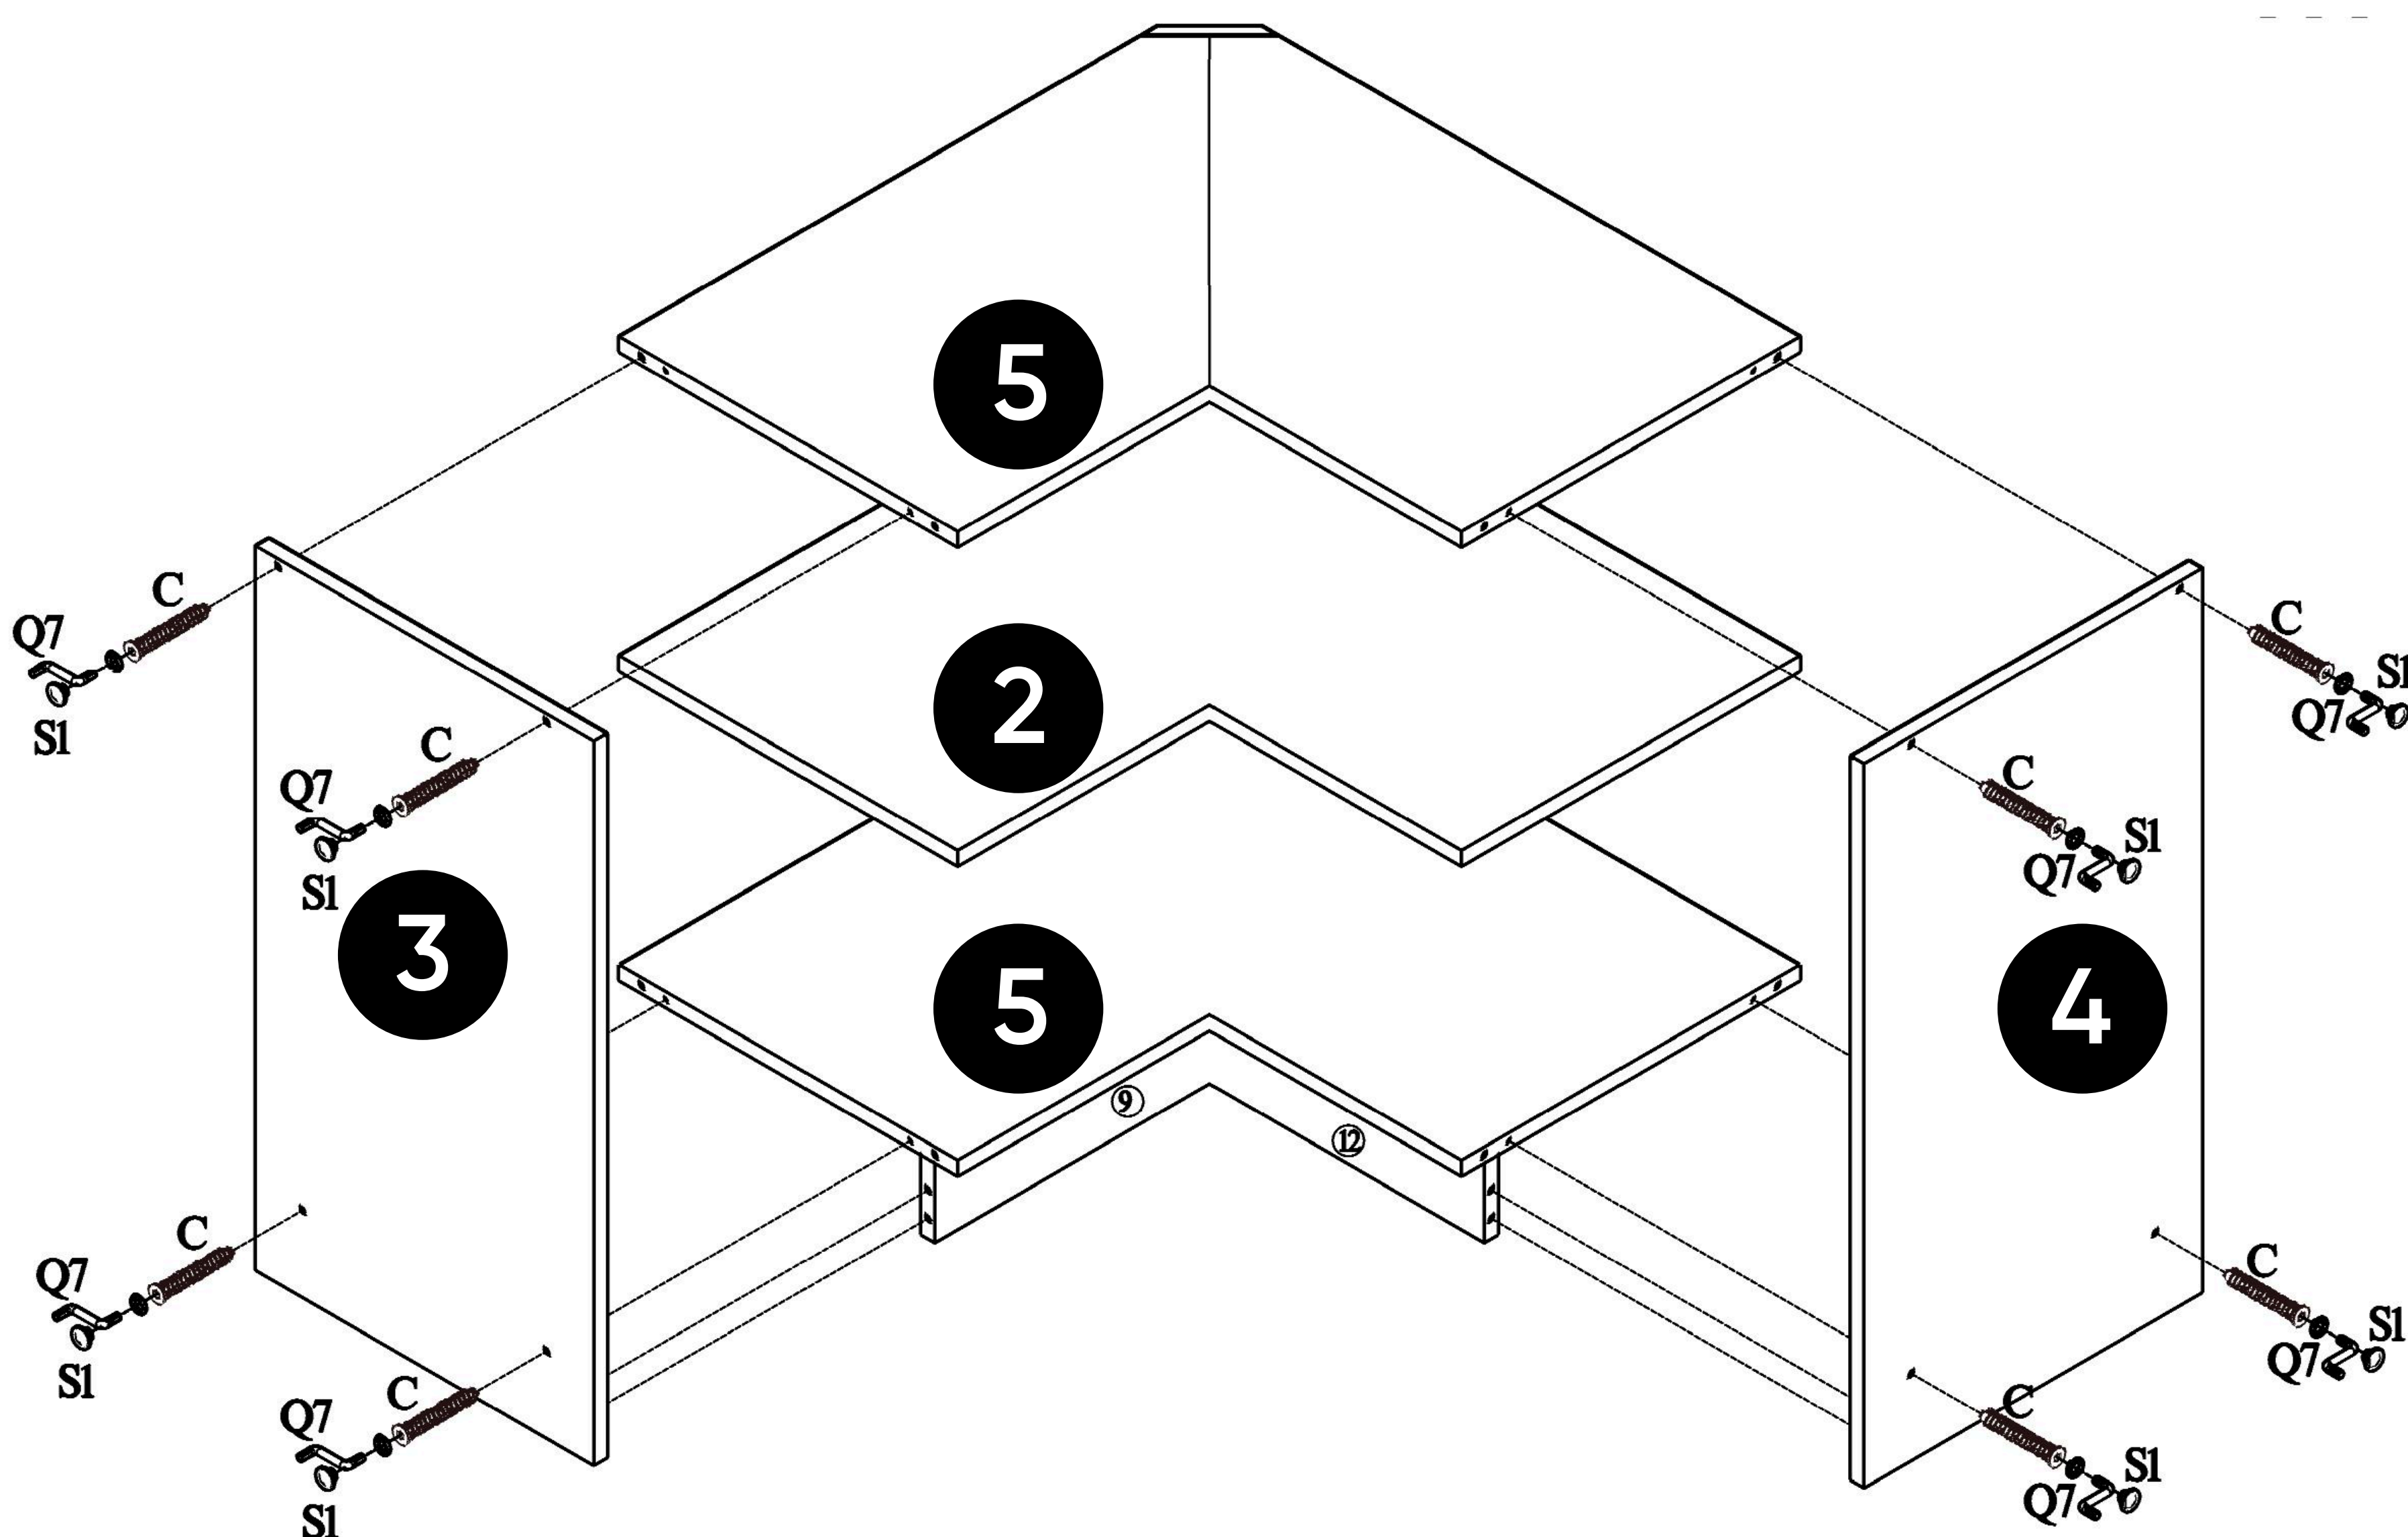


STEP - 4

Q7 x1

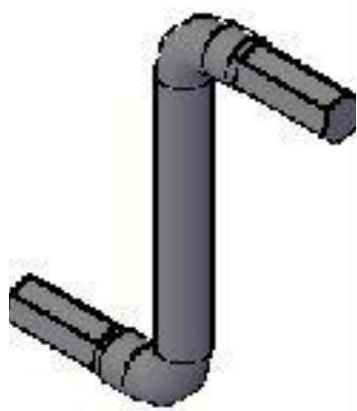

E x2

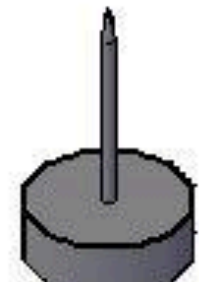



C x4




φ 7x50

D8 x1




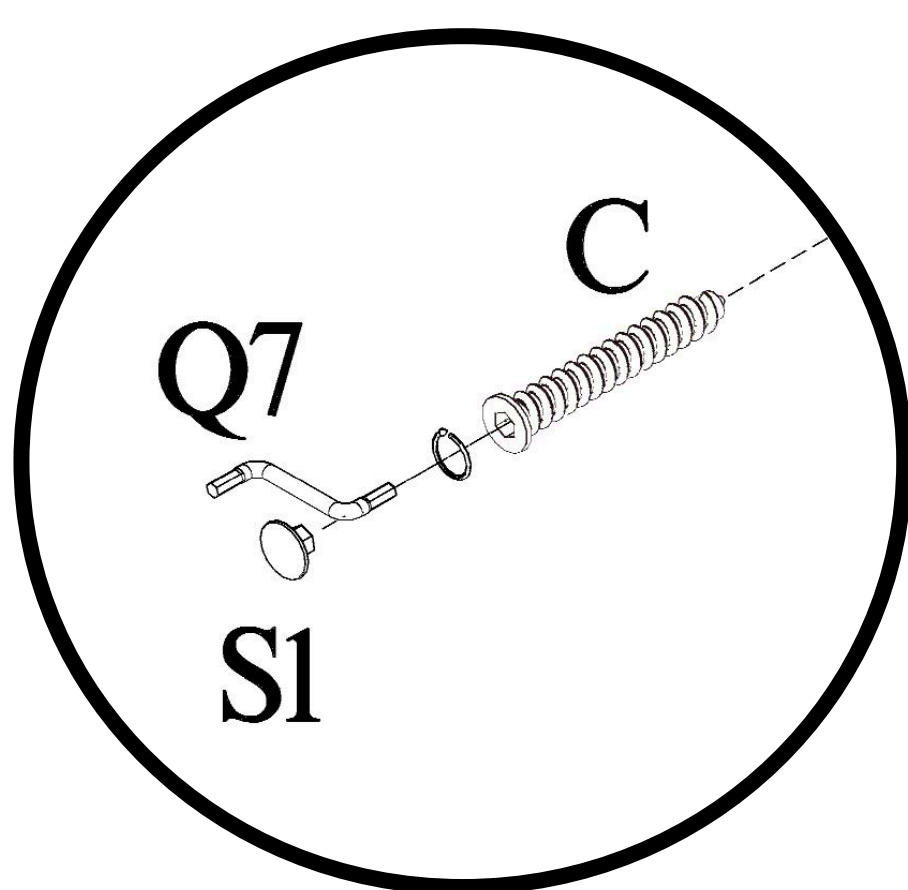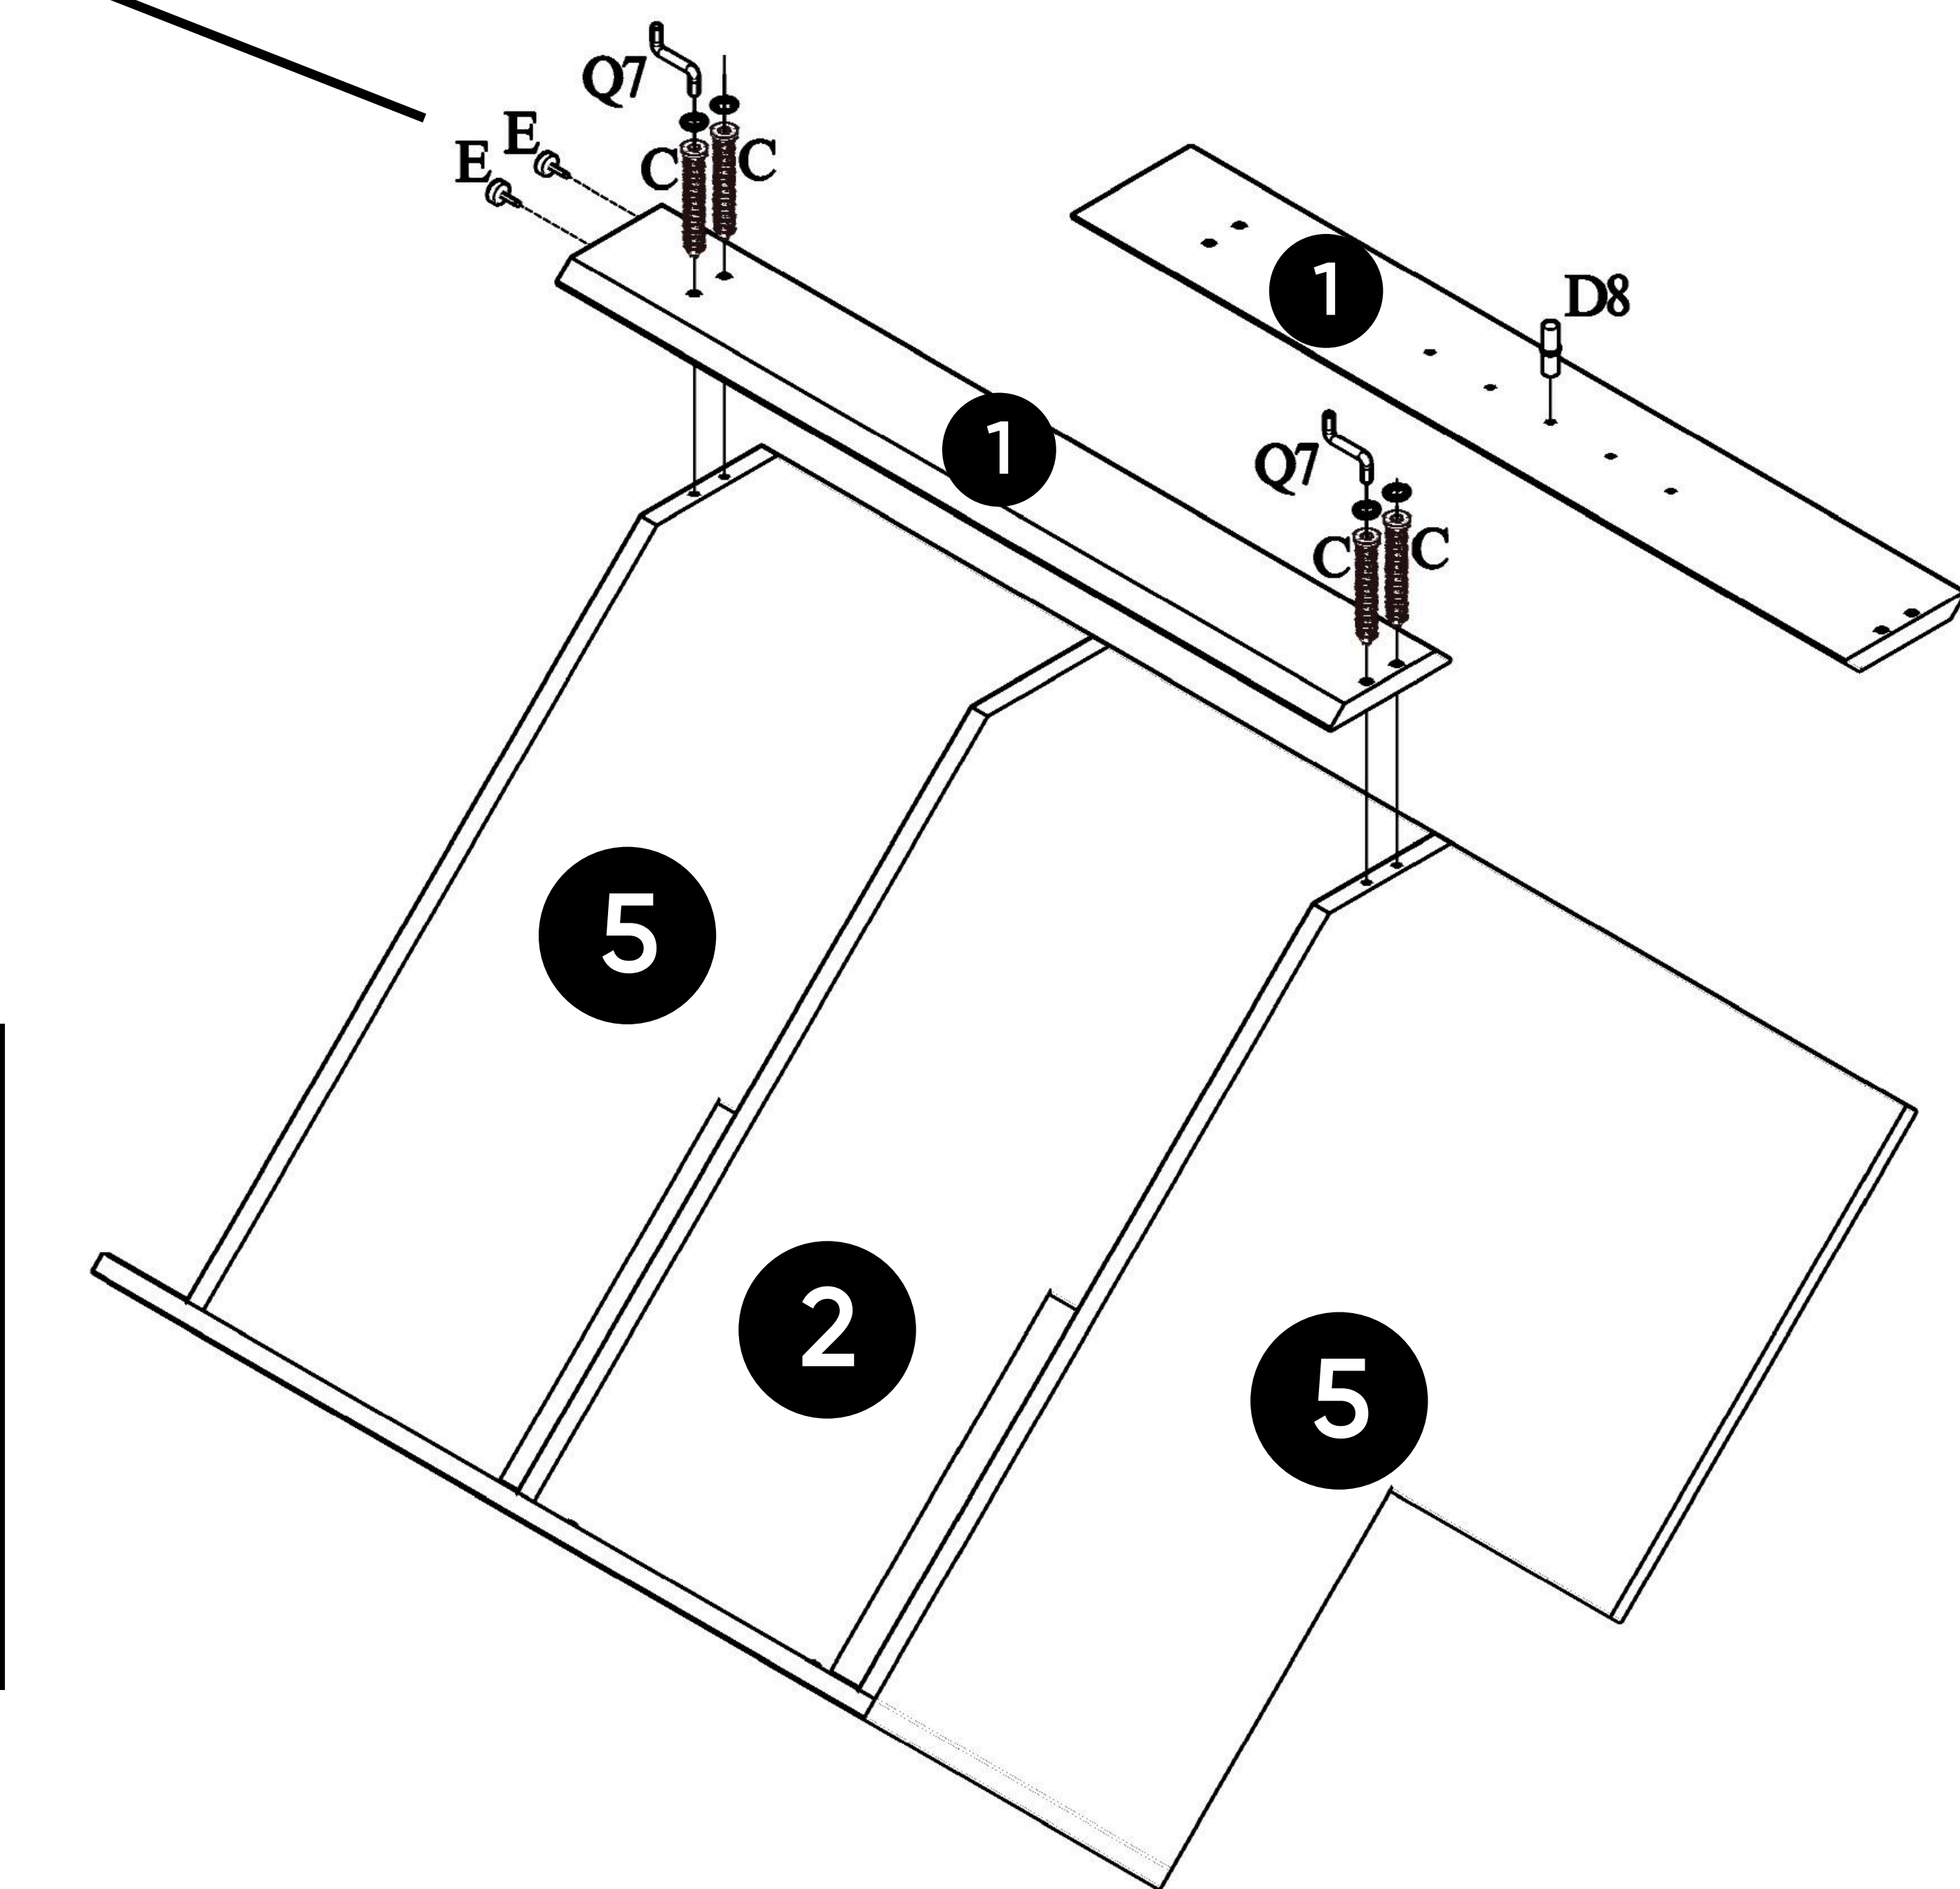



STEP - 5

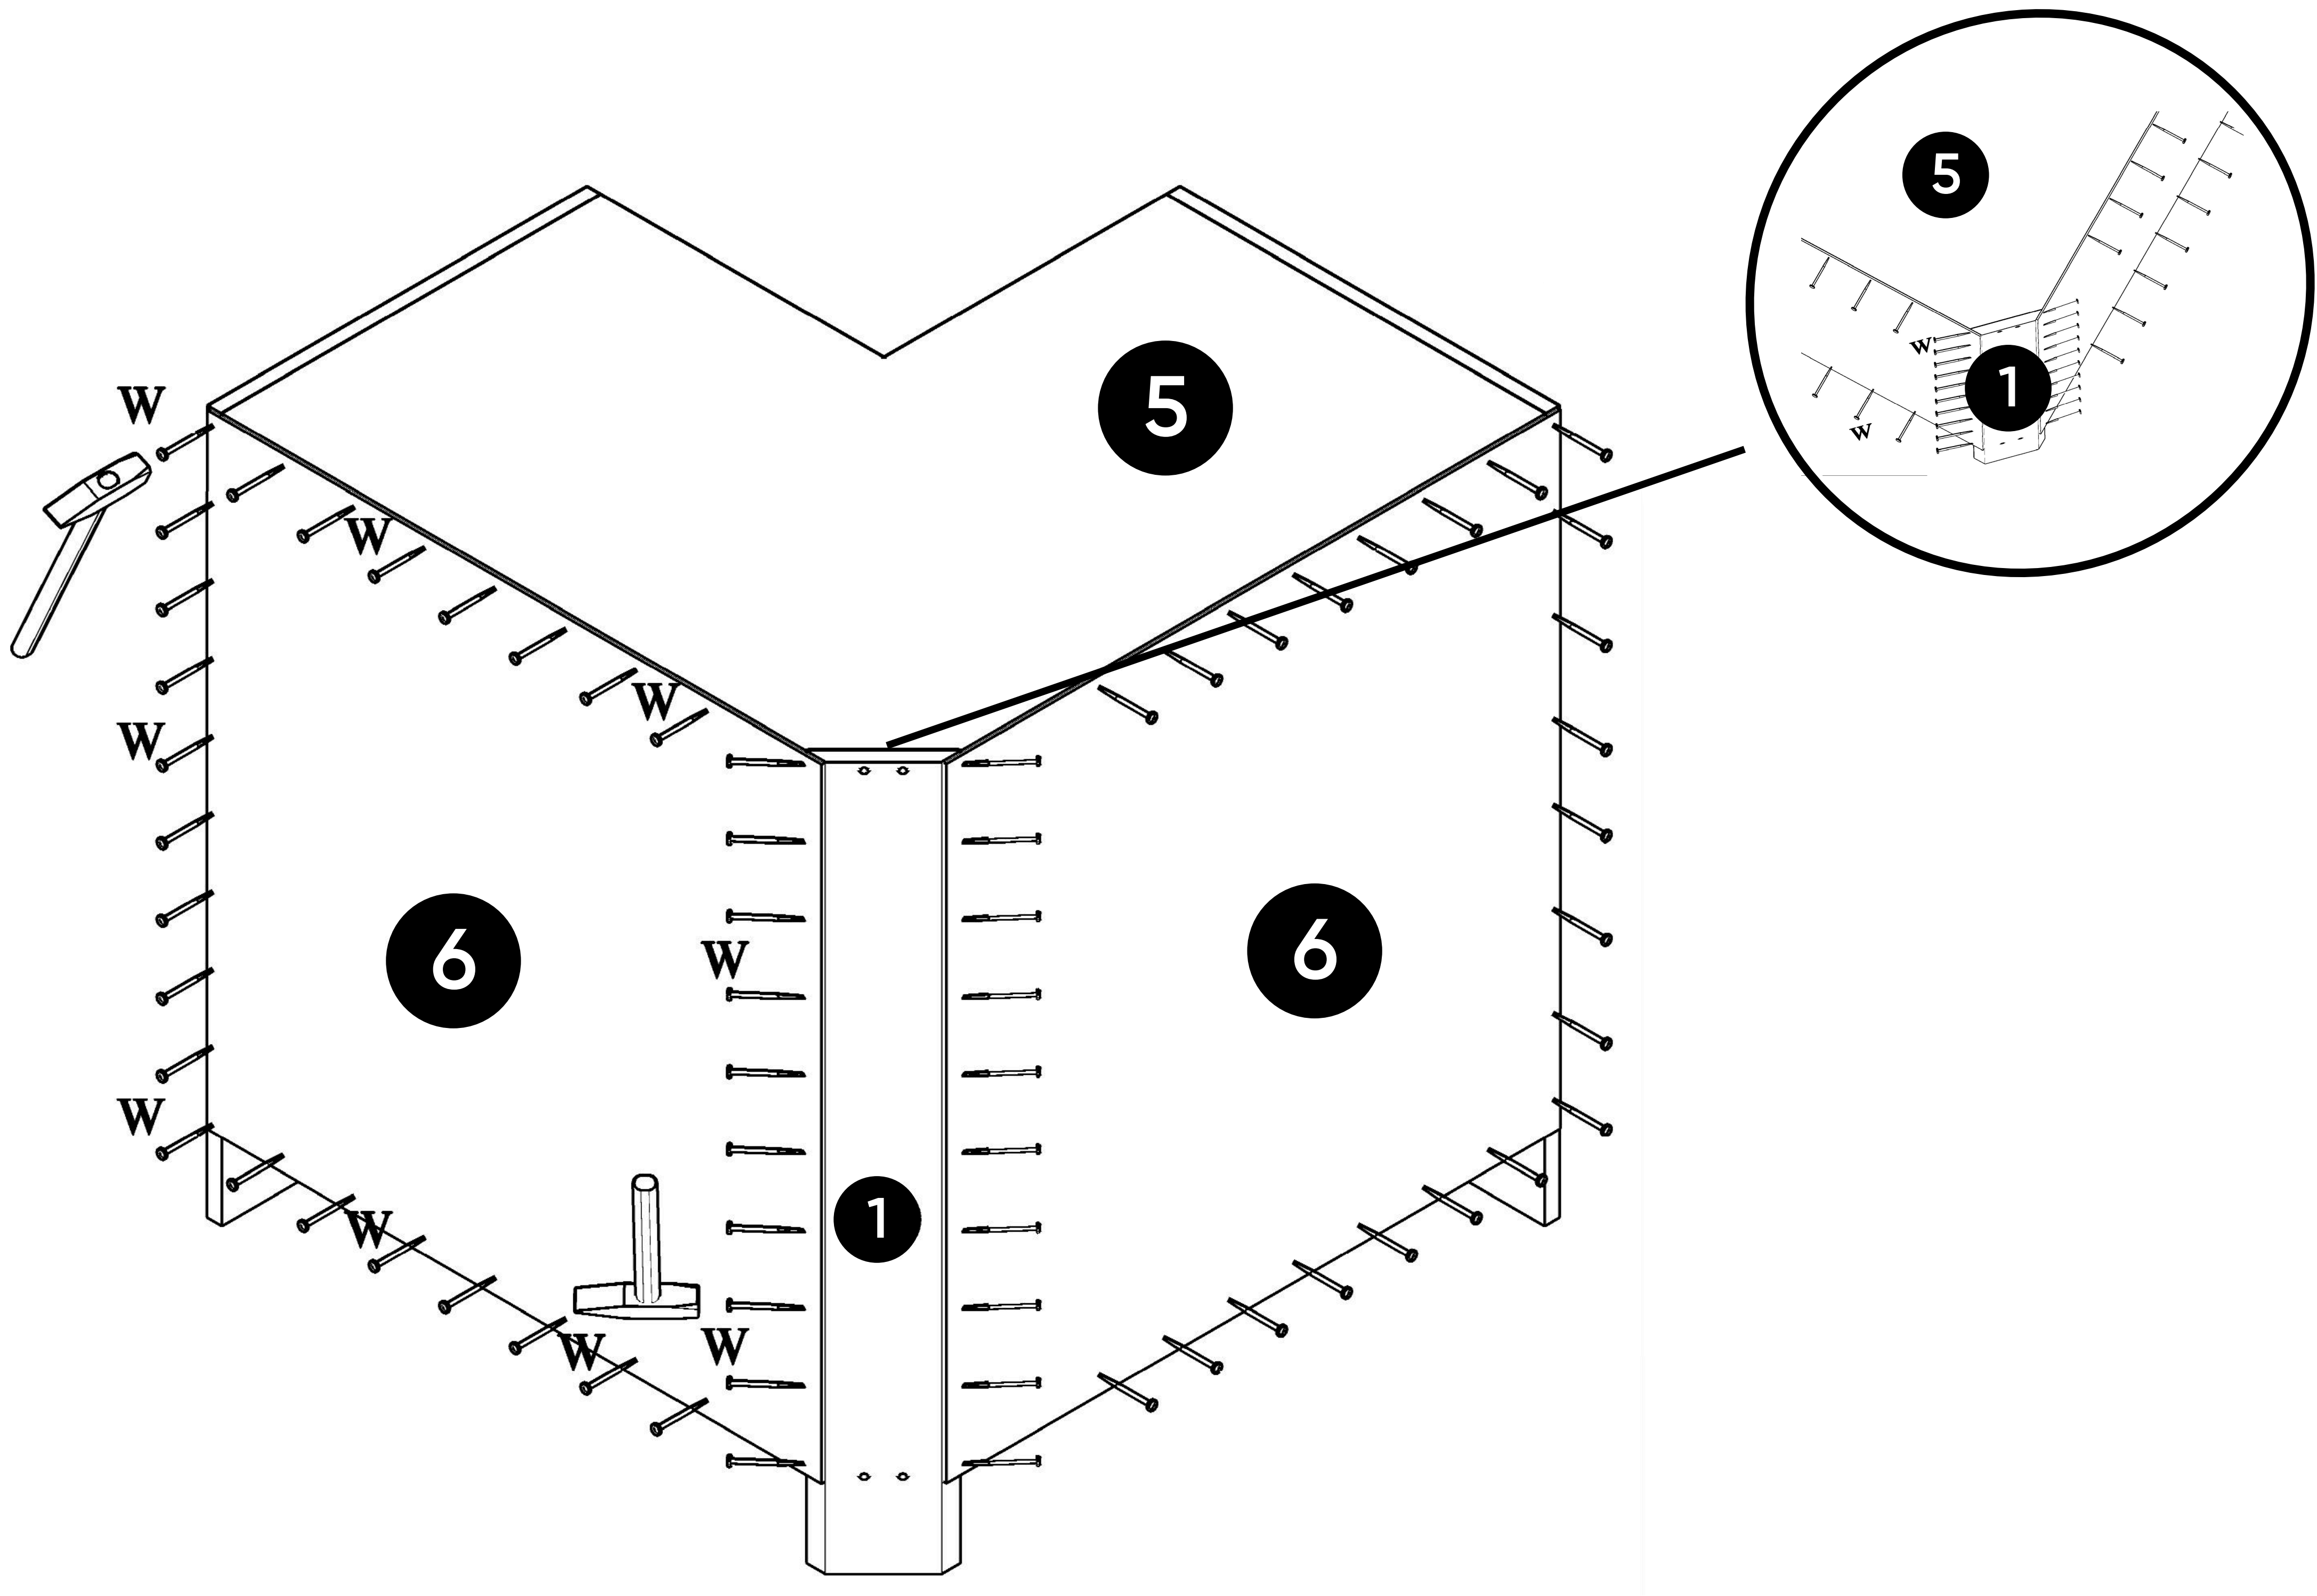




STEP - 6

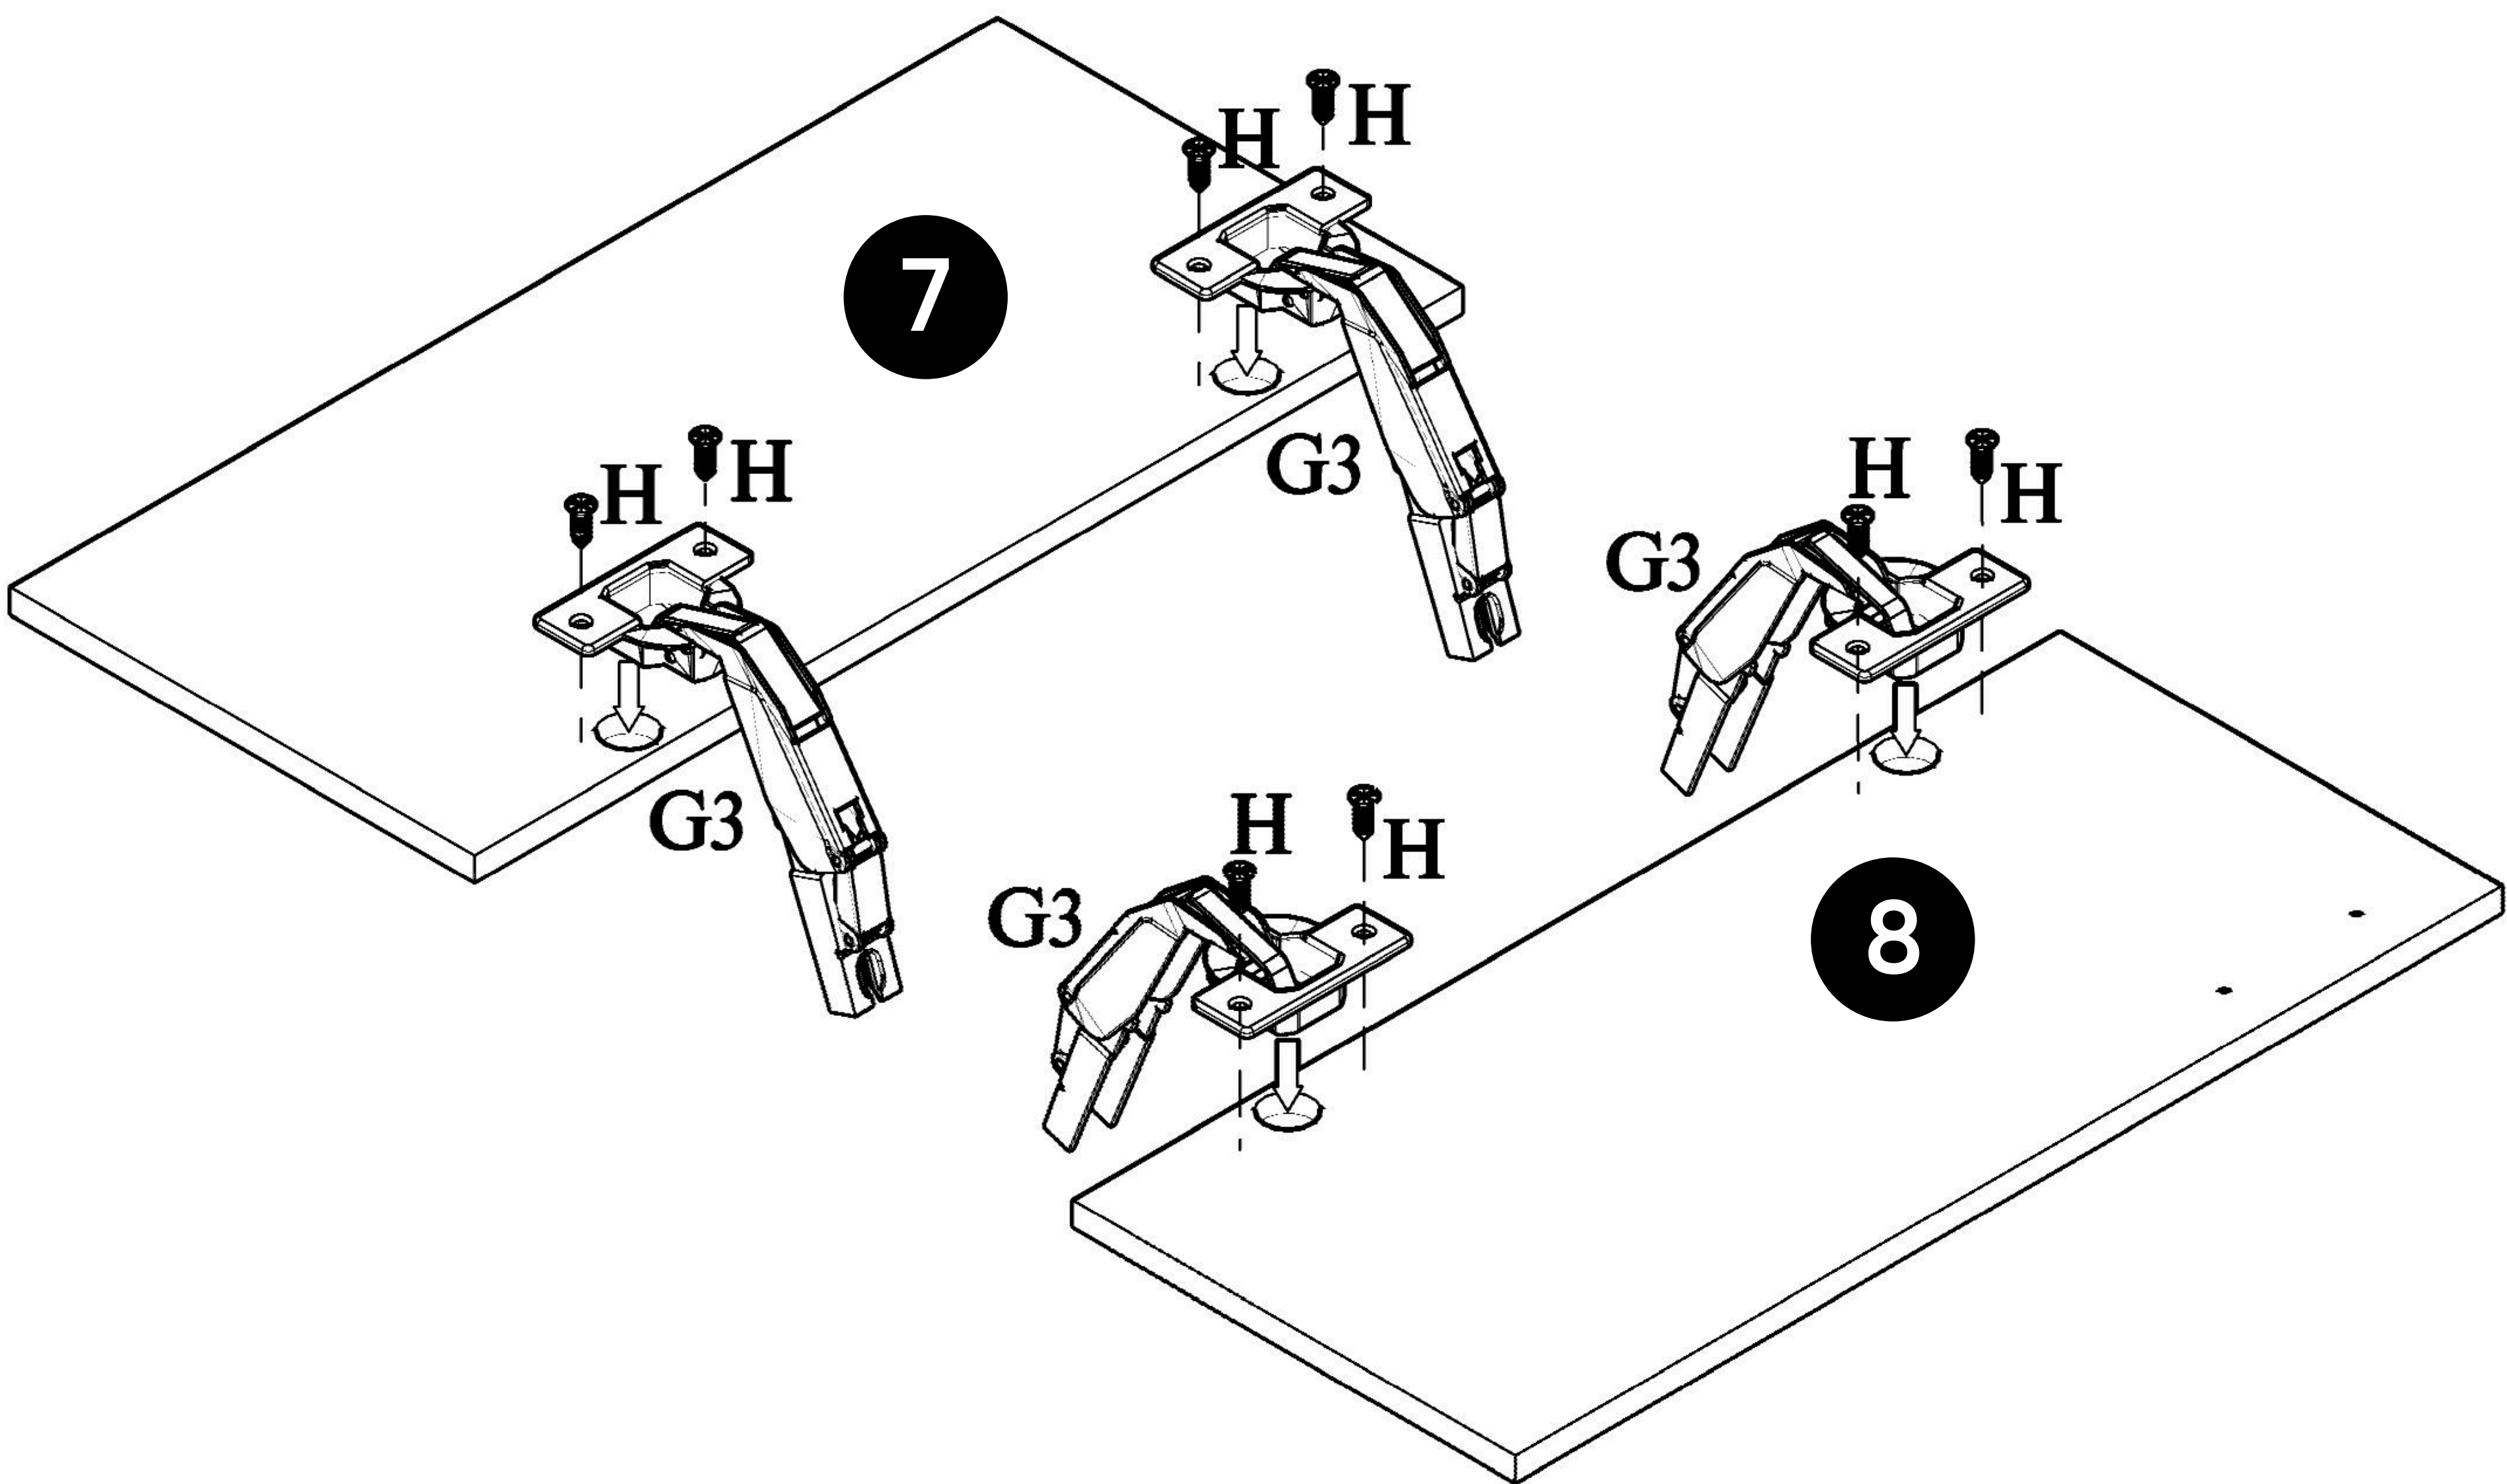



STEP - 7

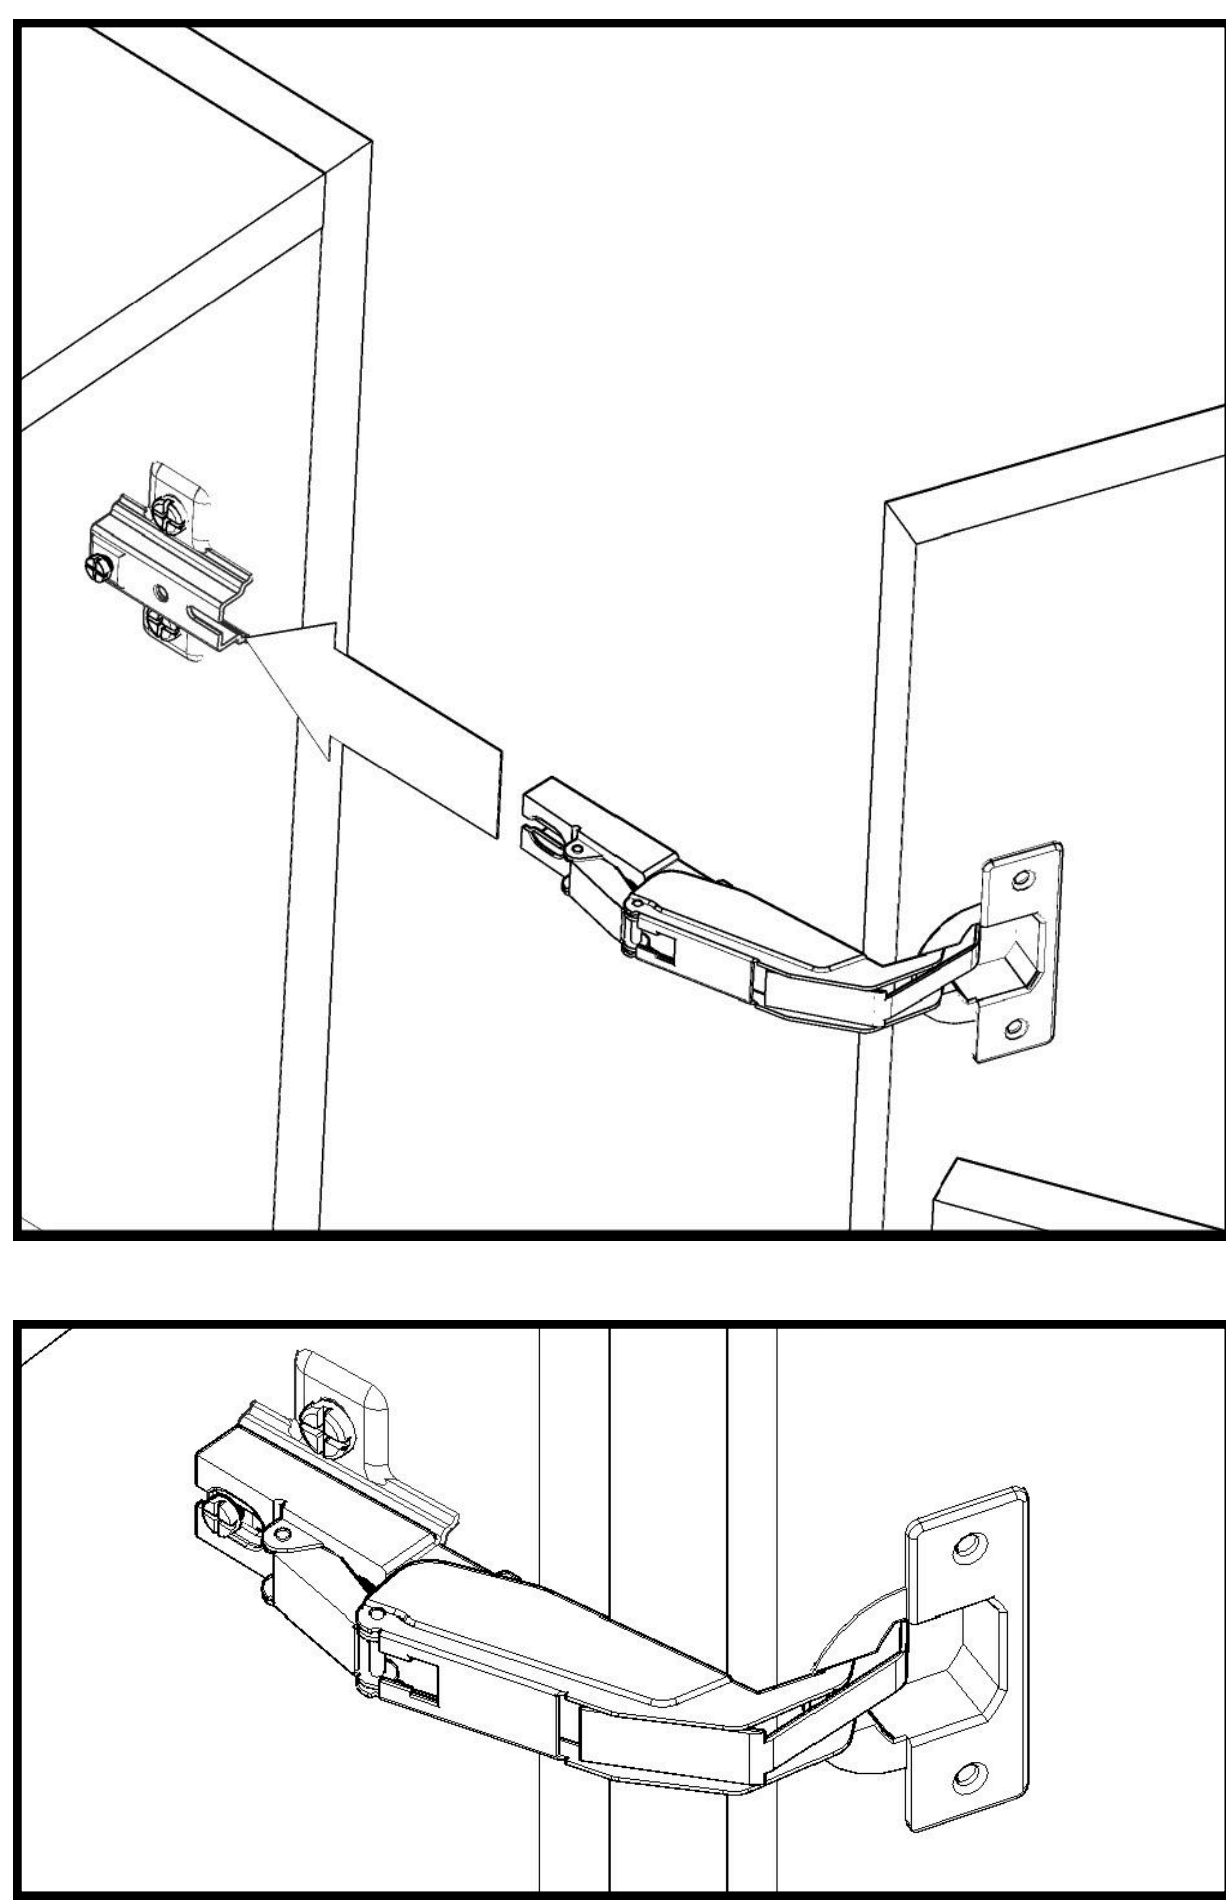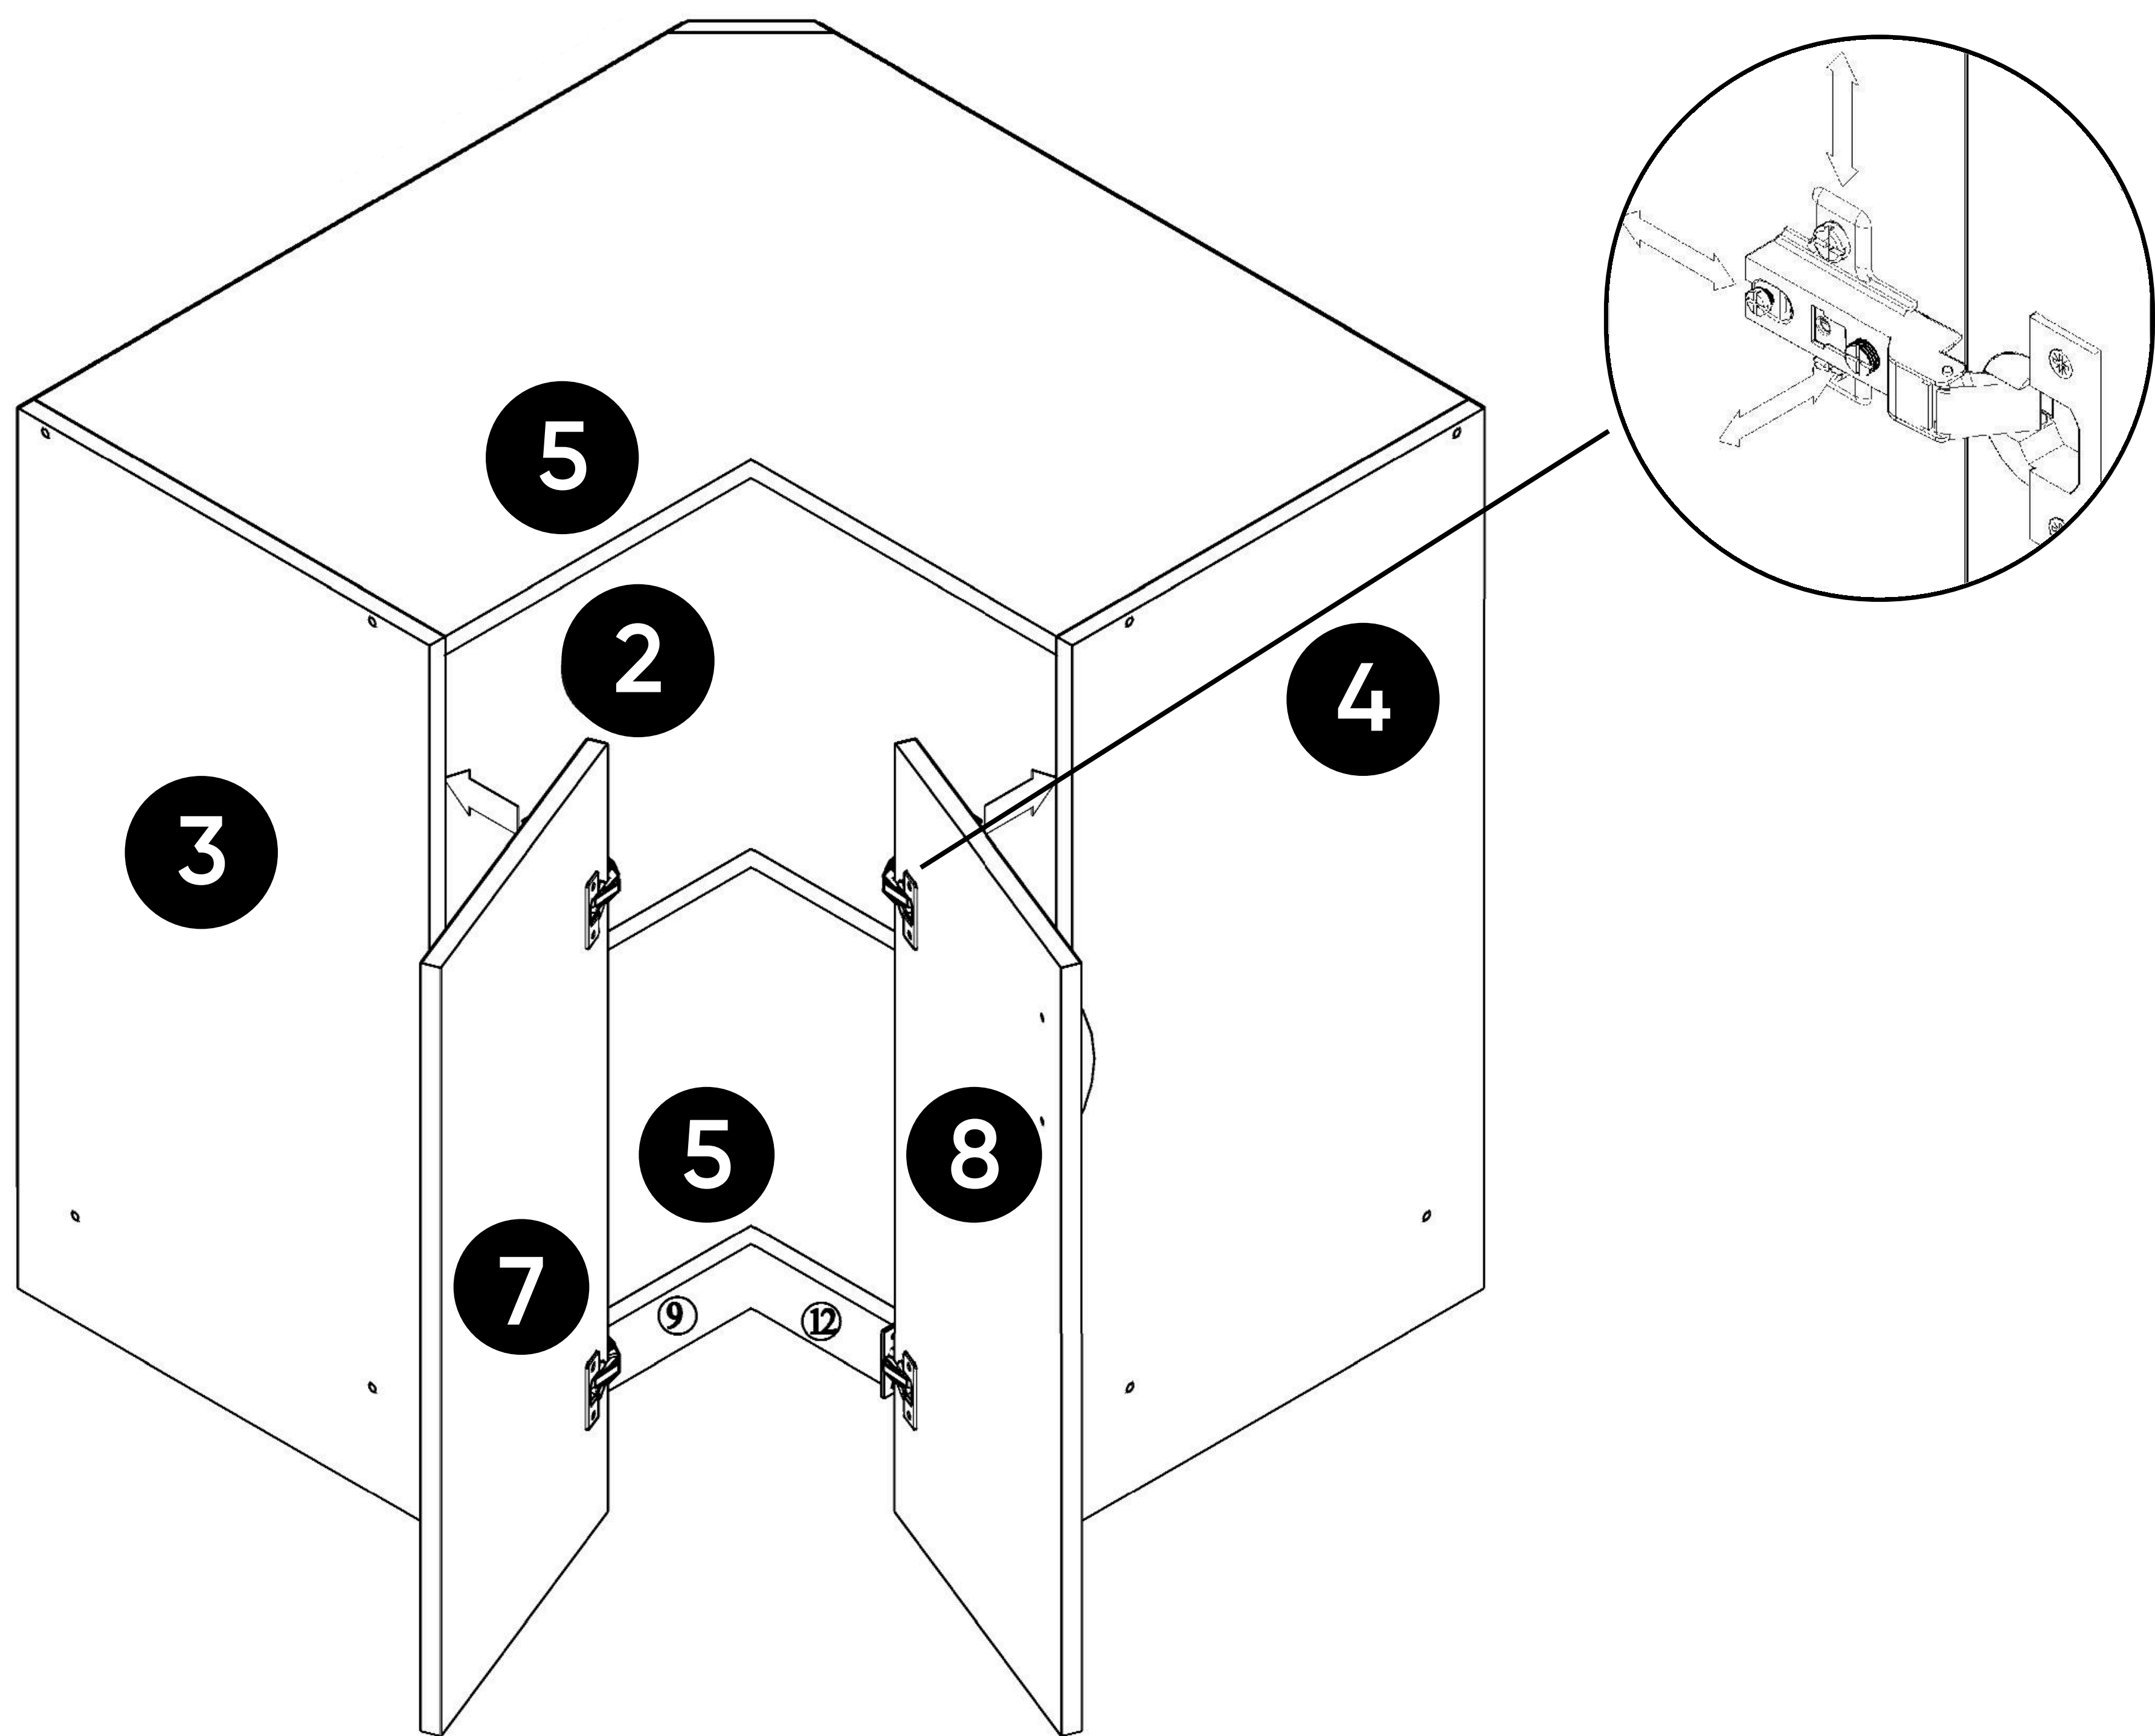


STEP - 8

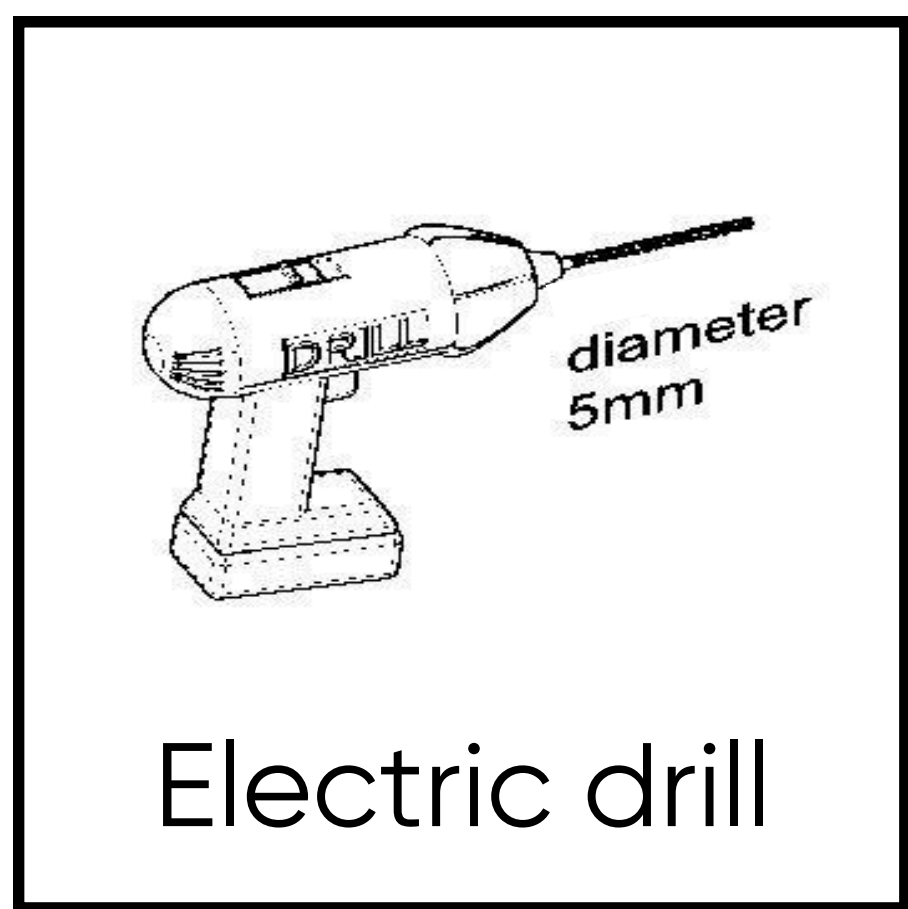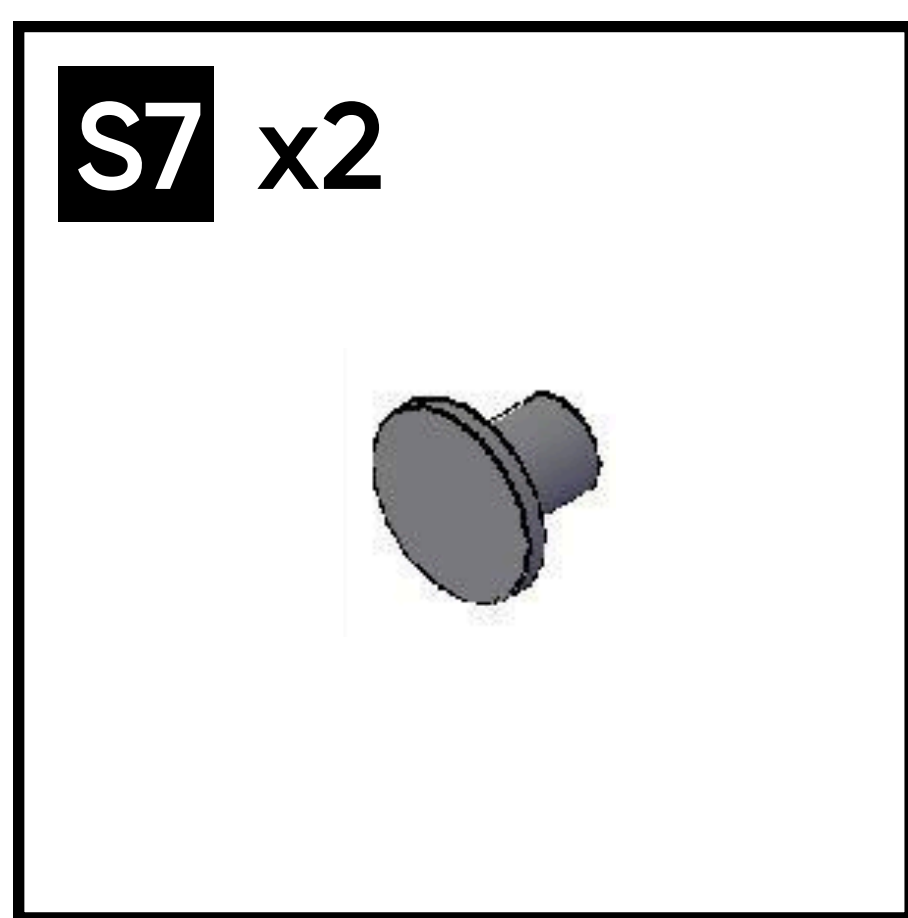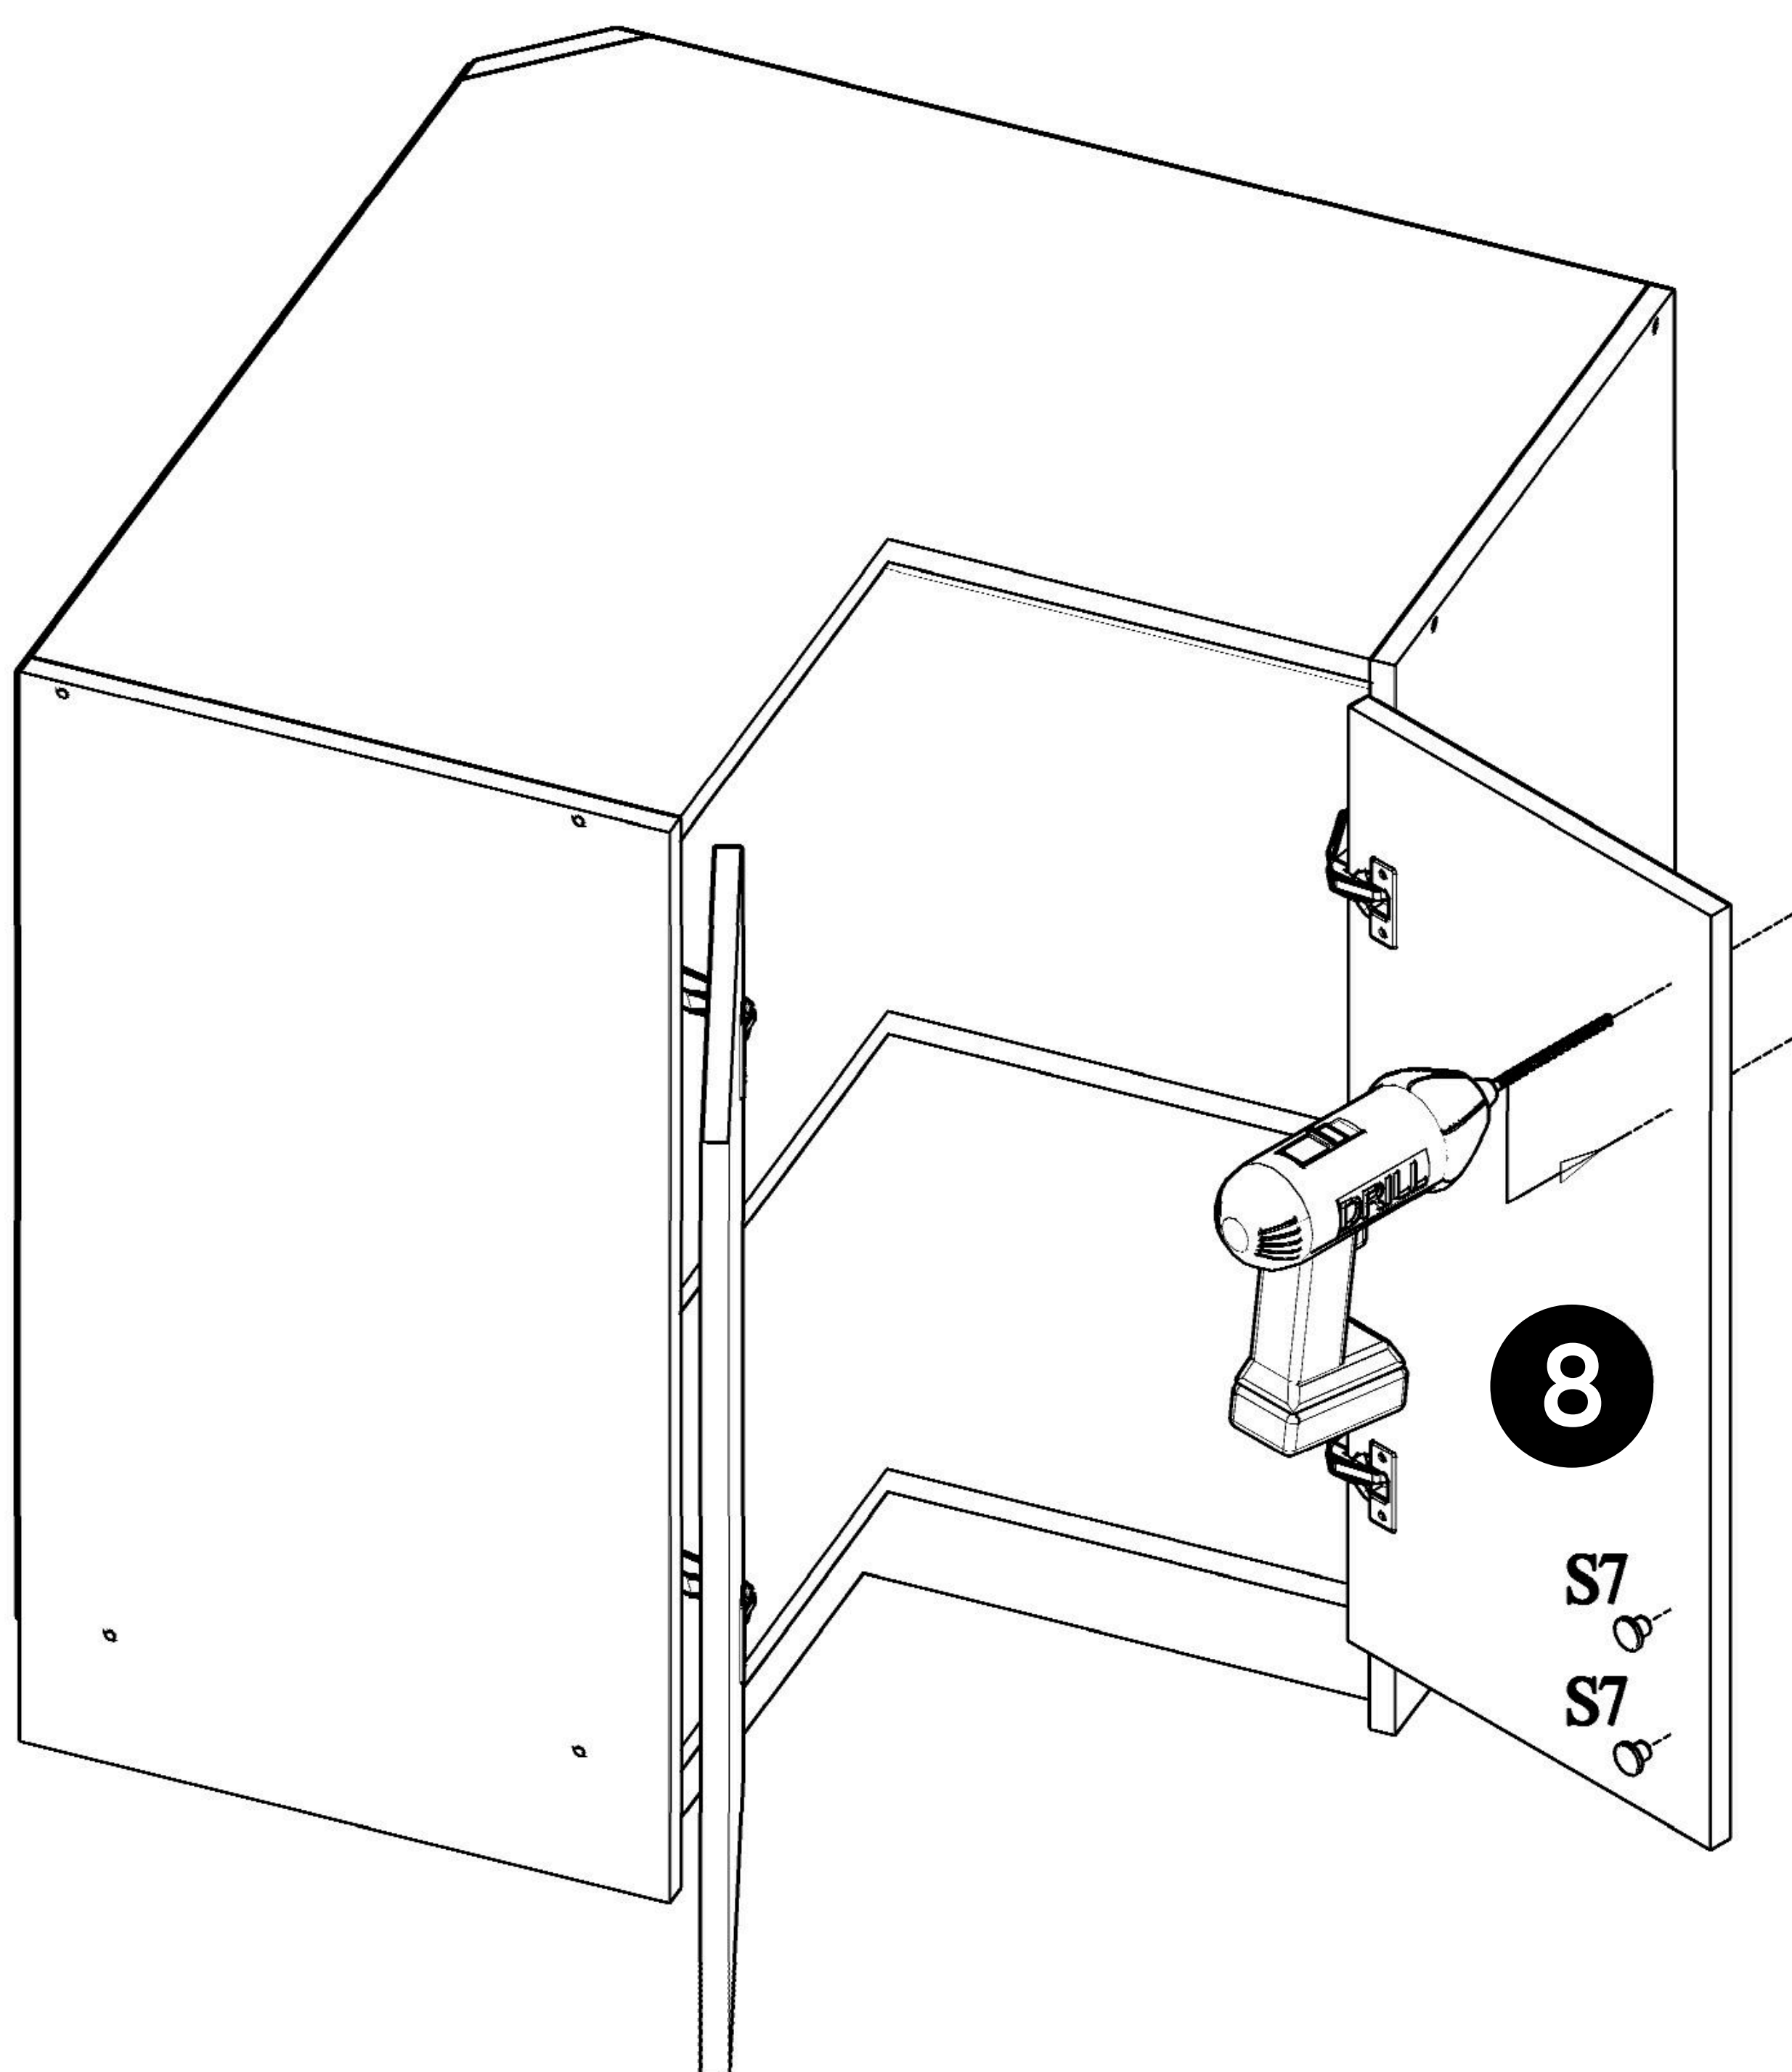


STEP - 9

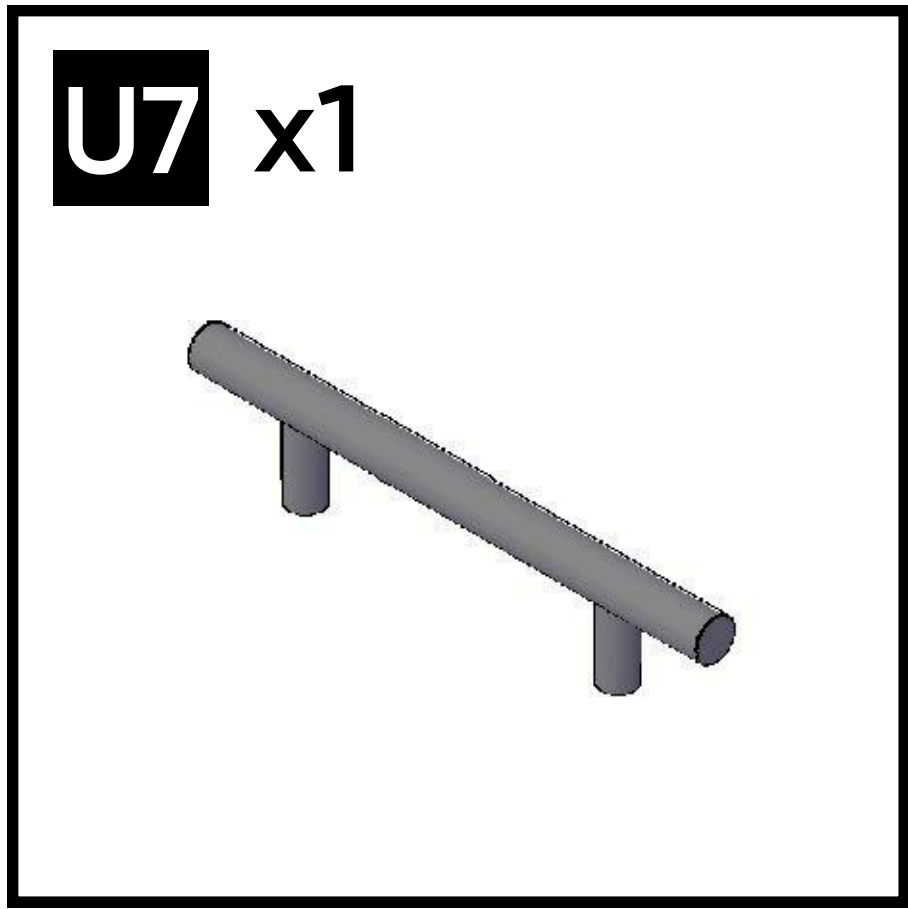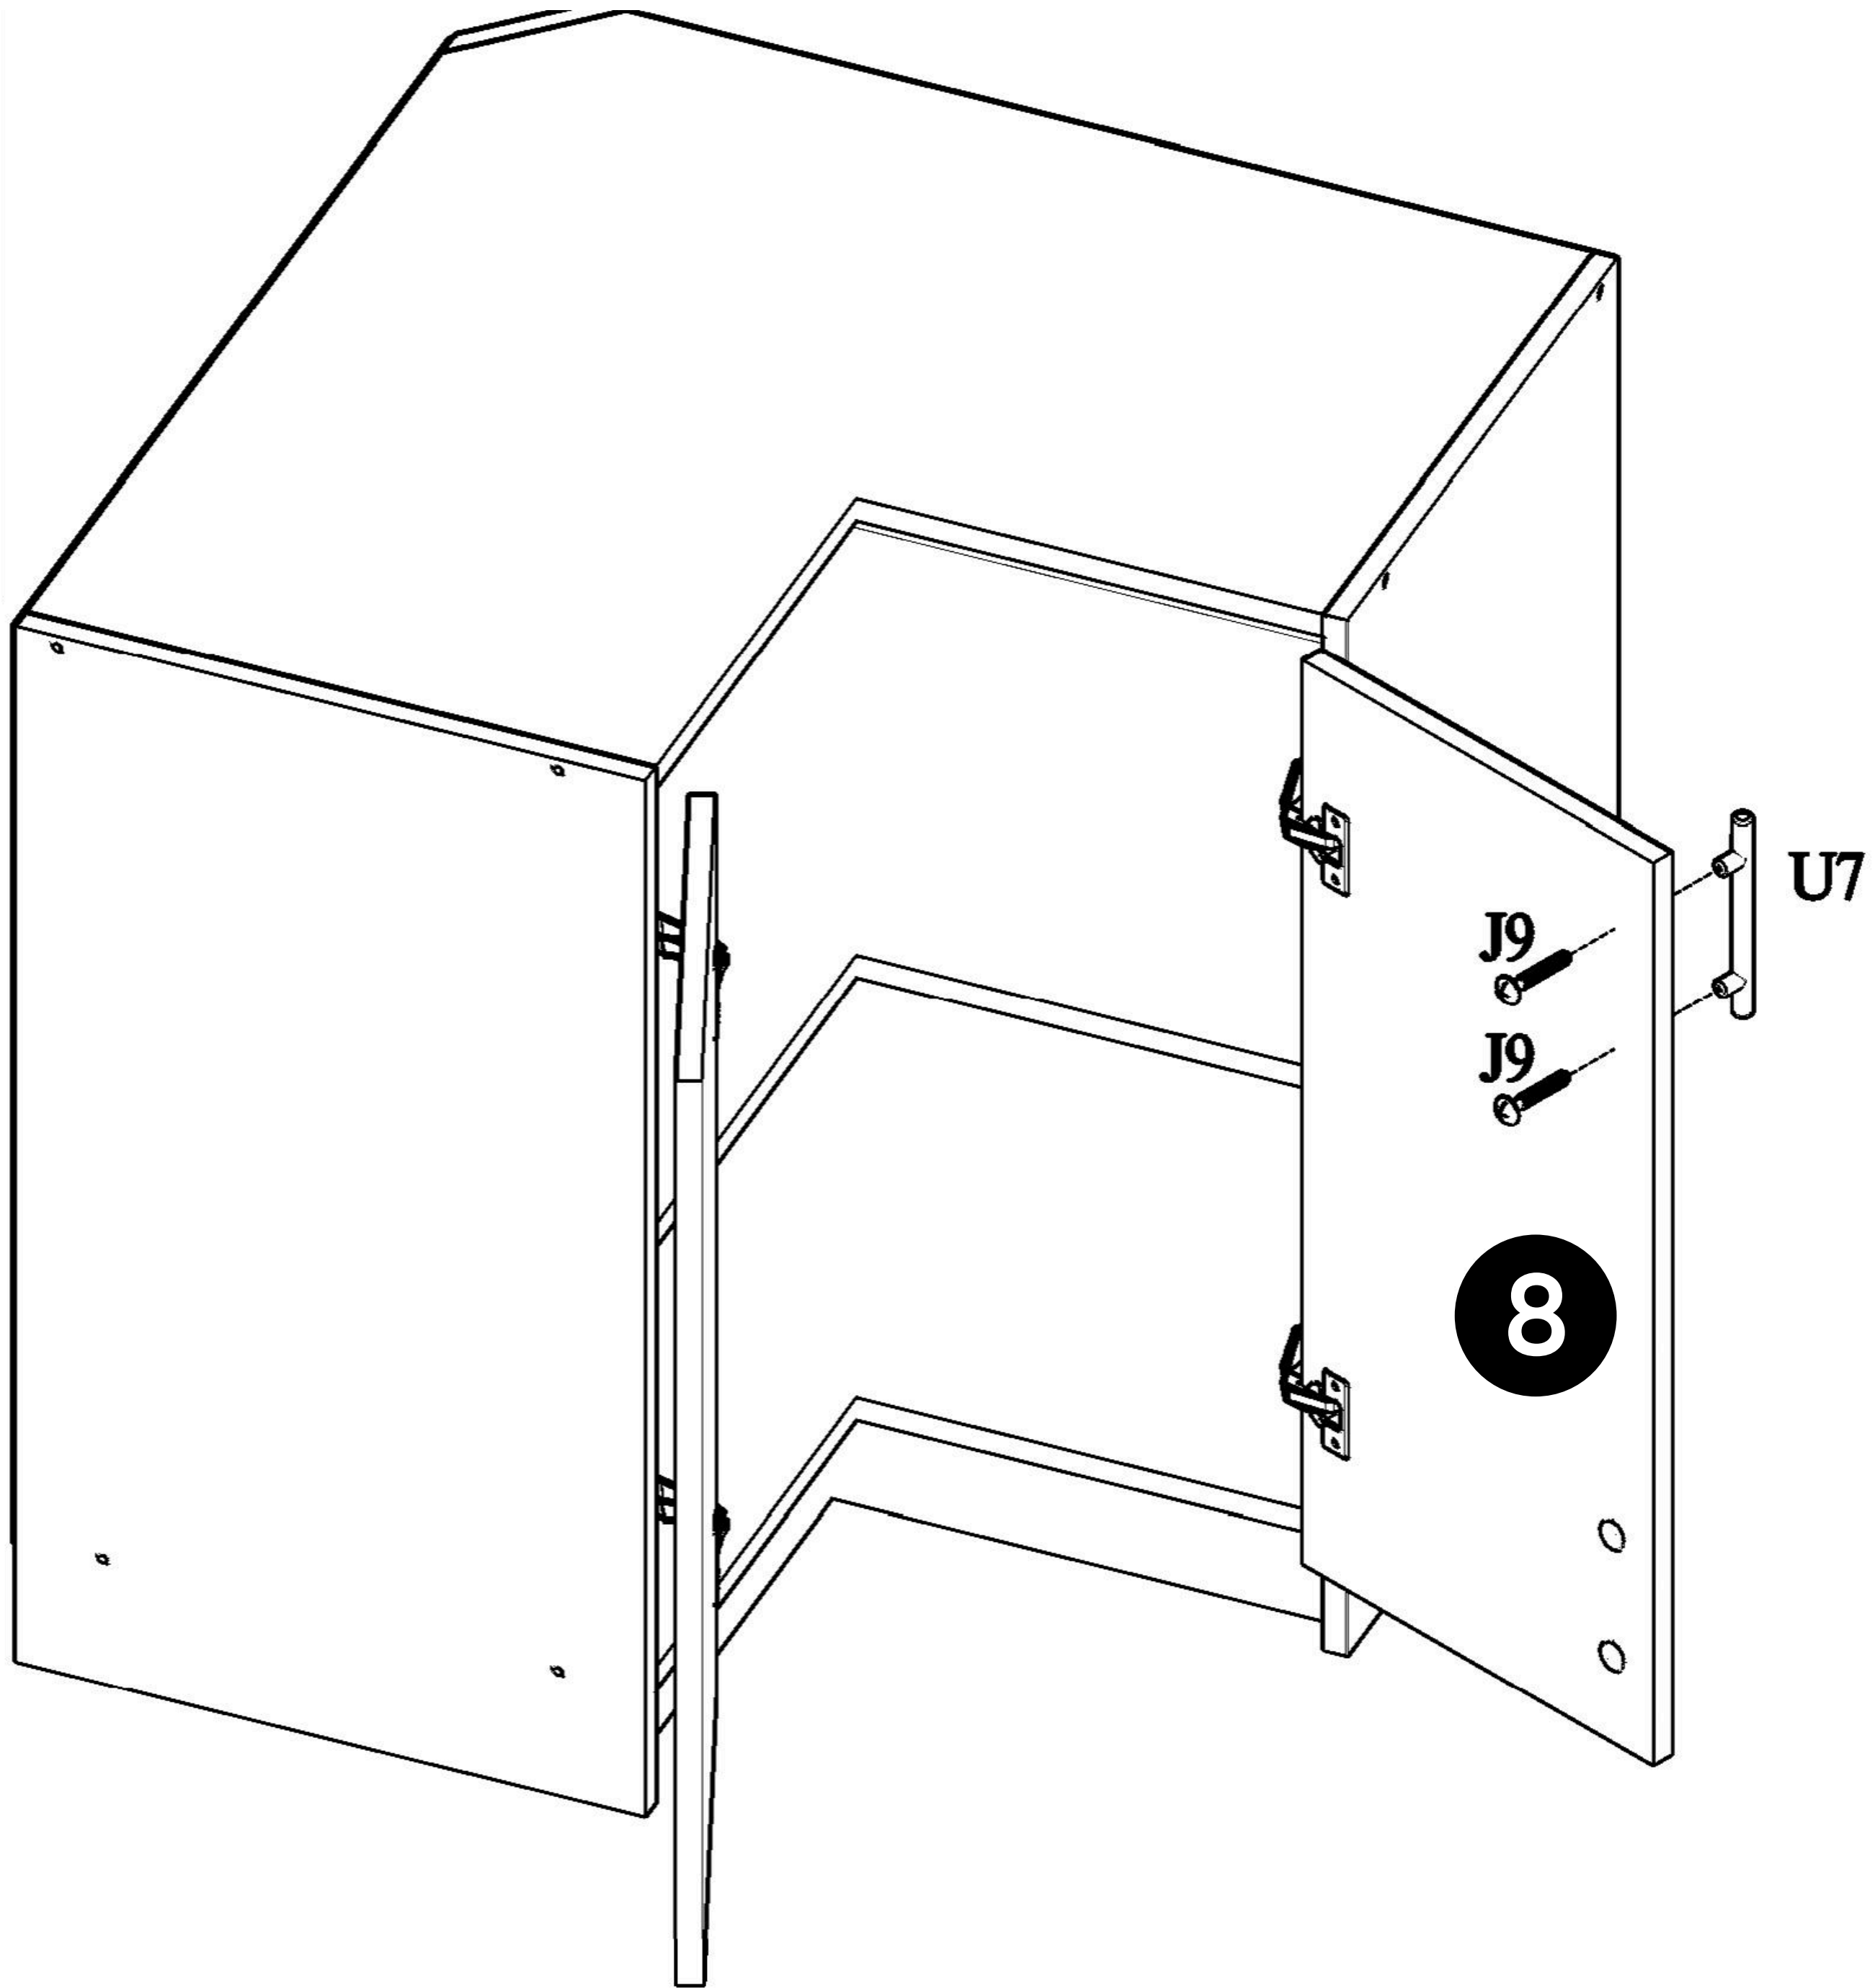


STEP - 10

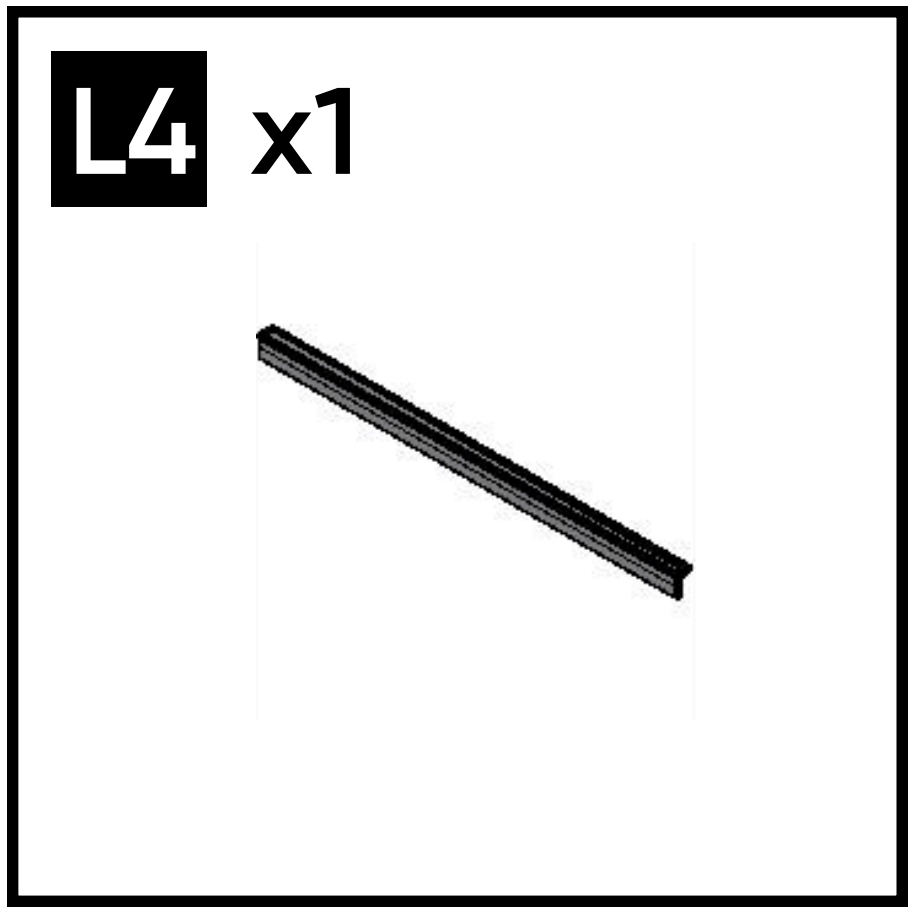

PAY ATTENTION:
WORKTOP IS OPTIONAL
(MIGHT NOT BE INCLUDED)

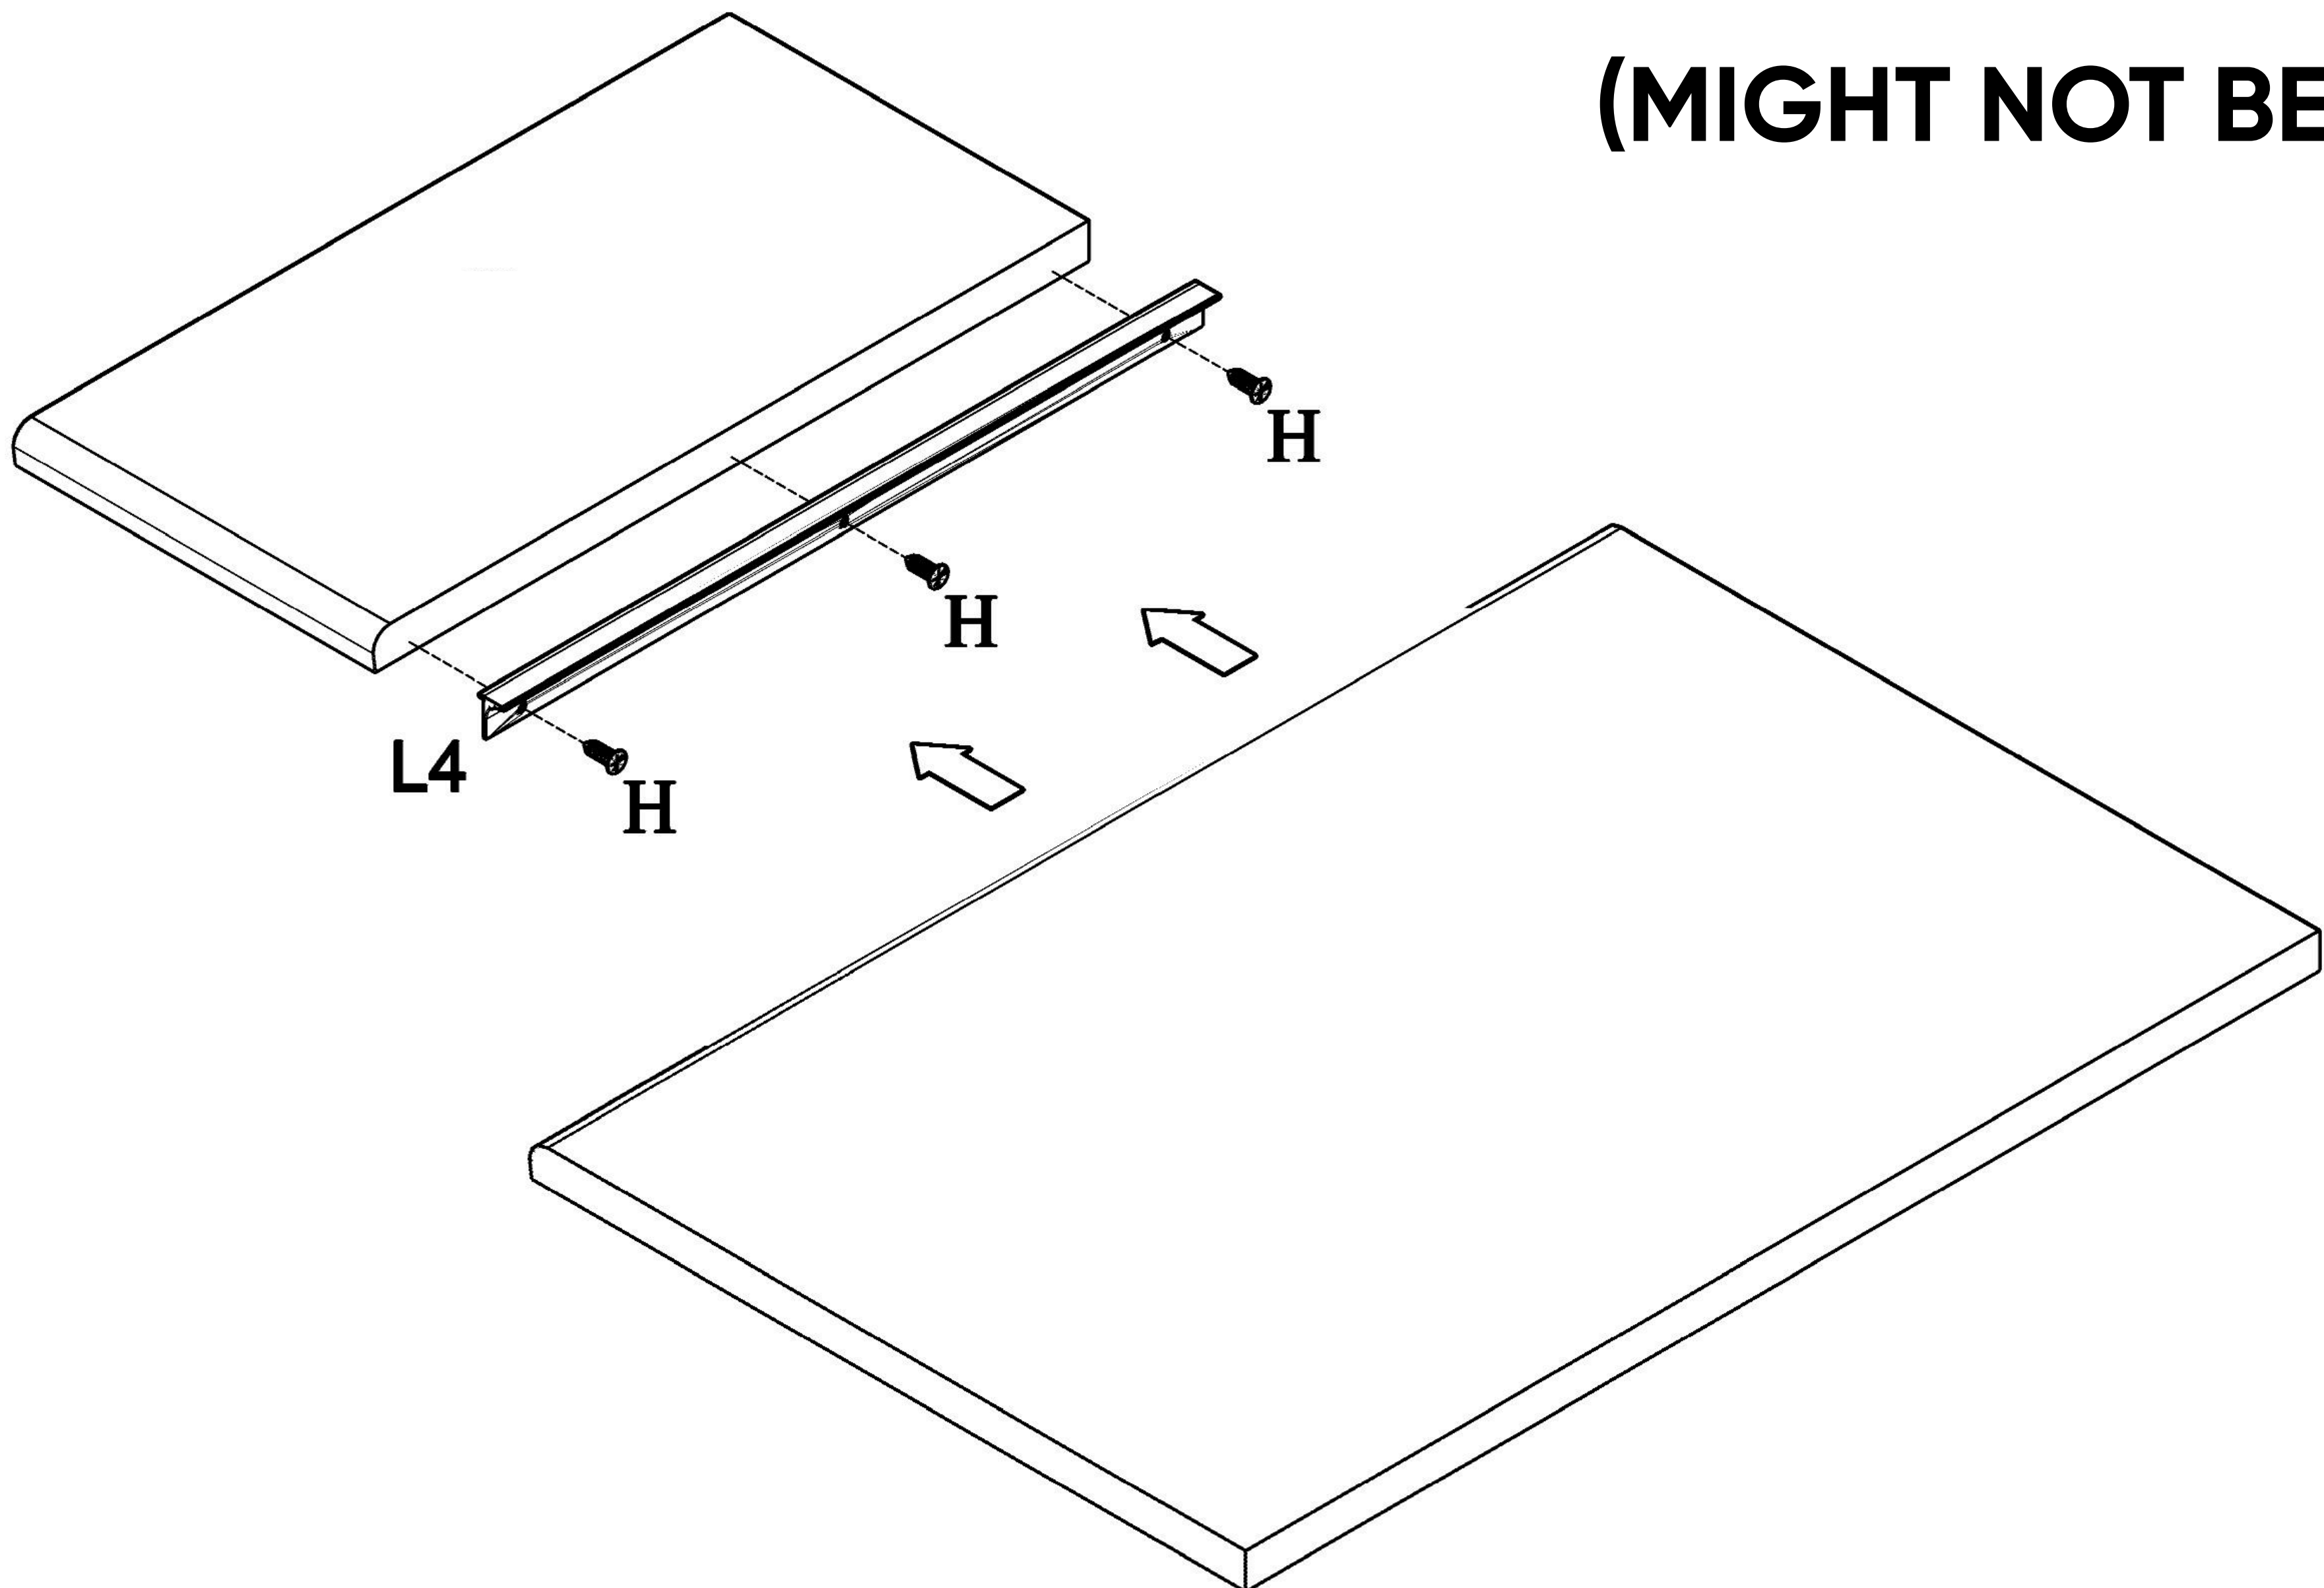

STEP - 11

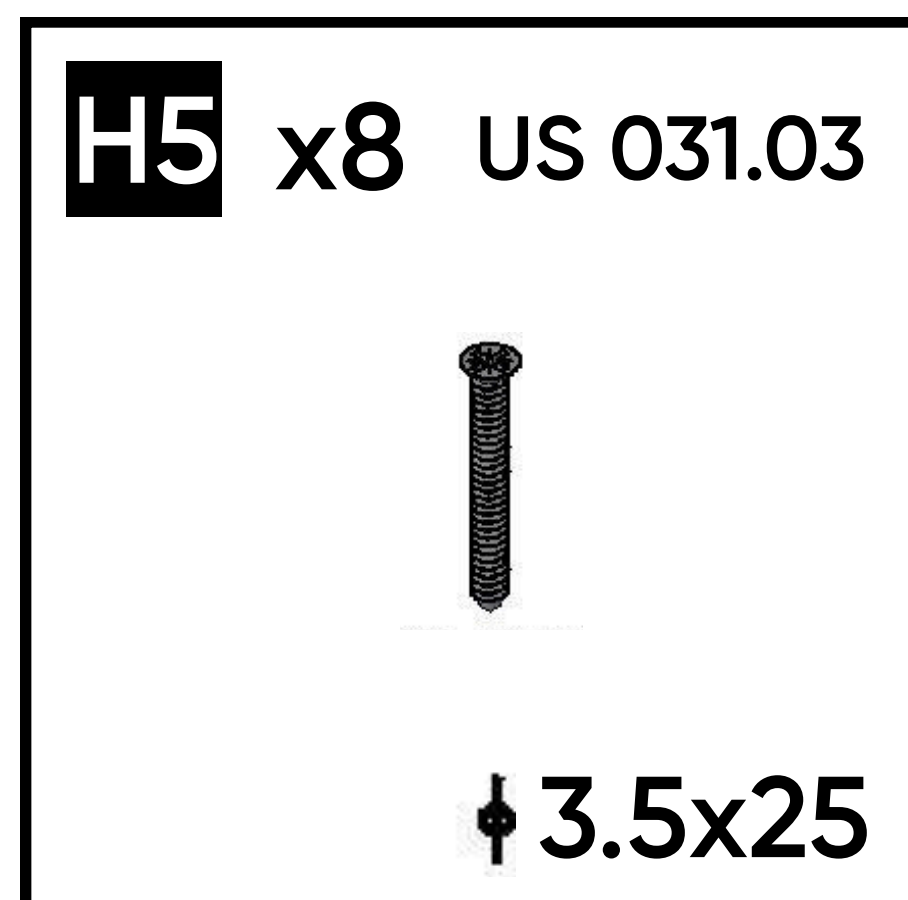

PAY ATTENTION:

WORKTOP IS OPTIONAL (MIGHT NOT BE INCLUDED)

