
LANCASTER 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

Thank you for purchasing the **LANCASTER 2 DRAWER BEDSIDE**. Please read the instructions carefully to ensure safe operation of the product.

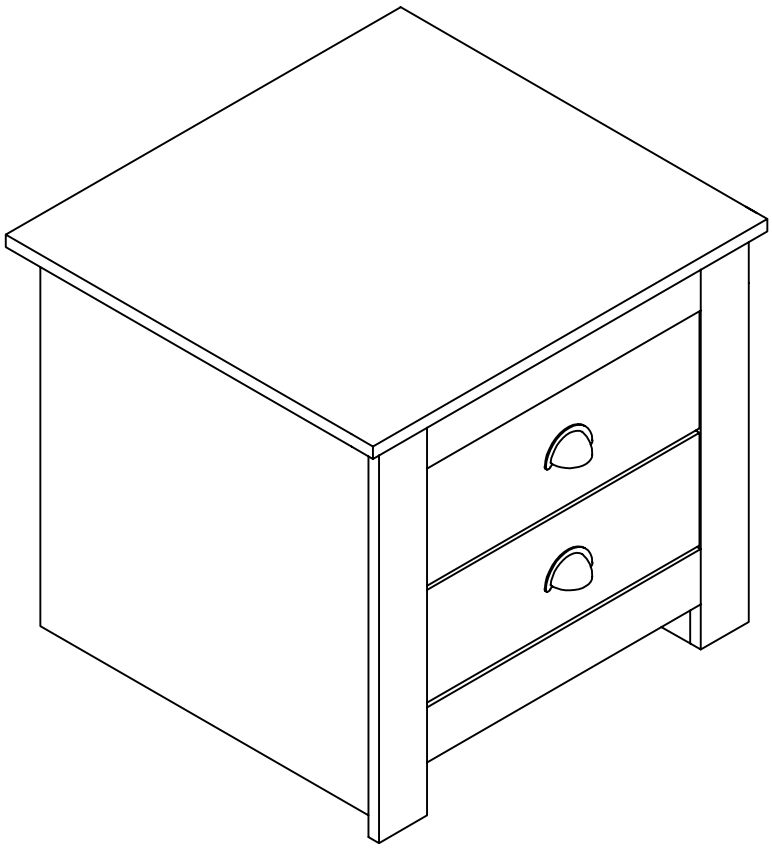


Size: (W)450 x (D)395 x (H)482mm
Colour : Bianca Oak / Light Grey / Slate Blue

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.


Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required

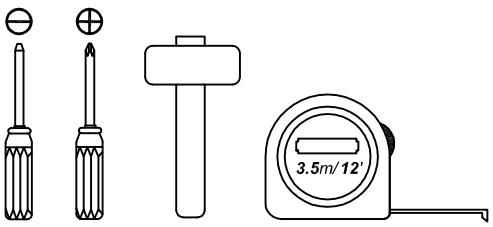


Person Required



x 2

Approximate Assembly Time



1 Hour

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

This product is intended for a maximum weight of **20kgs**. Do not exceed this weight.

- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Tools not included.

WARNINGS

- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.

CARE INFORMATION


- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.


Parts

CODE	PART NAME		QTY
P	Side Panel (L)	(15 x 370 x 467mm)	1
Q	Side Panel (R)	(15 x 370 x 467mm)	1
R	Top Panel	(15 x 395 x 450mm)	1
S	Bottom Panel	(15 x 80 x 319mm)	1
T	Back Bar Panel	(15 x 110 x 319mm)	1
U	Front Bar (L)	(15 x 50 x 467mm)	1
V	Front Bar (R)	(15 x 50 x 467mm)	1
W	Front Bar (Top)	(15 x 50 x 318mm)	1

CODE	PART NAME		QTY
X	Front Bar (Bottom)	(15 x 50 x 318mm)	1
Y	Drawer Front	(15 x 138 x 311mm)	2
Z	Drawer Side (L)	(15 x 96 x 350mm)	2
Z1	Drawer Side (R)	(15 x 96 x 350mm)	2
Z2	Drawer Back	(15 x 96 x 264mm)	2
Z3	Back Panel	(2.5 x 383 x 345mm)	1
Z4	Drawer Bottom	(2.5 x 273 x 344mm)	2

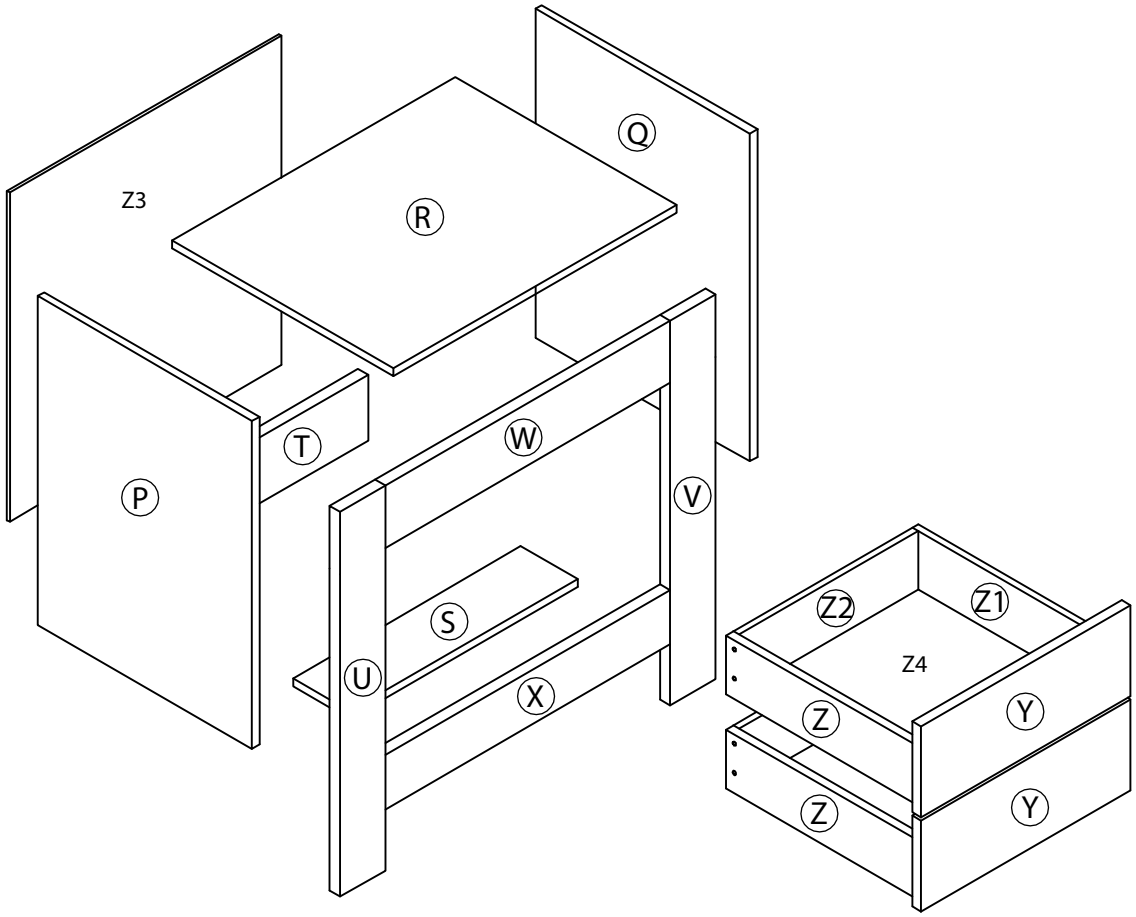

Fixings (to scale)

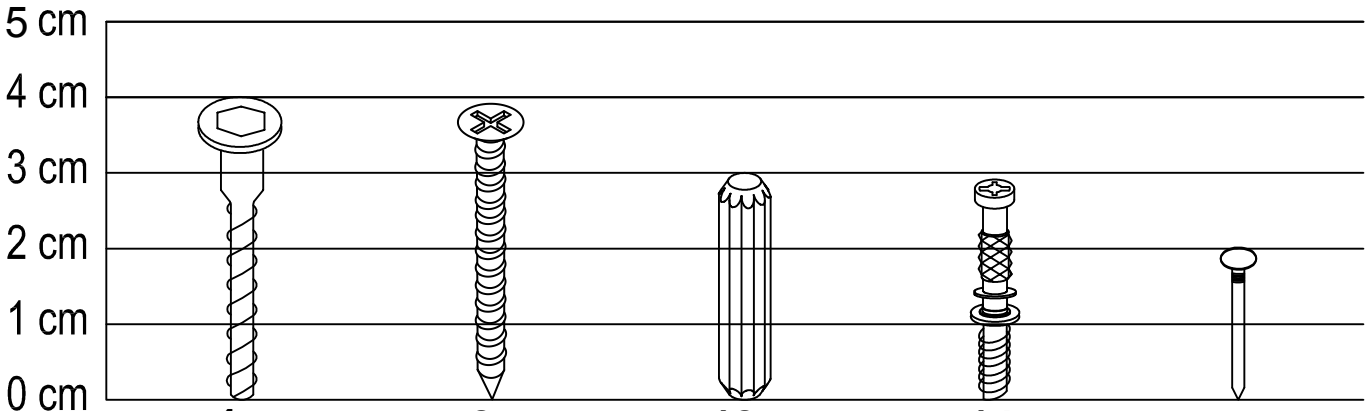


4x
M6.3 x 40mm
a
Unitar Screw

8x
D4 x 38mm
b
CSK Screw

18x
D8 x 30mm
c
Wood Dowel

14x
M5 x 29mm
d
Minifix Bolt

10x
19mm
e
Nail Pin

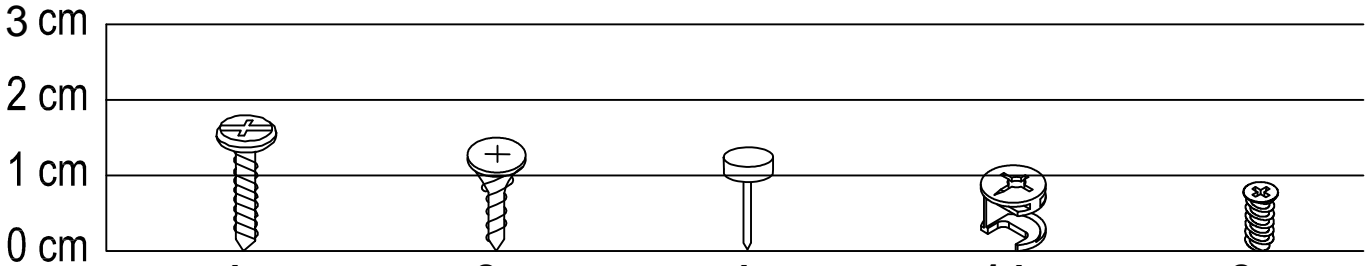

4x
M6 x 16mm
f
Tapping Screw


8x
M3.5 x 15mm
g
CSK Screw

4x
5 x 8 x 13.5mm
h
Nail Leg

14x
D15 x 12mm
i
Minifix Cam

8x
M6 x 8mm
j
Euro Screw

Fixings (not to scale)



2x
(350mm)
k
Drawer Slide




2x
(350mm)
l
Drawer Slide




2x
m
Handle



4x
(D-18mm)
n
Round Sticker




1x
M4
o
Allen Key

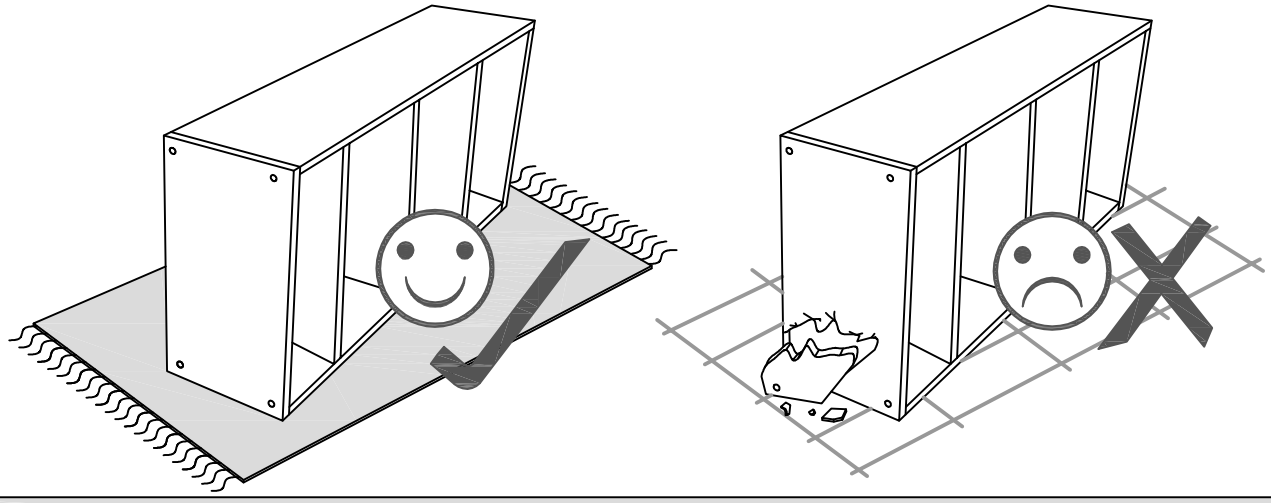


Layout Parts on Soft Surface

STEP 1

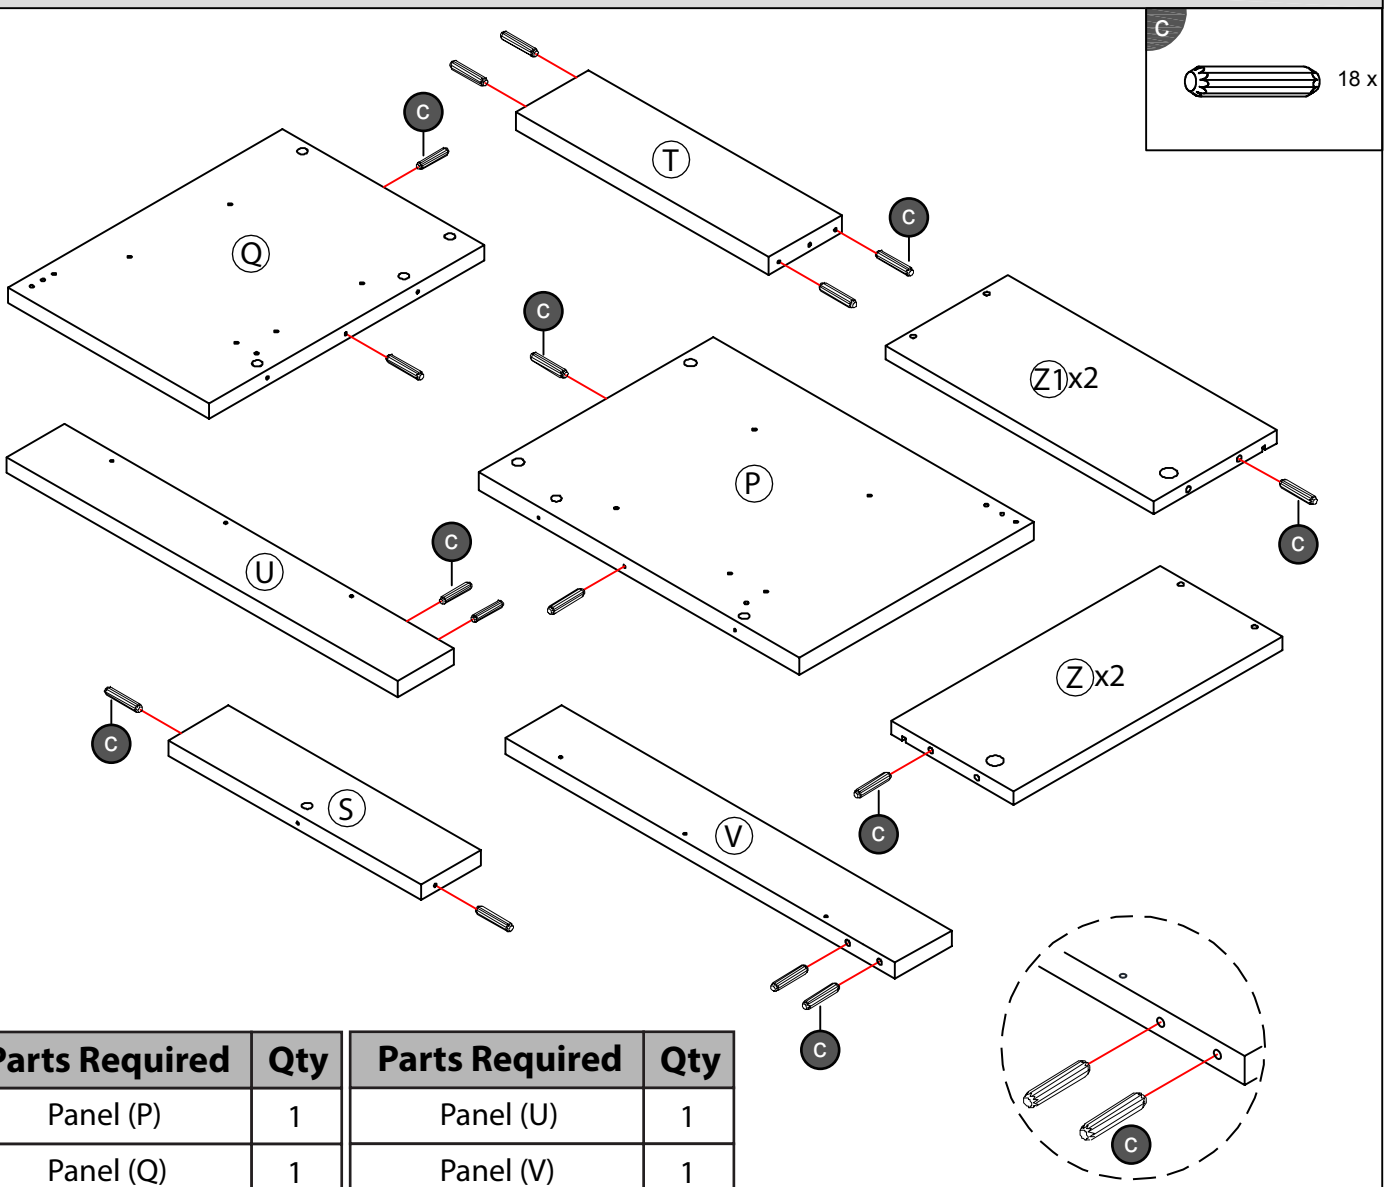

Parts Required	Qty	Parts Required	Qty
Panel (P)	1	Panel (U)	1
Panel (Q)	1	Panel (V)	1
Panel (S)	1	Panel (Z)	2
Panel (T)	1	Panel (Z1)	2


STEP 2

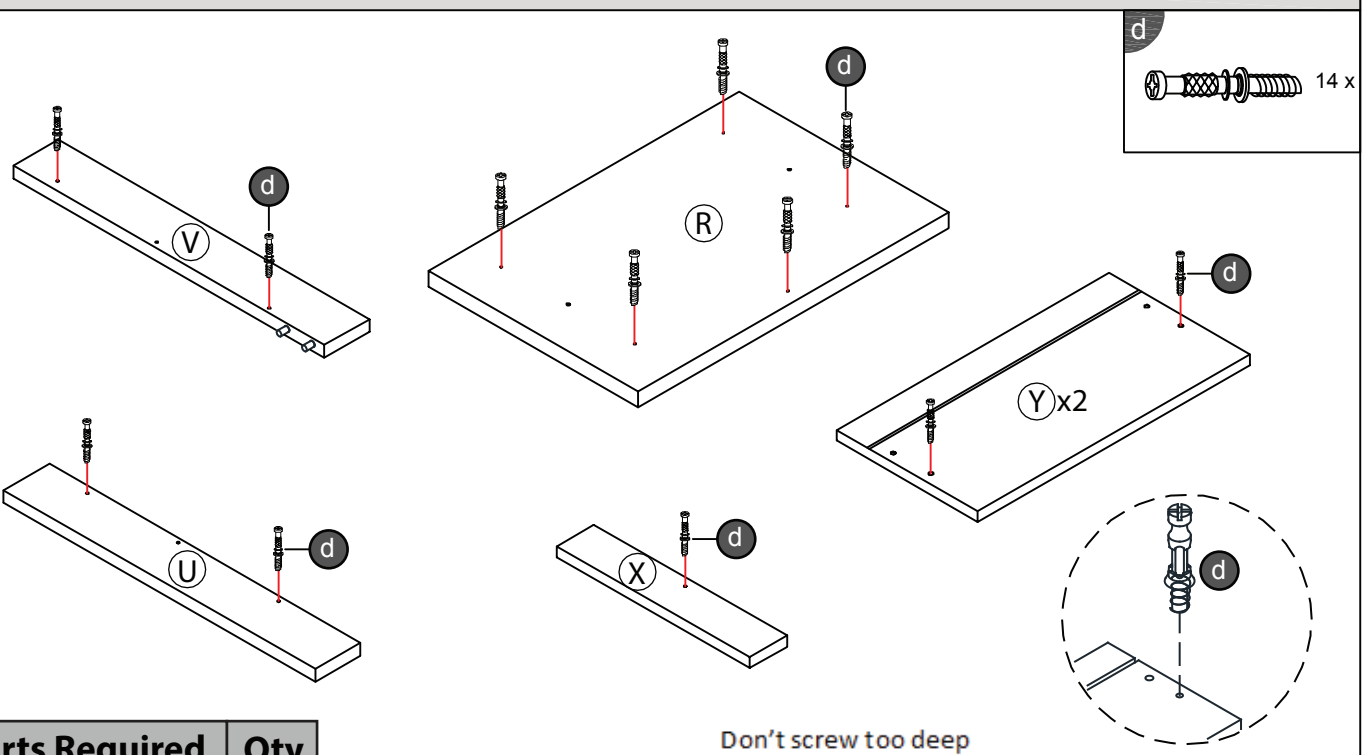


Parts Required	Qty
Panel (R)	1
Panel (U)	1
Panel (V)	1

Parts Required	Qty
Panel (X)	1
Panel (Y)	2

Don't screw too deep

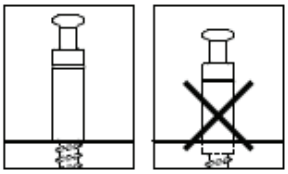



STEP 3

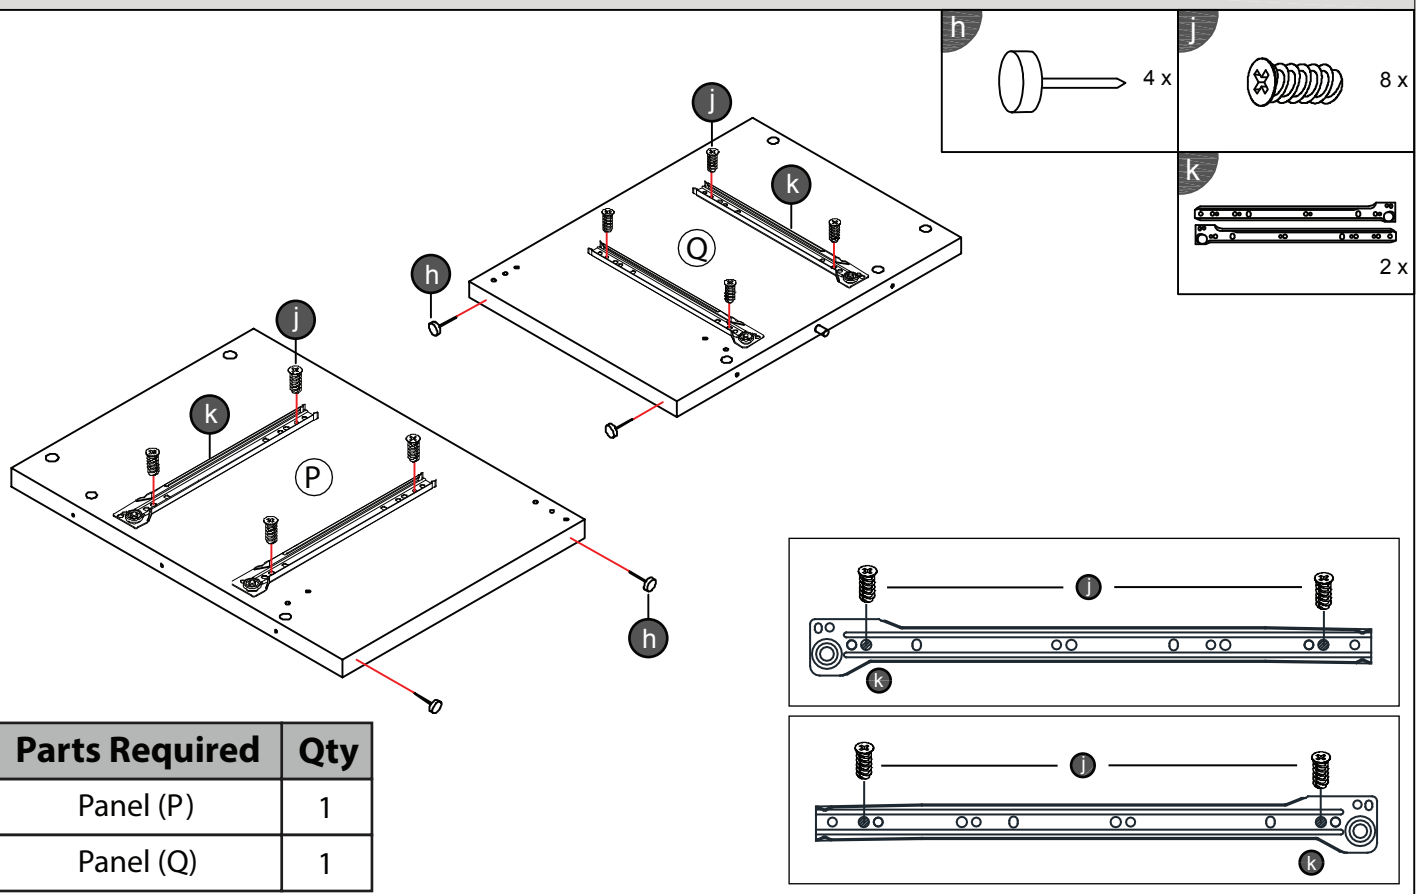

Parts Required	Qty
Panel (P)	1
Panel (Q)	1


STEP 4

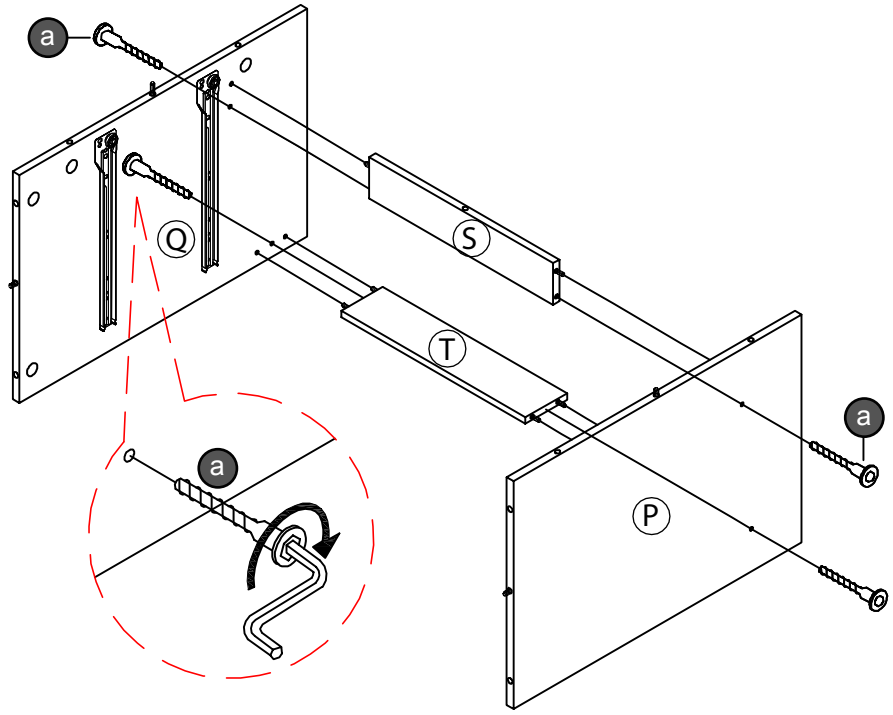


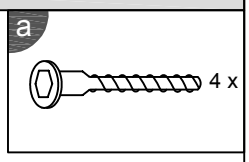



Parts Required	Qty	Parts Required	Qty
Panel (P)	1	Panel (S)	1
Panel (Q)	1	Panel (T)	1

STEP 5

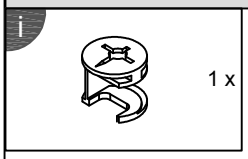

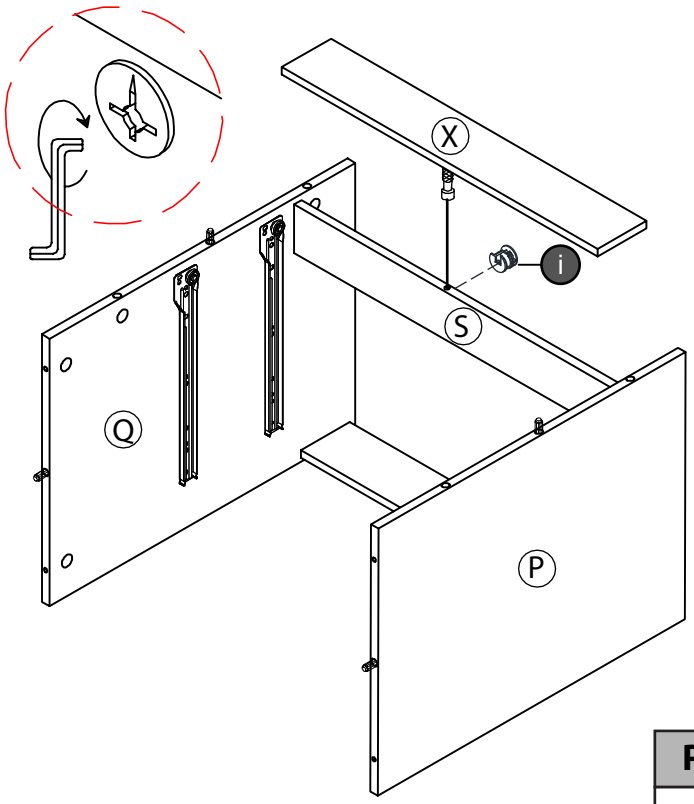


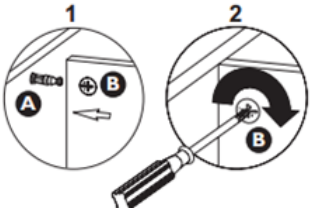

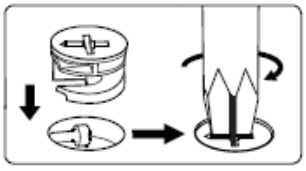


Parts Required	Qty
Panel (X)	1


STEP 6

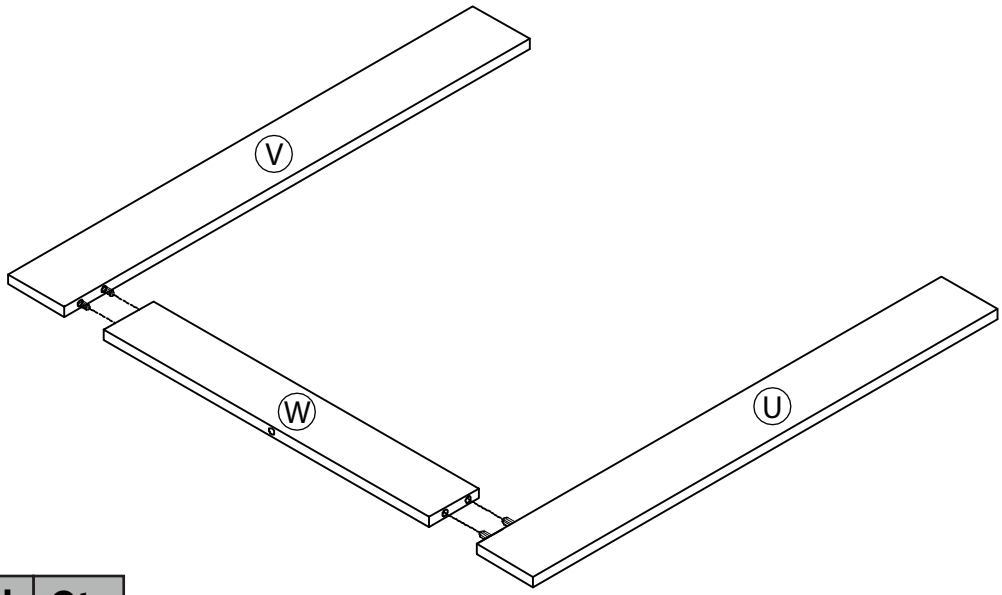



Parts Required	Qty
Panel (U)	1
Panel (V)	1
Panel (W)	1

STEP 7

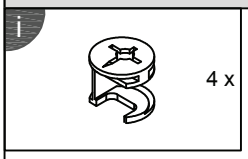

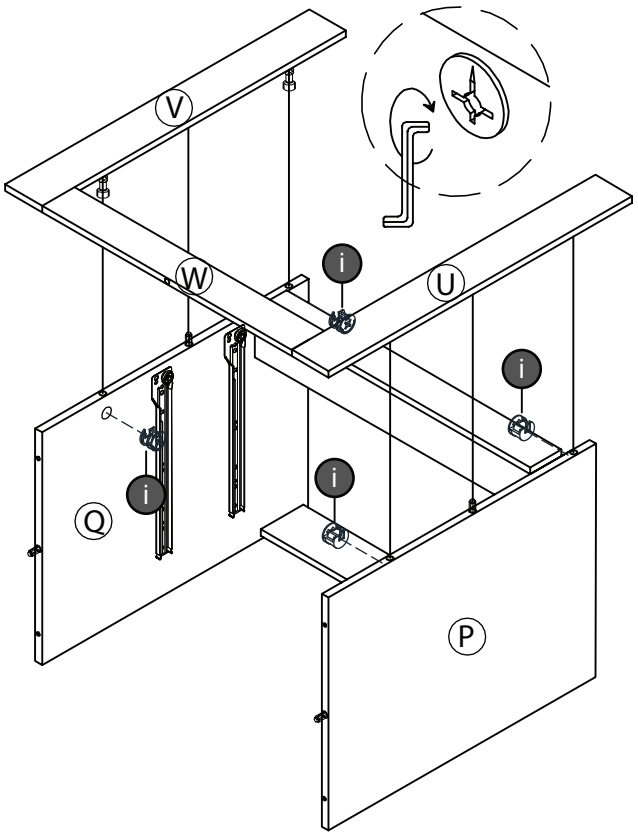

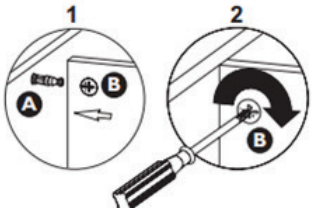


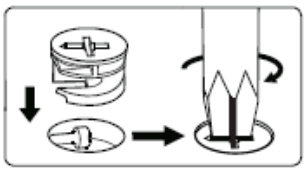



STEP 8

i 5 x

n 2 x

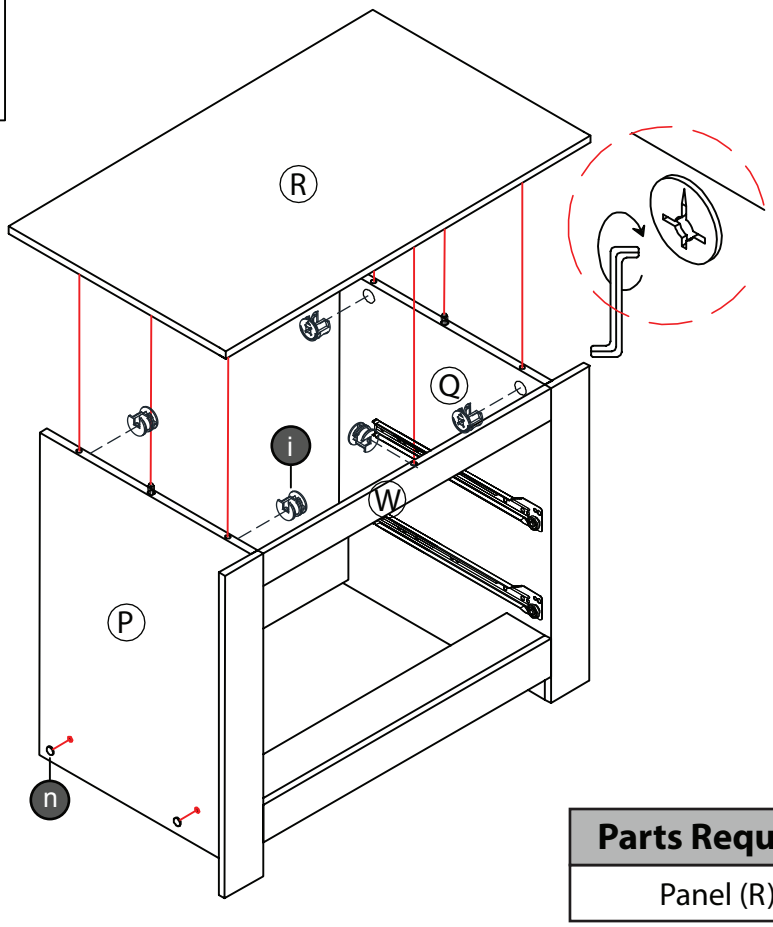

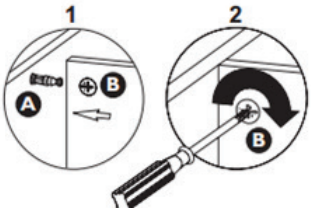

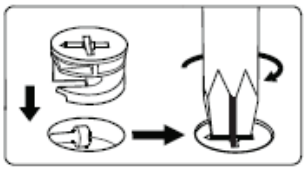



Parts Required	Qty
Panel (R)	1


STEP 9


e 10 x

n 2 x

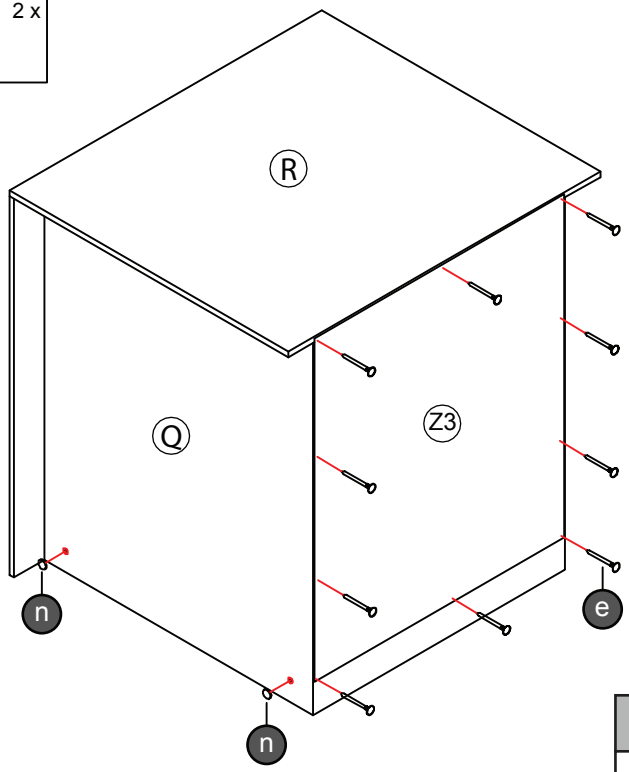

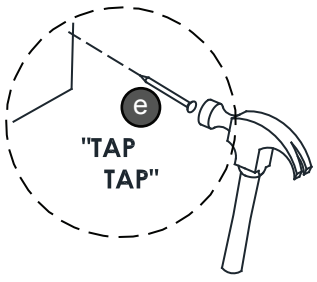

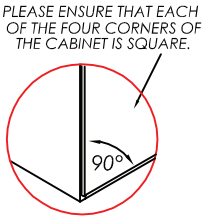

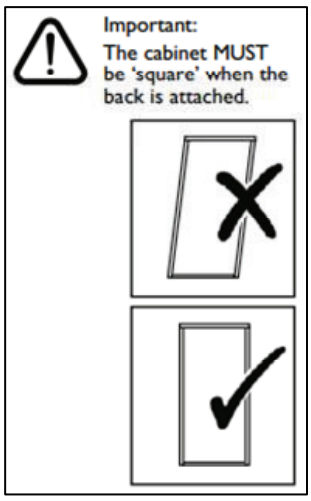


Parts Required	Qty
Z3	1


STEP 10

i



4 x

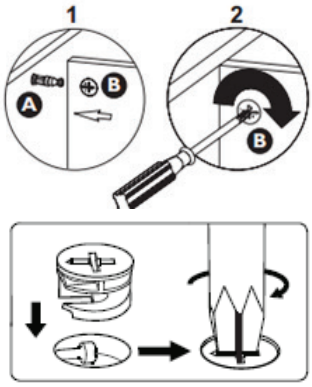

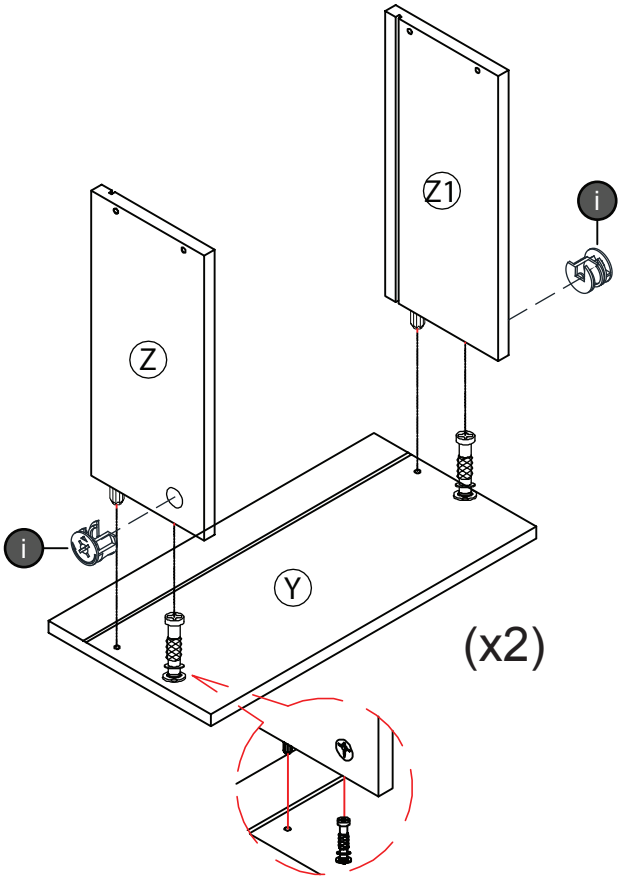


Parts Required	Qty
Panel (Y)	2
Panel (Z)	2
Panel (Z1)	2

STEP 11

b





8 x

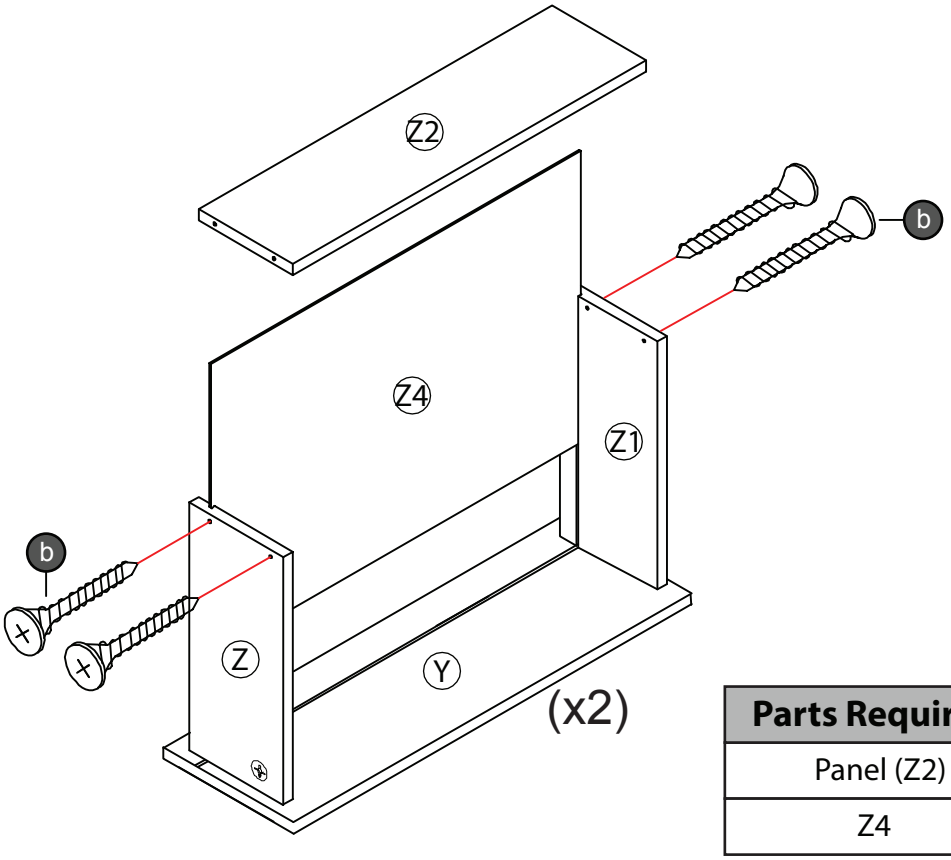

Parts Required	Qty
Panel (Z2)	2
Z4	2


STEP 12

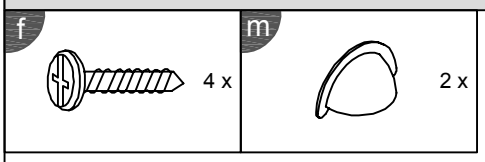


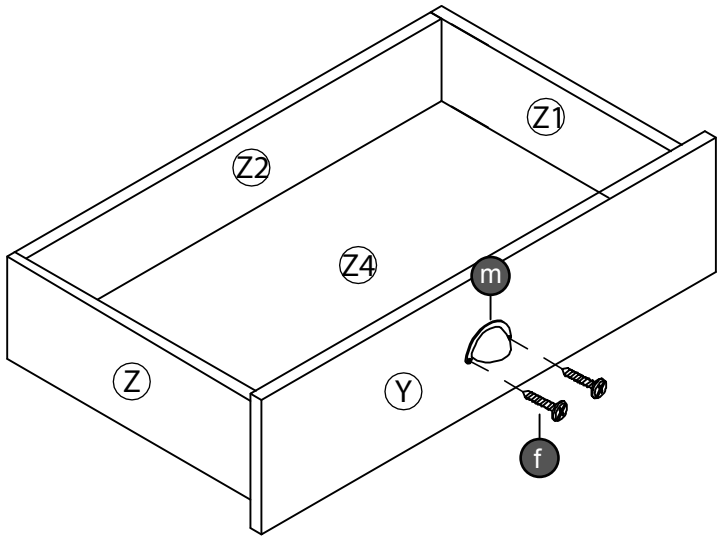


(x2)


STEP 13

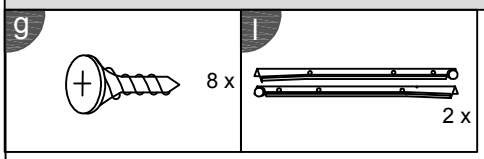


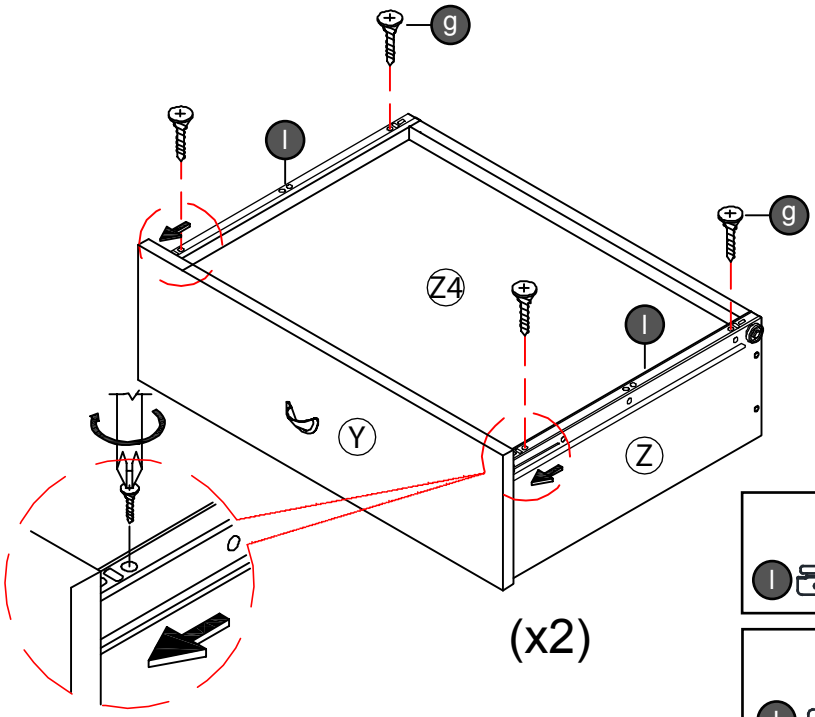


(x2)

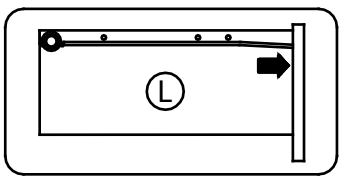

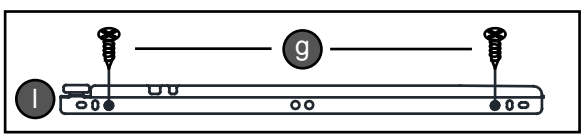

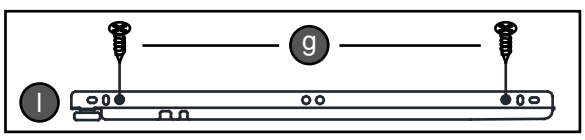


STEP 14

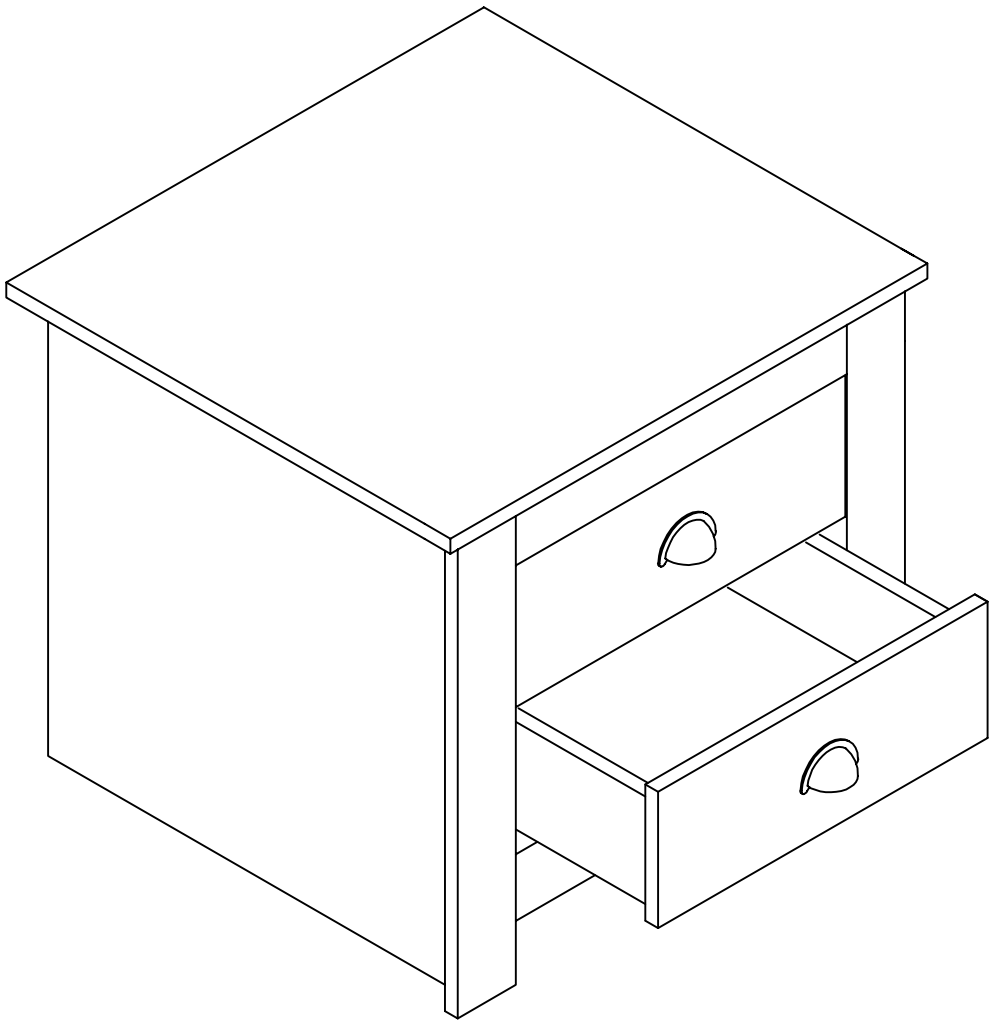

Complete Assembly


Your **LANCASTER 2 DRAWER BEDSIDE** is now completely assembled

Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.

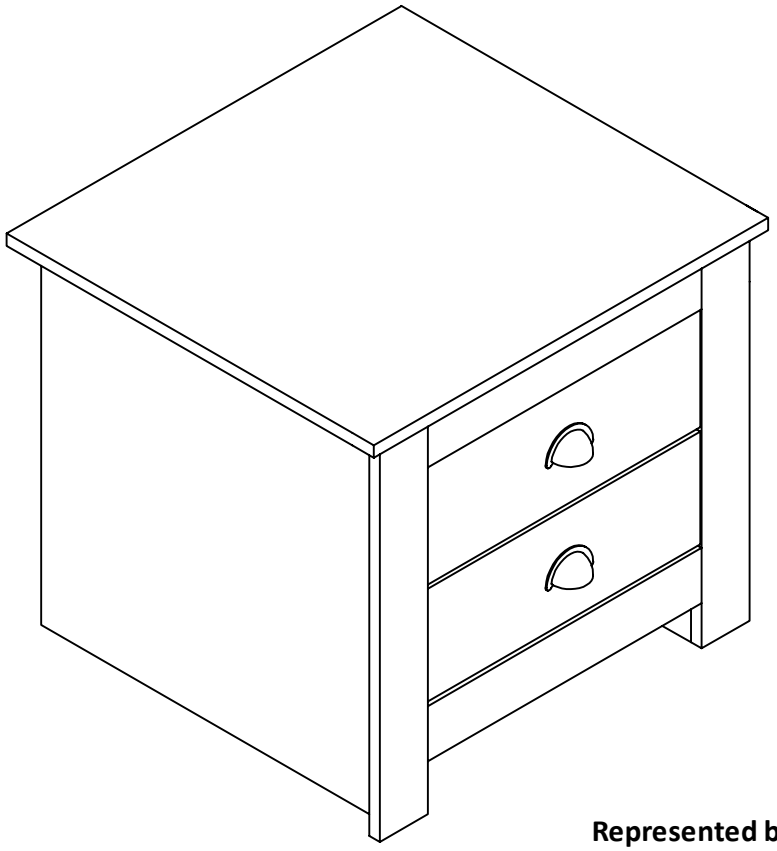

Represented by:
Authorised Rep Compliance Ltd
71 Lower Baggot Street
Dublin
D02 P593
Ireland
www.arccompliance.com

Keep instructions for future reference

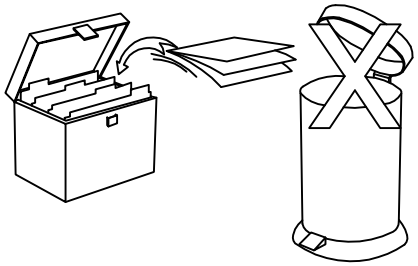

Supplied By
GFW The Furniture Warehouse
Waterside Distribution Centre
Waterside Business Park
Johnson Road
Lancashire
BB3 3RT
www.gfwlimited.co.uk