



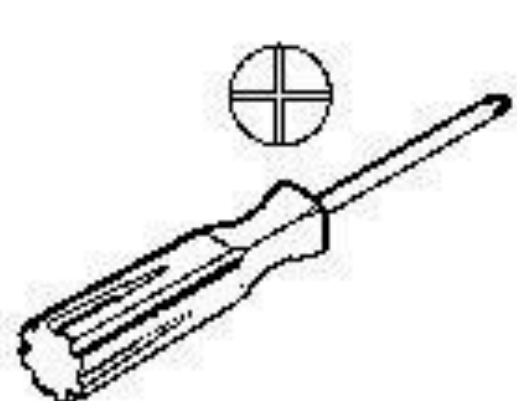


ASSEMBLY INSTRUCTIONS

KITCHEN BASE SINK UNIT 800MM


MODEL S800

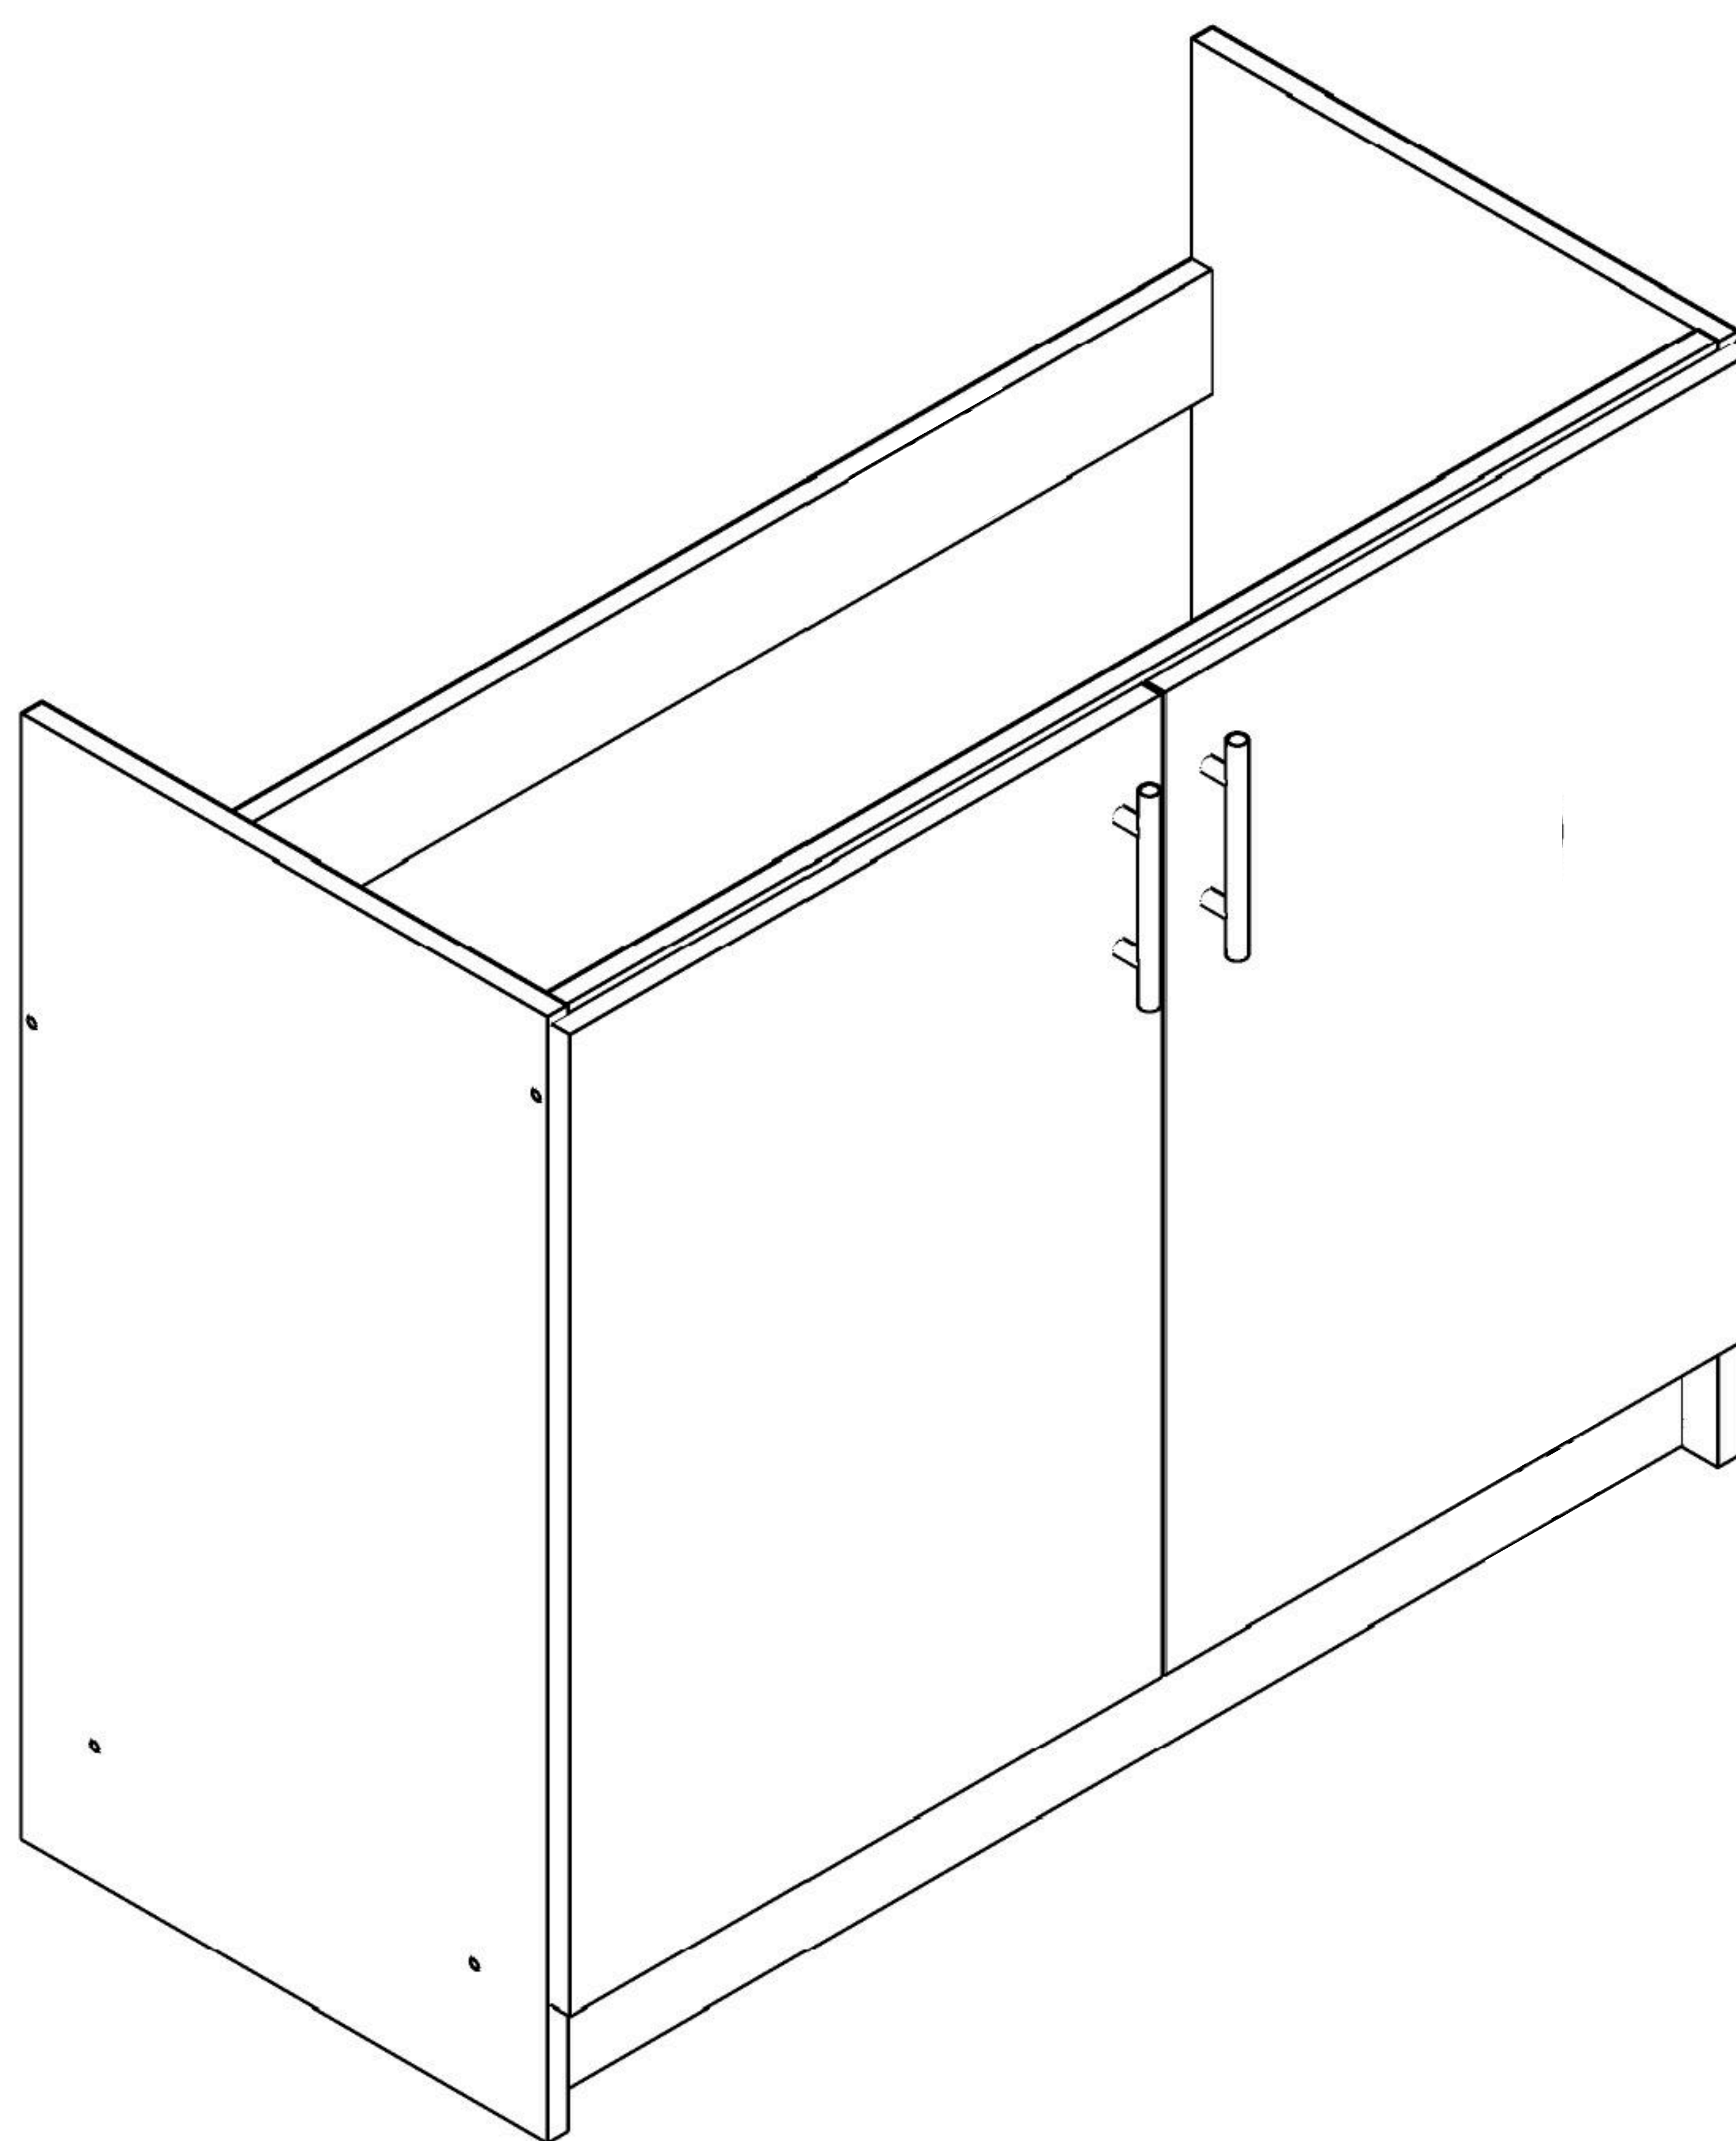


Cross-head
screwdriver

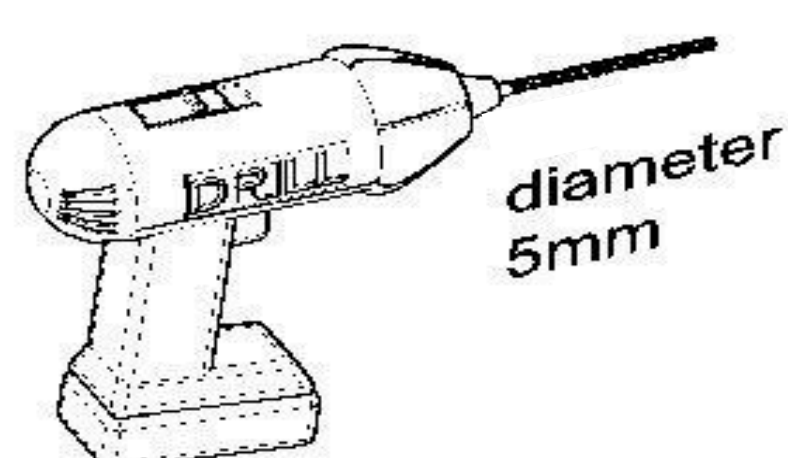

Electric
drill

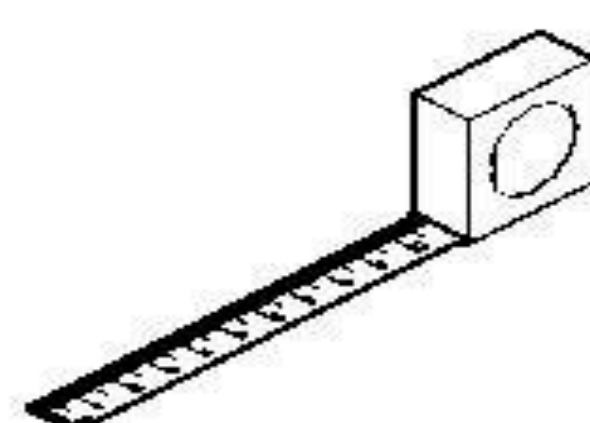

Rule

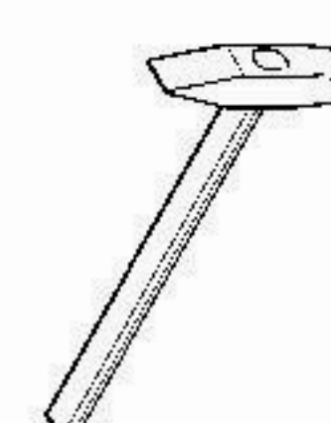

Hammer









**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346






COMPONENTS - PANELS

Please check you have all the panels listed below

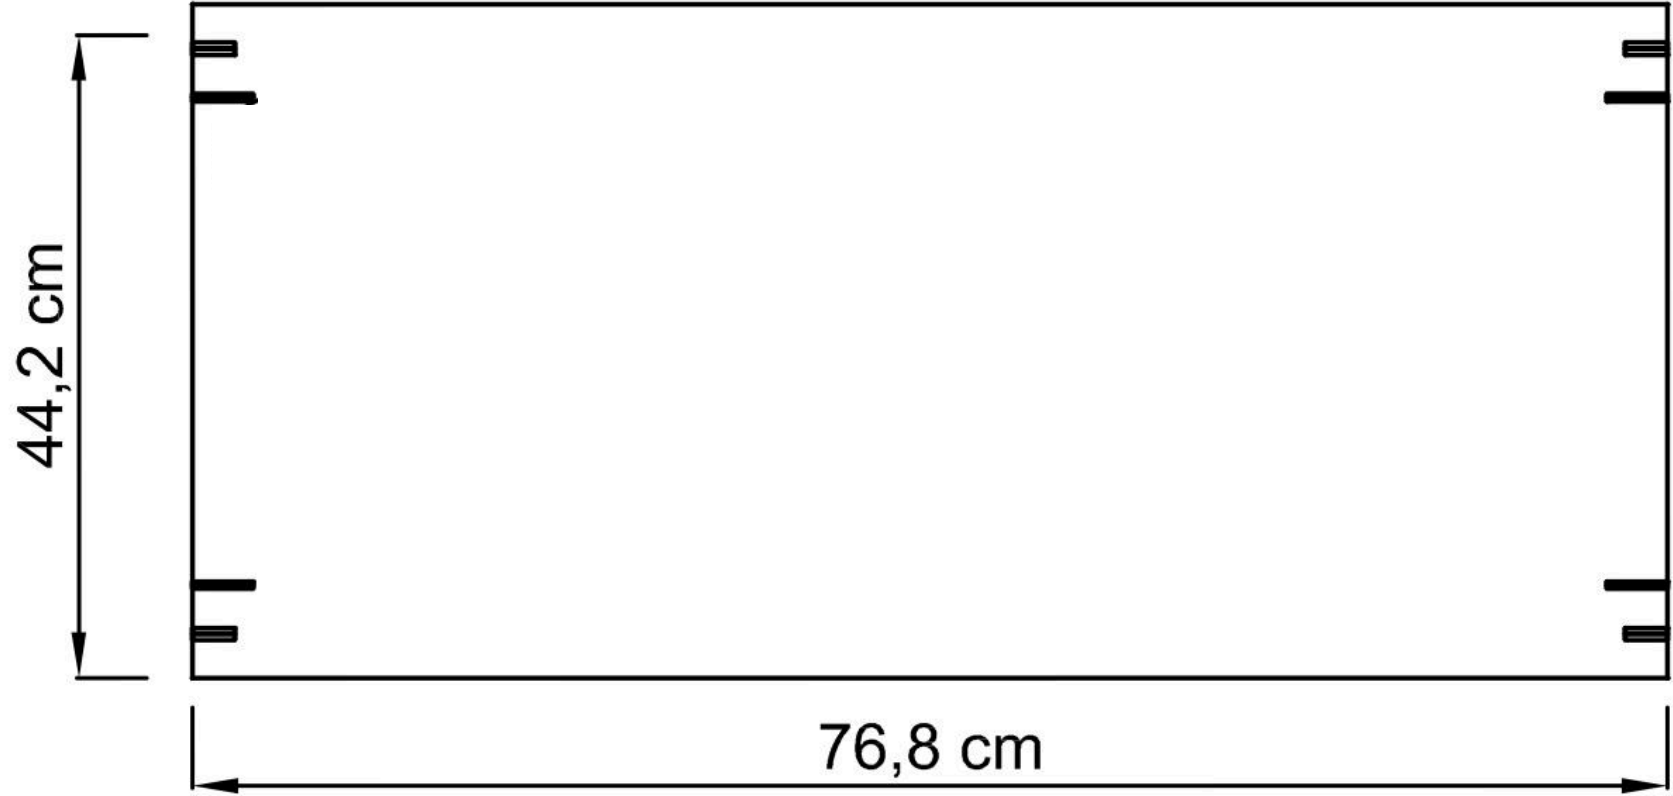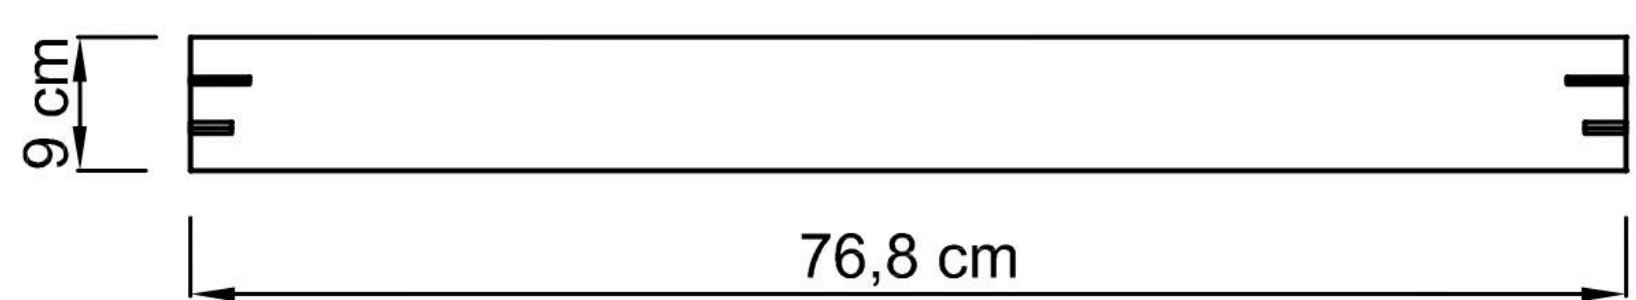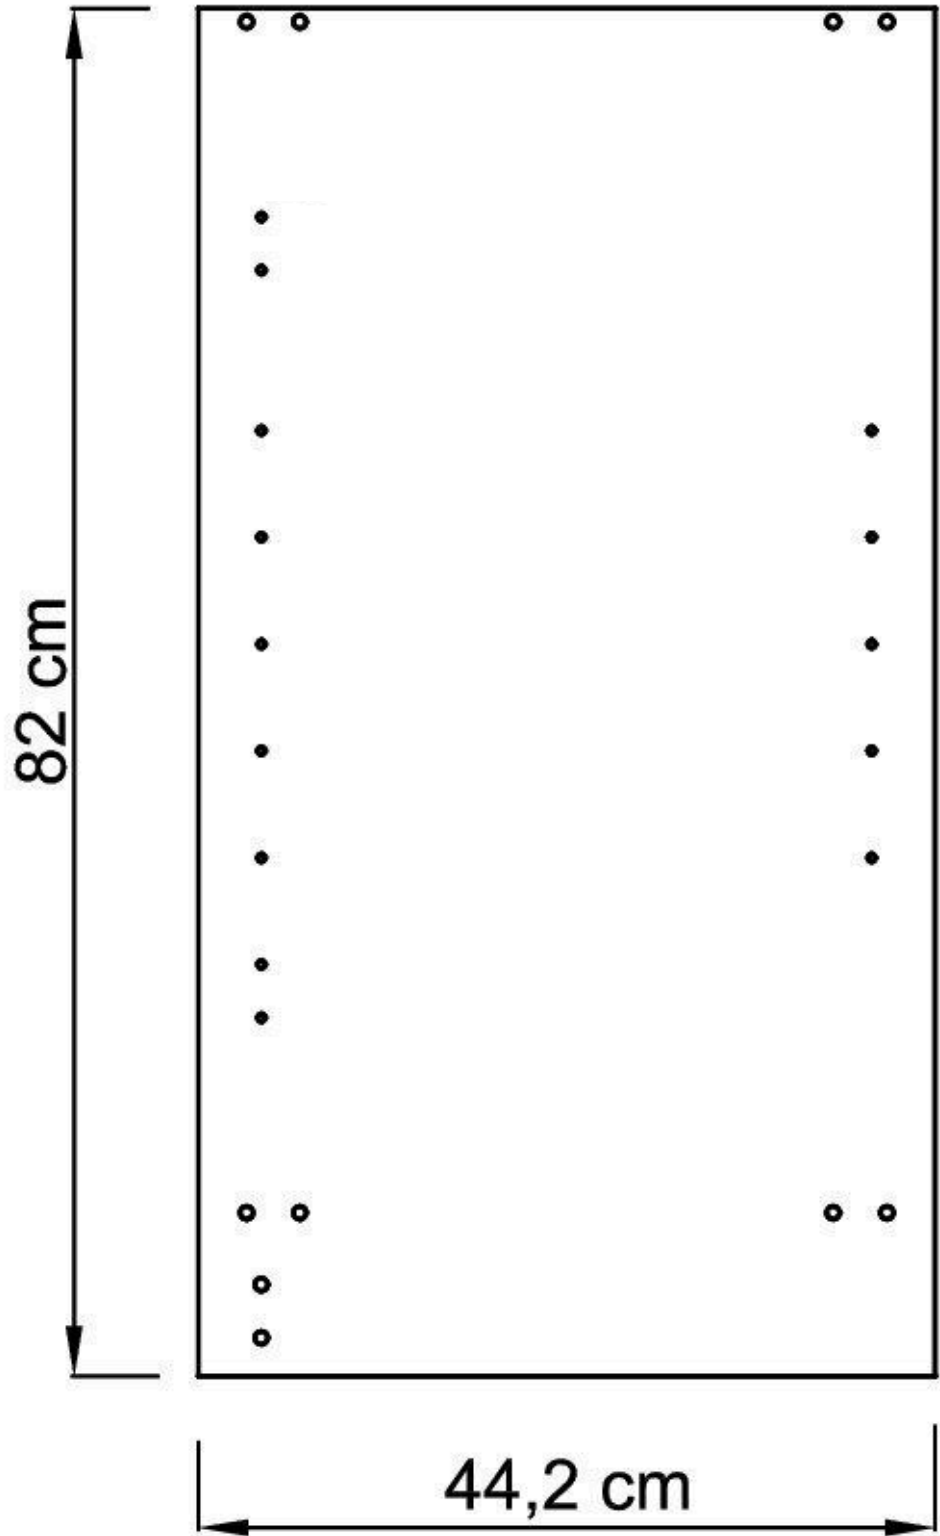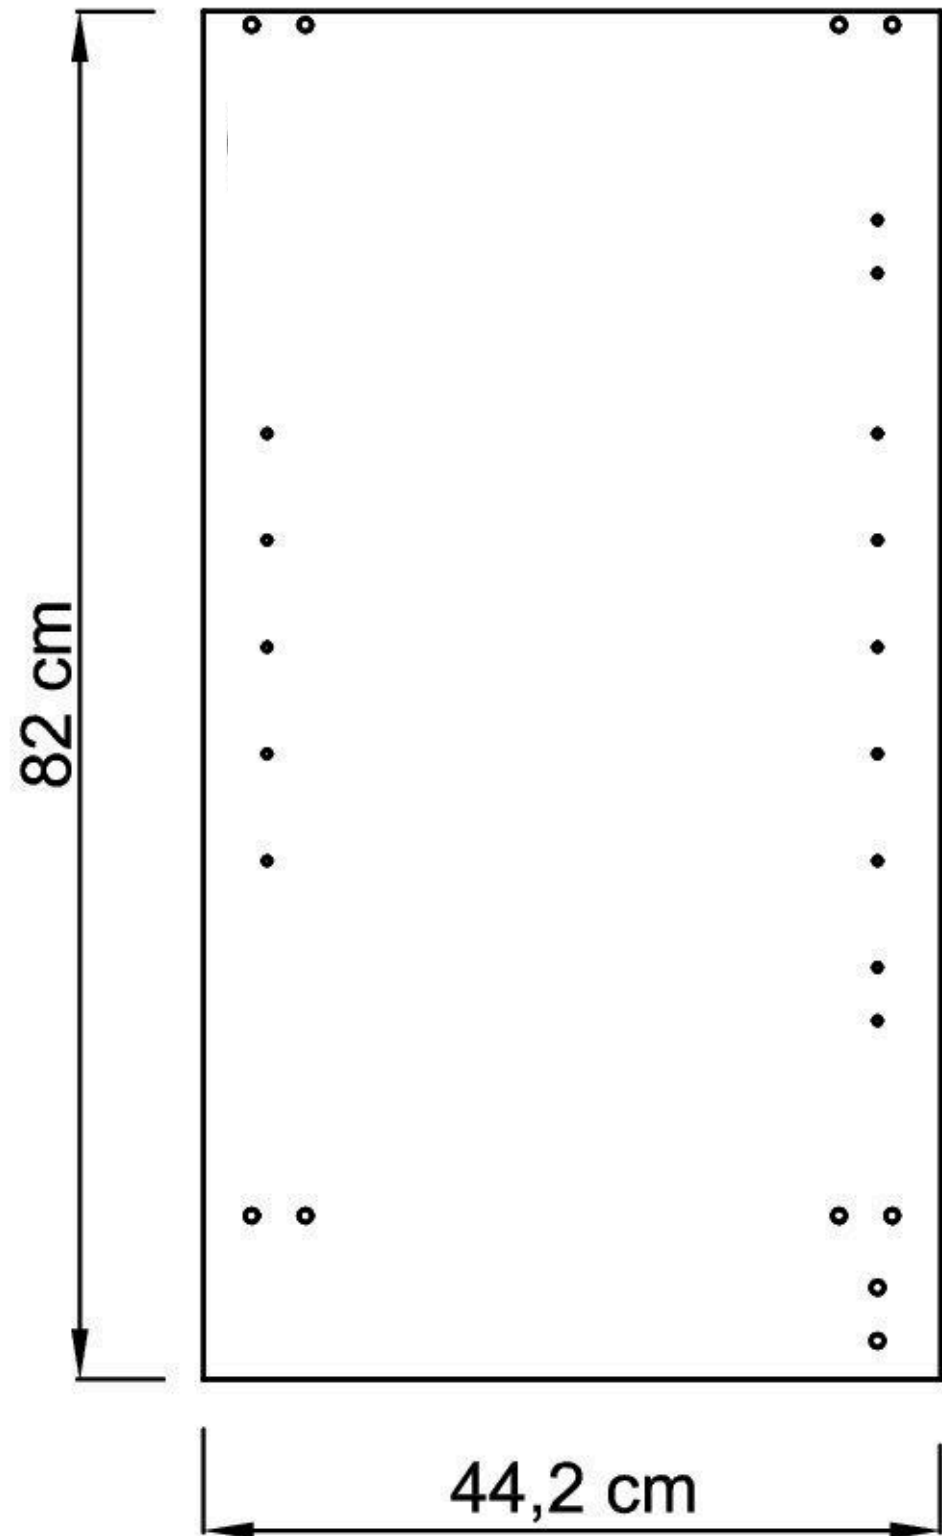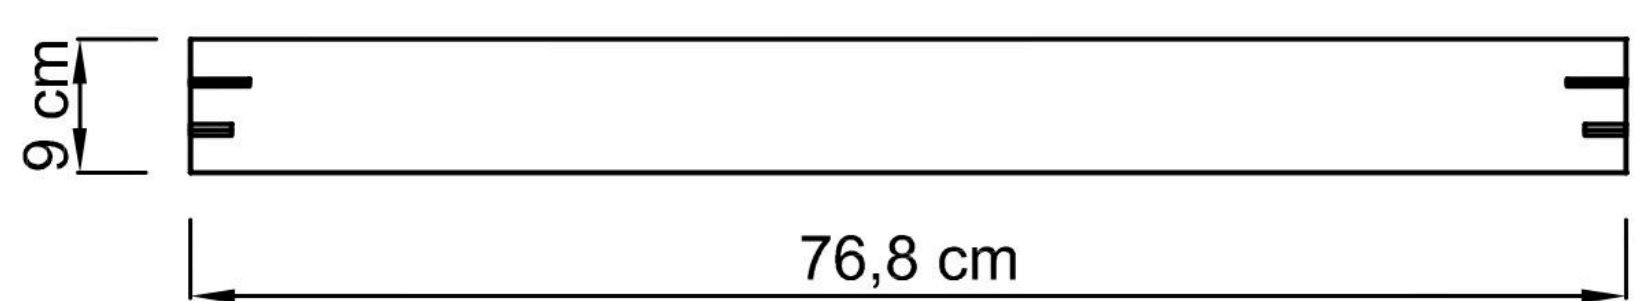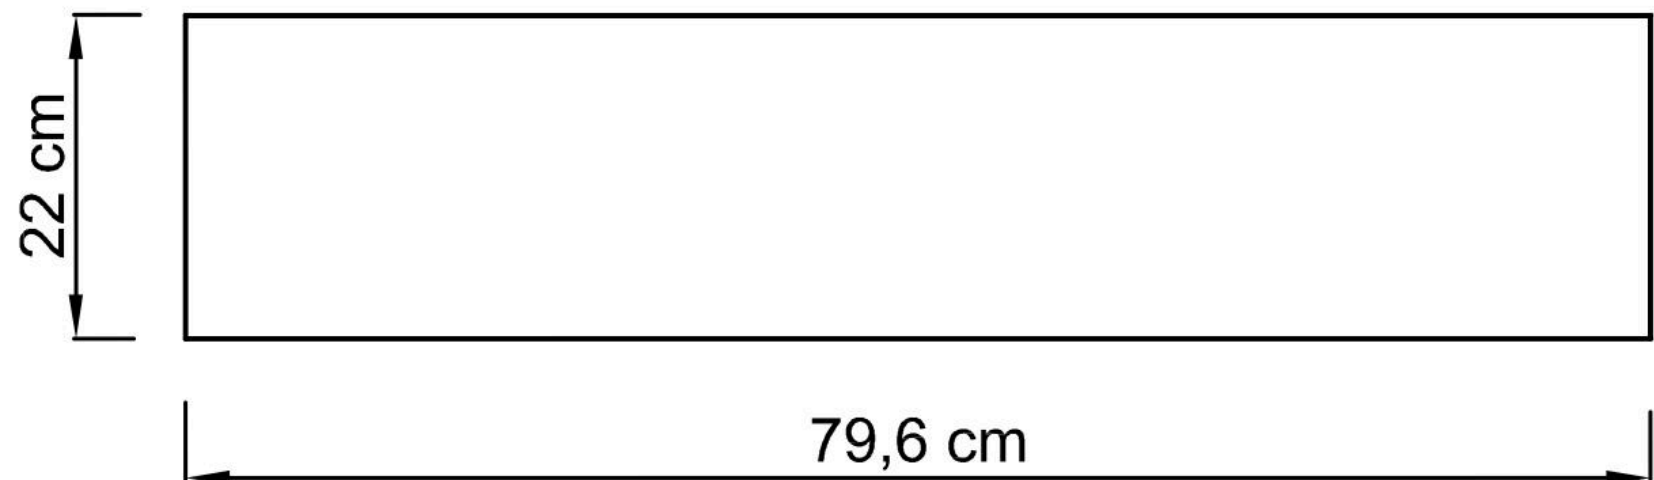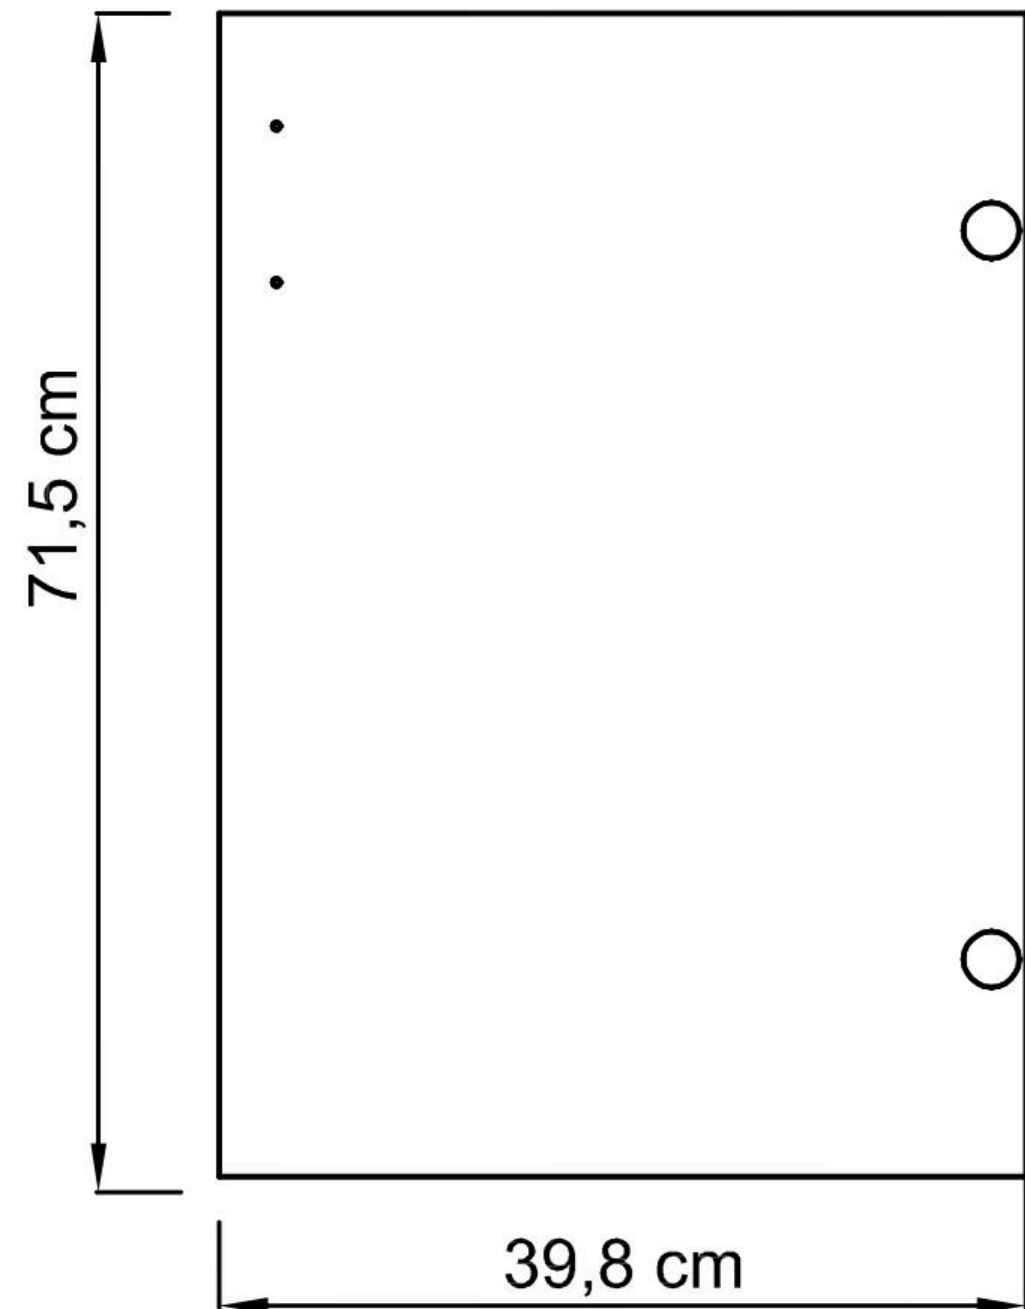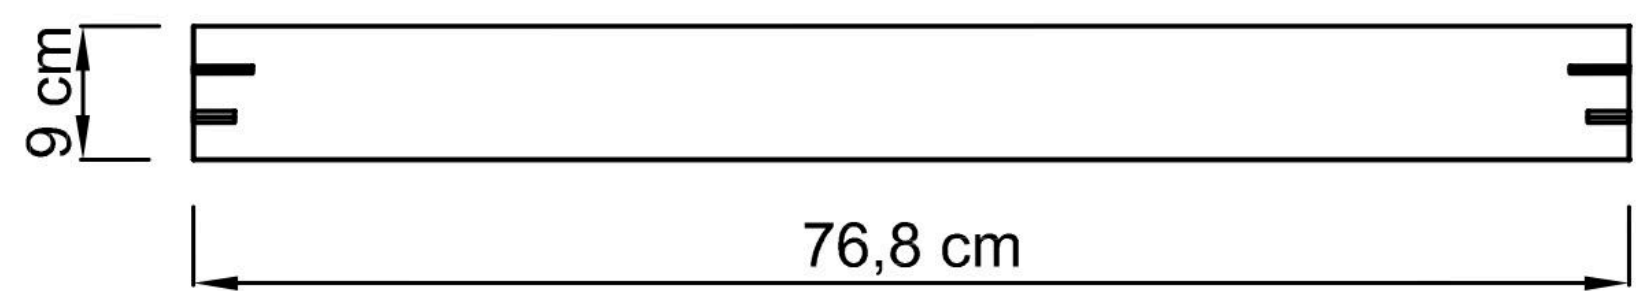
1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
7 x2 Front (separate package) 	8 x1 	

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

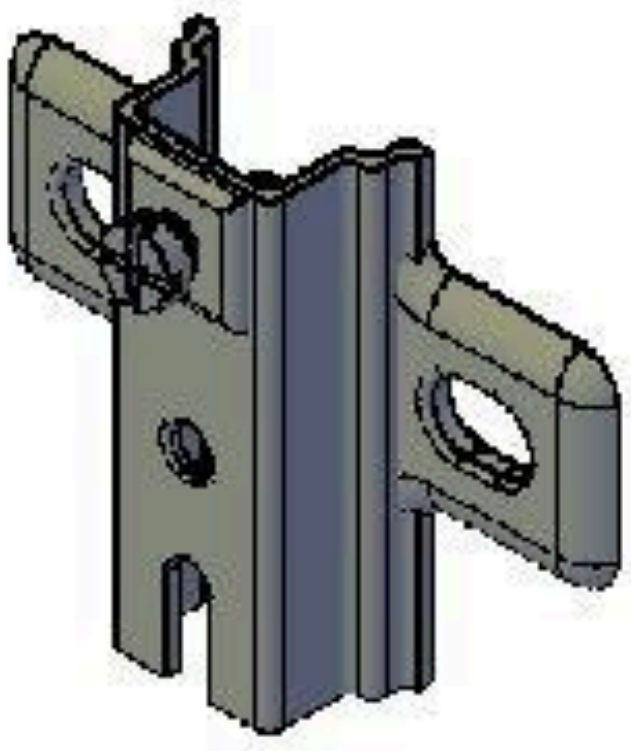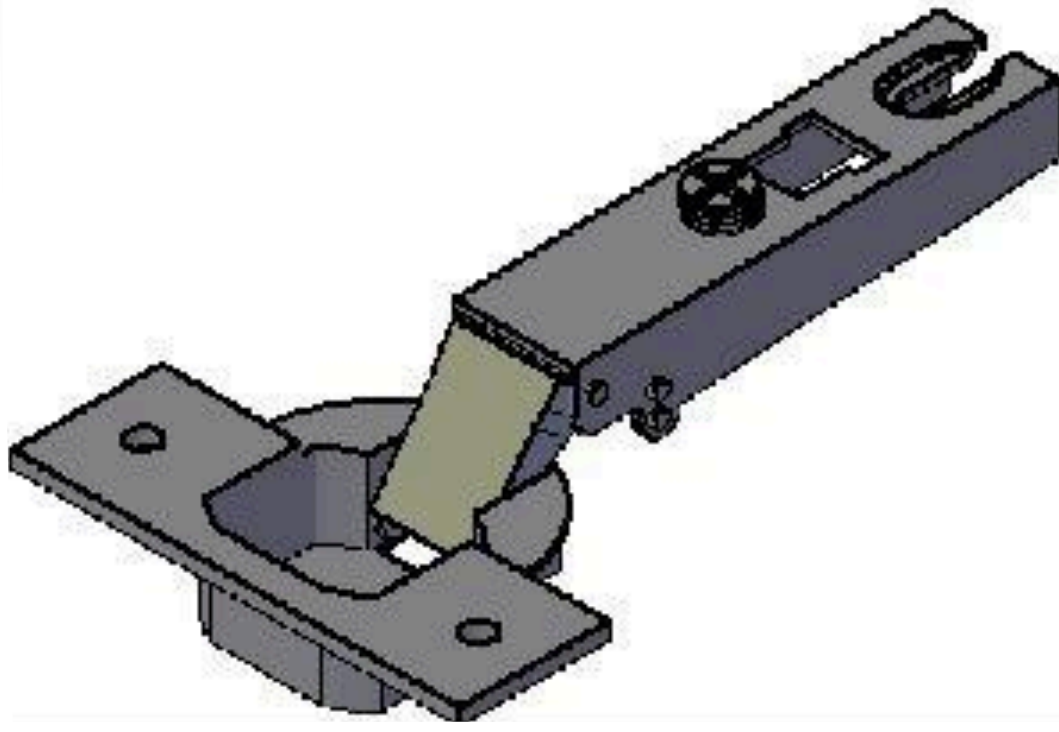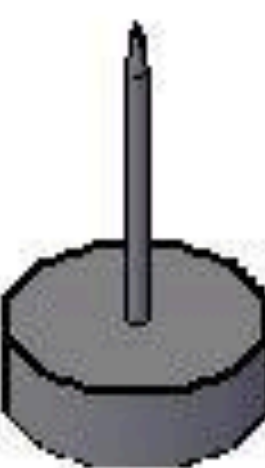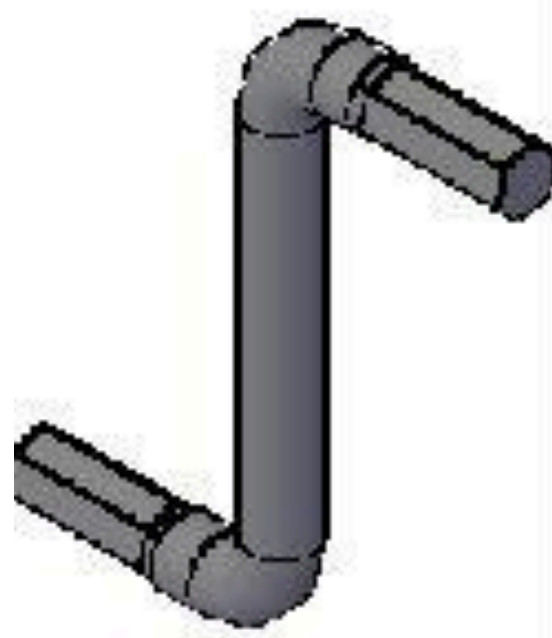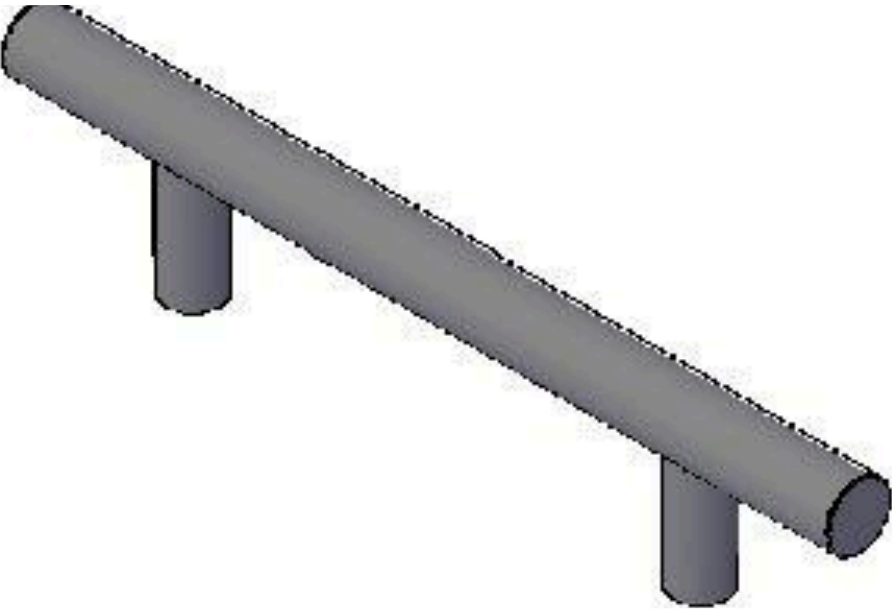O x8  ⌀ 7x16	F x4 	G2 x4 	! PAY ATTENTION: O AND F ATTACHED TO G2
E x5 	A x12 	Q7 x1 	C x8  ⌀ 7x50
S1 x8 	S7 x4 	J9 x4  ⌀ 3x25	U7 x2 
H x8 US 031.03  ⌀ 3.5x13	W x15 		

Ruler - Use this ruler to help correctly identify the screws

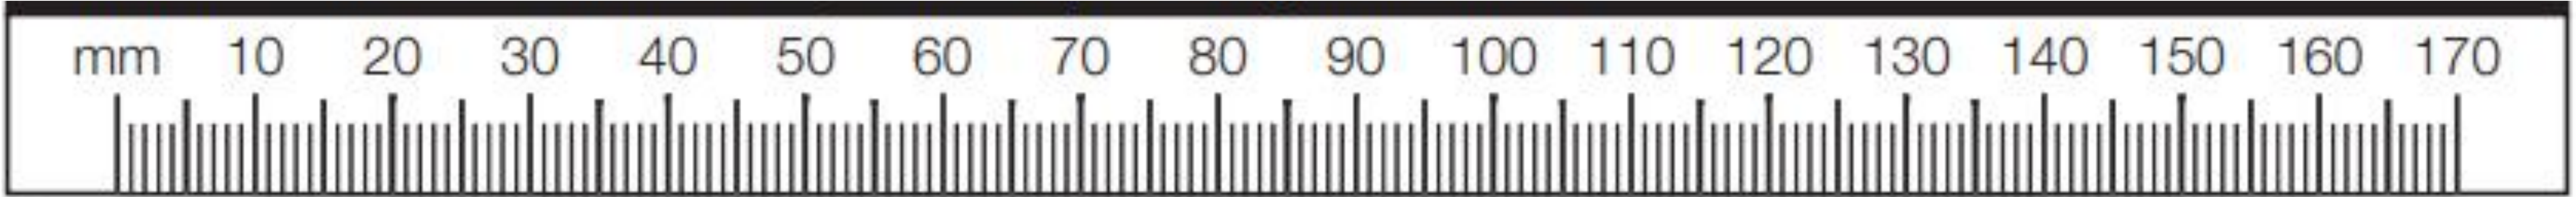

STEP - 1

! PAY ATTENTION: O ATTACHED TO F


O x8

F x4




7x16

E x4

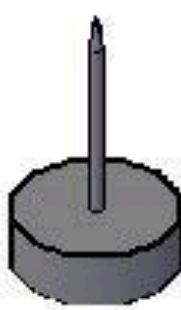

A x12




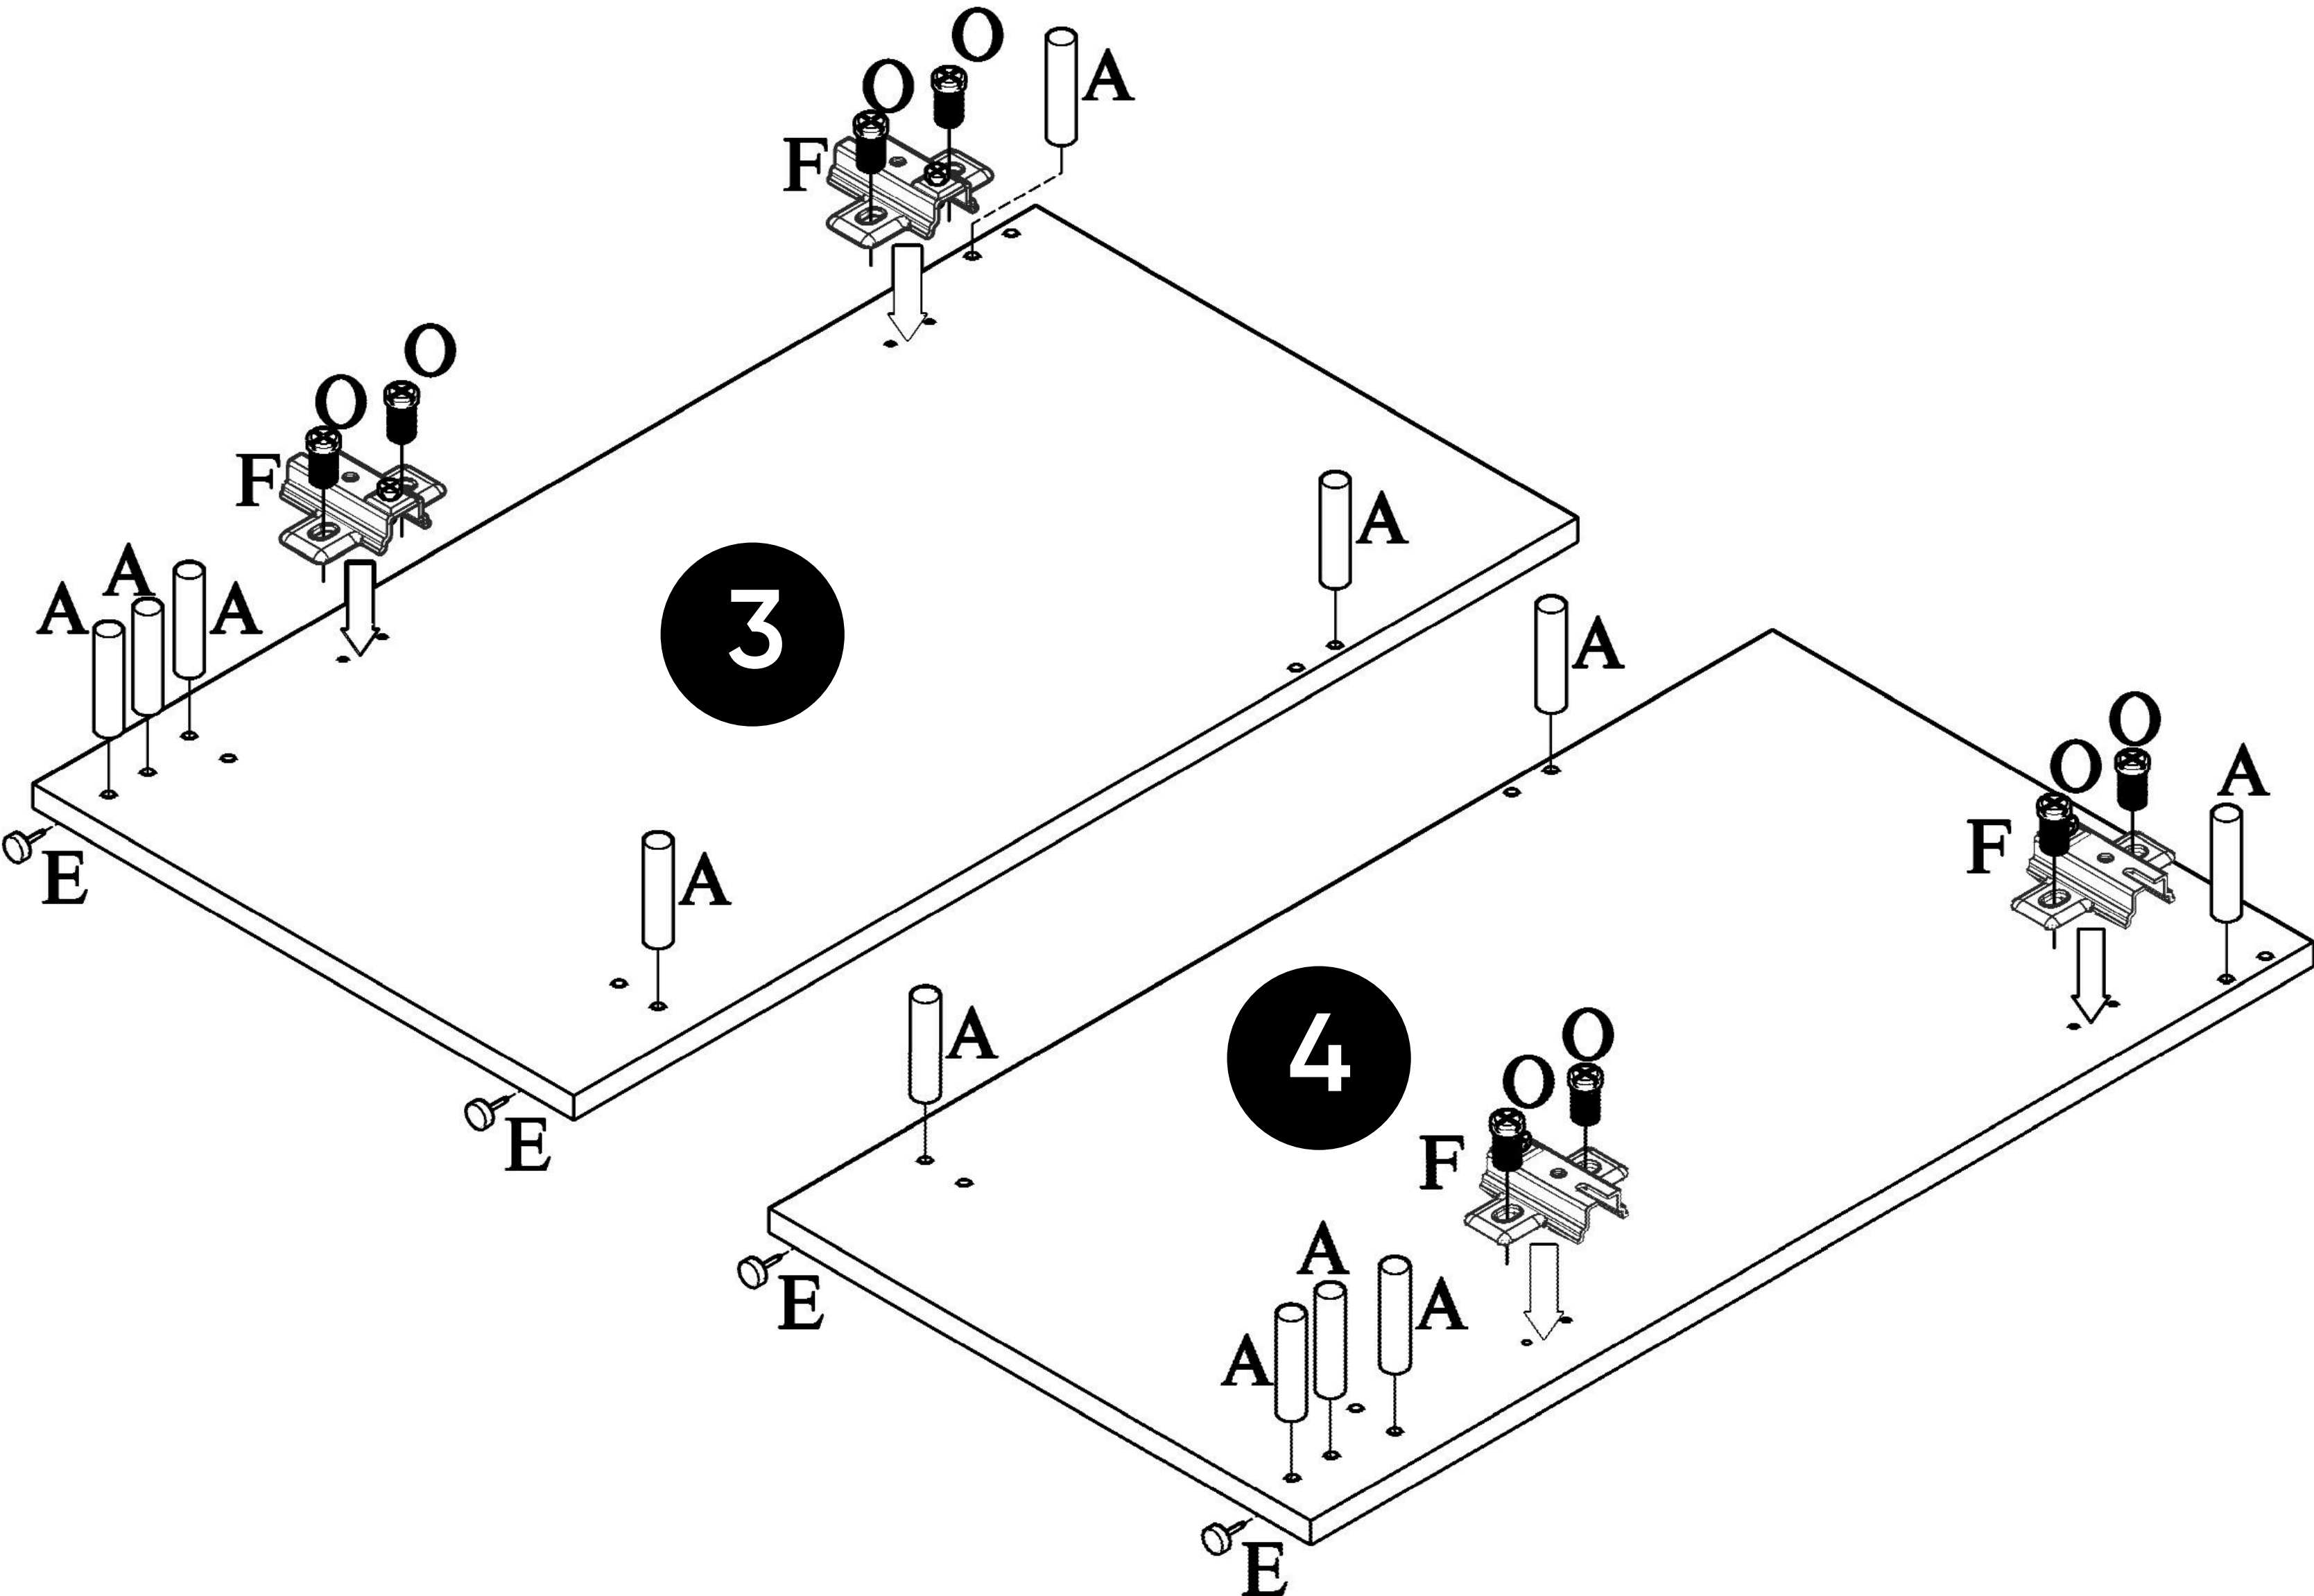


STEP - 2

Q7 x1

E x1

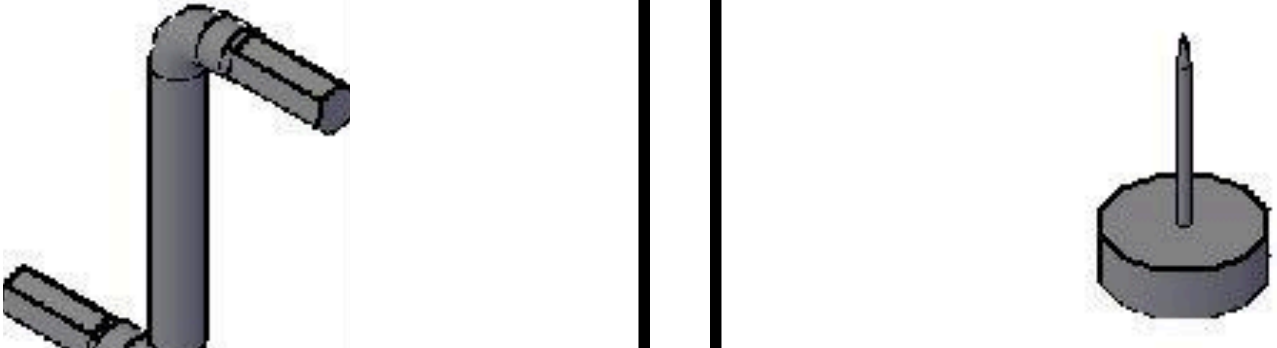


S1 x8

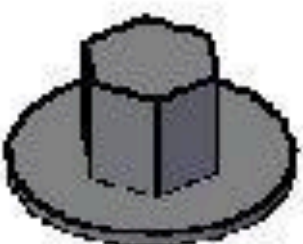


C x8




7x50

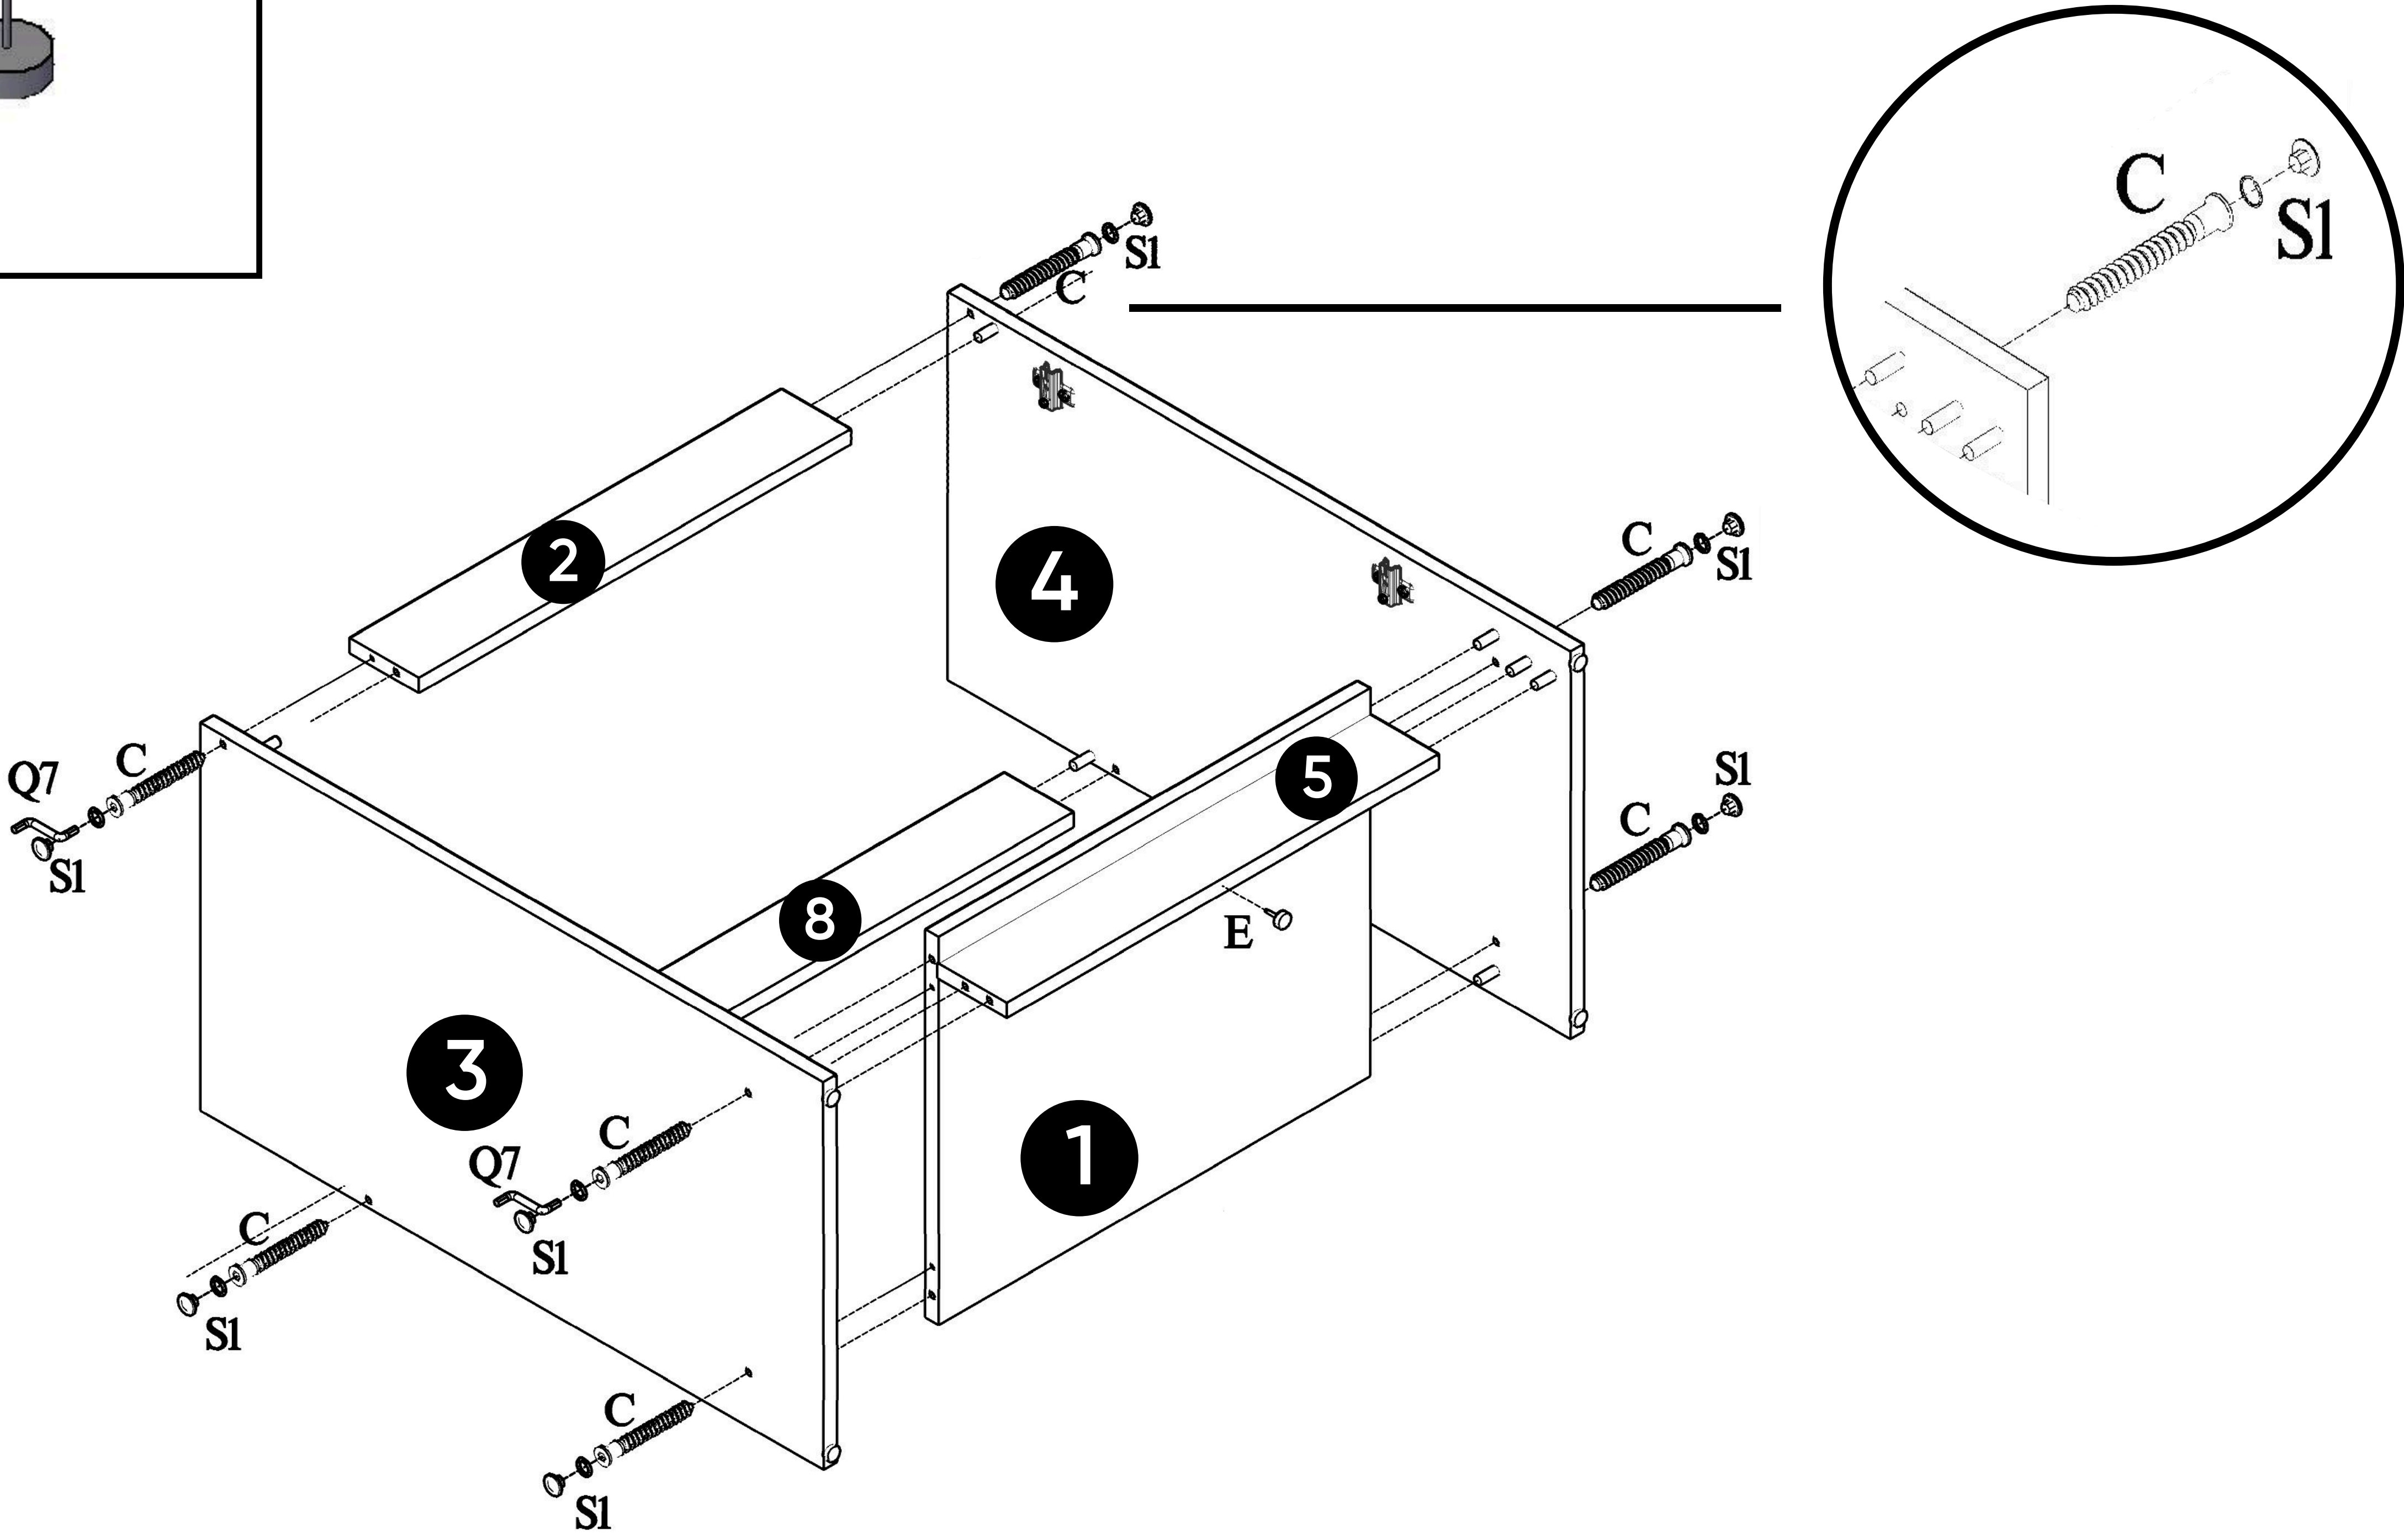


STEP - 3

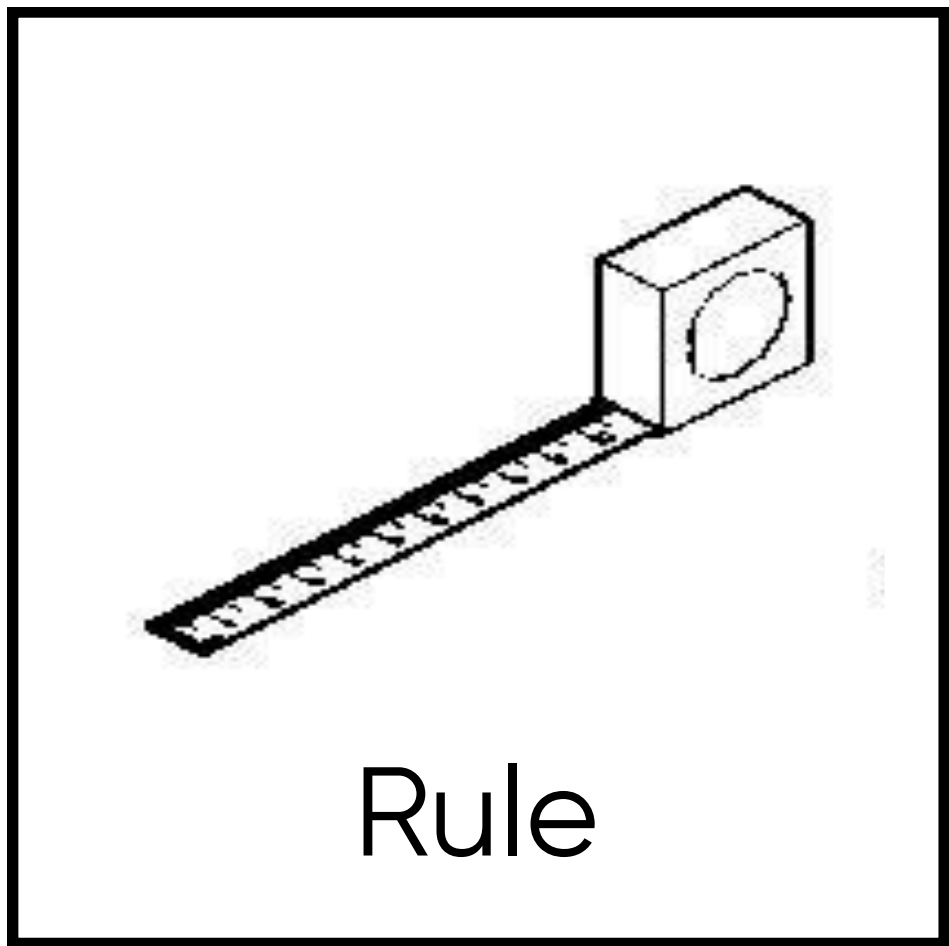



!!! $X1 = X2$

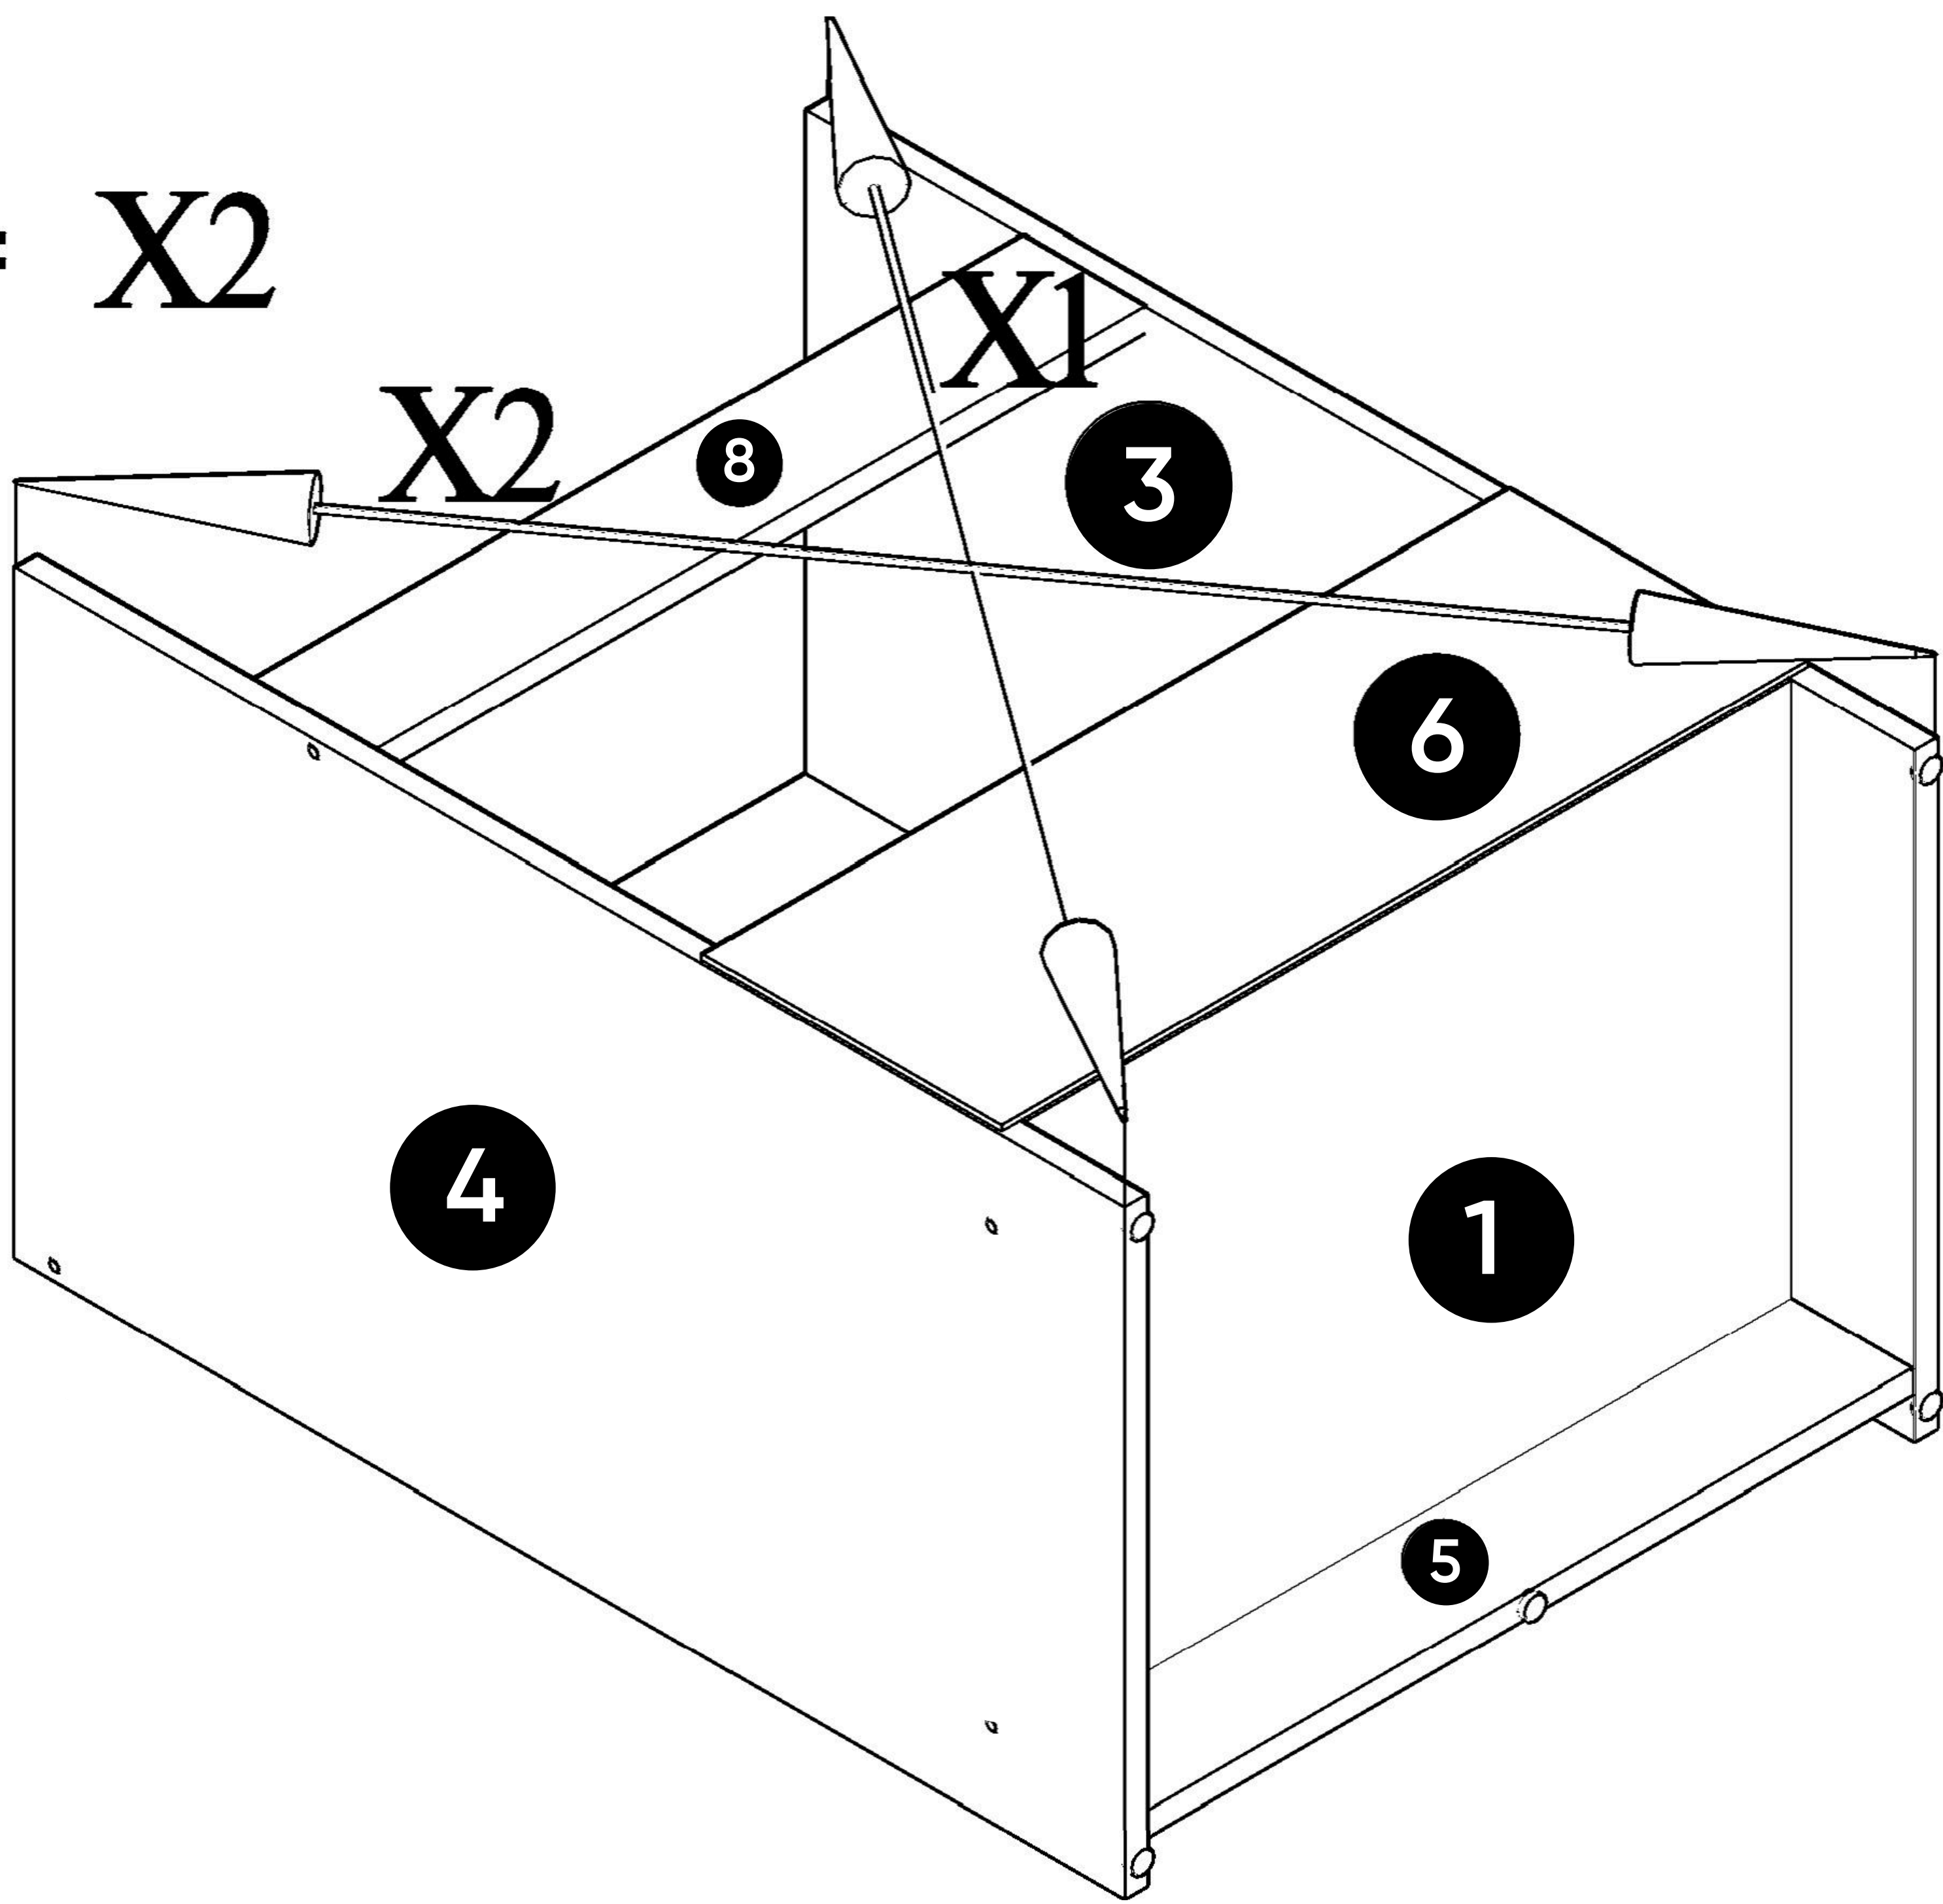



STEP - 4

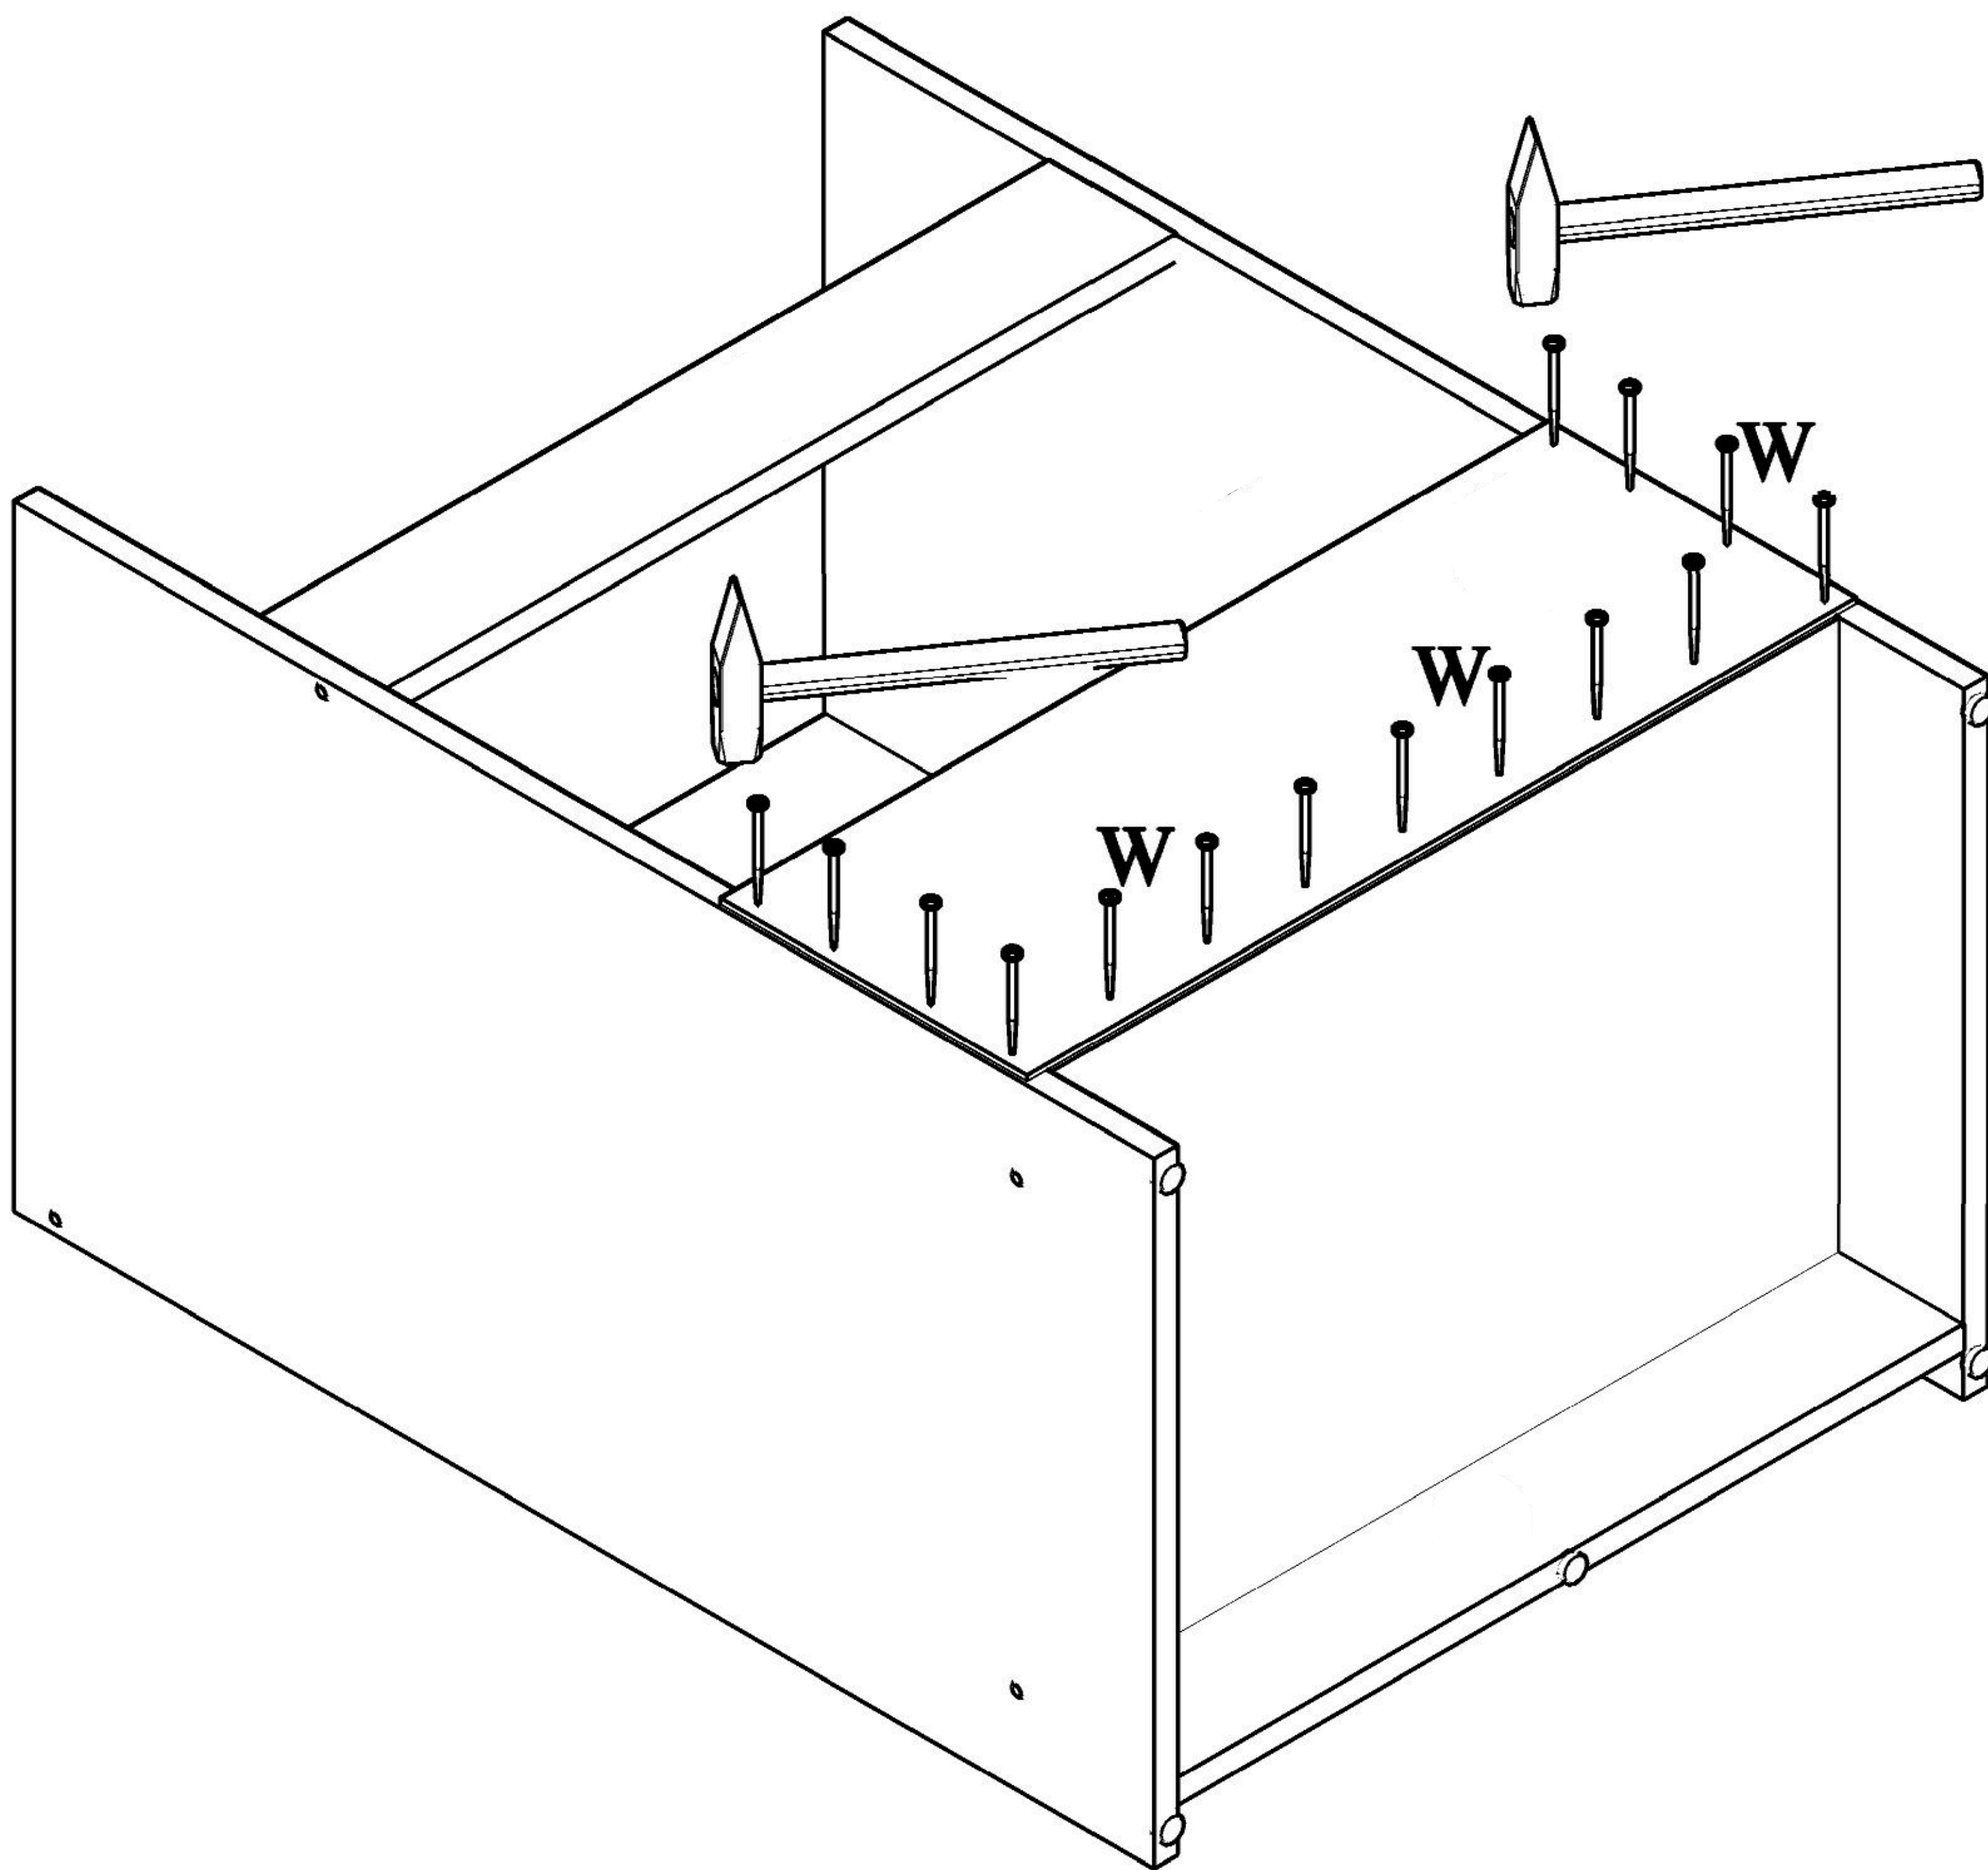

STEP - 5

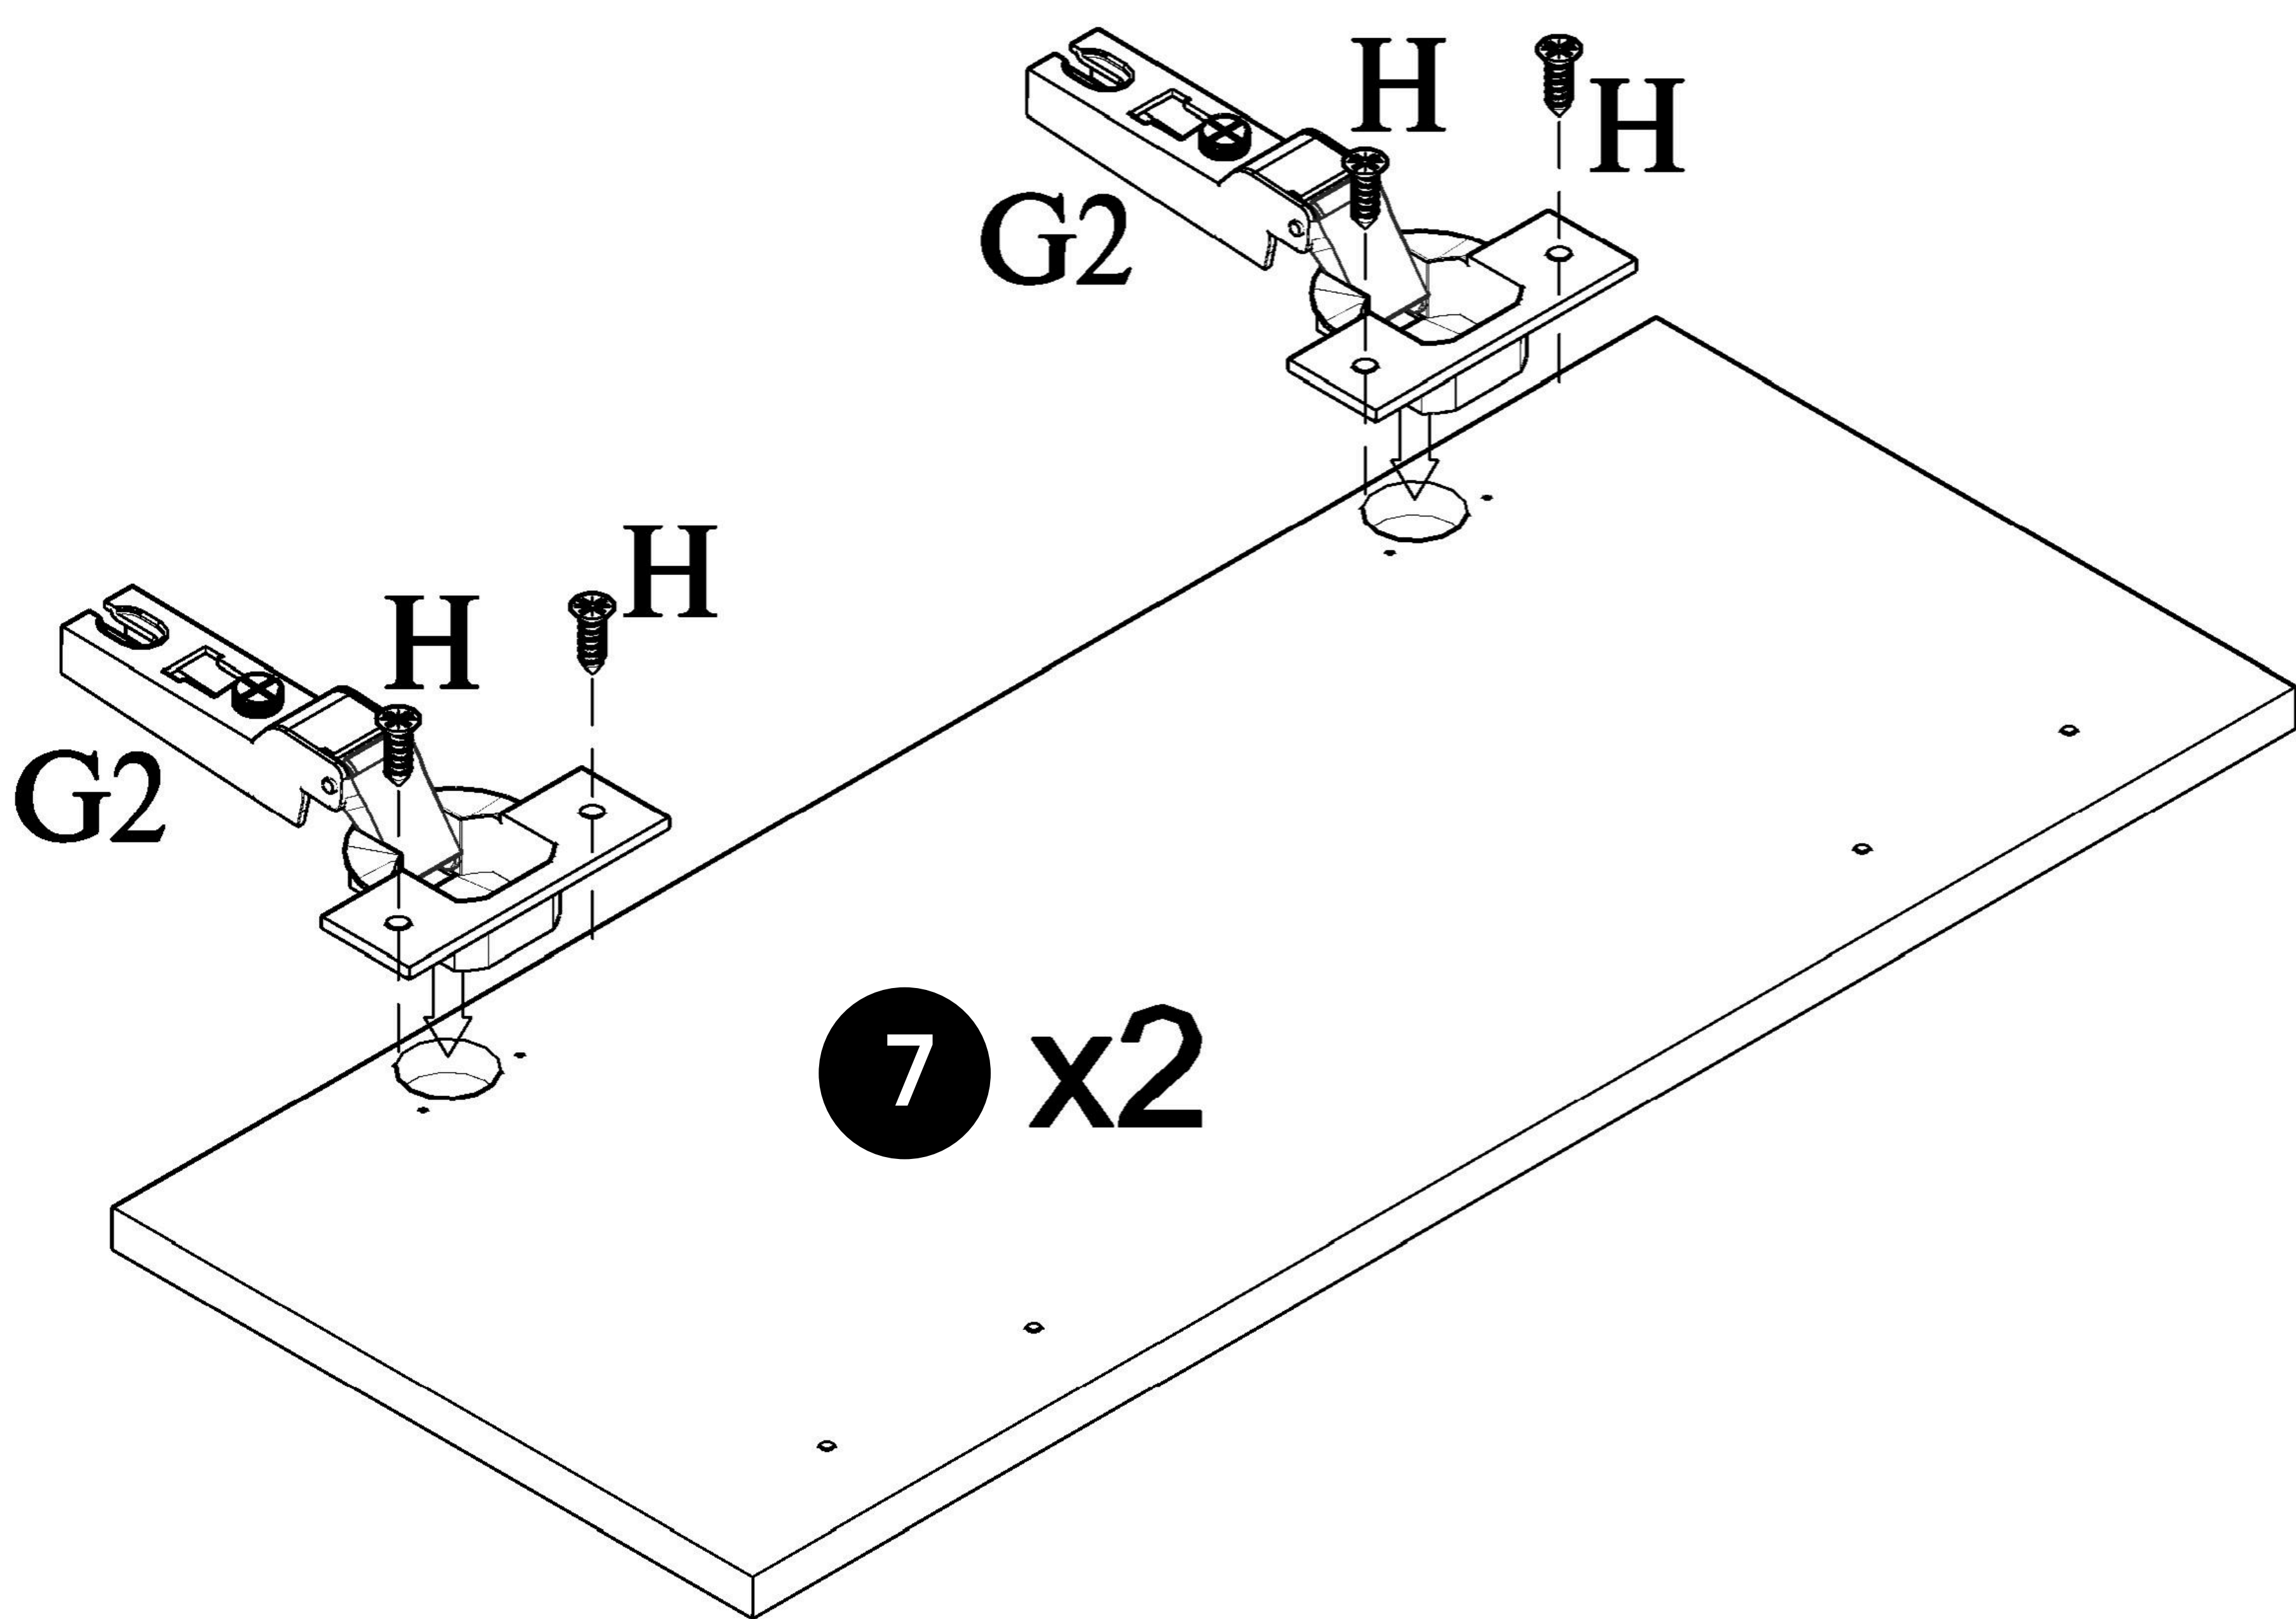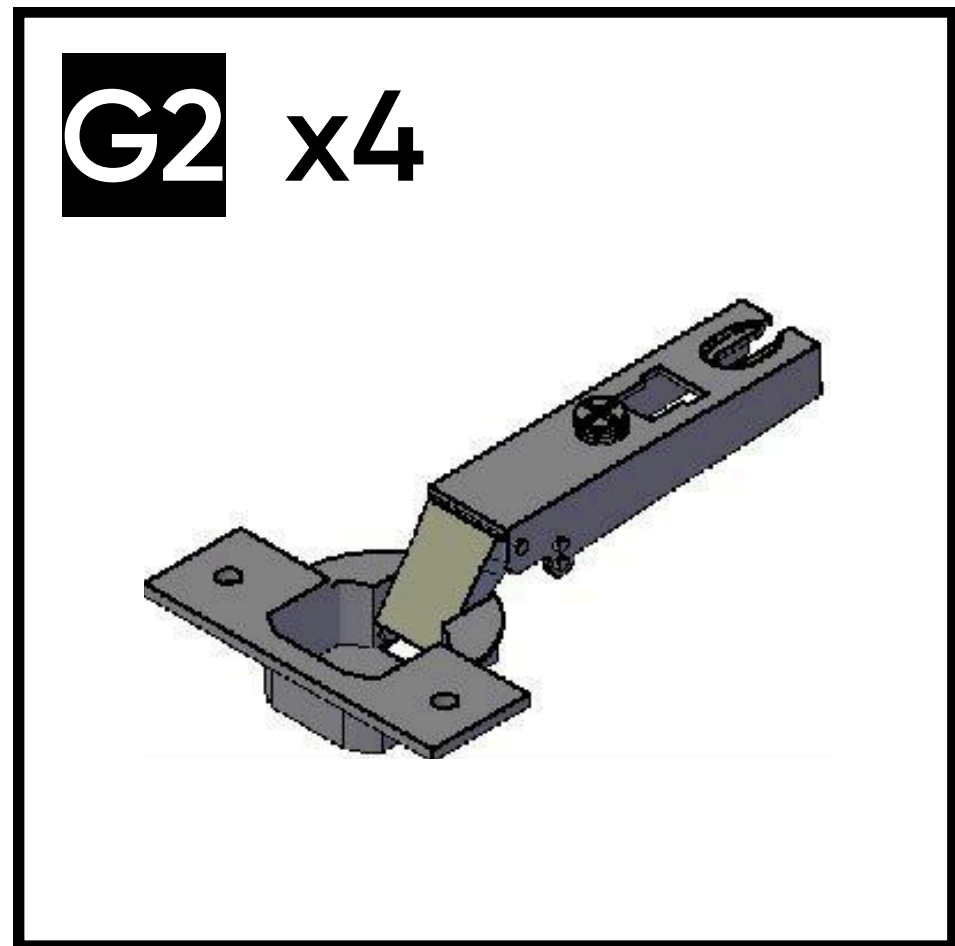

STEP - 6

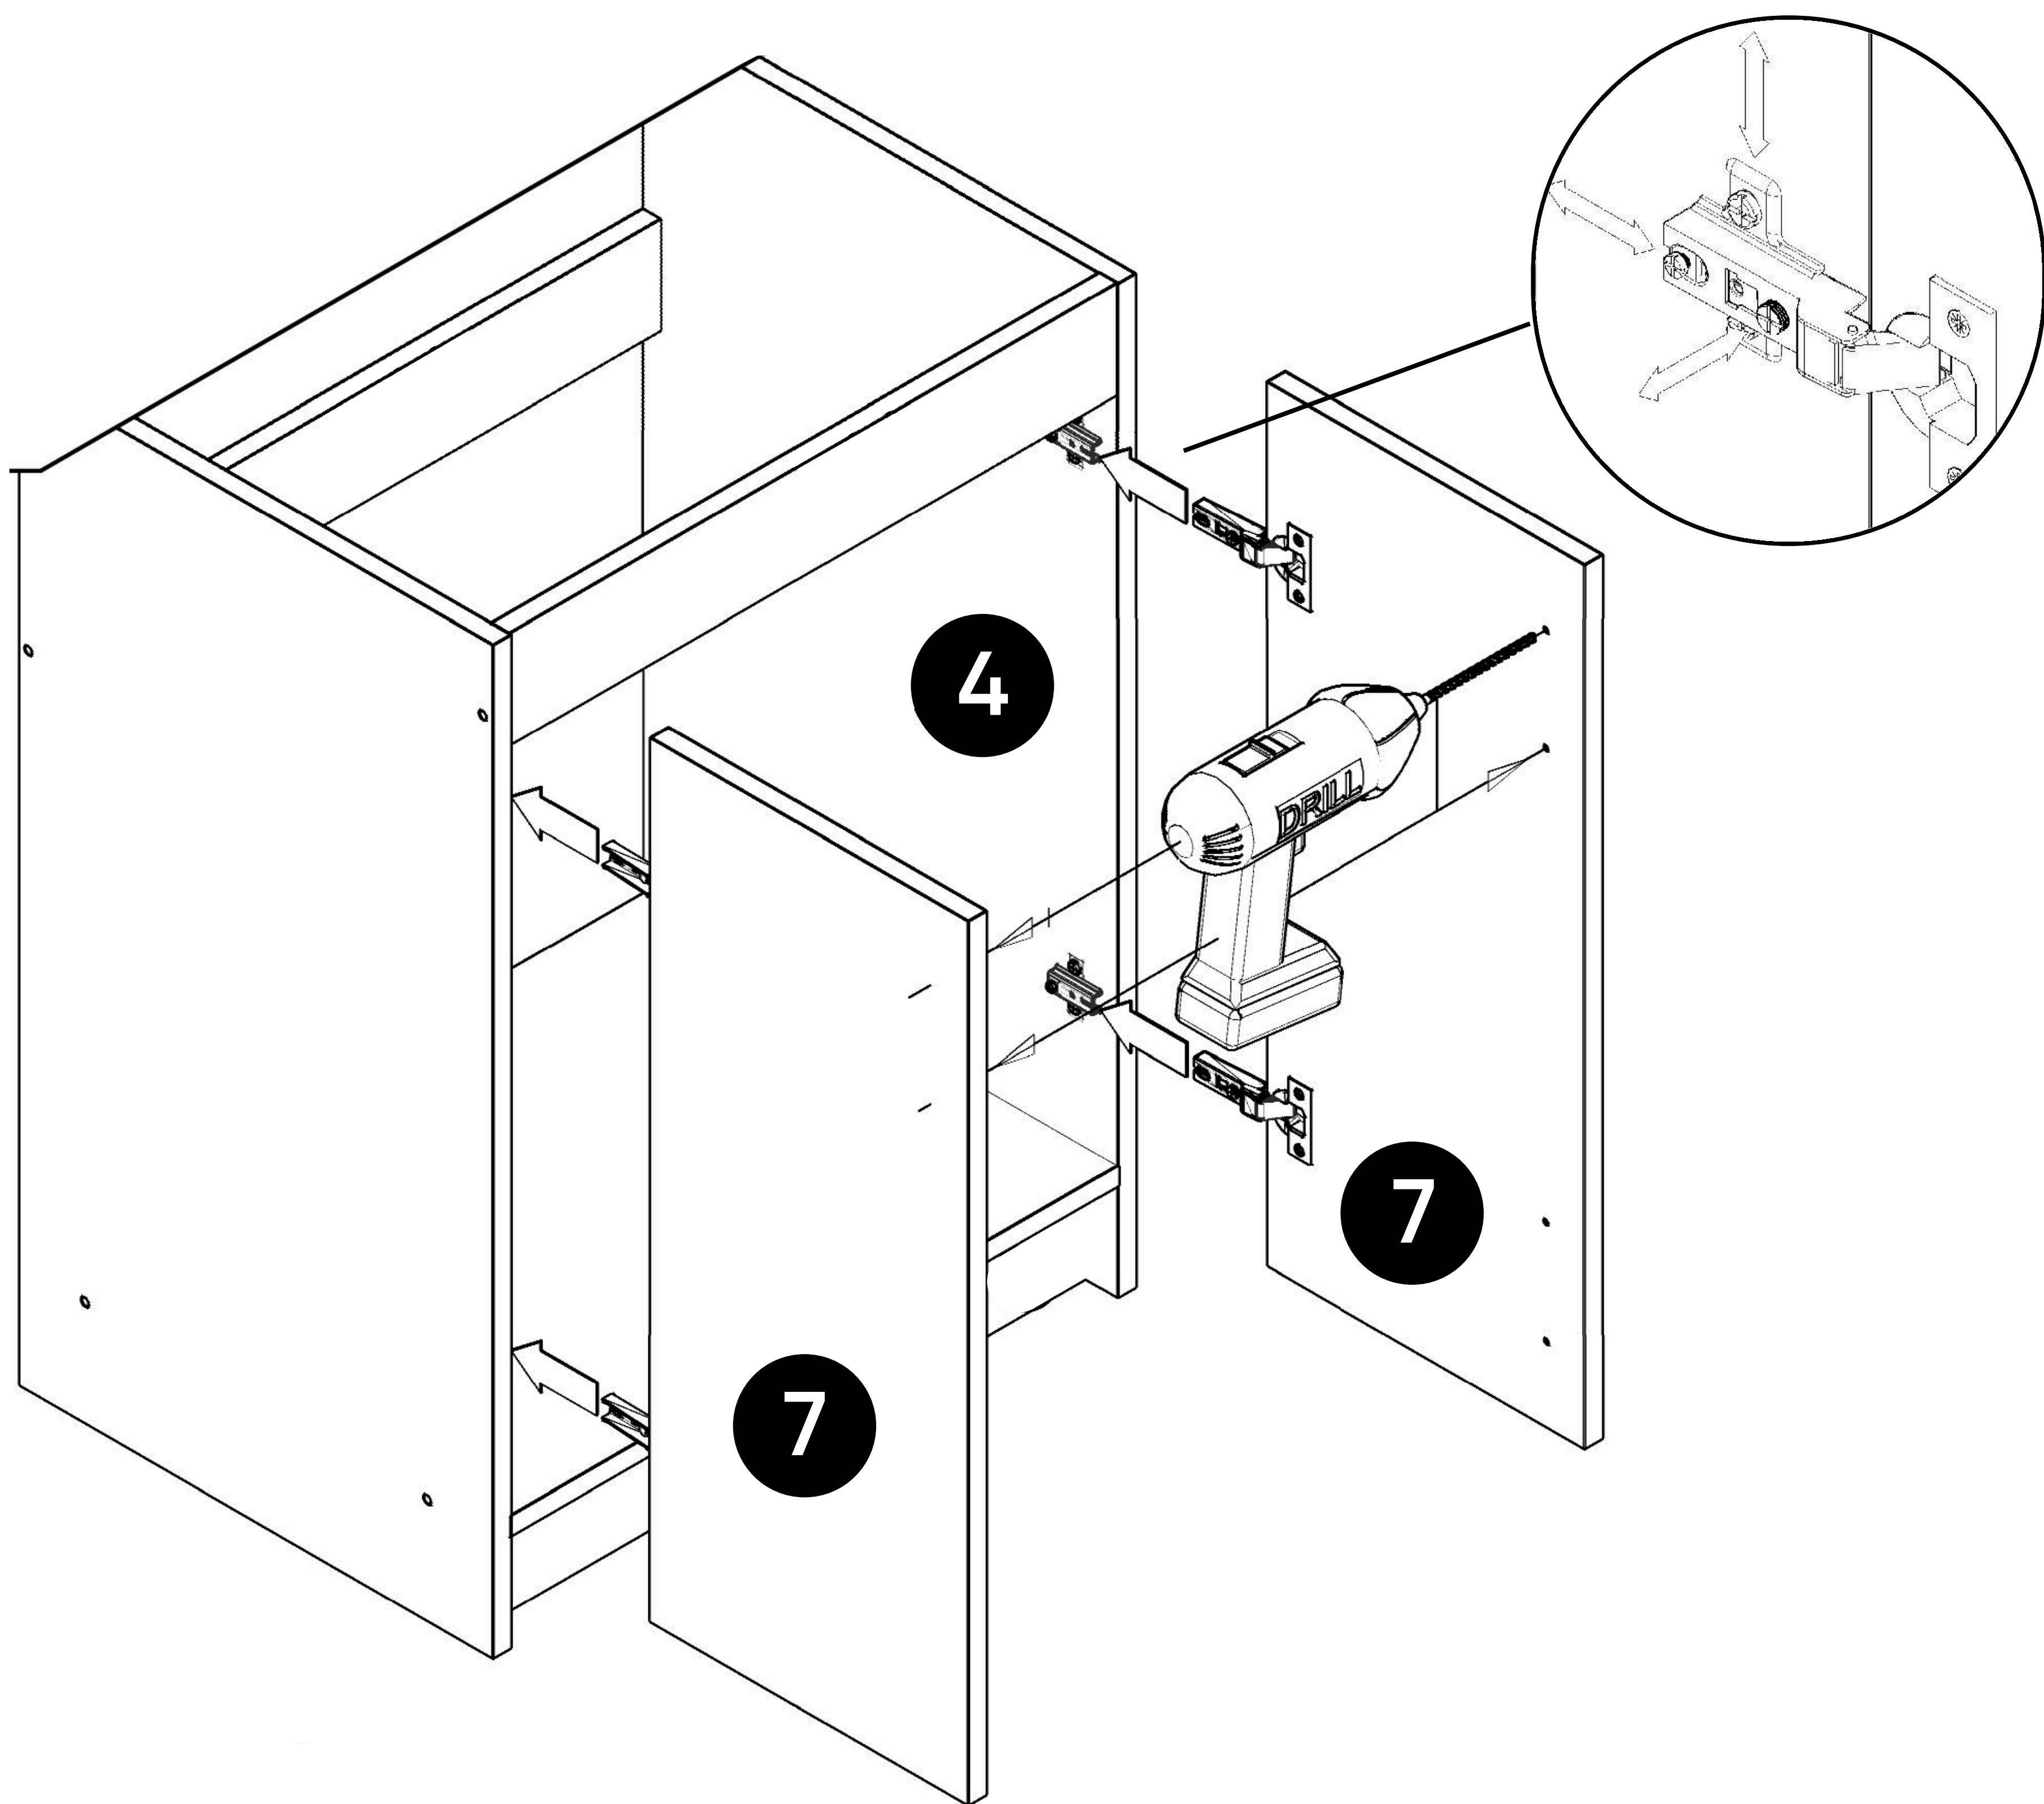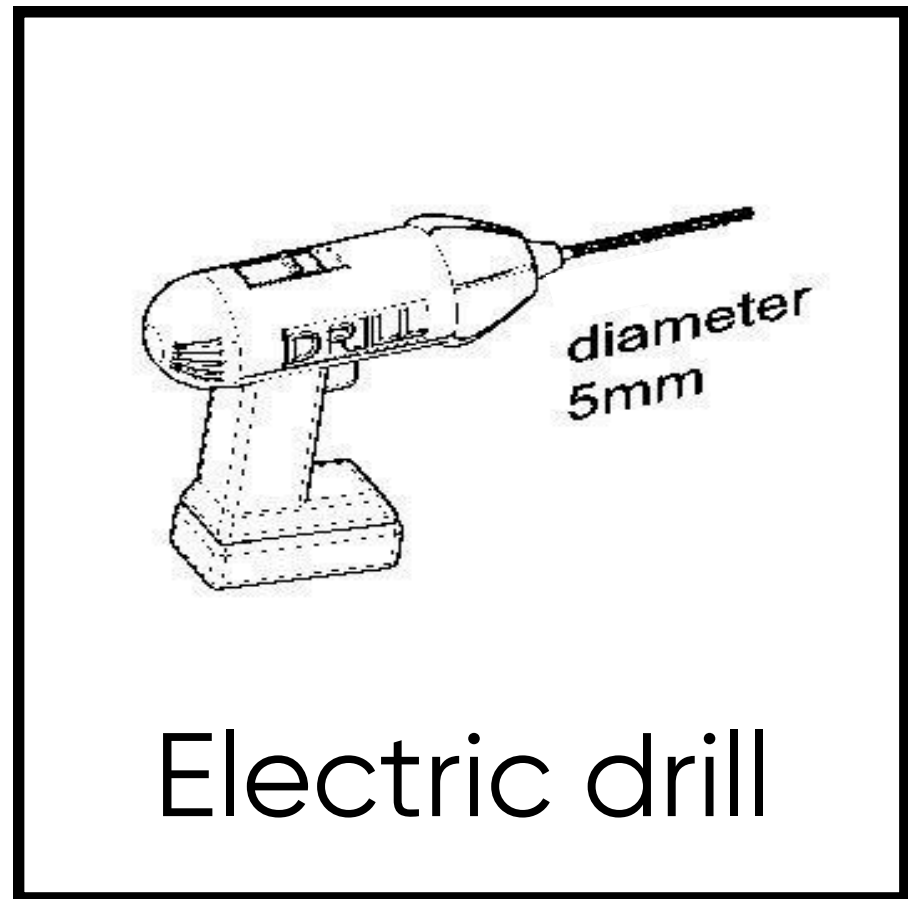

STEP - 7

S7 x4



J9 x4

⌀ 3x25



U7 x2

