



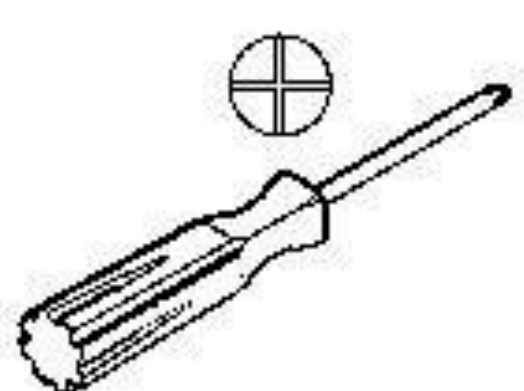


ASSEMBLY INSTRUCTIONS

KITCHEN BASE OVEN UNIT 600MM


MODEL O600

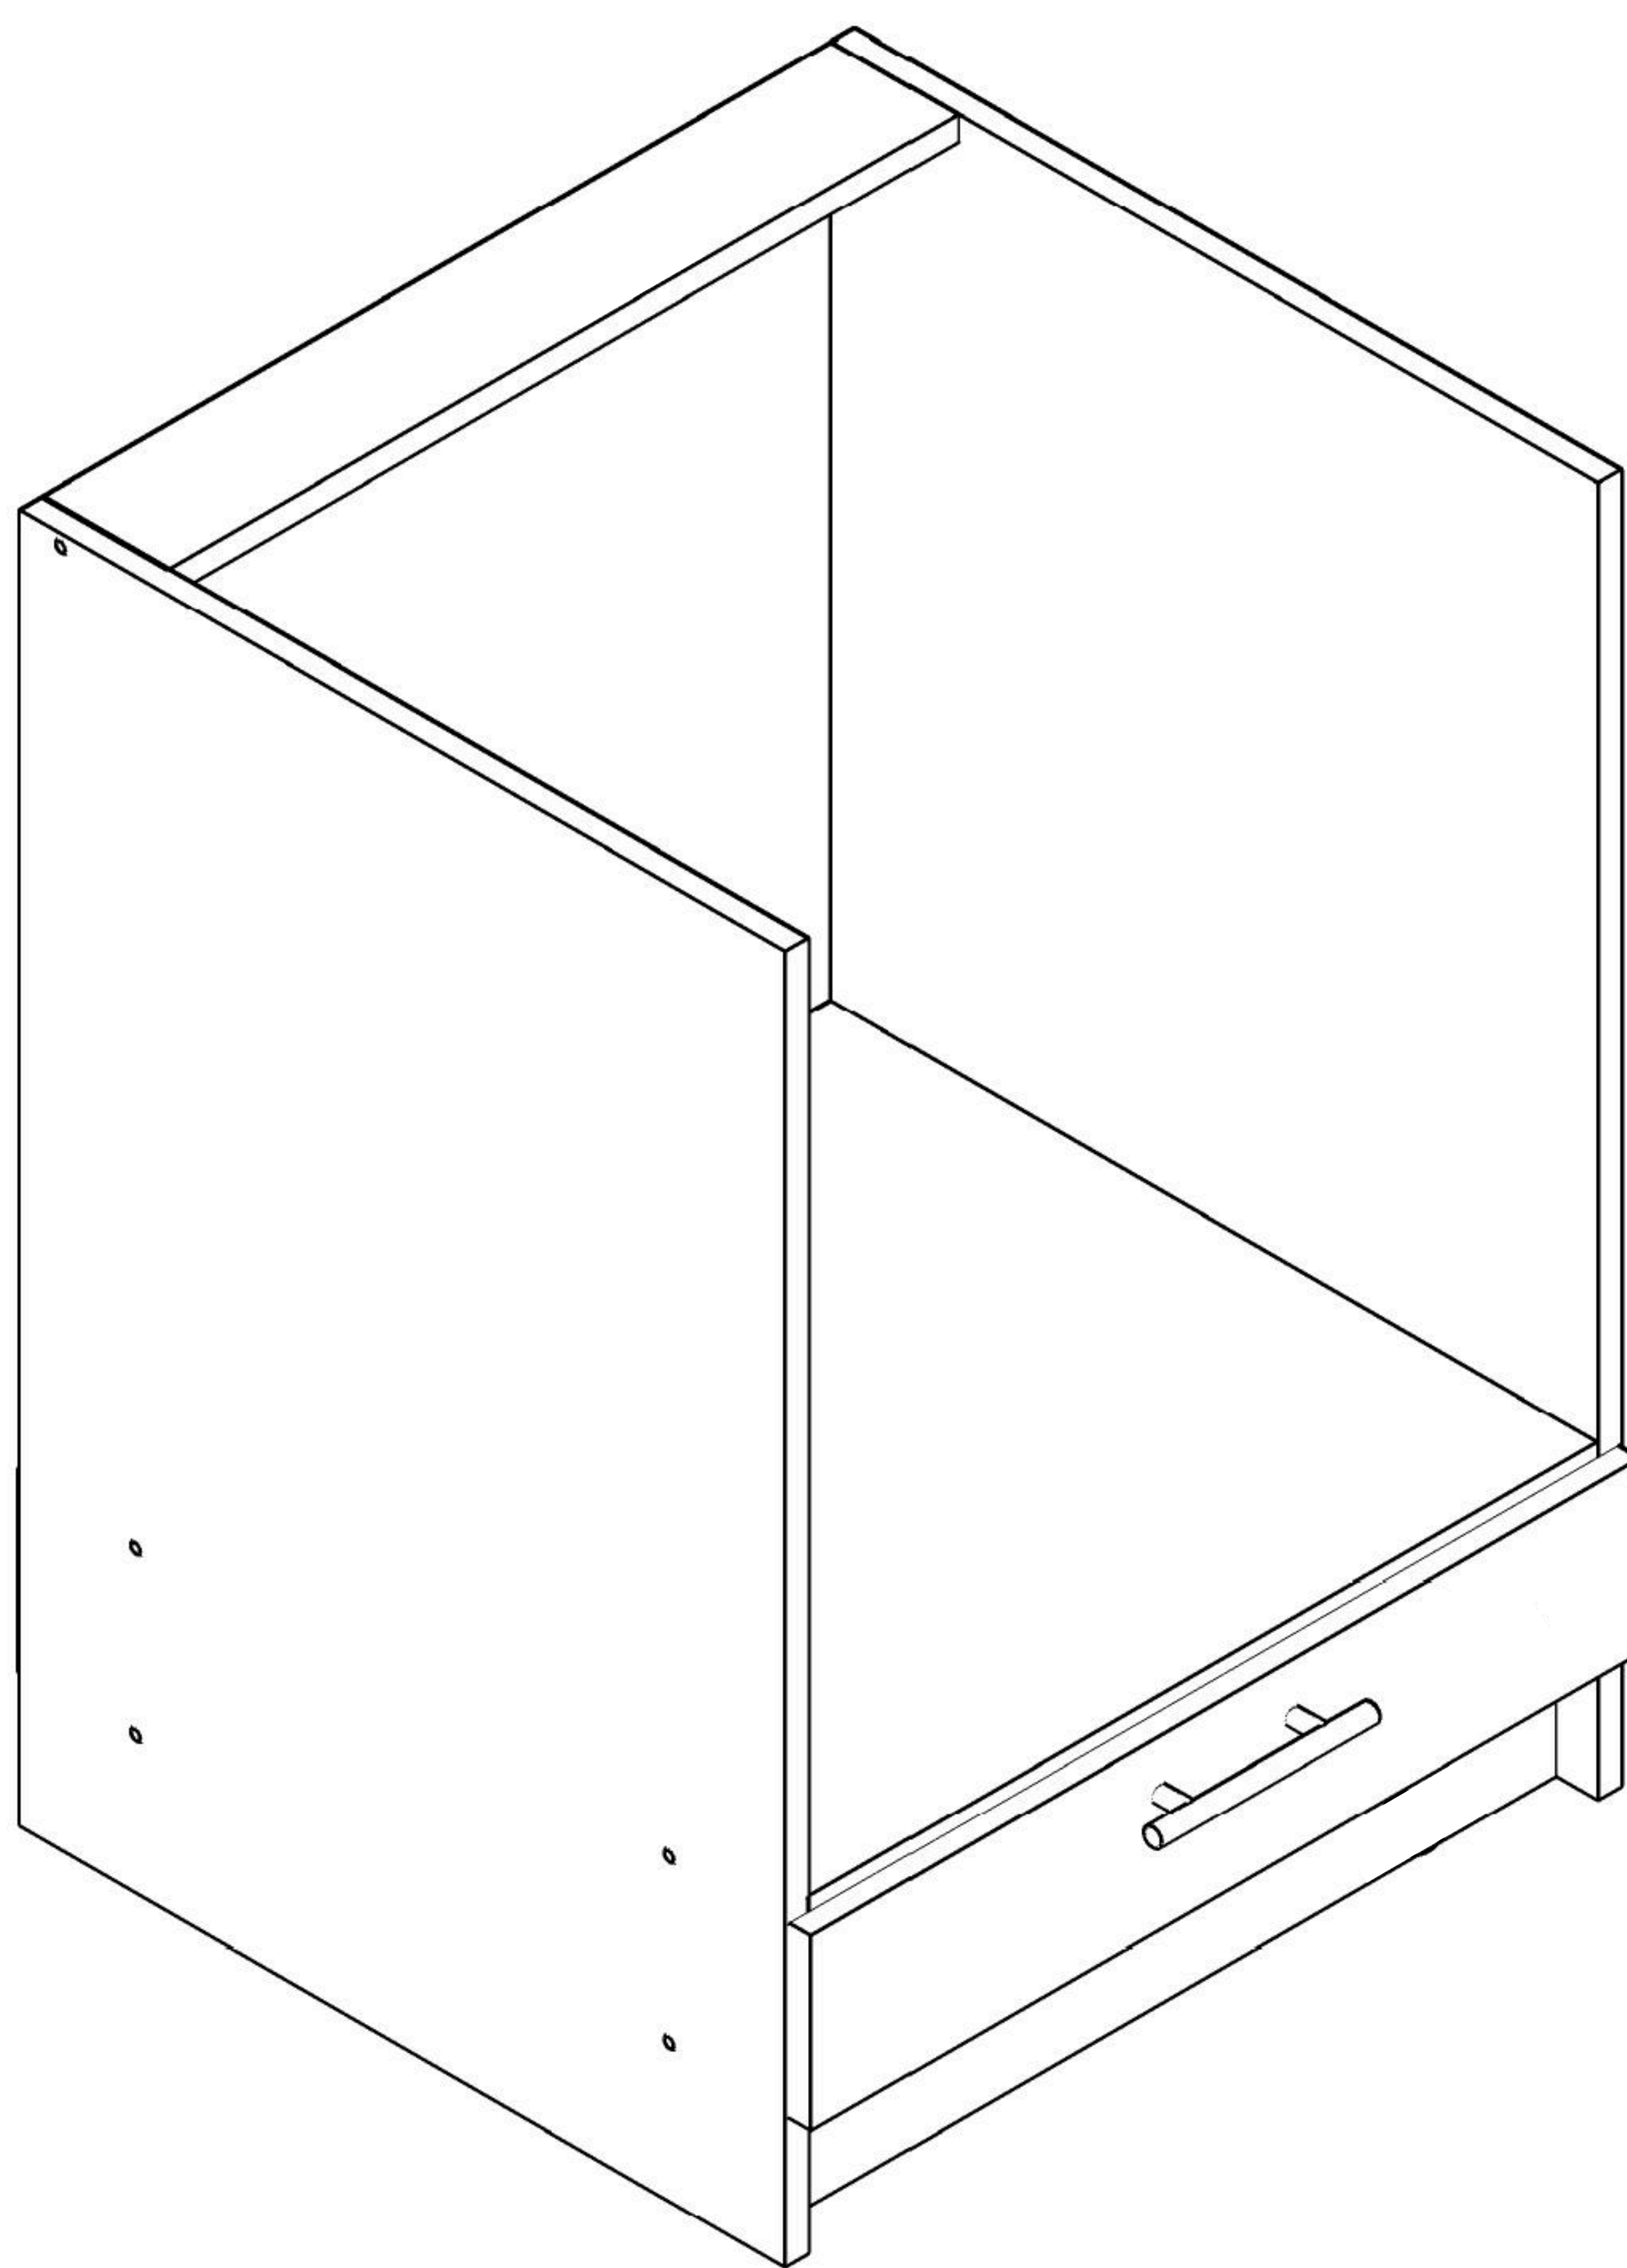


Cross-head
screwdriver

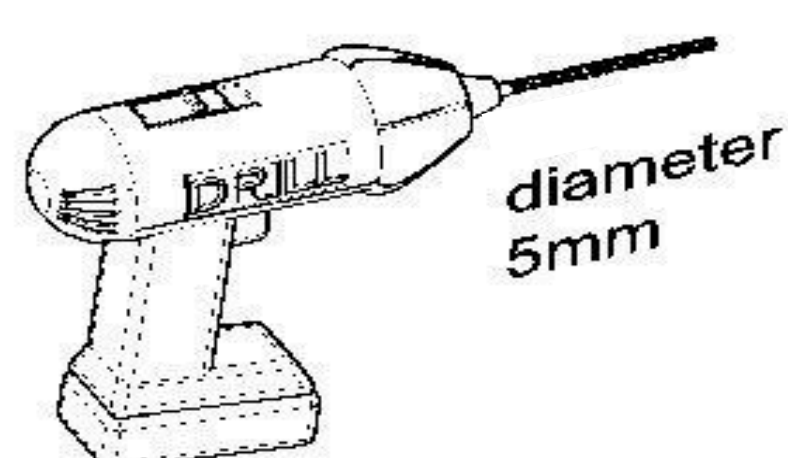

Electric
drill

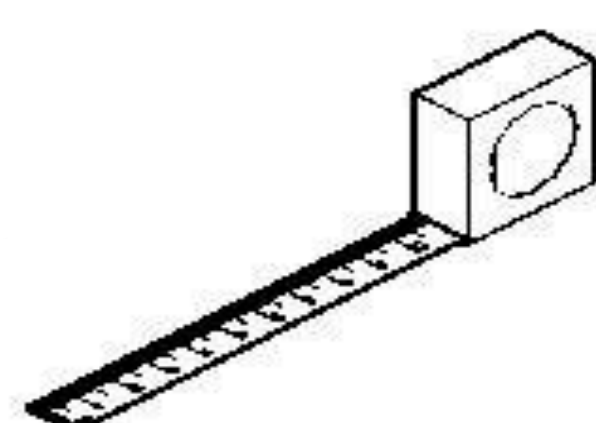

Rule

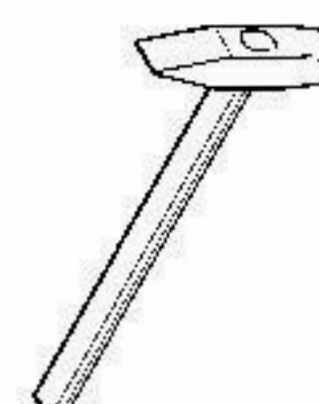

Hammer









**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346






COMPONENTS - PANELS

Please check you have all the panels listed below

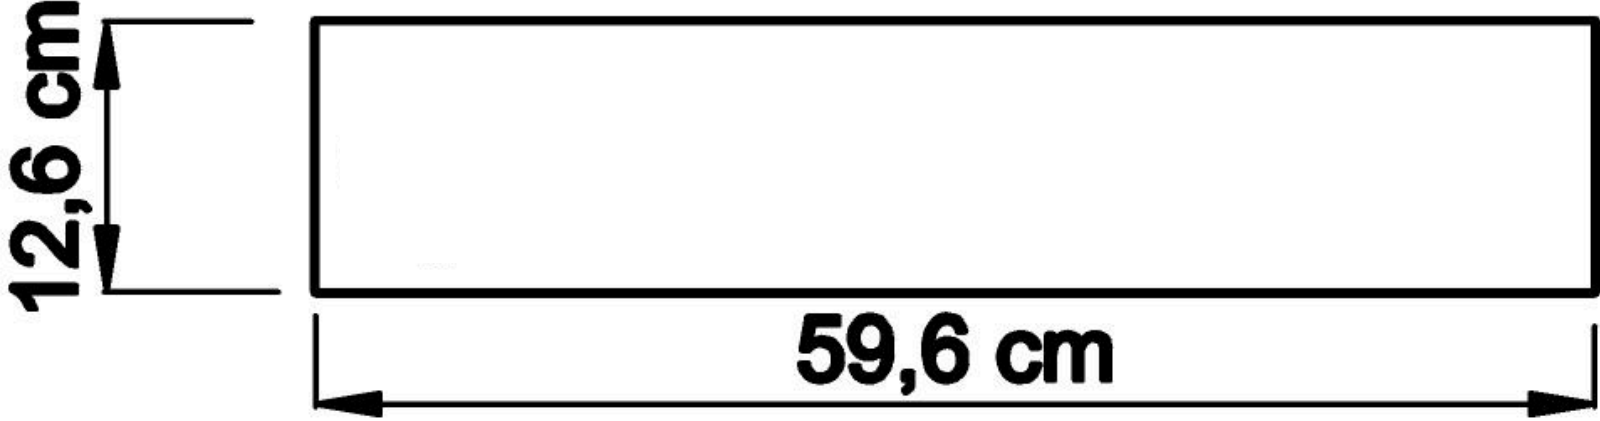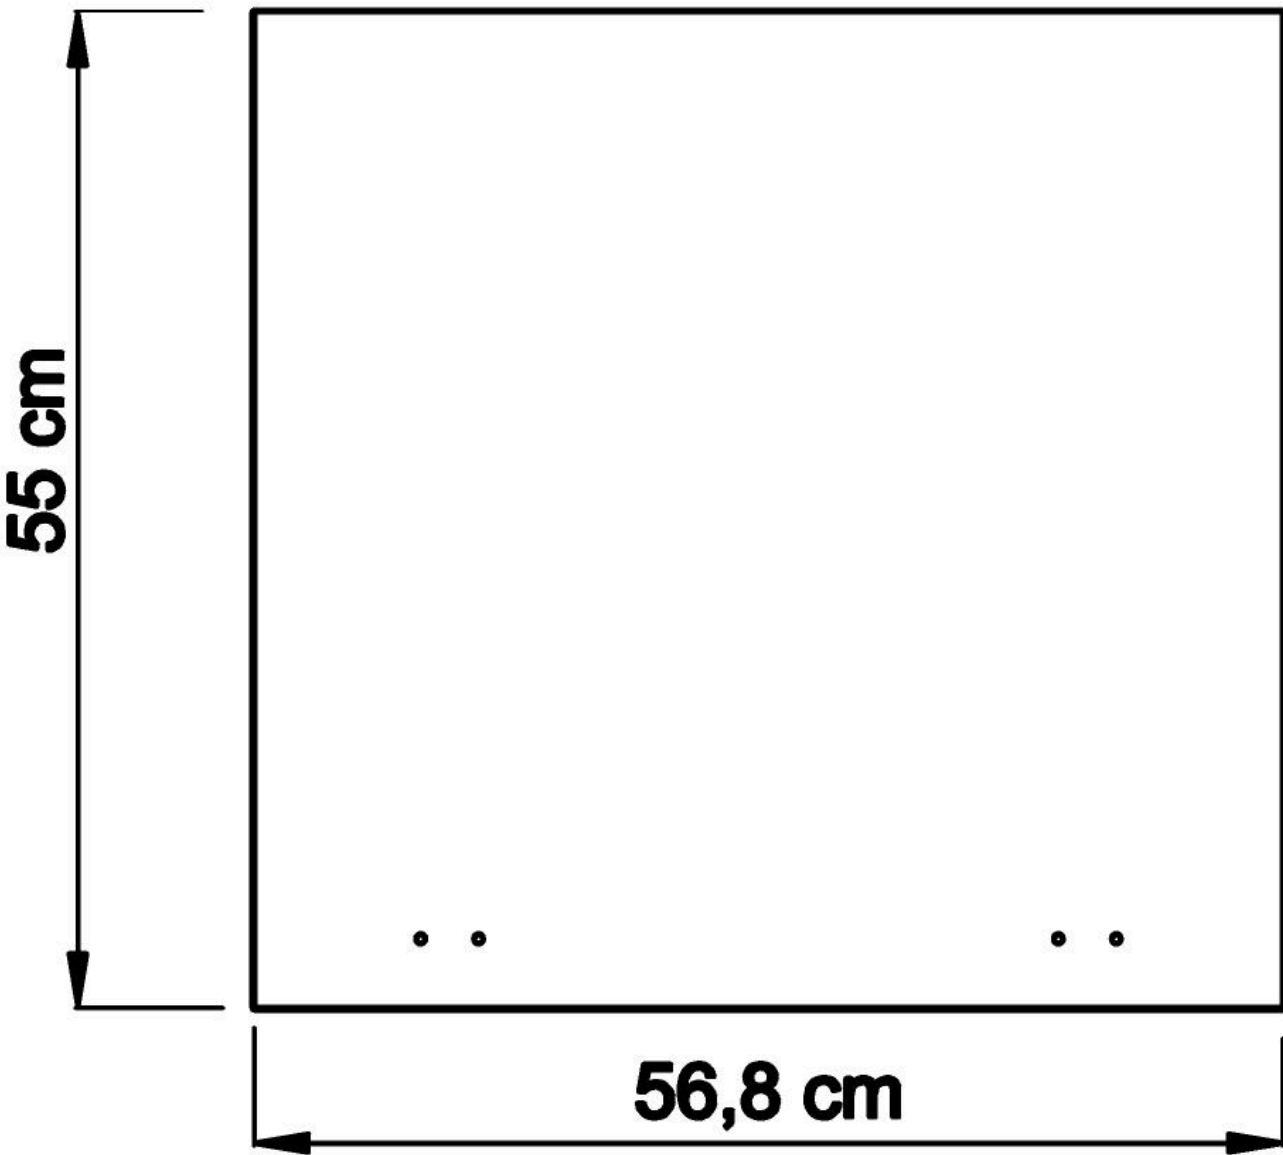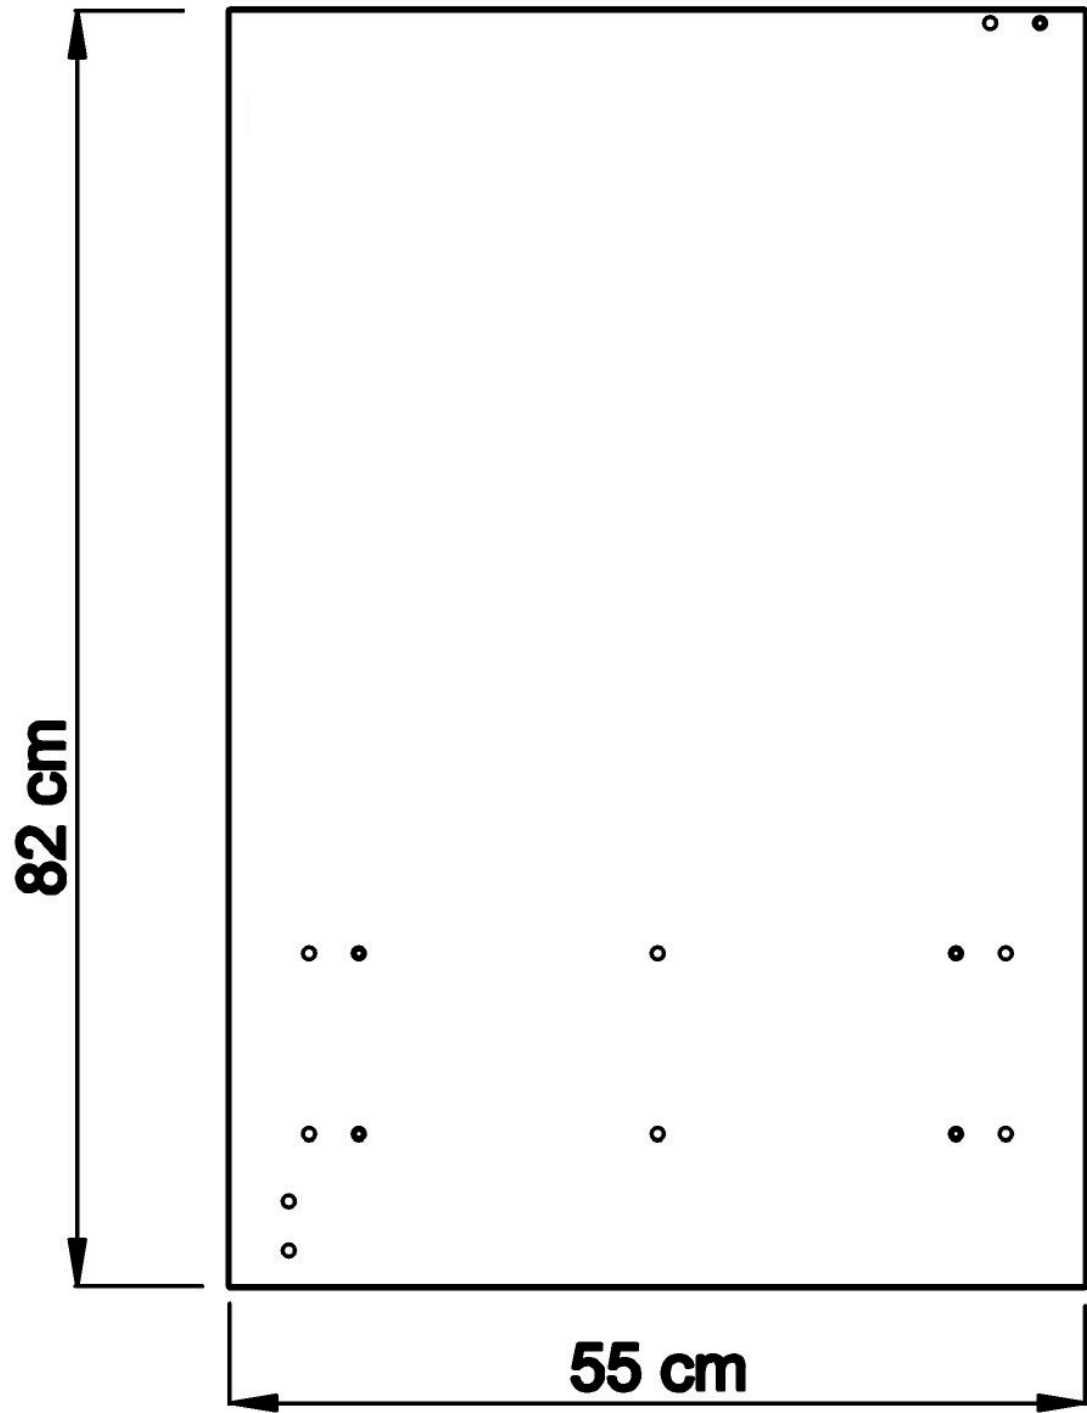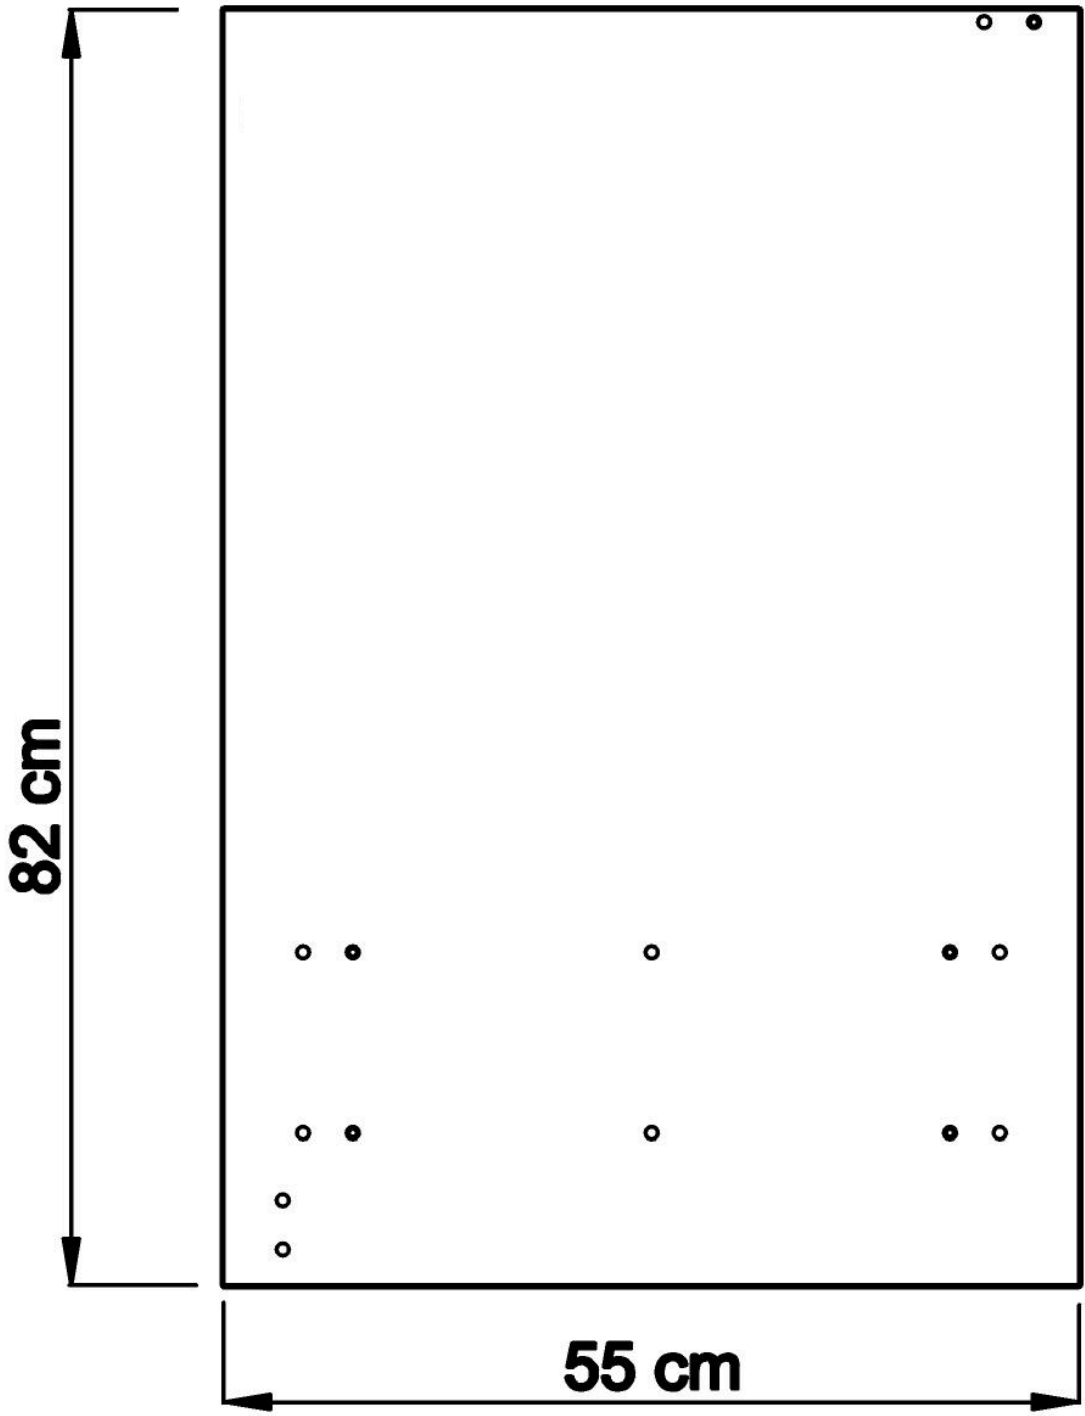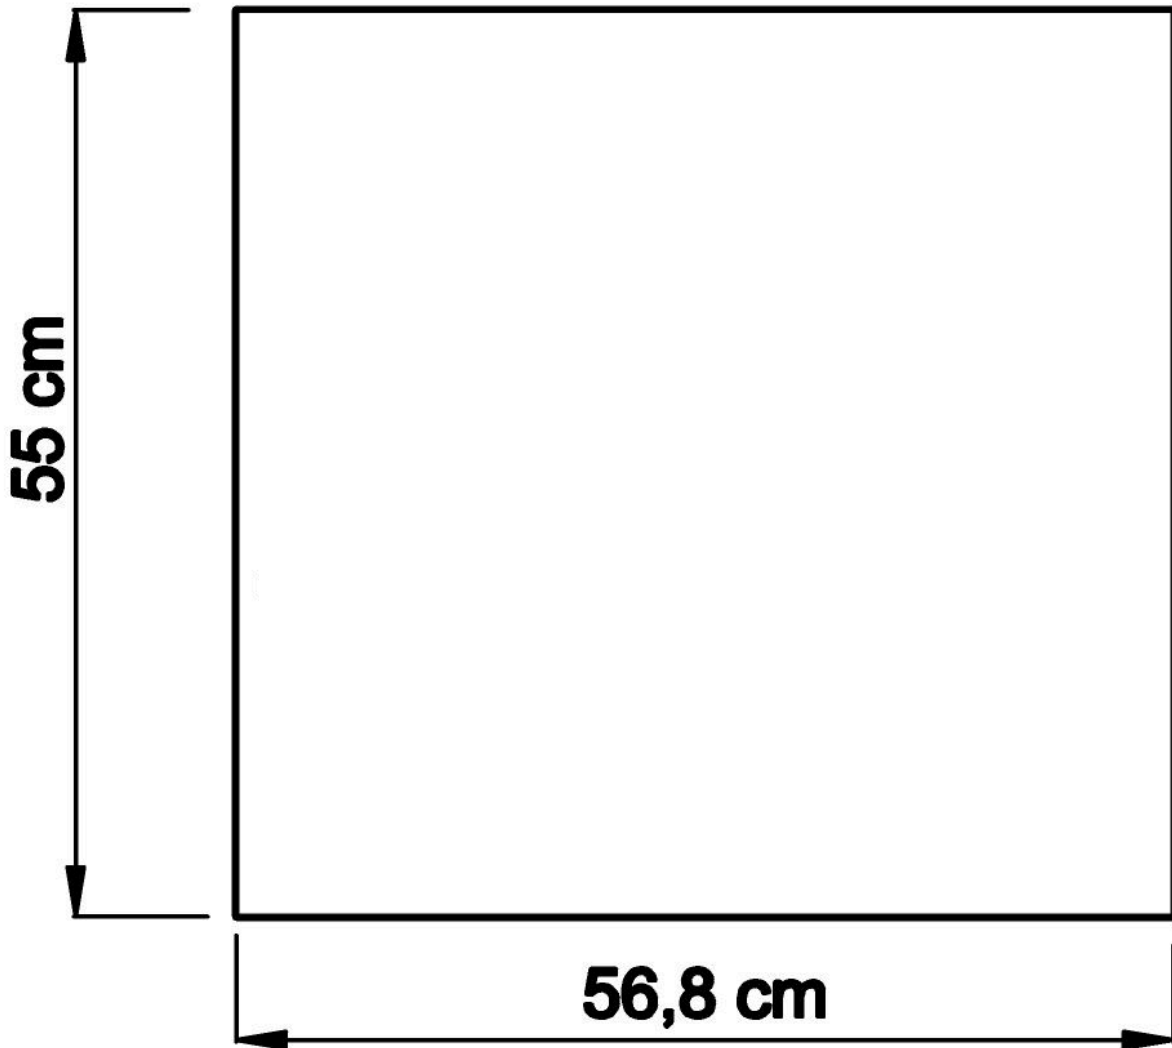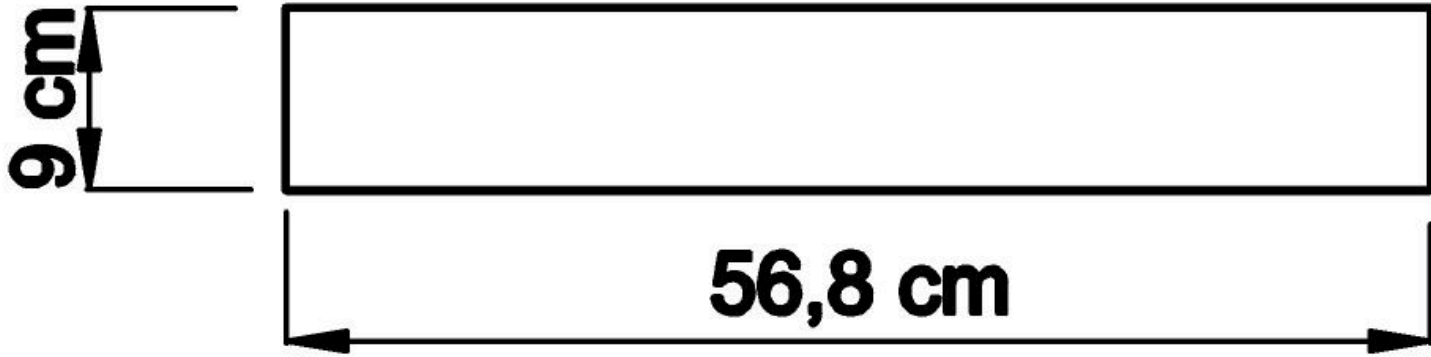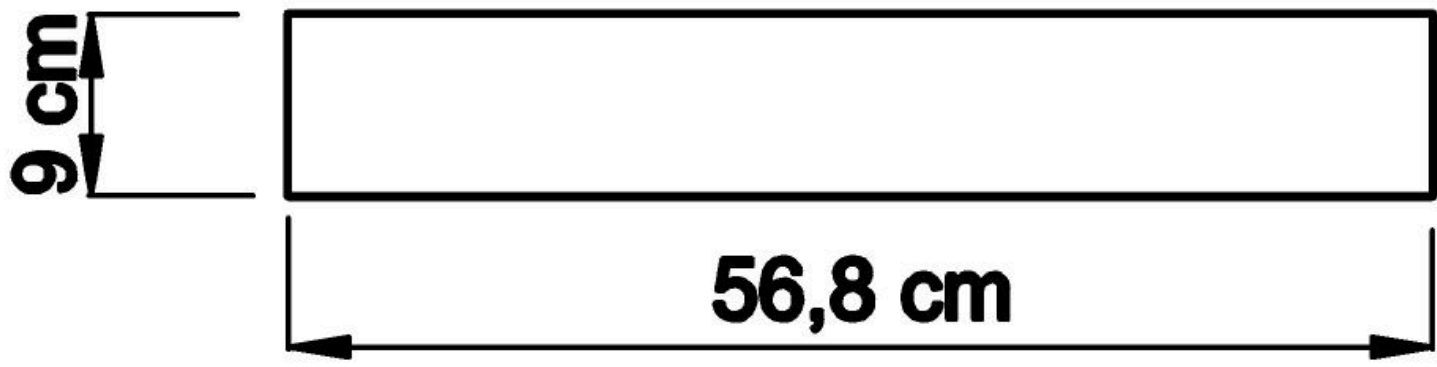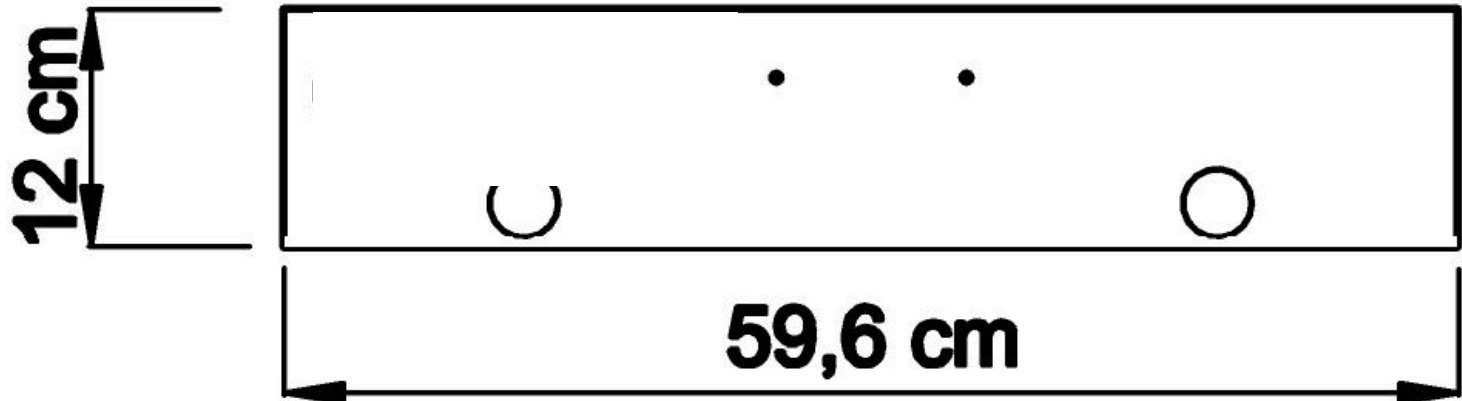
1x1 	2x1 	3x1 
4x1 	5x1 	6x1 
7x1 	8x1 Front (separate package) 	

COMPONENTS - FITTINGS



Please check you have all the fittings listed below

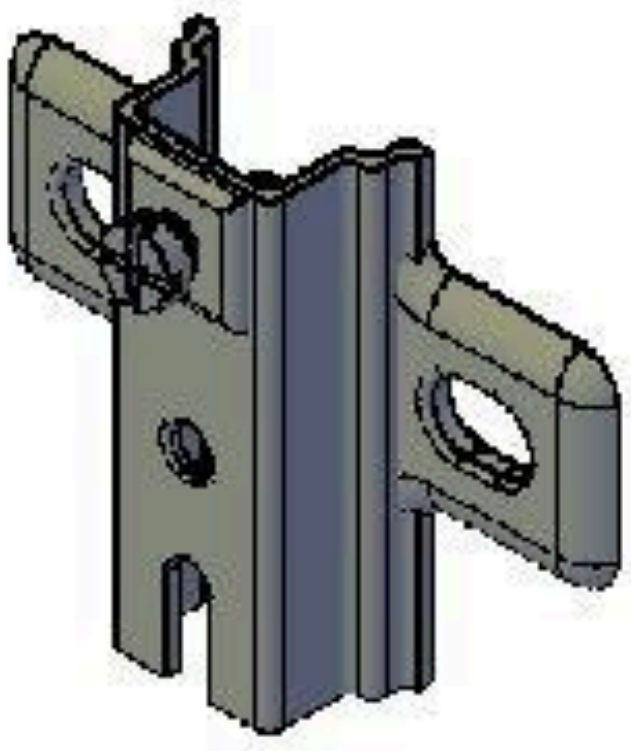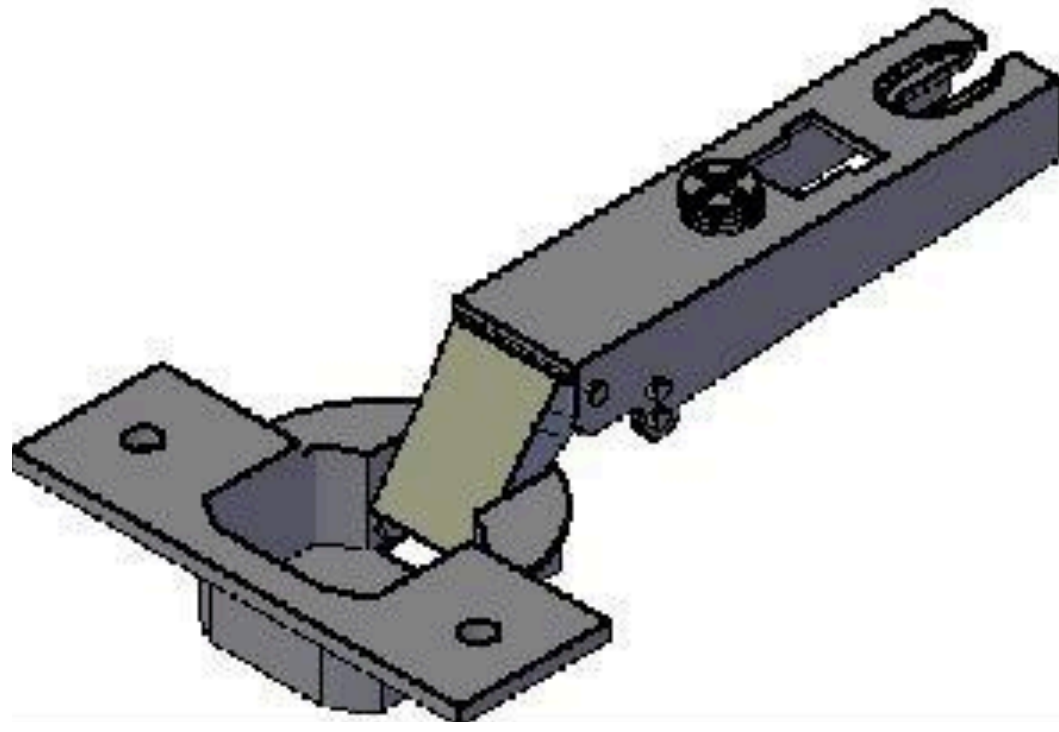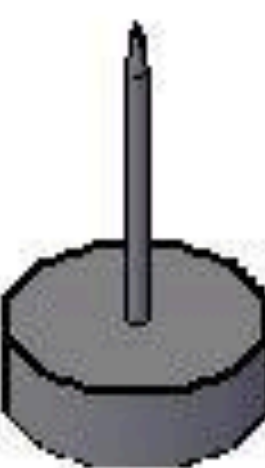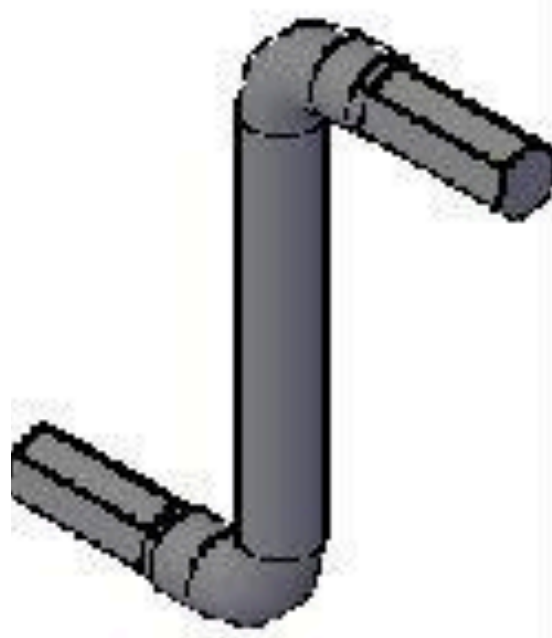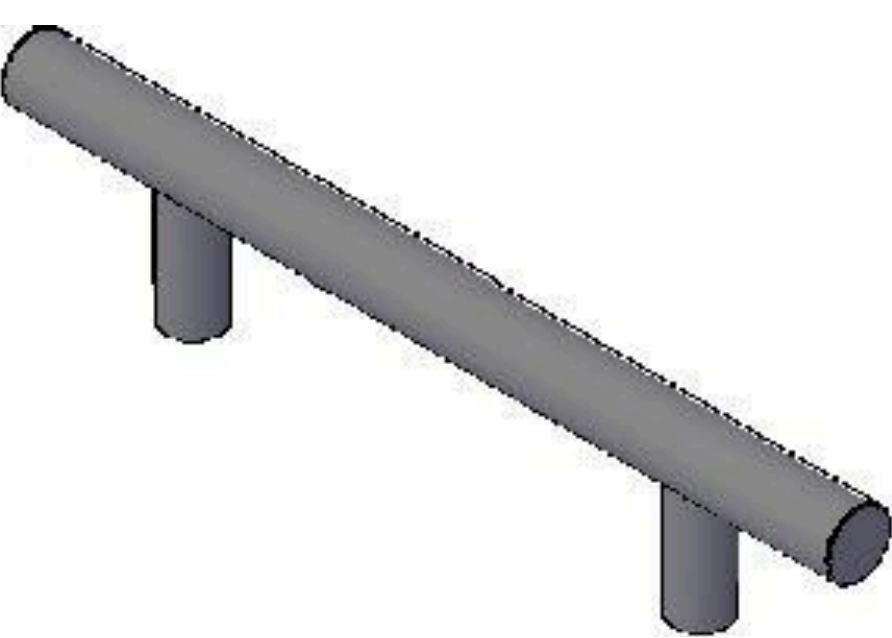O x4  ⌀ 7x16	F x2 	G2 x2 	! PAY ATTENTION: O AND F ATTACHED TO G2
E x5 	A x18 	Q7 x1 	C x10  ⌀ 7x50
S1 x10 	H5 x2  ⌀ 3.5x25	J9 x2  ⌀ 3x25	U7 x1 
H x4 US 031.03  ⌀ 3.5x13	W x16 		

Ruler - Use this ruler to help correctly identify the screws


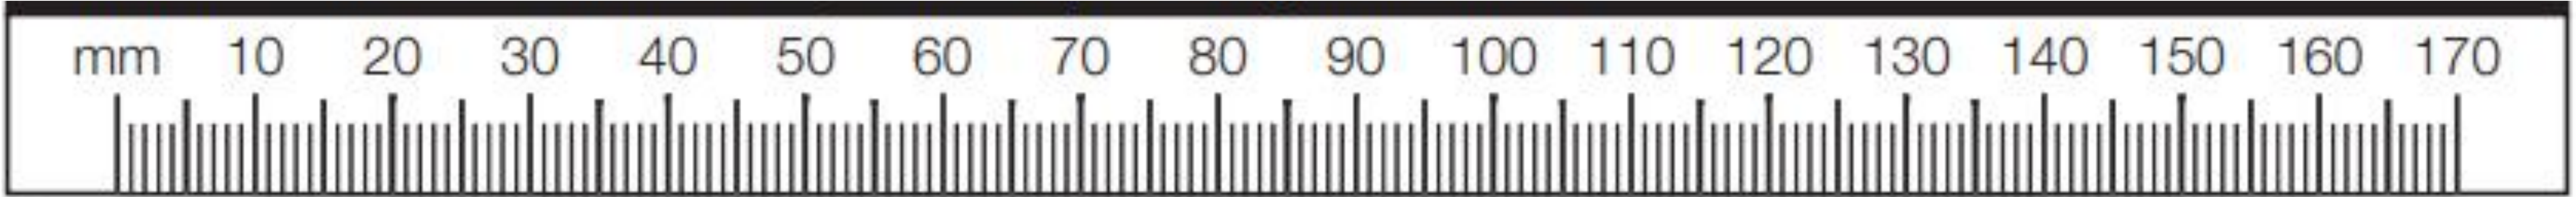


STEP - 1

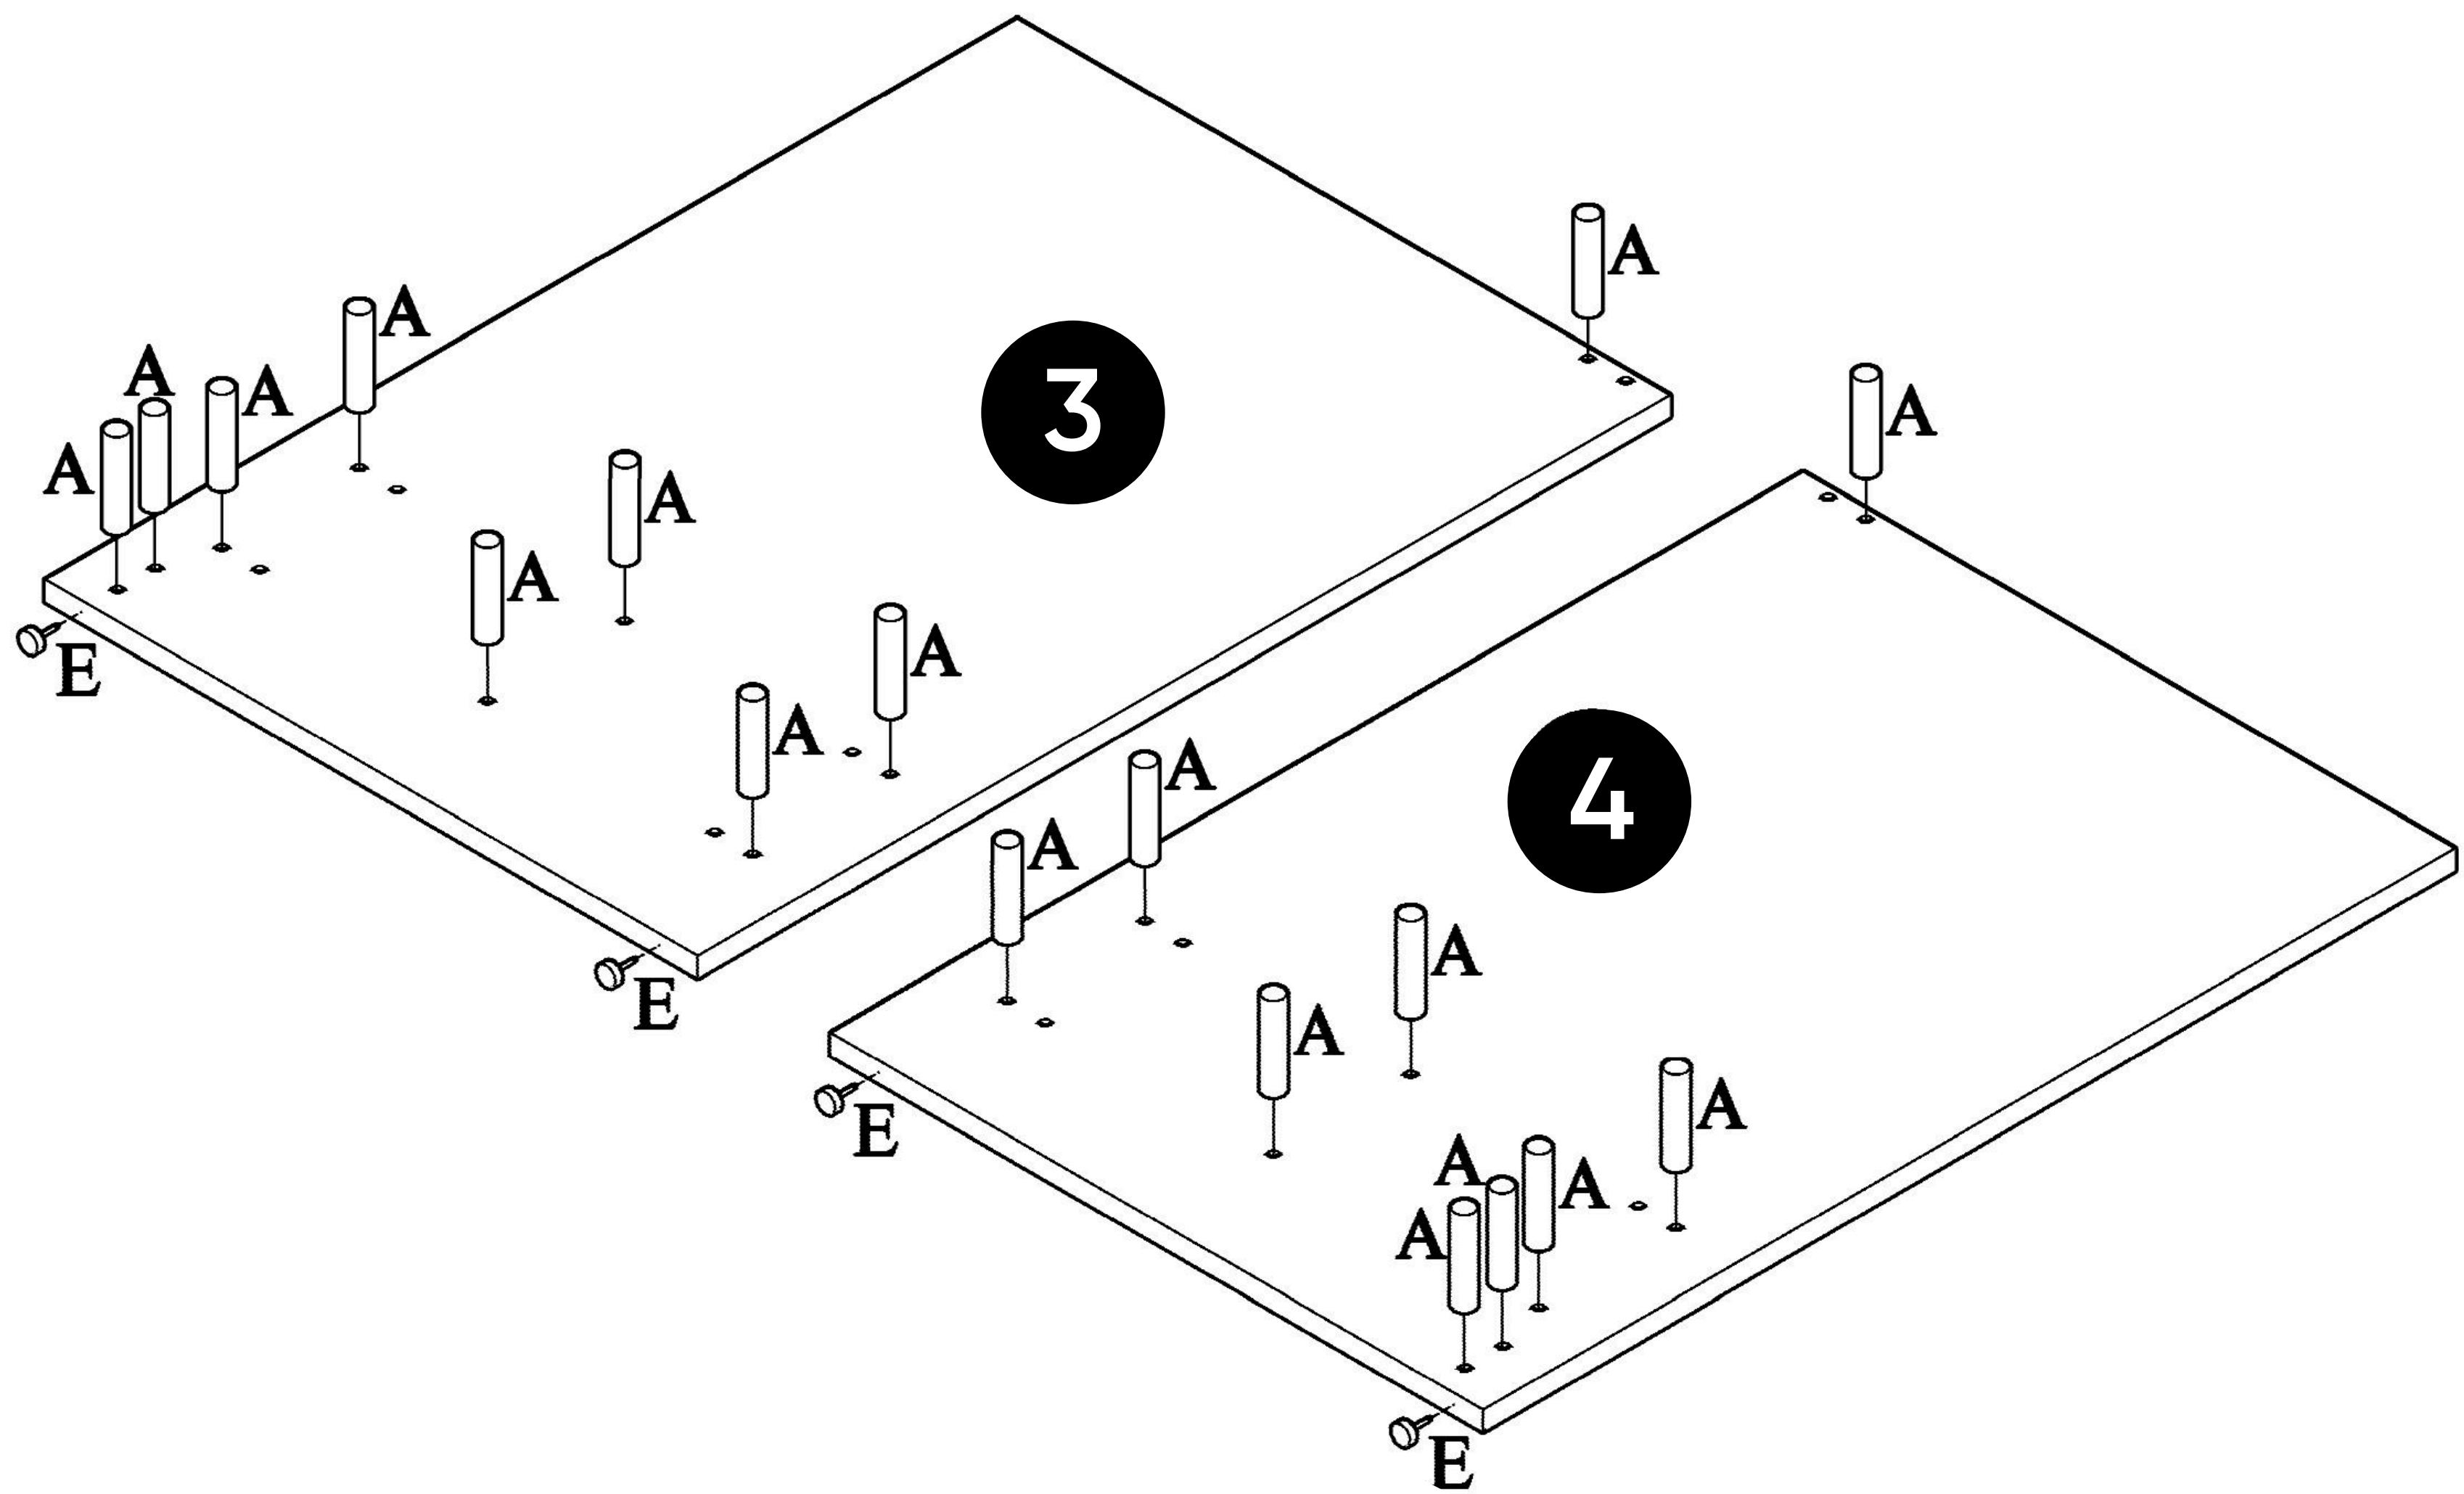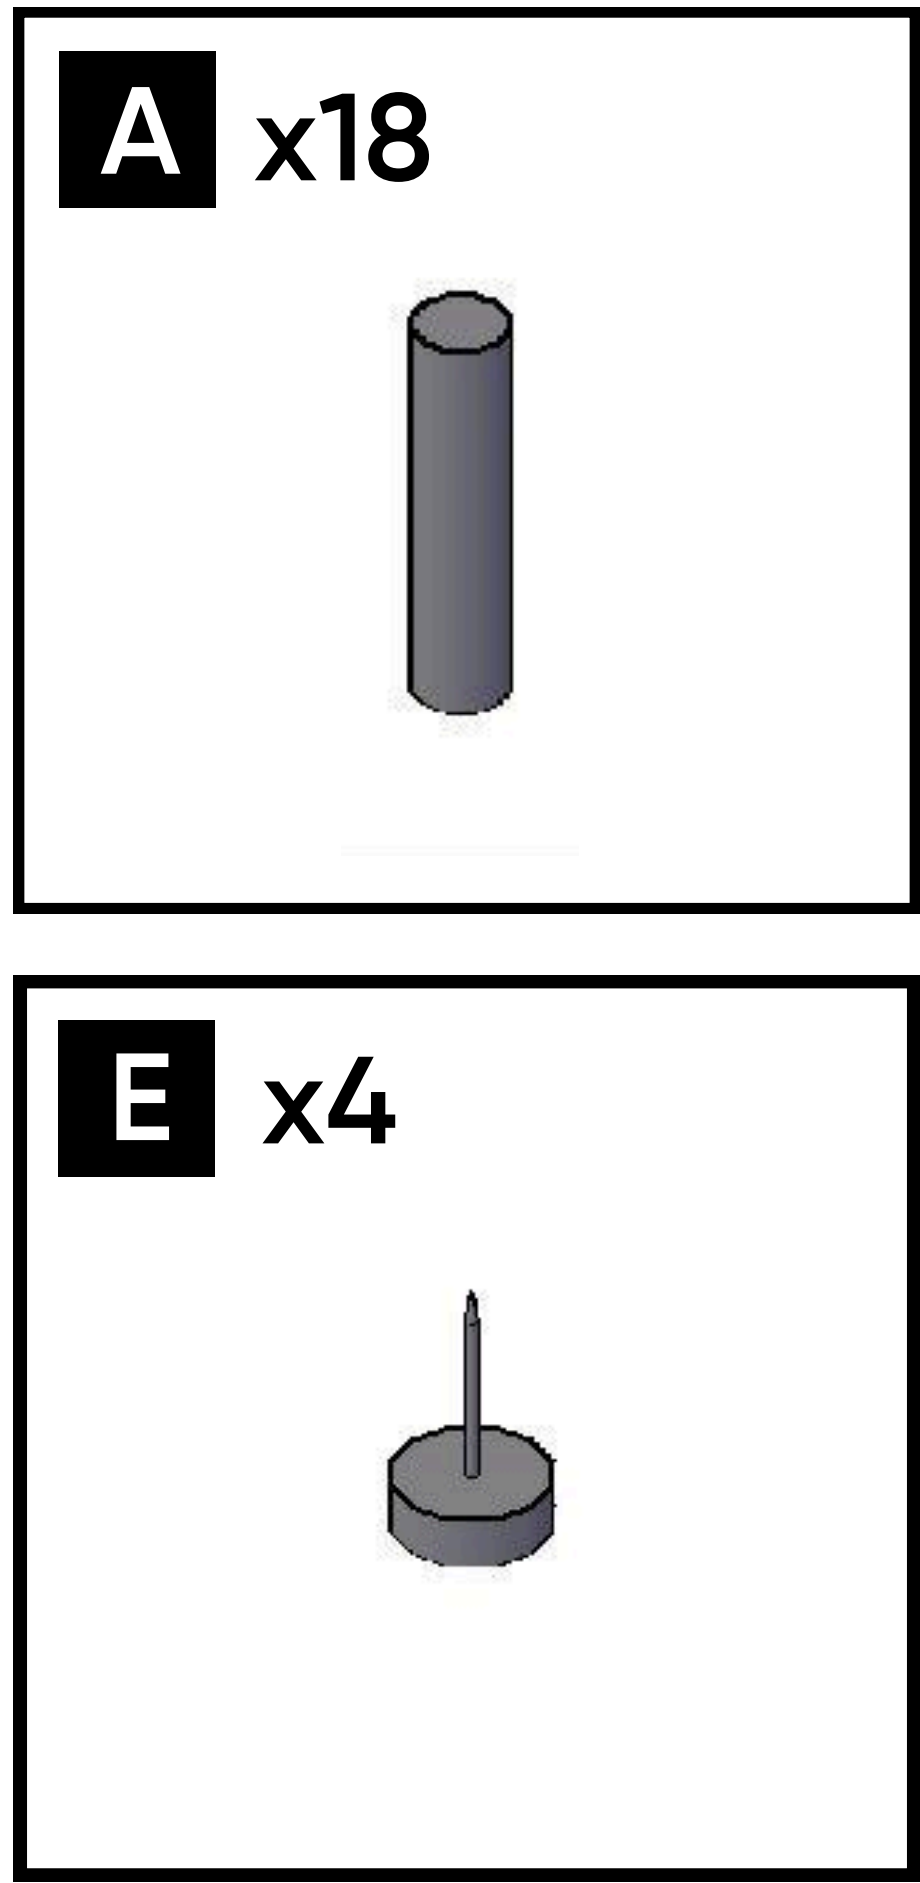


STEP - 2

! PAY ATTENTION: O ATTACHED TO F

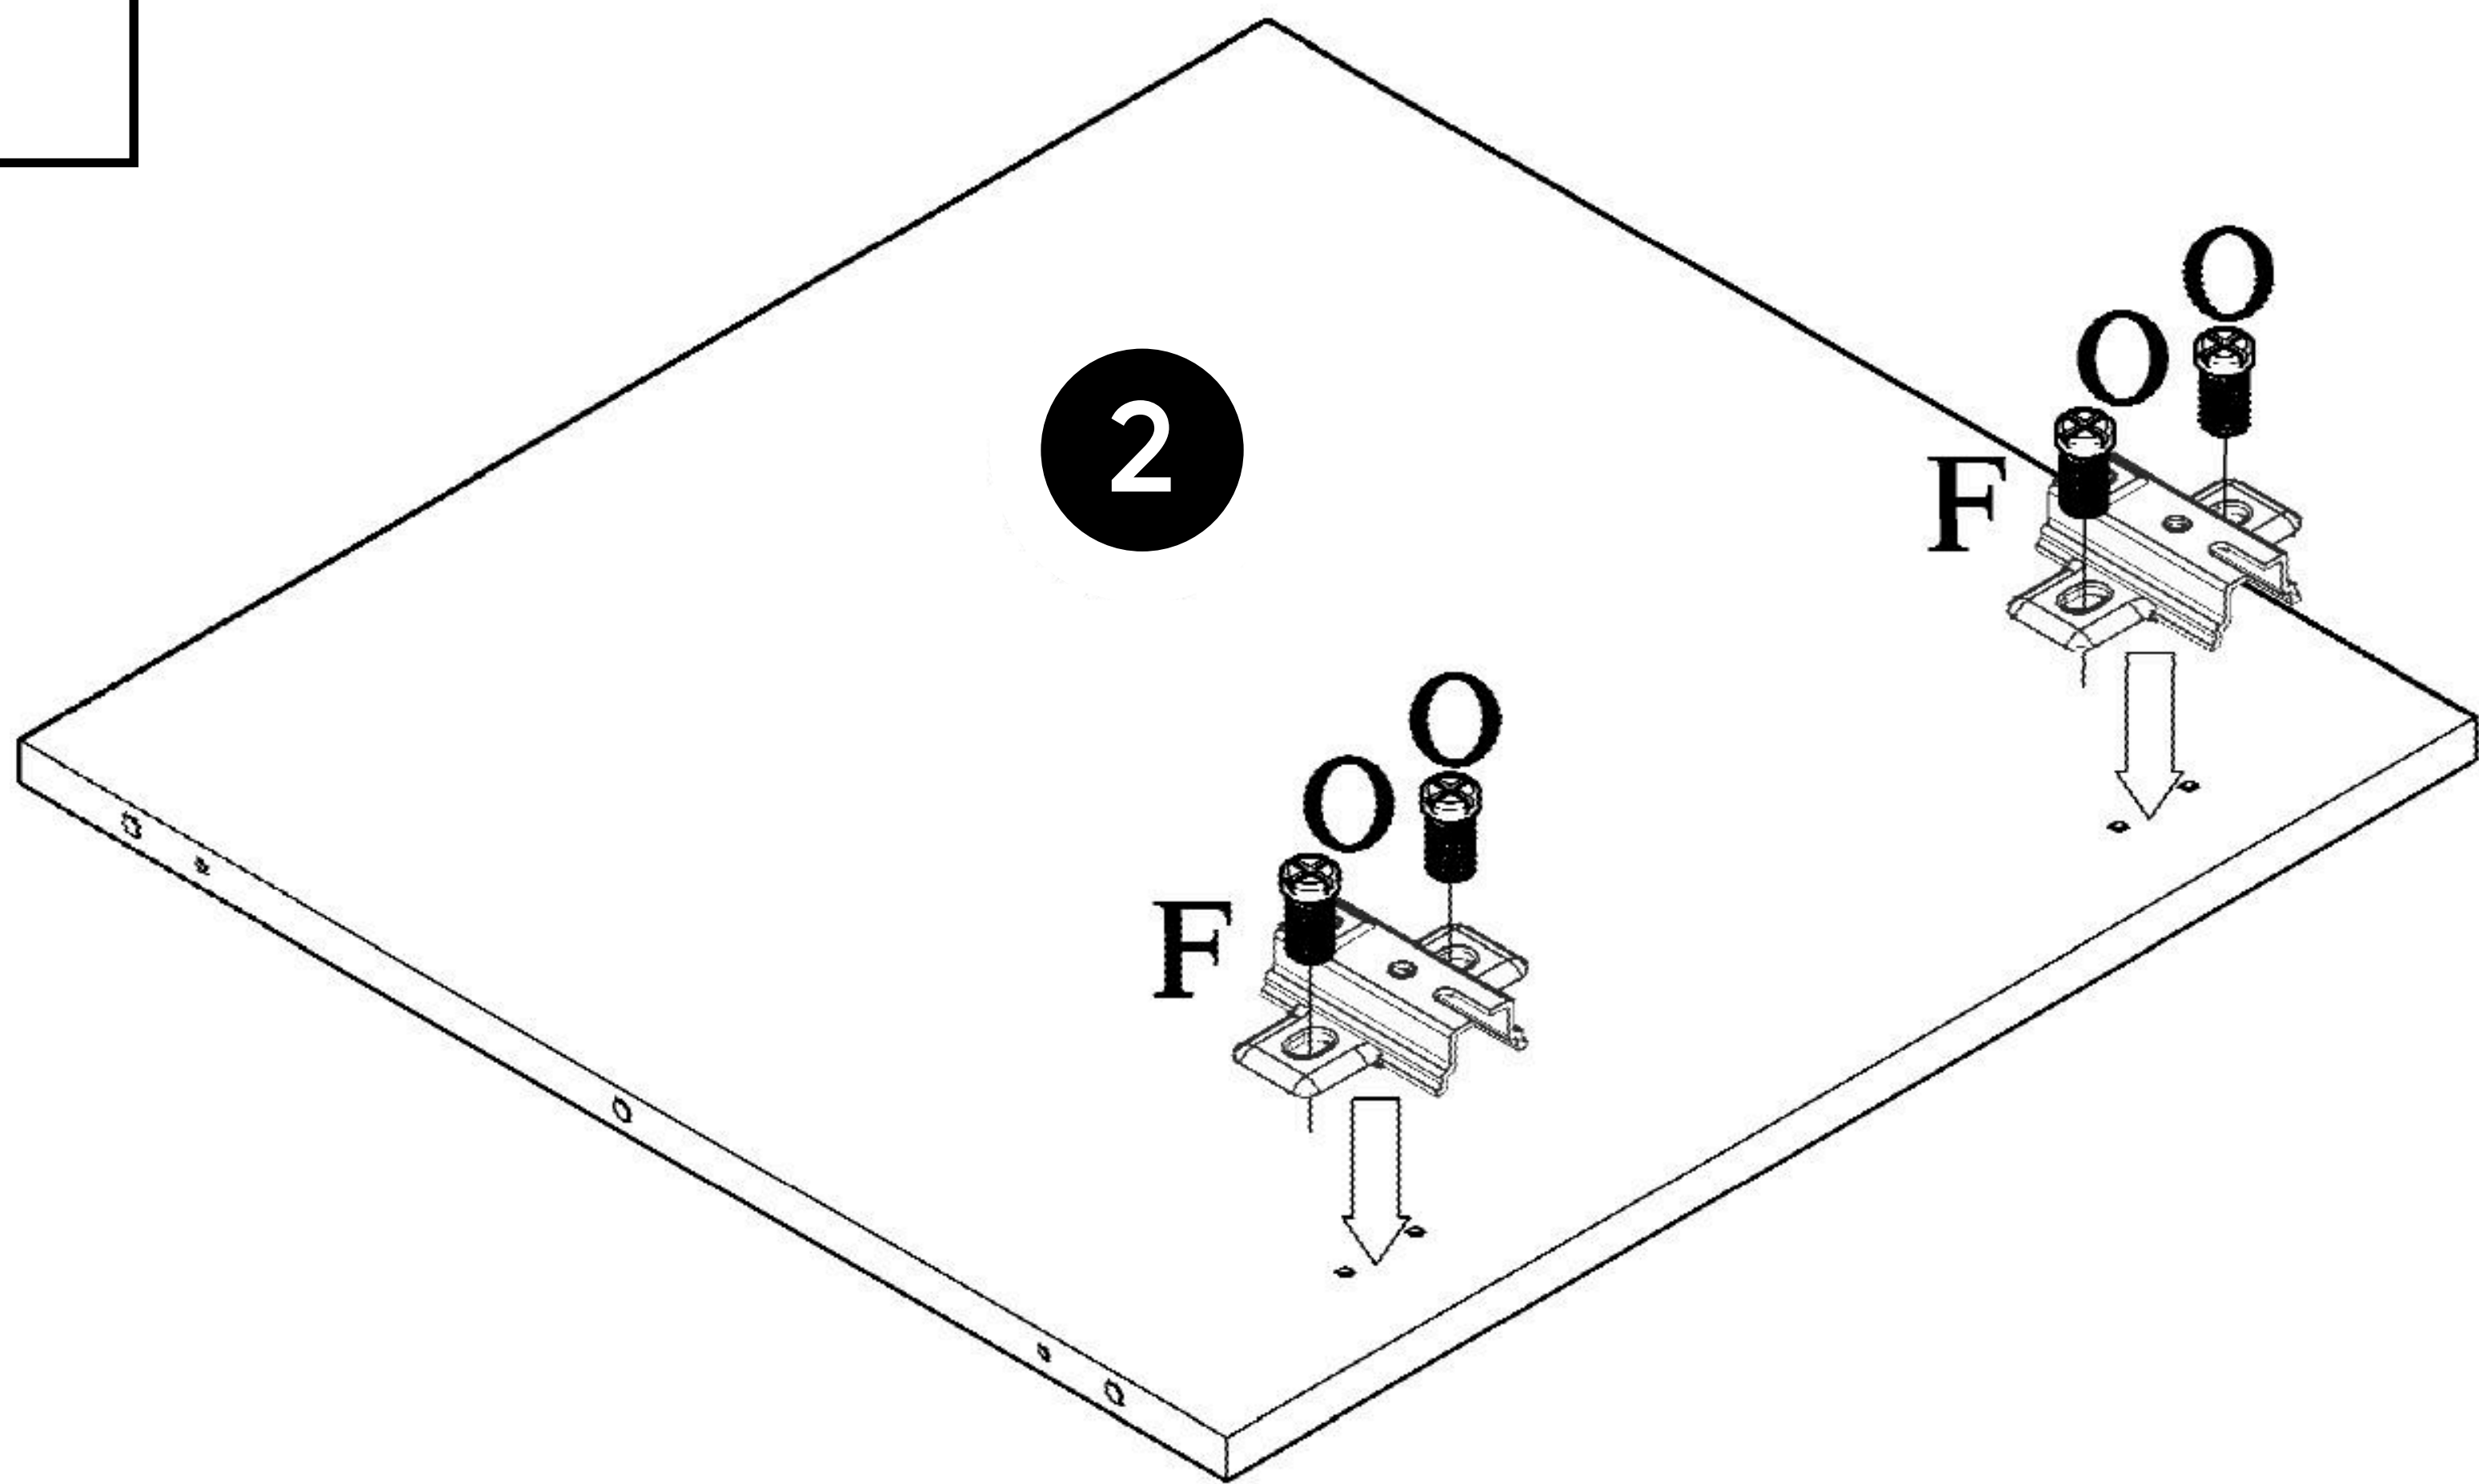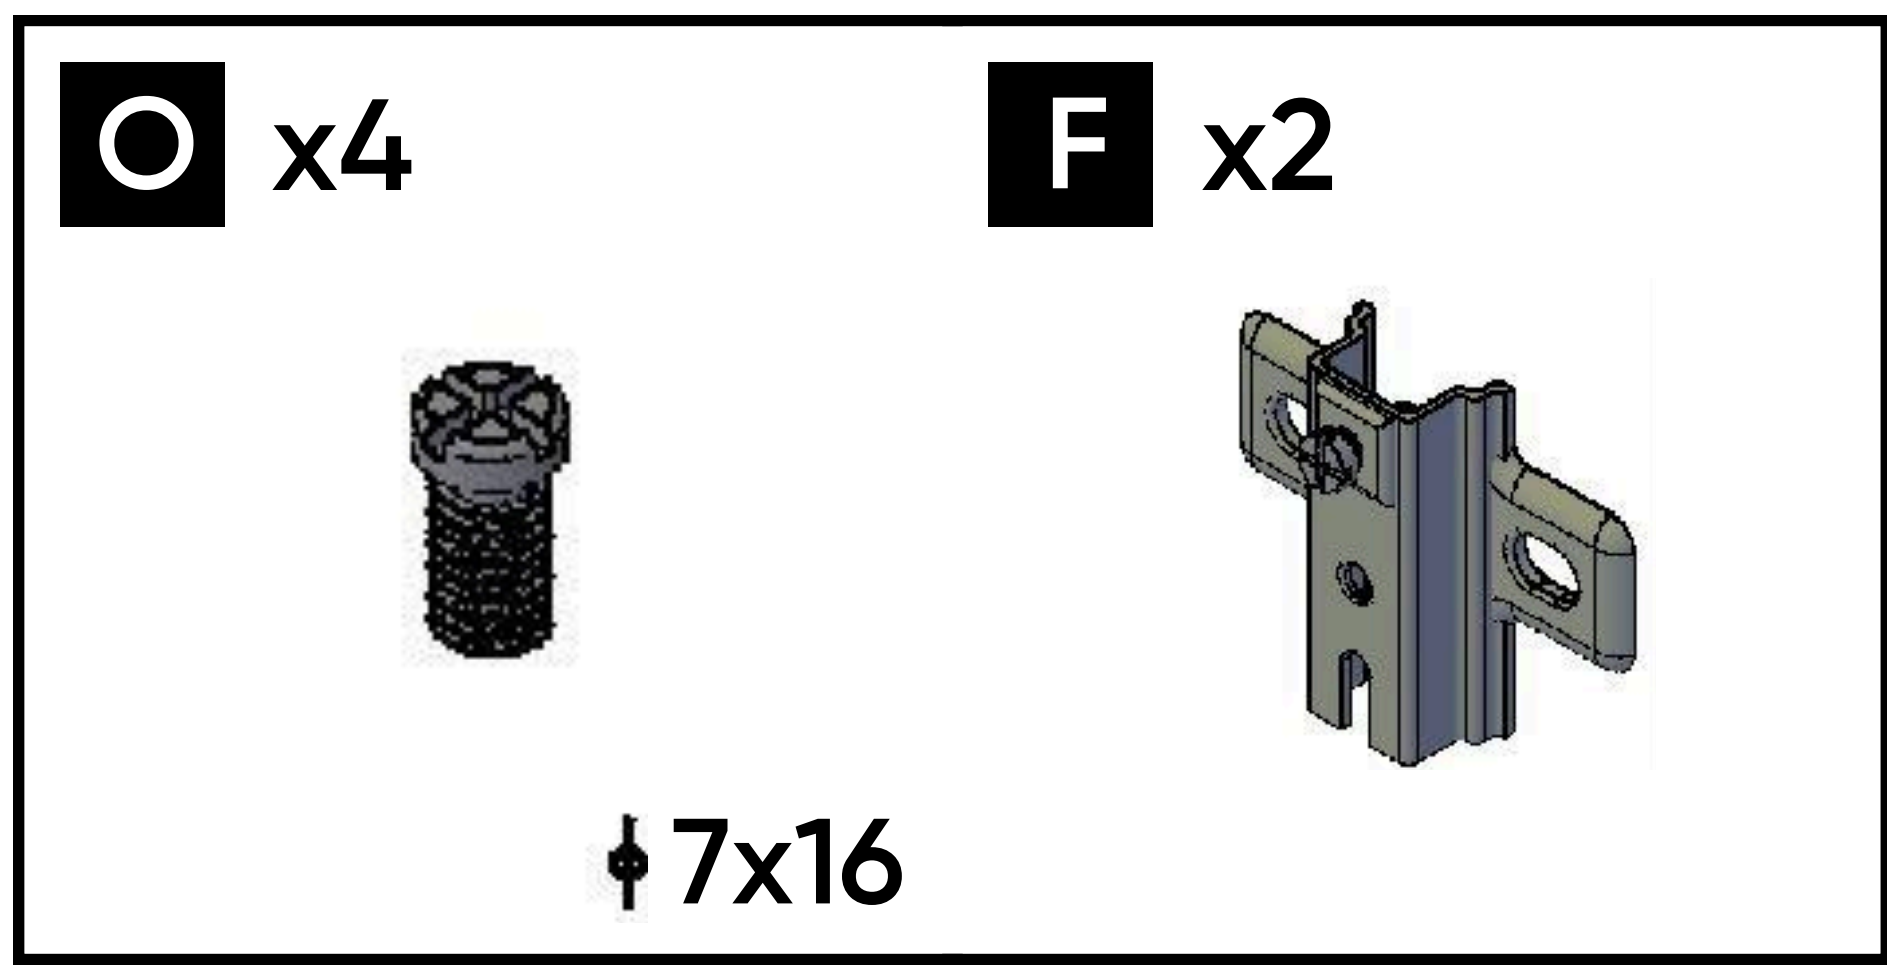


STEP - 3

Q7 x1

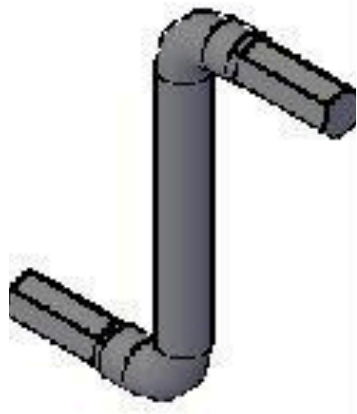

E x1

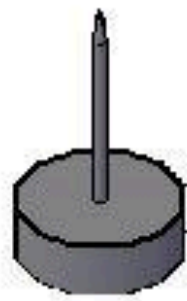



C x10




7x50

S1 x10




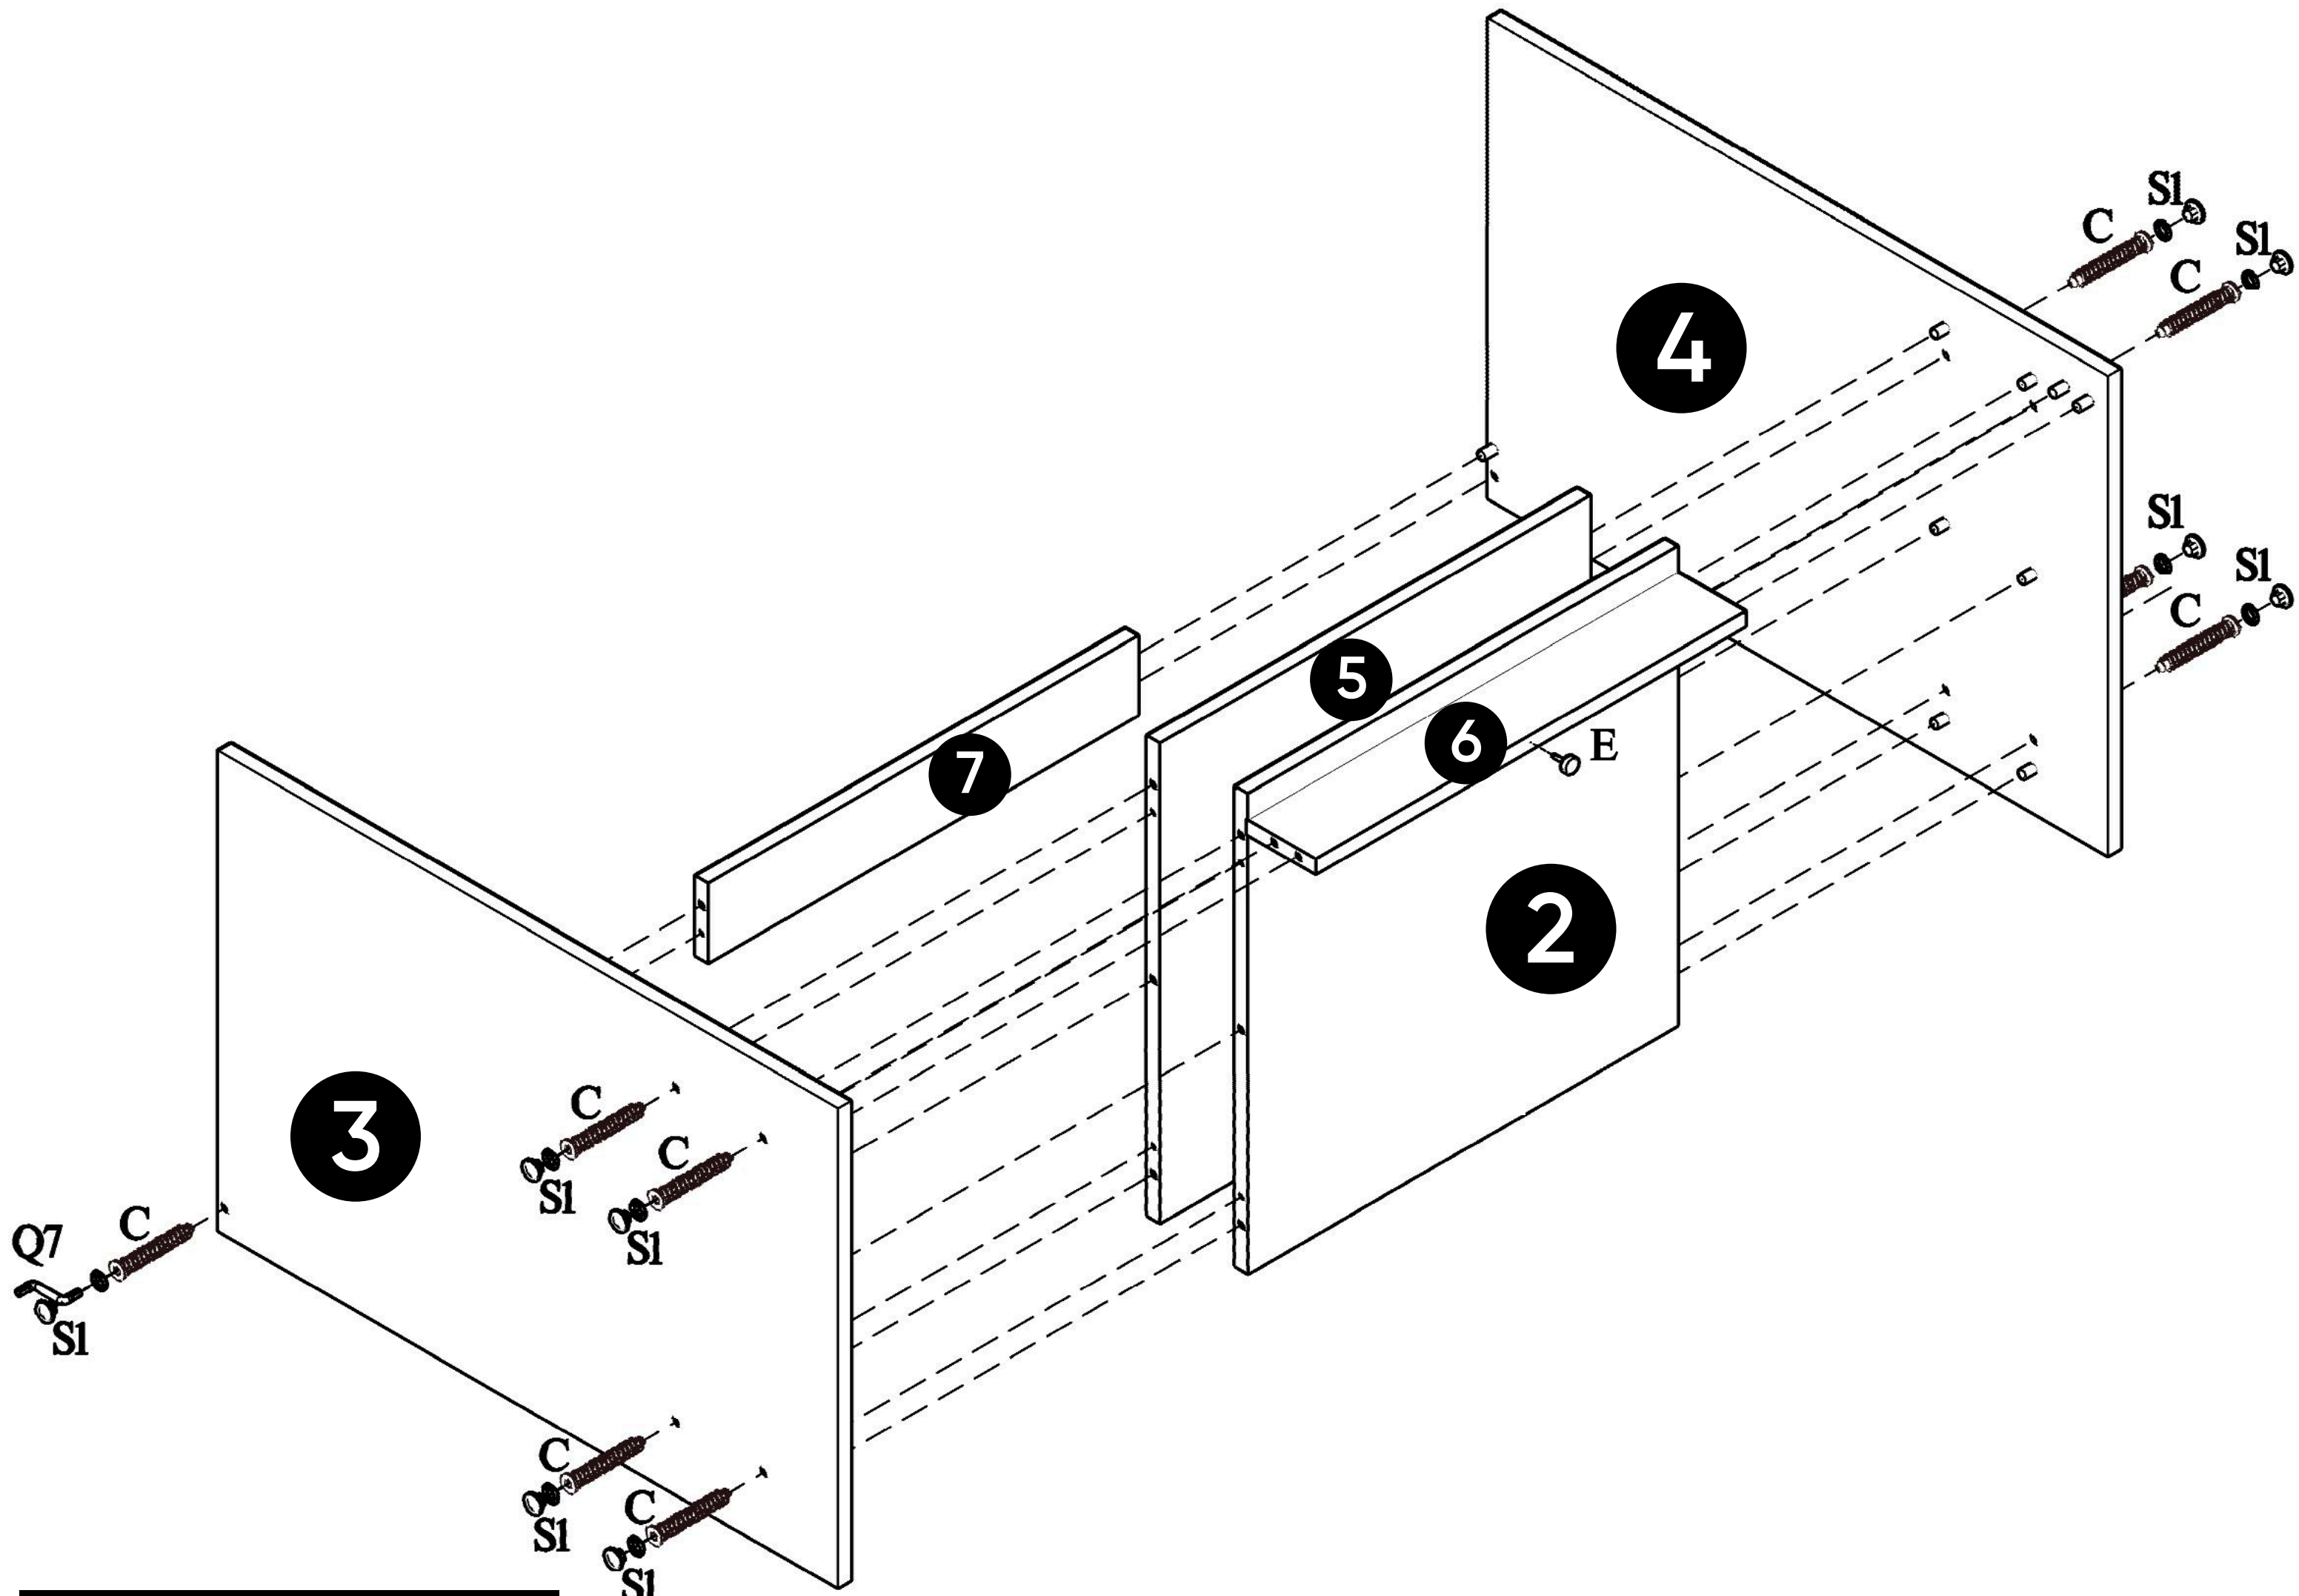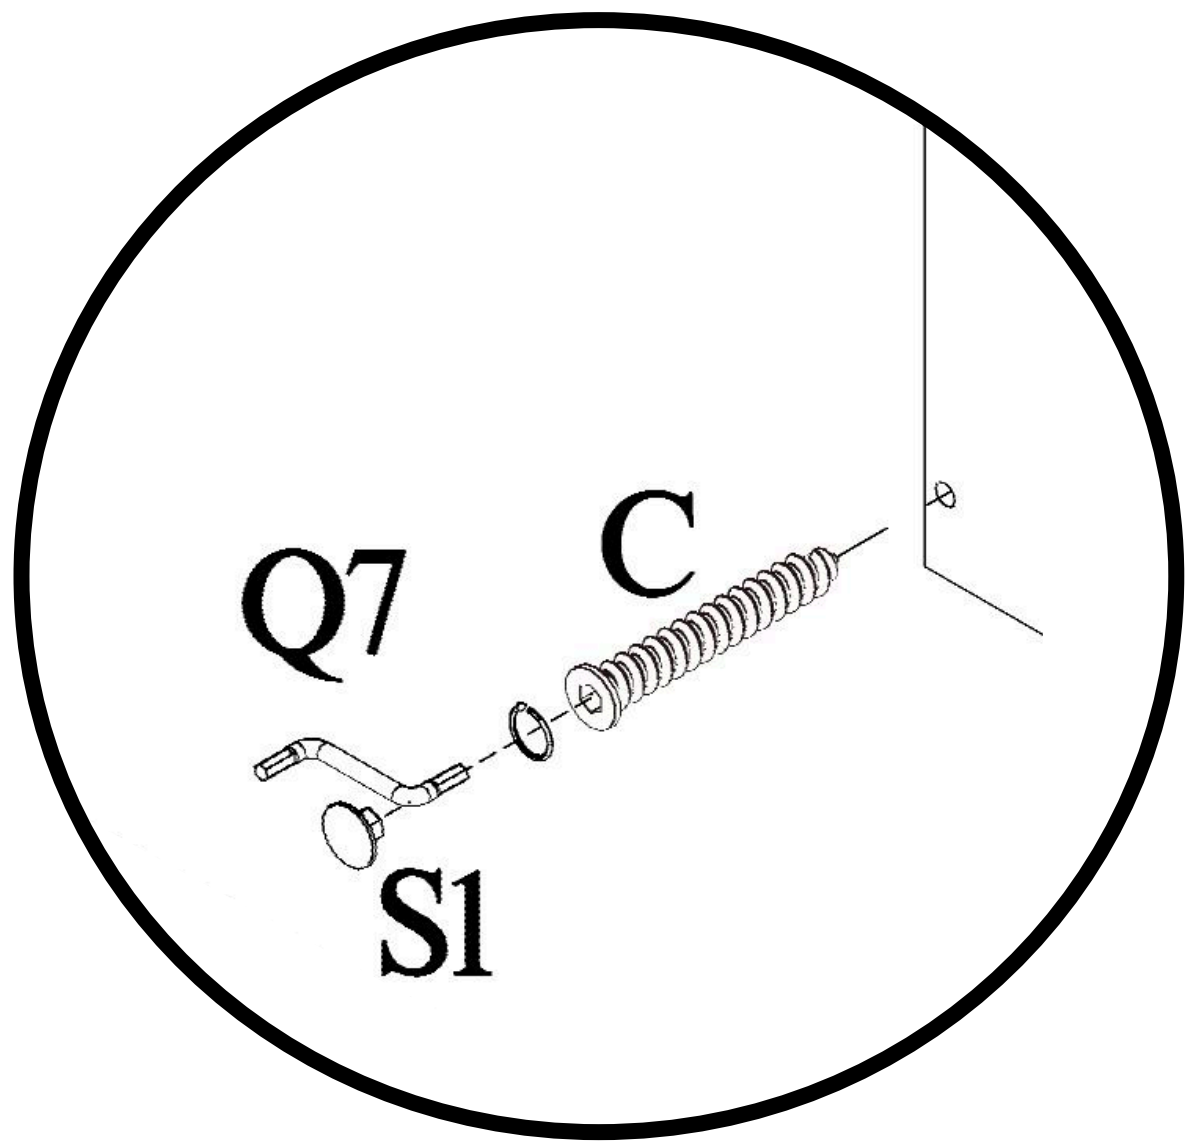


STEP - 4

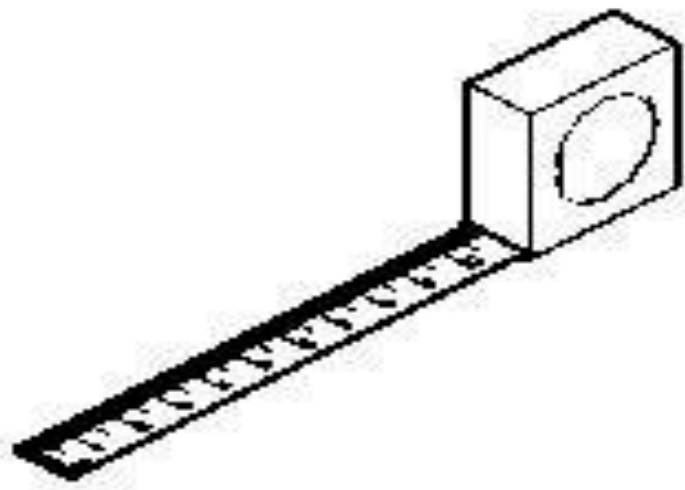



Rule

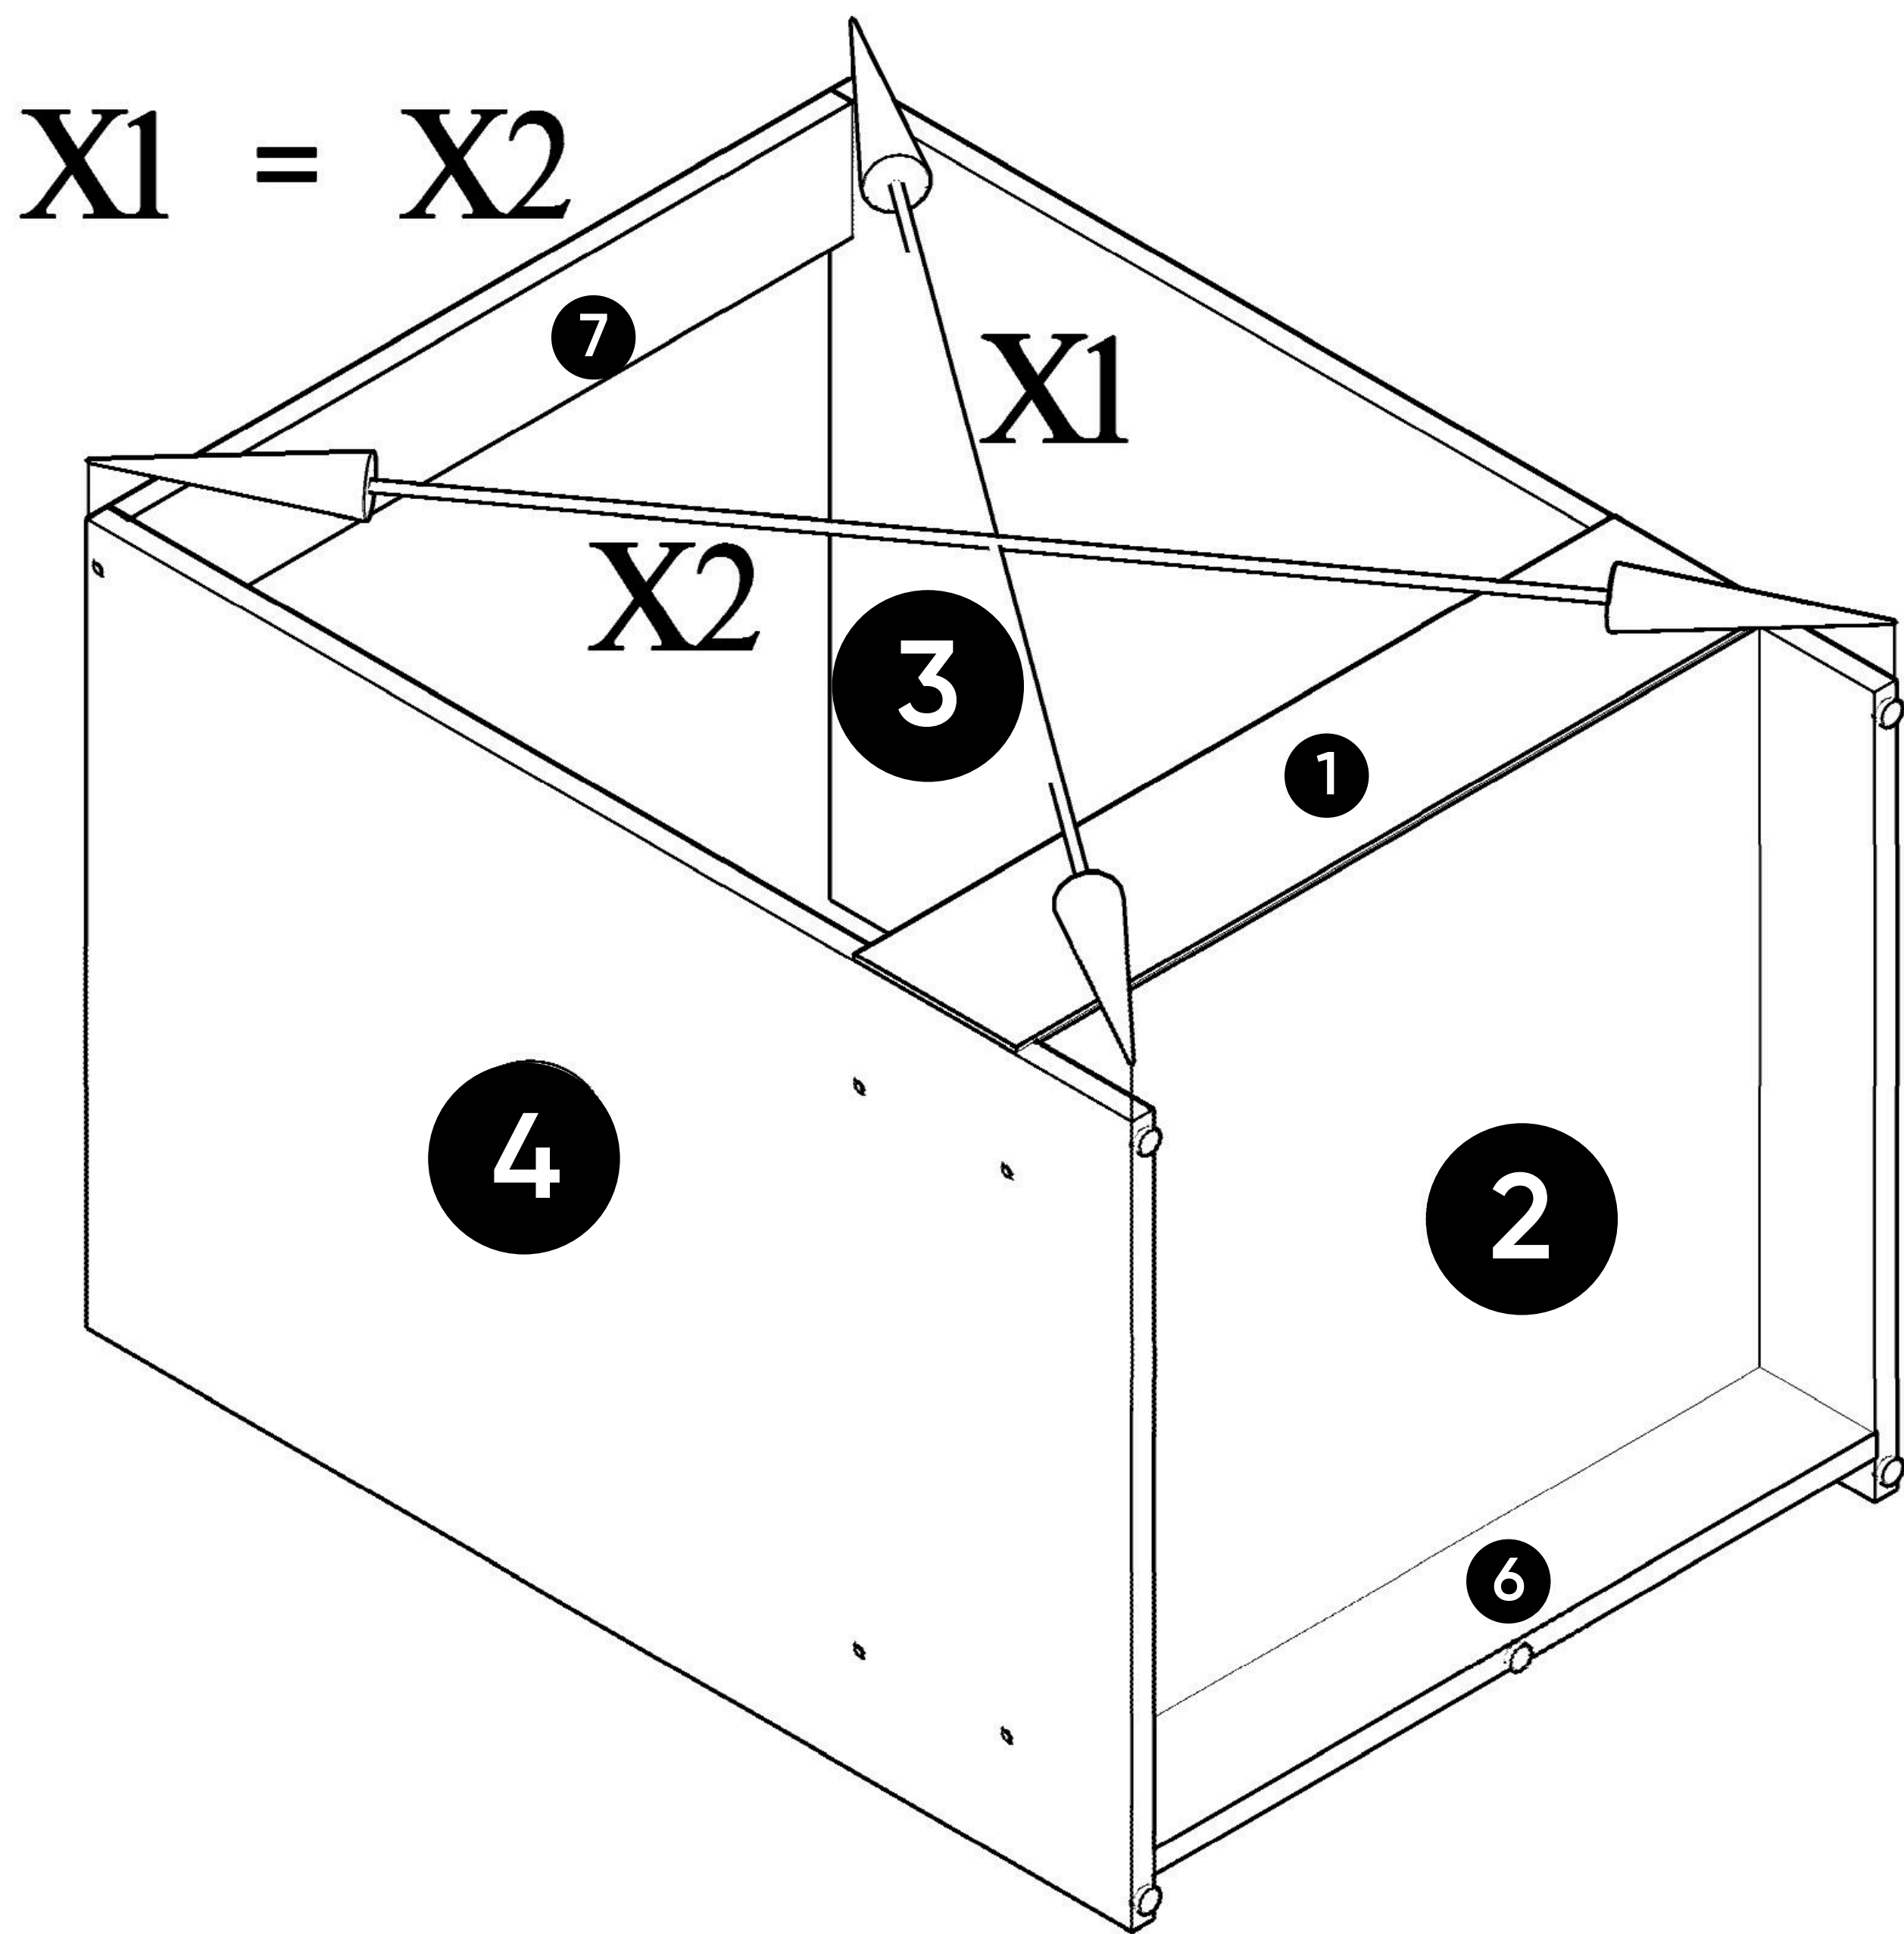



STEP - 5

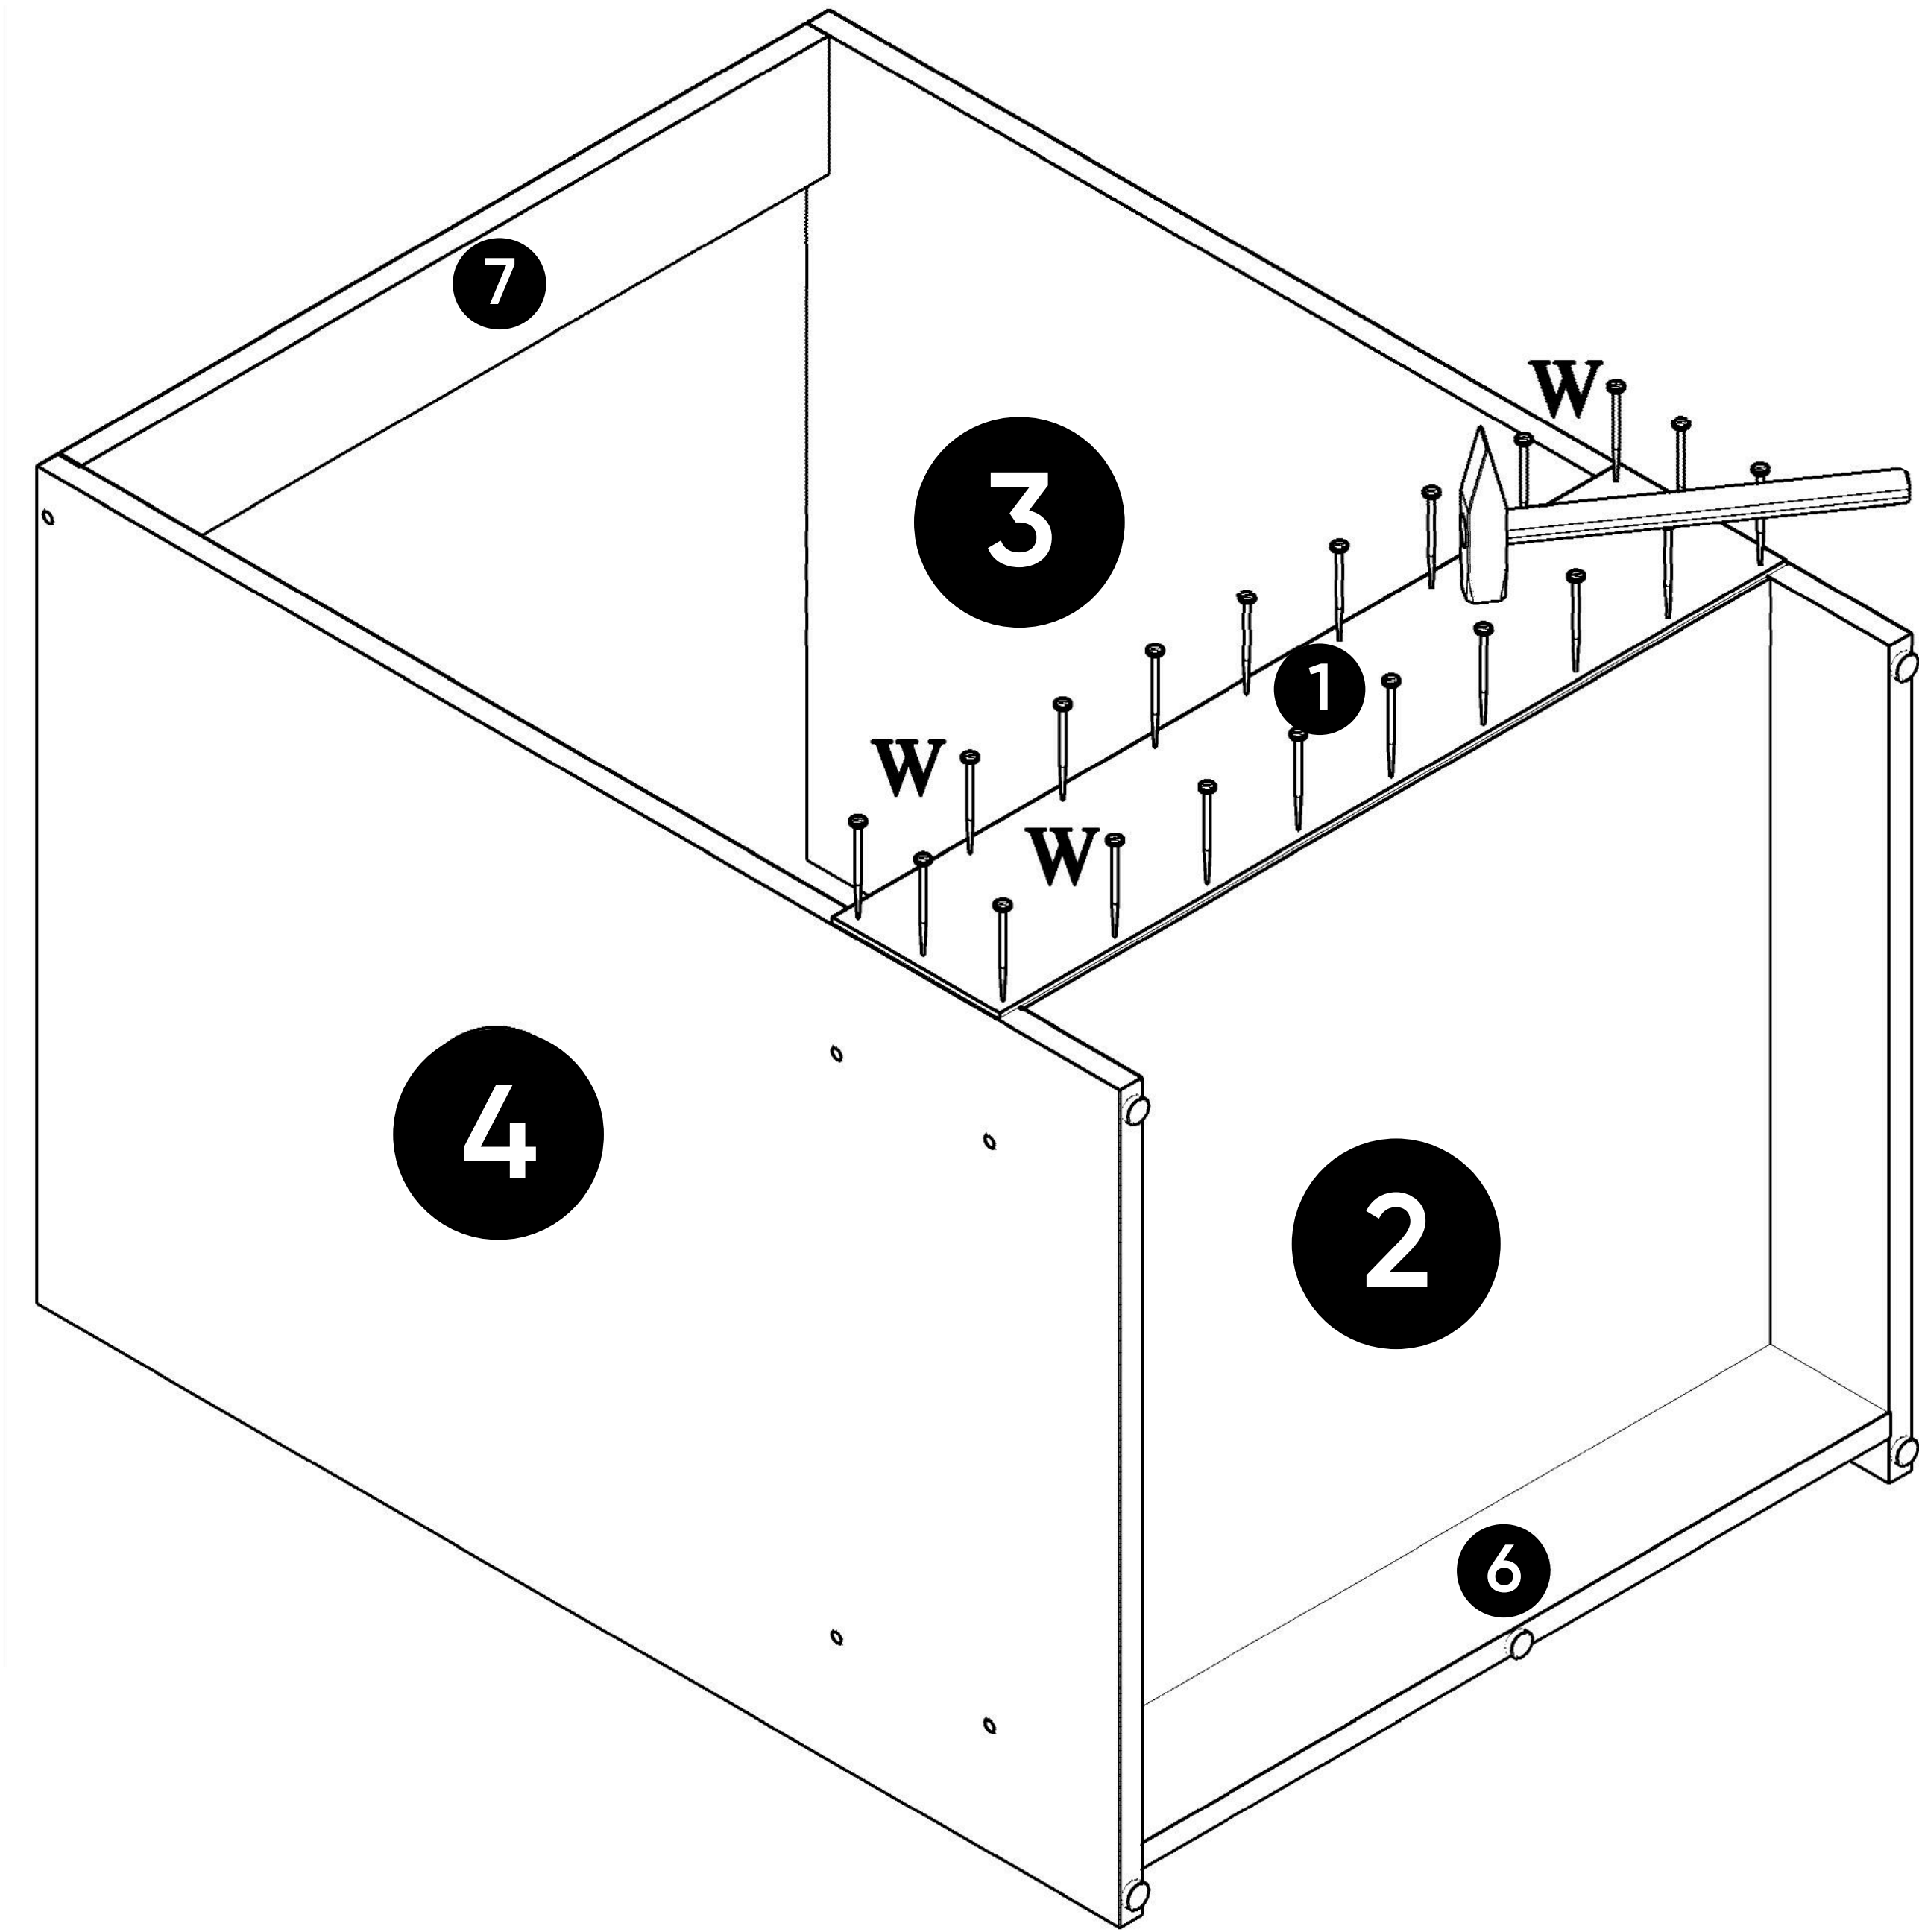

STEP - 6

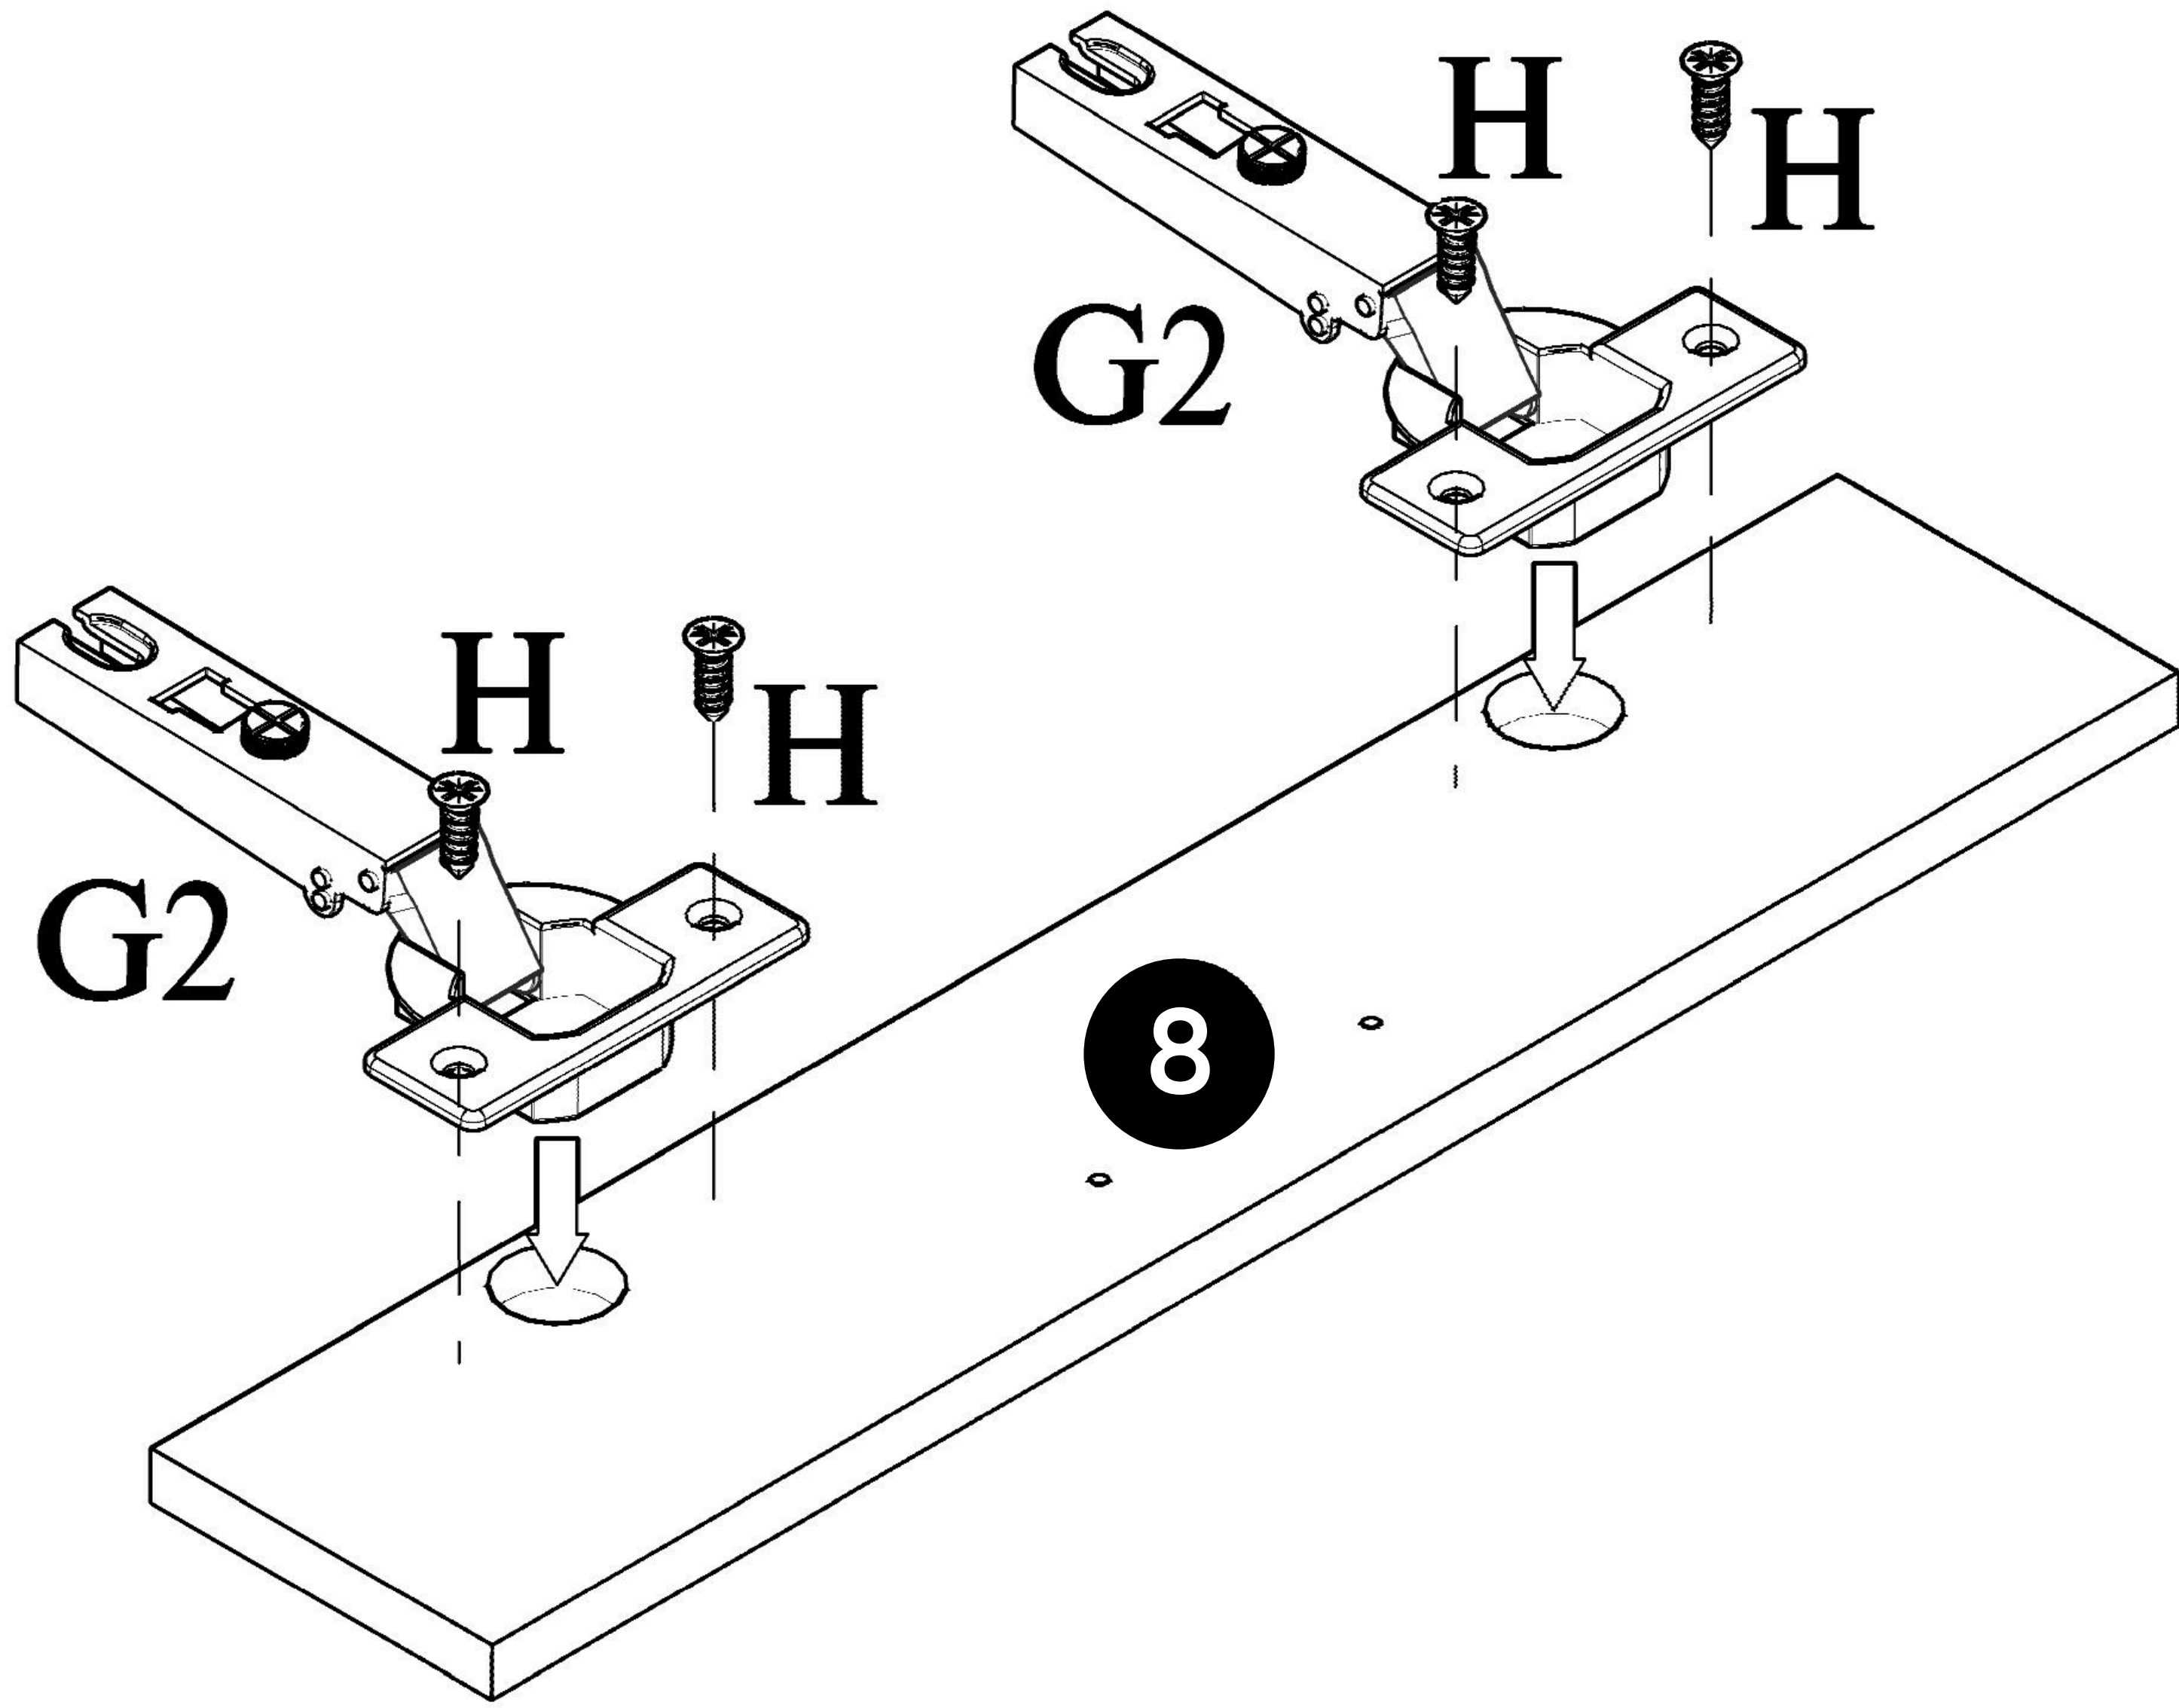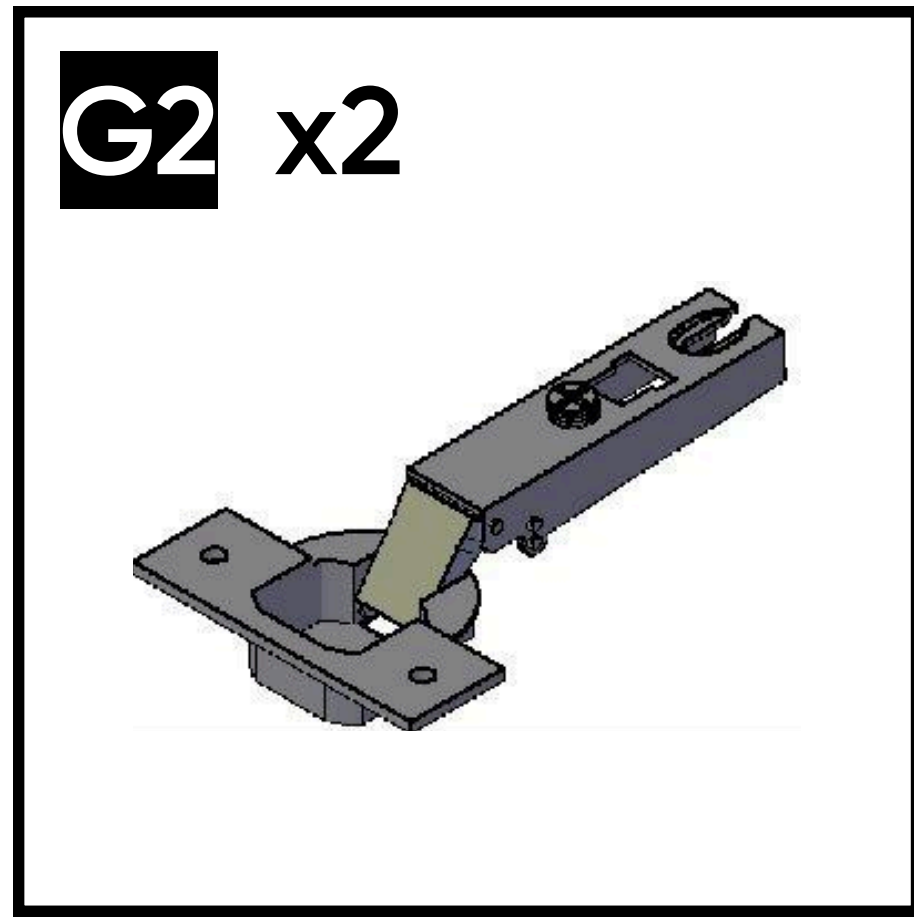

STEP - 7

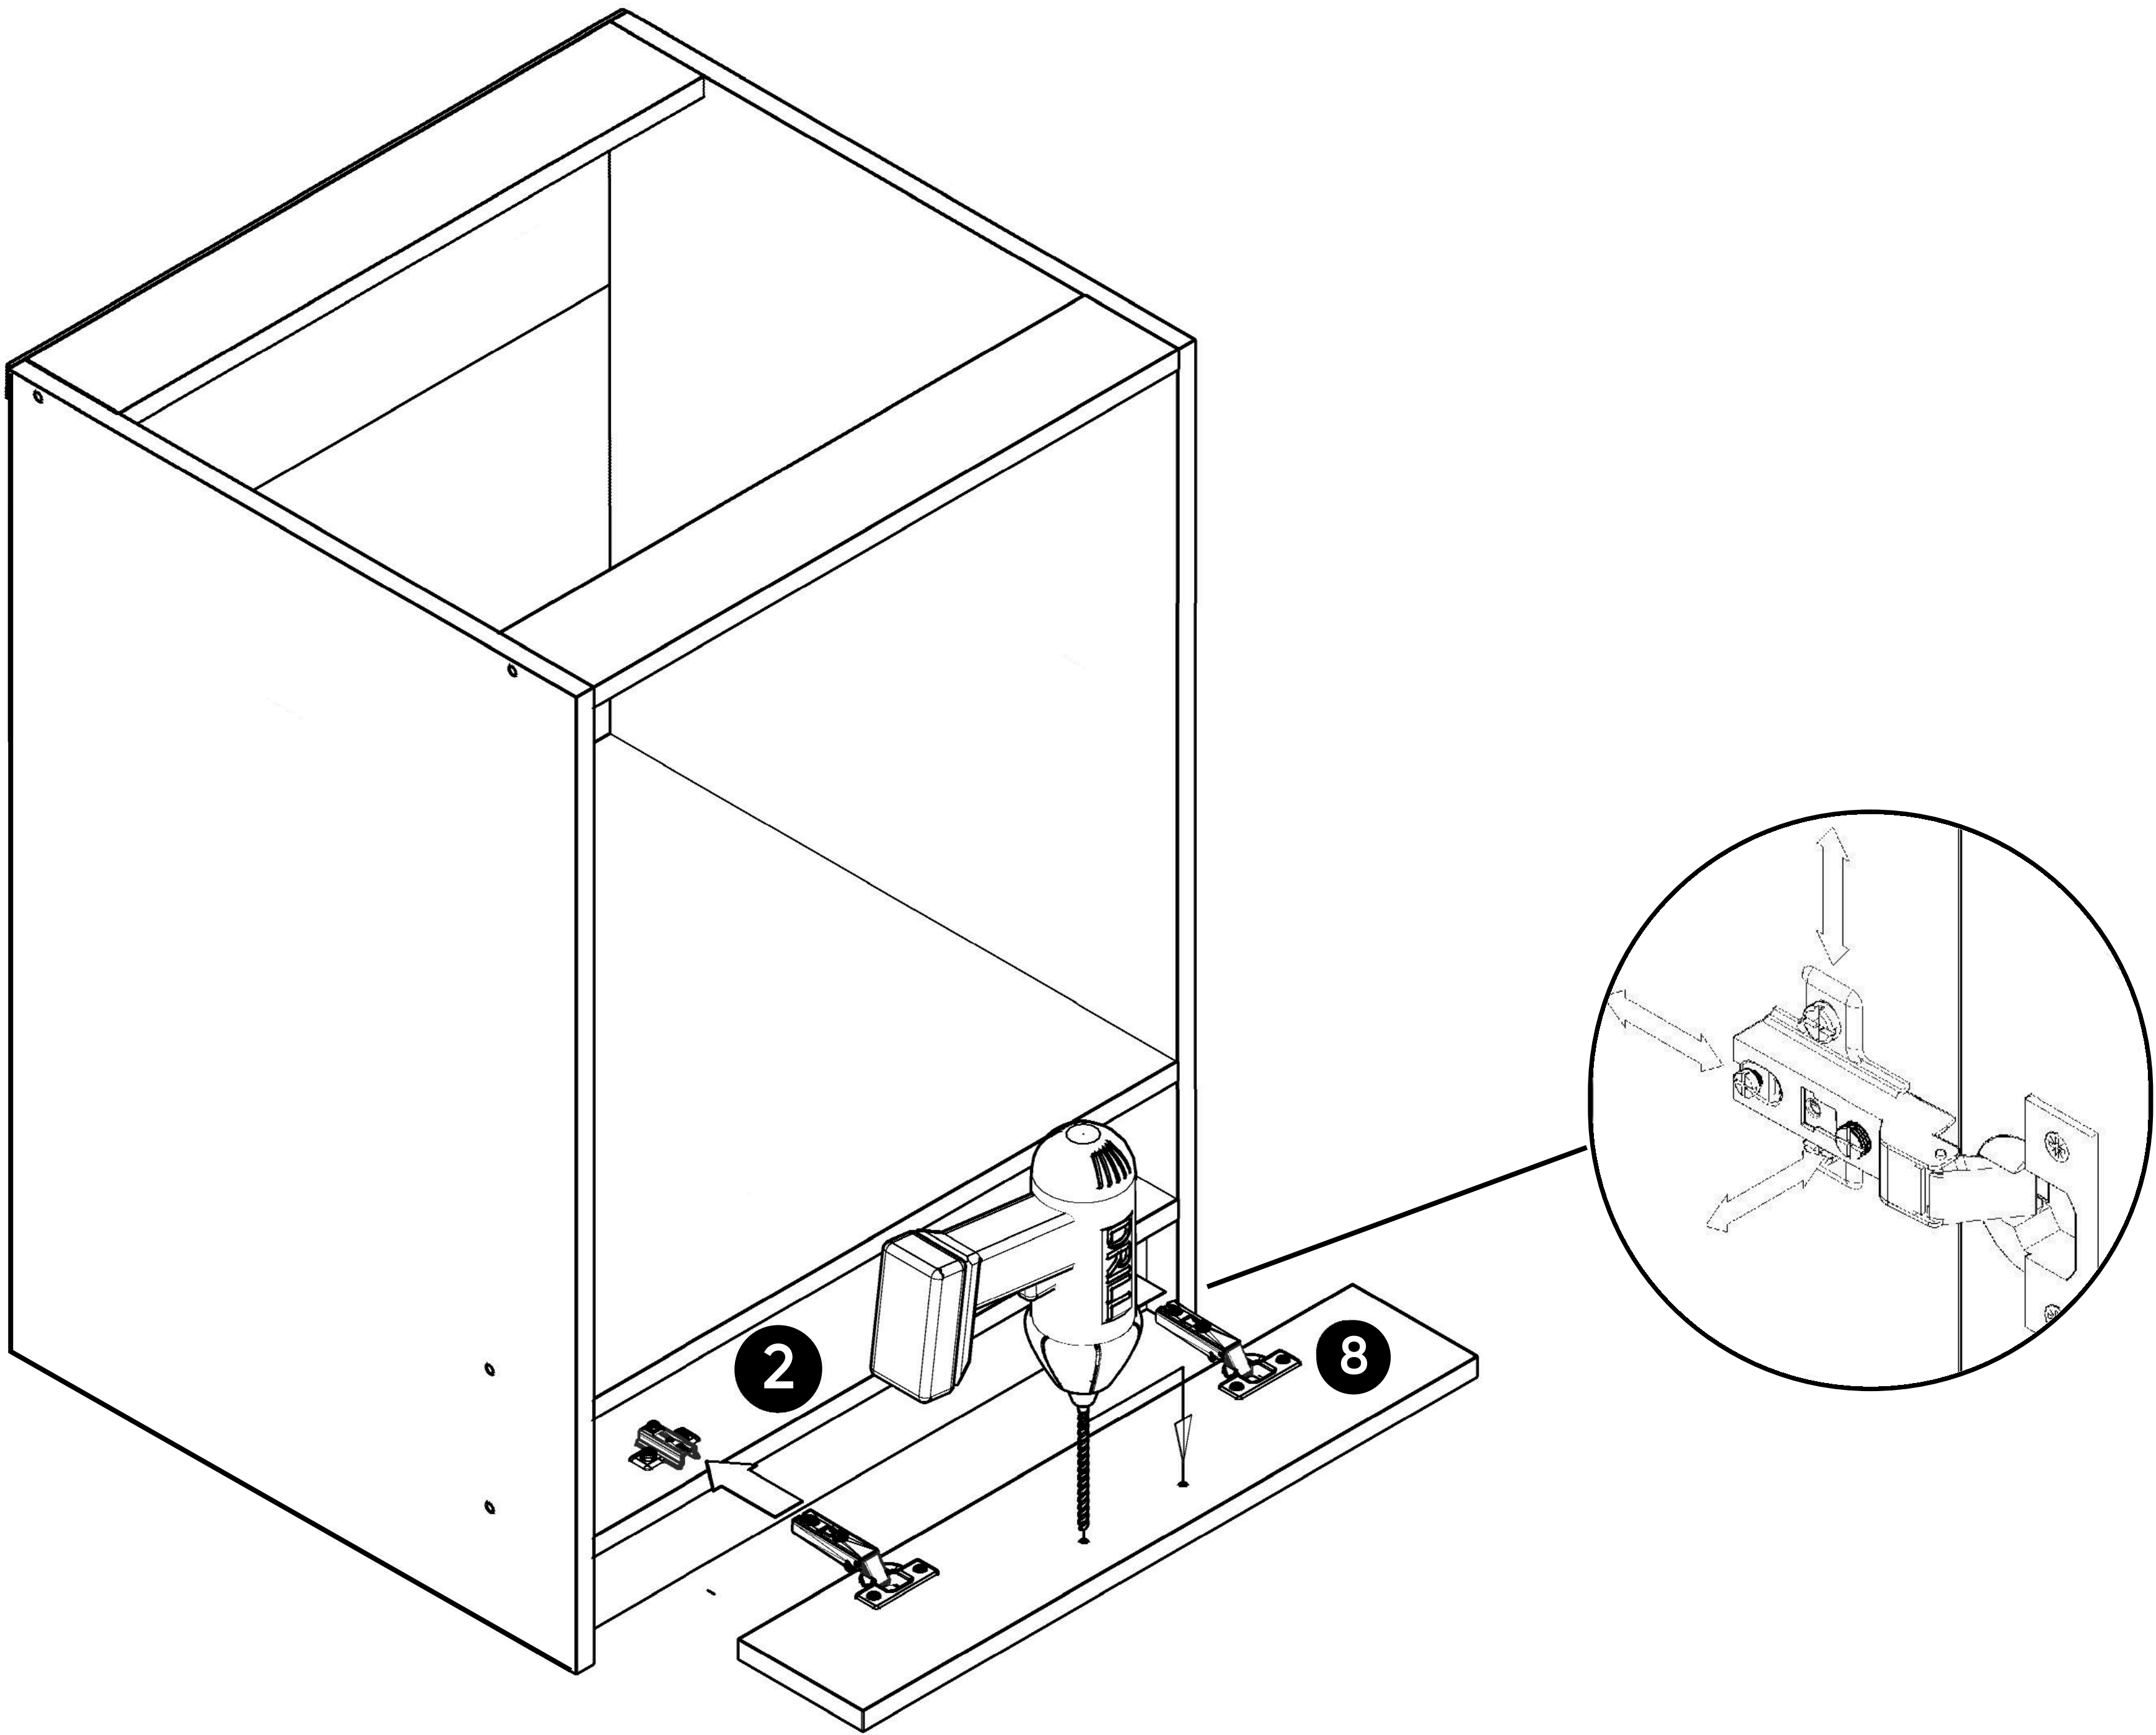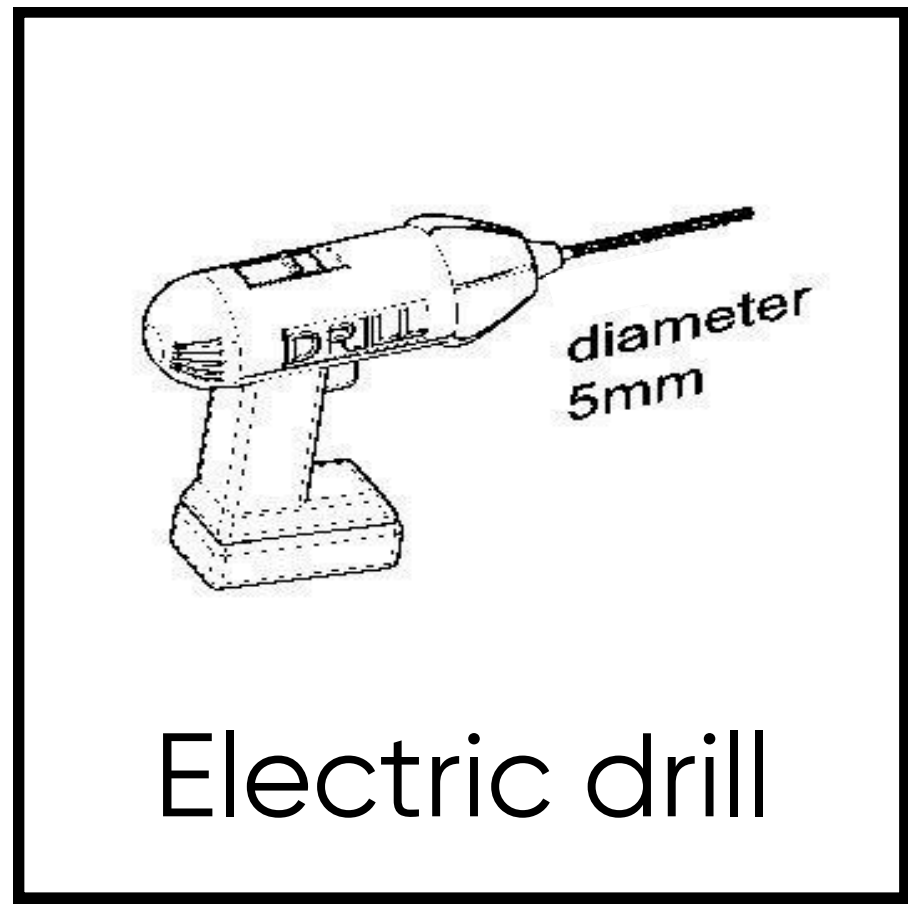

STEP - 8

