



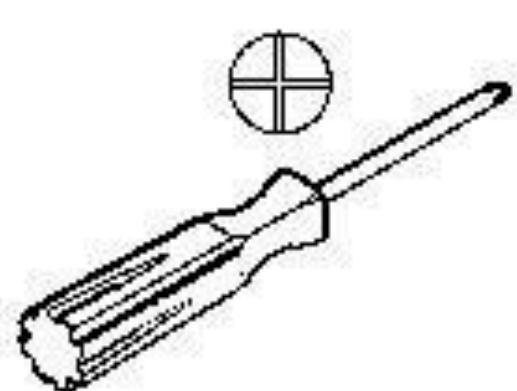


ASSEMBLY INSTRUCTIONS

KITCHEN BASE UNIT 500MM


MODEL B500

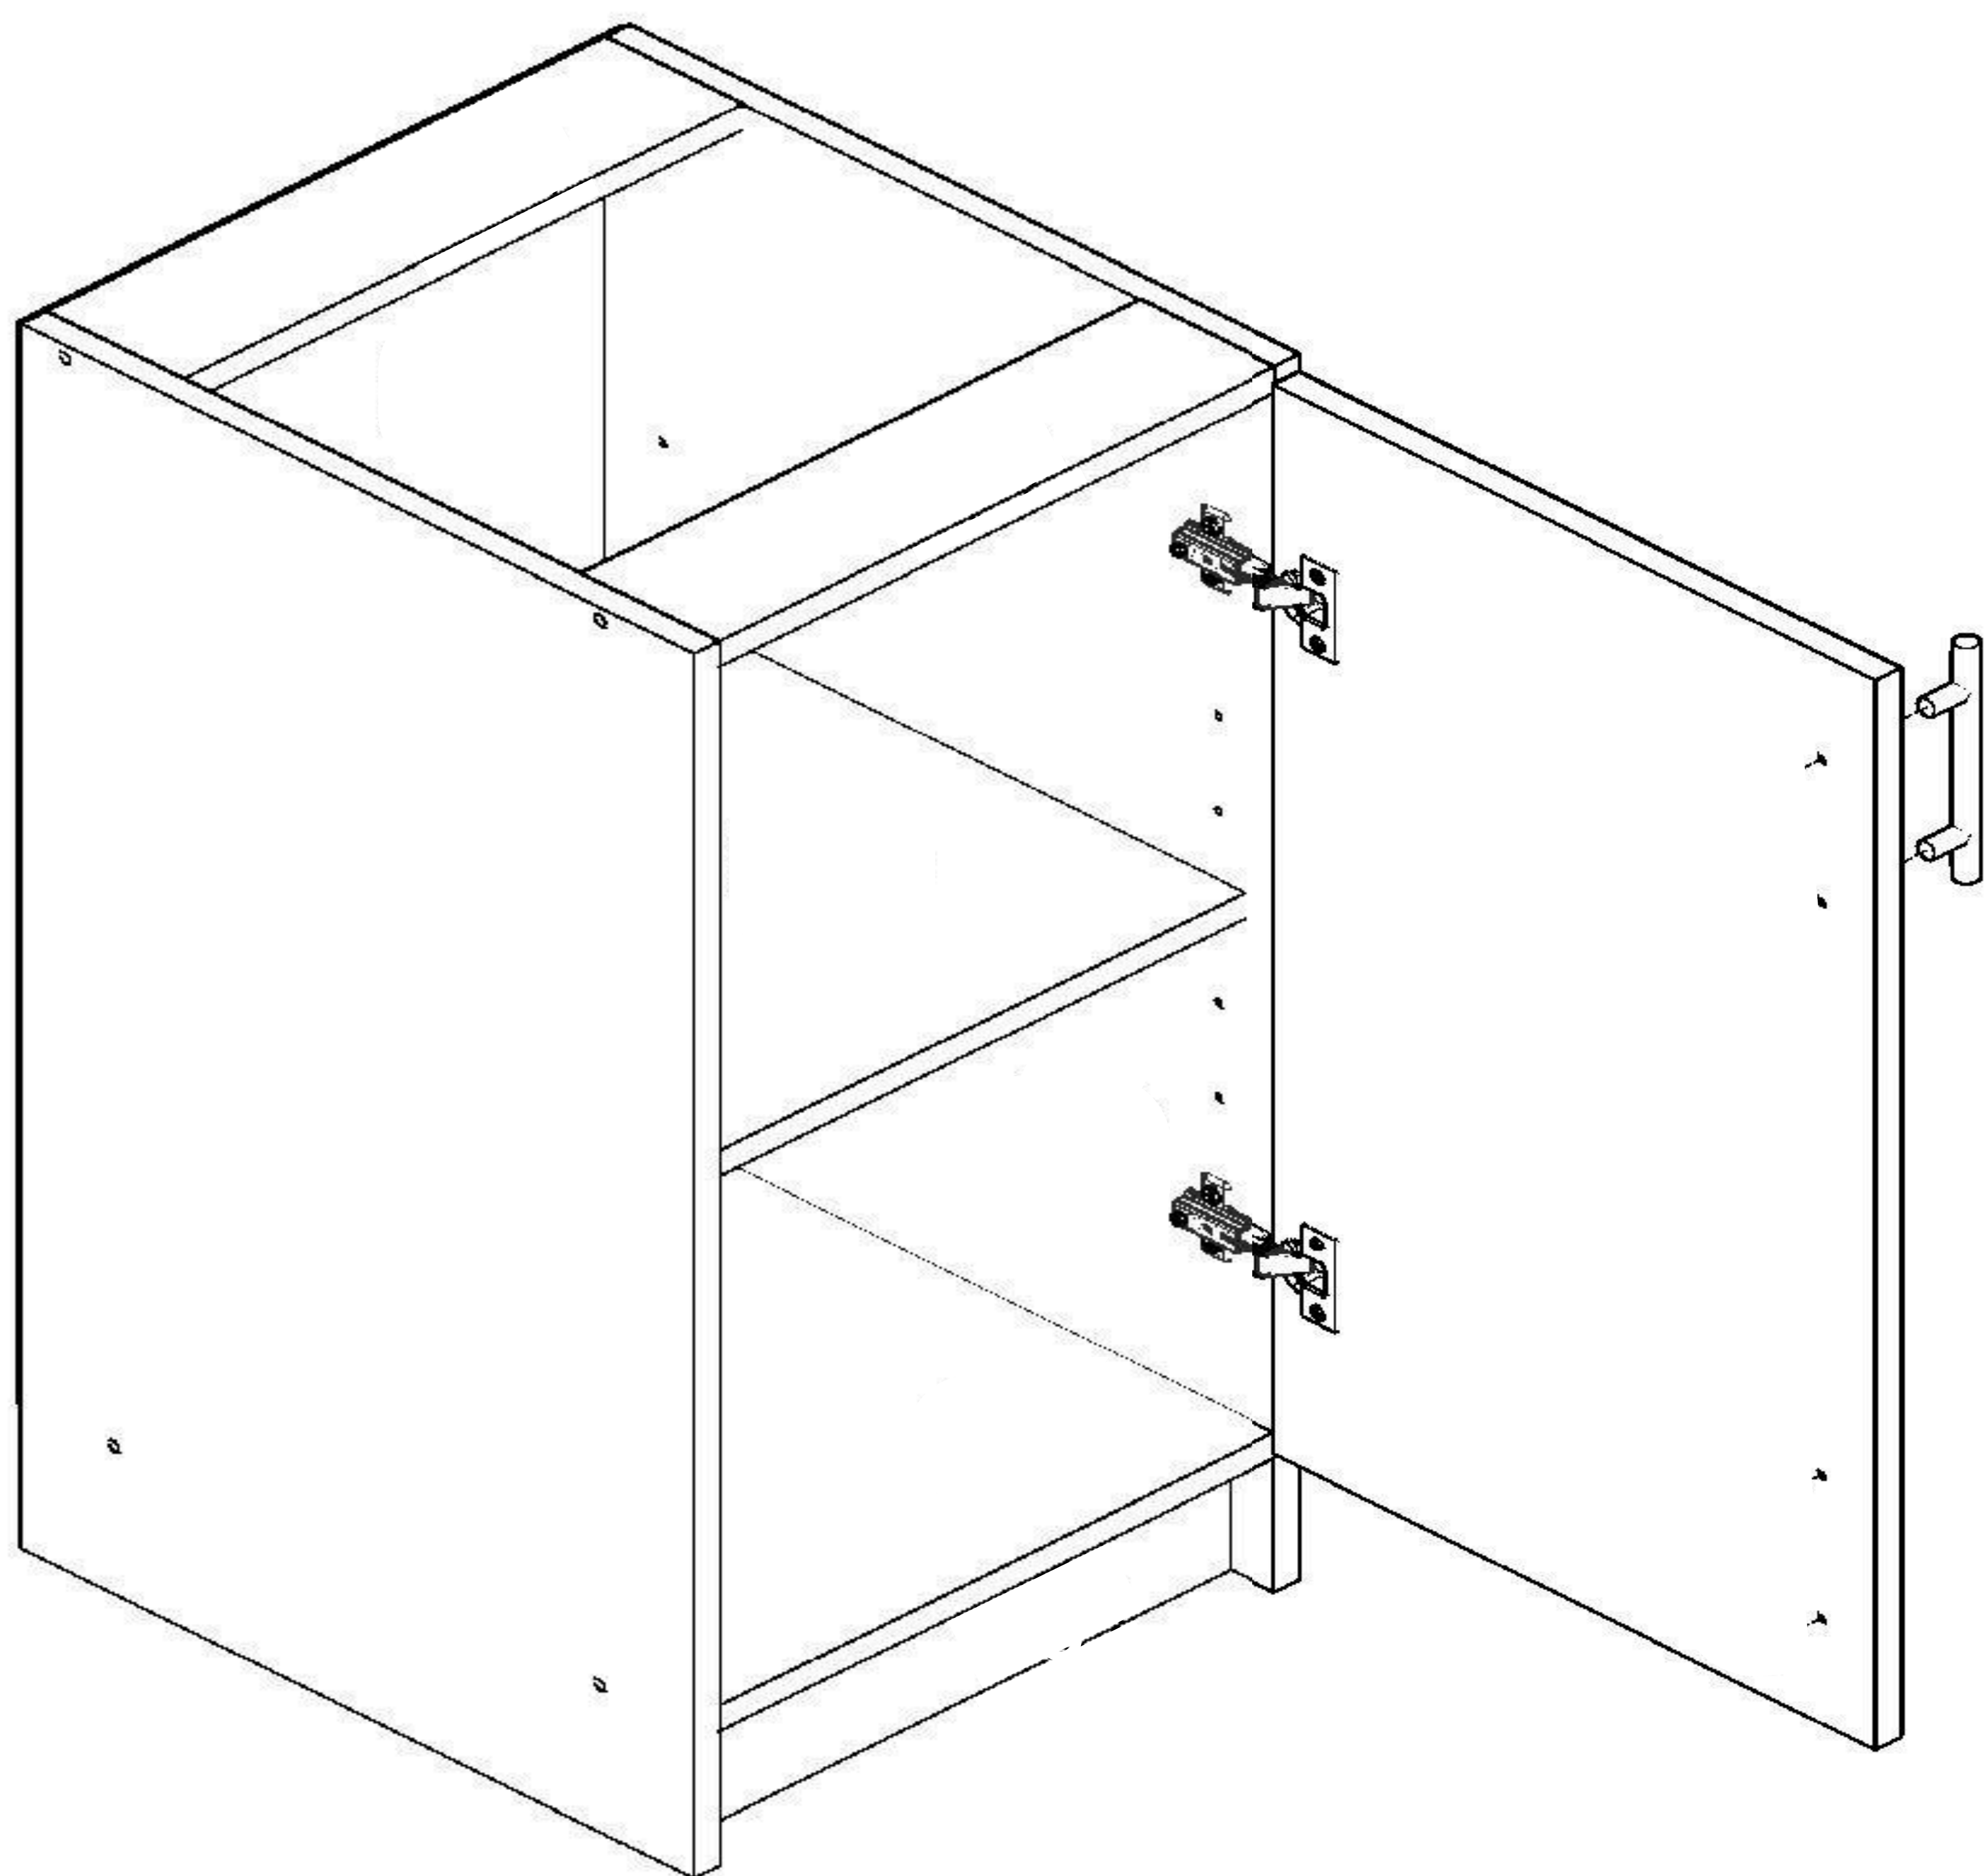


Cross-head
screwdriver

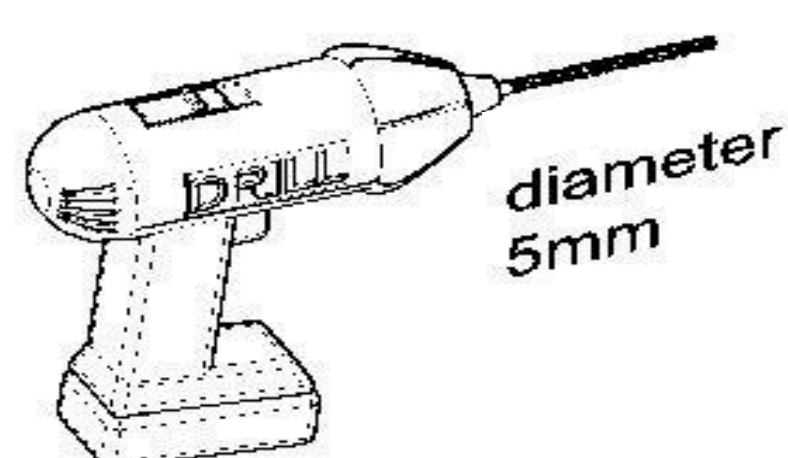

Electric
drill

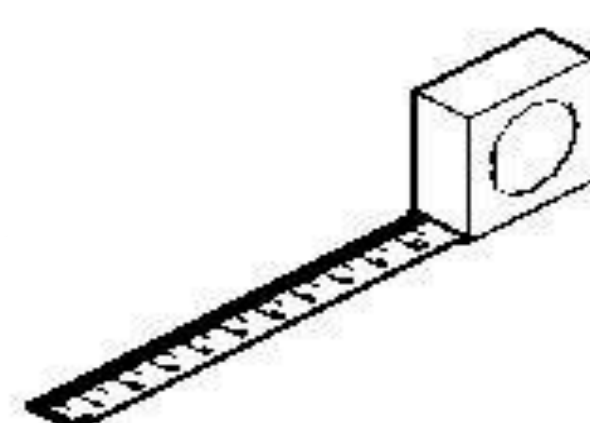

Rule

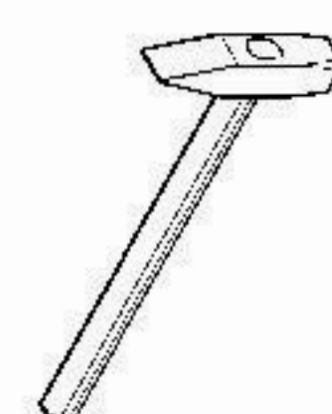

Hammer










**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346







COMPONENTS - PANELS

Please check you have all the panels listed below

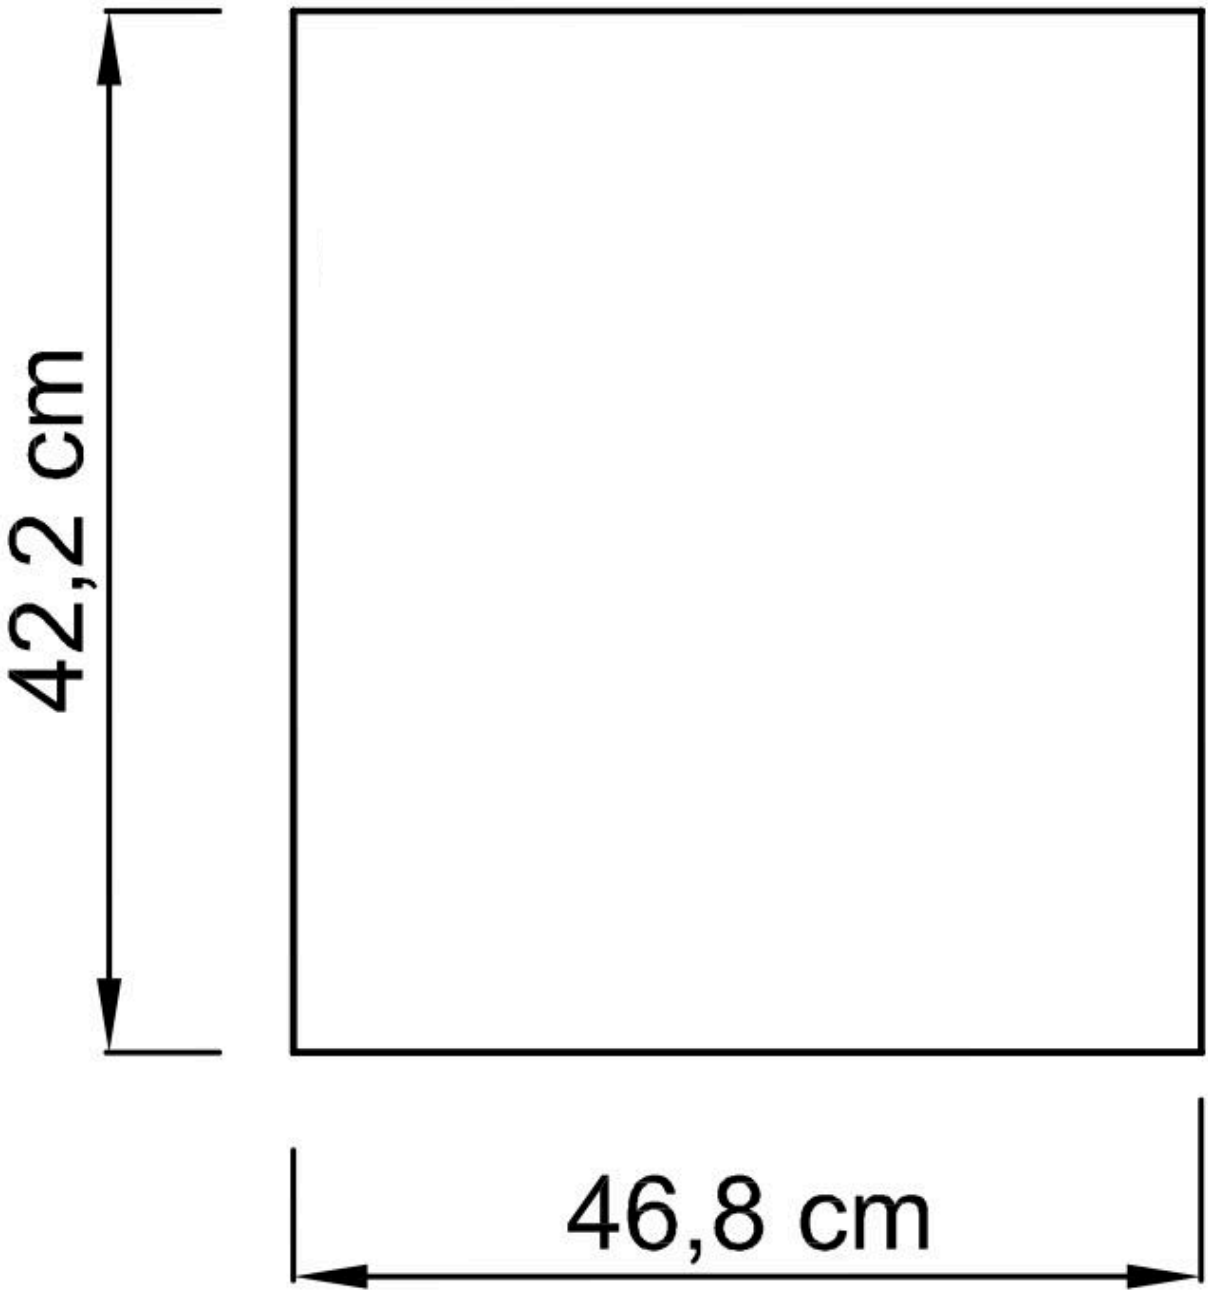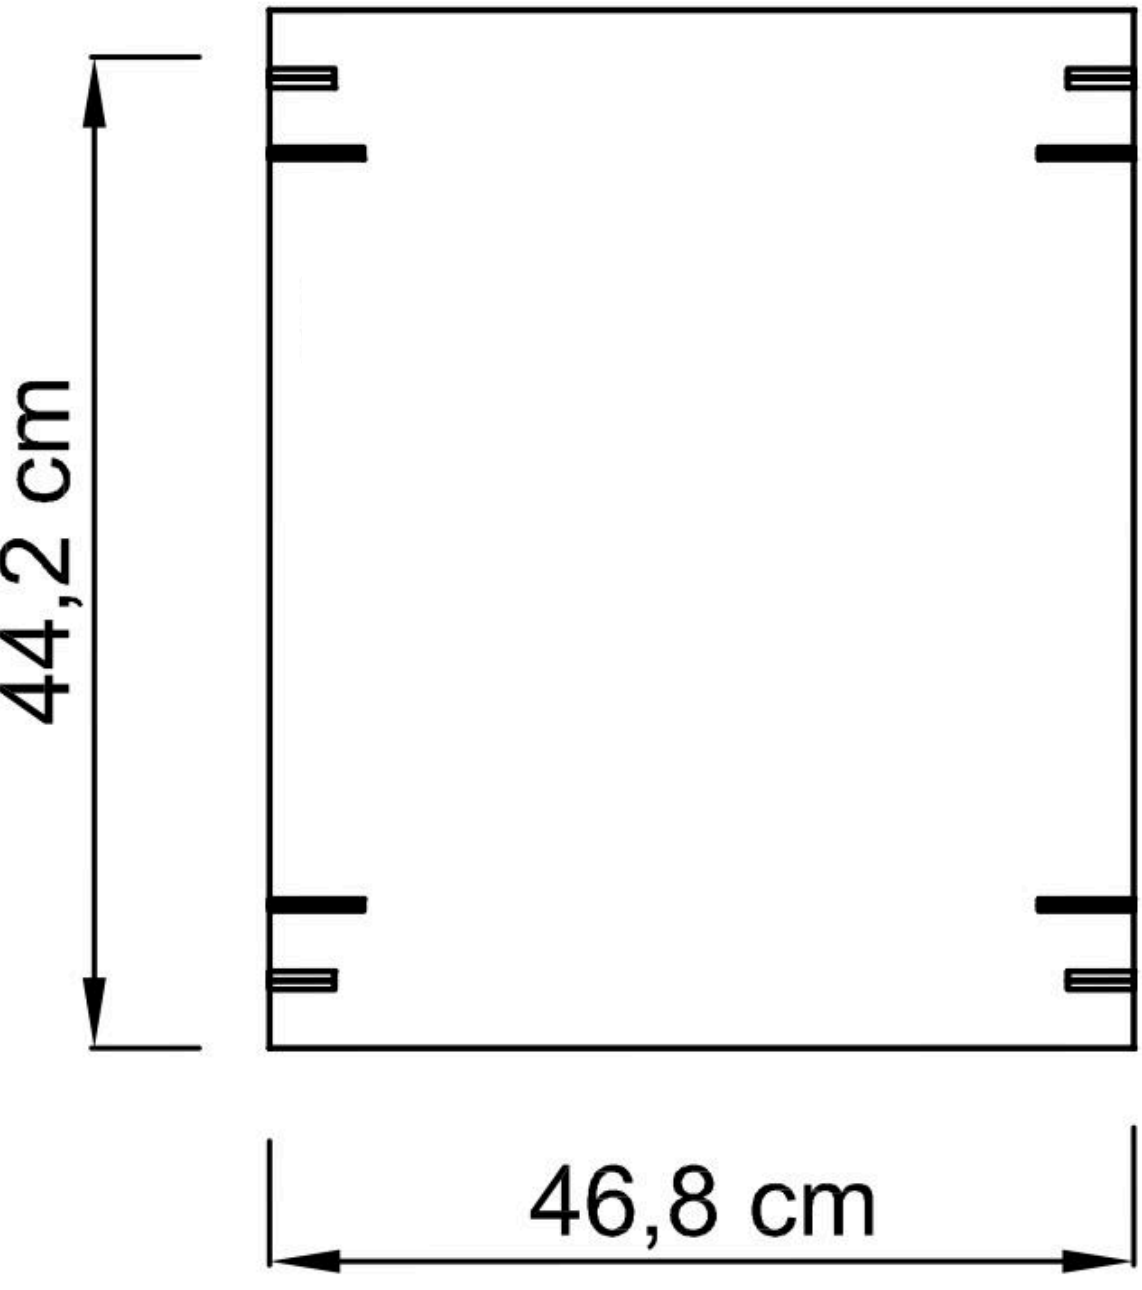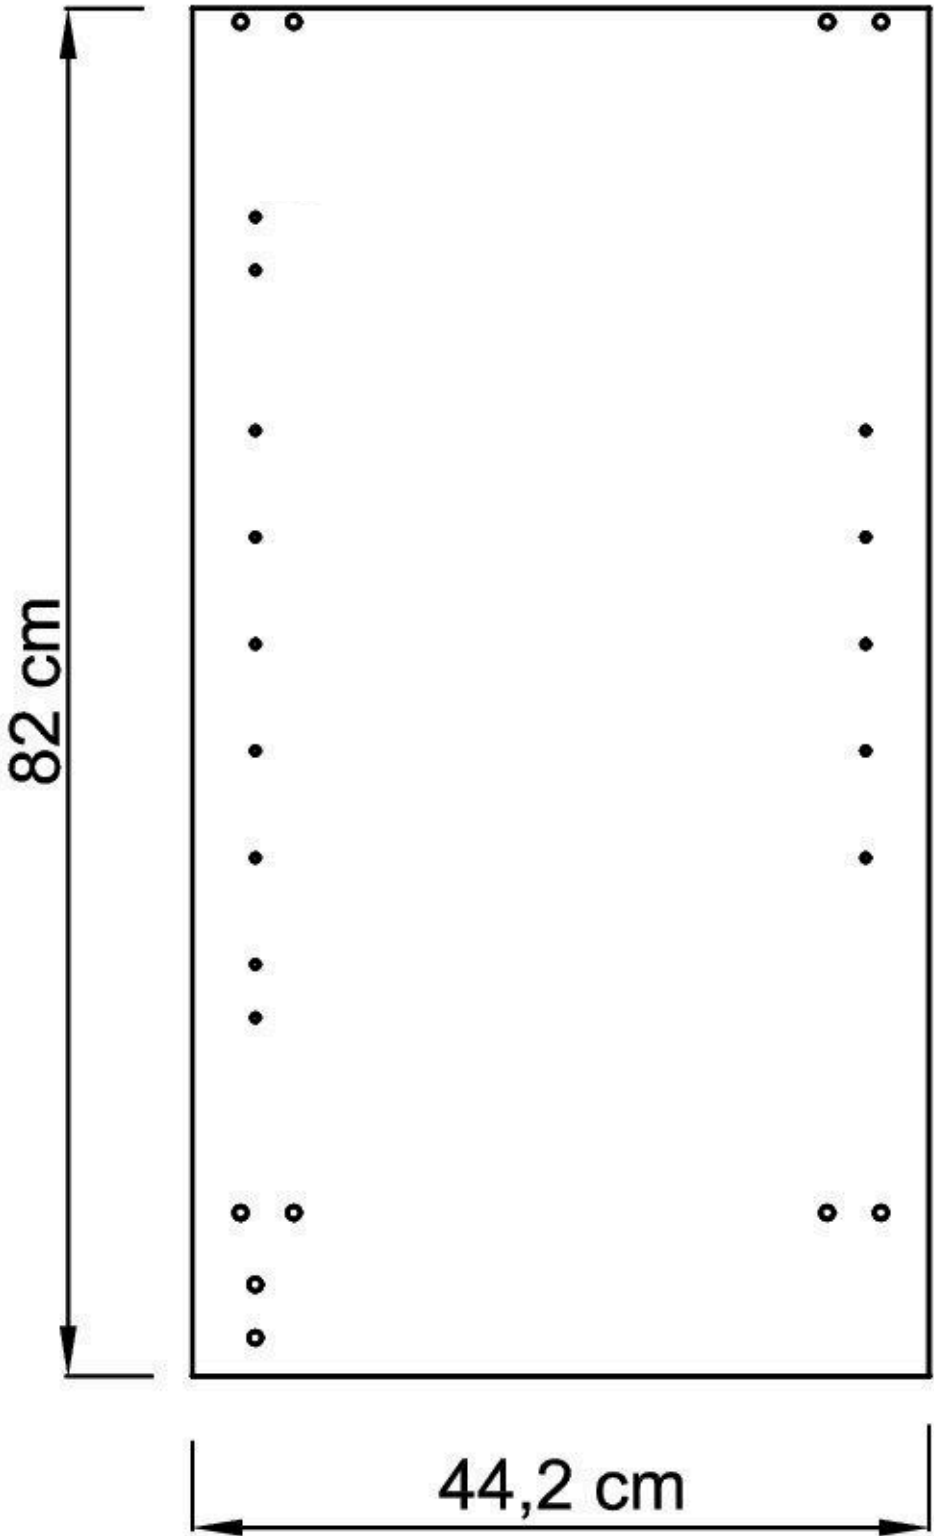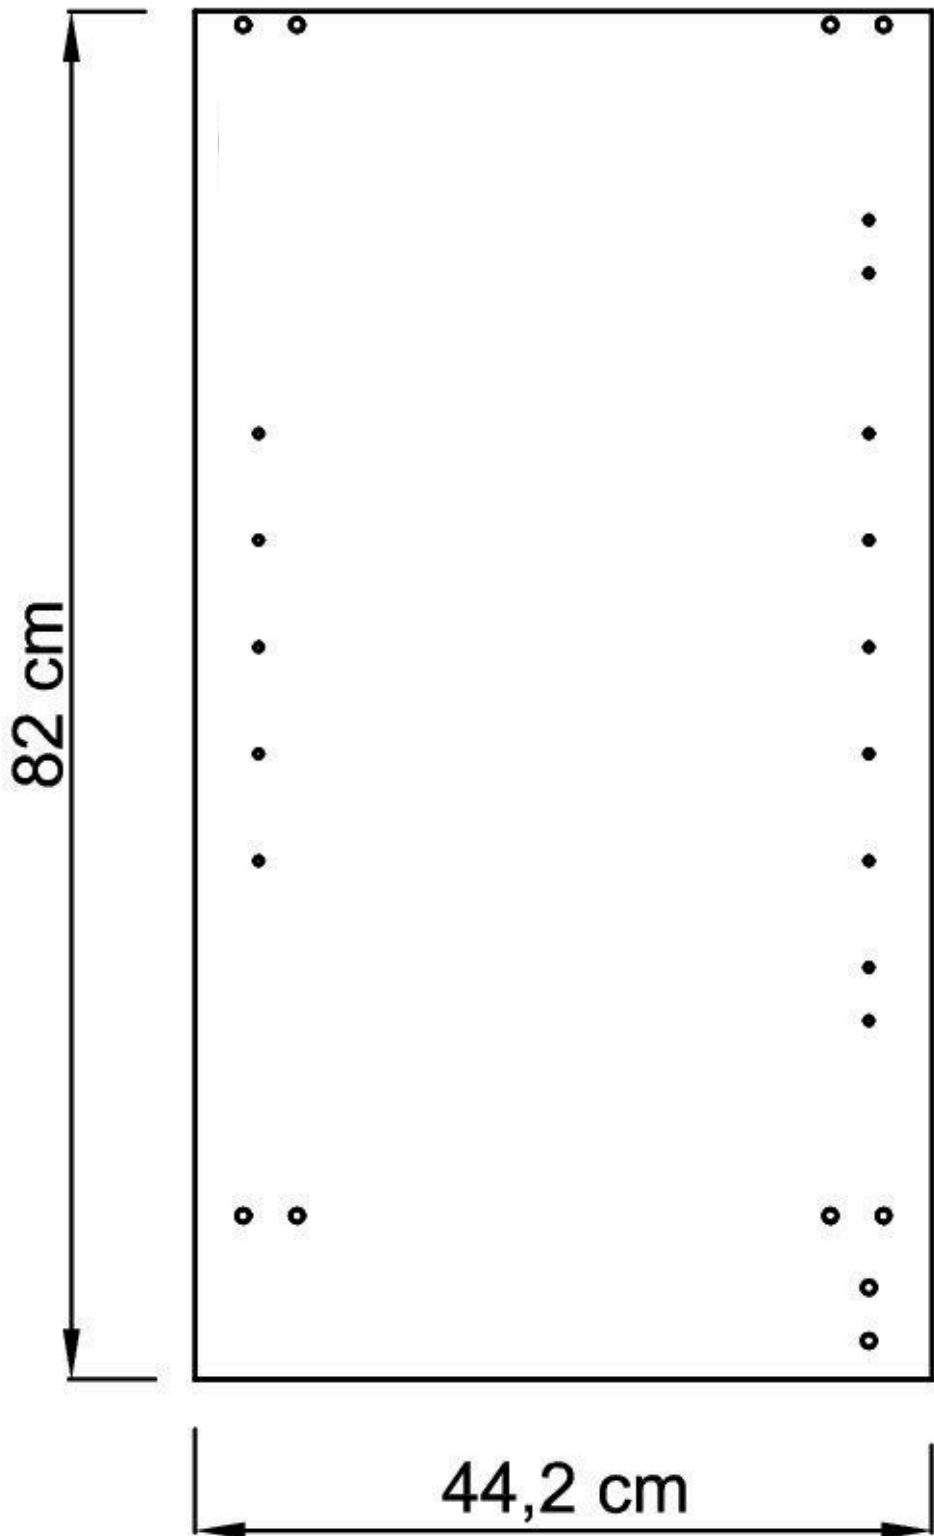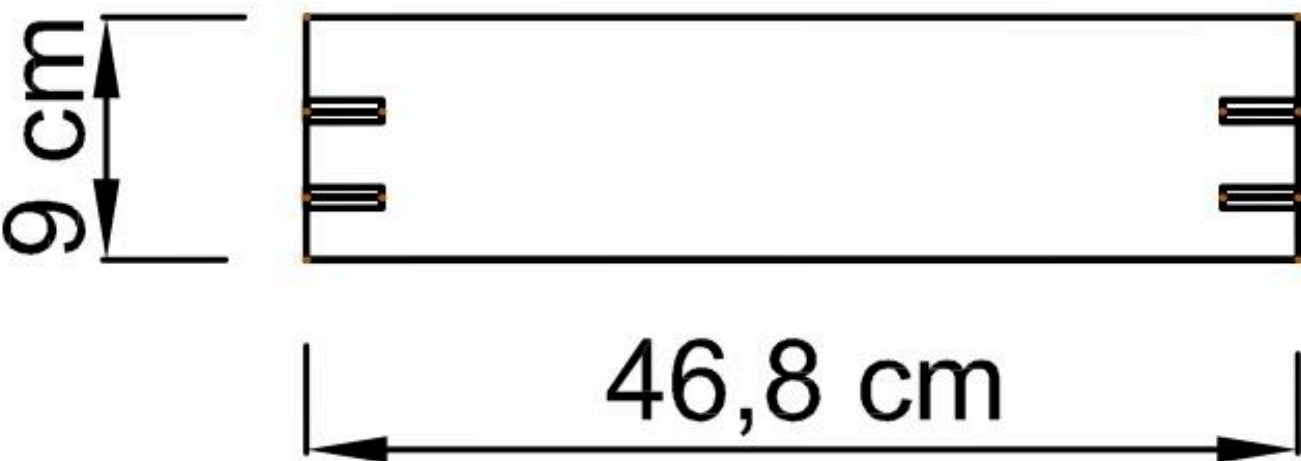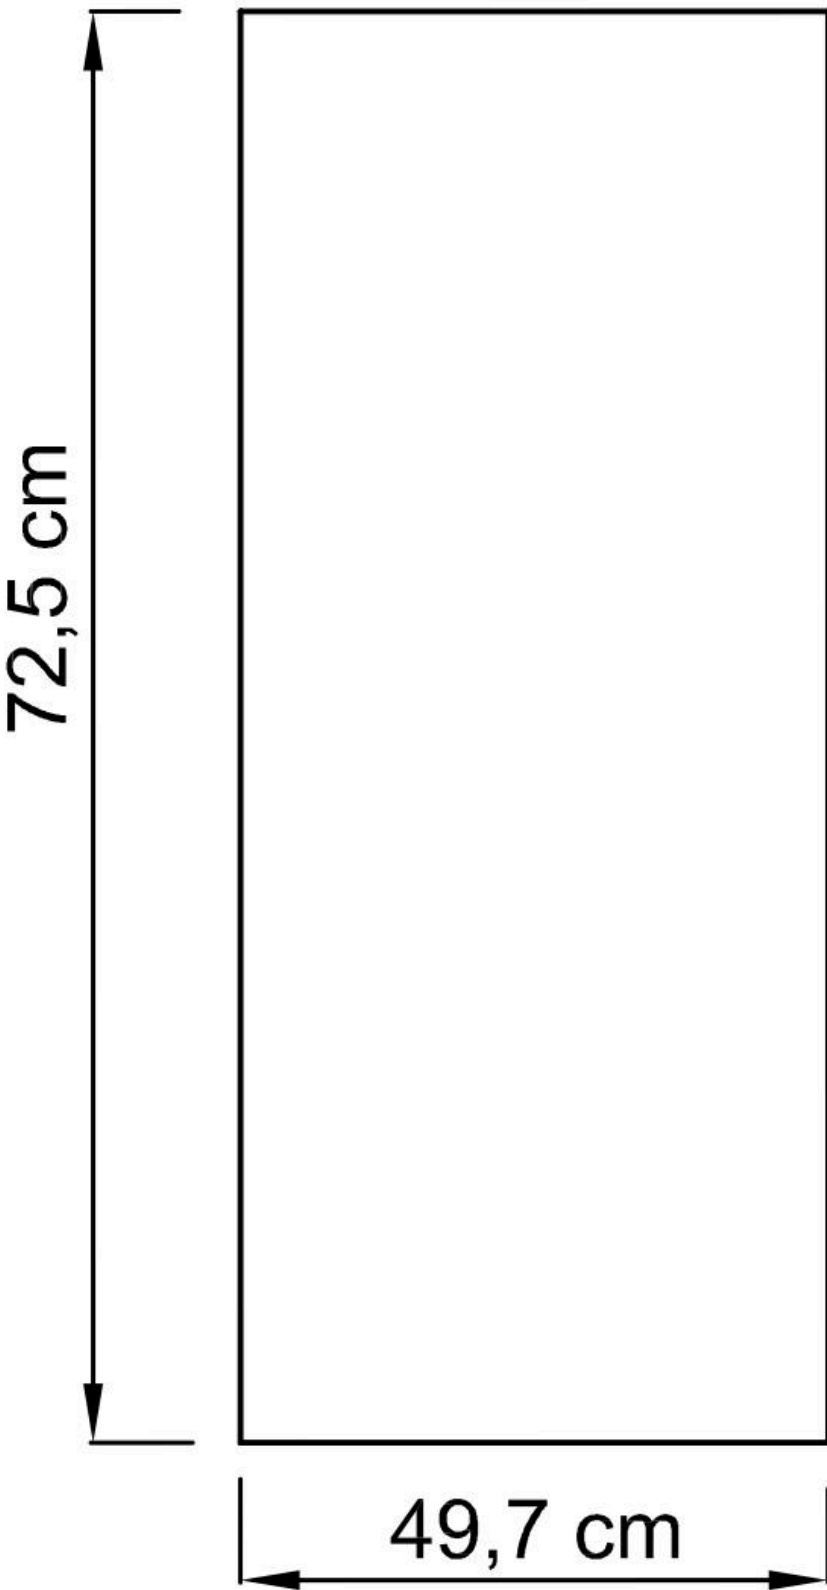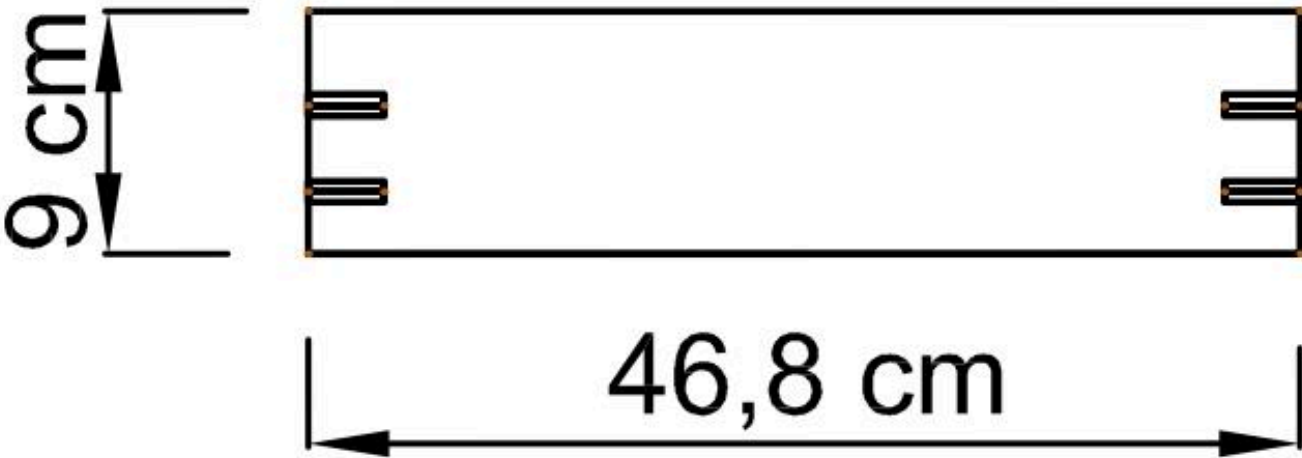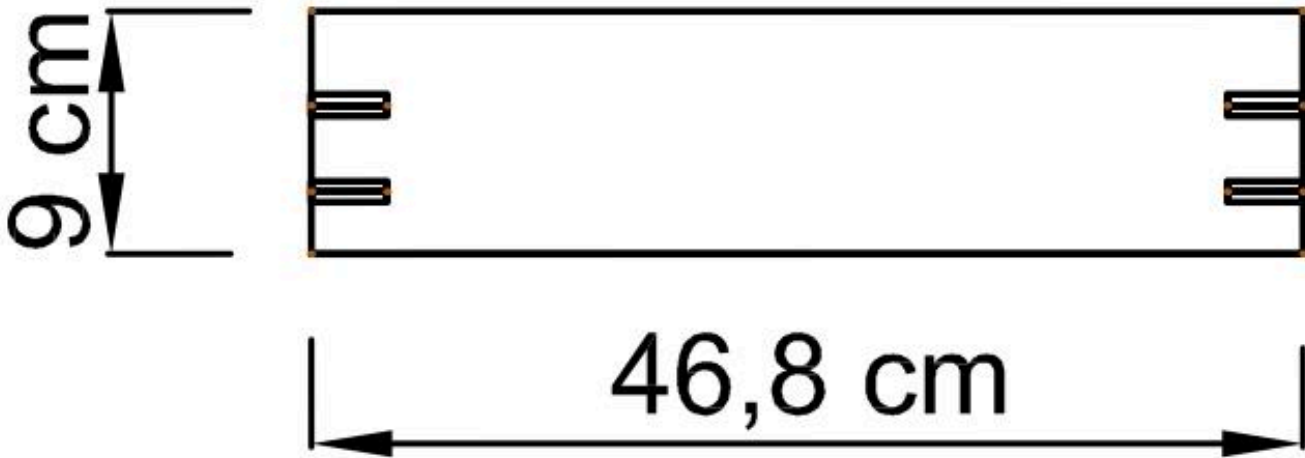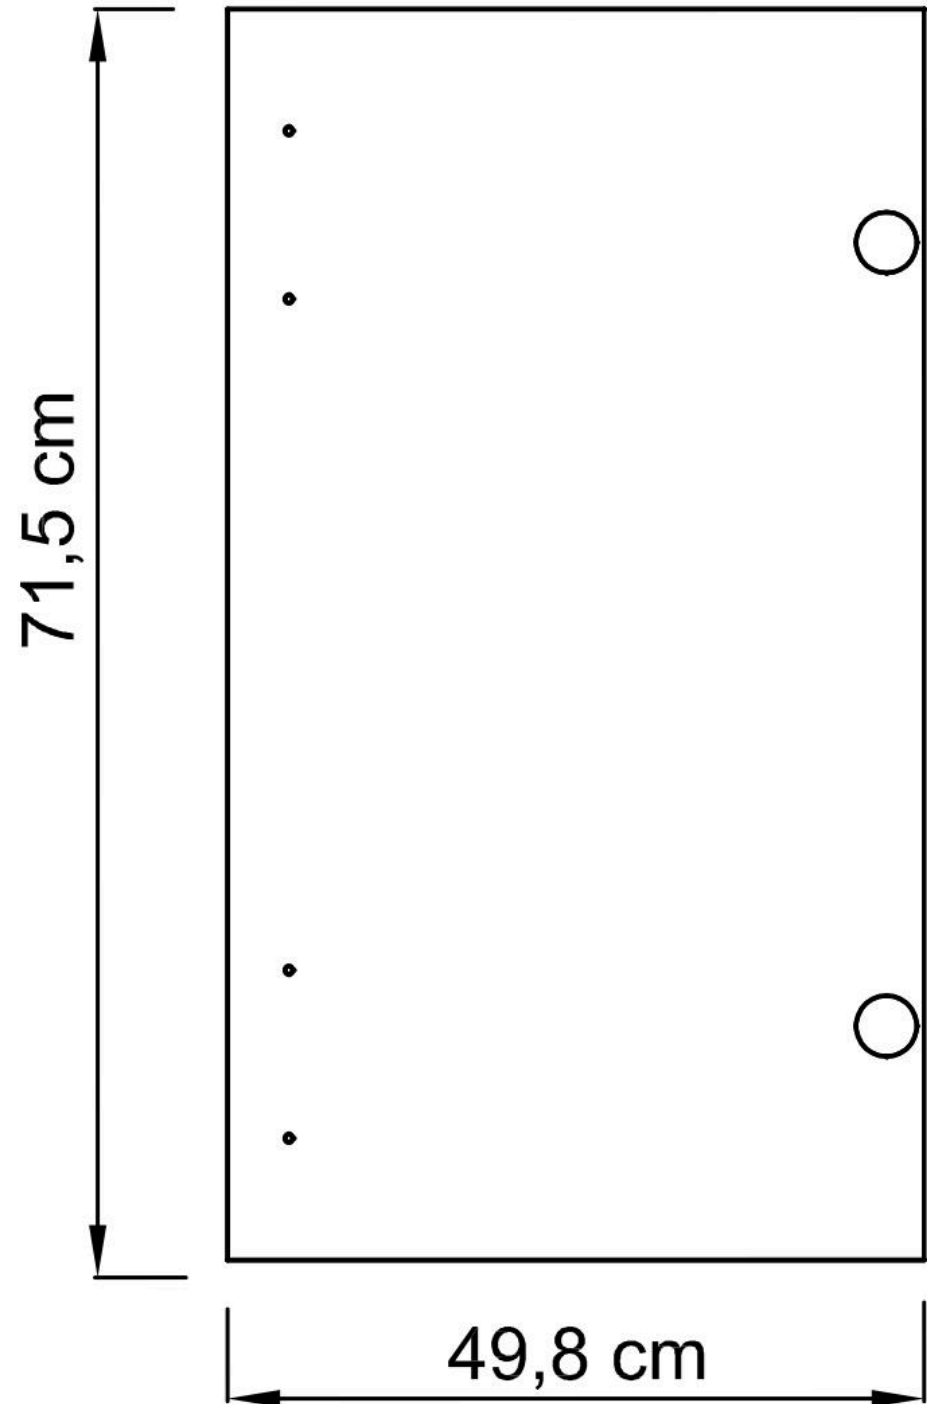
1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
7 x1 	8 x1 	9 x1 Front (separate package) 

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

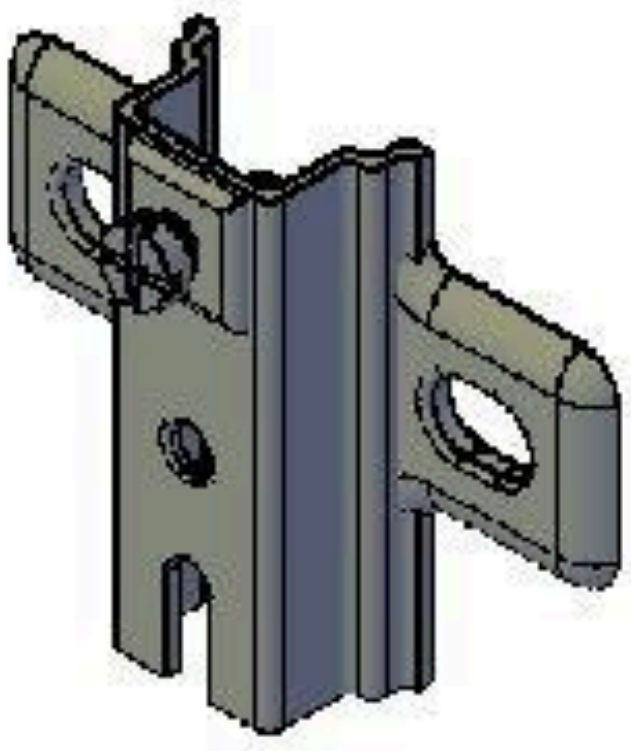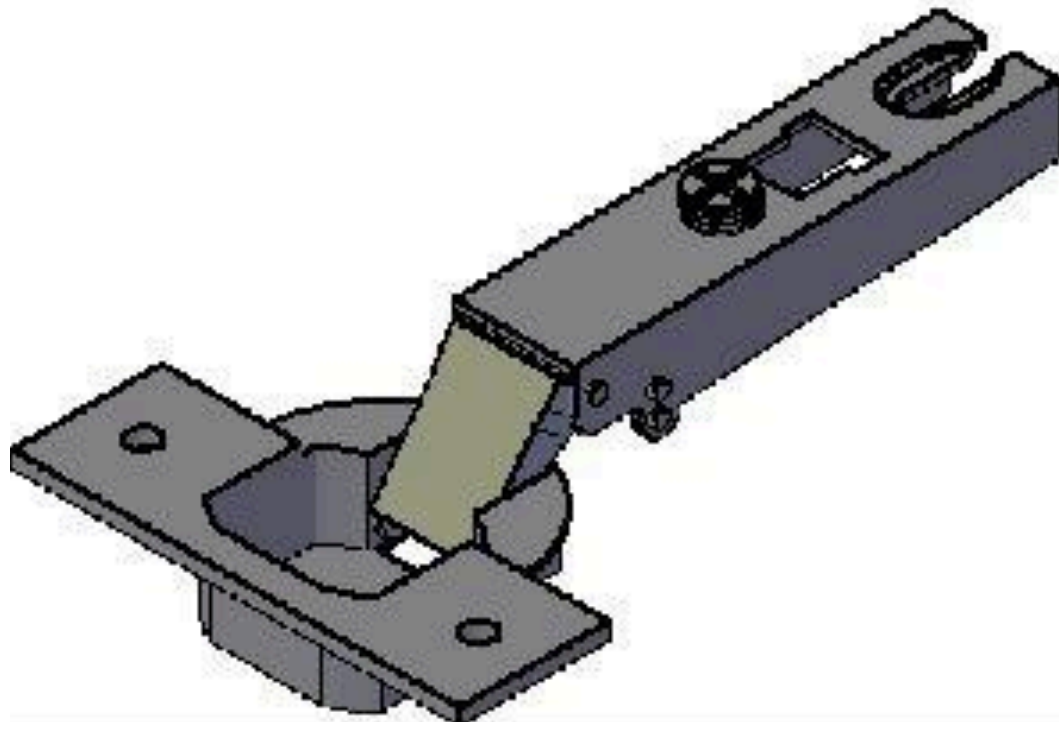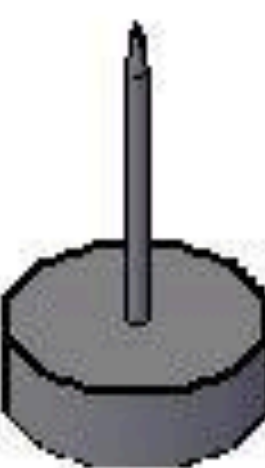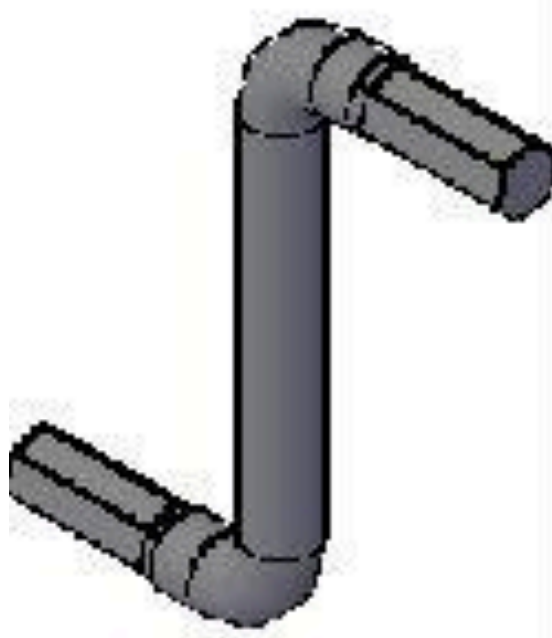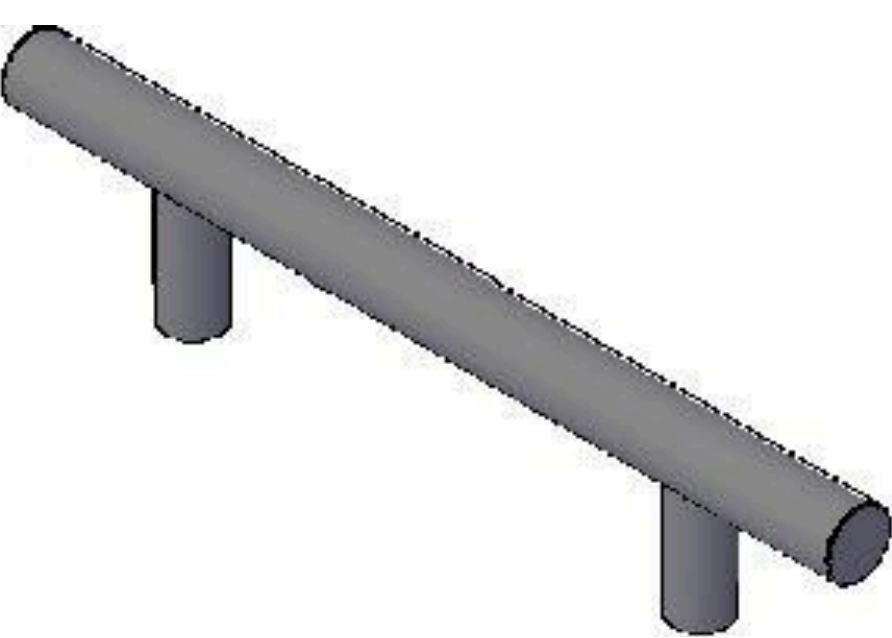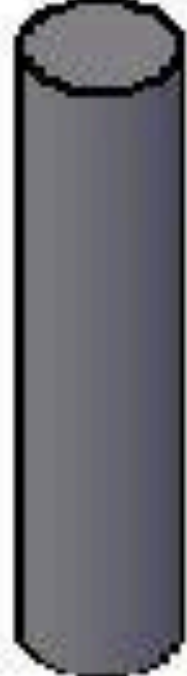O x4  ⌀ 7x16	F x2 	G2 x2 	! PAY ATTENTION: O AND F ATTACHED TO G2
E x4 	D8 x4 	Q7 x1 	C x8  ⌀ 7x50
S1 x8 	S7 x2 	J9 x2  ⌀ 3x25	U7 x1 
H x4 US 031.03  ⌀ 3.5x13	W x30 	H5 x4  ⌀ 3.5x25	A x12 

Ruler - Use this ruler to help correctly identify the screws

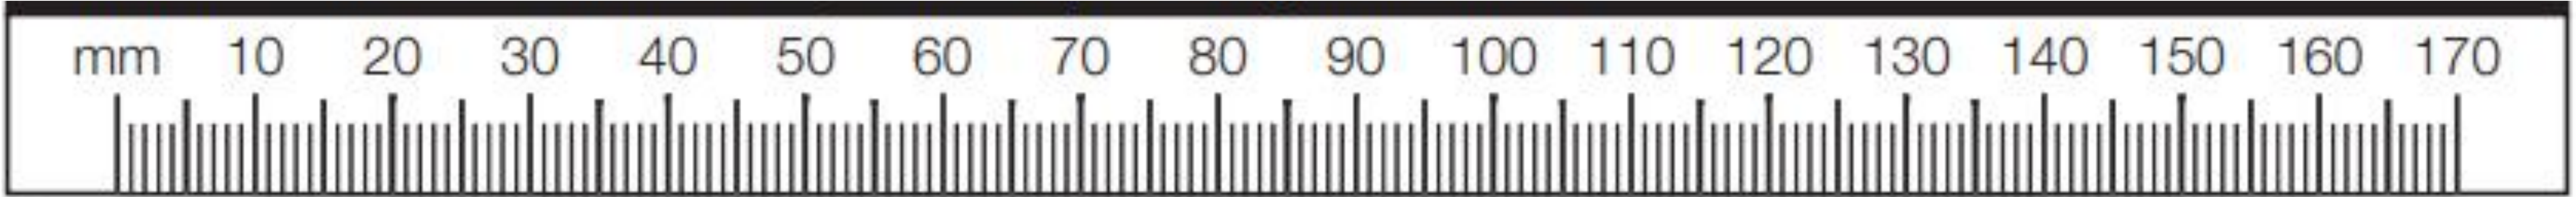

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x4

F x2



7x16


D8 x4


A x12



A x12


E x4

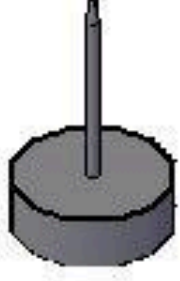

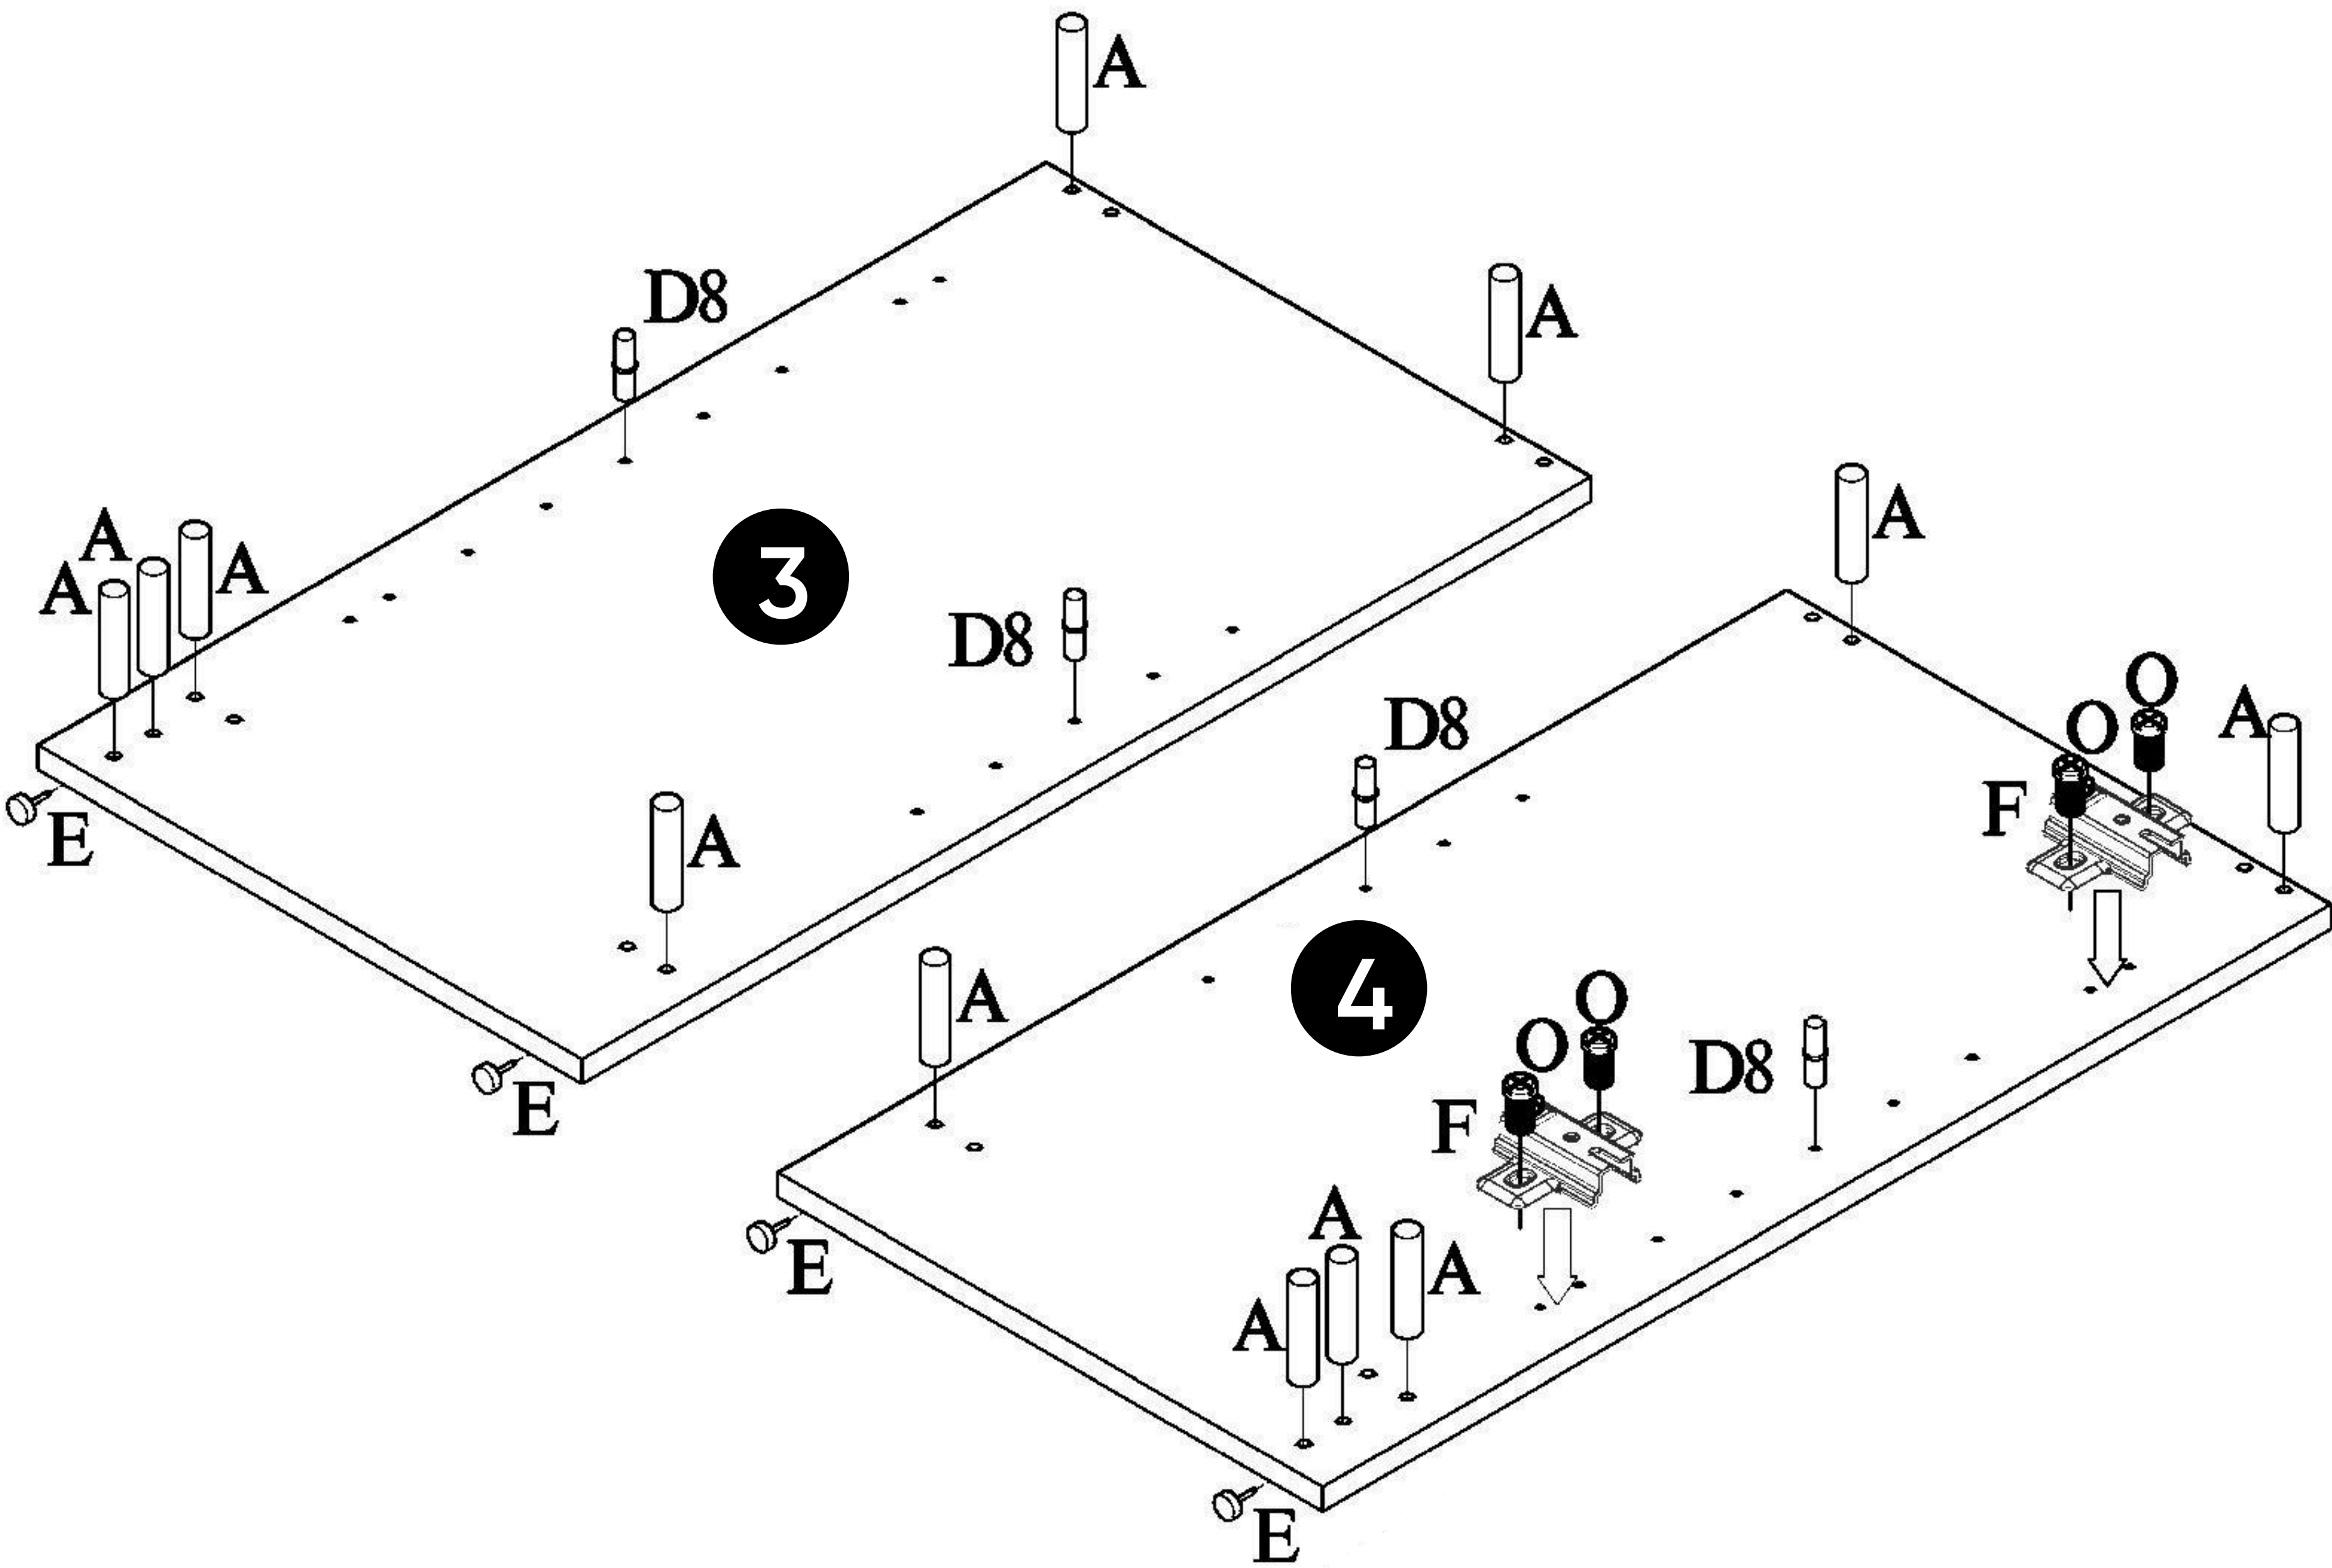

STEP - 2

Q7 x1

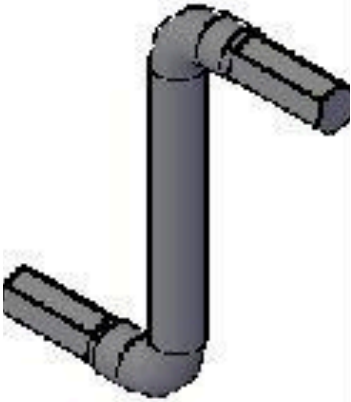


S1 x8





C x8




7x50

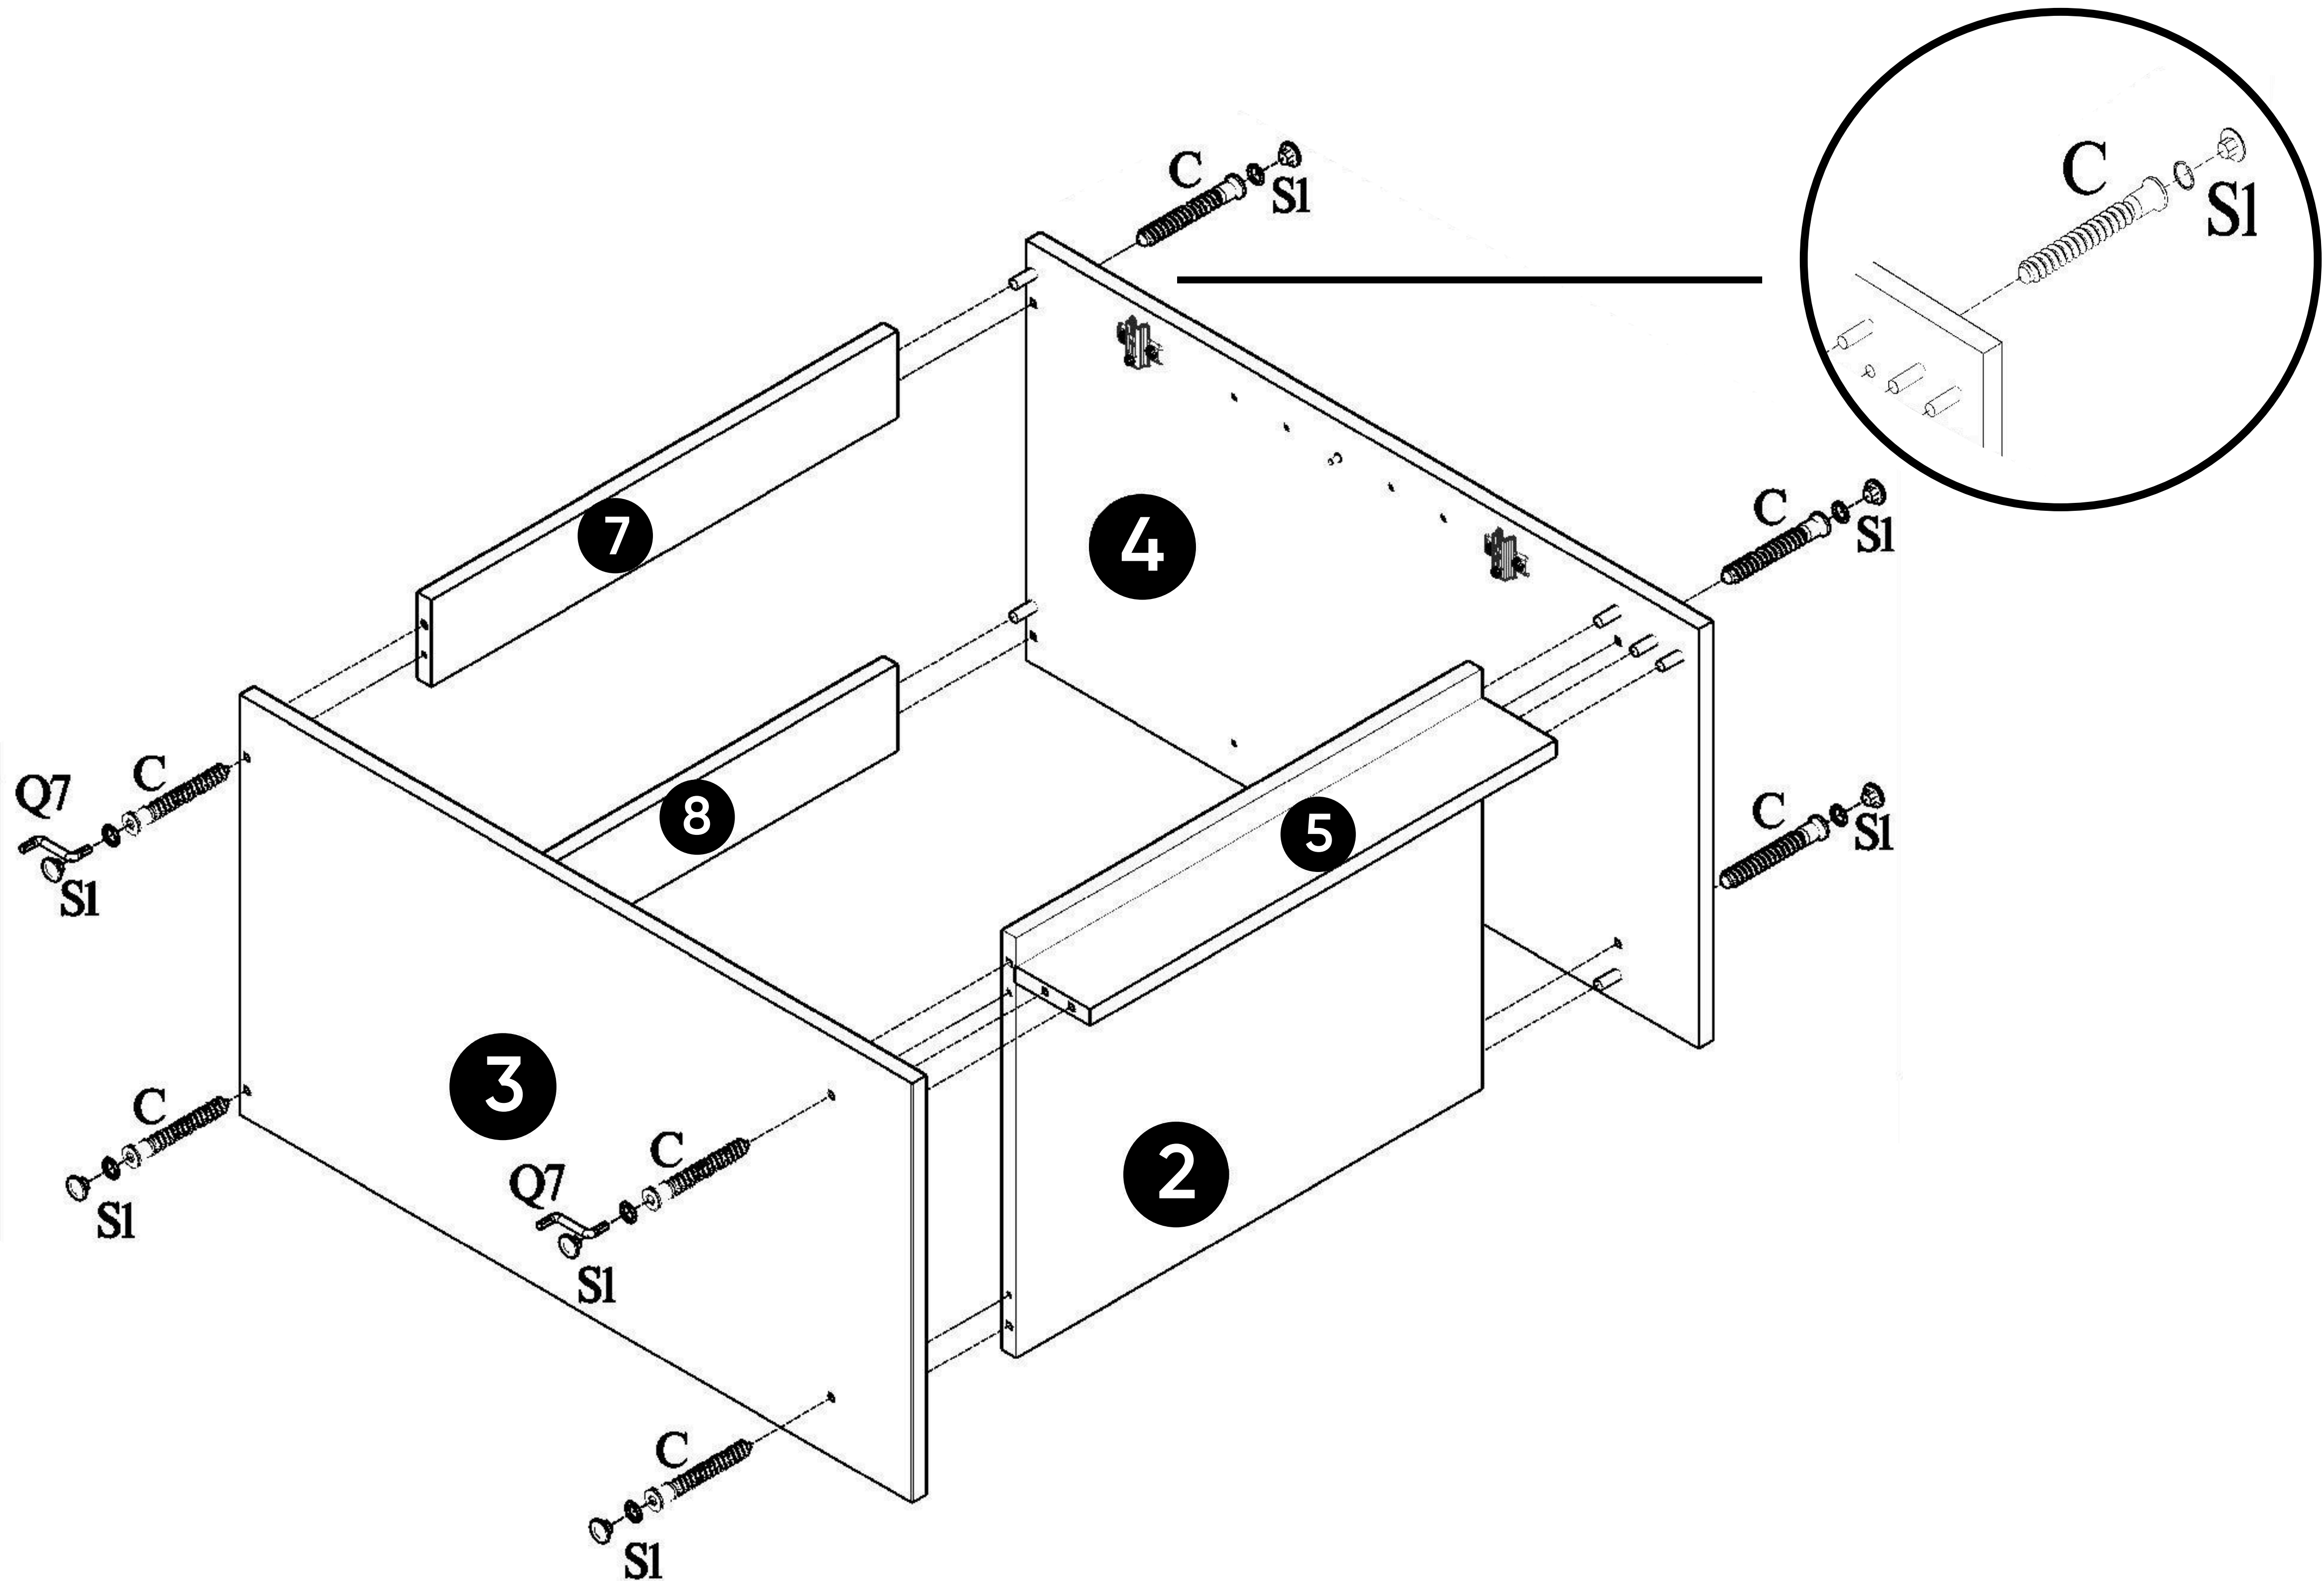



STEP - 3

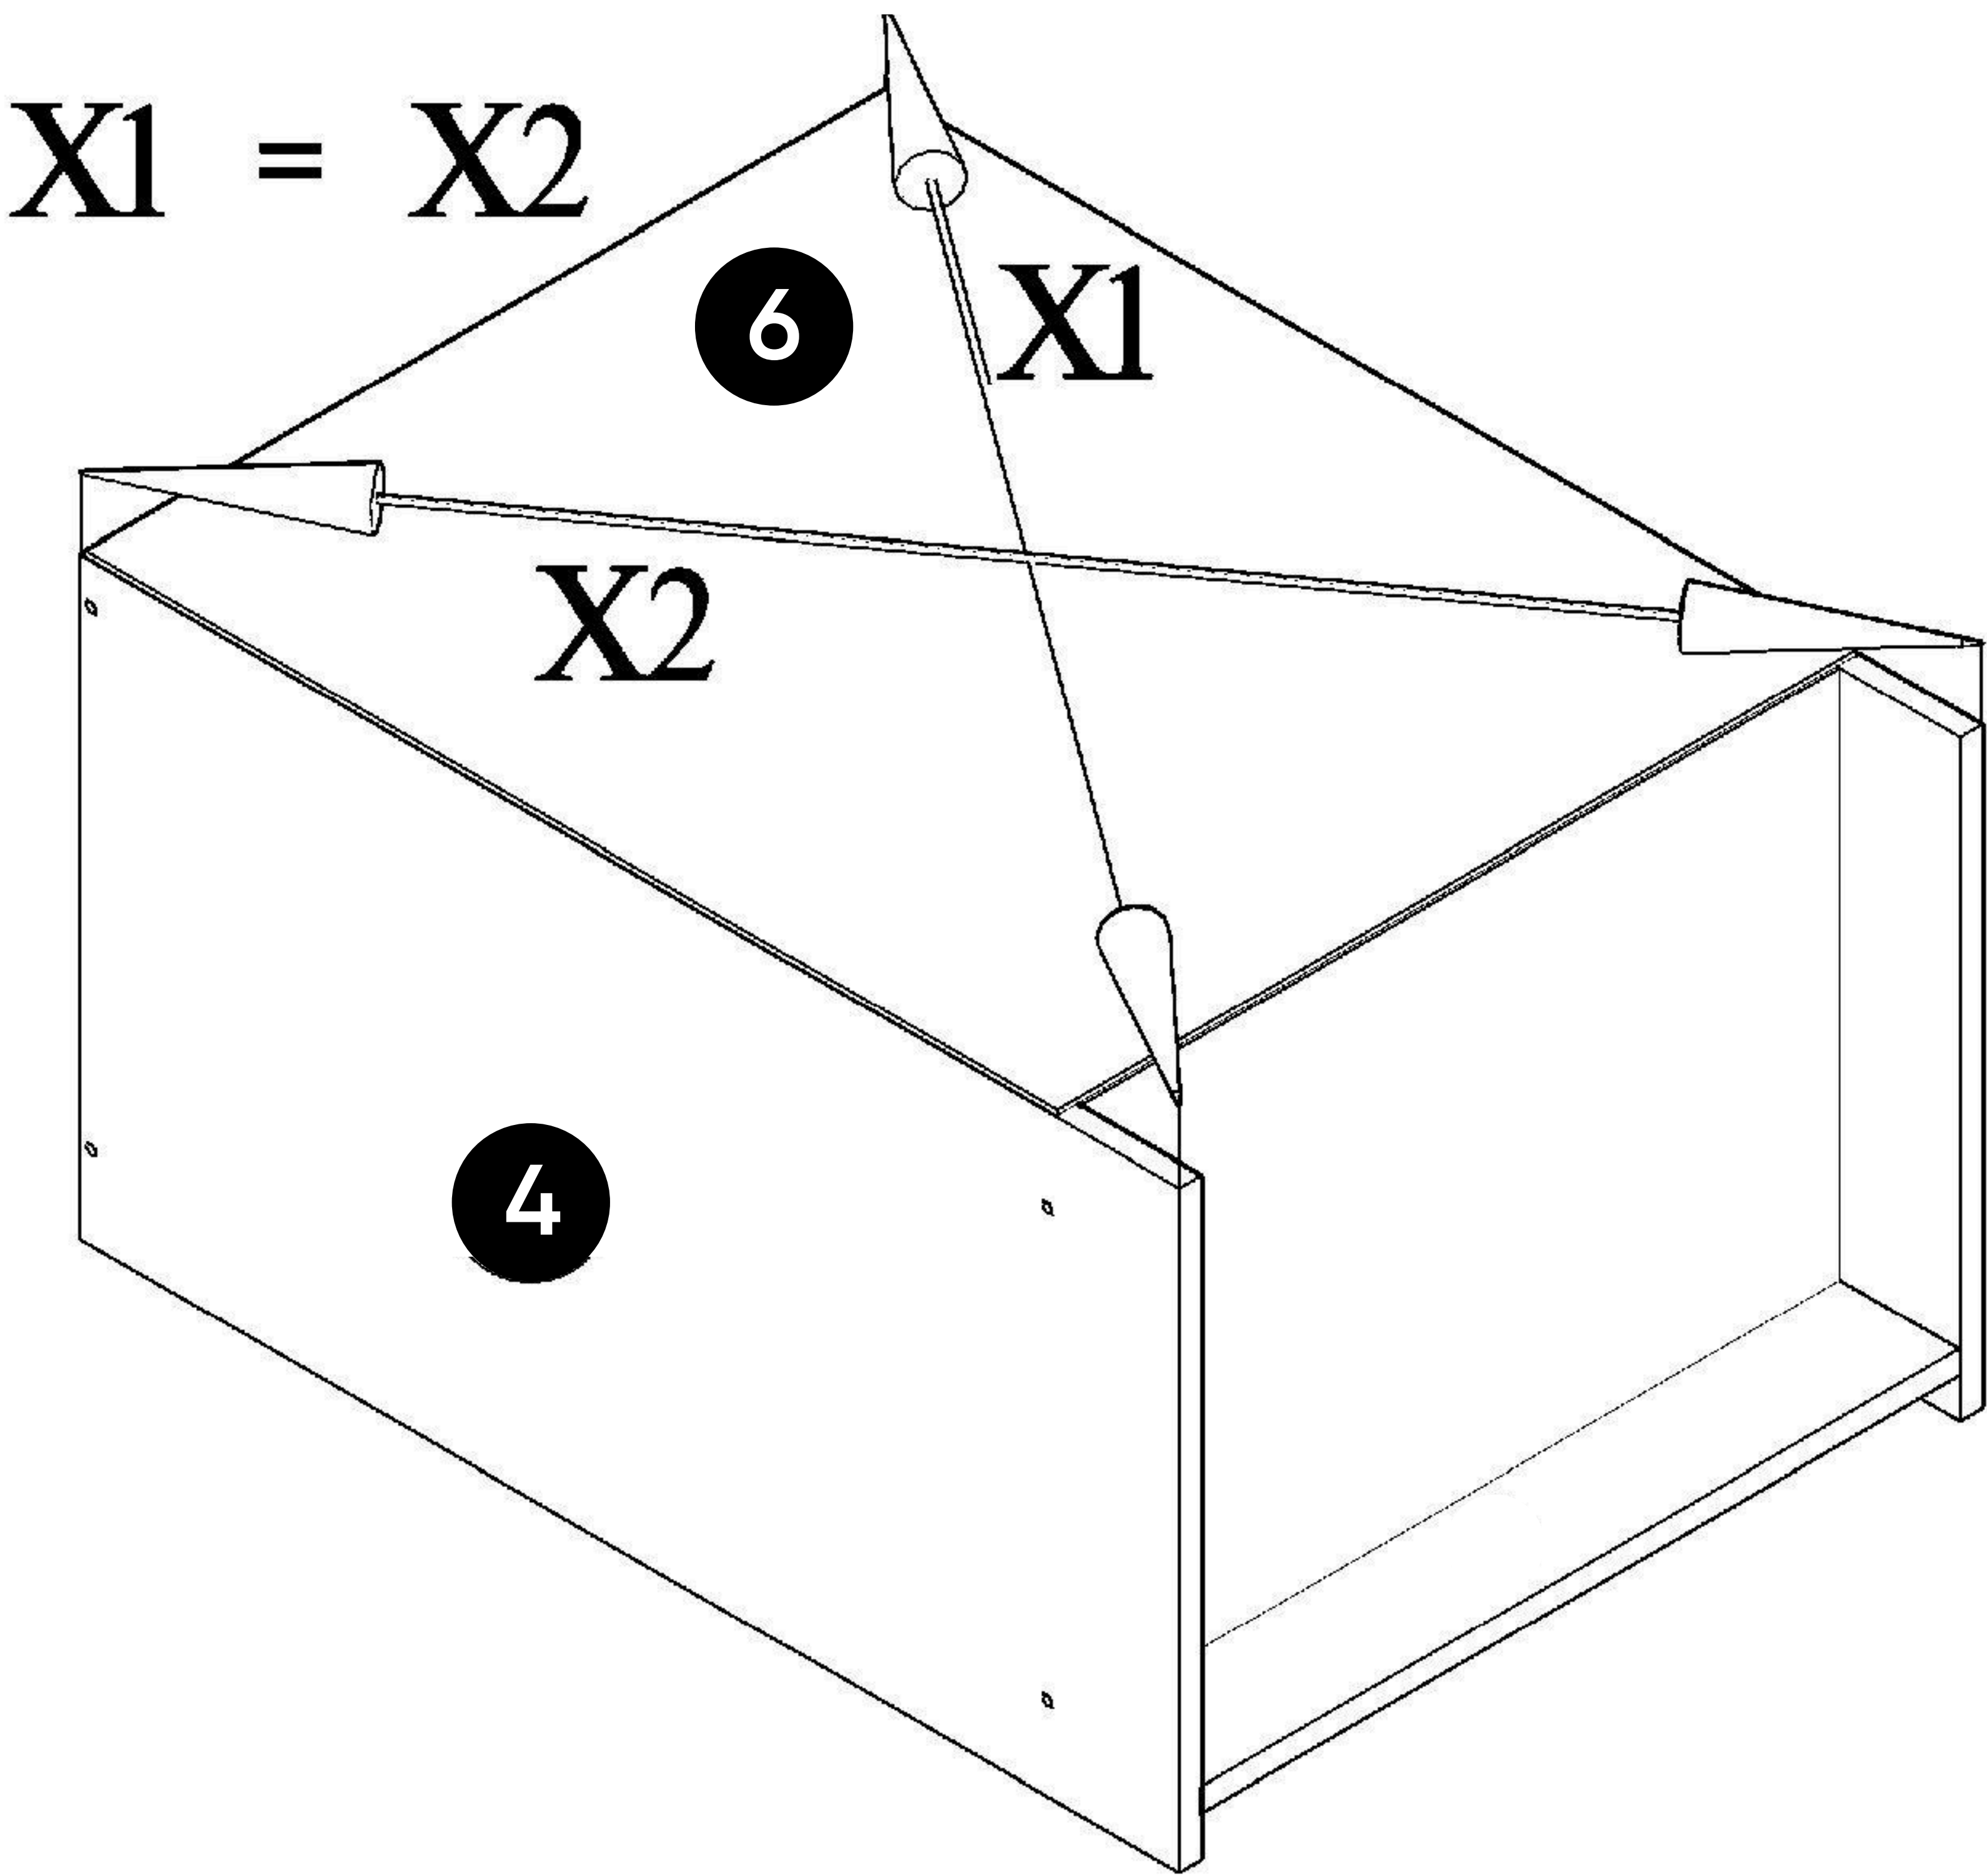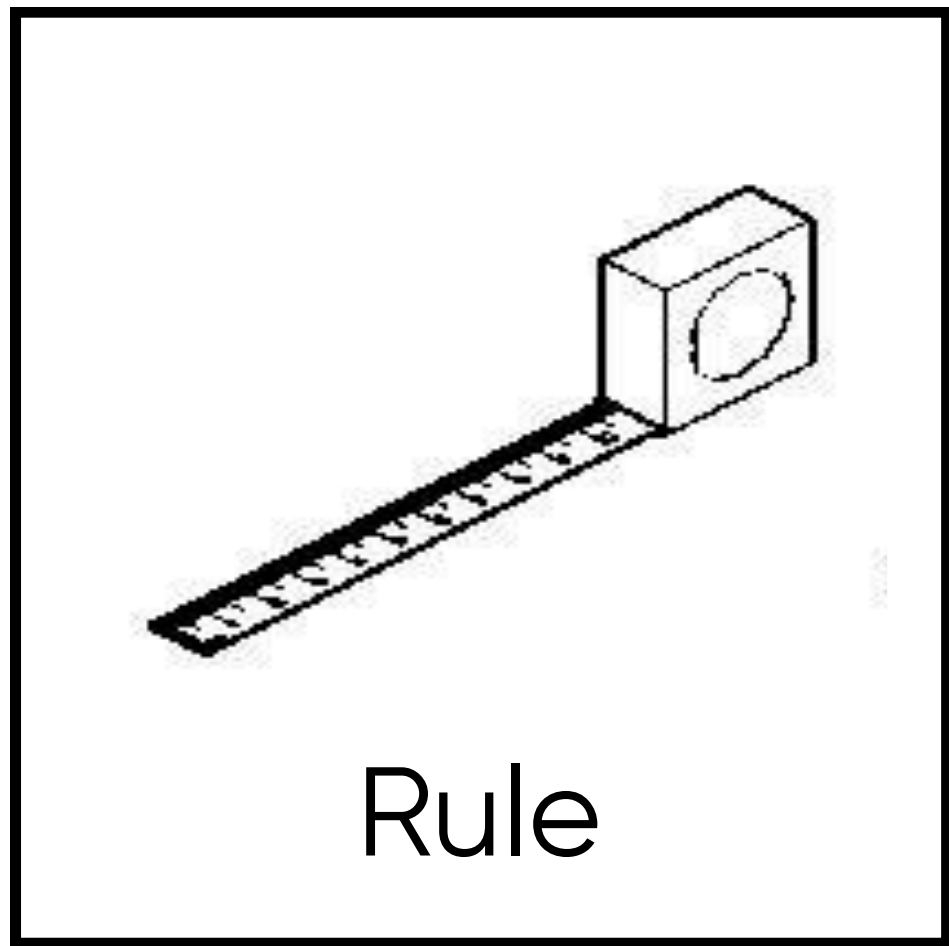



STEP - 4

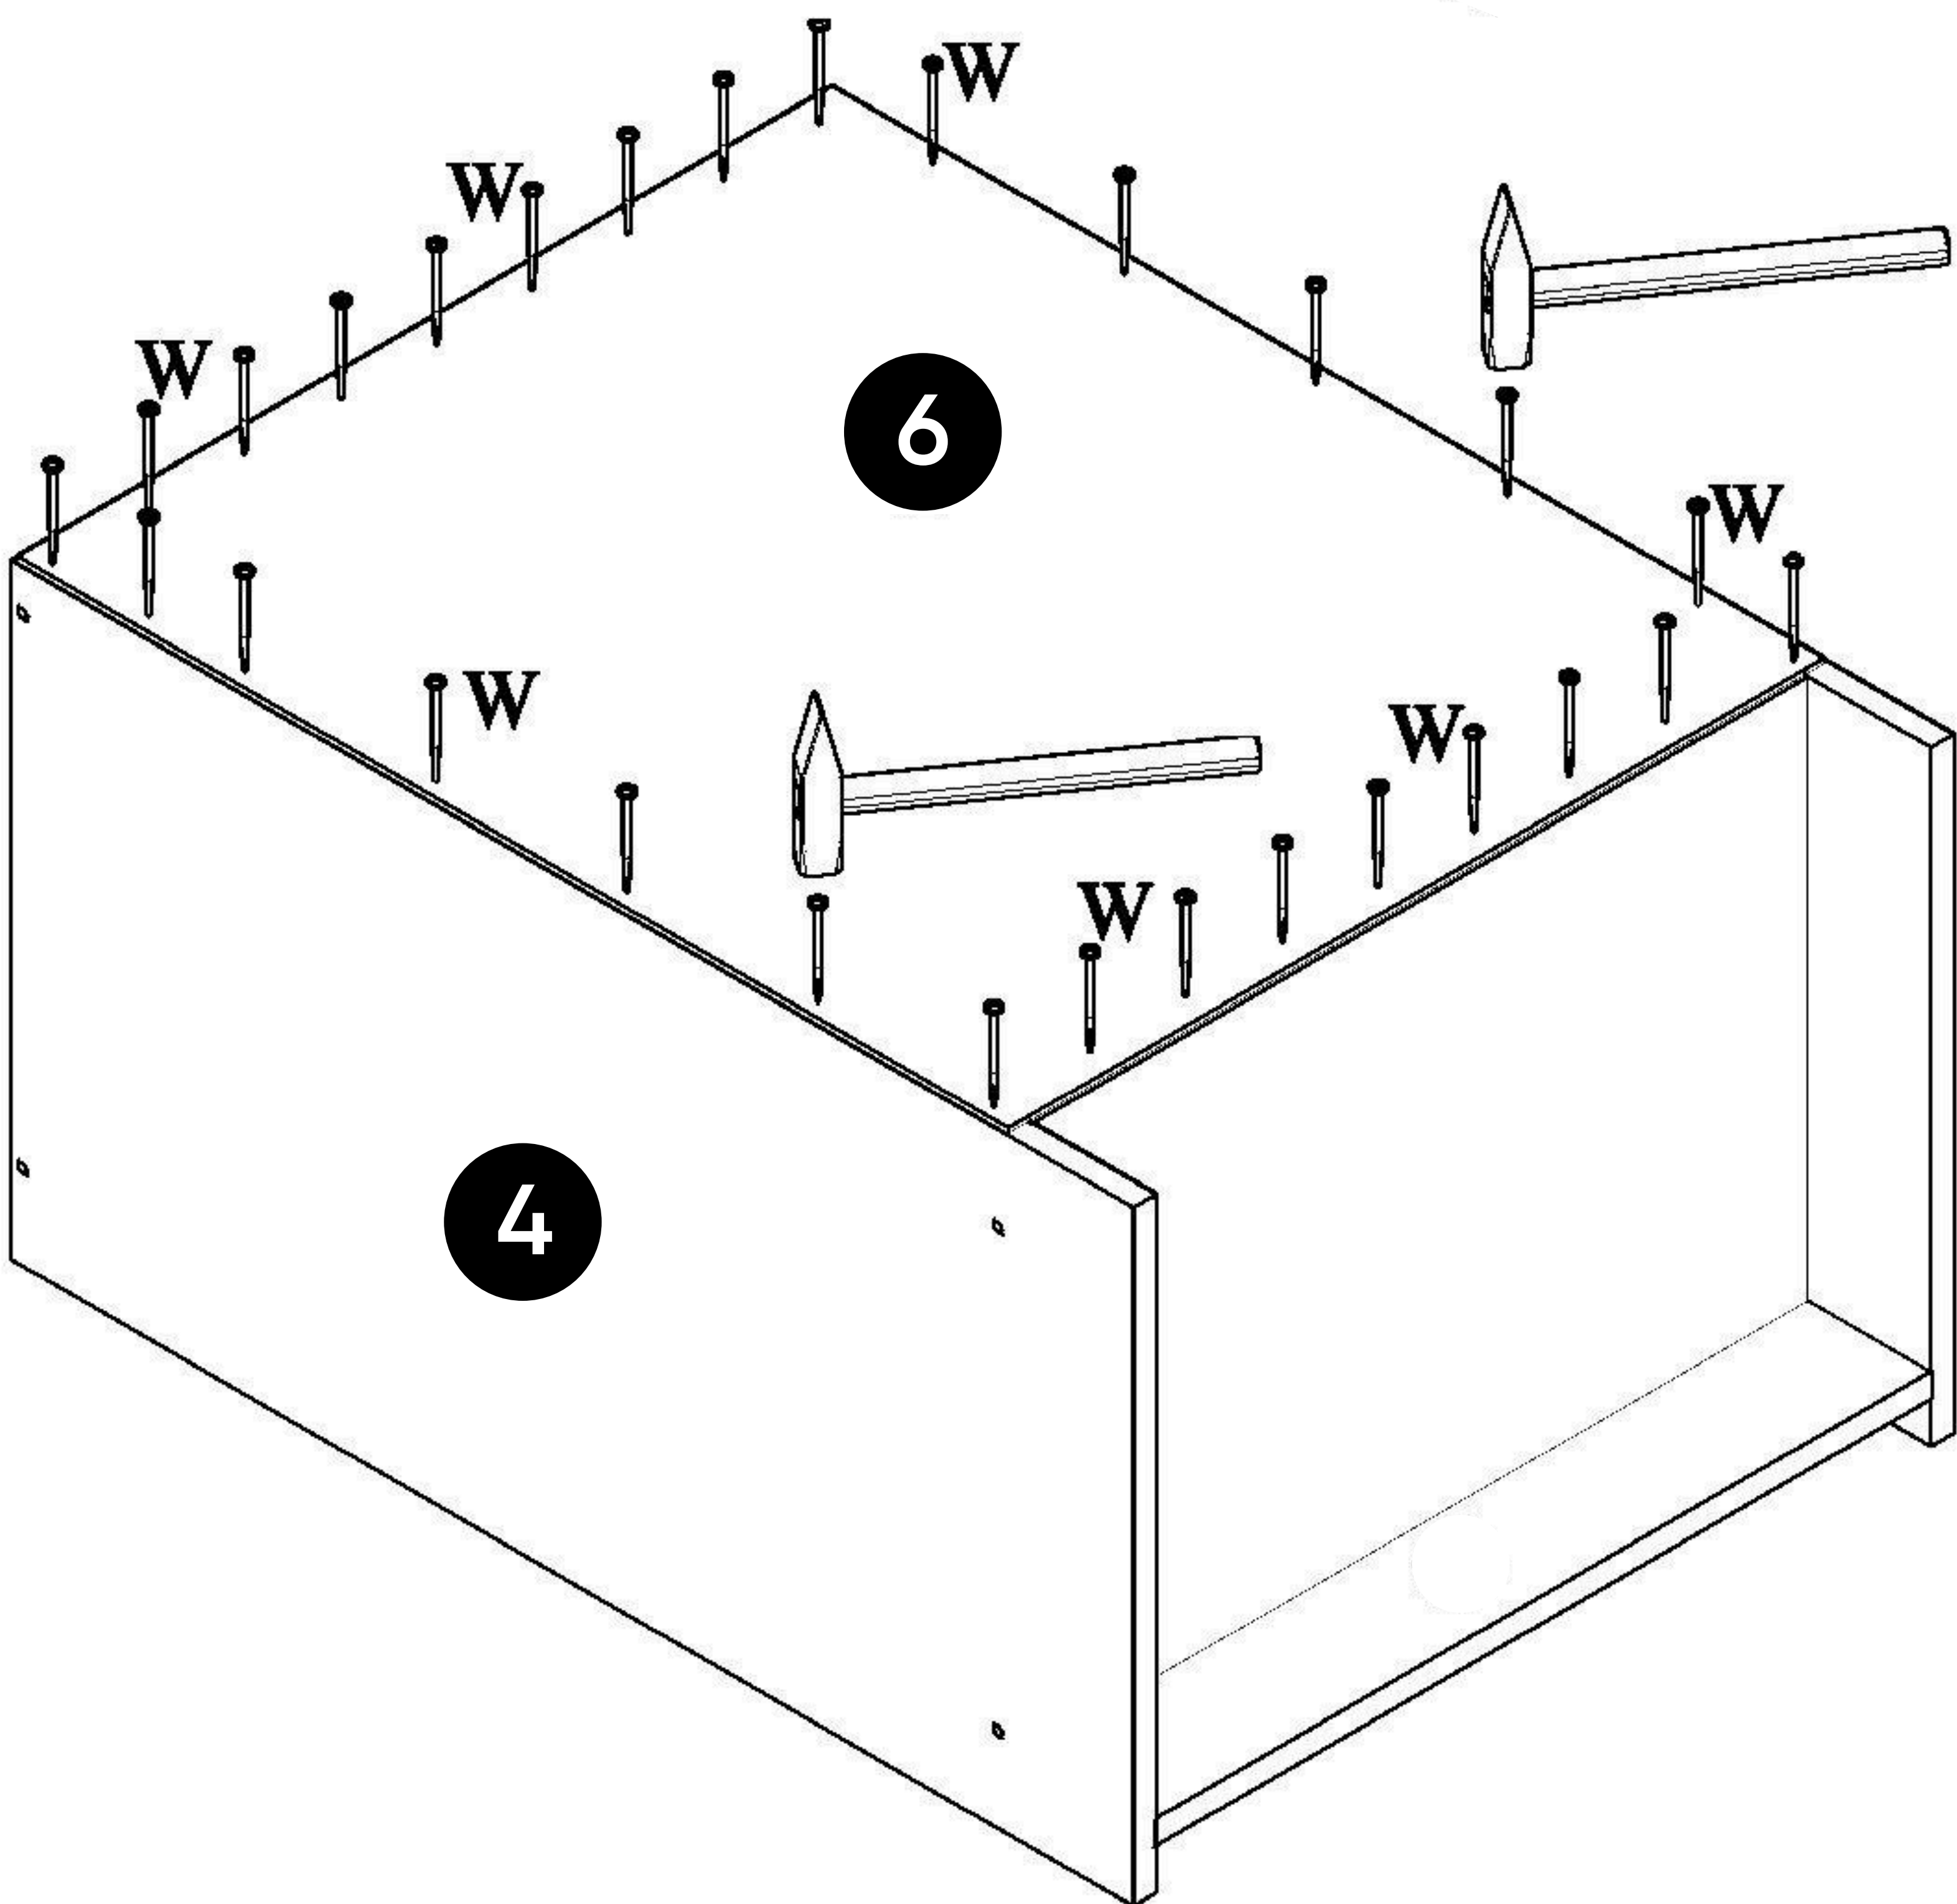

STEP - 5

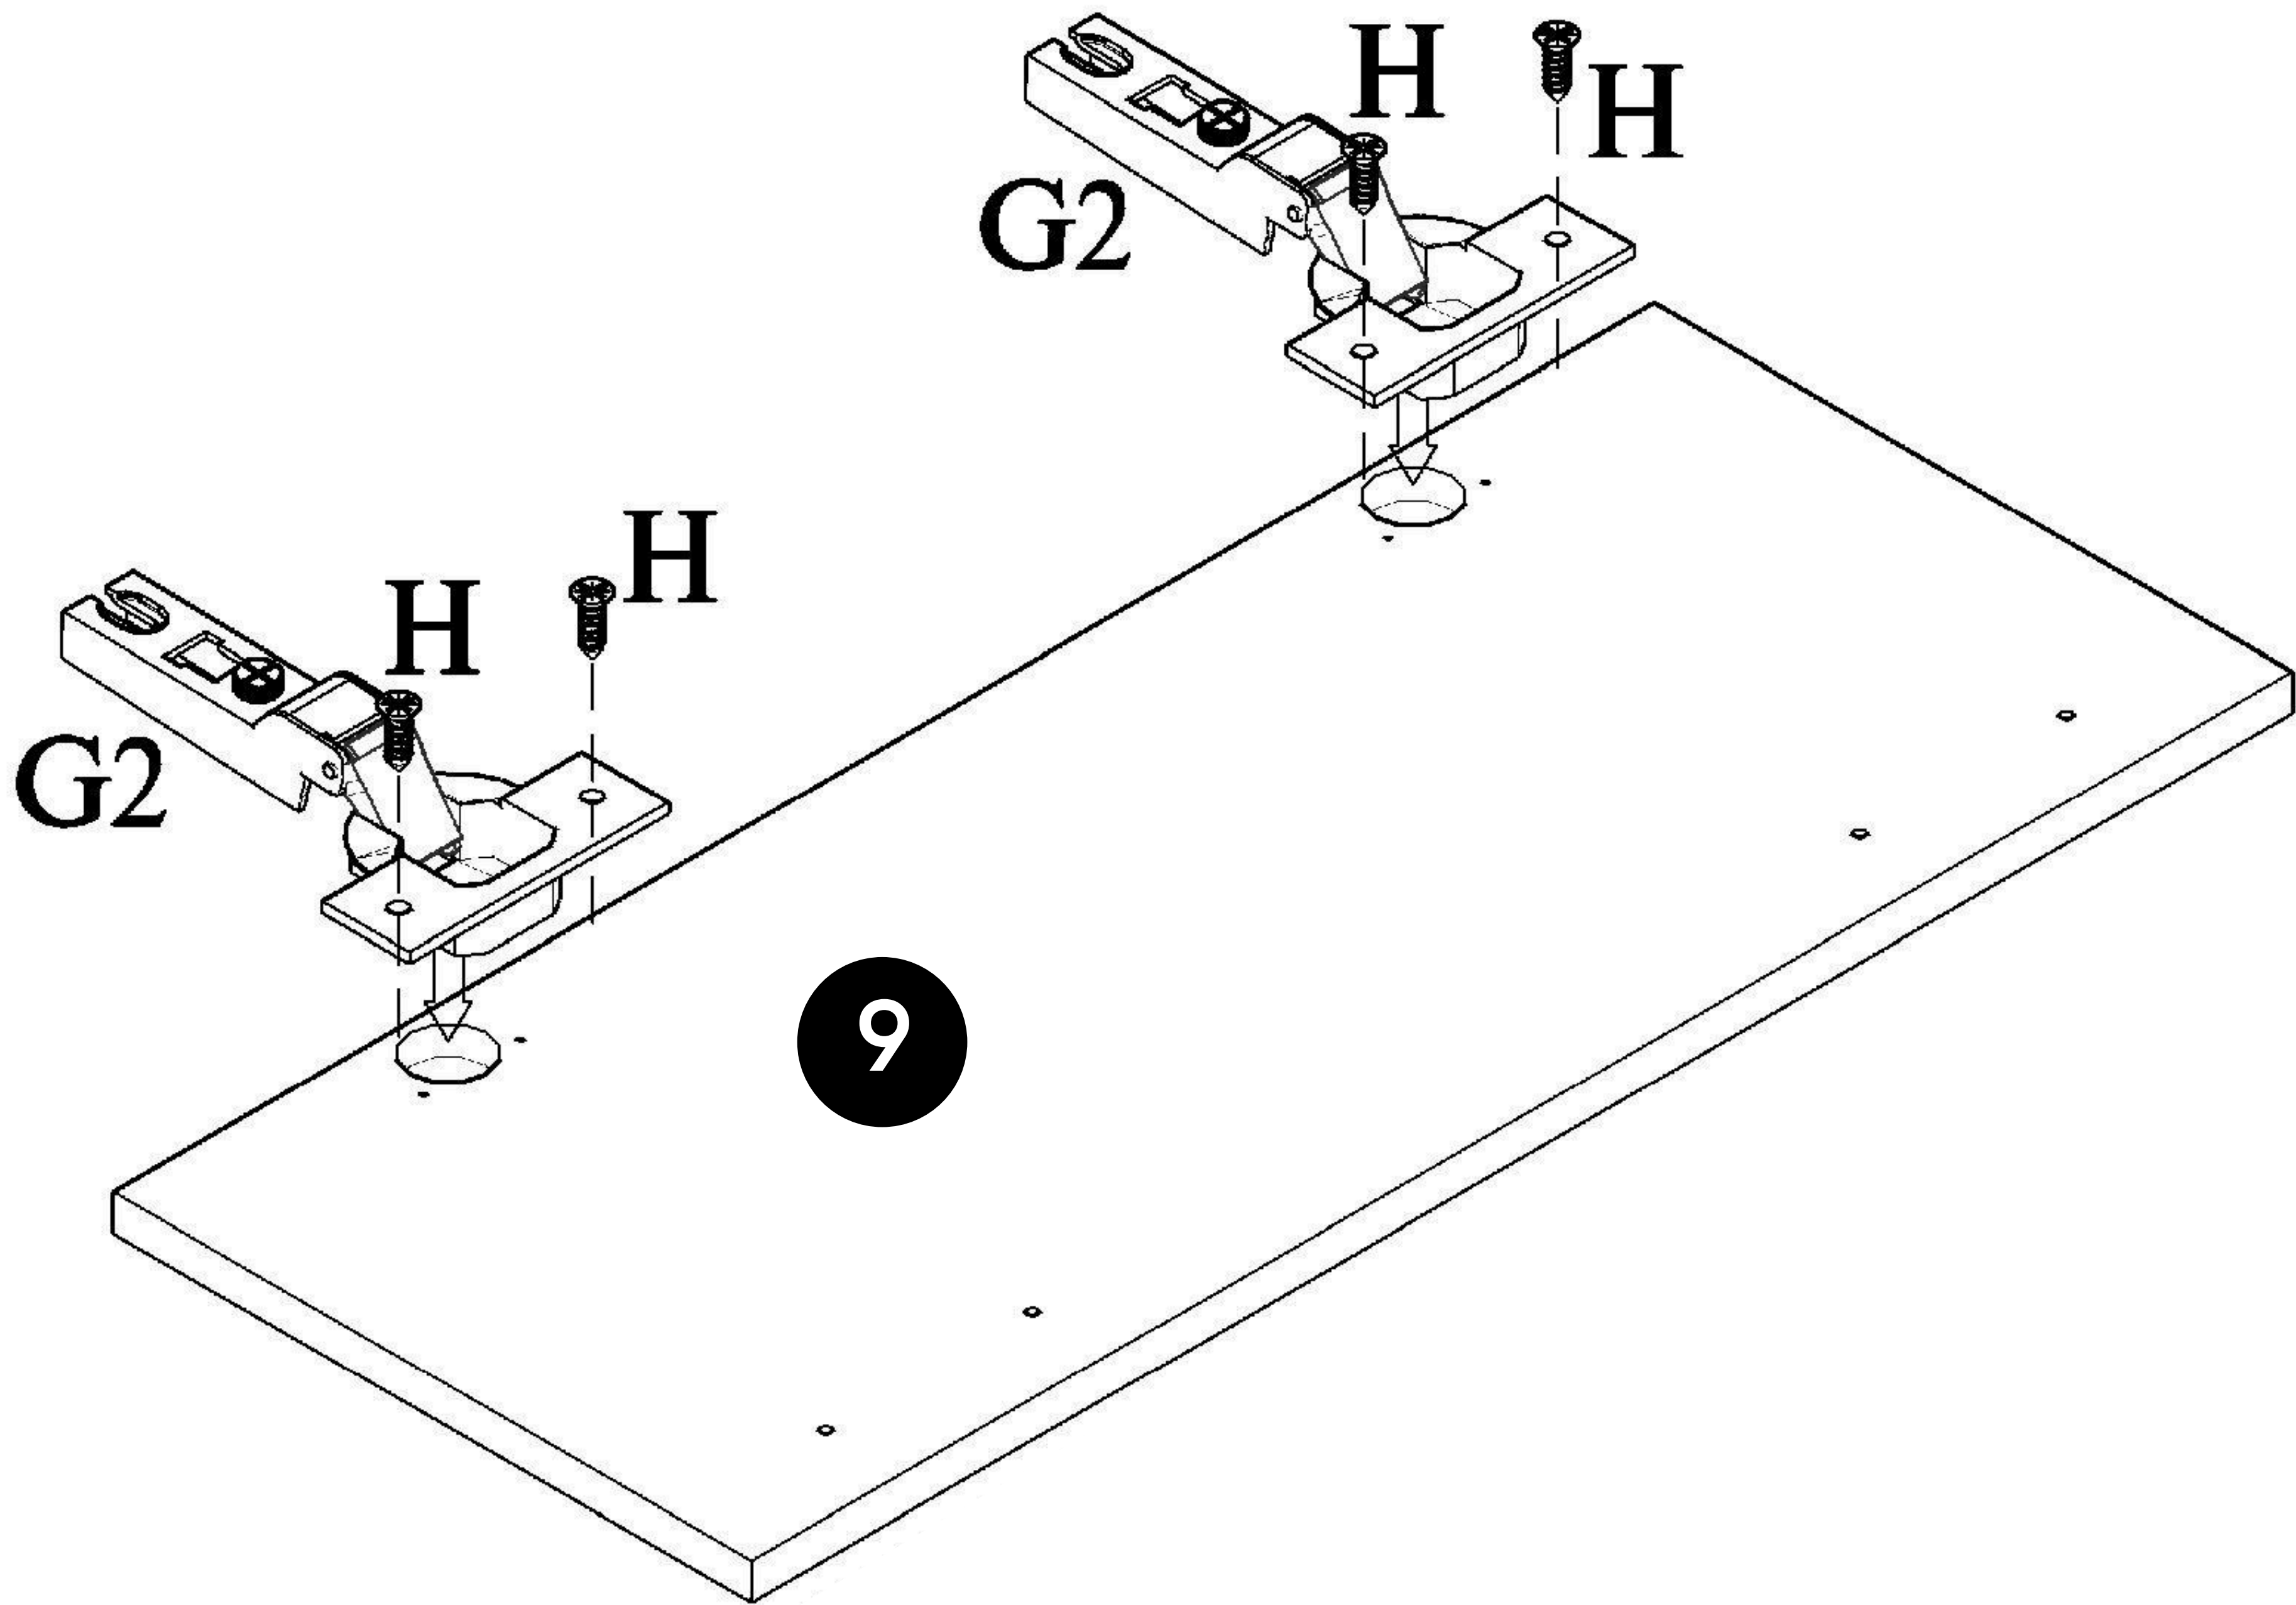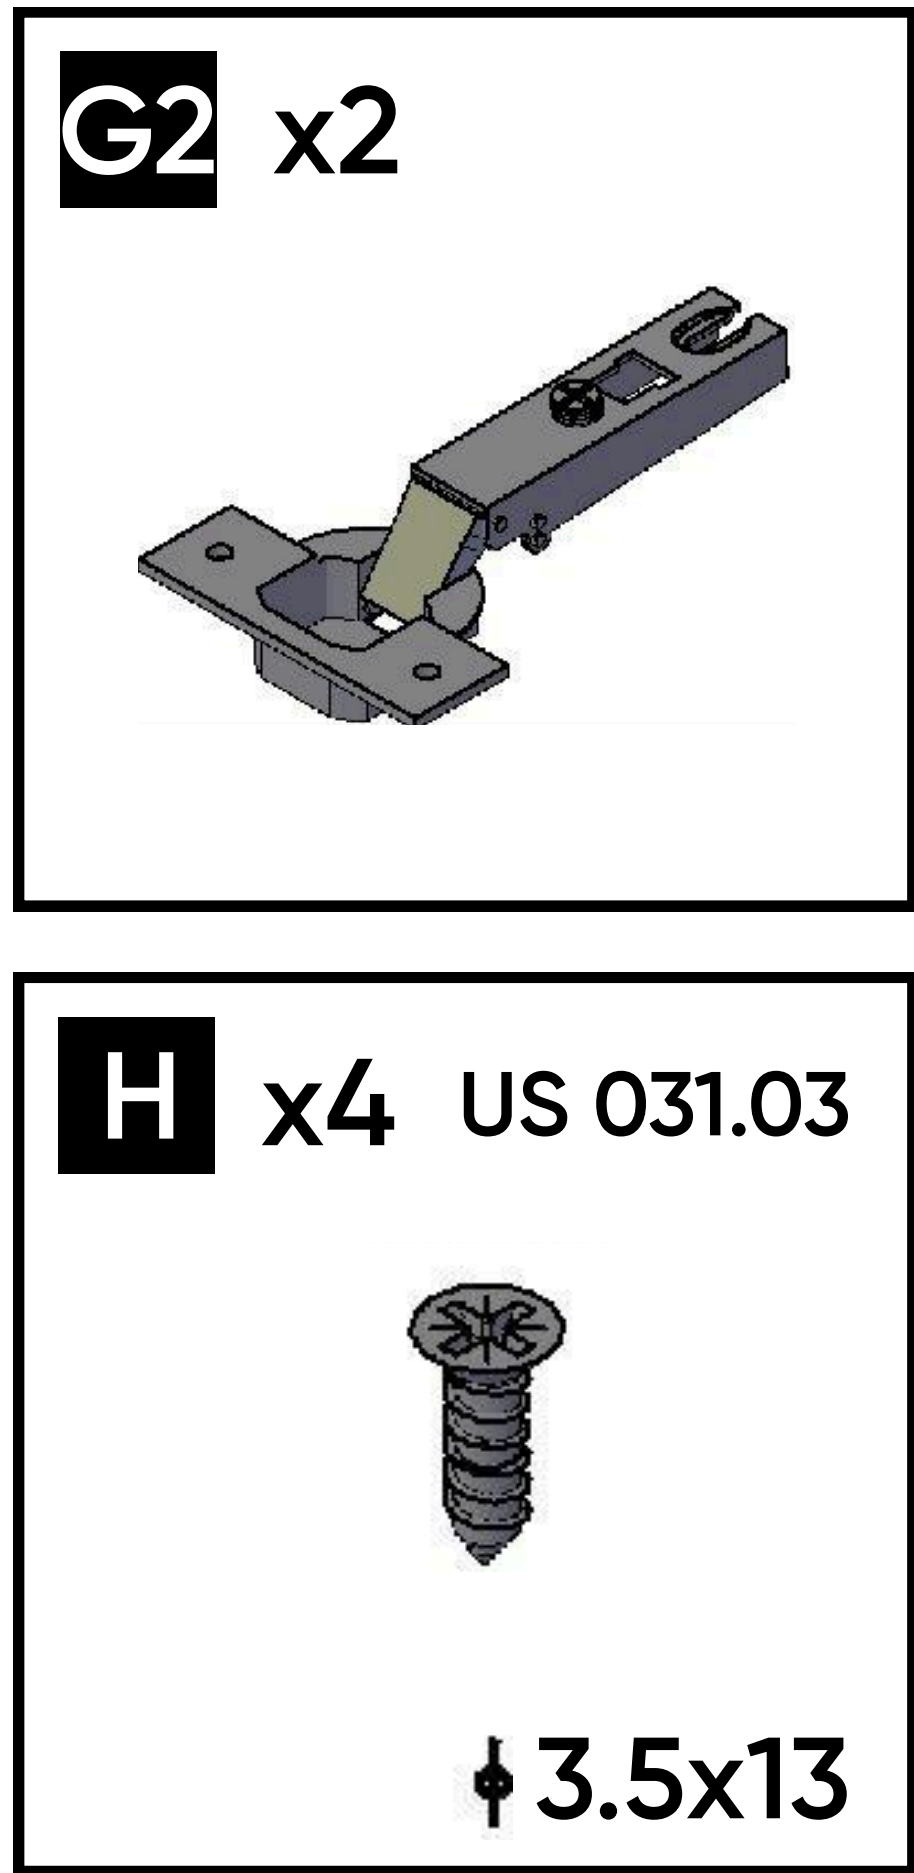



STEP - 6

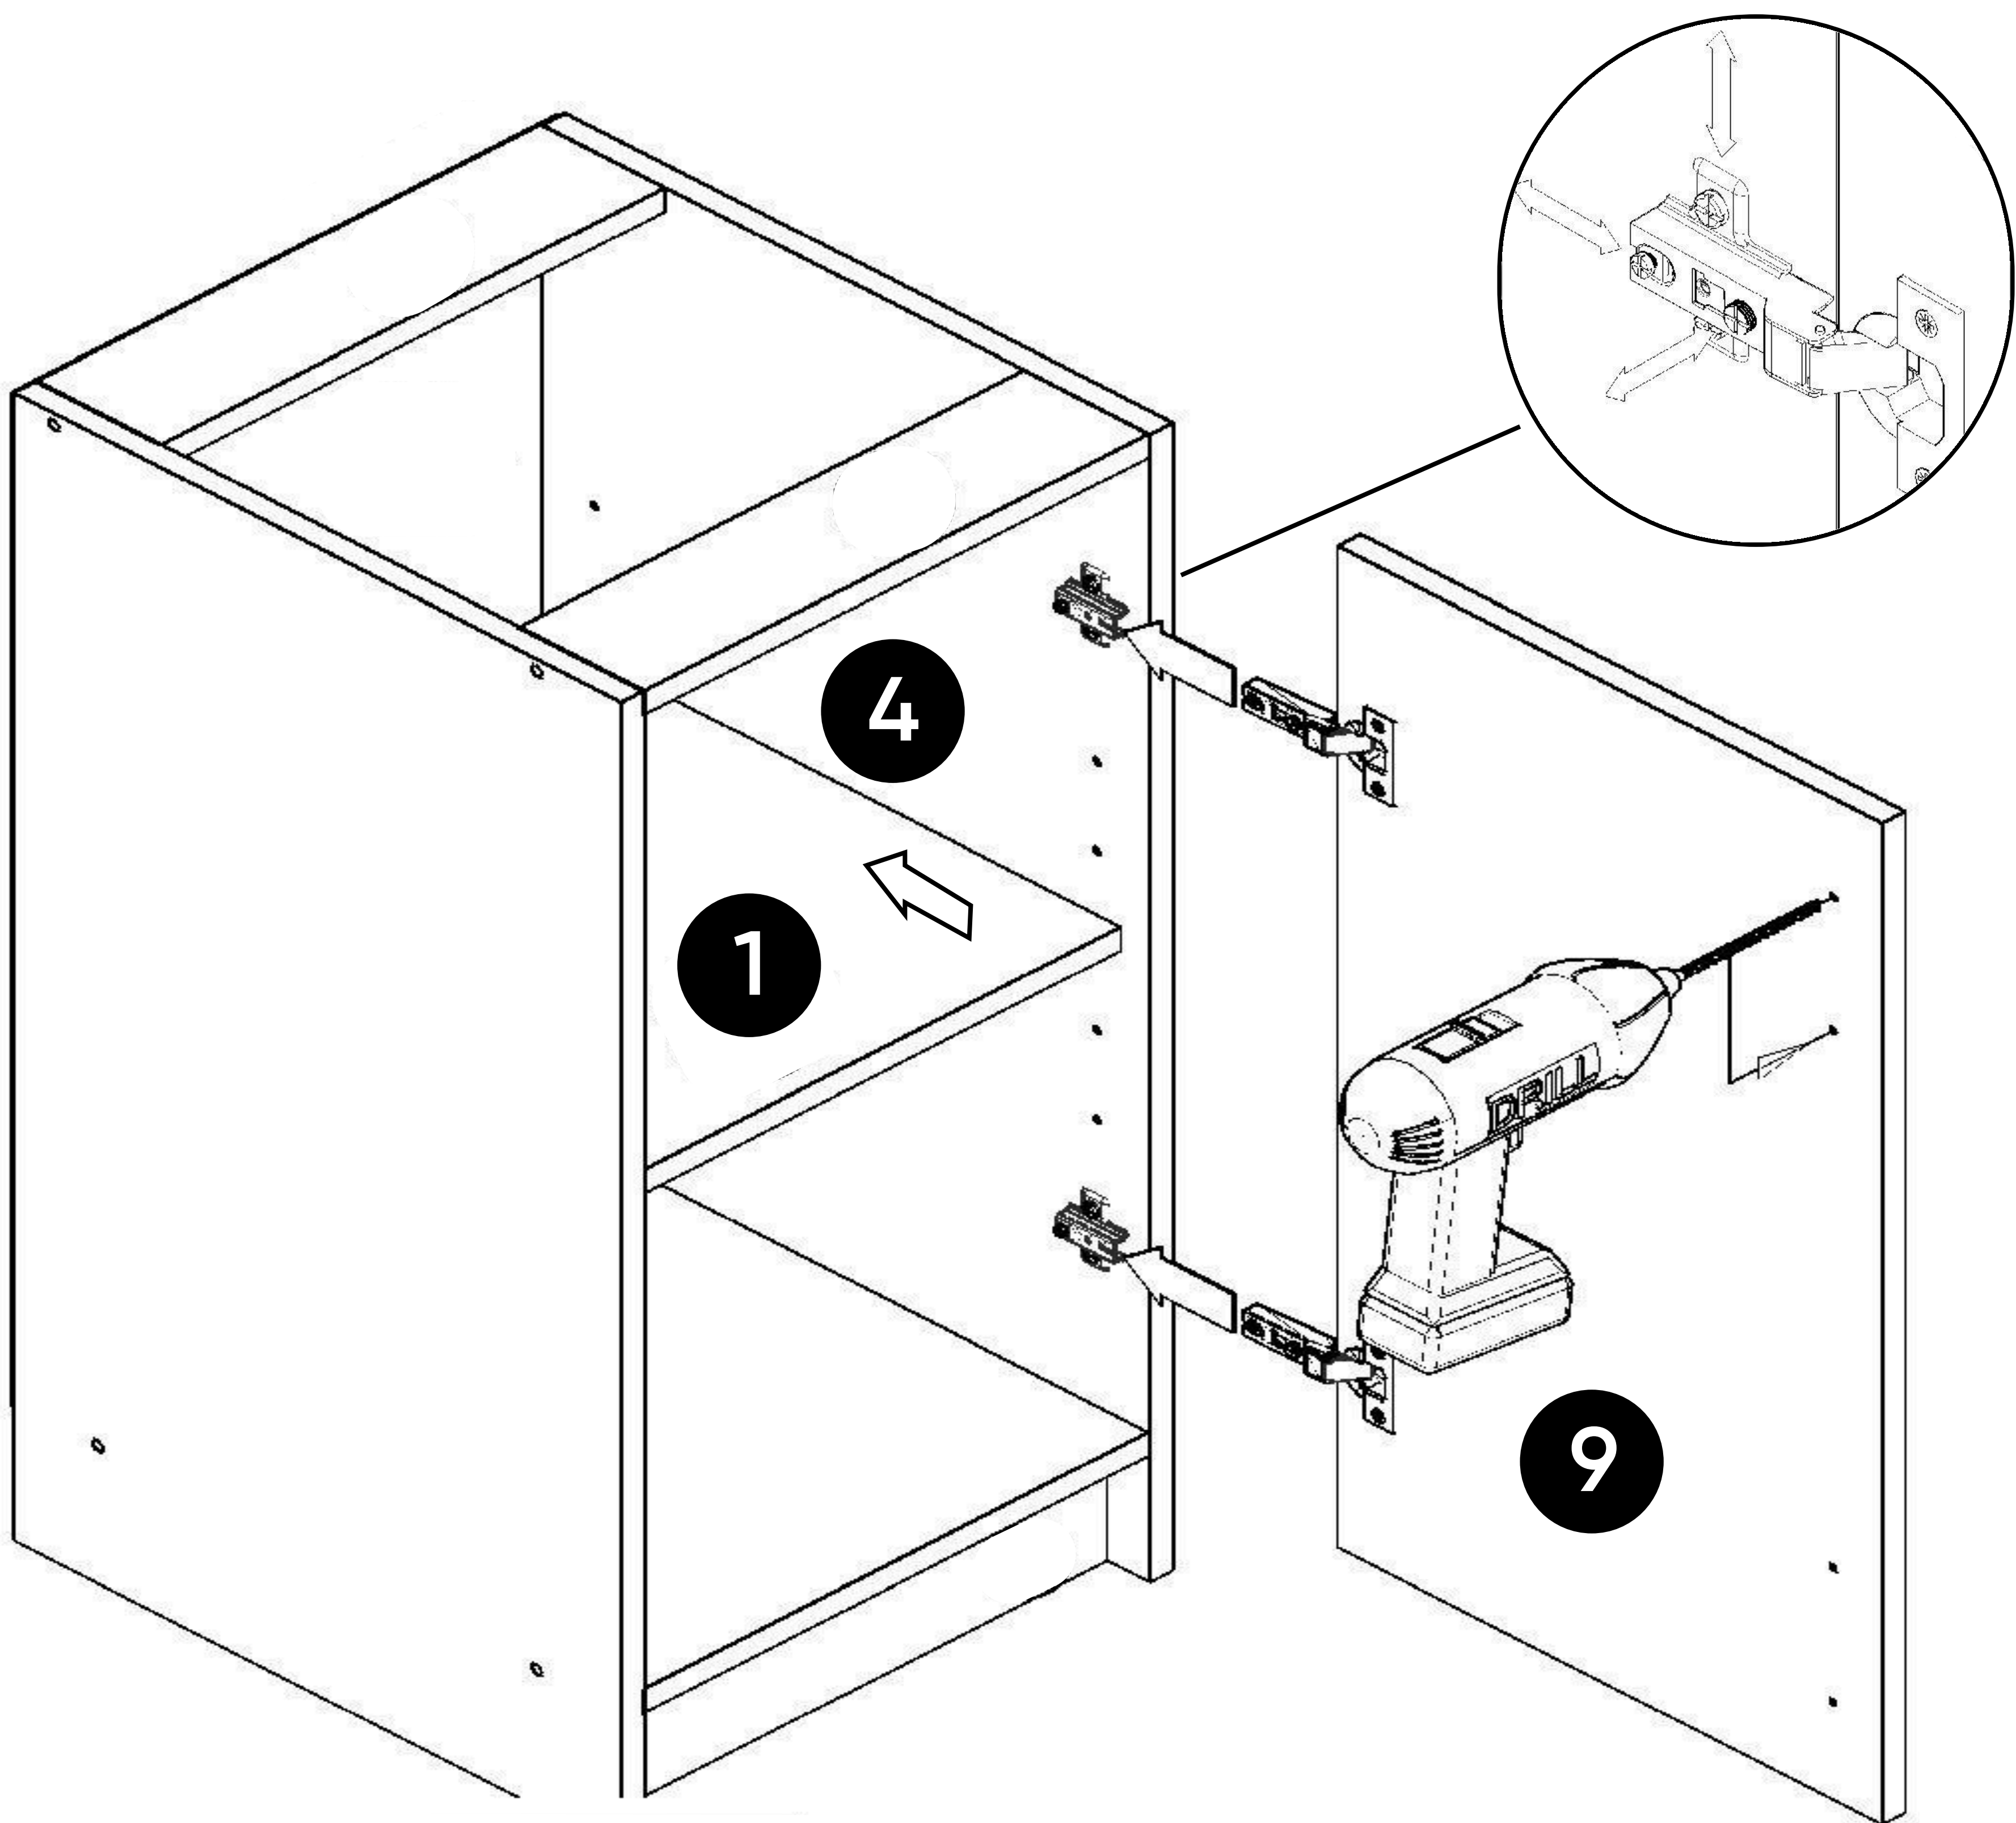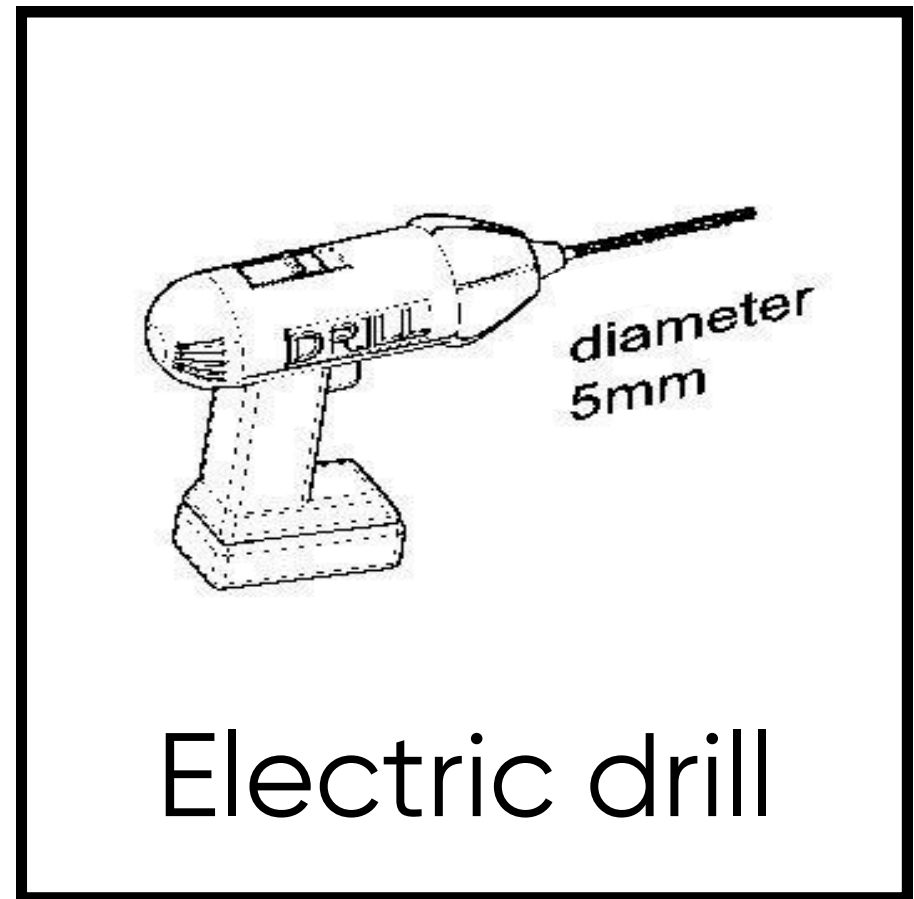


6 **NOTE:** Door can be fitted the left or right side

MODEL B500

STEP - 7

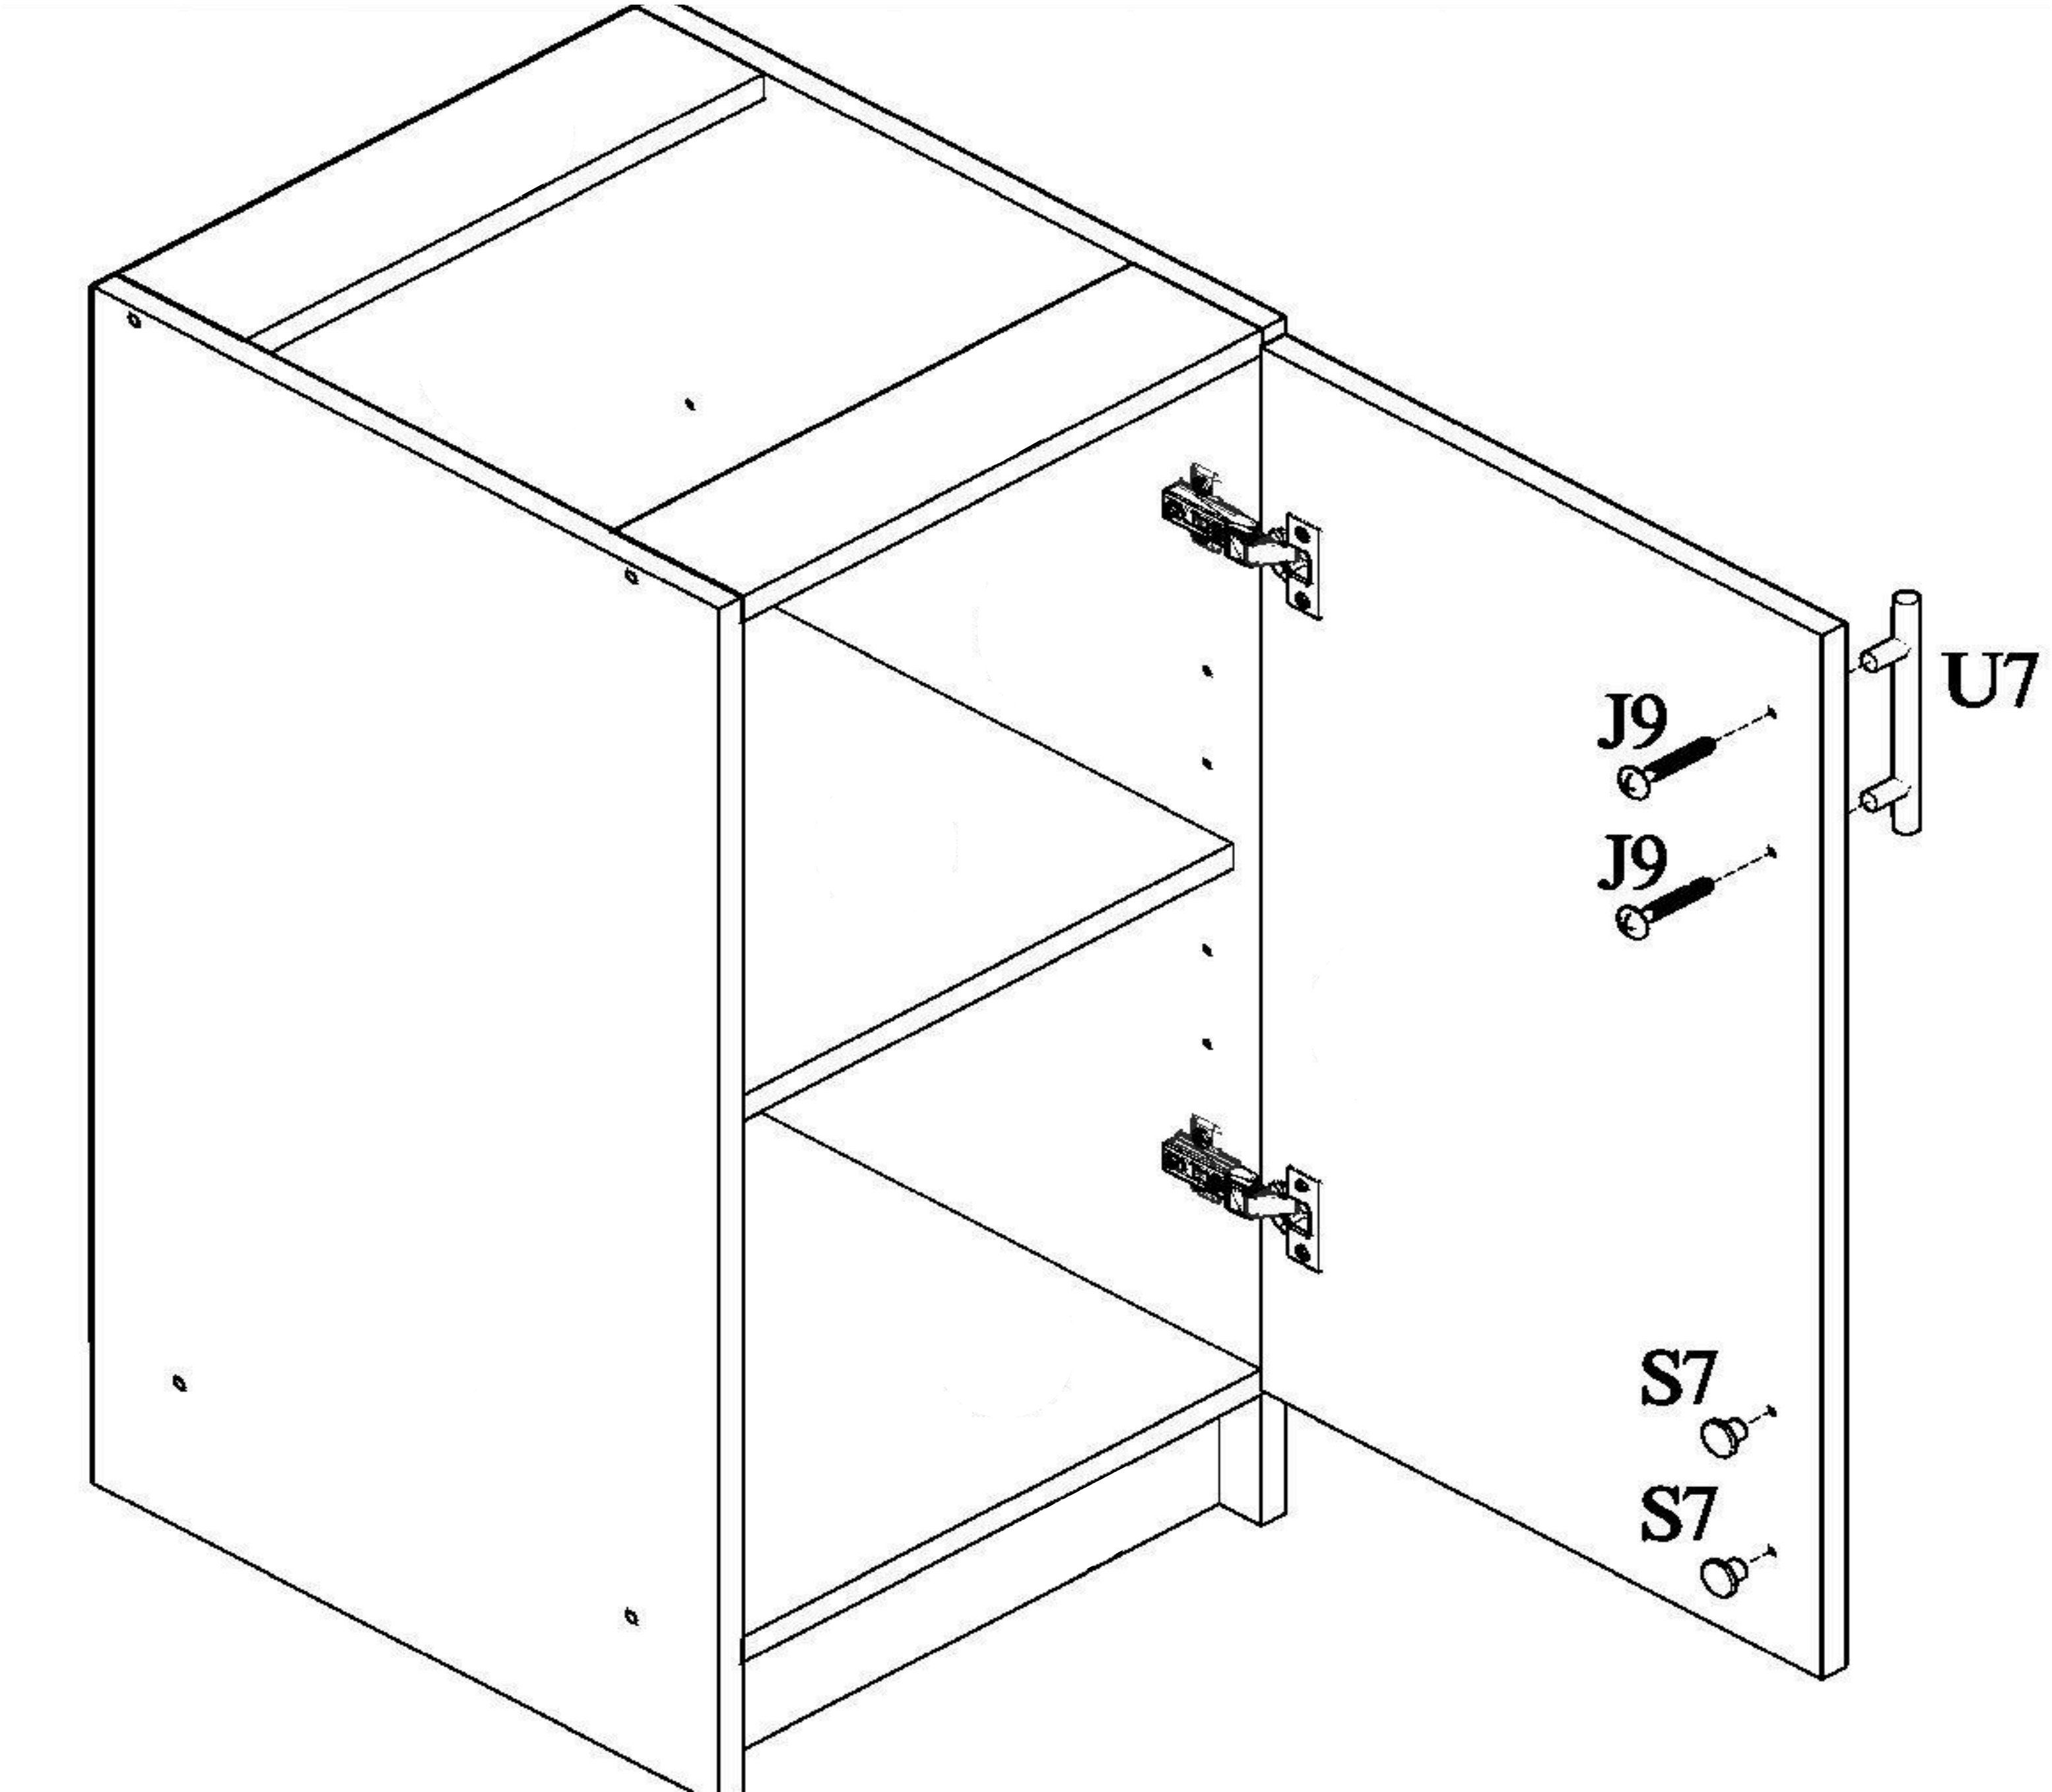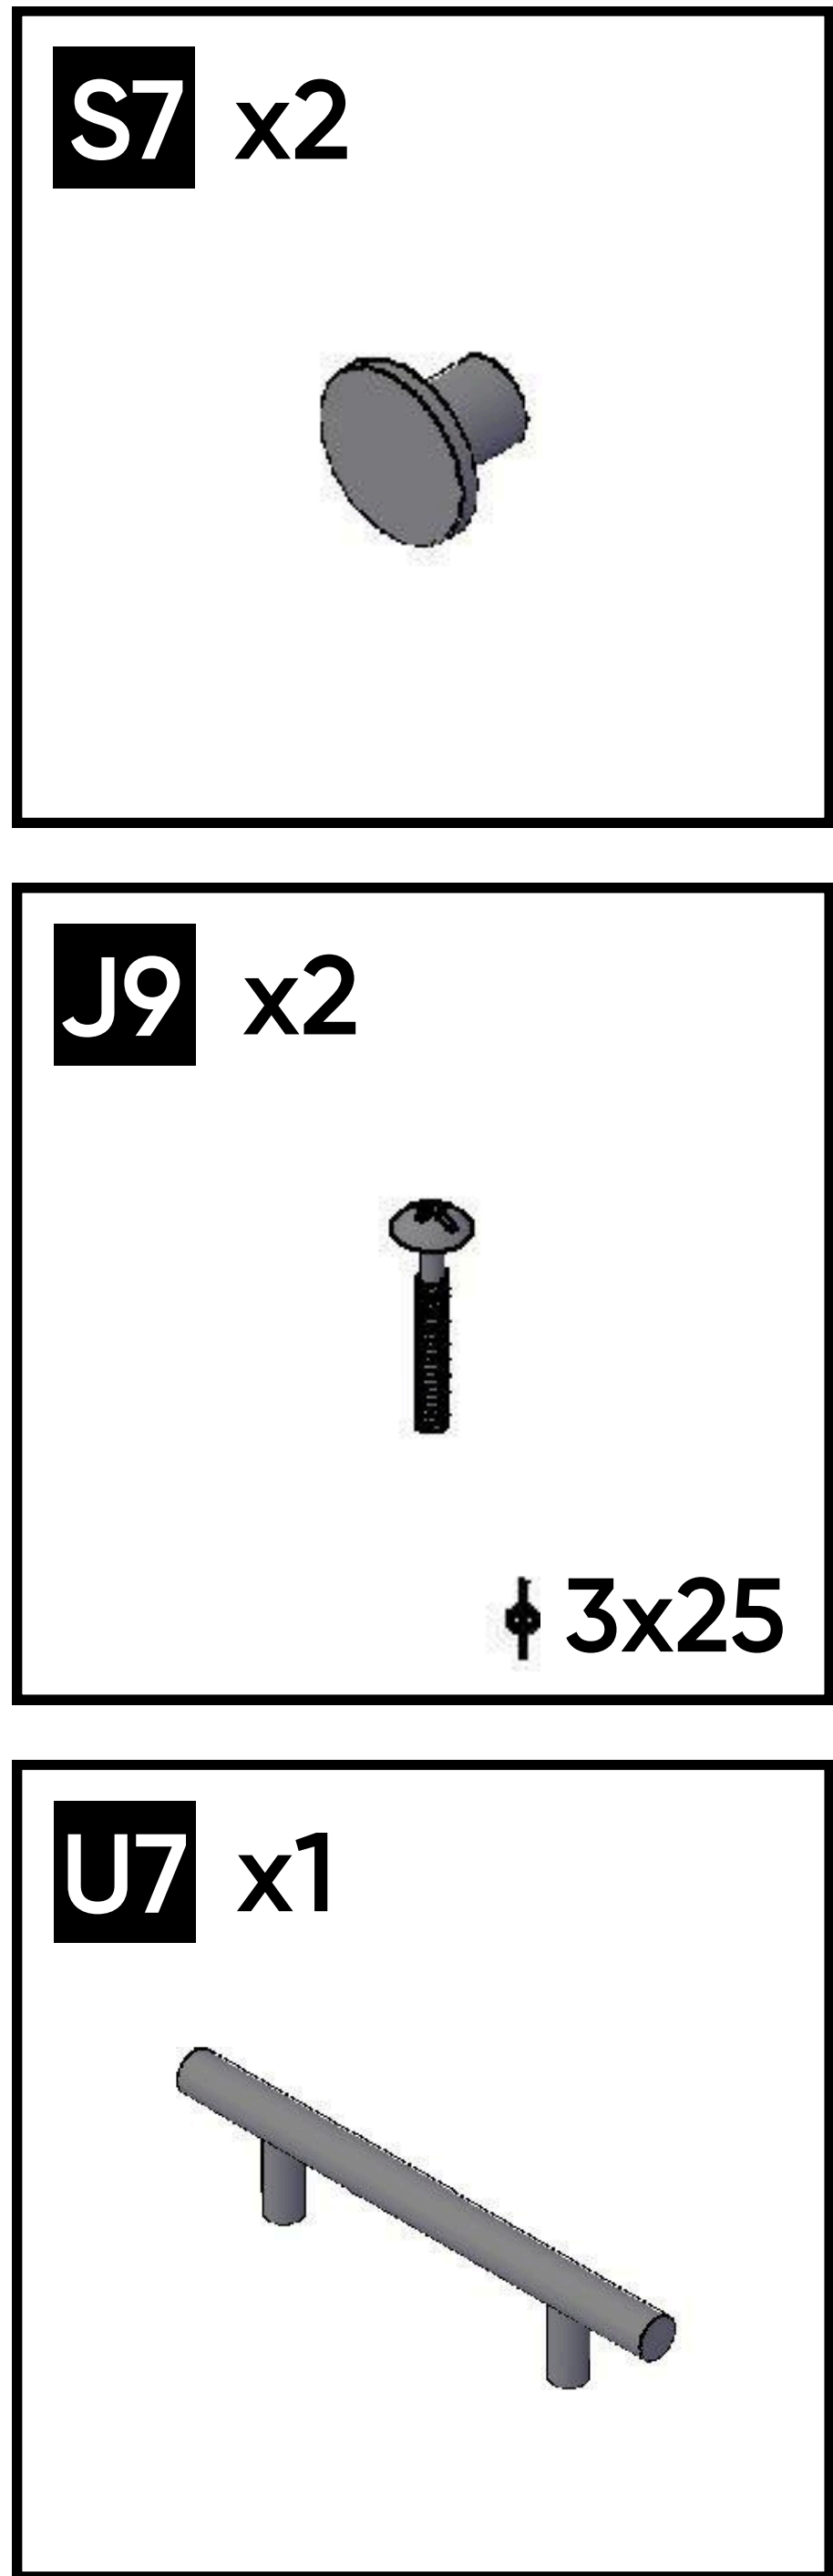

STEP - 8

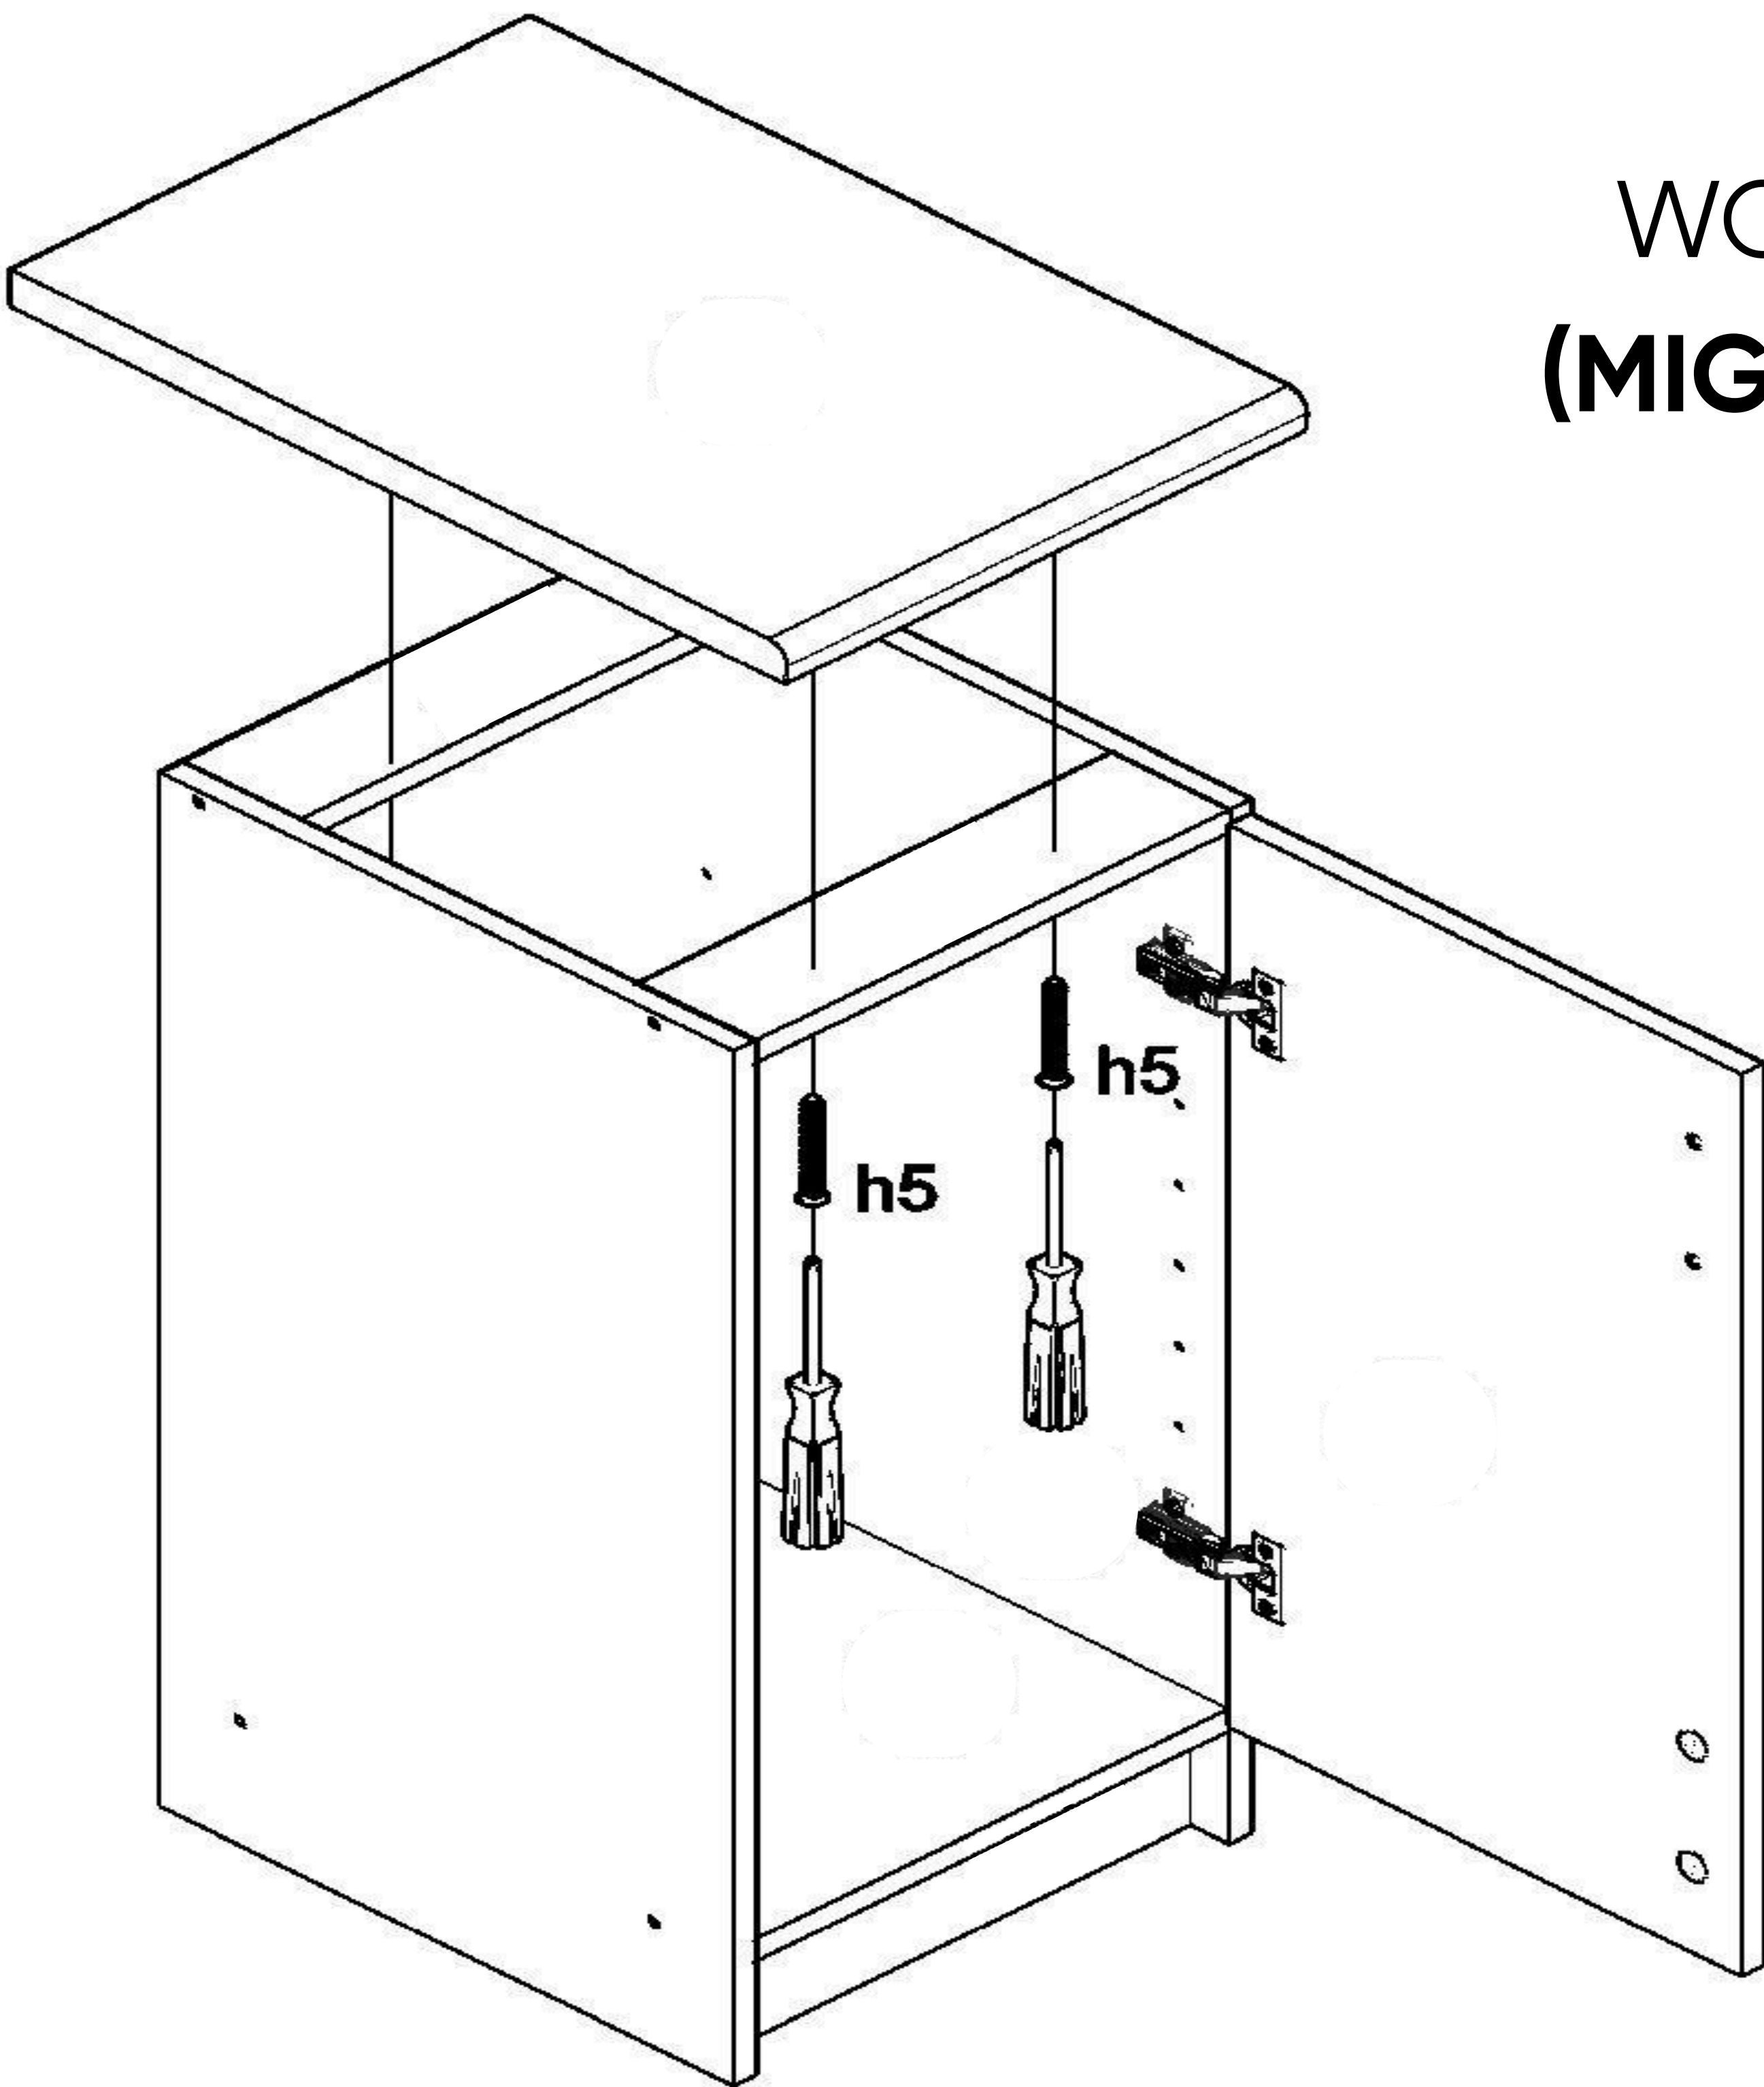

!

PAY ATTENTION:
WORKTOP IS OPTIONAL
(MIGHT NOT BE INCLUDED)