



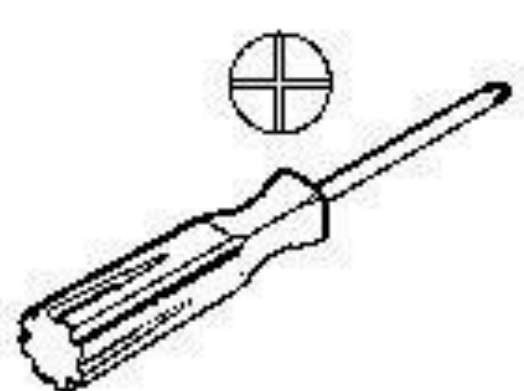


ASSEMBLY INSTRUCTIONS

KITCHEN WALL UNIT 600MM


MODEL W600

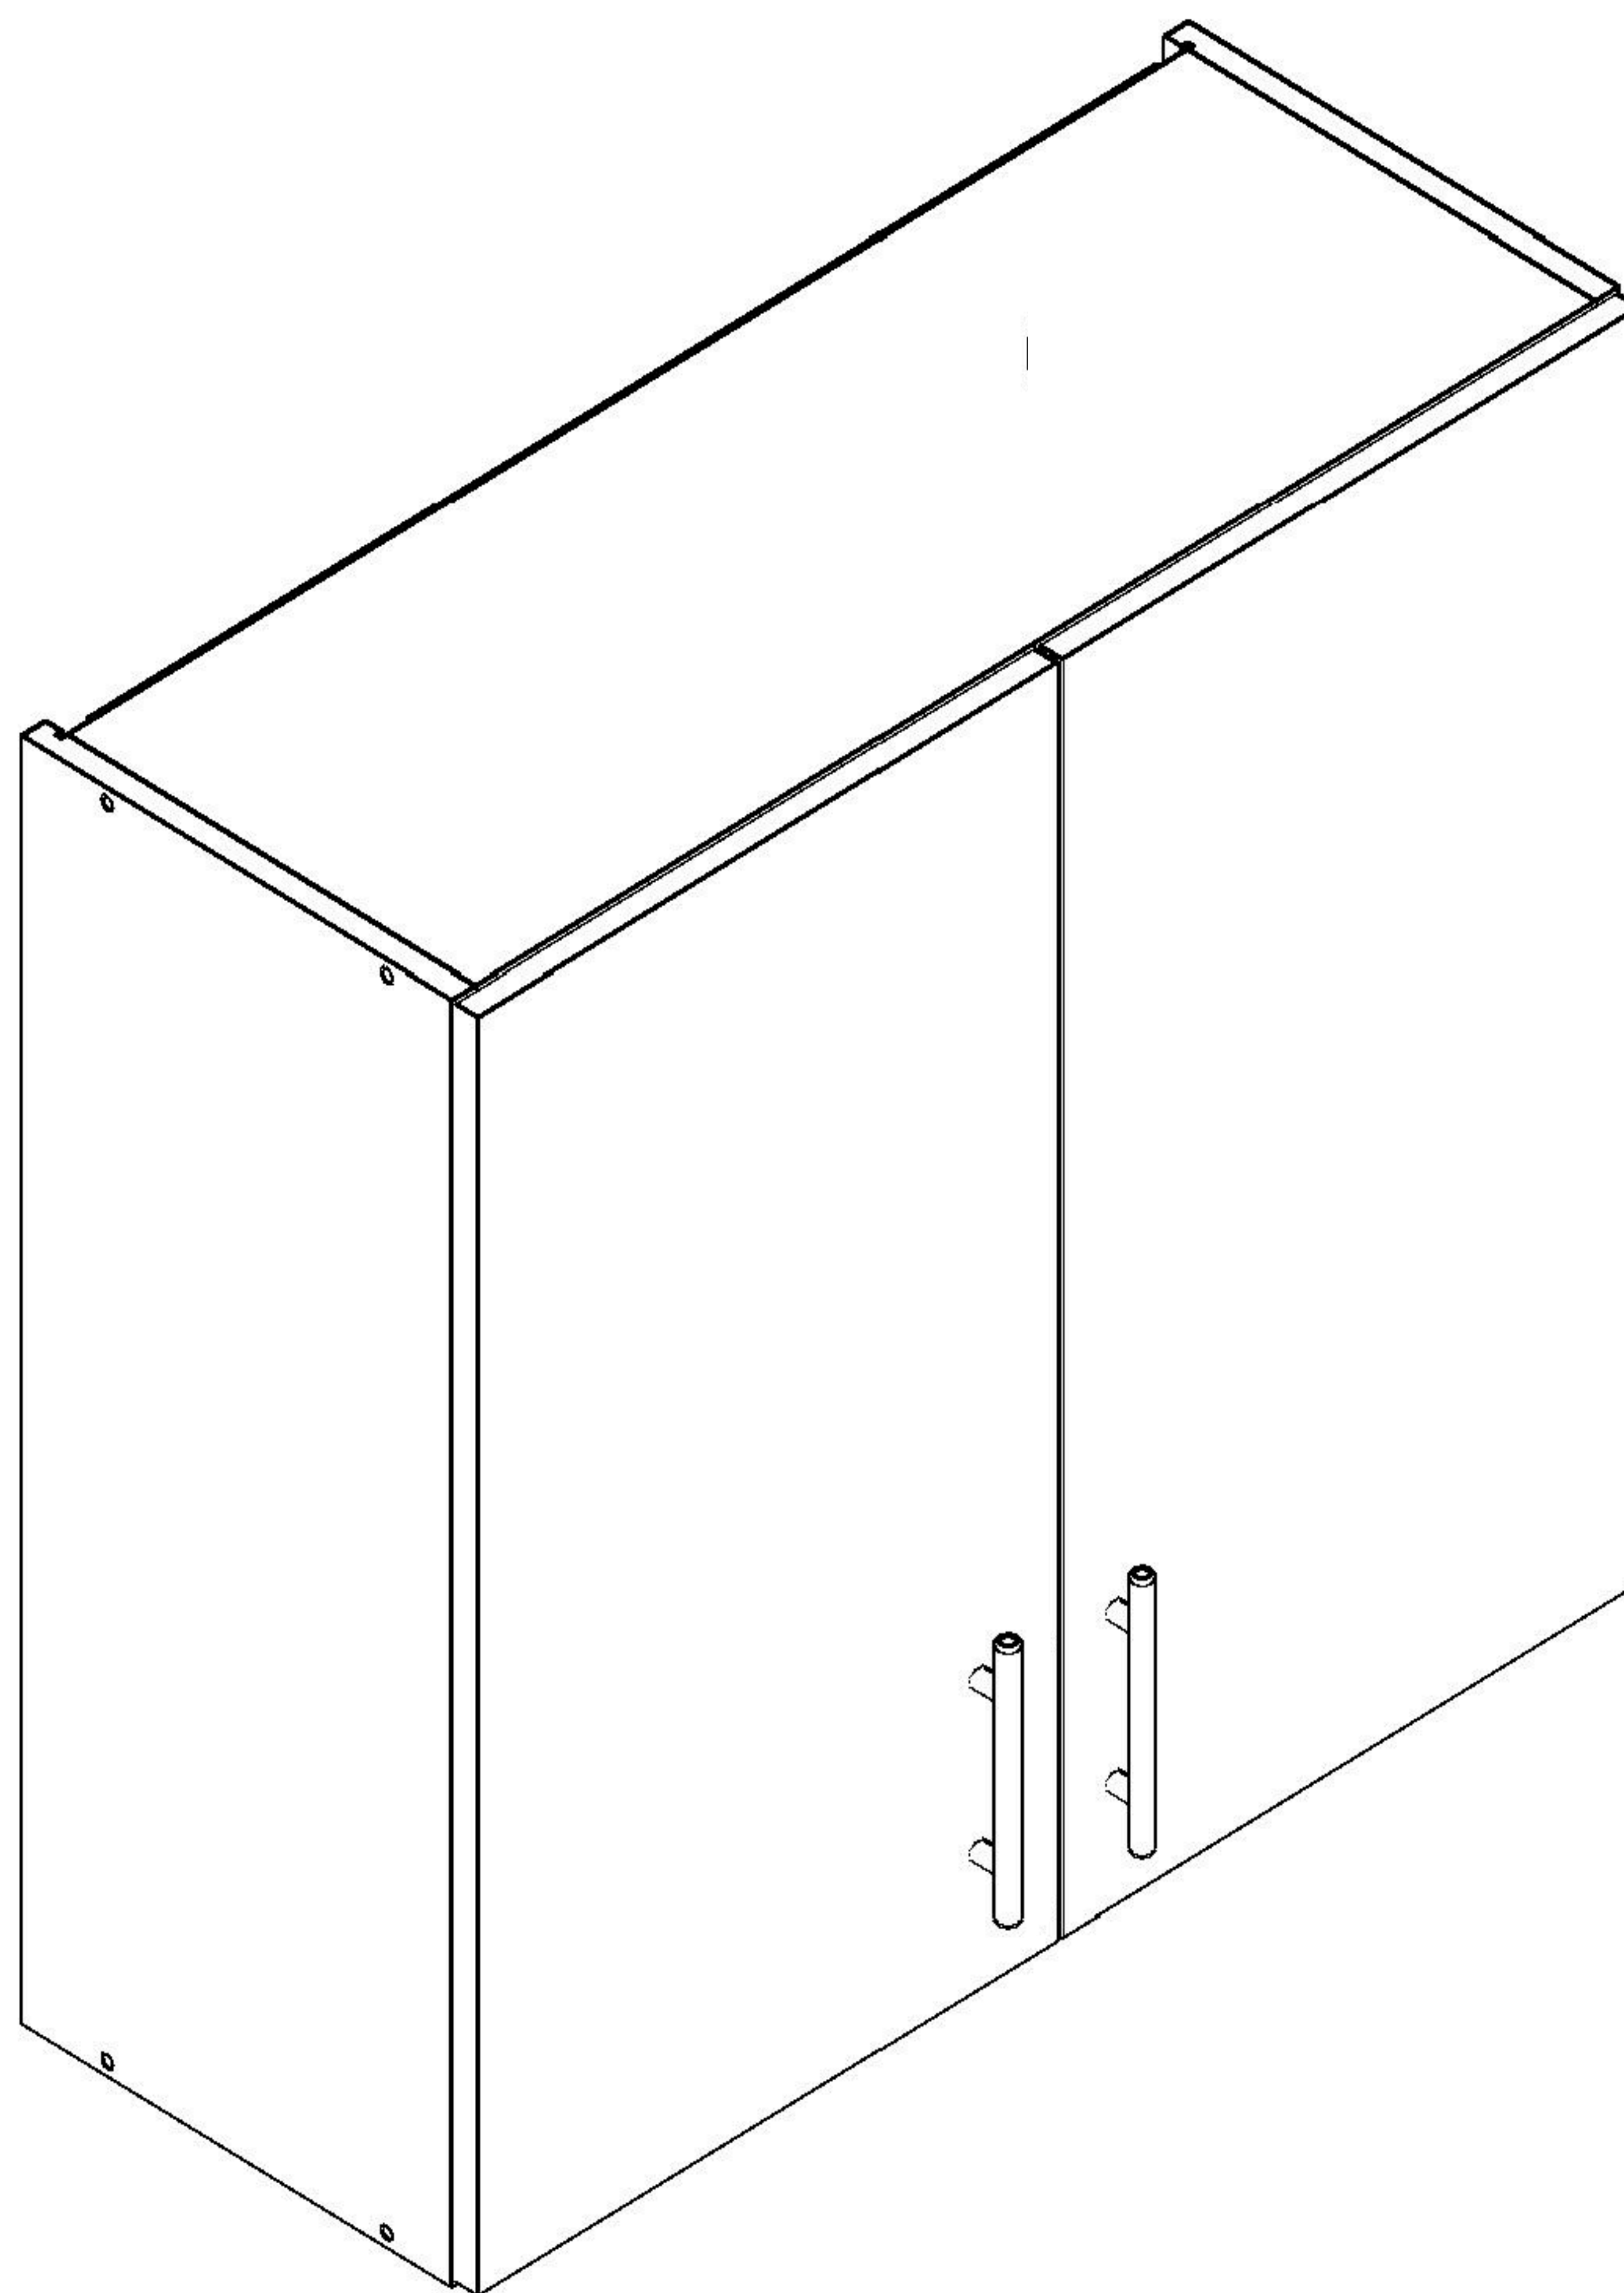


Cross-head
screwdriver

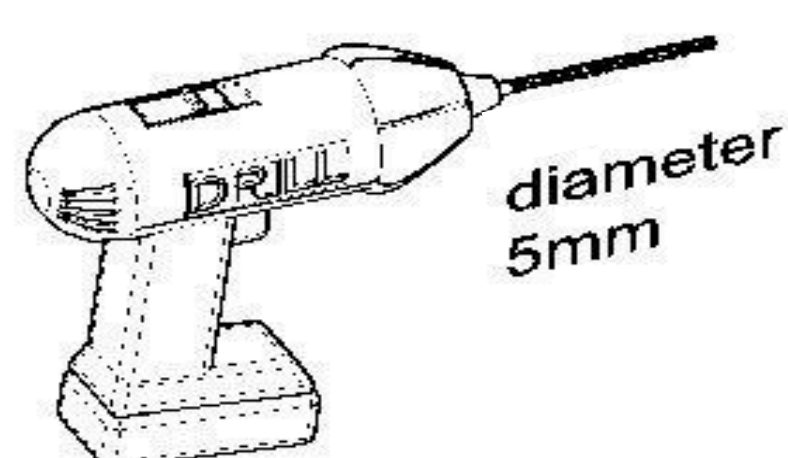

Electric
drill

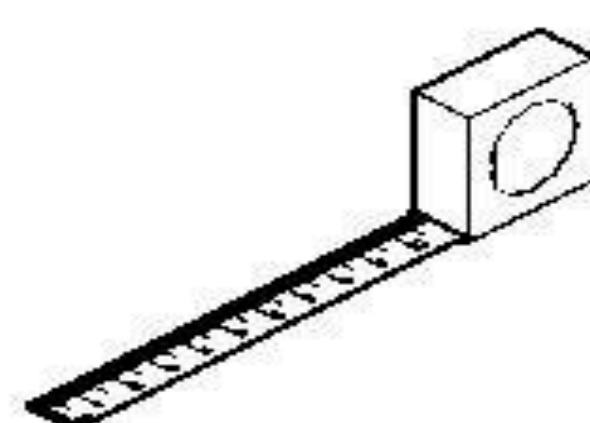

Rule

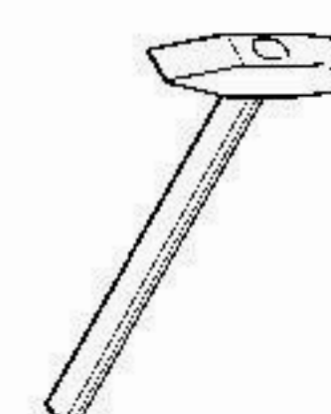

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below


1

x1

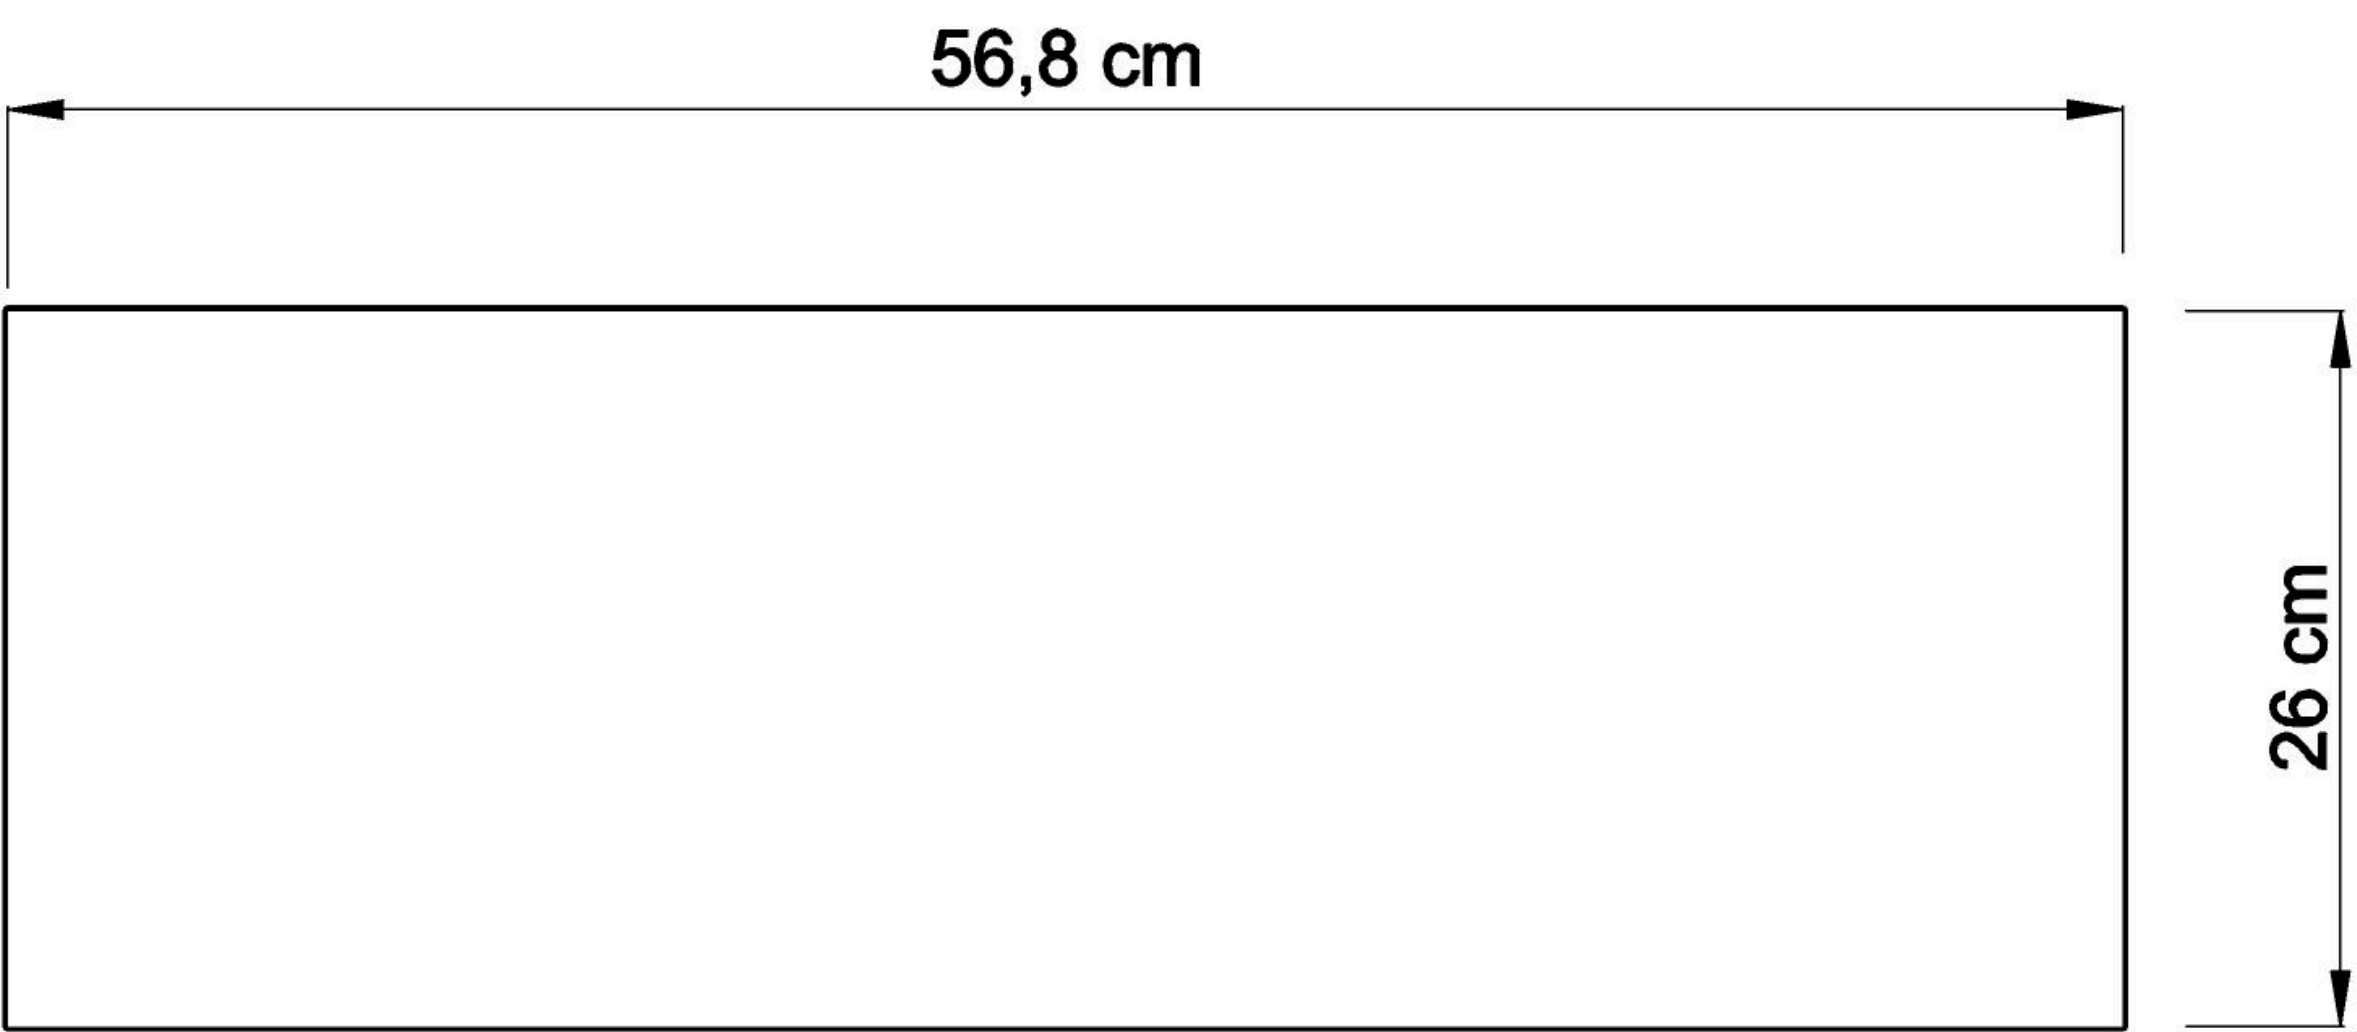


2

x2

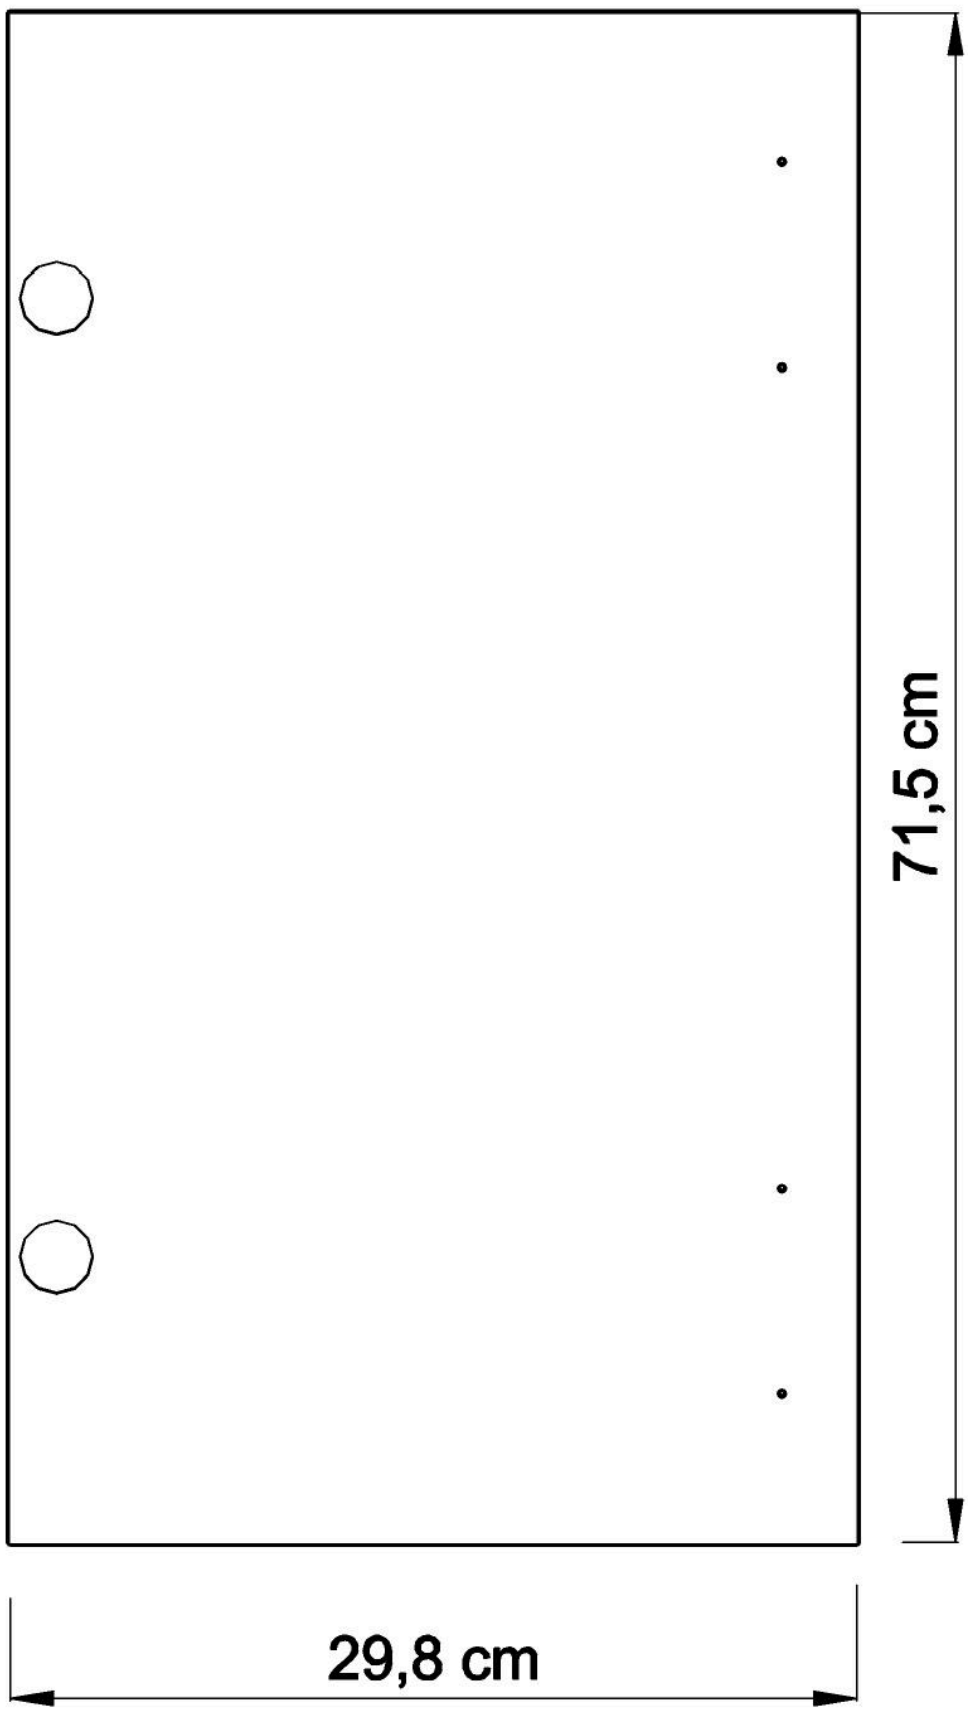


3

x2

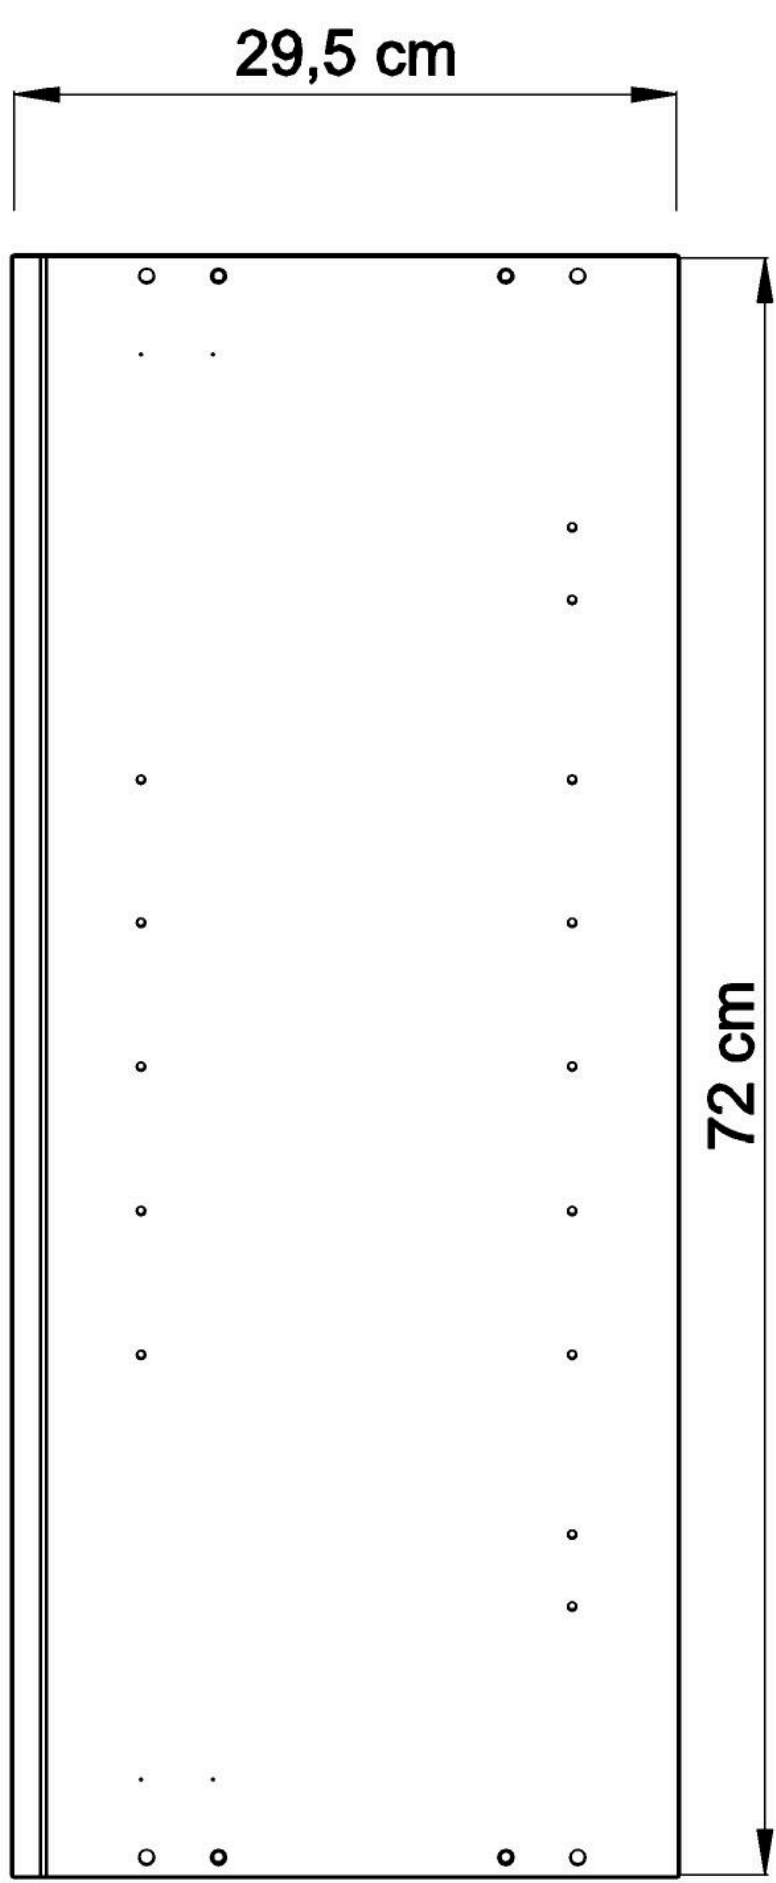


4

x1

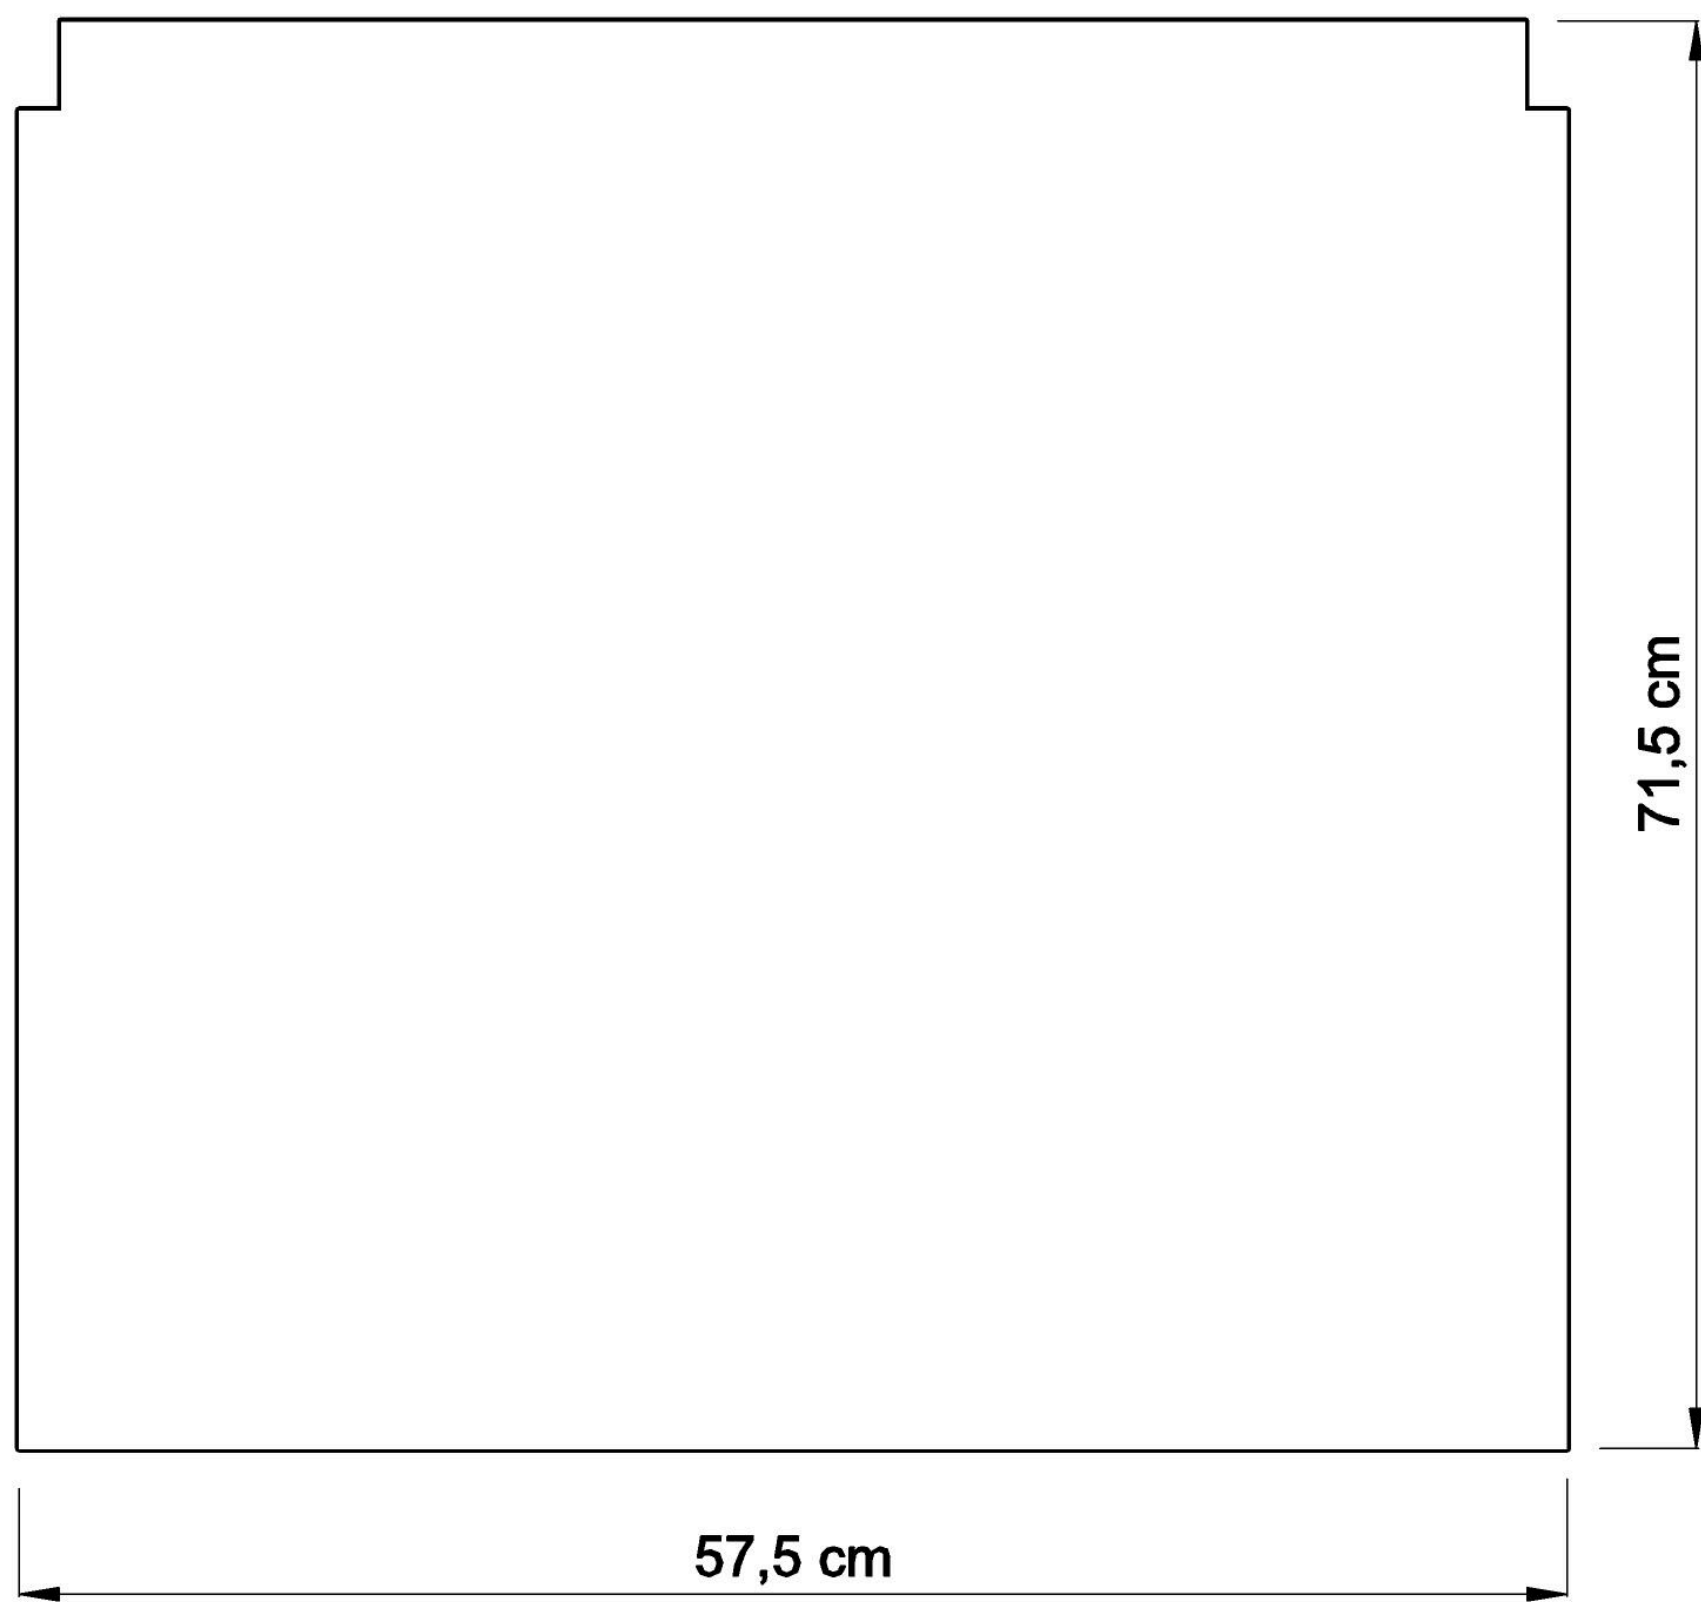












5

x2

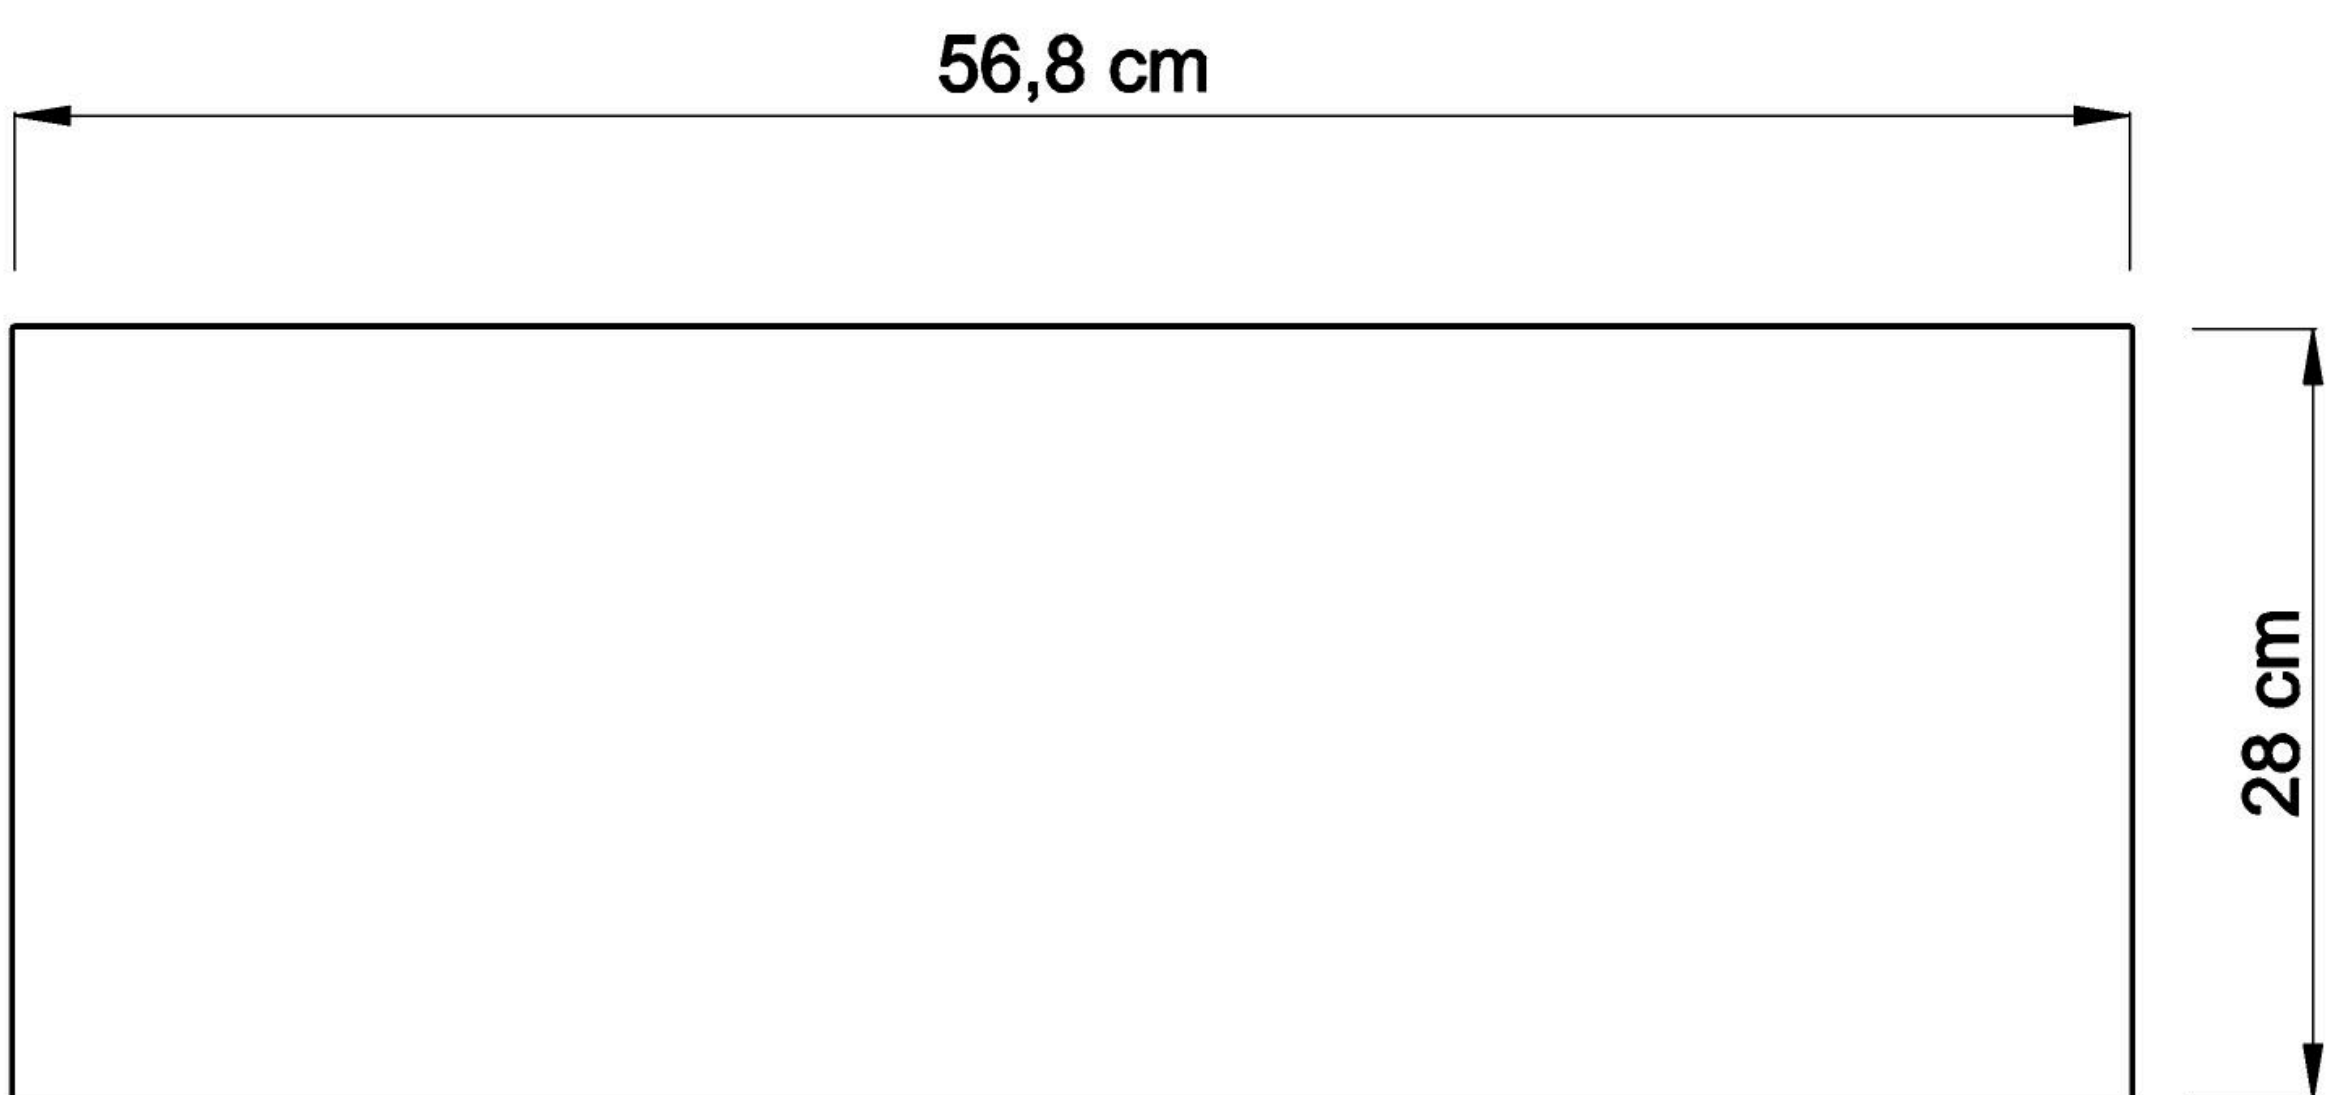




COMPONENTS - FITTINGS

Please check you have all the fittings listed below

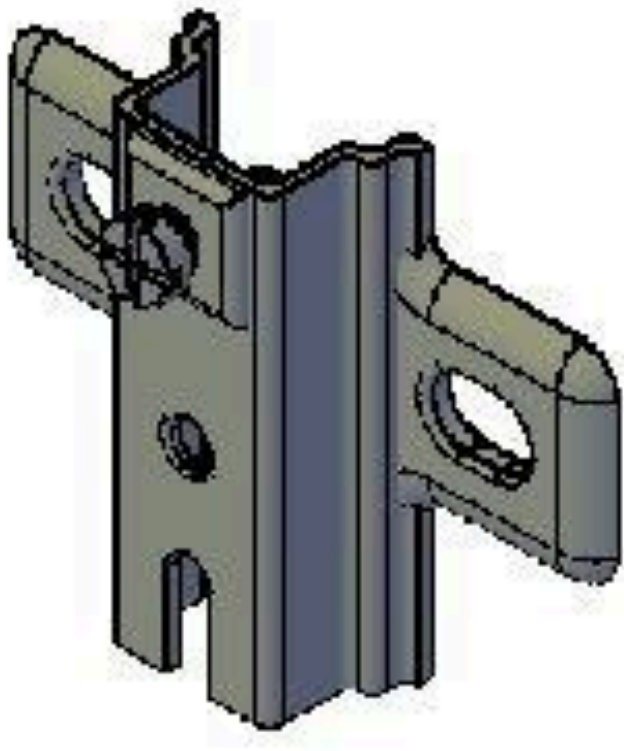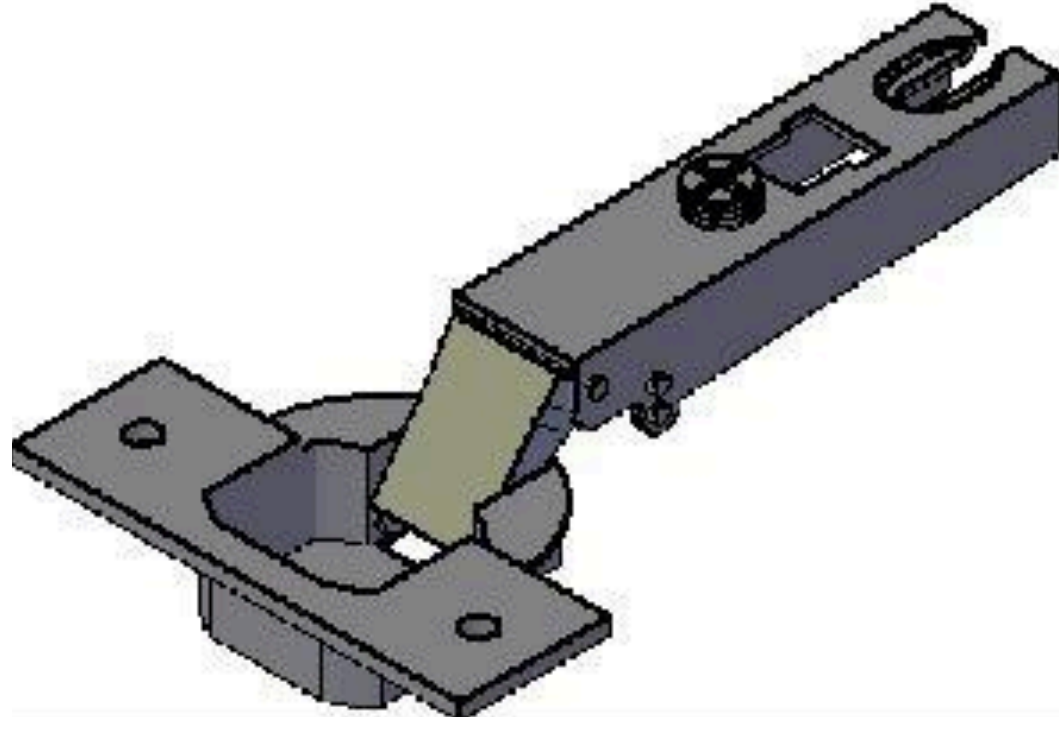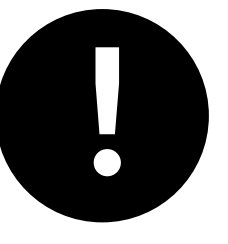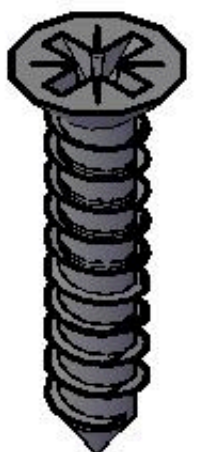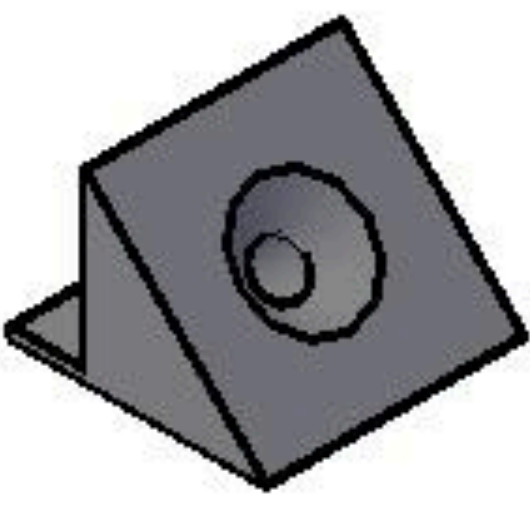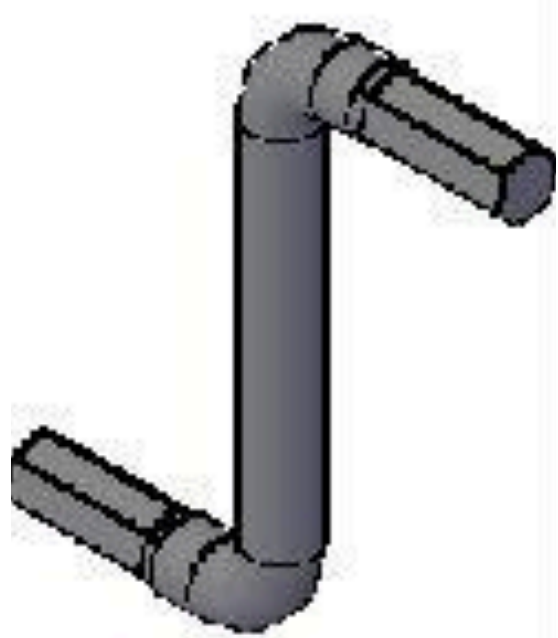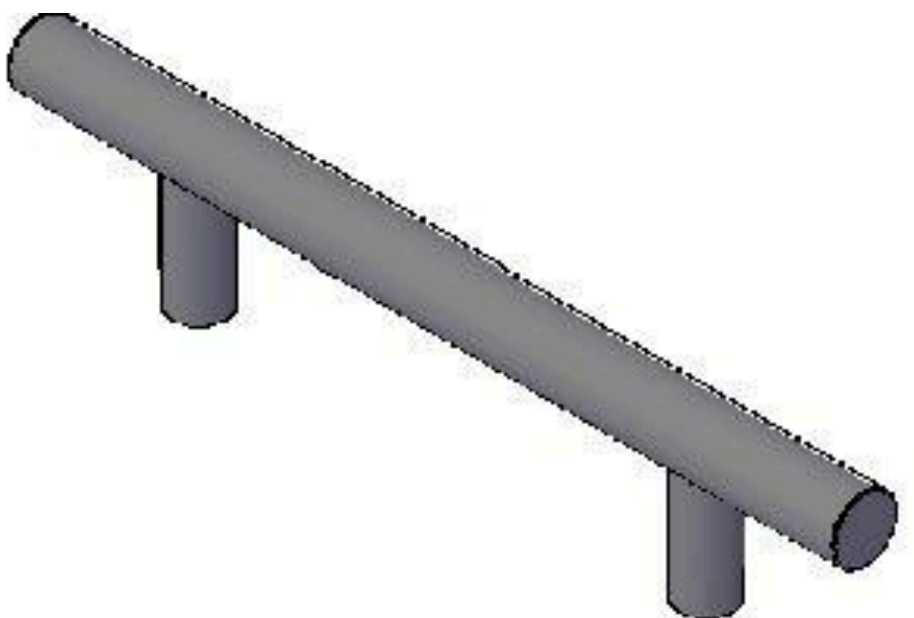
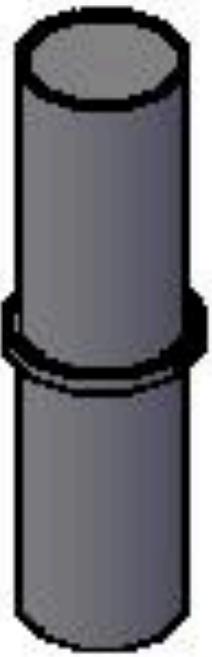
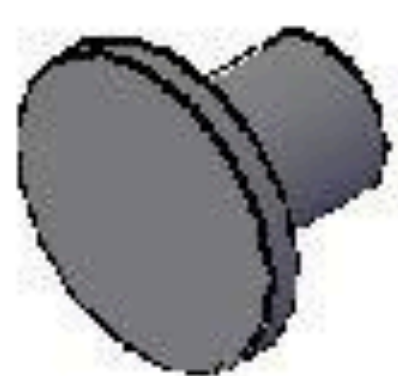
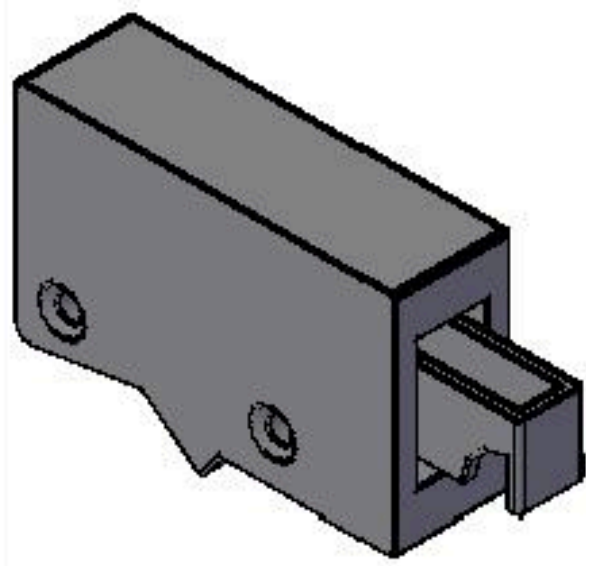
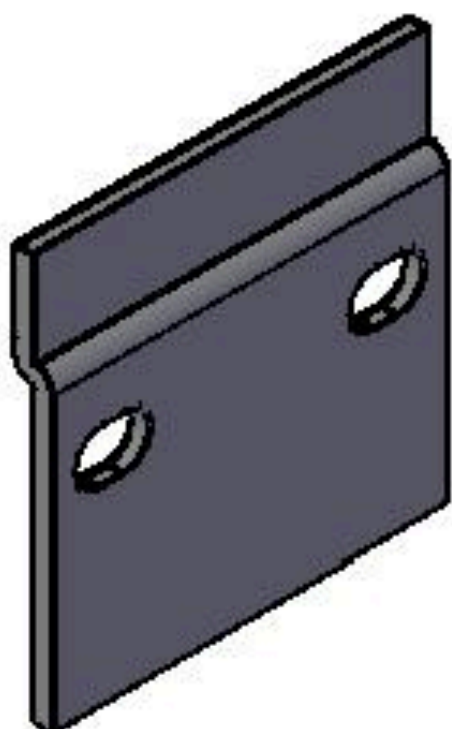
O x8  ϕ 7x16	F x4 	G2 x4 	 PAY ATTENTION: O AND F ATTACHED TO G2
H3 x12  ϕ 3x16	A4 x12 	Q7 x1 	C x8  ϕ 7x50
S1 x8 	H9 x4 US 031.03  ϕ 4x30	J9 x4  ϕ 3x25	U7 x2 
H x8 US 031.03  ϕ 3.5x13	W x16 	D8 x4 	A x8 
S7 x4 	Z8 x2 	Z9 x2 	

STEP - 1


! PAY ATTENTION: O ATTACHED TO F

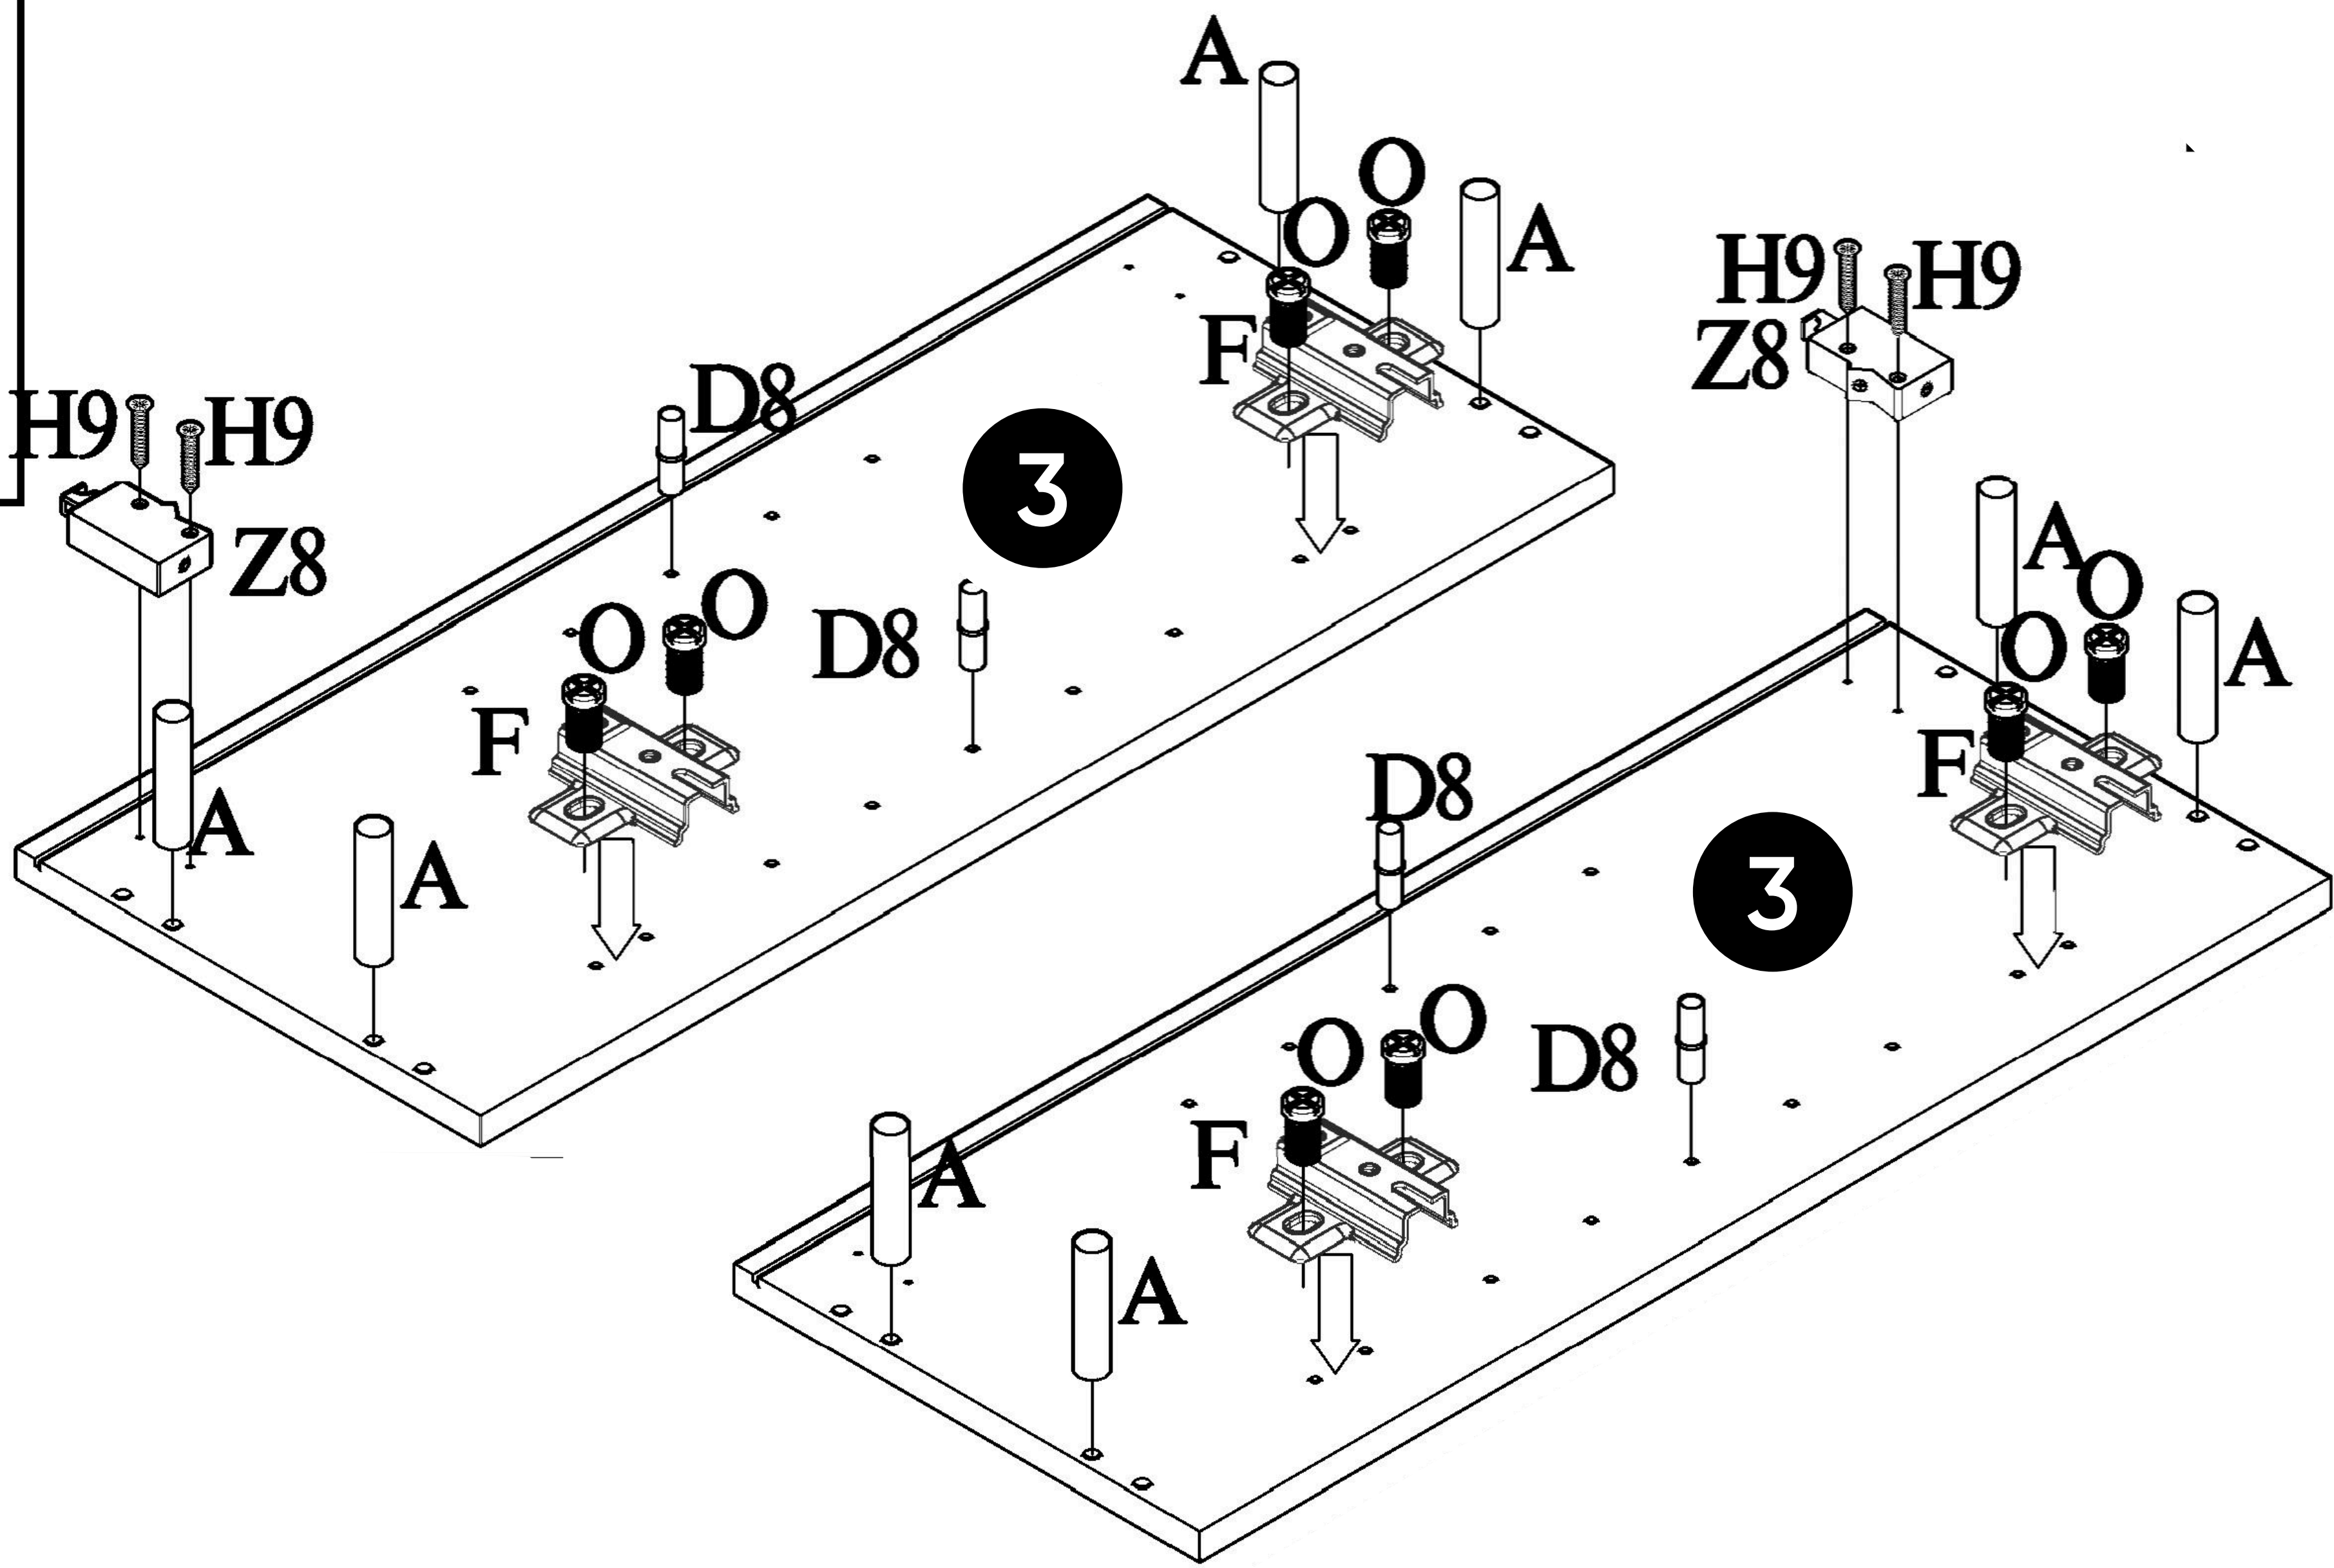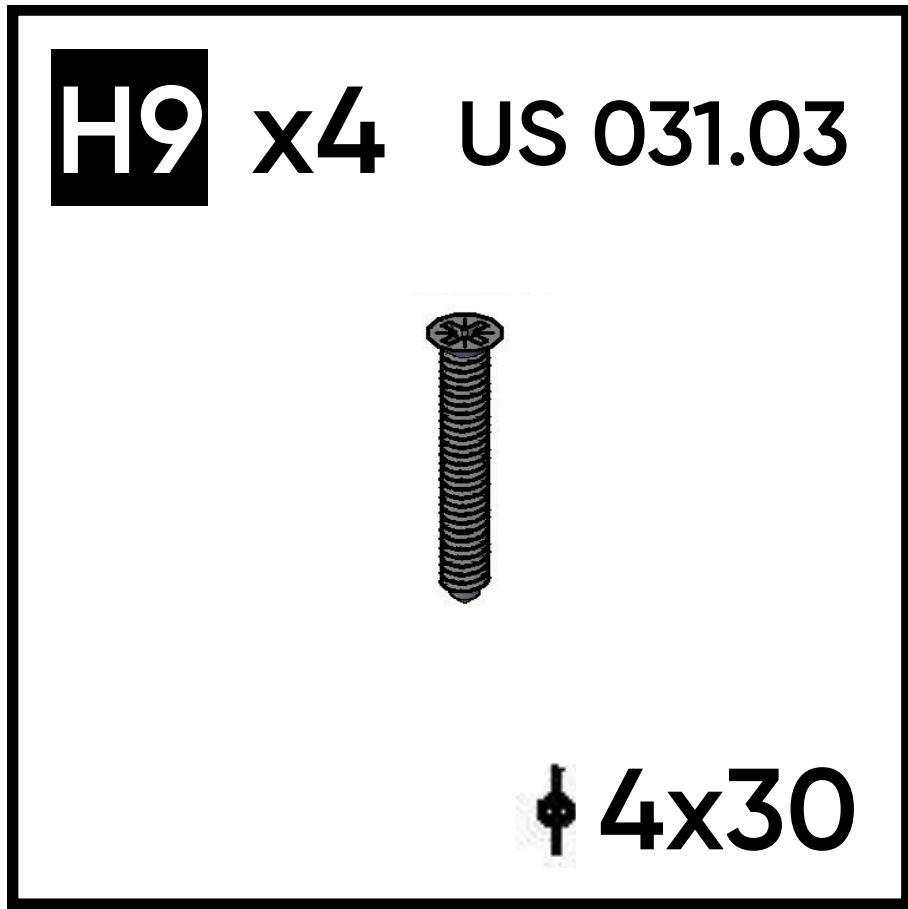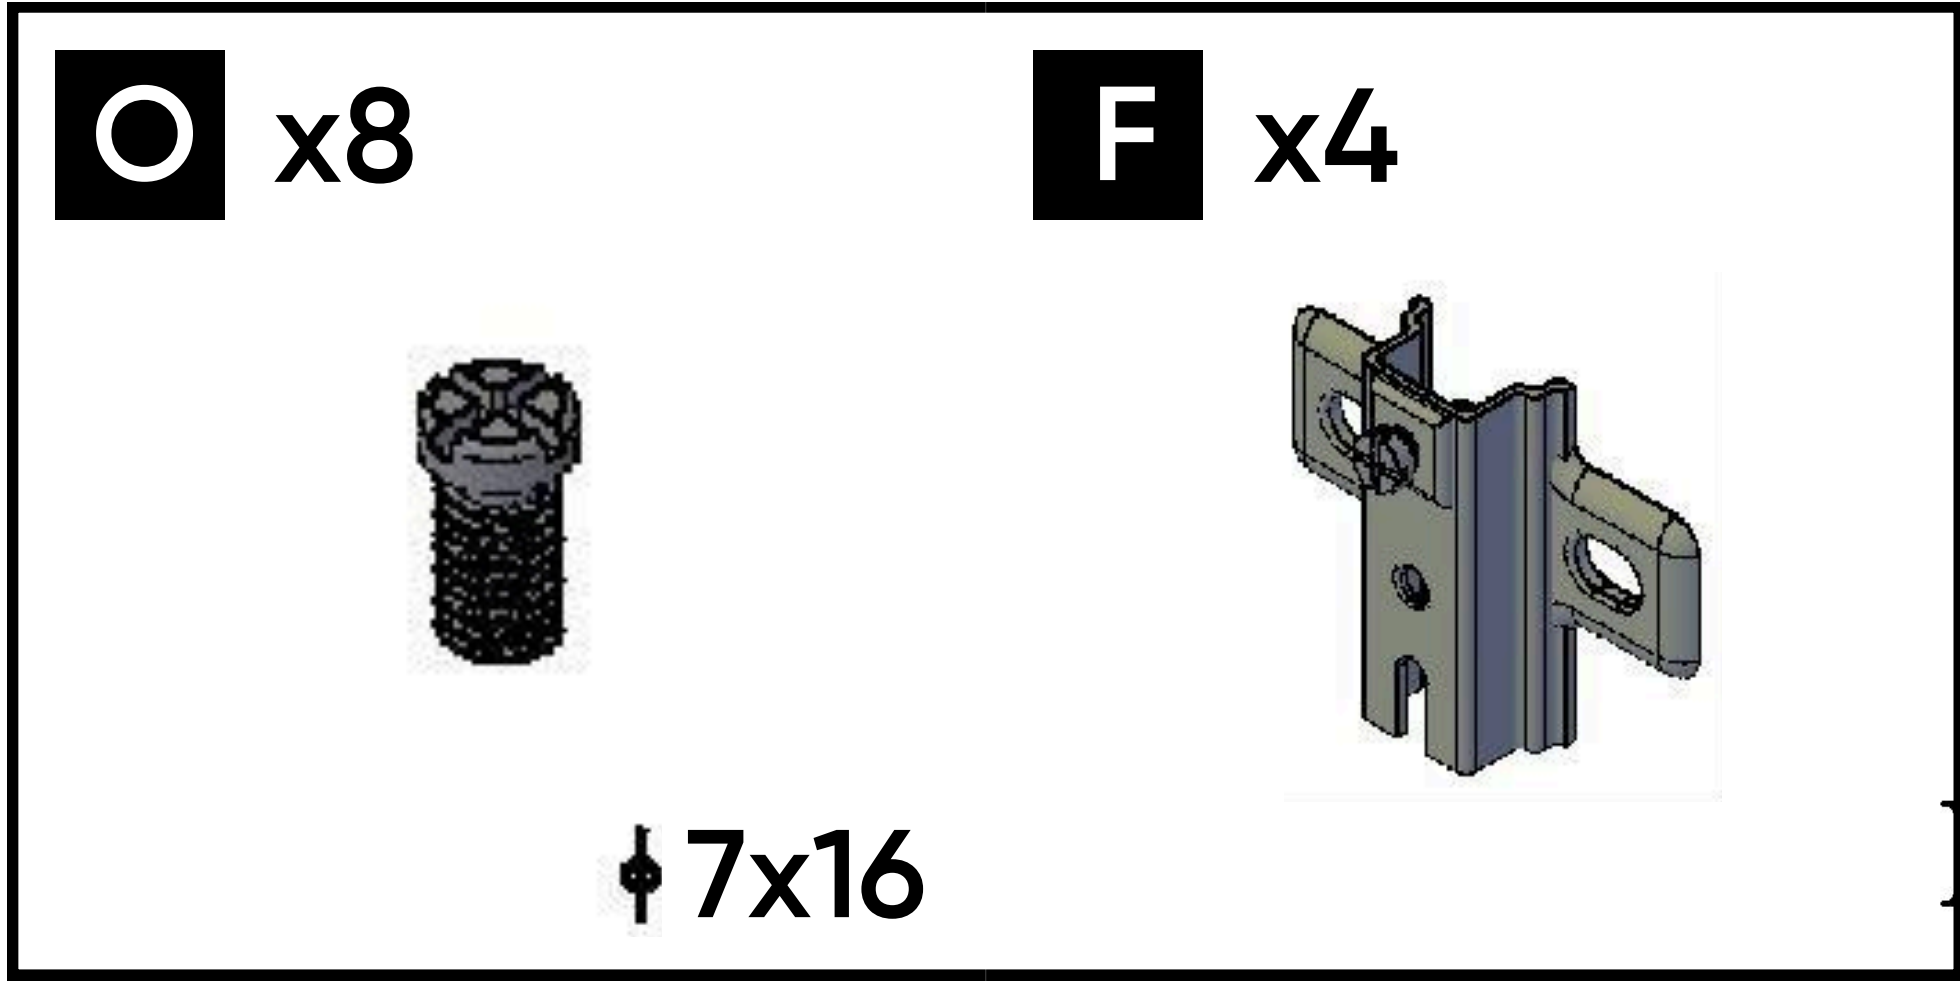



STEP - 2

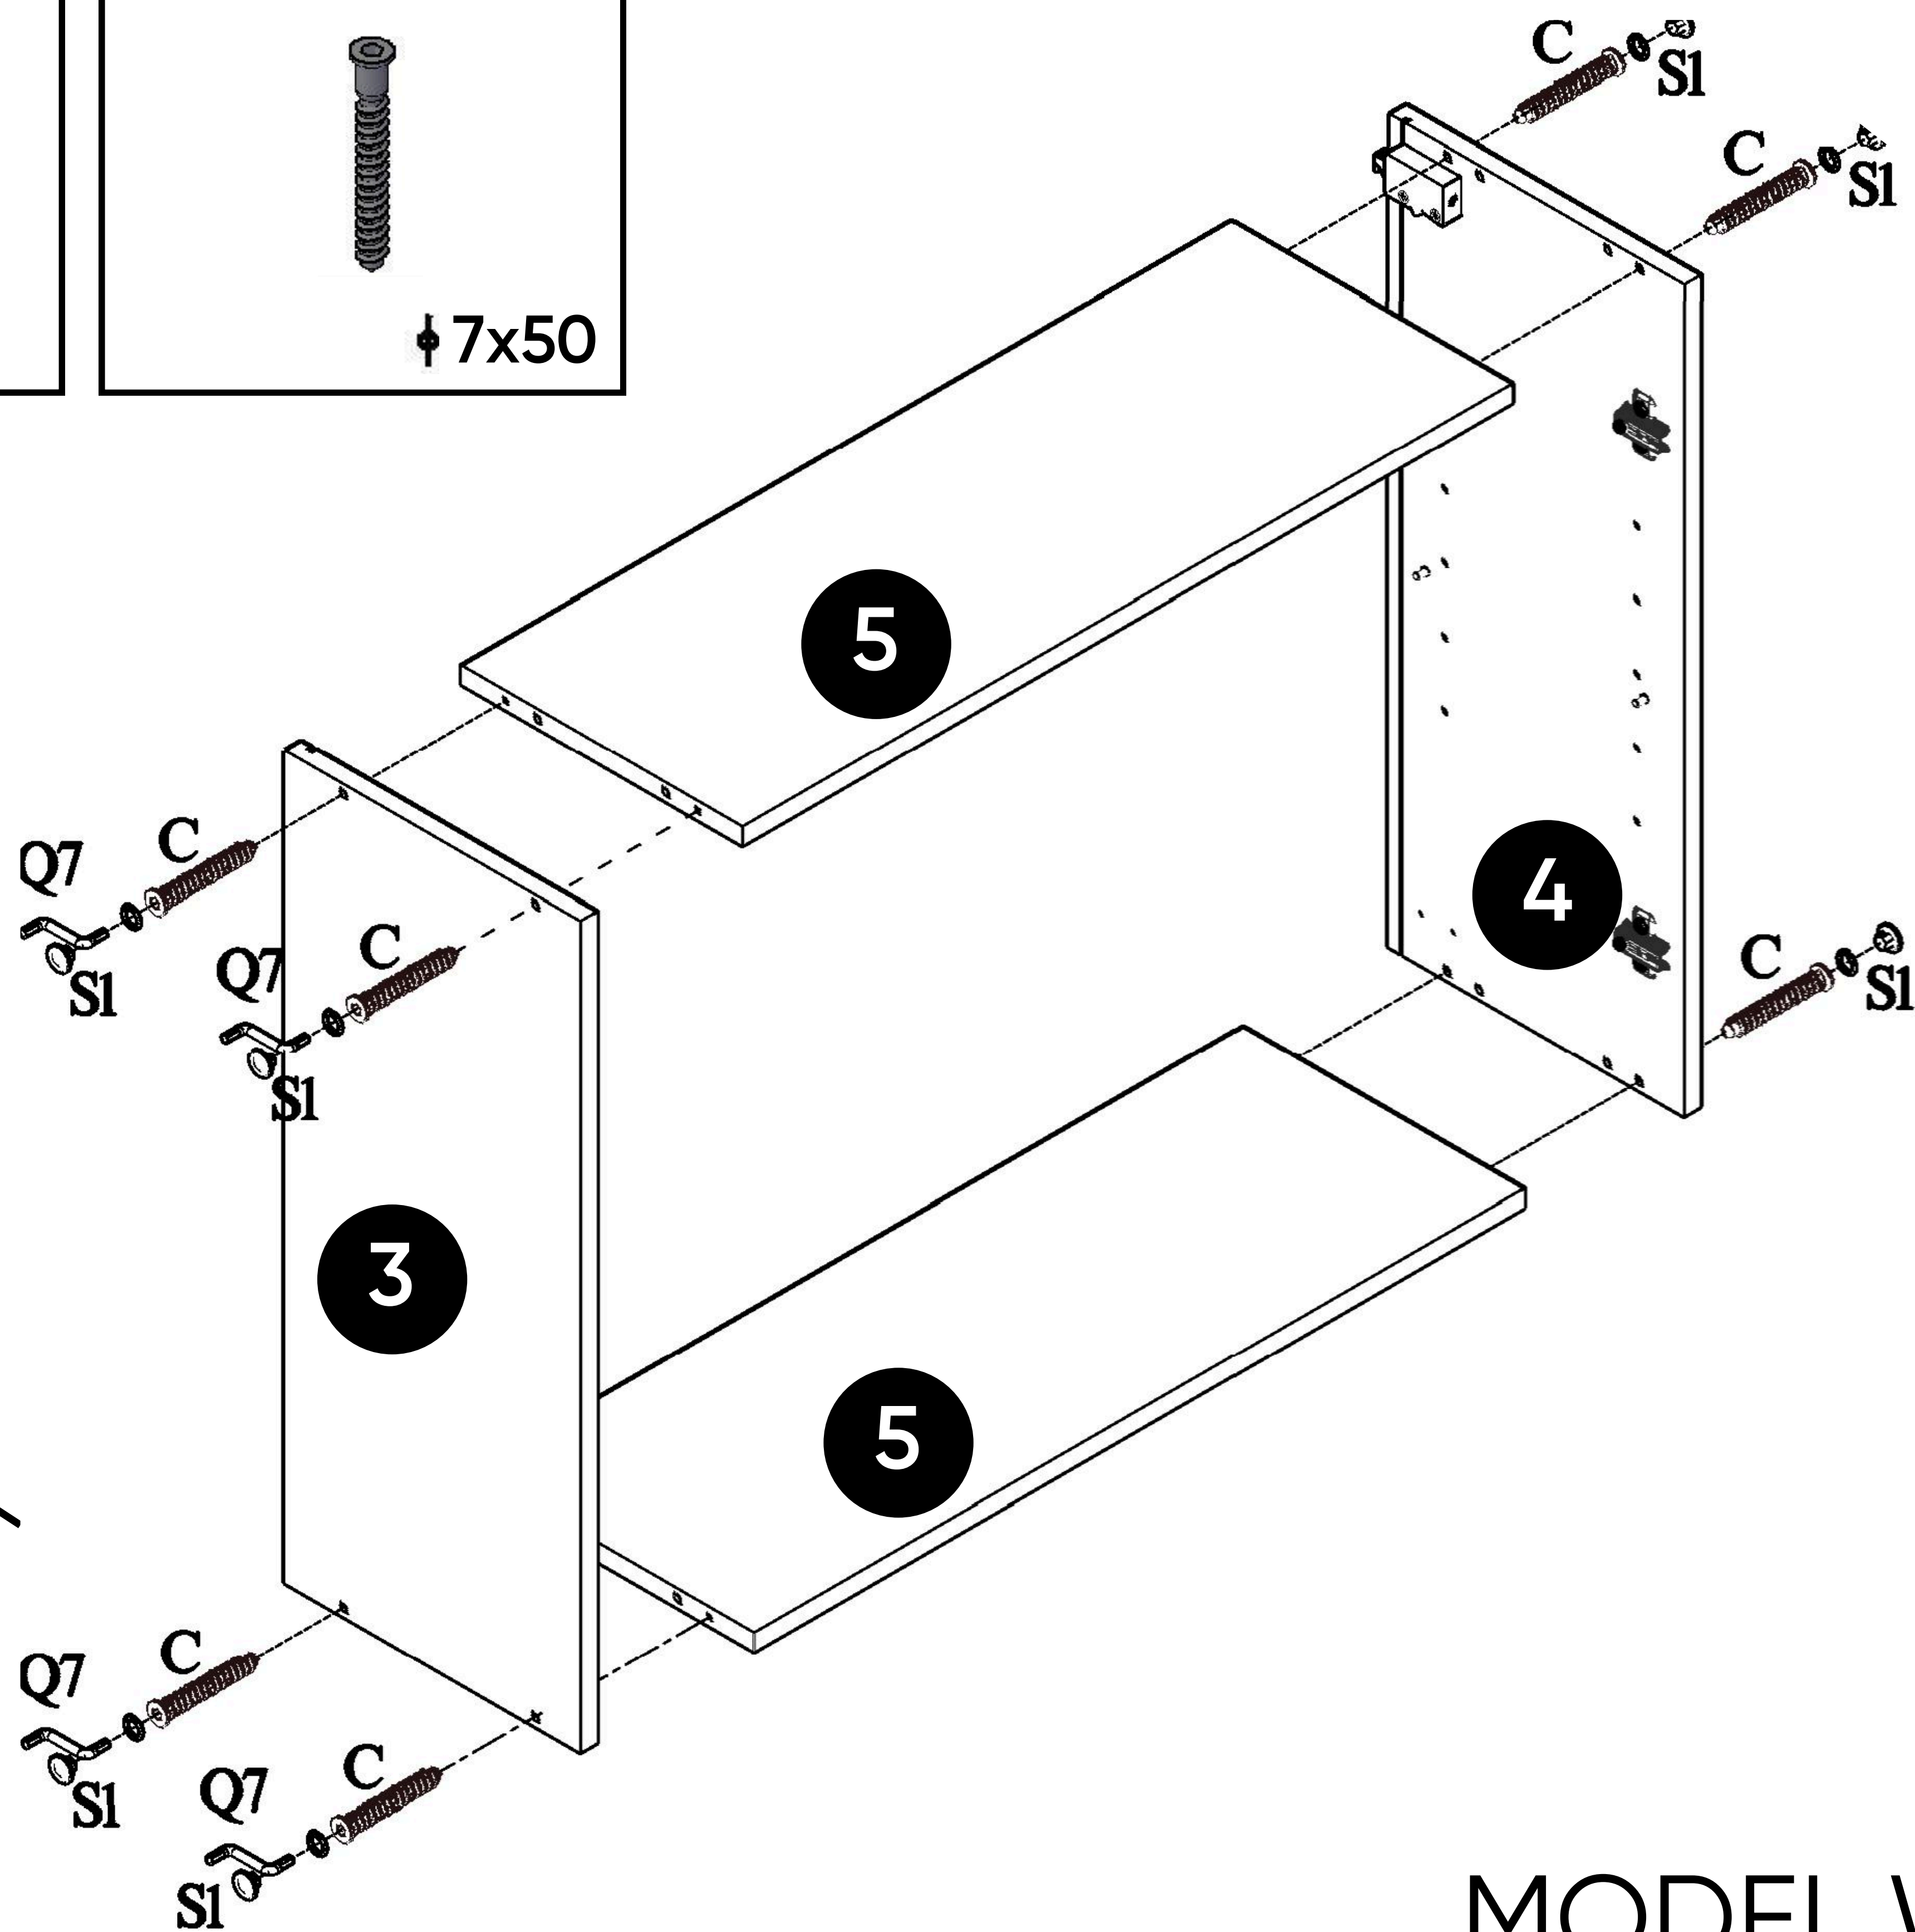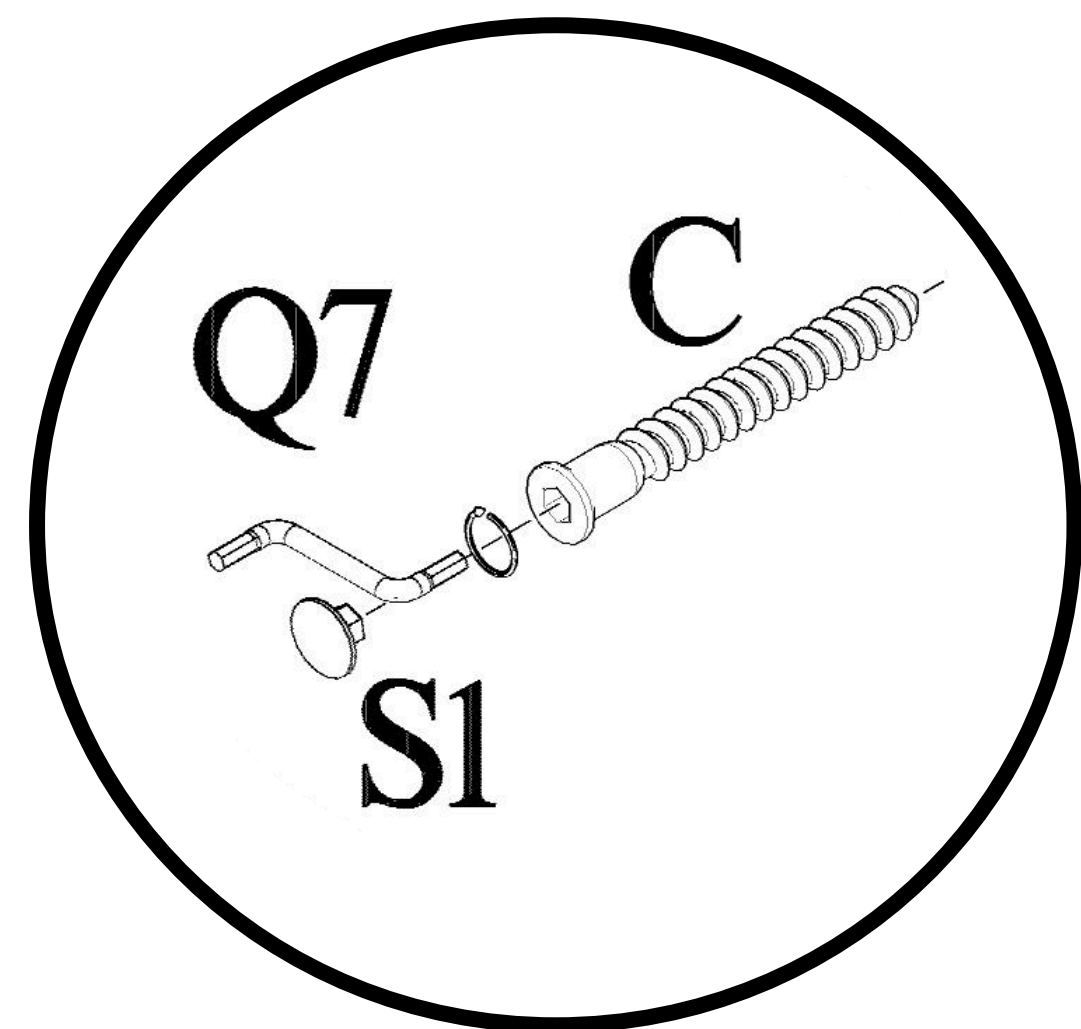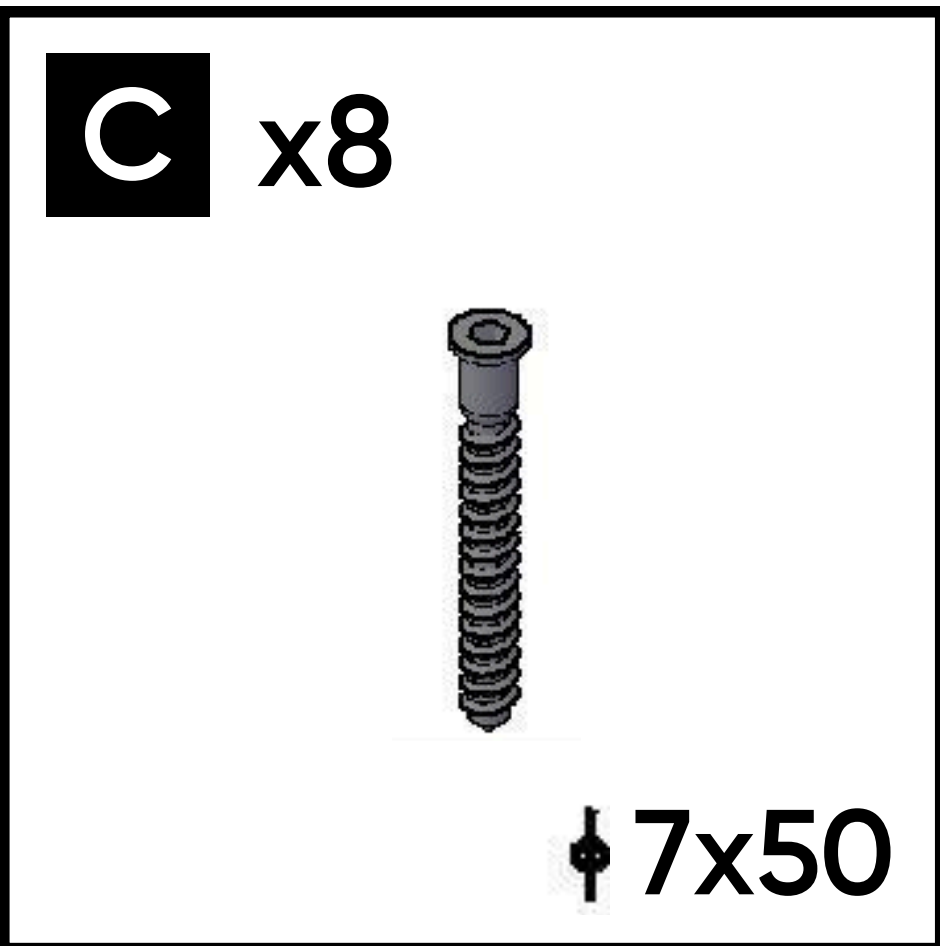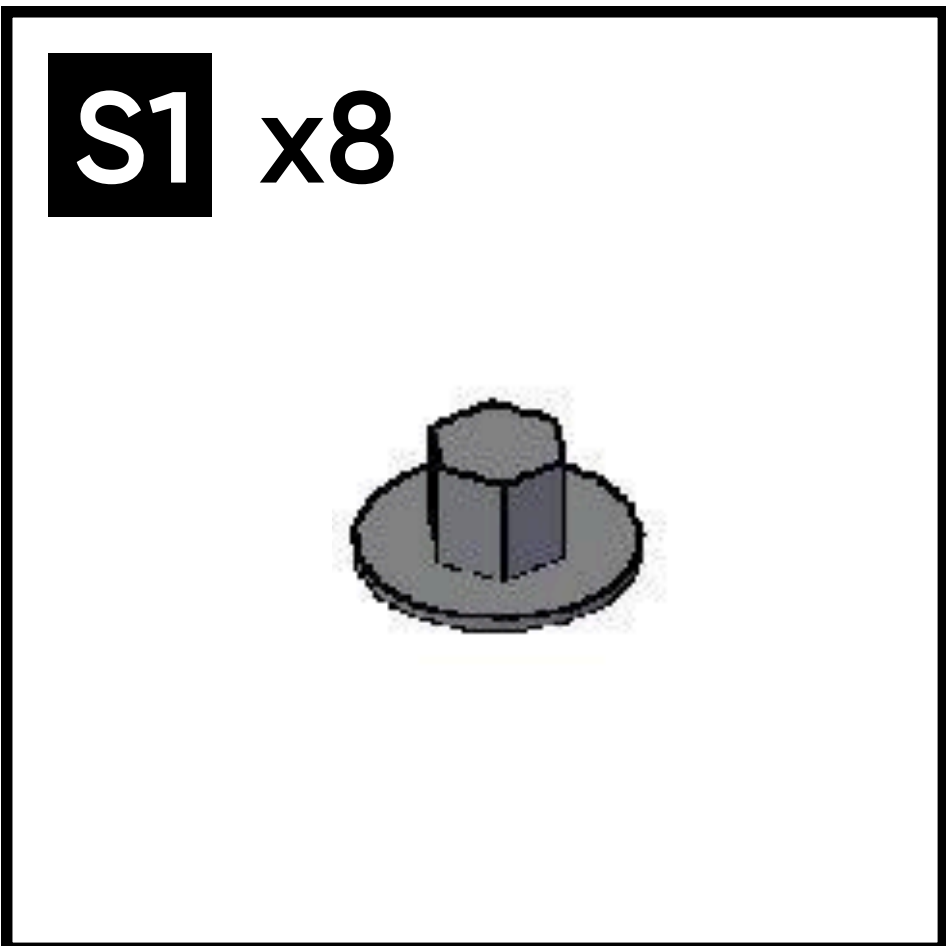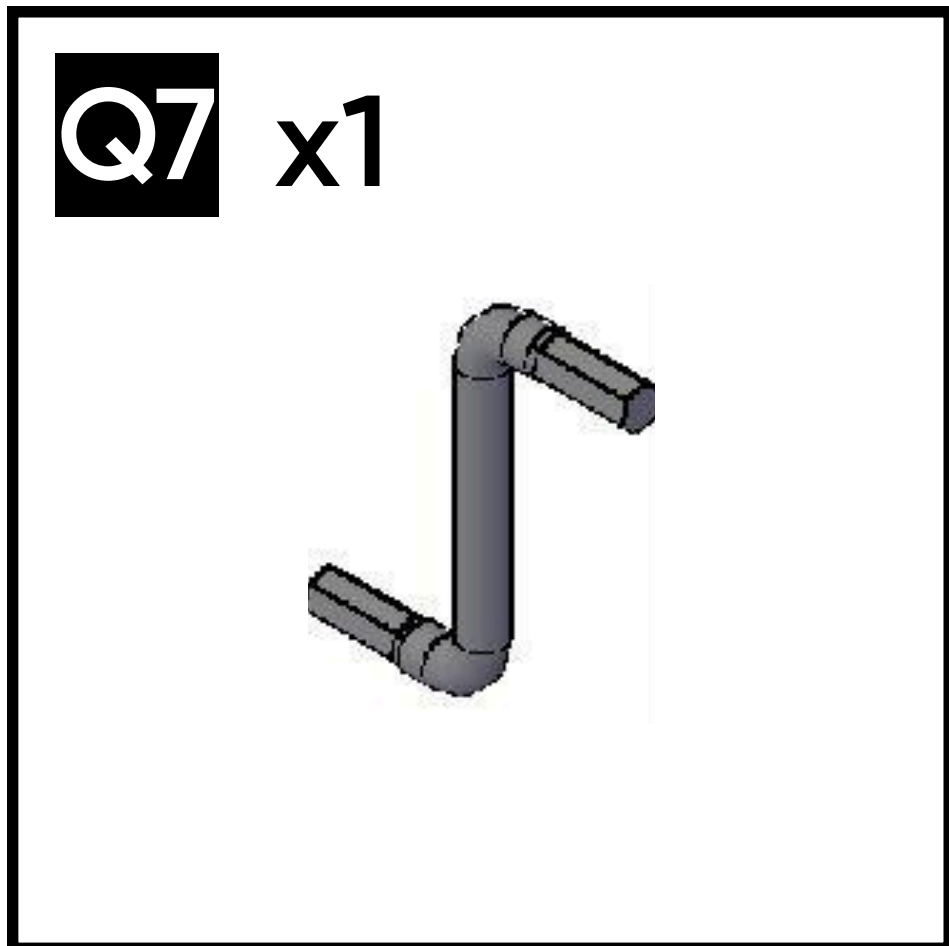

STEP - 3

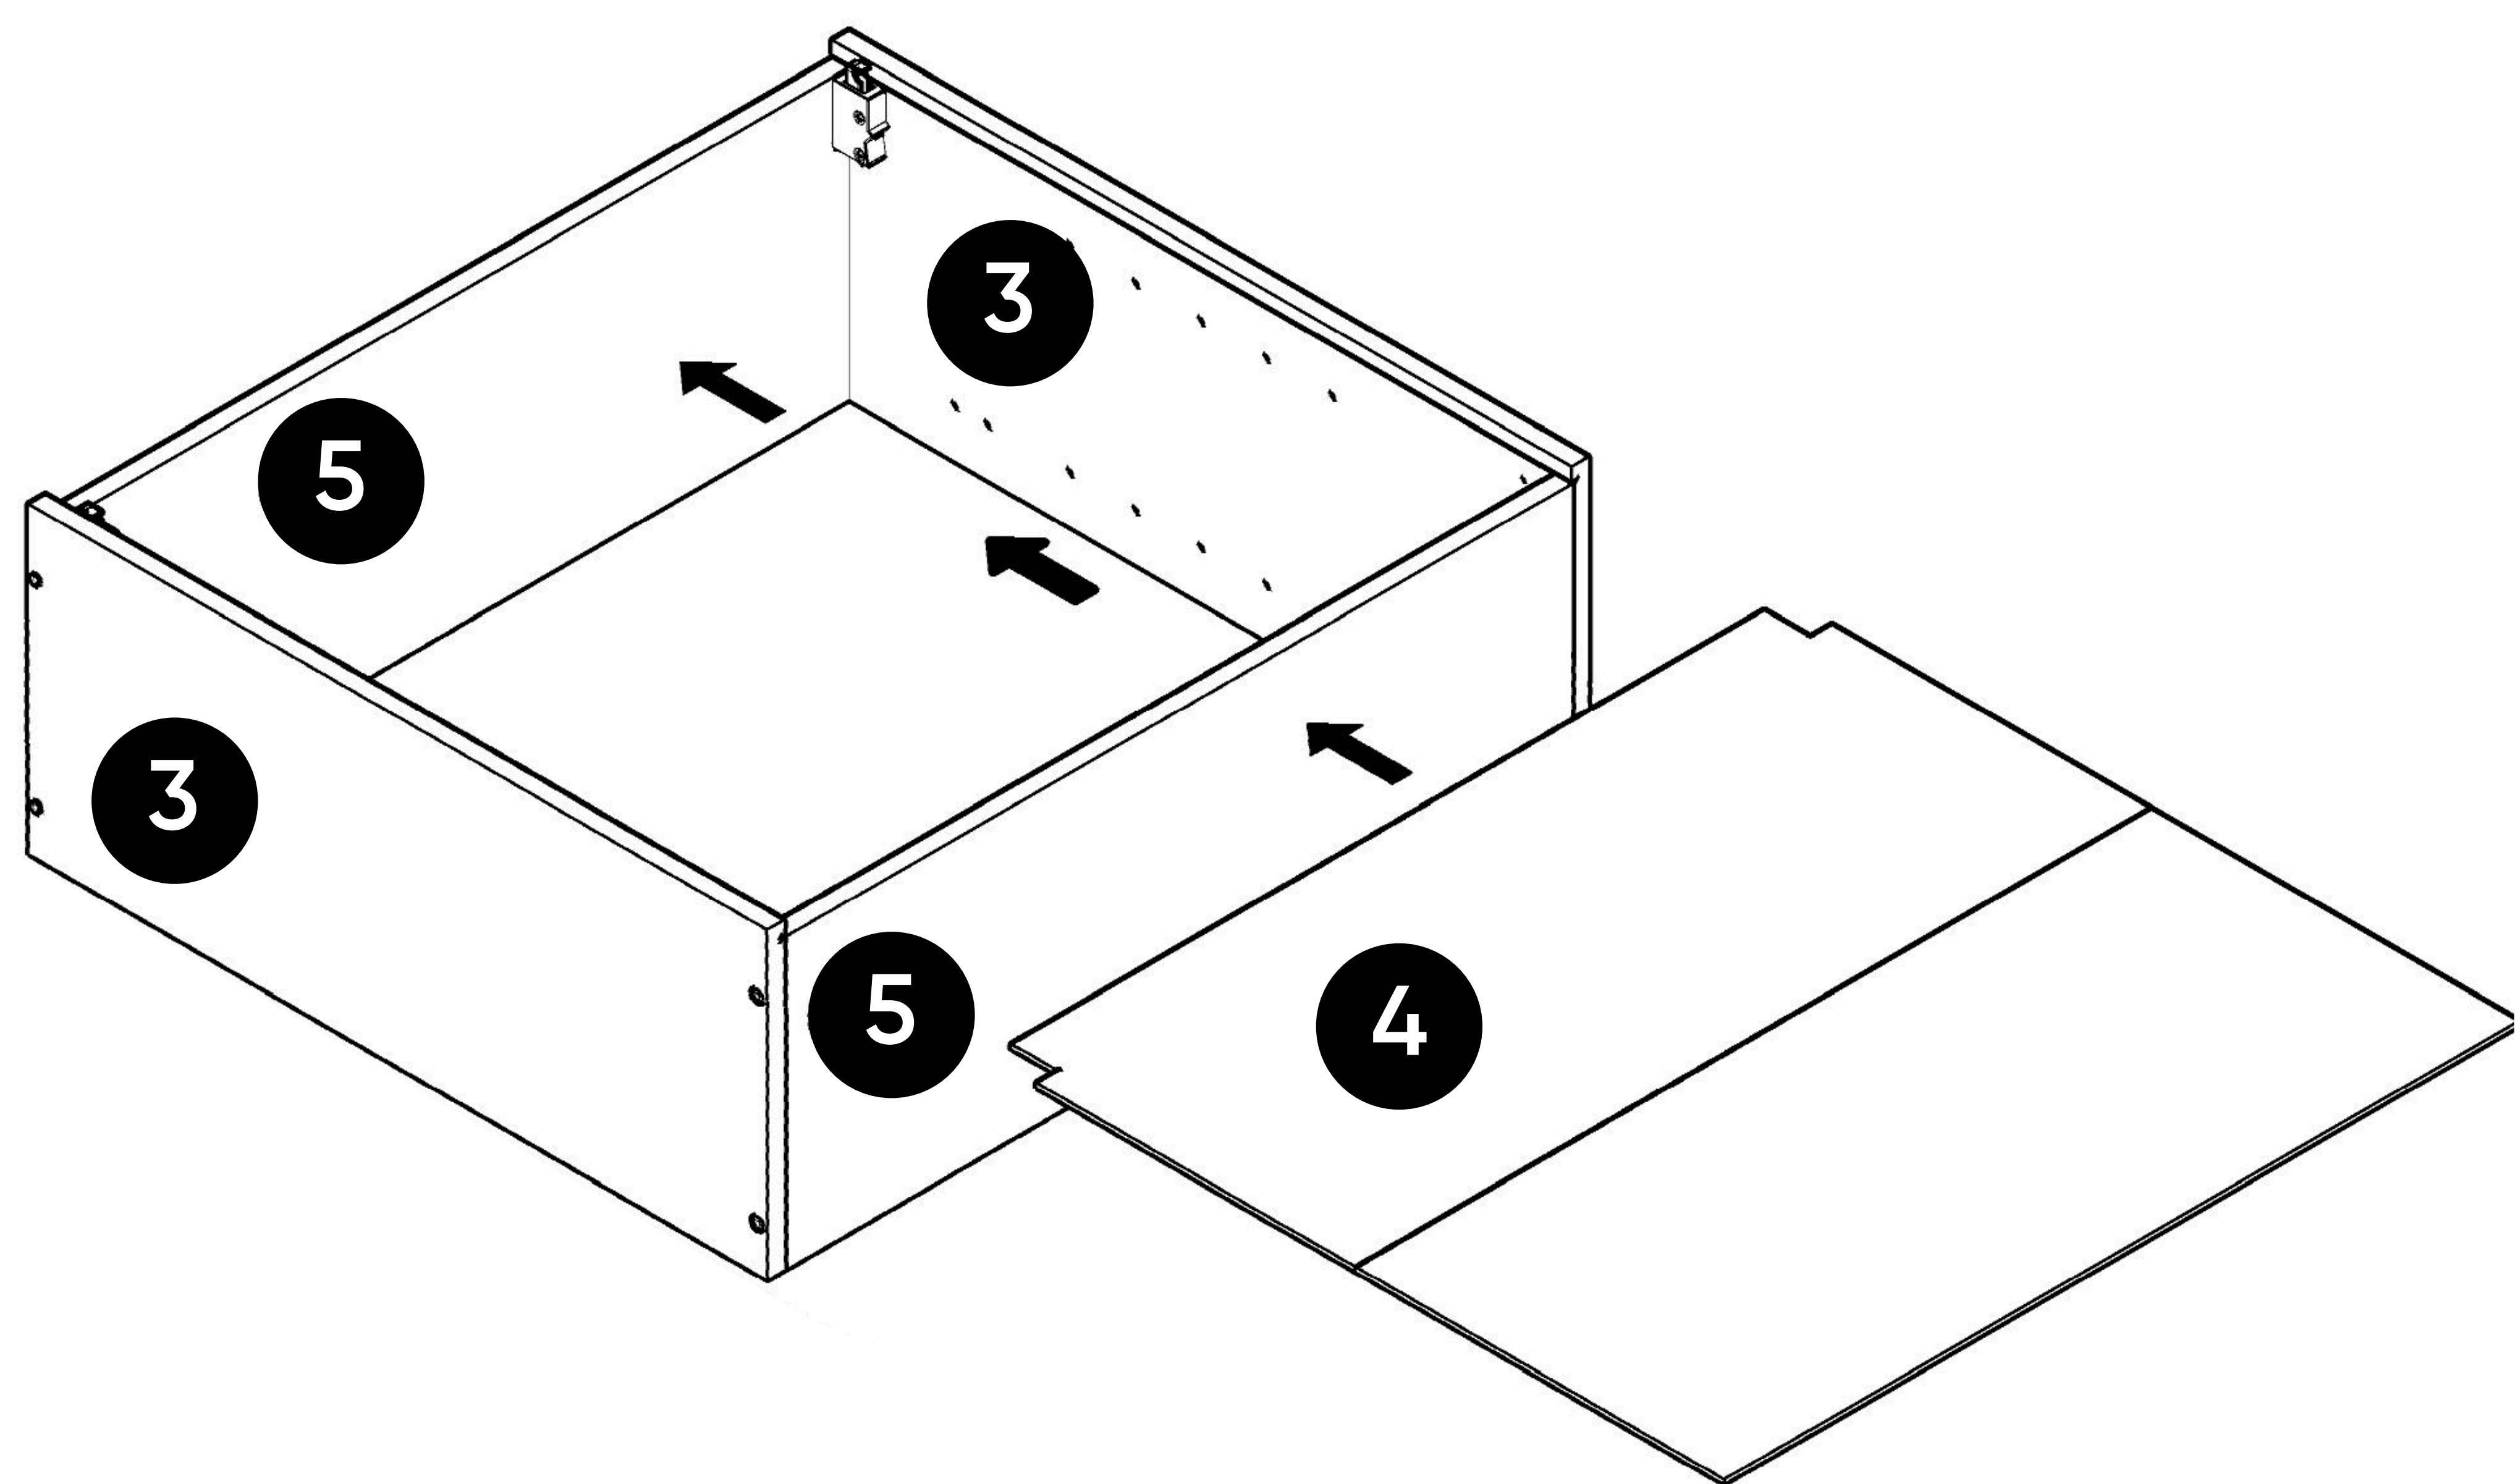


STEP - 4

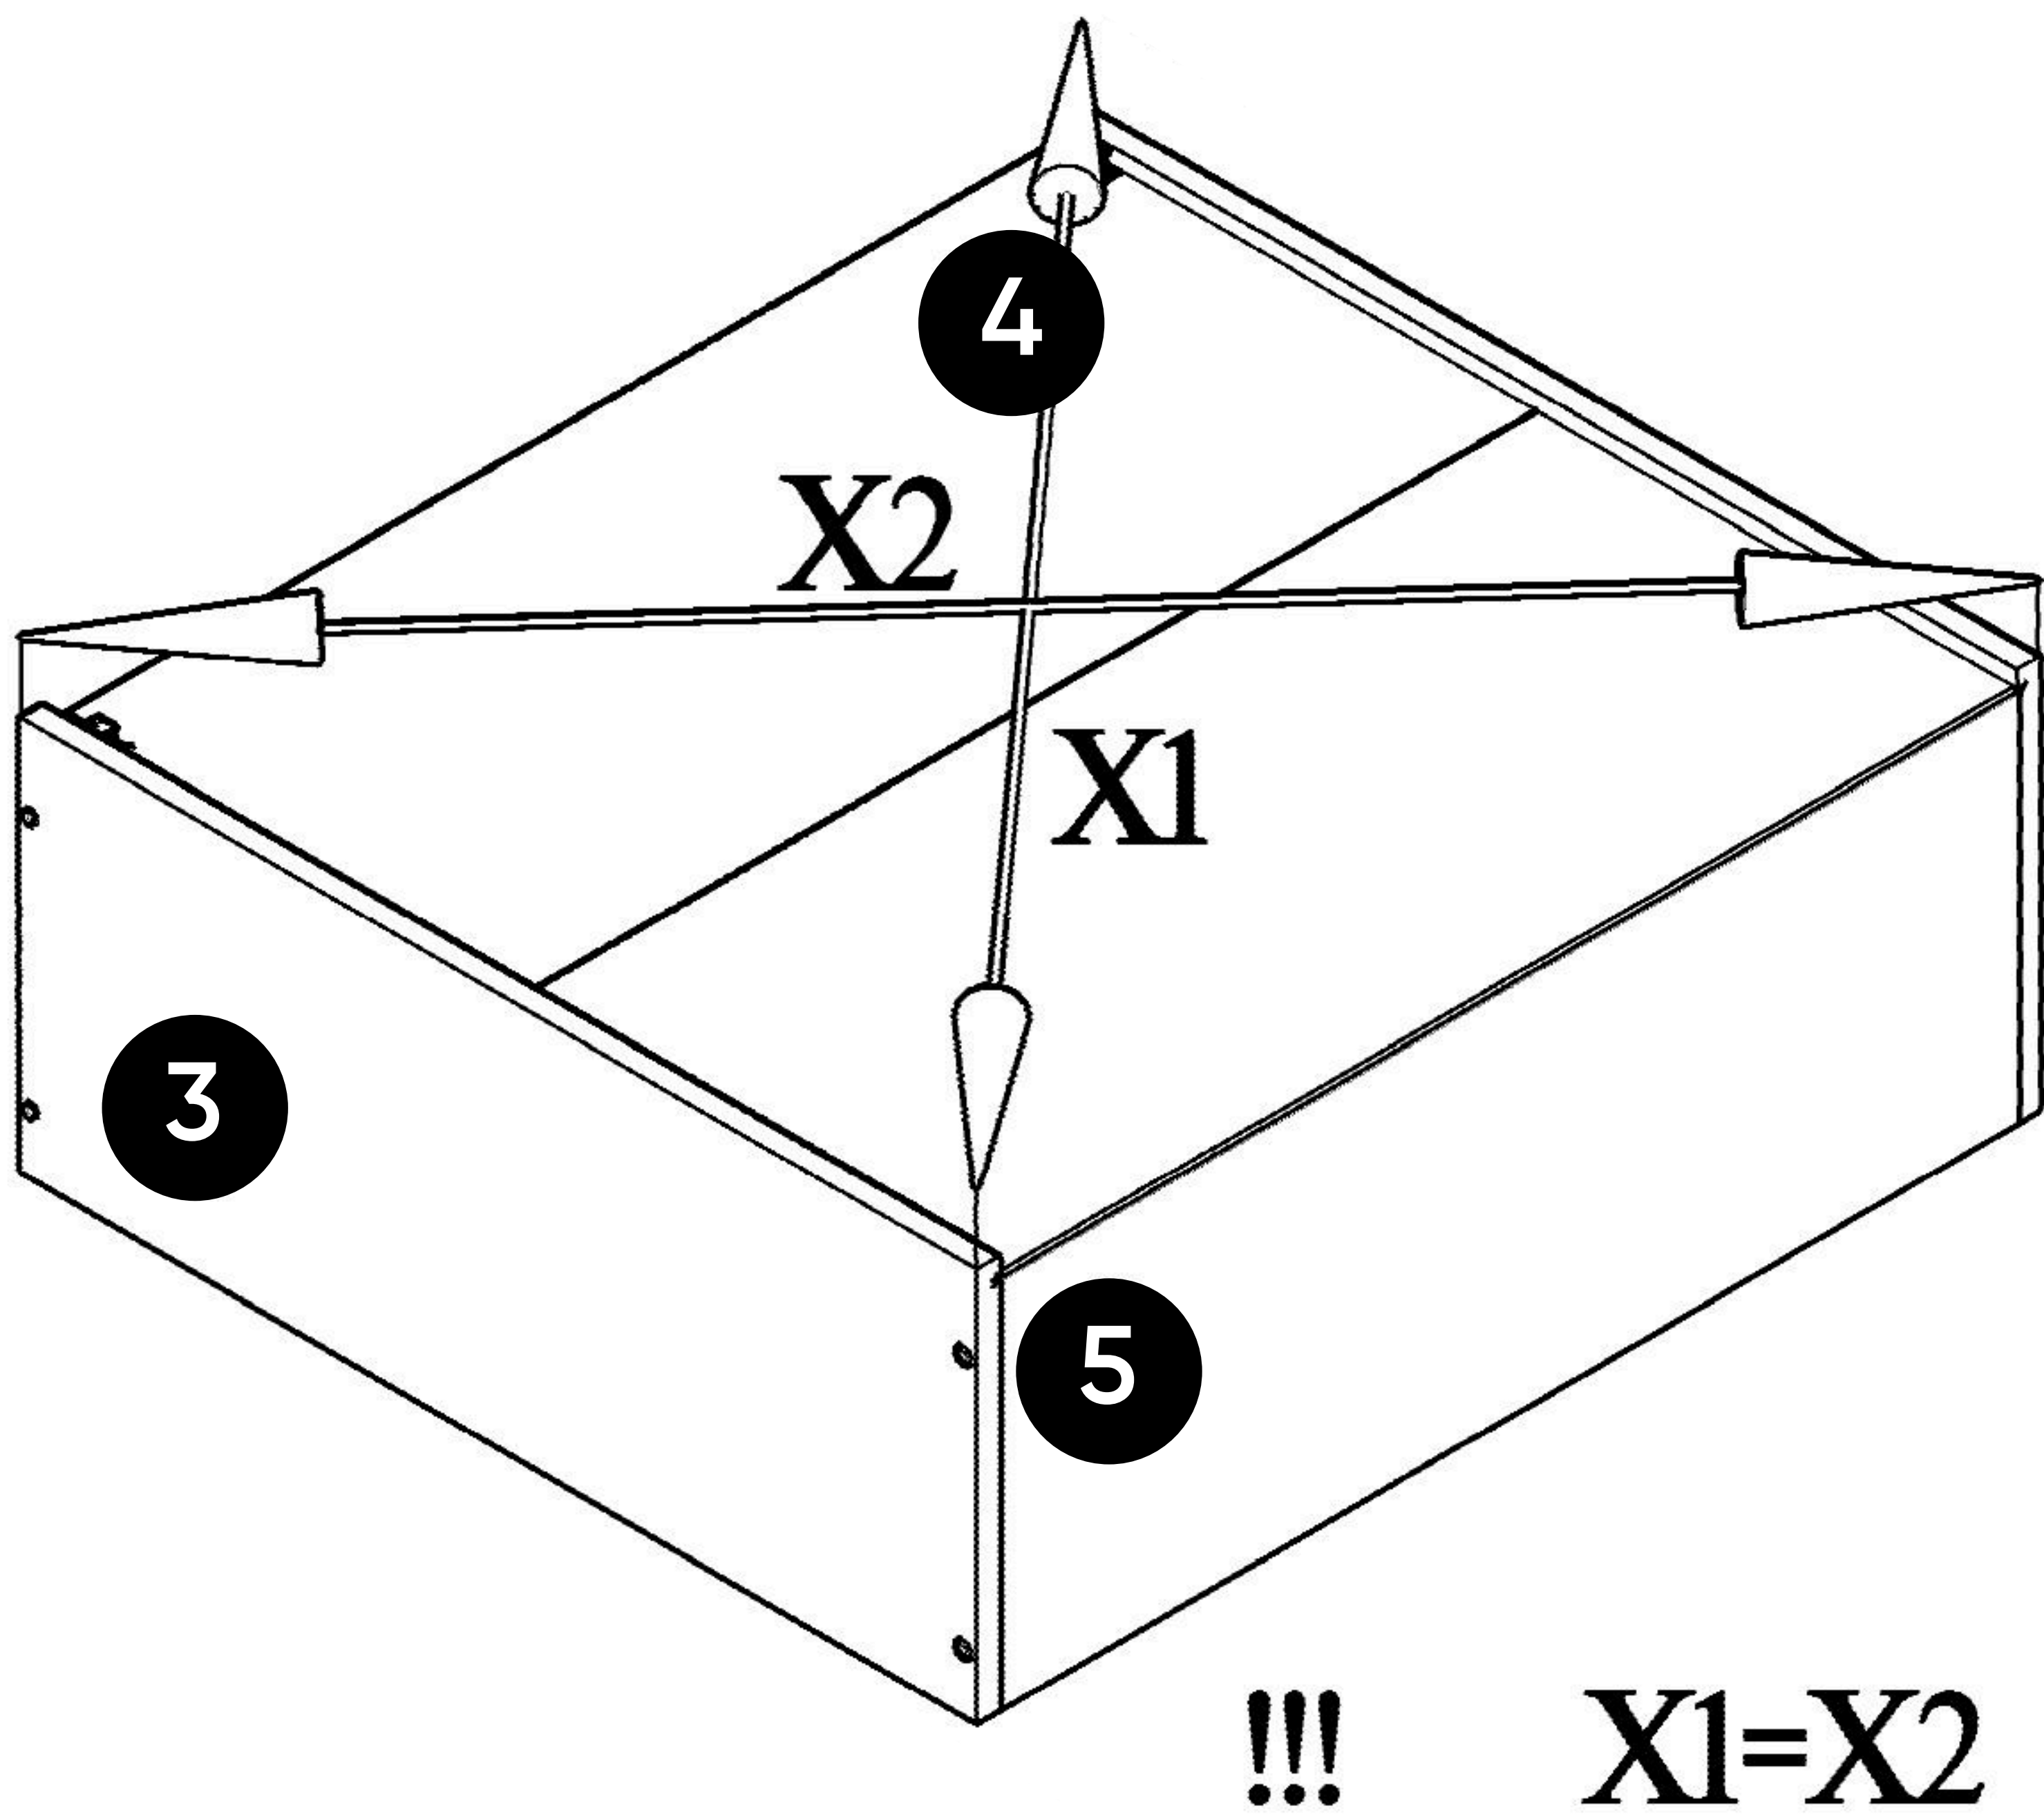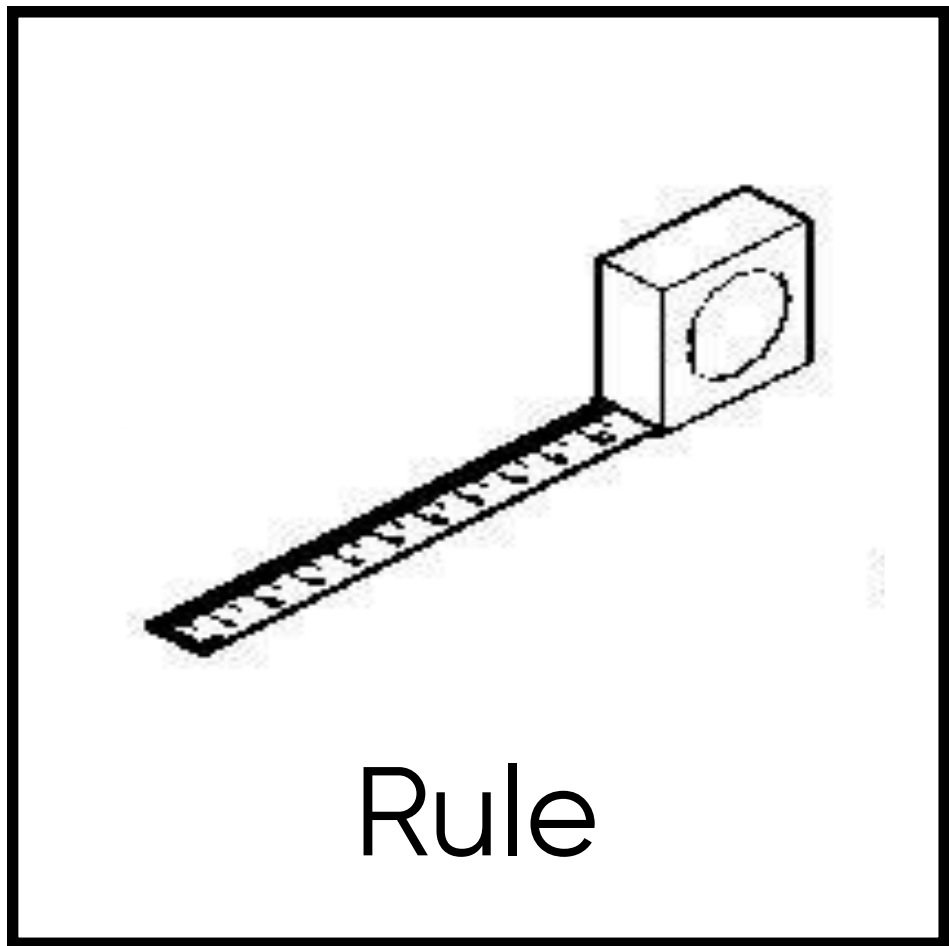

STEP - 5

H3 x12

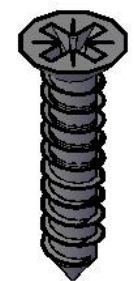



3x16

W x16




A4 x12

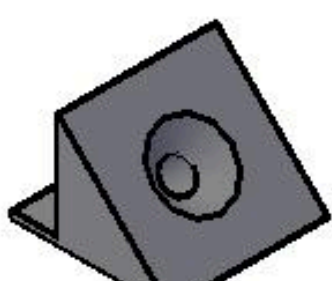

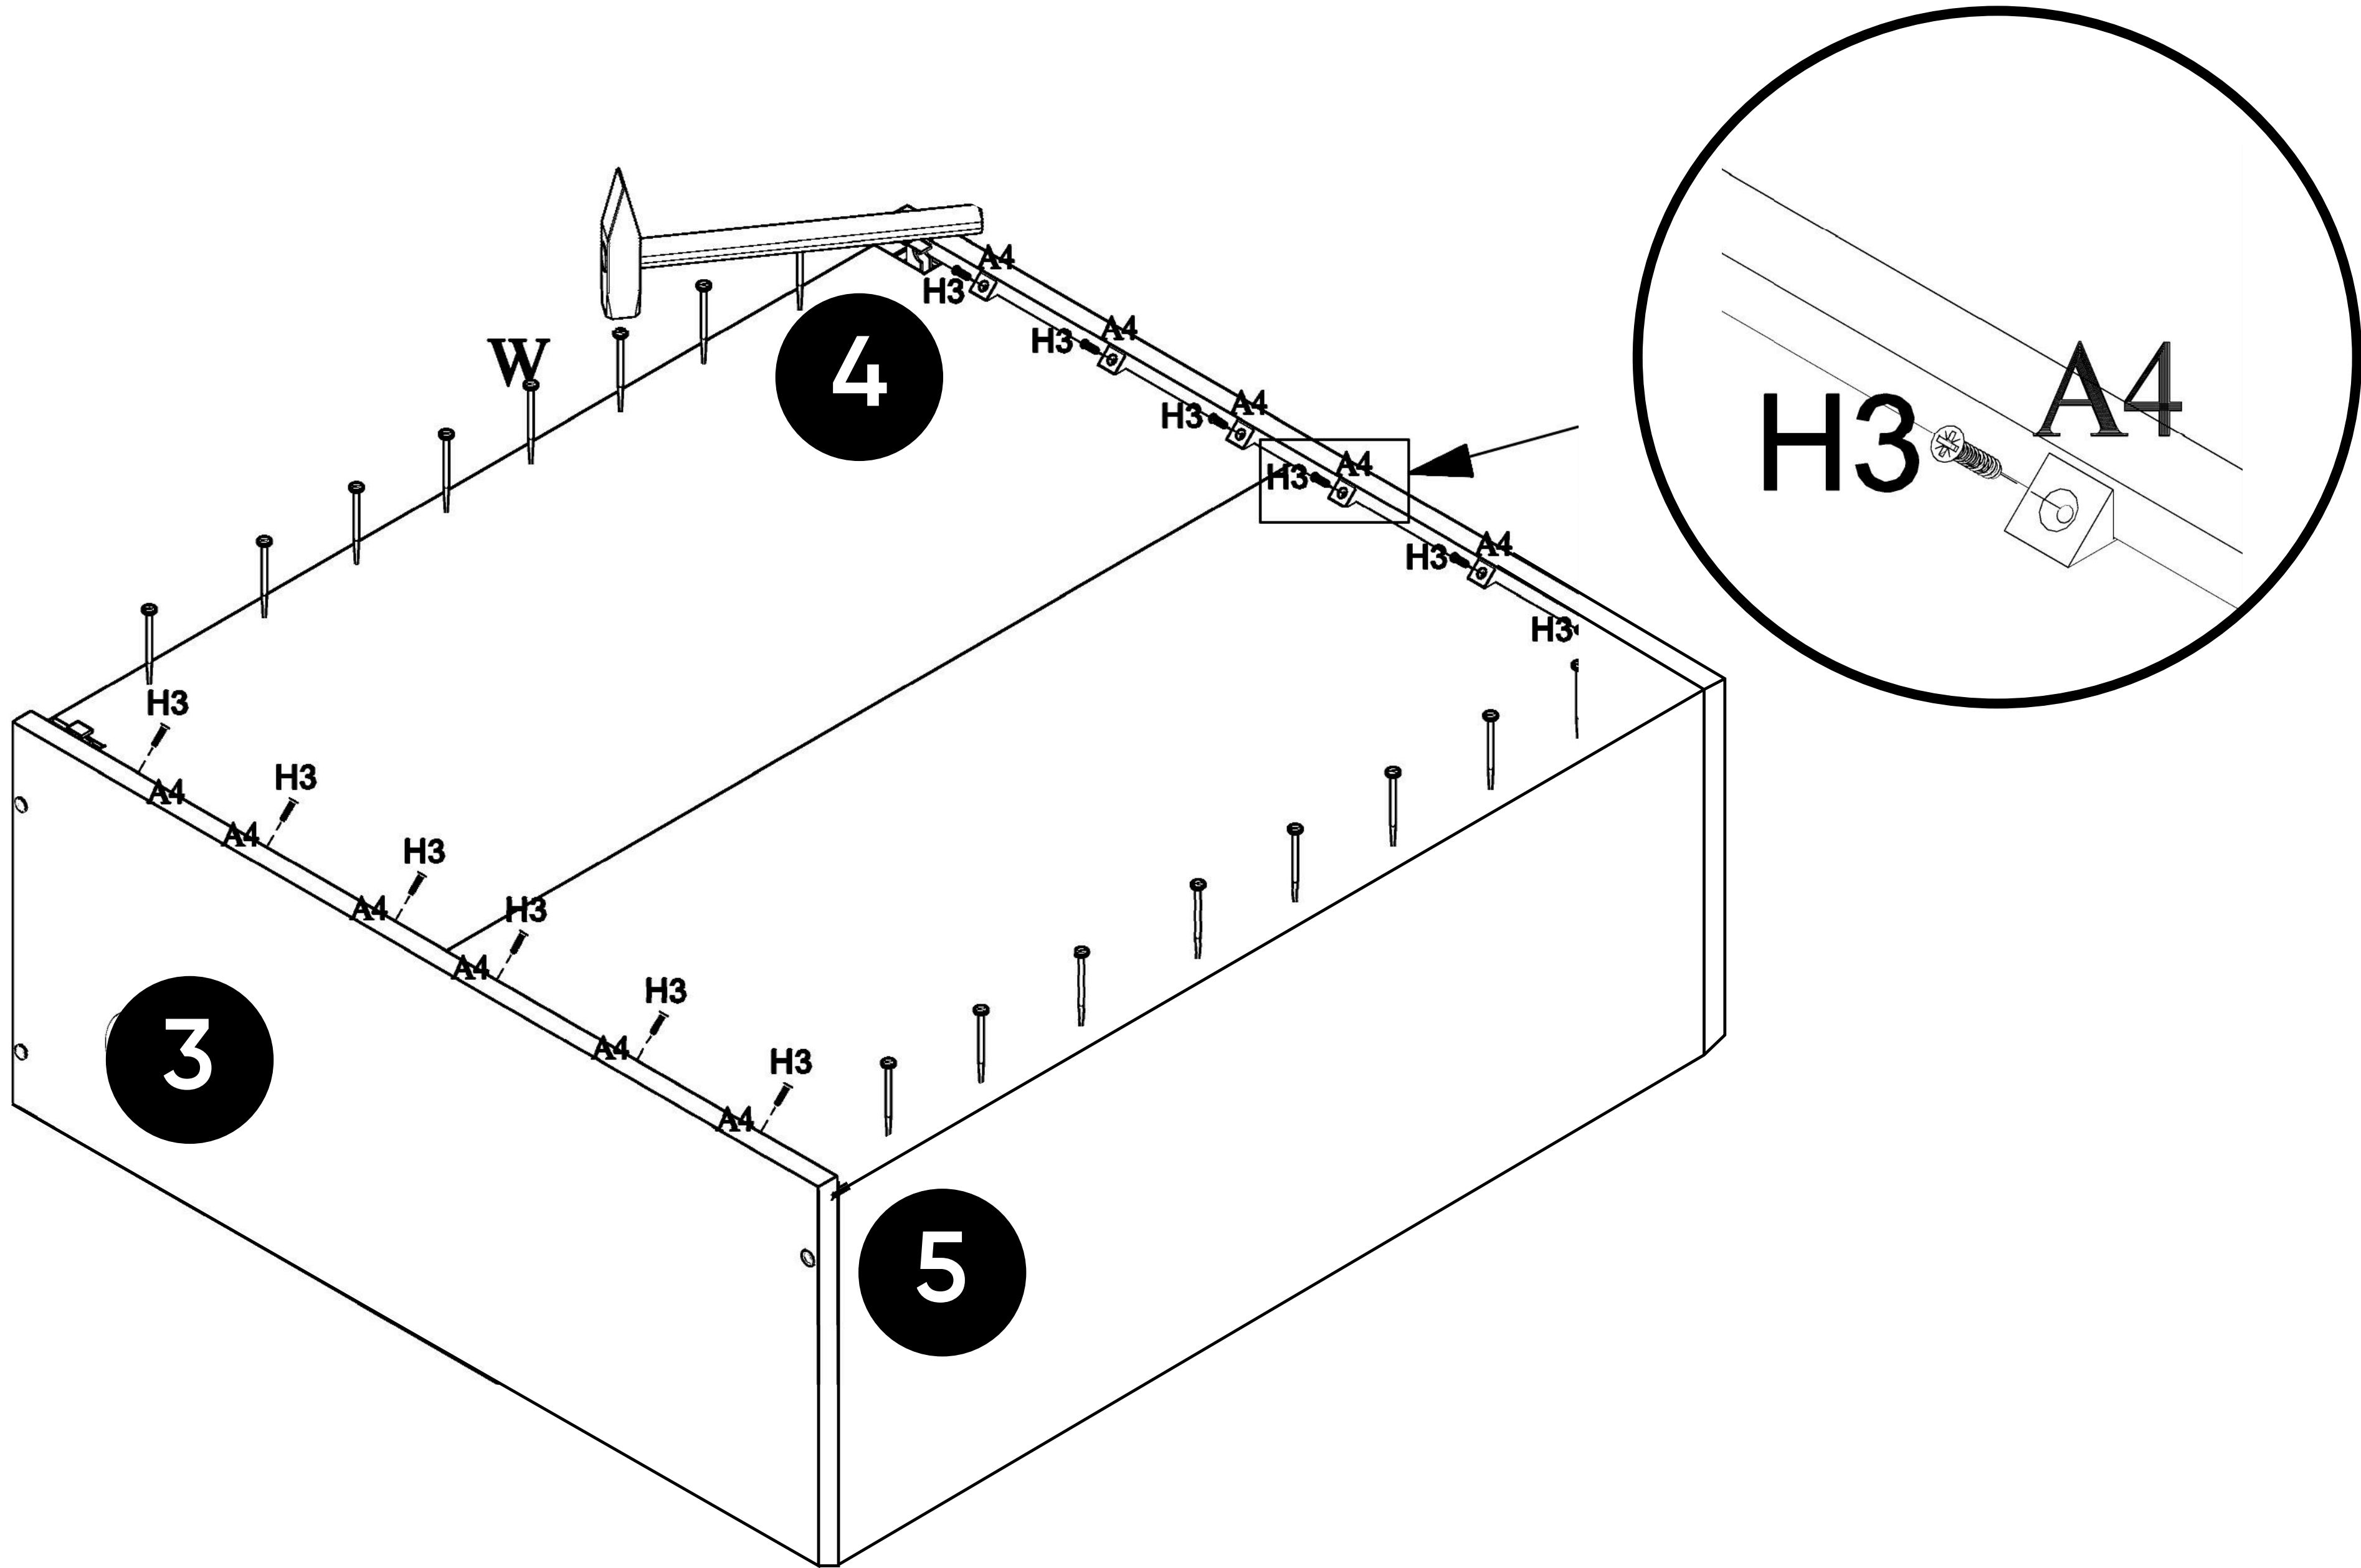

STEP - 6


G2 x4

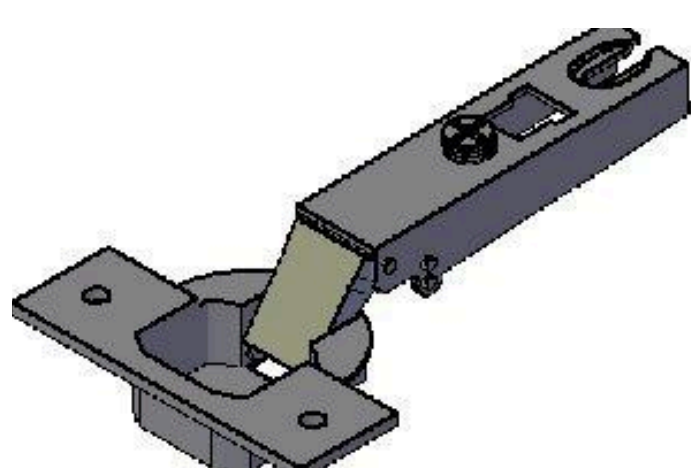



H x8 US 031.03







3.5x13

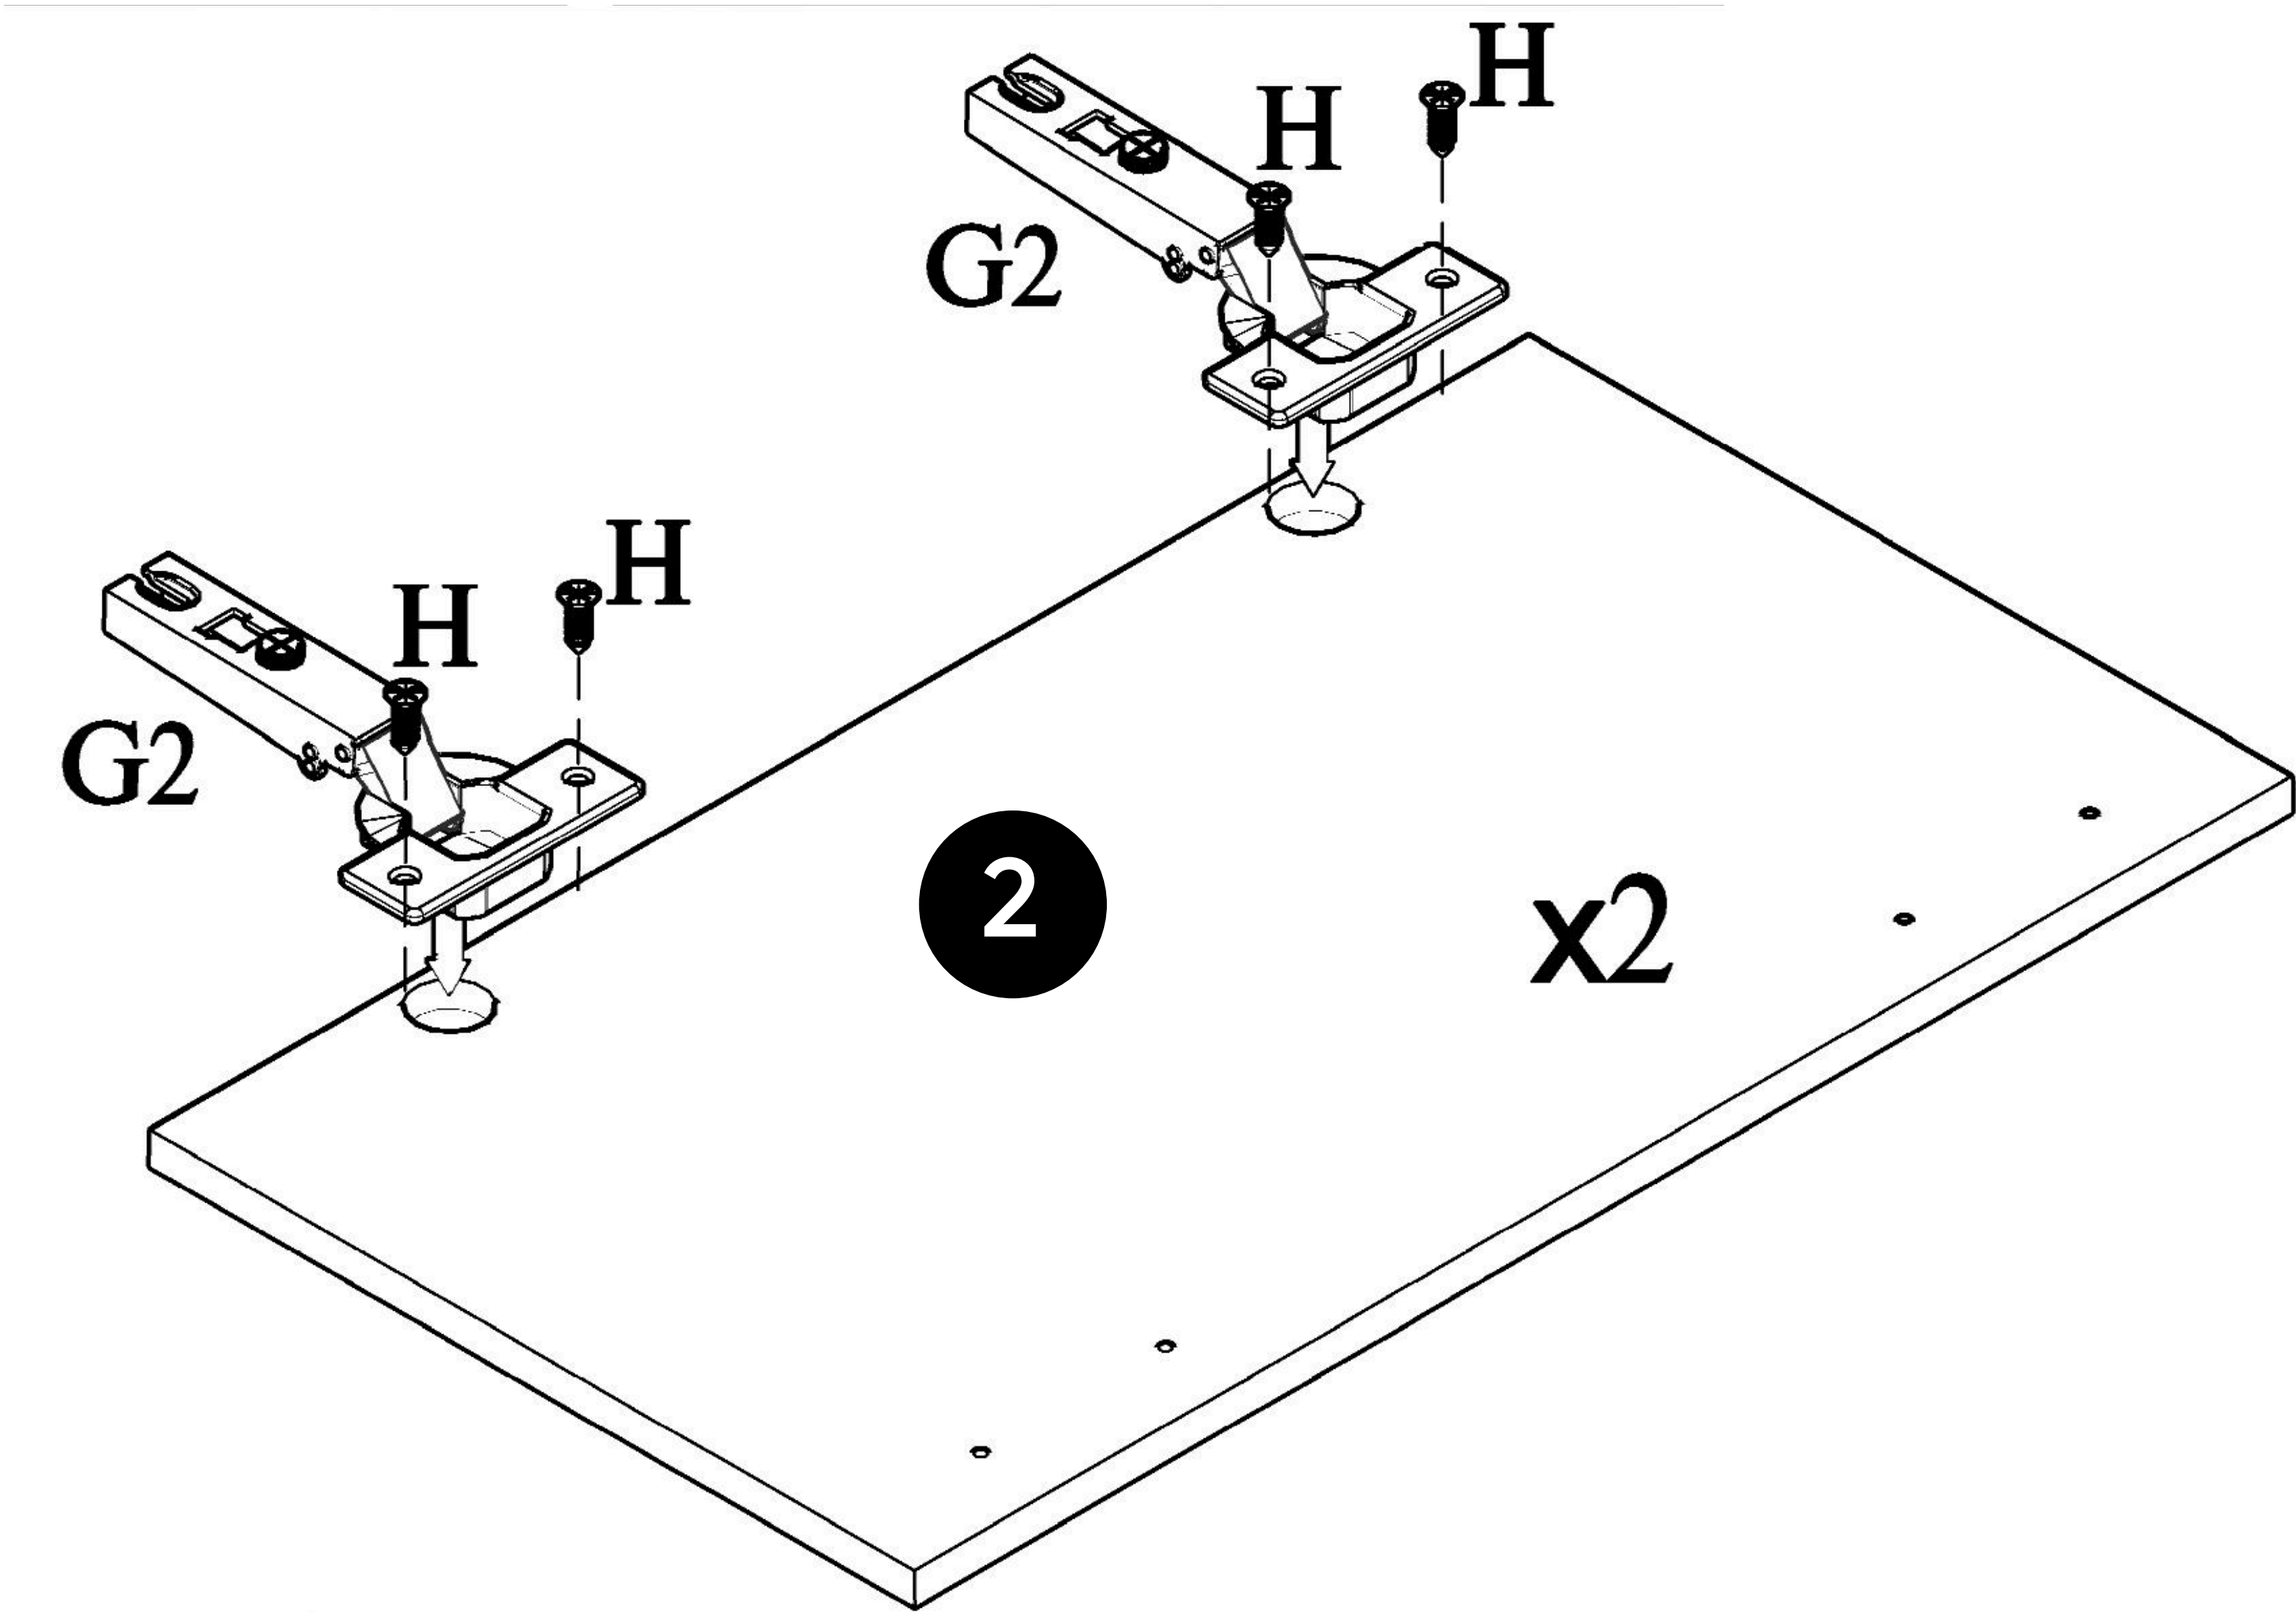

STEP - 7

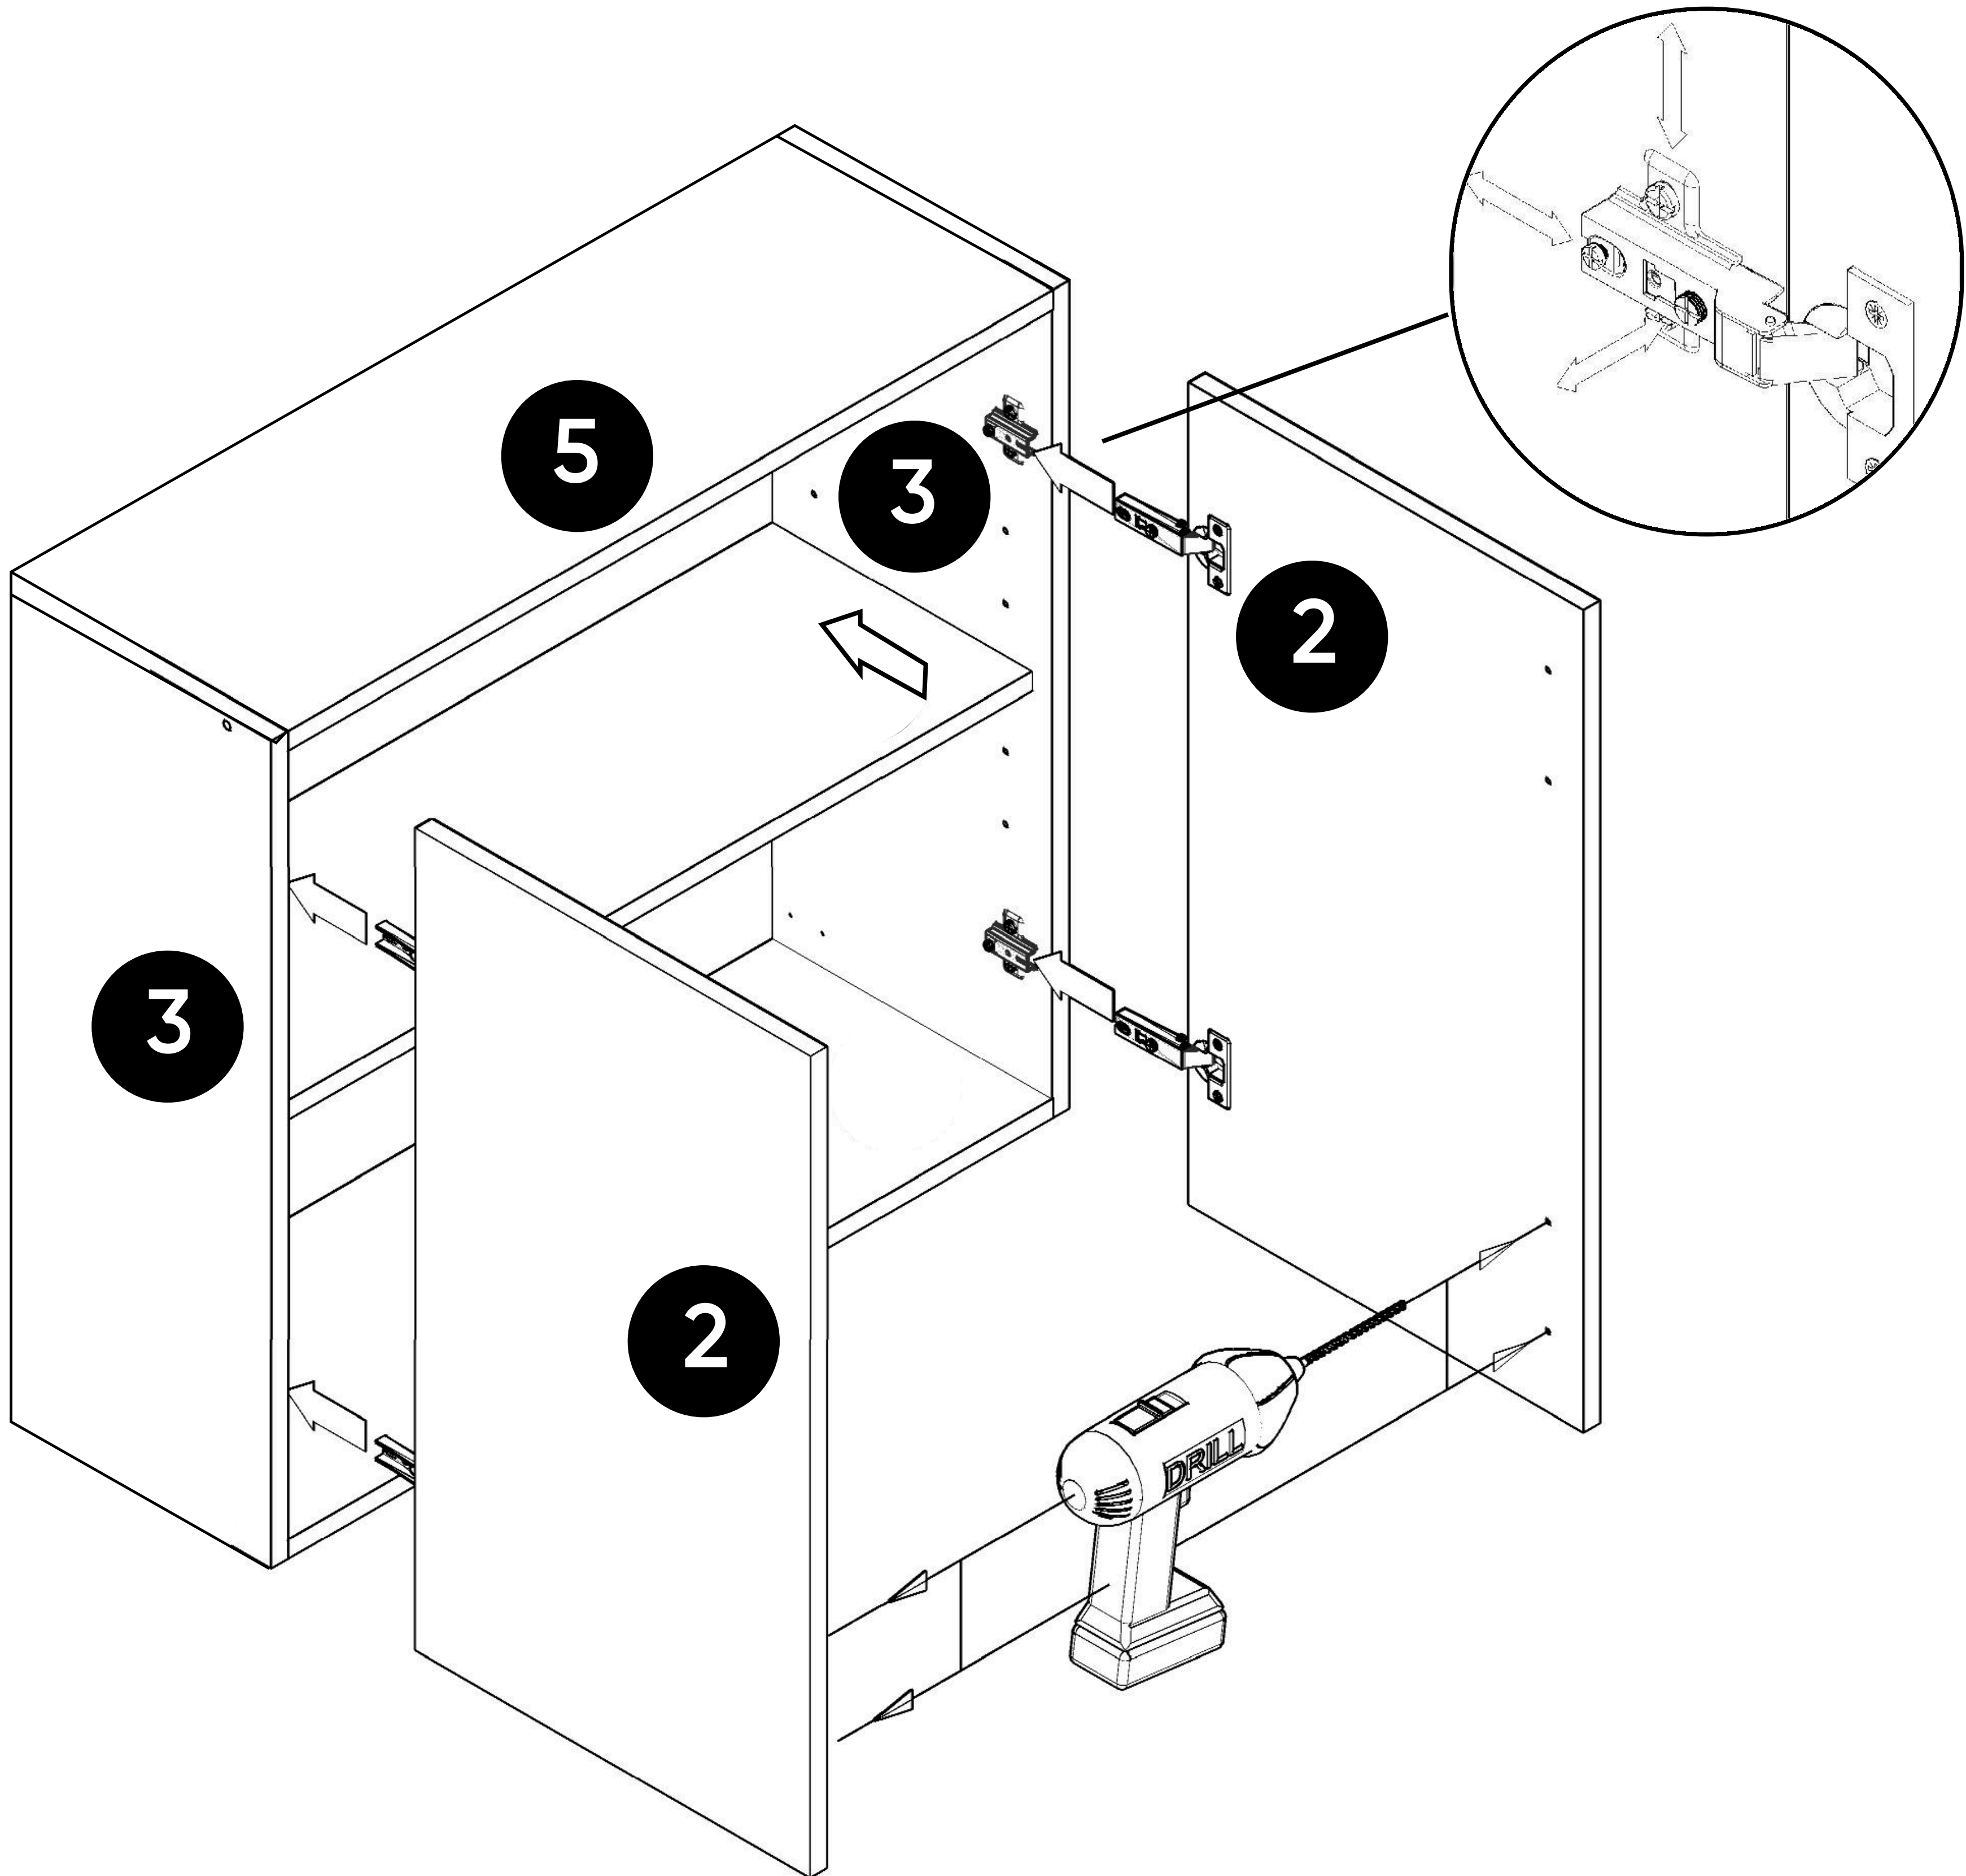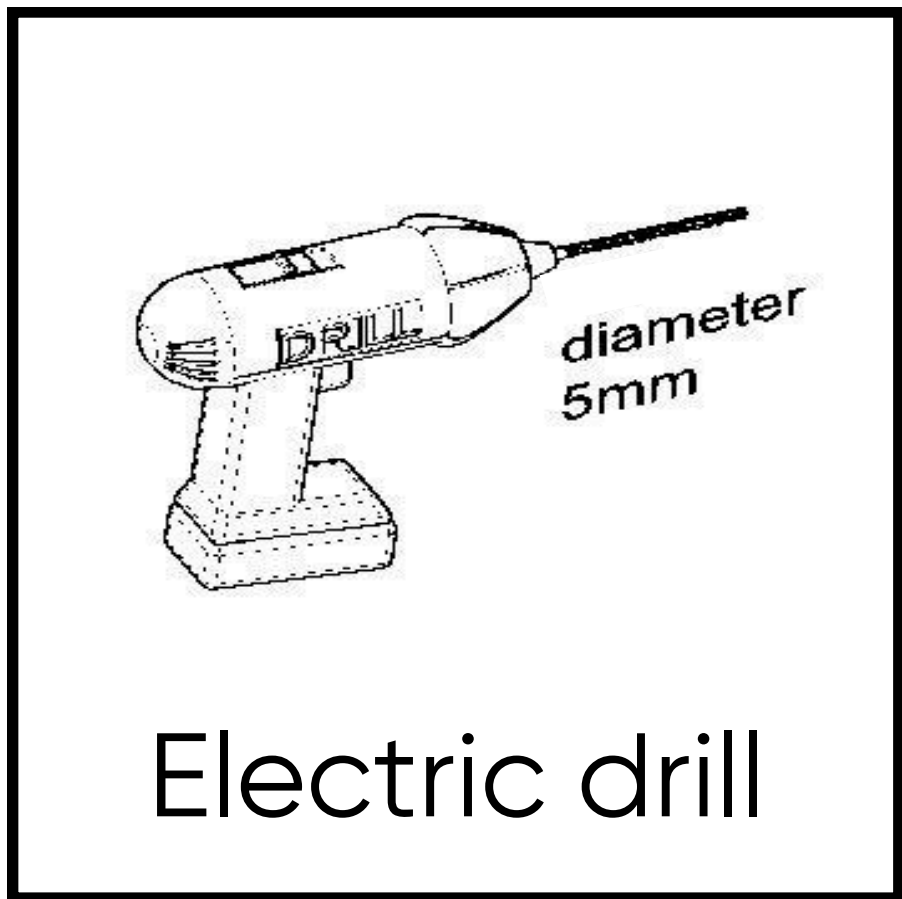


STEP - 8

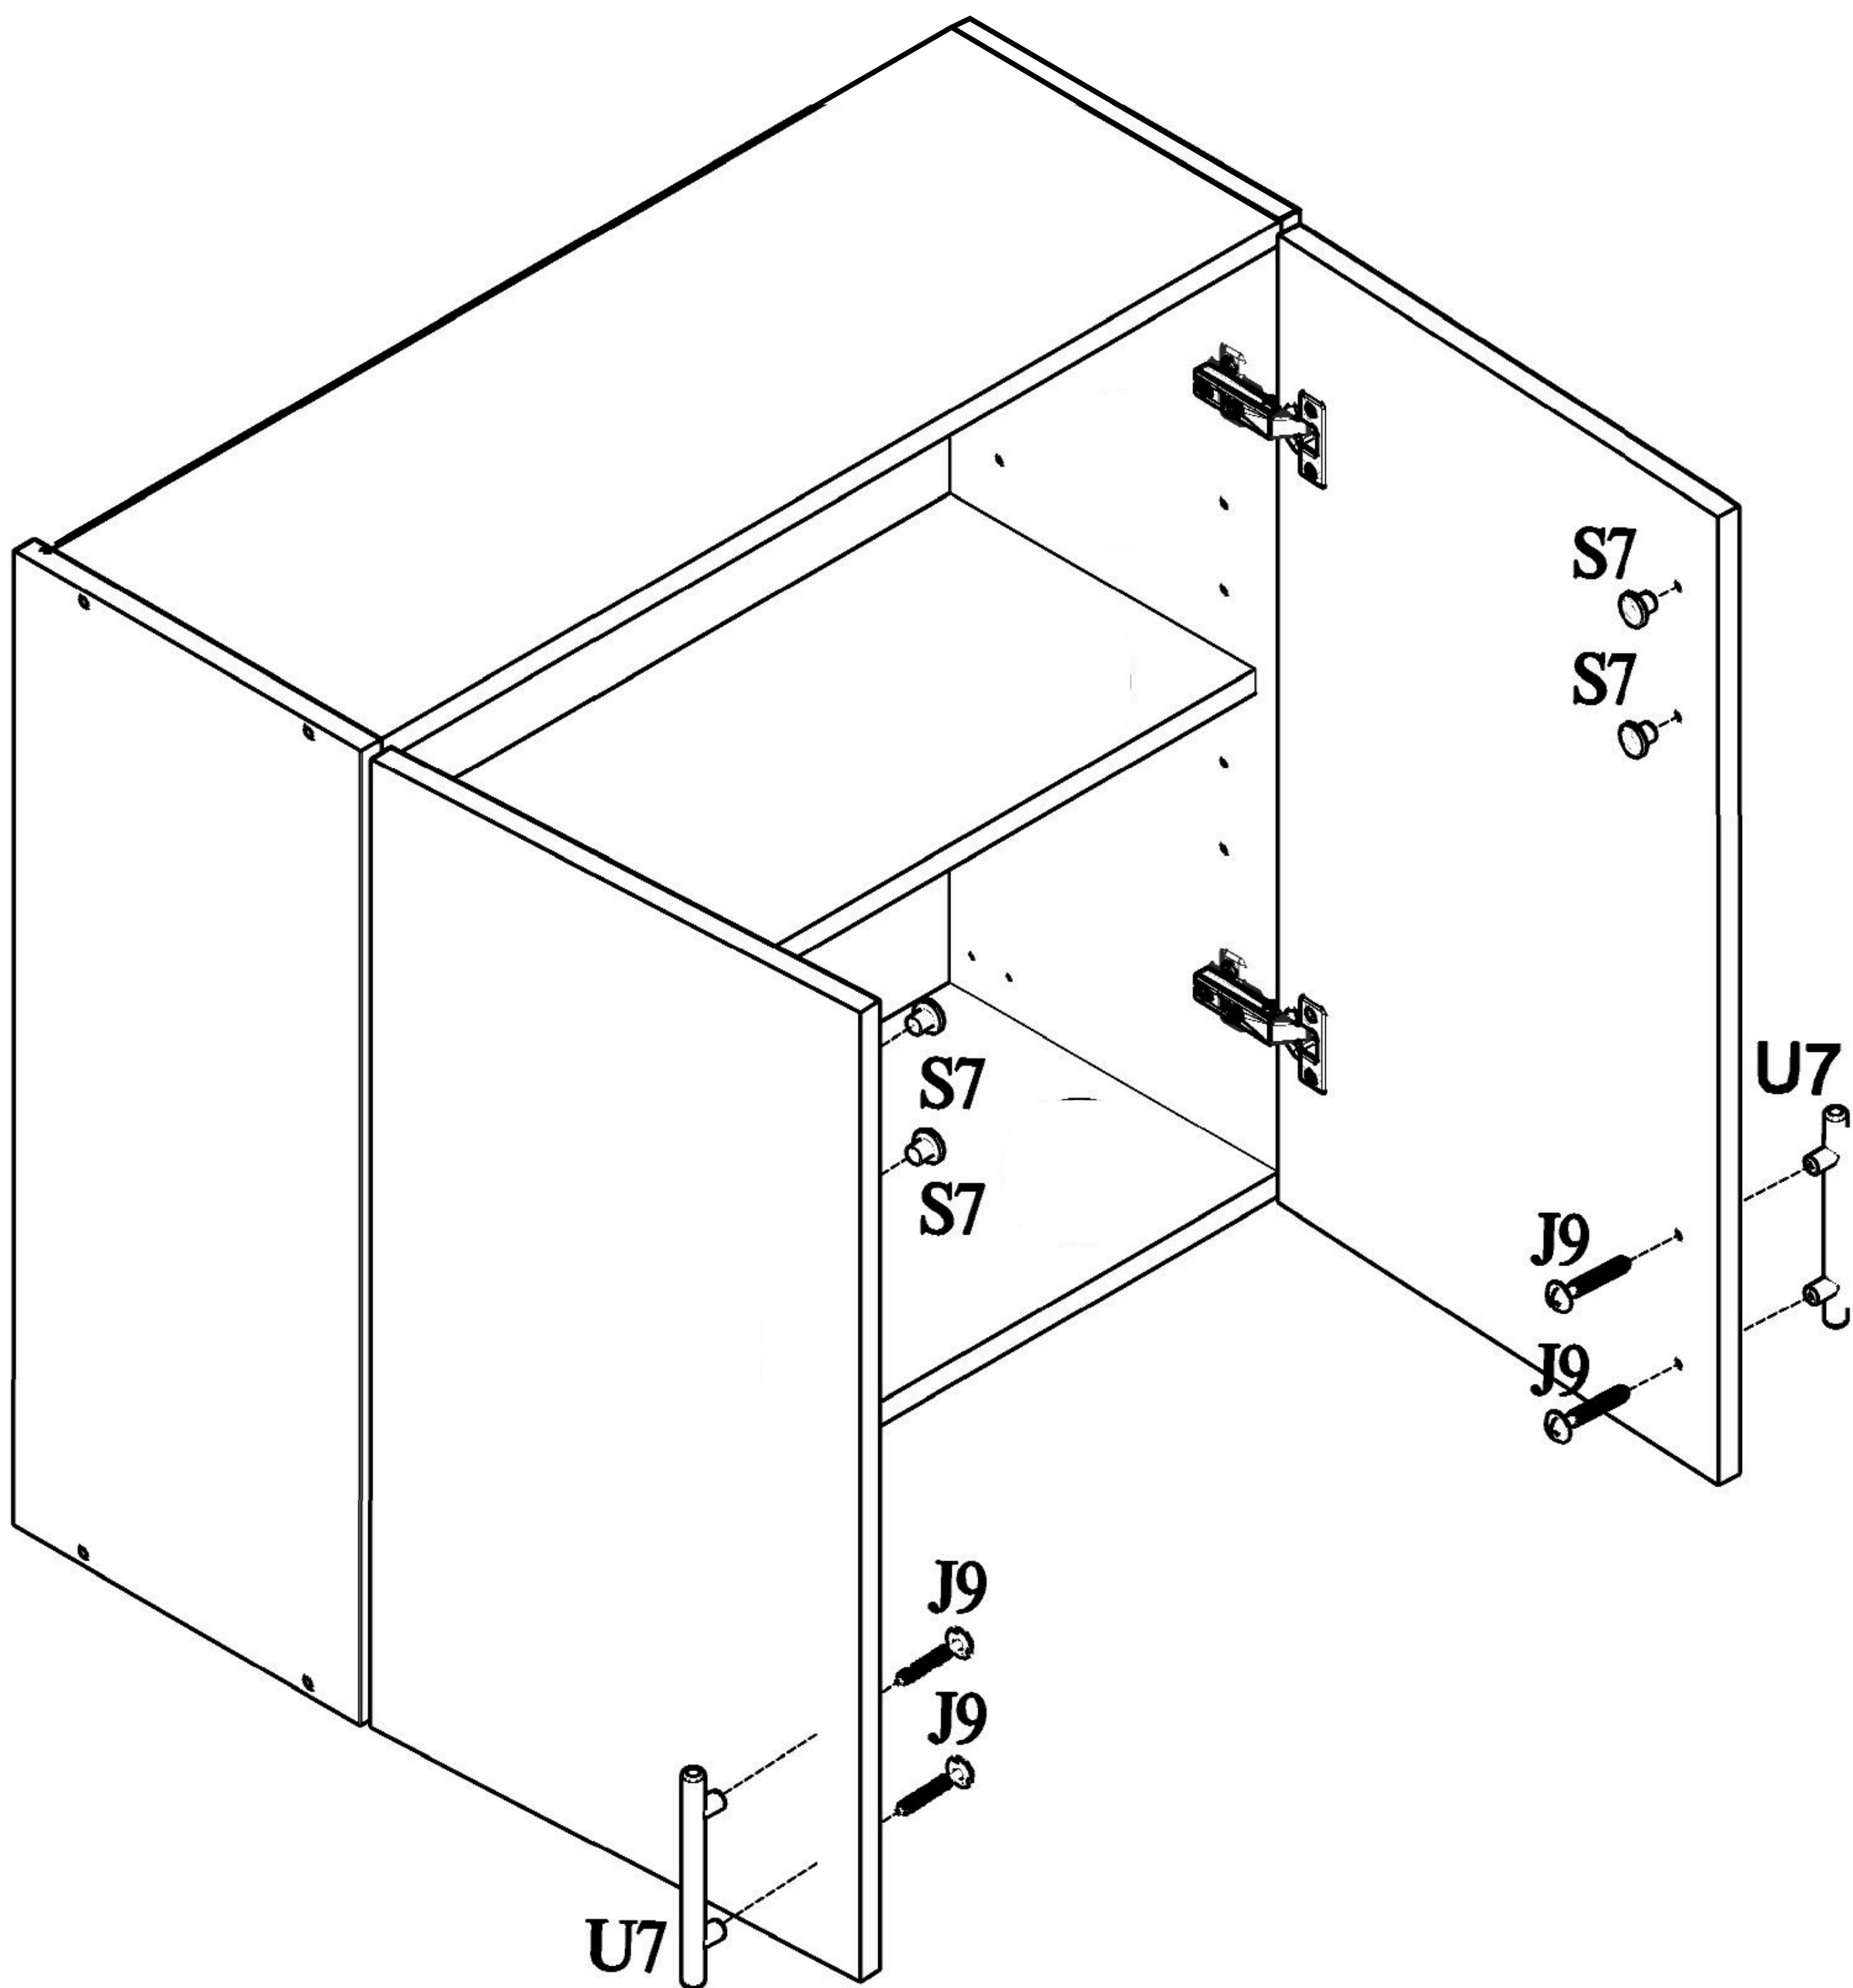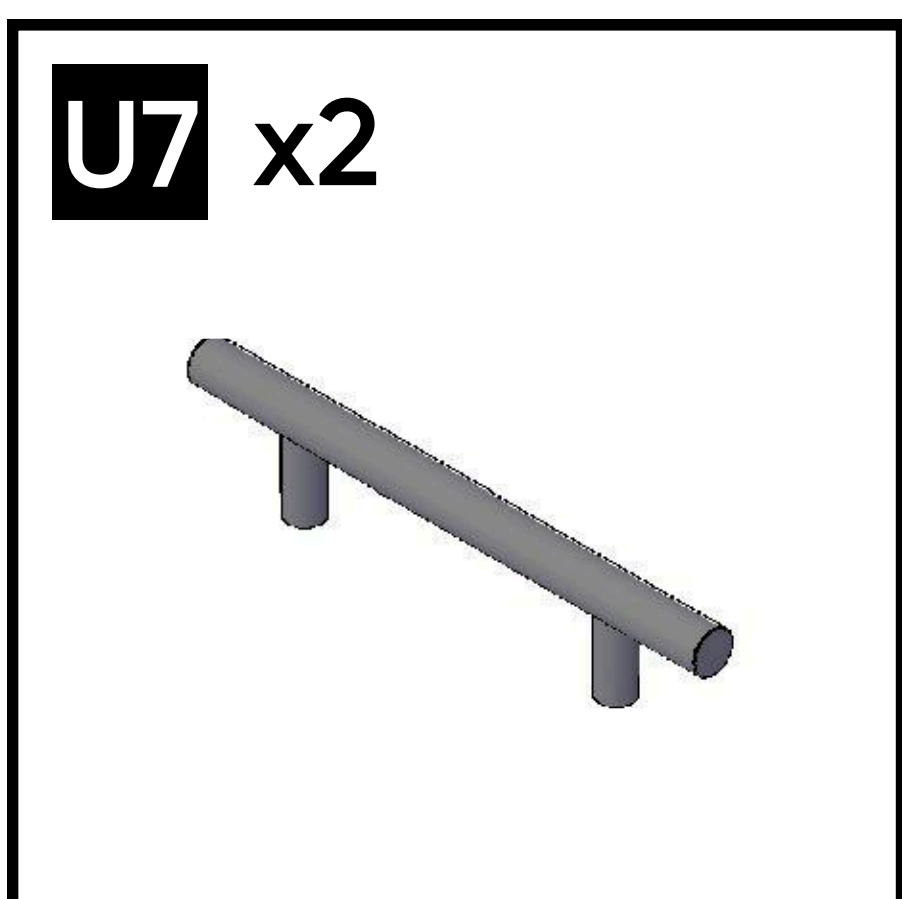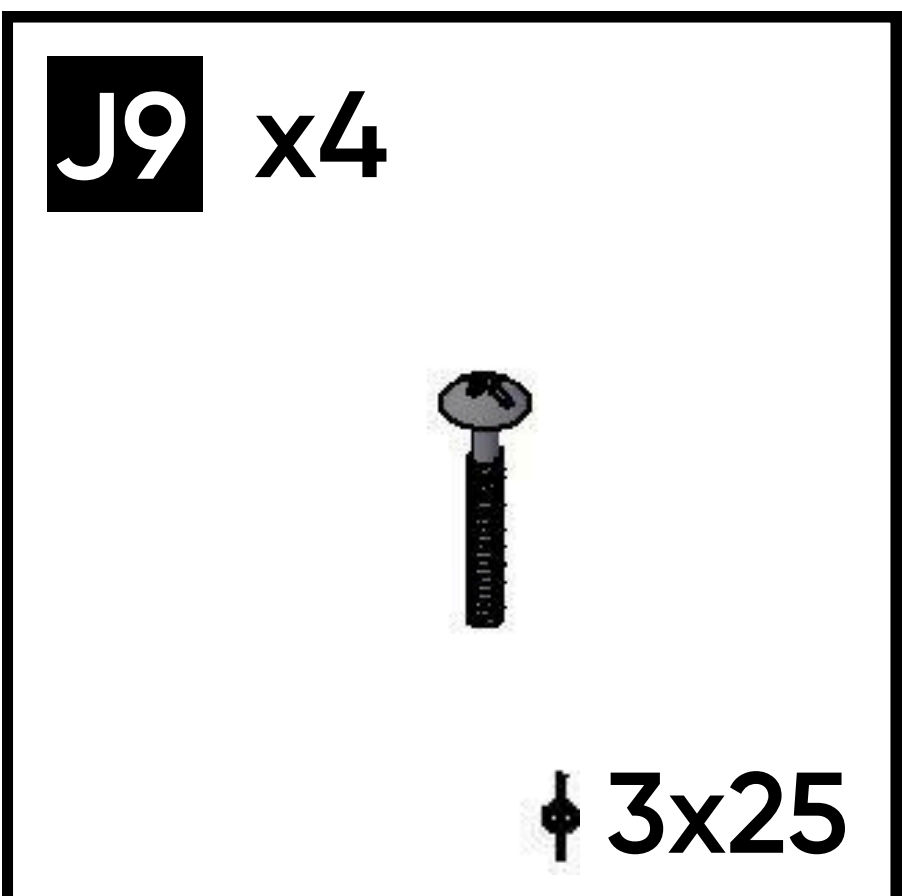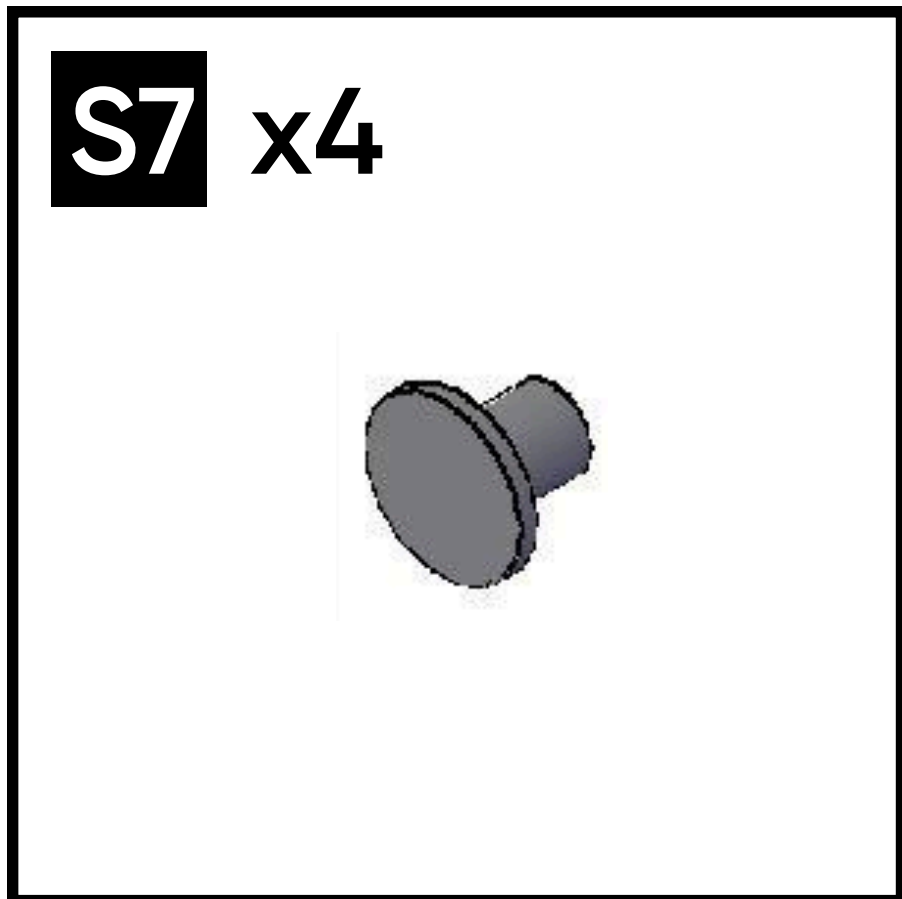


STEP - 9



! Mounting the Z9 component to the wall

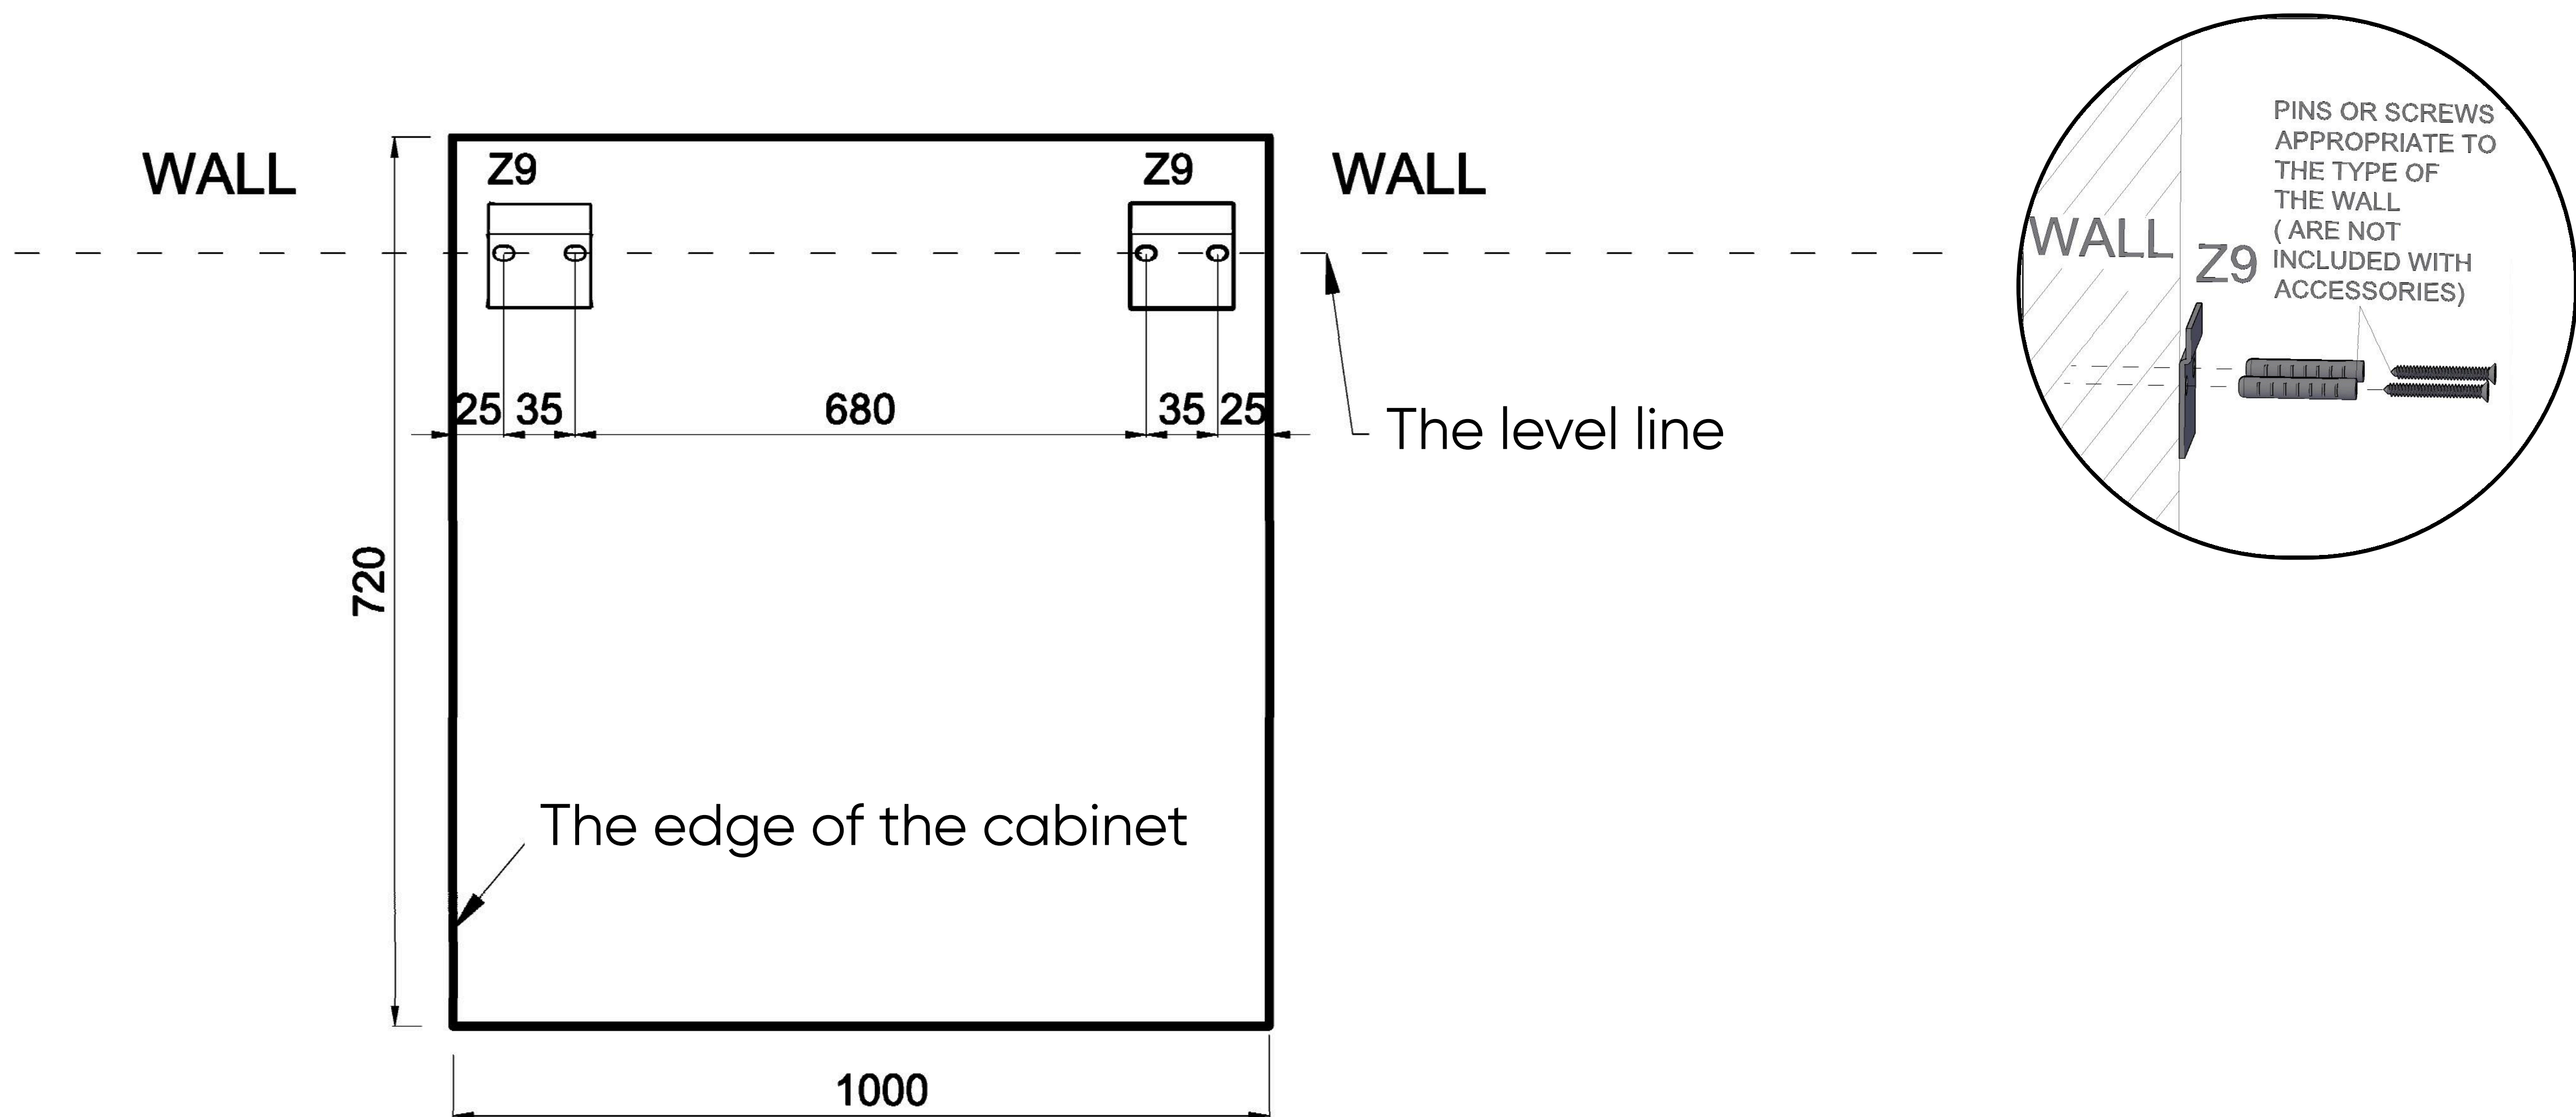

STEP - 10

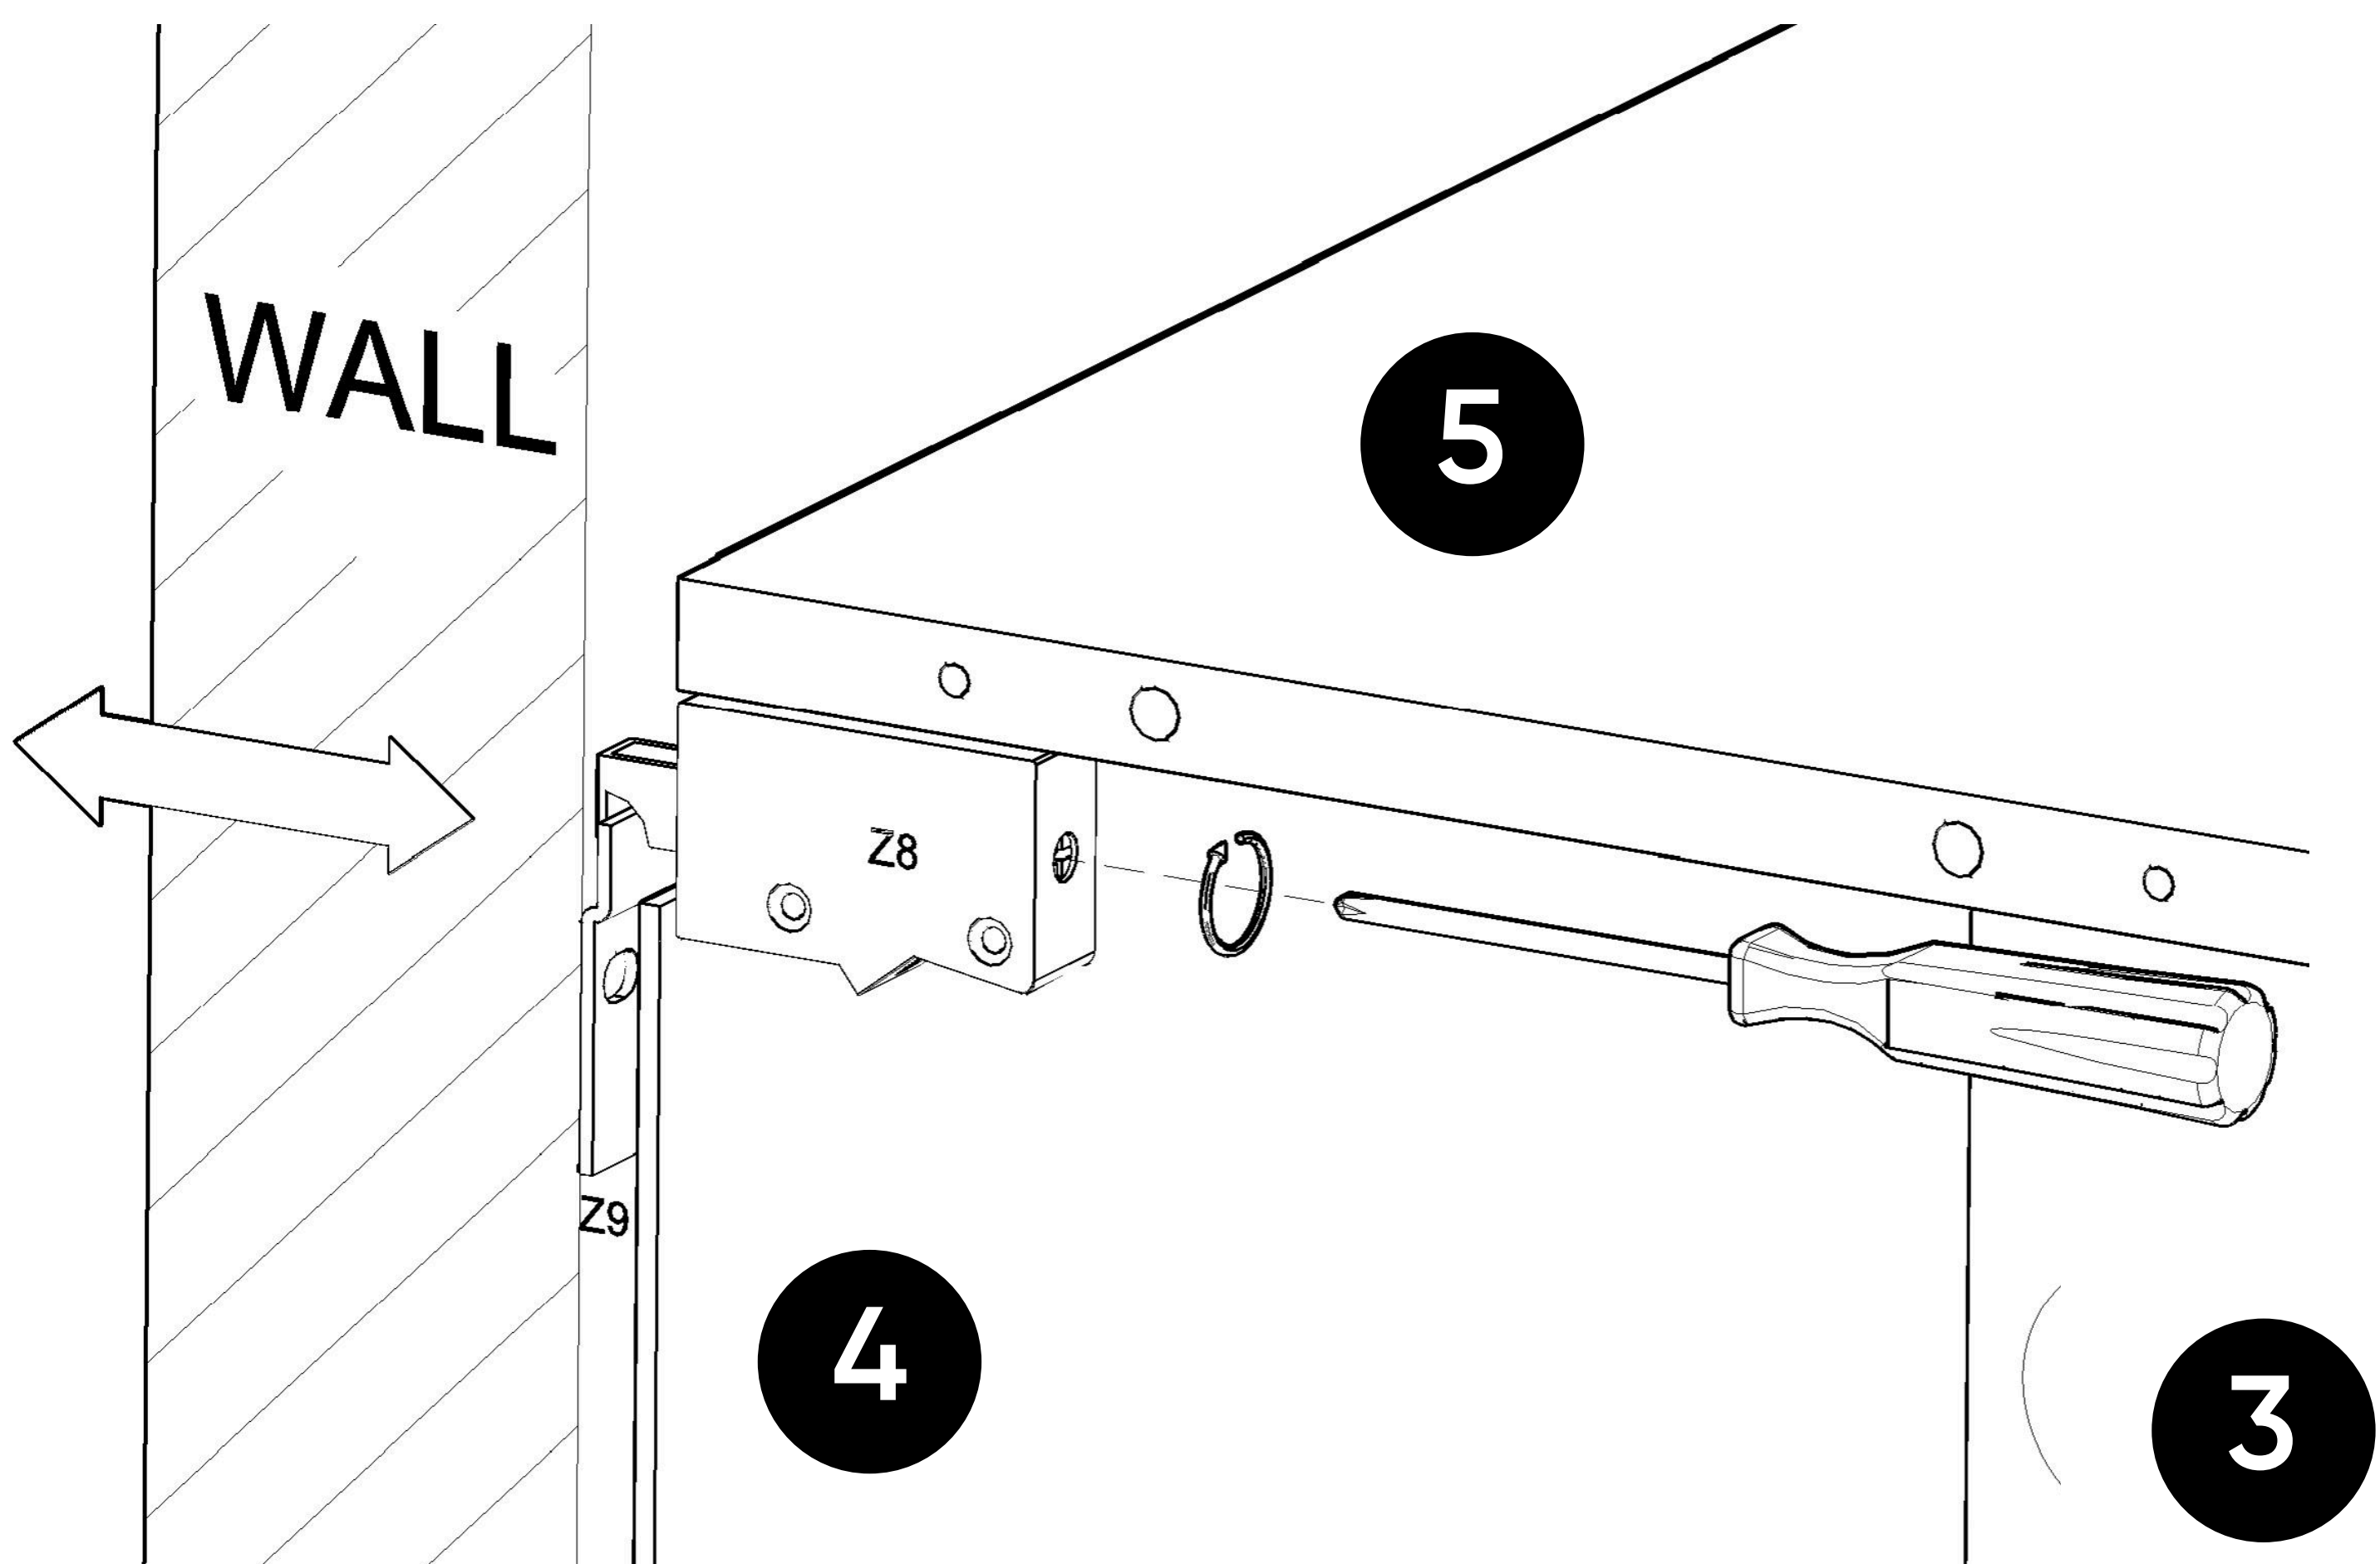

STEP - 11

