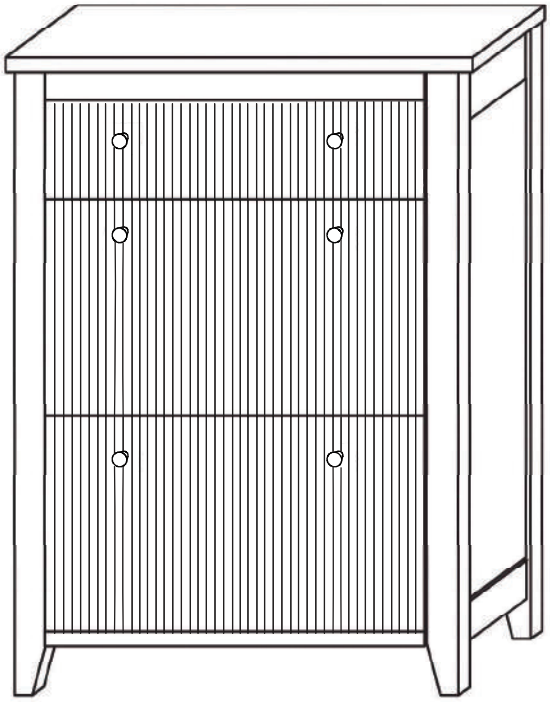
GARRUCHA DELUXE SHOE CABINET

Thank you for purchasing the SHOE CABINET. Please read the instructions carefully to ensure safe operation of the product.



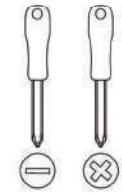
Size:W80 x D25 x H109cm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

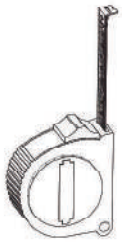
Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

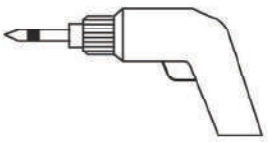
CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required


(NOT INCLUDED)


(NOT INCLUDED)


(NOT INCLUDED)


(NOT INCLUDED)


2 Person Build


1 Hour Set Up

Batch No.:V3 09/25

GARRUCHA DELUXE SHOE CABINET

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is designed to hold 20Kg in total, spread evenly over the whole unit. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Tools are not included.

WARNINGS

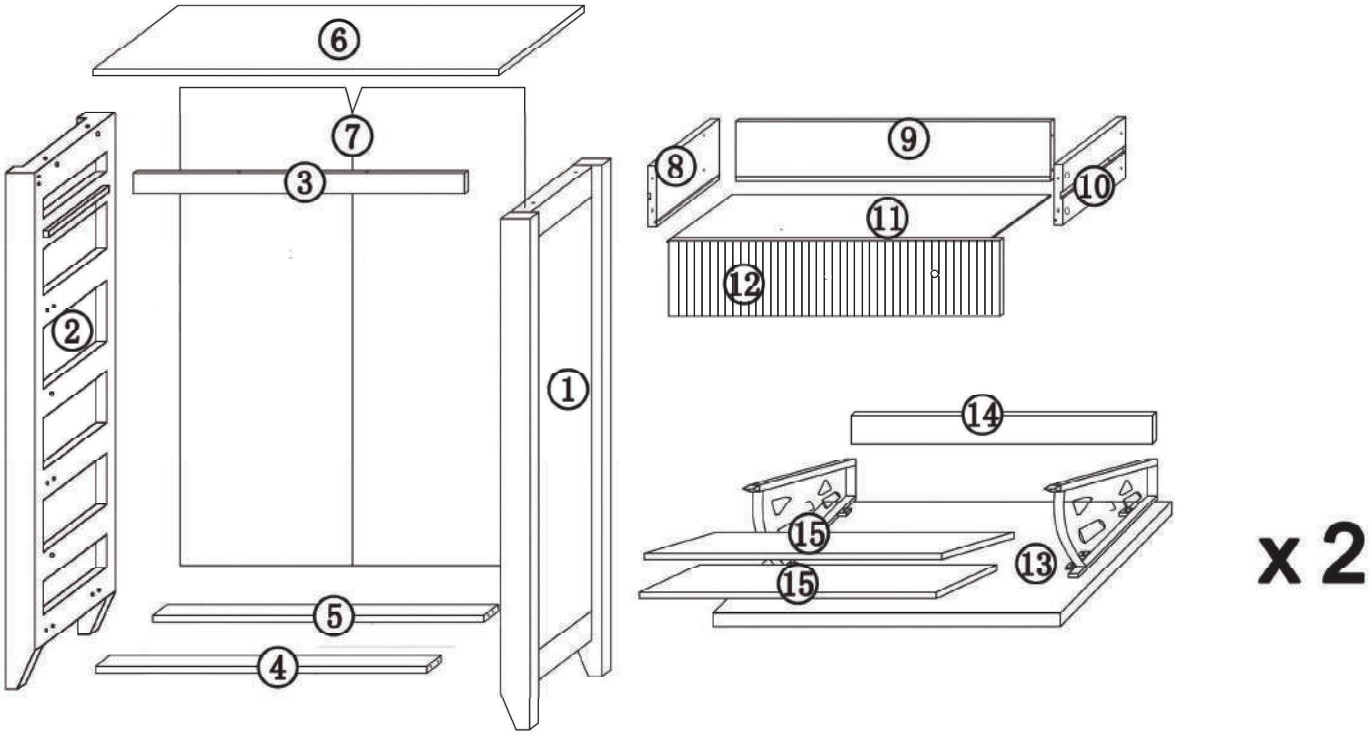
- DO NOT use power tools to construct this product.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit of stand on the product.
- It is essential that this unit is fixed to a wall with the fixings provided.
- We recommend the use of the wall fixing provided for safety reasons.N.B. if in doubt pls consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product





GARRUCHA DELUXE SHOE CABINET

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



GARRUCHA DELUXE SHOE CABINET

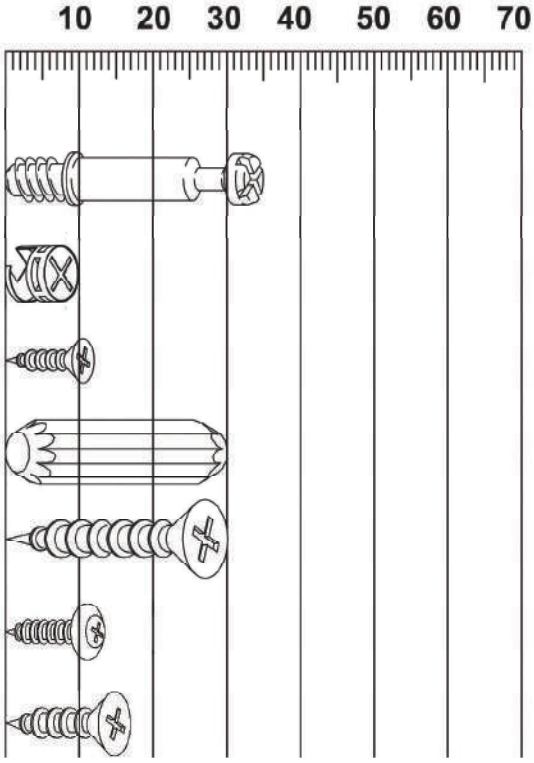
PARTS

1 	2 	3 
Description:RIGHT SIDE PANEL QTY:1 PC Dimension3:1055X240X50MM	Description:LEFT SIDE PANEL QTY:1 PC Dimension:1055X240X50MM	Description:TOP CROSS BAR(BACK) QTY:1 PC Dimension:640X50X15MM
4	5	6 
Description:MIDDLE CROSS BAR(BACK) QTY:1 PC Dimension:640X50X15MM	Description:BOTTOM PANEL QTY:1 PC Dimension:640X50X15MM	Description:TOP PANEL QTY:1 PC Dimension:800X250X25MM
7 	8 	9 
Description:BACK PANEL QTY:1 PC Dimension:975X657X3MM	Description:DRAWER LEFT HAND SIDE PANEL QTY:1 PC Dimension:190X115X12MM	Description:DRAWER BACK QTY:1 PC Dimension:610X115X12MM
10 	11 	12 
Description:DRAWER RIGHT HAND SIDE PANEL QTY:1 PC Dimension:190X115X12MM	Description:DRAWER BOTTOM QTY:1 PC Dimension:620X186X3MM	Description:DRAWER FRONT QTY:1 PC Dimension: 635X151X15MM
13 	14	15 
Description:DOOR PANEL QTY:2 PCS Dimension: 635X364X15MM	Description:CROSS BAR QTY:2 PCS Dimension:627X85X12MM	Description:SHELF QTY:4 PCS Dimension:627X14X12MM

GARRUCHA DELUXE SHOE CABINET

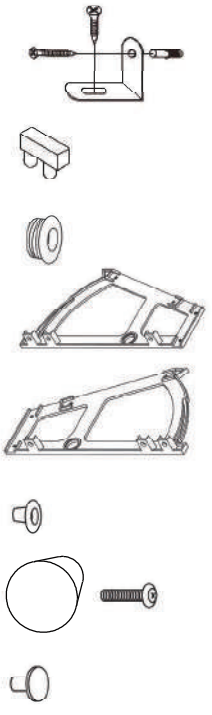
Fixings (to scale)

Ref	Dimensions	Qty
A	CAM BOLT (6X35MM)	16
B	CAM LOCK (15X10MM)	16
C	SCREW (3X12MM)	22
D	DOWEL (6X30MM)	6
E	SCREW (4X30MM)	16
F	SCREW (3.5X12MM)	12
G	SCREW (4X16MM)	4



Fixing(not to scale)

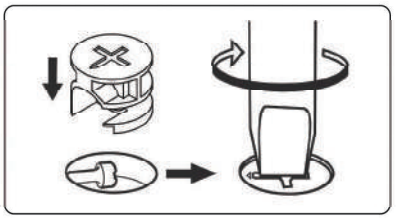
H	WALL FIXING	1
I	DOOR STOPPER	4
J	OUTER GROMMET	4
K	LEFT PLASTIC BRACKET	2
L	RIGHT PLASTIC BRACKET	2
M	INNER GROMMET	4
N	HANDLE	6
O	DRAWER STOPPER	2

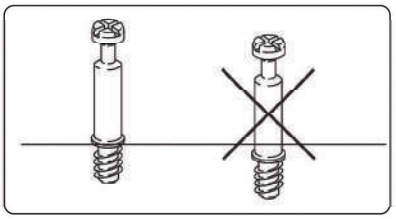


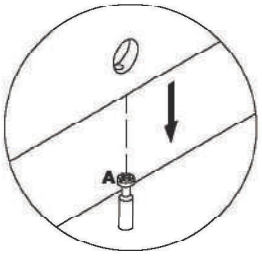
CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.
If you keep the fittings in a bowl during assembly you will be less likely to lose them!

GARRUCHA DELUXE SHOE CABINET

General Hints and Tips Don't screw too deep

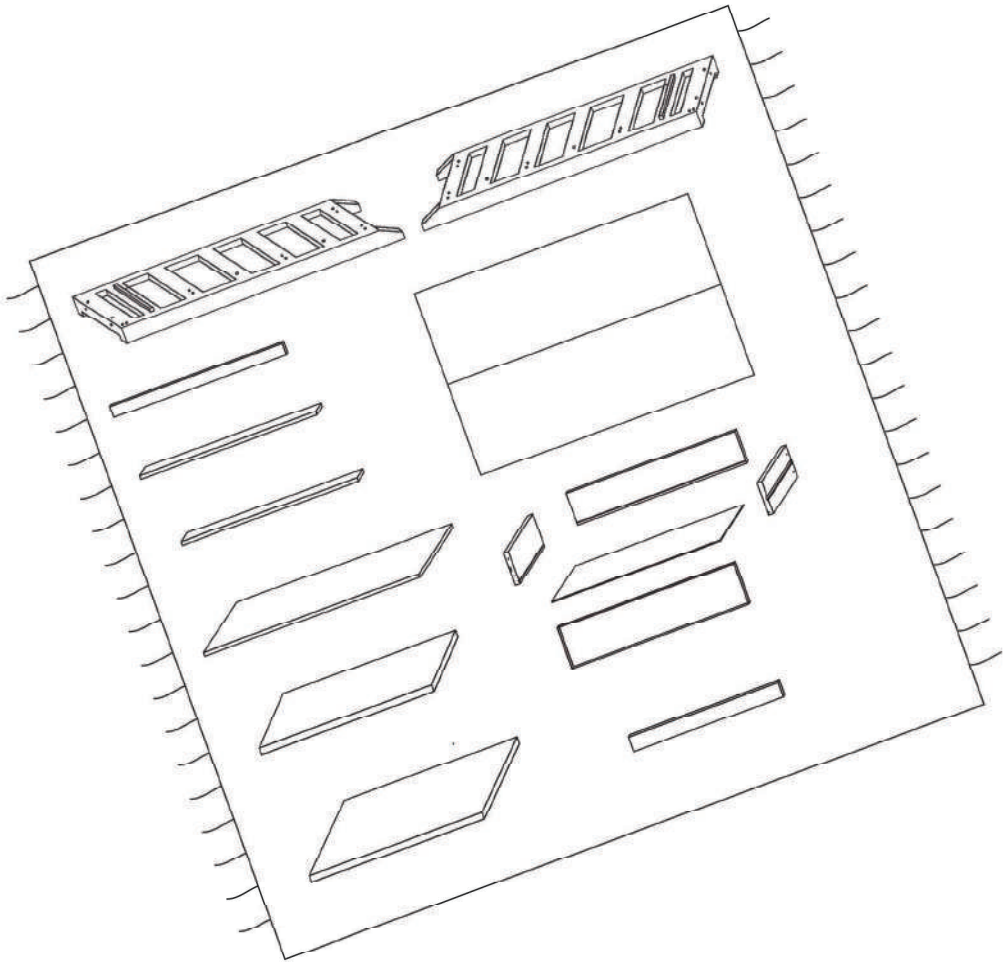




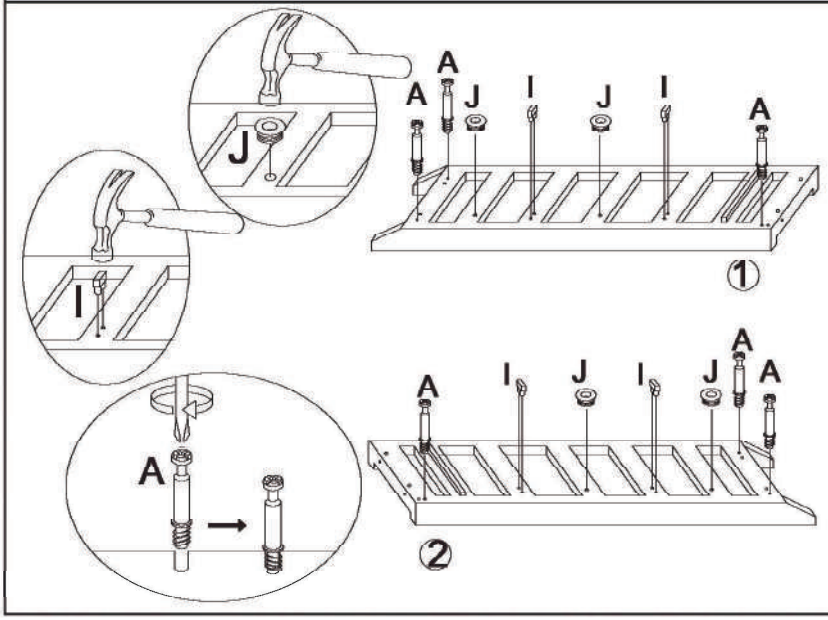


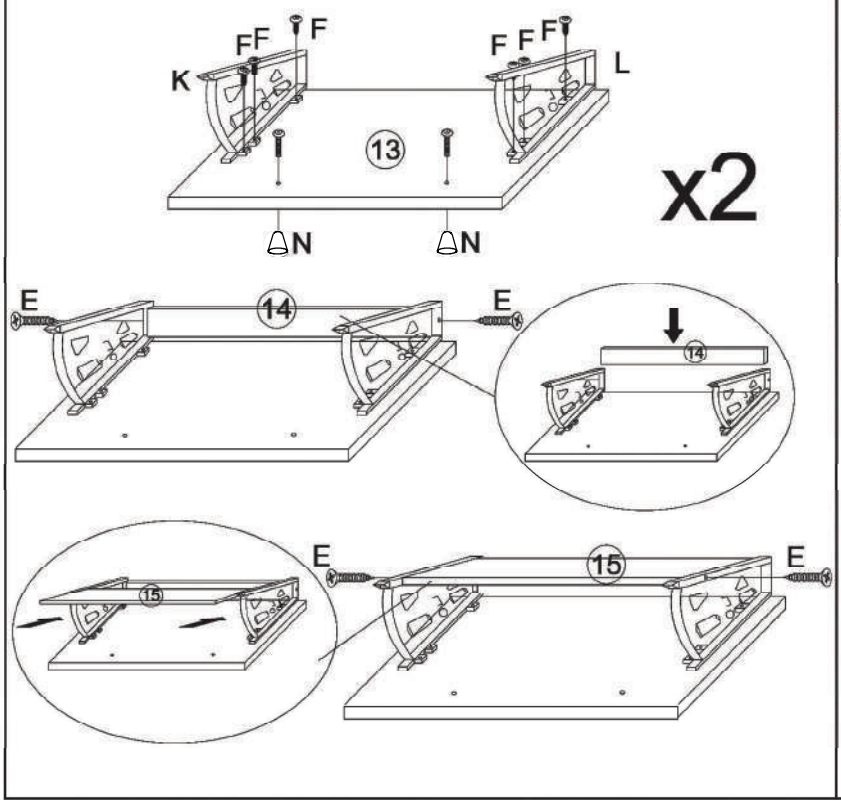
Layout Parts on Soft Surface

Layout all part on a soft surface i.e. Rug,carpet or packaging carton

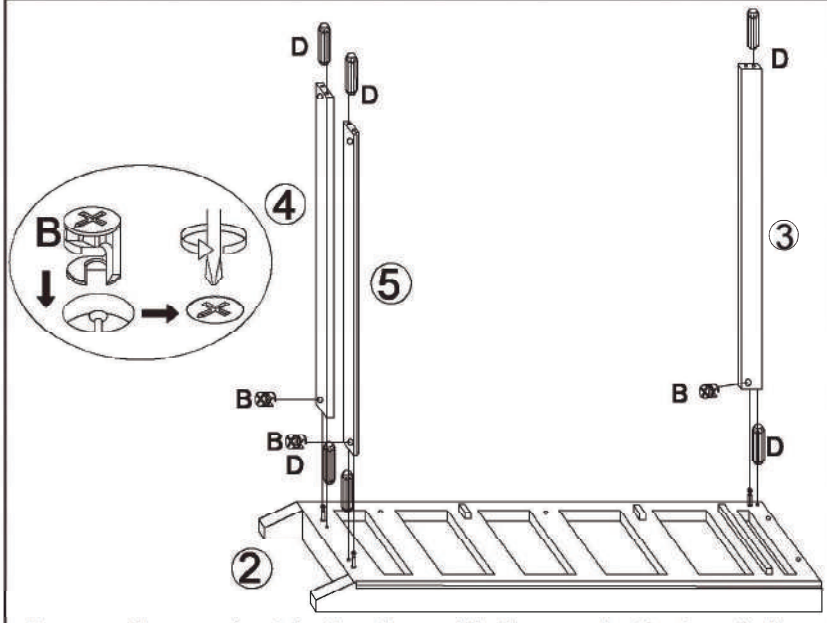


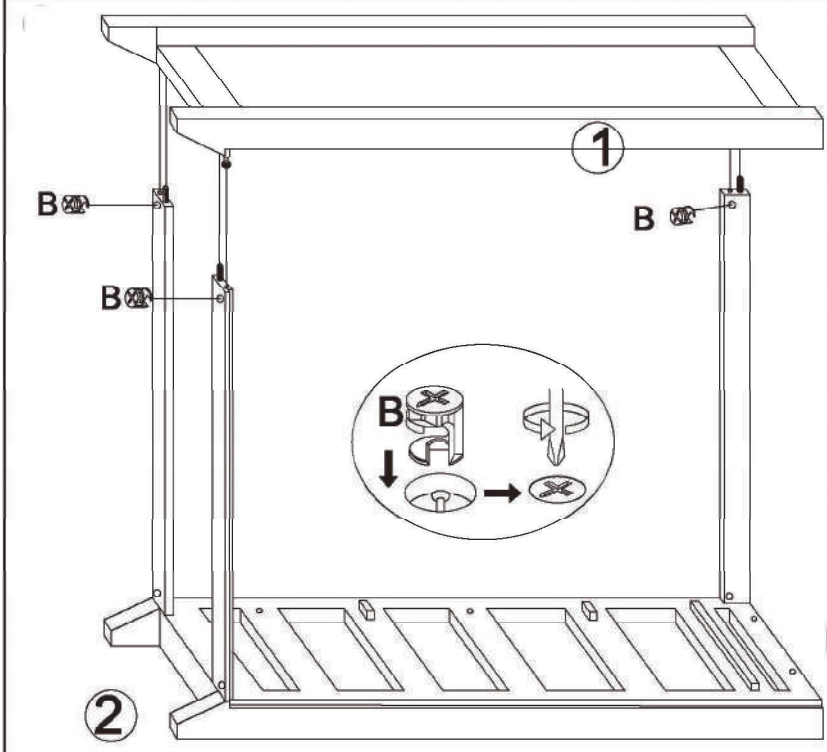
GARRUCHA DELUXE SHOE CABINET

STEP 1	PARTS REQUIRED
	1: RIGHT SIDE PANEL X1 2: LEFT SIDE PANEL X1 A:CAM BOLT X 6 I :DOOR STOPPERX 4 J : OUTER GROMMET X4

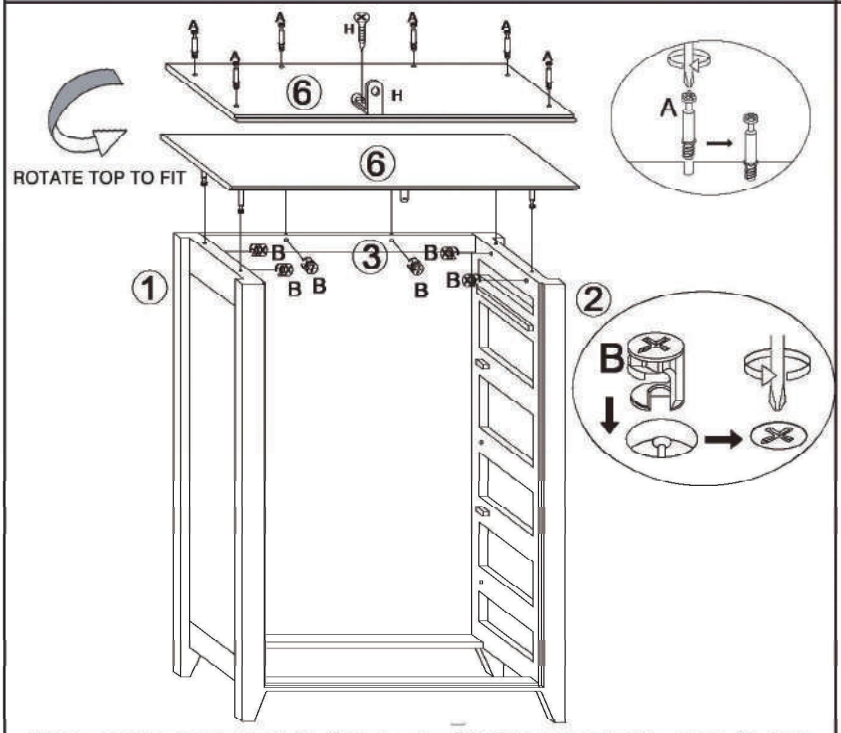
STEP 2	PARTS REQUIRED
	13:DOOR PANEL X2 14:CROSS BAR X2 15:SHELF X2 F :SCREWS X12 E :SCREWS X 8 K: LEFT PLASTIC BRACKET X 2 L:RIGHT PLASTIC BRACKET X 2 N :HANDLE X 4

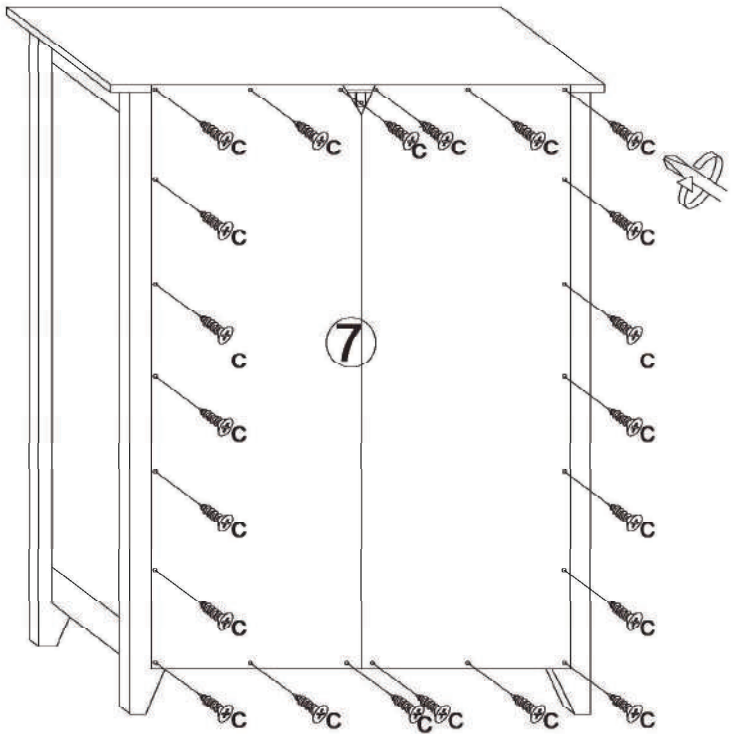
GARRUCHA DELUXE SHOE CABINET

STEP 3	PARTS REQUIRED
 Ensure the cam lock is lined up with the cam bolt when fixing.	2:LEFT SIDE PANEL X1 3:TOP CROSS BAR(BACK) X1 4:MIDDLE CROSS BAR (BACK)X1 5:BOTTOM PANEL X1 B:CAM LOCK X 3 D:DOWEL X 6

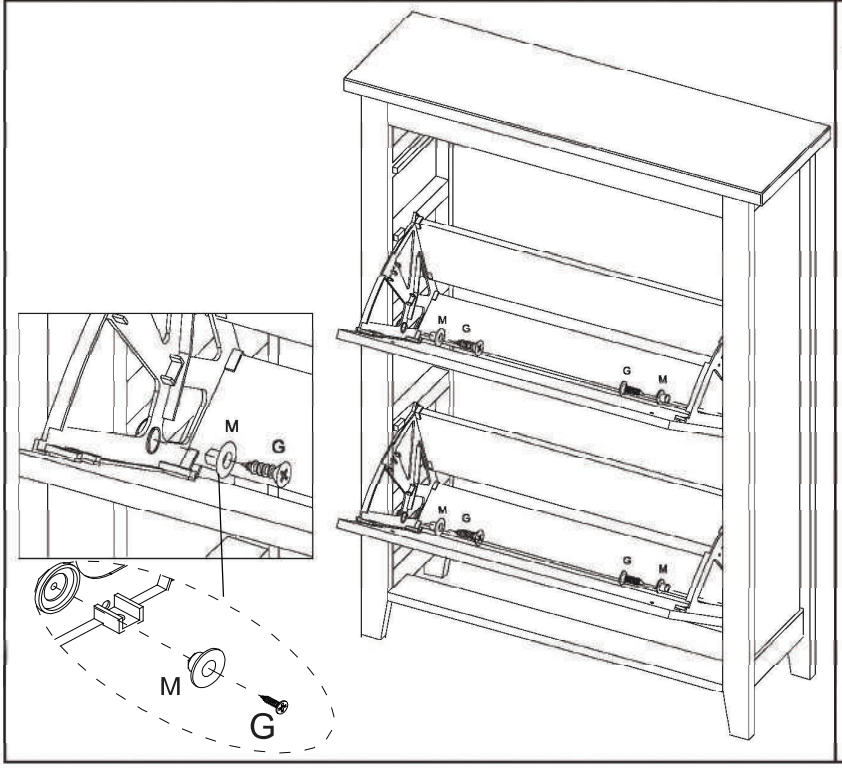
STEP 4	PARTS REQUIRED
 Ensure the cam lock is lined up with the cam bolt when fixing.	1: RIGHT SIDE PANEL X1 B:CAM LOCK X 3

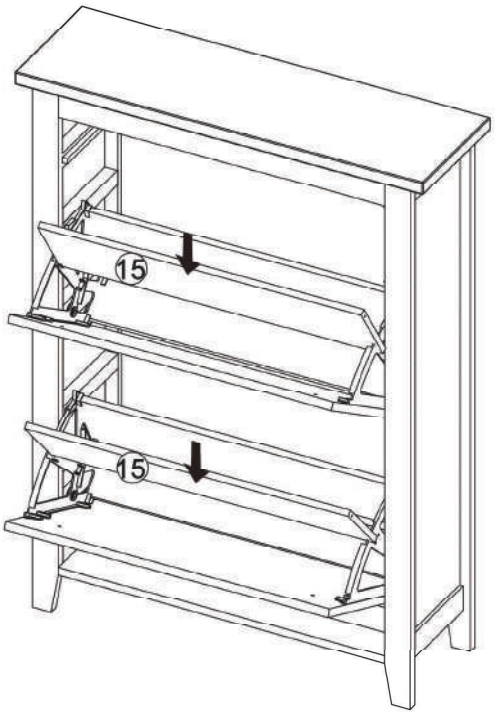
GARRUCHA DELUXE SHOE CABINET

STEP 5	PARTS REQUIRED
 Ensure the cam lock is lined up with the cam bolt when fixing.	6:TOP PANEL X1 A:CAM BOLT X 6 B:CAM LOCK X6 H:WALL FIXING X1

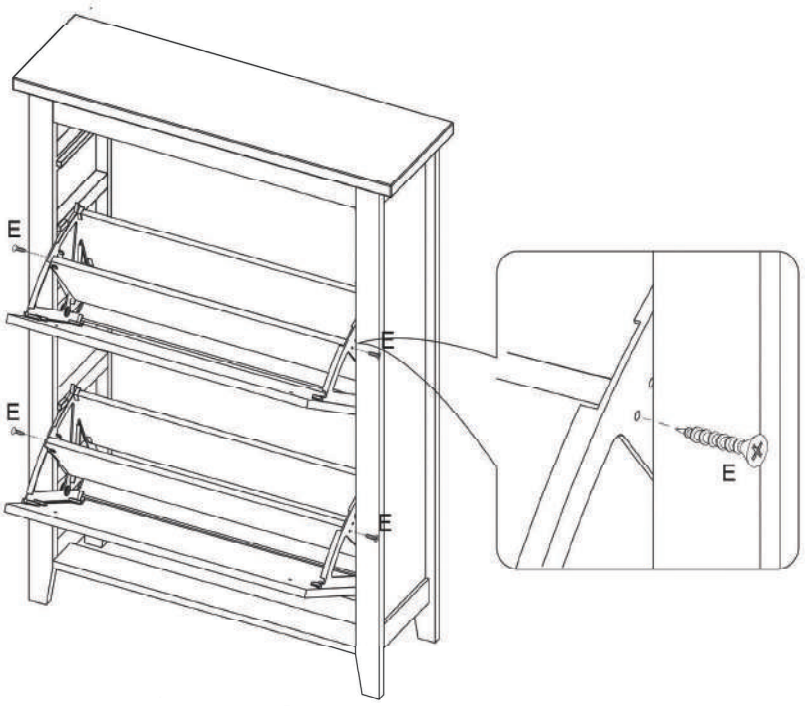
STEP 6	PARTS REQUIRED
	7:BACK PANEL X1 C:SCREW X 22

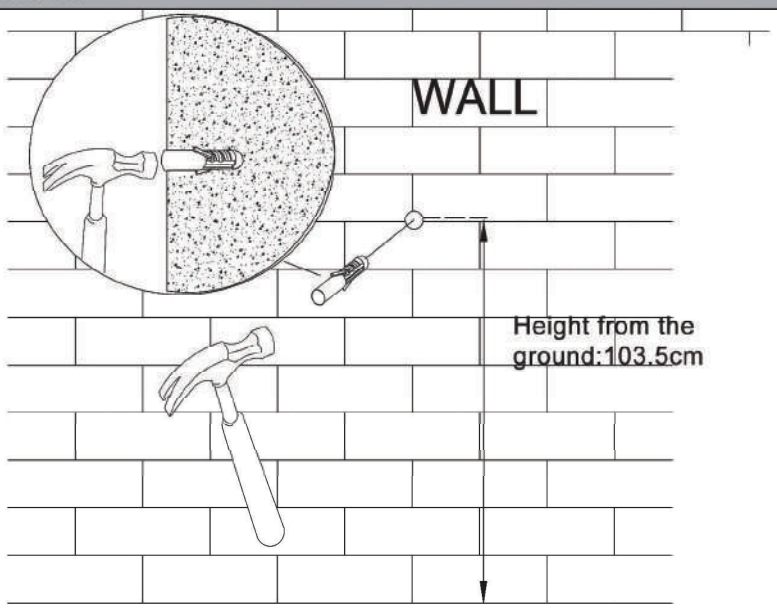
GARRUCHA DELUXE SHOE CABINET

STEP 7	PARTS REQUIRED
	G: SCREWS X 4 M: INNER GROMMET X 4

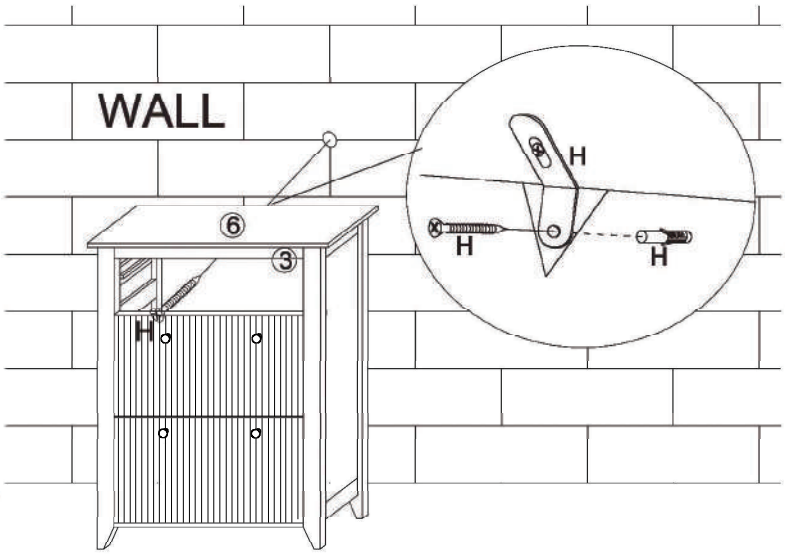
STEP 8	PARTS REQUIRED
	15: SHELF X 2

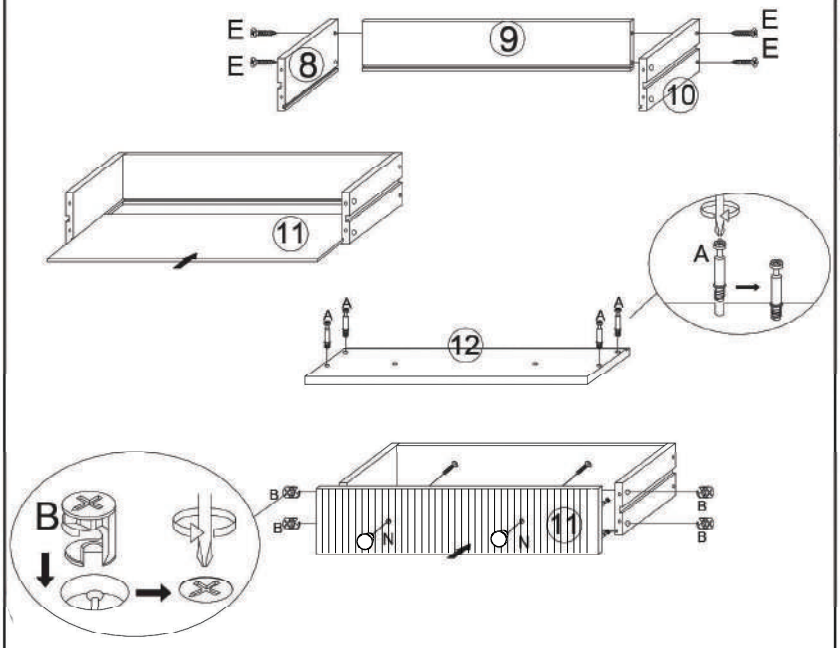
GARRUCHA DELUXE SHOE CABINET

STEP 9	PARTS REQUIRED
	E:SCREWS X 4

STEP 10	PARTS REQUIRED
 **Warning: Always ensure the area to be drilled is free from hidden electrical wires. water and gas pipes.**	H:WALL FIXING X1

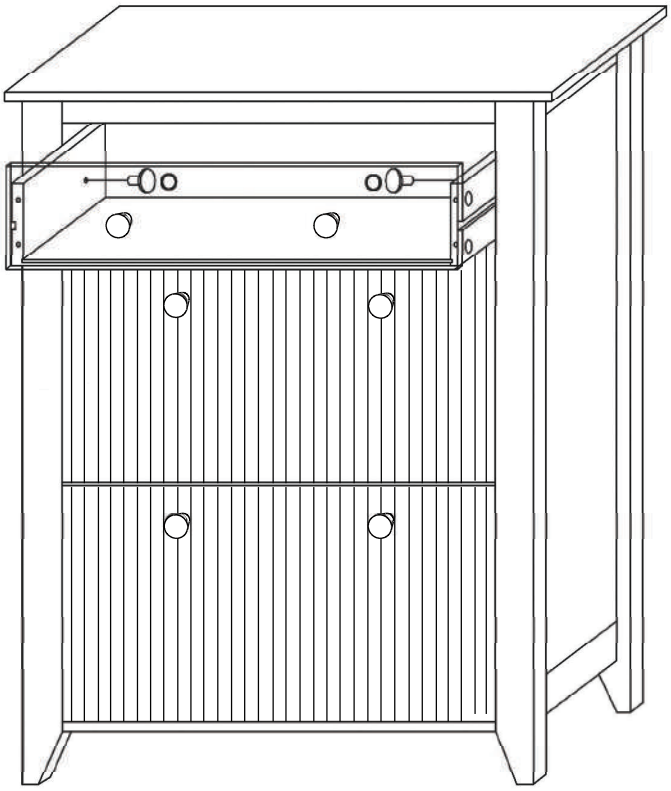
GARRUCHA DELUXE SHOE CABINET

STEP 11	PARTS REQUIRED
	H:WALL FIXING X1

STEP 12	PARTS REQUIRED
	8:DRAWER LEFT SIDE PANEL X1 9:DRAWER BACK X1 10:DRAWER RIGHT SIDE PANEL X1 11: DRAWER BOTTOM X1 12:DRAWER FRONT X1 A:CAM BOLT X 4 B:CAM LOCK X 4 E:SCREWS X 4 N: HANDLE X 2

Ensure the cam lock is lined up with the cam bolt when fixing.

GARRUCHA DELUXE SHOE CABINET

STEP 13	PARTS REQUIRED
	O:DRAWER STOPPER X2

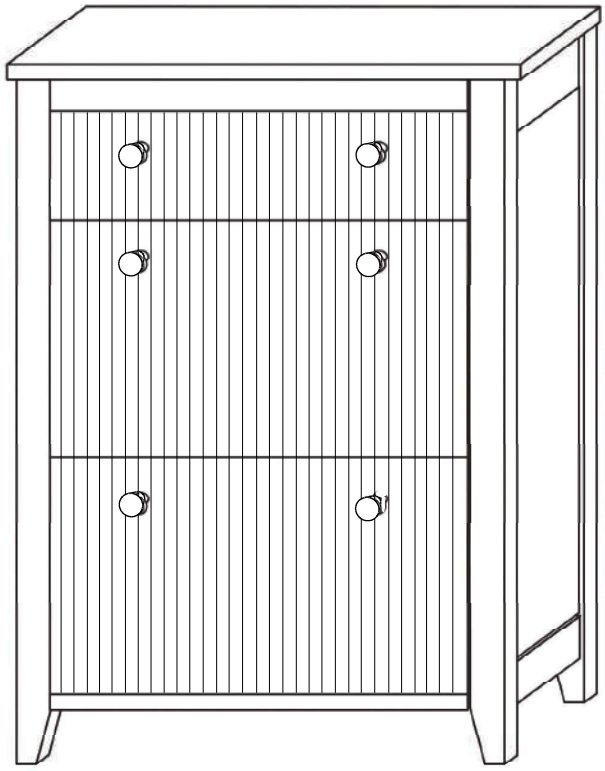
GARRUCHA DELUXE SHOE CABINET

Complete Assembly

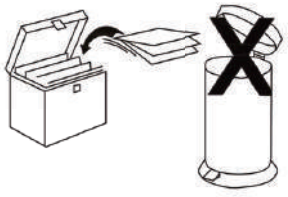
Your **SHOE CABINET** is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.



Keep instructions for future reference



Supplied by:
GFW The Furniture Warehouse
Waterside Distribution Centre
Waterside Business Park
Johnson Road
Eccleshill
Lancashire
BB3 3RT
www.gfwlimited.co.uk

Represented by:
Authorised Rep Compliance Ltd
71 Lower Baggot Street
Dublin
D02 P593
Ireland
www.arccompliance.com