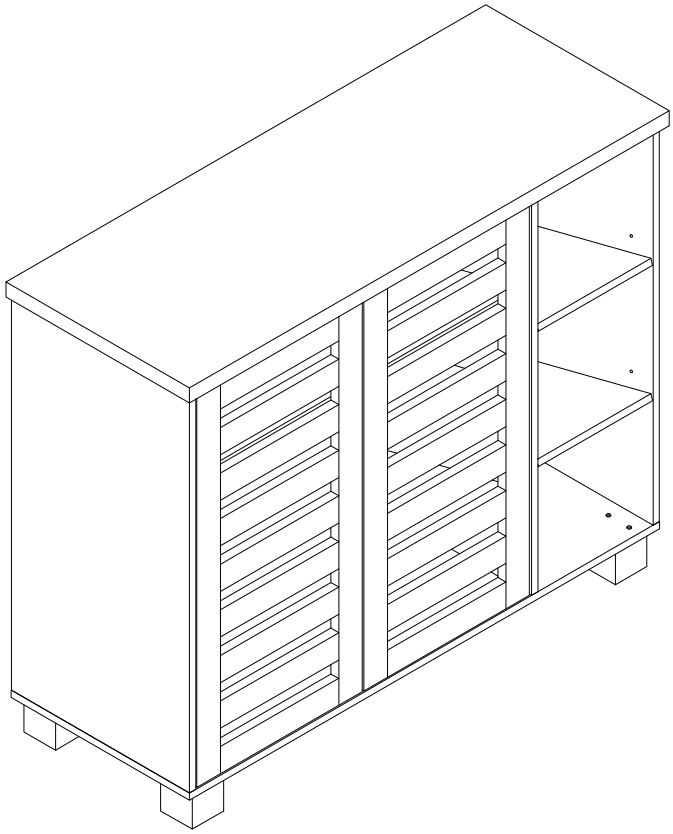
BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the BODIE SHOE CABINET.Please read the instructions carefully to ensure safe operation of the product.





Size:L91.5xW35xH75cm

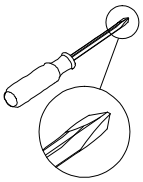
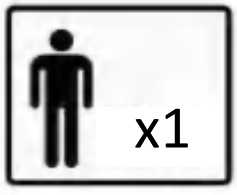
PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.


Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tool Required



50 Minutes
Set Up

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
Check the pack and make sure you have all the parts listed .
Ensure that this product is fully assembled as illustrated before use.
Check all screws or bolts are tightened and inspect regularly.
This product should only be used on firm, level ground.
Keep small parts out of reach of children.
Make sure the legs remain in contact with the ground.
Tools not included.

WARNINGS

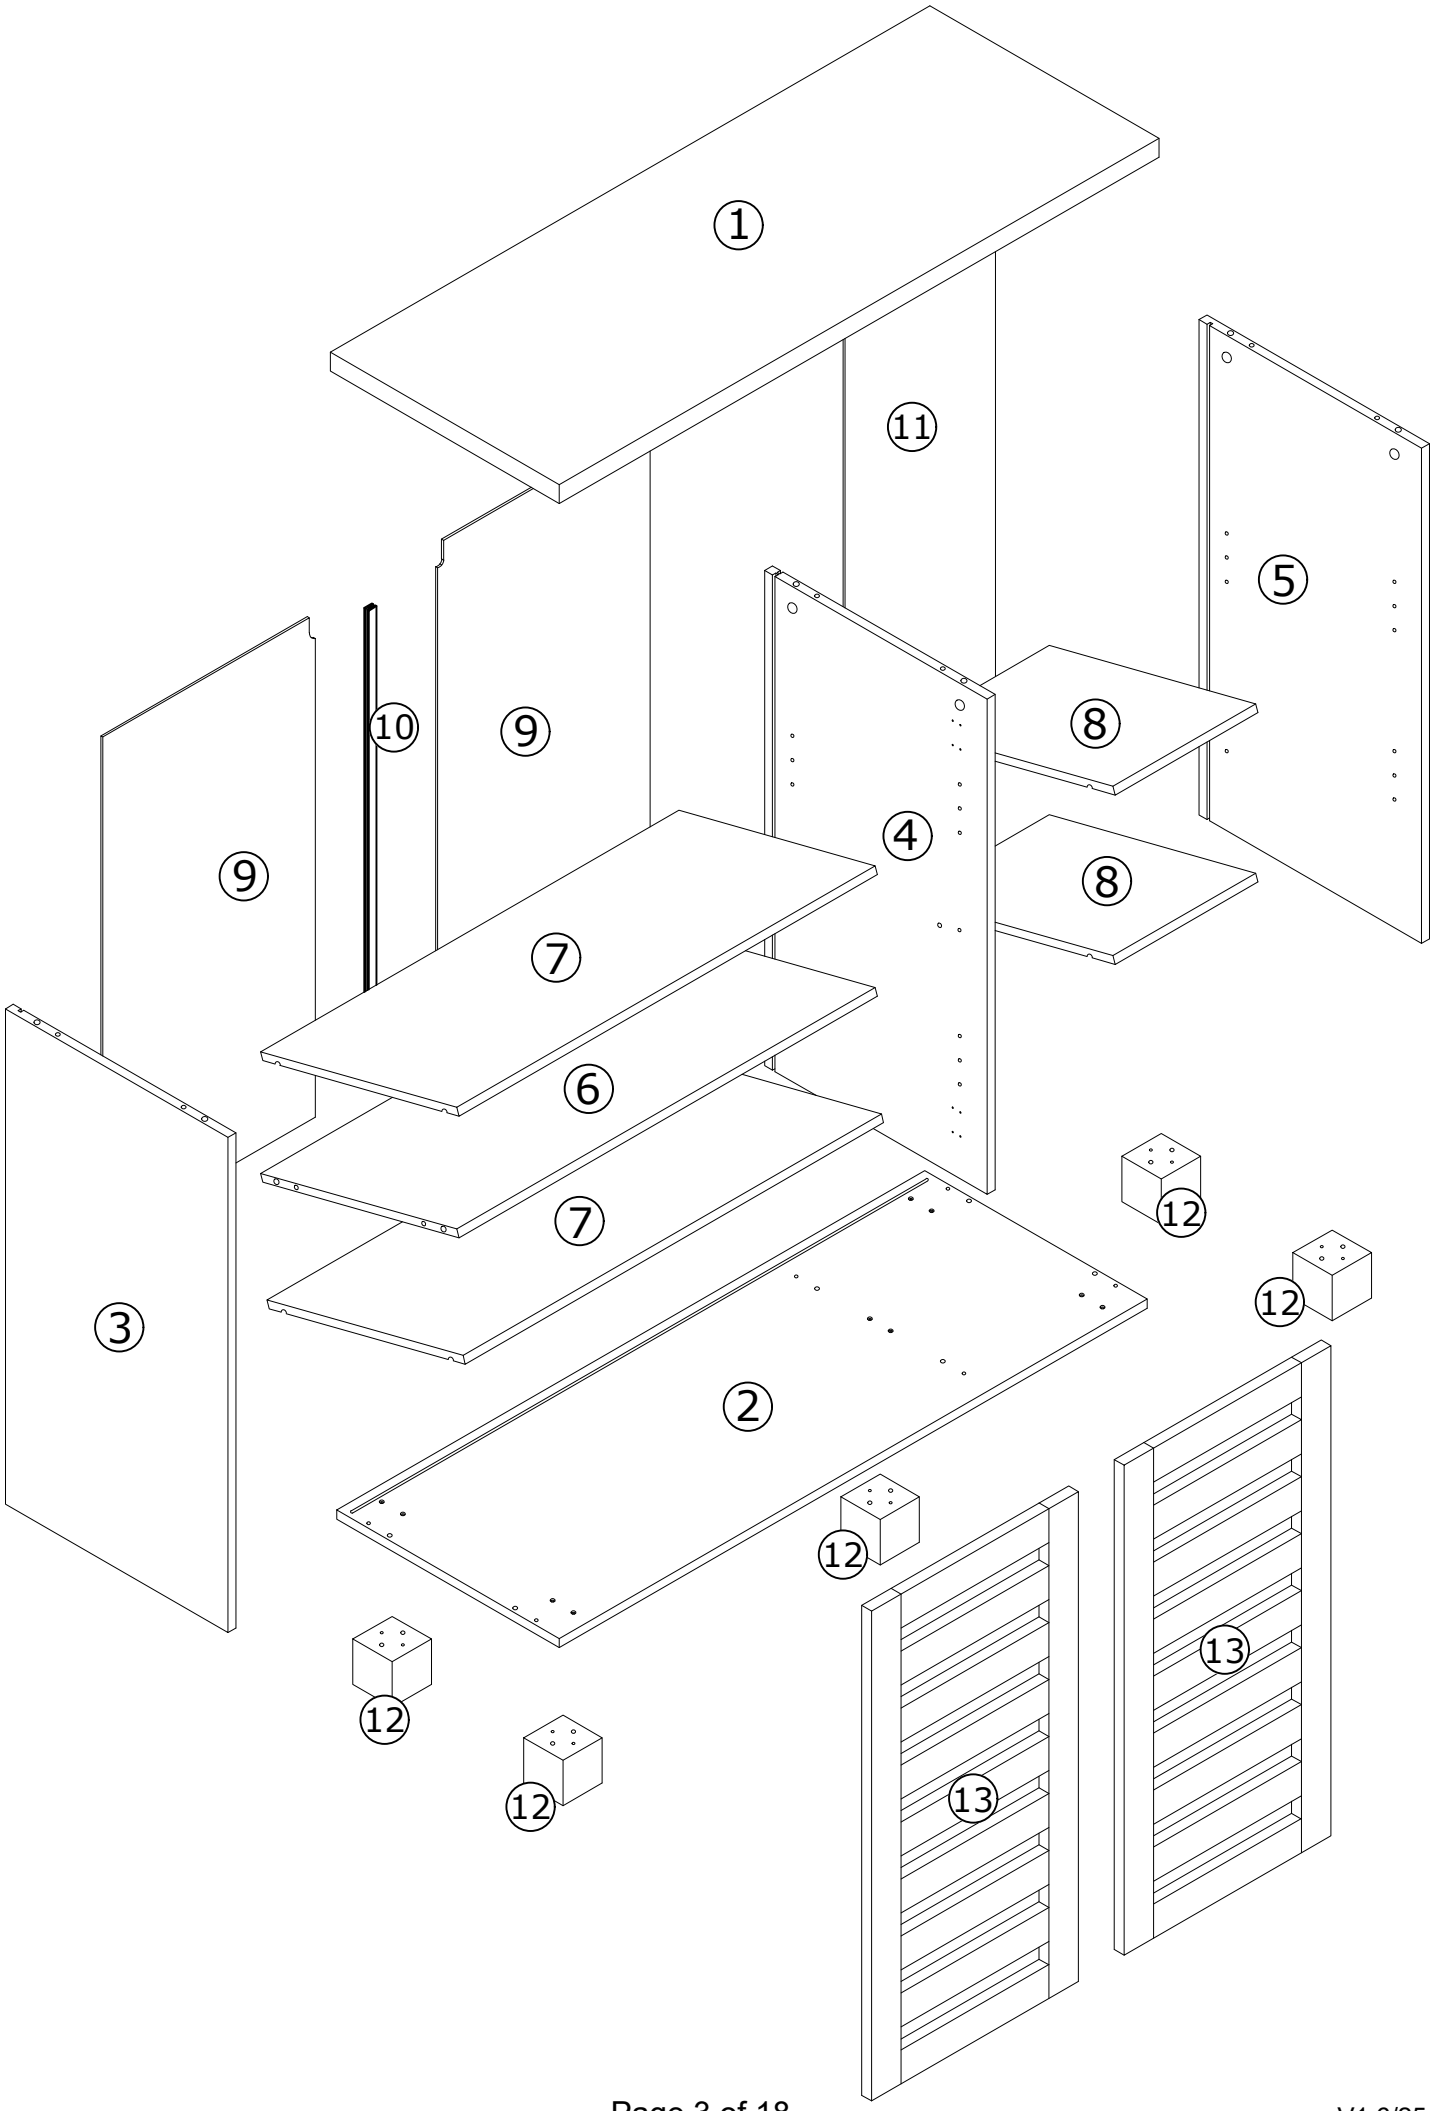
DO NOT use power tools to construct this product.
DO NOT over tighten screws or bolts.
DO NOT use this product if parts are missing, damaged or worn.
DO NOT stand on the product.
DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are use to prevet such items damaging your table top.
We recommend the use of wall safety bracket provided for safety reasons.
N.B. Wall fixings suitable for a solid wall are included although the wall plug provided may not be suitable for another type of walls such as hollow walls.
Fixings suitable for your wall types must be obtained separately.
If in doubt please consult a qualified trade person.
Always ensure the area to be drilled is free from hidden electrical wires,water and gas pipe.
It is essential that this unit is fixed to a wall with the fixing provided.

CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.

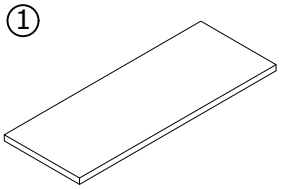
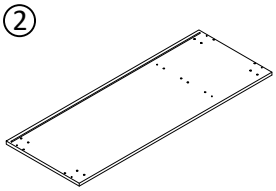
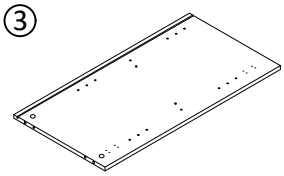
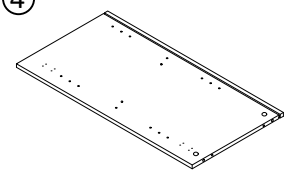
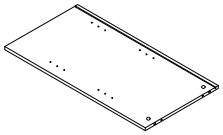
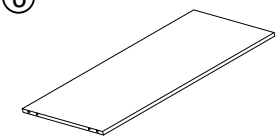
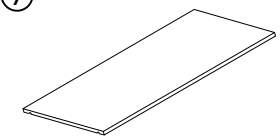
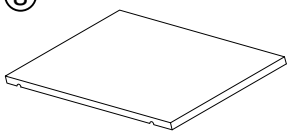


To clean wipe with a sponge and warm soapy water. Do not use solvent based cleanersor detergents as they can bleach or damage the product.

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS



BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

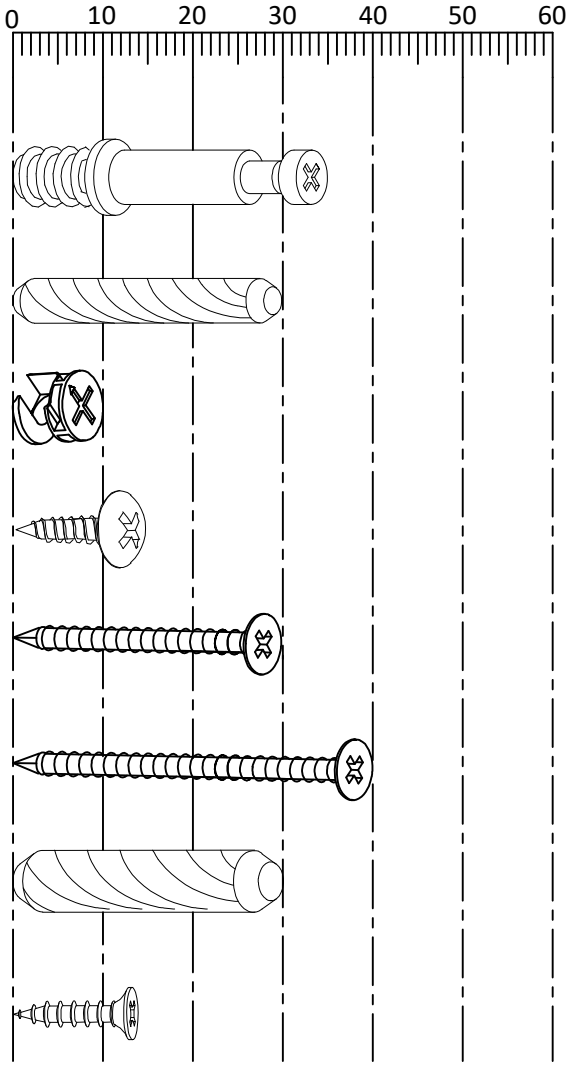
Parts

① 	② 	③ 	④ 
Description: Top panel Qty: 1PC	Description: Bottom panel Qty: 1PC	Description: Left Side panel Qty: 1PC	Description: Middle Vertical panel Qty: 1PC
⑤ 	⑥ 	⑦ 	⑧ 
Description: Right Side panel Qty: 1PC	Description: Middle shelf Qty: 1PC	Description:Adjustable shelf Qty: 2PCS	Description: Adjustable shelf Qty: 2PC
⑨ 	⑩	⑪ 	⑫ 
Description: Back panel Qty: 2PCS	Description:Backboard connecting strip Qty: 1PC	Description: Back panel Qty: 1PC	Description: Legs Qty: 5PCS
⑬ 			
Description: Door Qty: 2PCS			

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

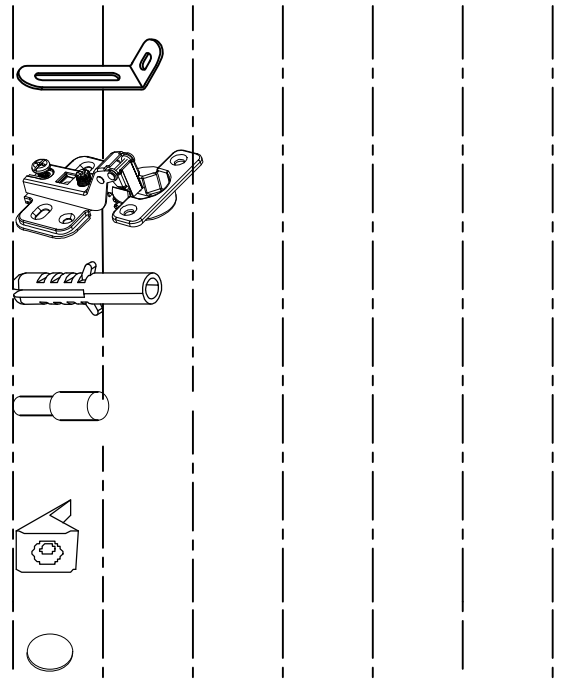
Fittings(to scale)

Ref	Dimensions	Qty
A	Cam bolt（6x35mm）	10
B	Wood dowel（6x30mm）	16
C	Cam（15x10mm）	10
E	Screw（4x12mm）	26
F	Screw（4x30mm）	16
H	Screw（4x40 mm）	1
K	Wood dowel（8x30mm）	10
M	Screw（3x14 mm）	10



(Not to scale)

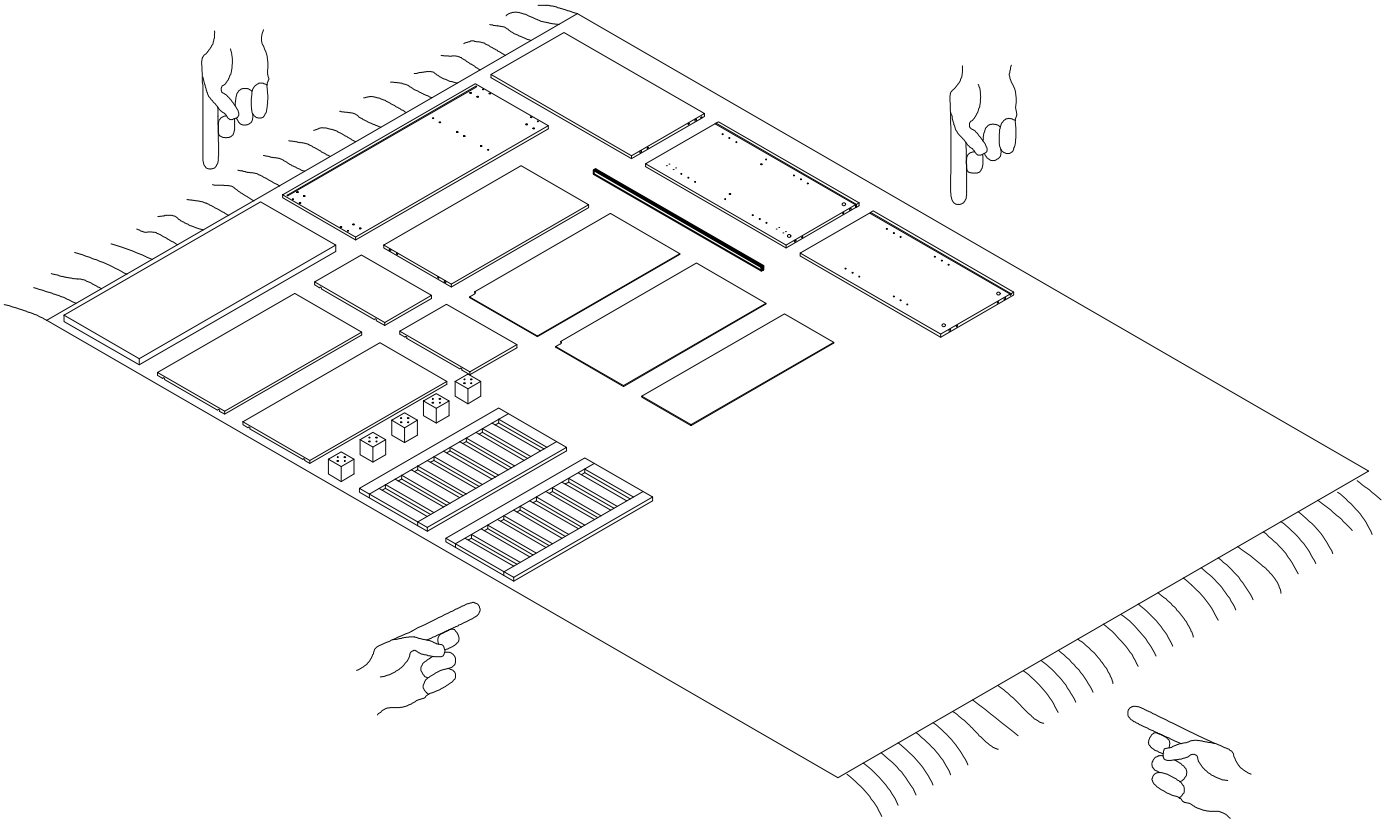
D	L-Mounting bracket	1
G	Hinge(L)	4
I	Wall plug	1
J	Shelf support pin	16
L	Backboard clip	10
N	Hole cover	20



BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

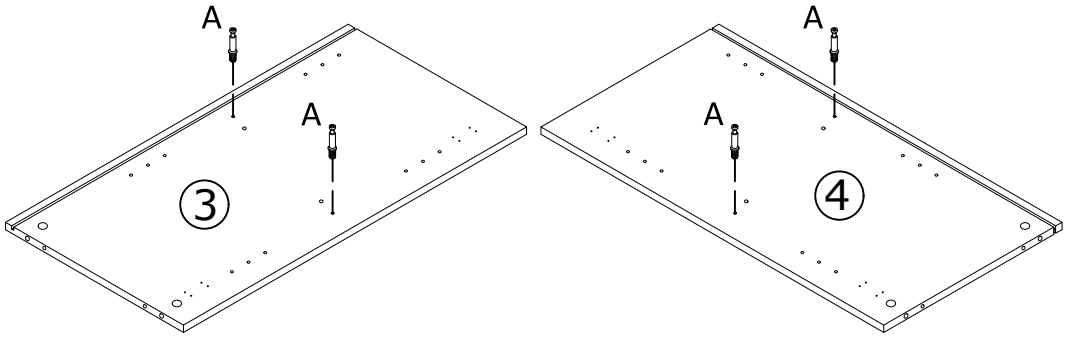
Layout Parts on Soft Surface

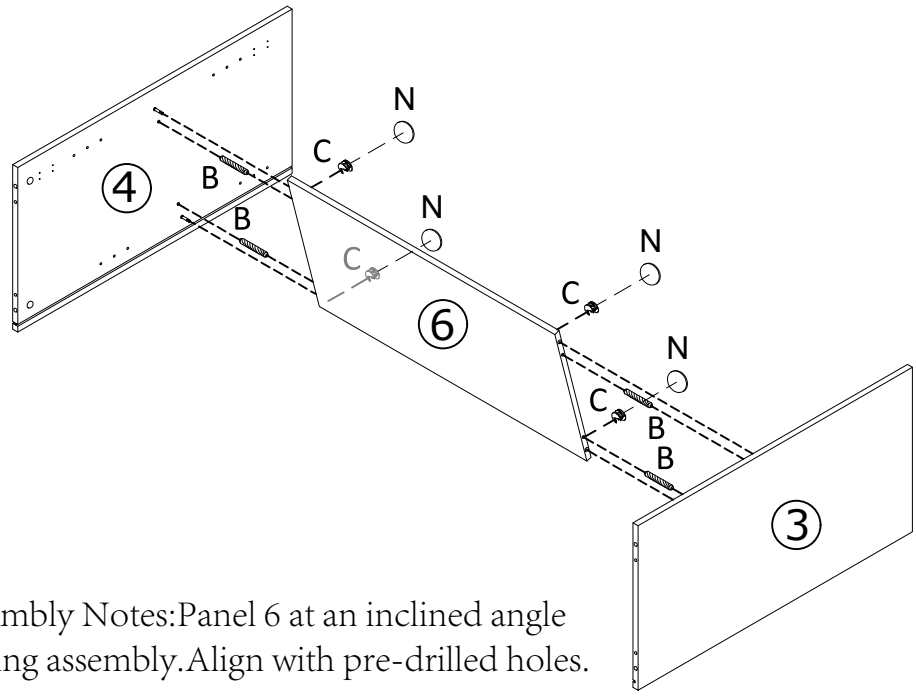
Lay out all parts on a soft surface i.e. Rug, Carpet or Packaging Carton



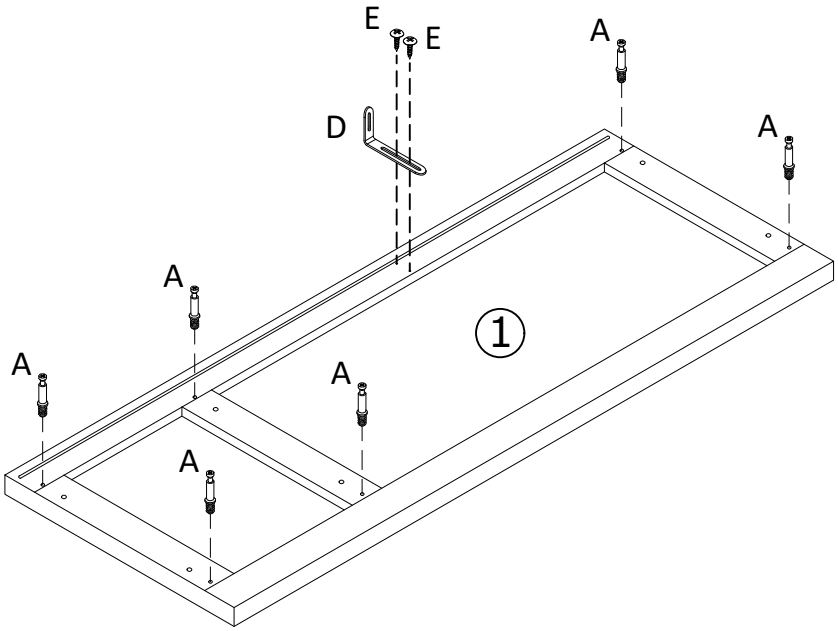
CAUTION:There are many small components used in the construction of this product.
Please keep these components away from young children whilst assembling this product.
If you keep the fittings in a bowl during assembly you will be less likely to lose them!

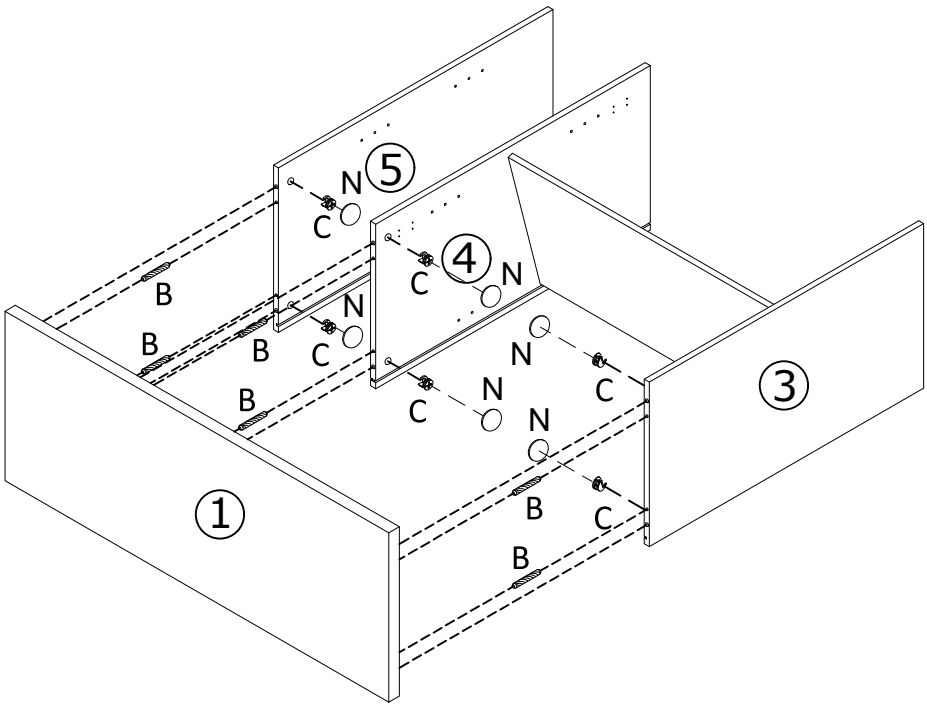
BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 1	Parts Required
	③ Left Side panel ×1 ④ Middle Vertical panel ×1 A Cam bolt（6x35mm）×4

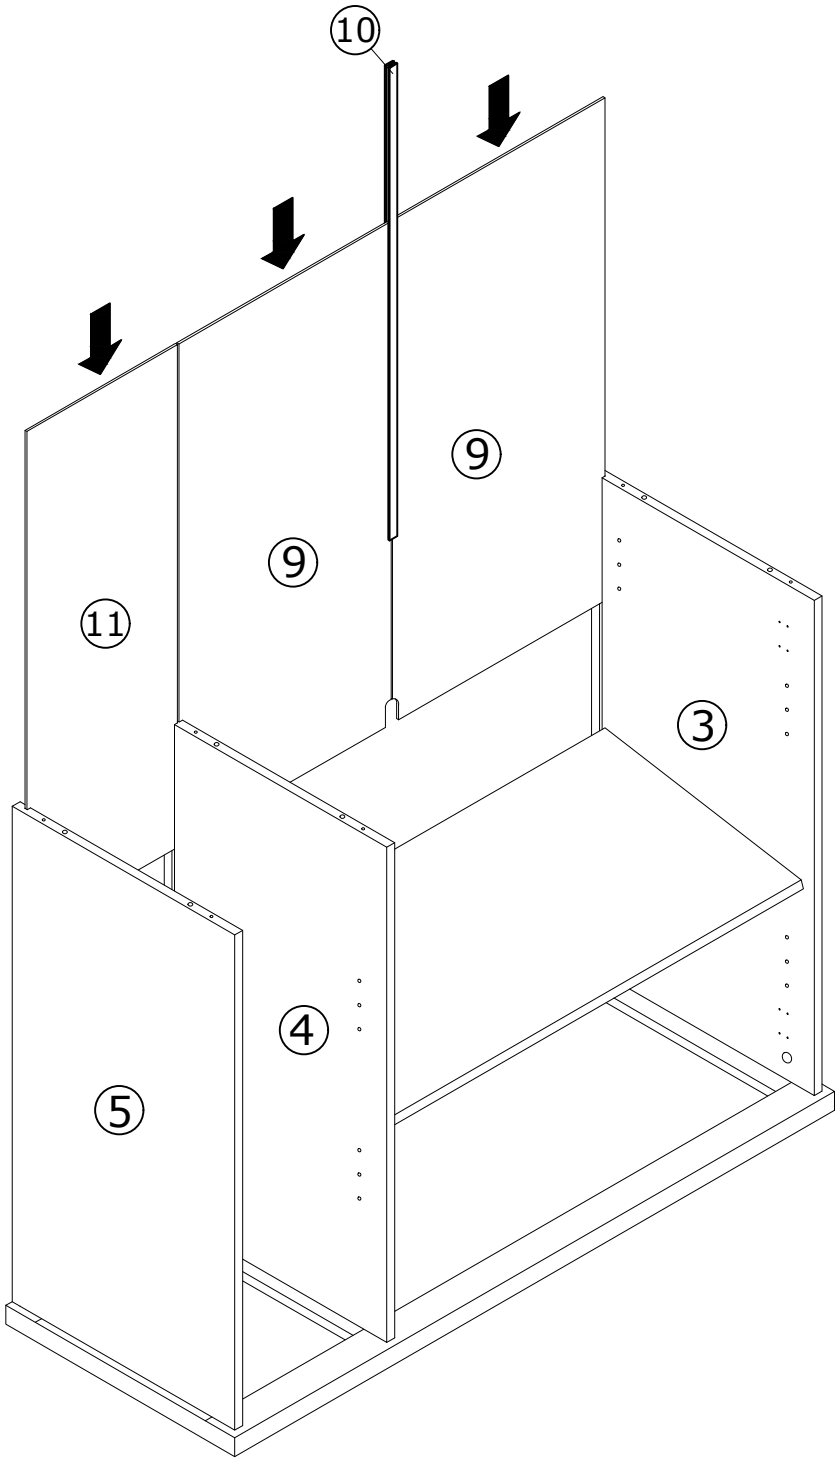
STEP 2	Parts Required
 Assembly Notes:Panel 6 at an inclined angle during assembly.Align with pre-drilled holes.	⑥ Middle shelf ×1 B Wood dowel（6x30mm）×4 C Cam（15x10mm）×4 N **Hole cover x4**

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

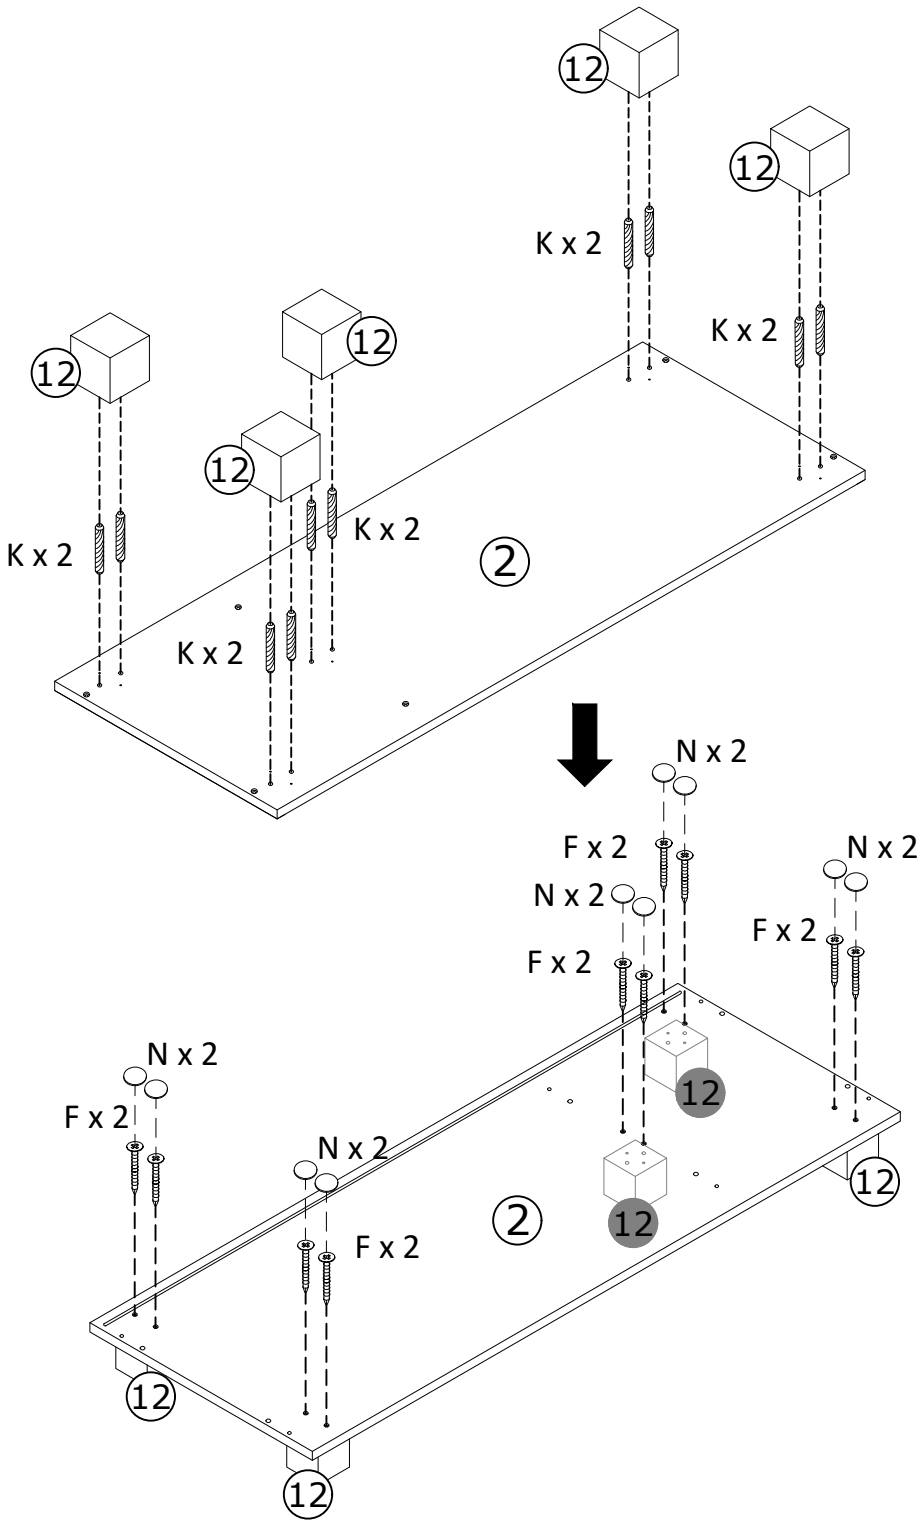
STEP 3	Parts Required
	① Top panel ×1 A Cam bolt（6x35mm）×6 D L-Mounting bracket ×1 E Screw（4x12mm）×2

STEP 4	Parts Required
	⑤ Right Side panel ×1 B Wood dowel（6x30mm）×6 C Cam（15x10mm）×6 N **Hole cover x6**

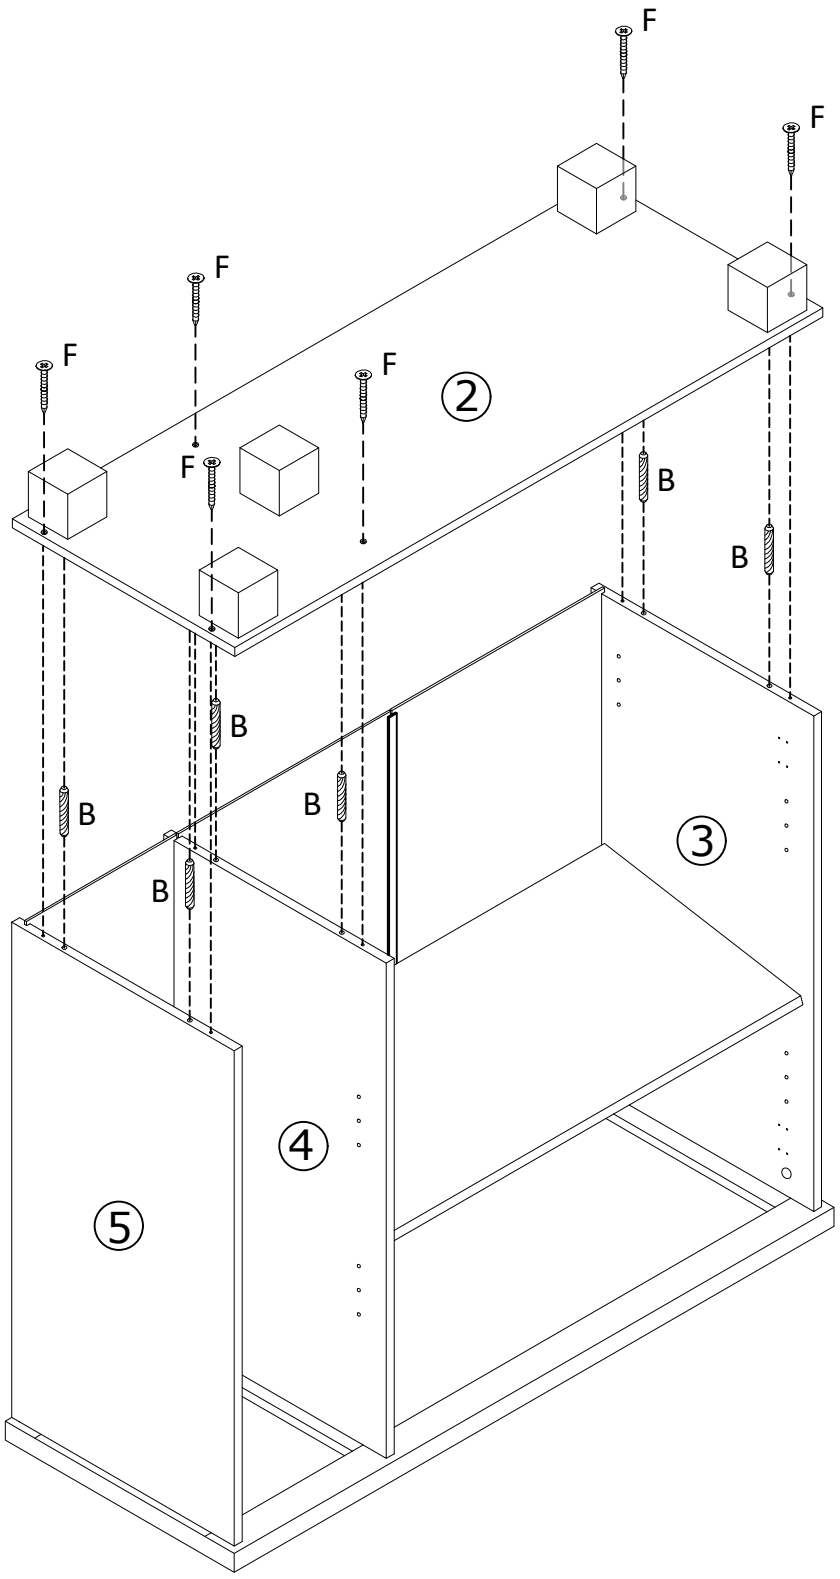
BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 5	Parts Required
	⑨ Back panel ×2 ⑩ Backboard connecting strip ×1 ⑪ Back panel ×1

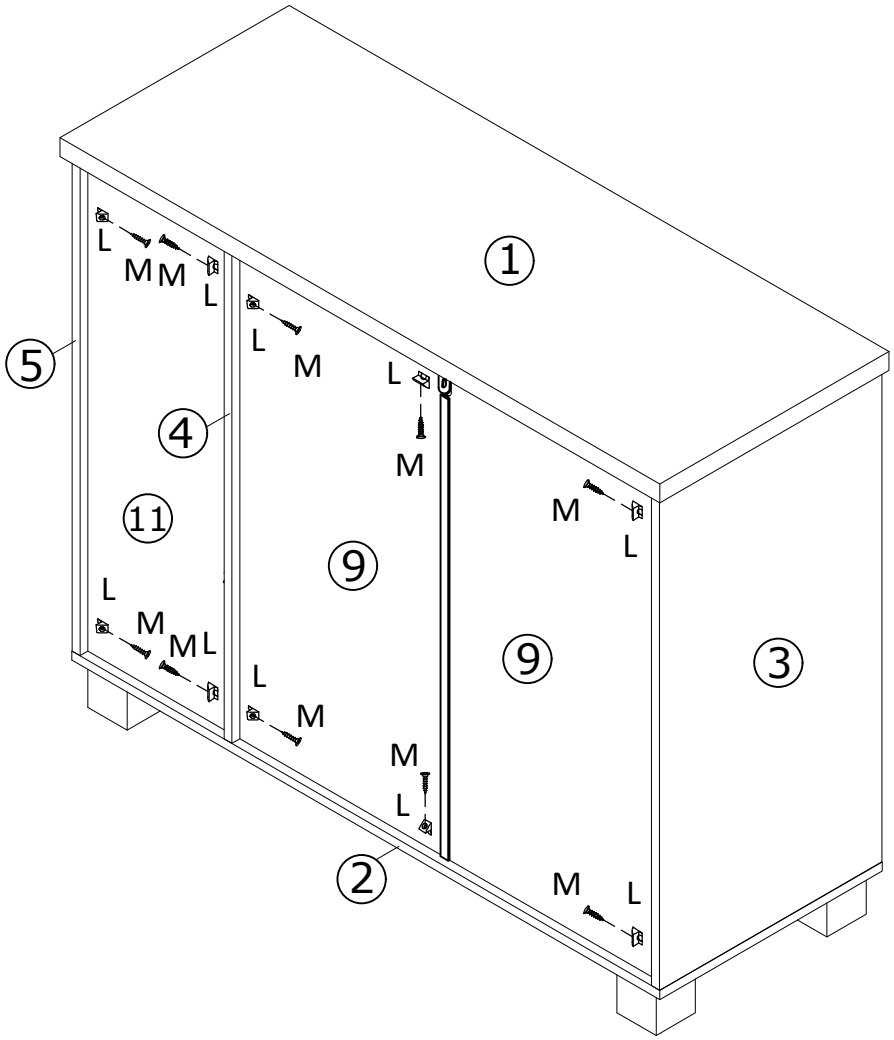
BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 6	Parts Required
	② Bottom panel ×1 ⑫ Legs ×5 F Screw（4x30mm）×10 K Wood dowel（8x30mm）×10 N Hole cover x10

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

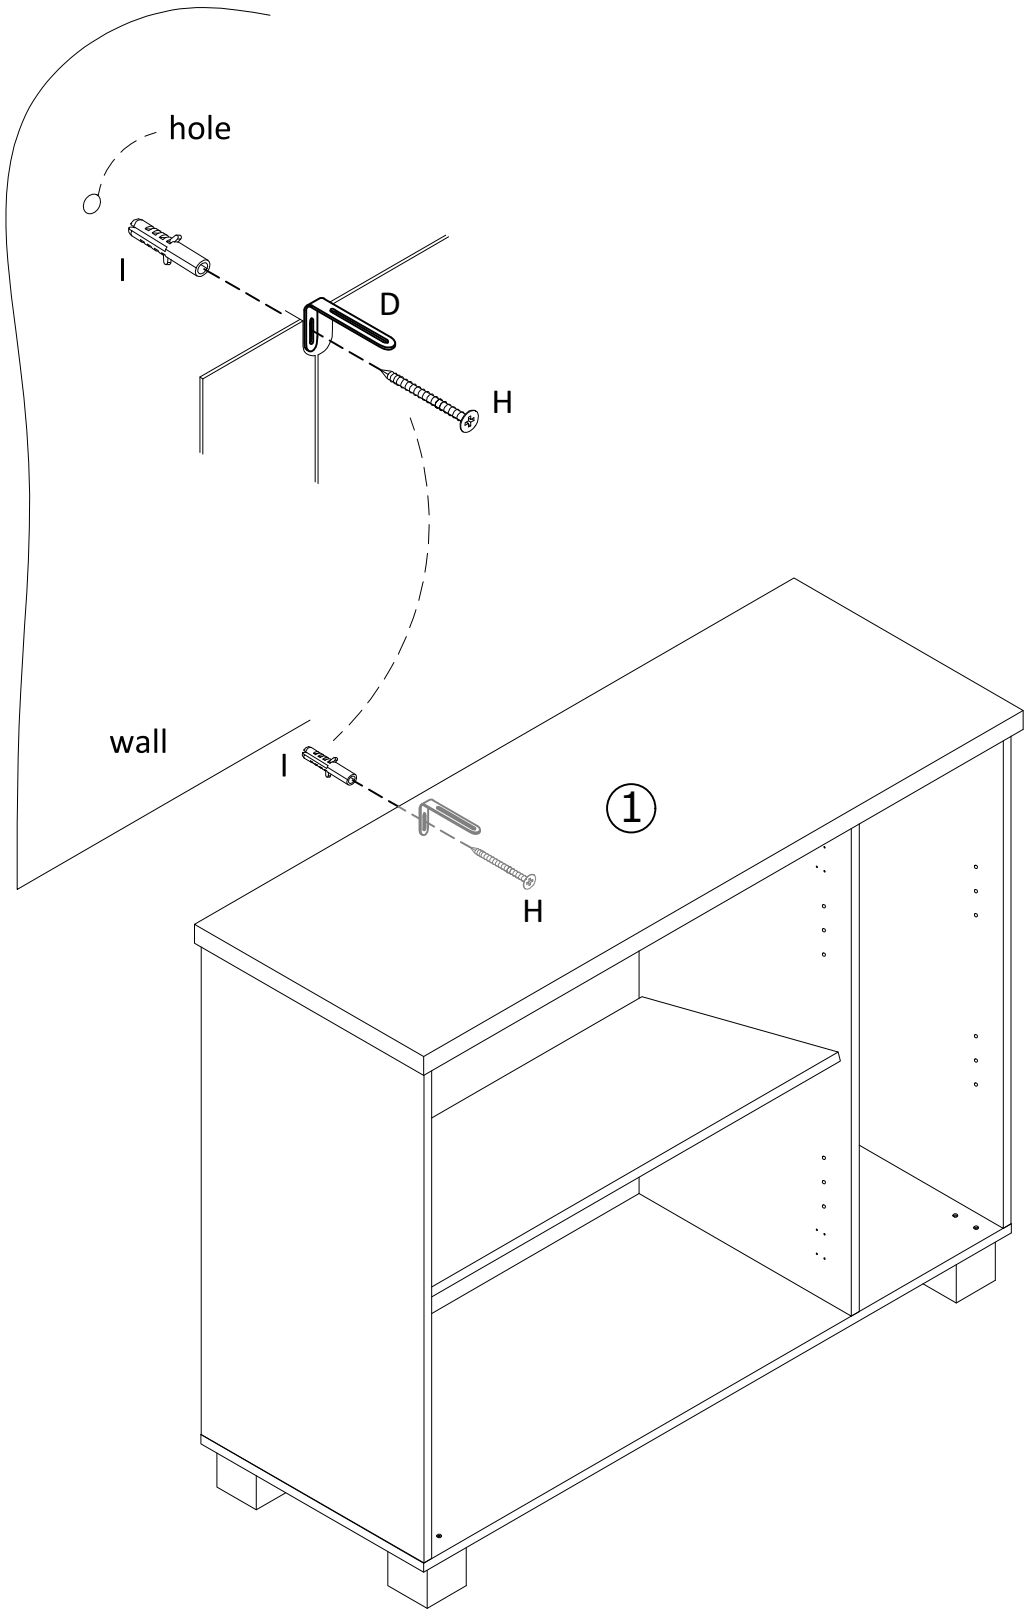
STEP 7	Parts Required
	B Wood dowel（6x30mm）×6 F Screw（4x30mm）×6

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 8	Parts Required
	L Backboard clip ×10 M Screw（3x14 mm）×10

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 9	Parts Required



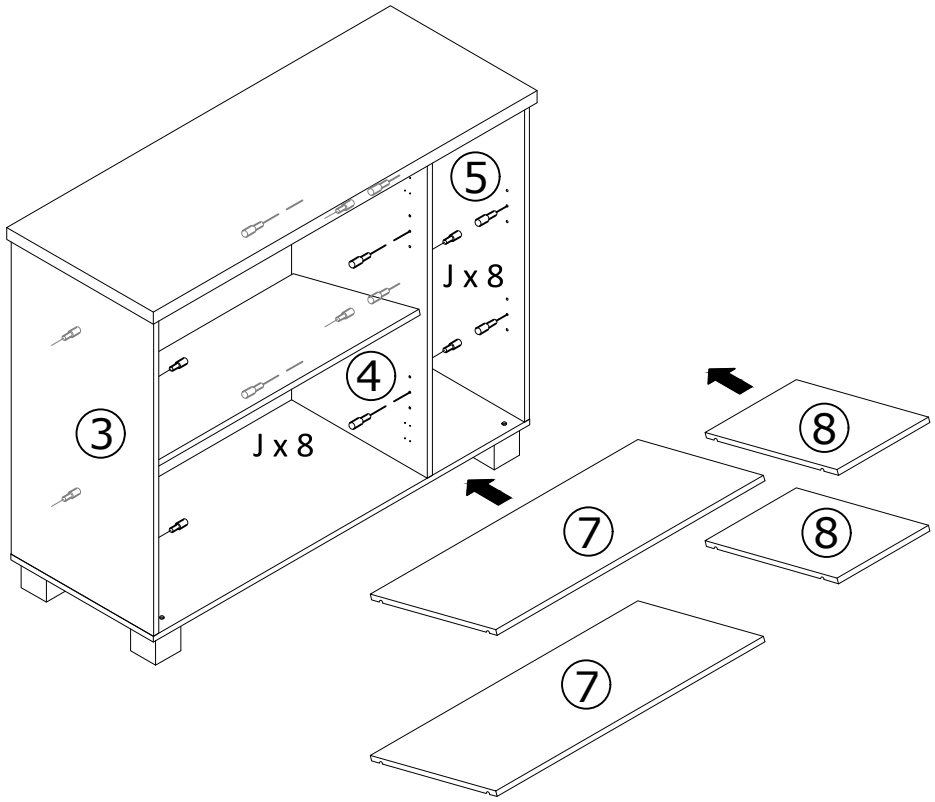
H Screw（4x40mm）×1

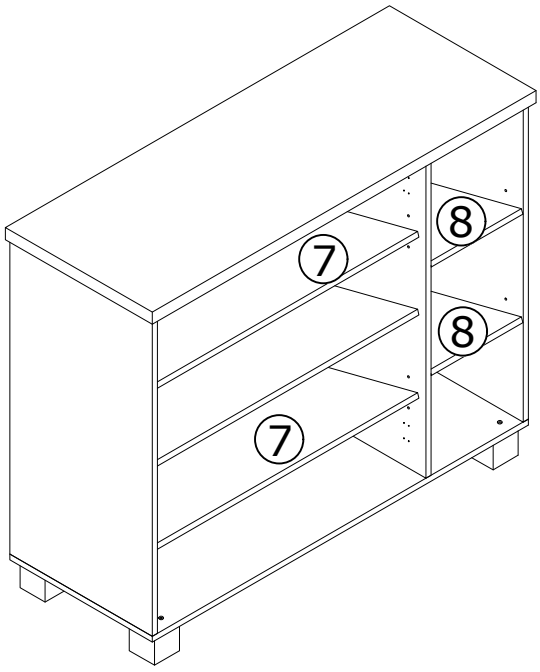
I Wall plug ×1

NOTE:The wall fixing, plug Supplied with this product is suitable for solid and brick walls.
For hollow and stud type walls fixing devices suitable for those type of walls must be obtained separately
Please ensure the fixing is safe and secure before use and that the area to be drilled is free from hidden wires.water and gas pipes.

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 10	Parts Required





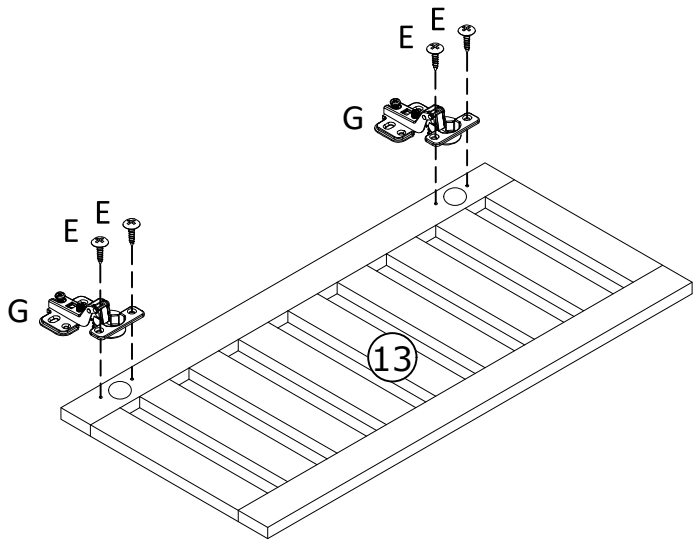
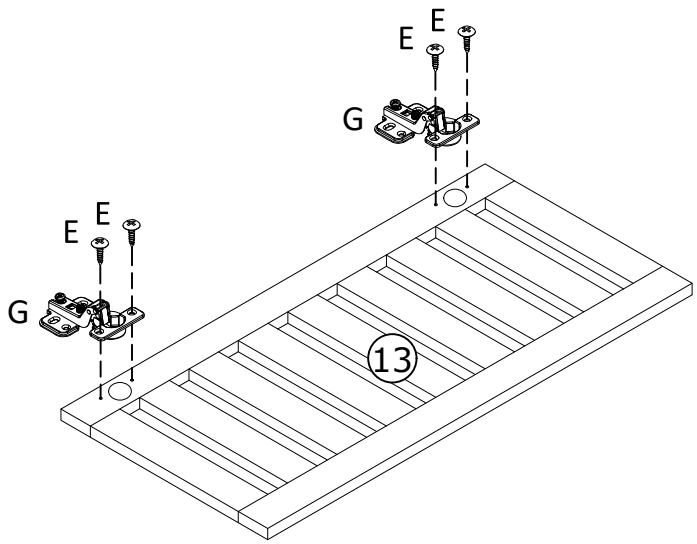
Note:The middle shelf is fixed, while the upper and lower shelves are adjustable. The three shelves need to be installed at an angle inside the cabinet.

⑦ Adjustable shelf x2

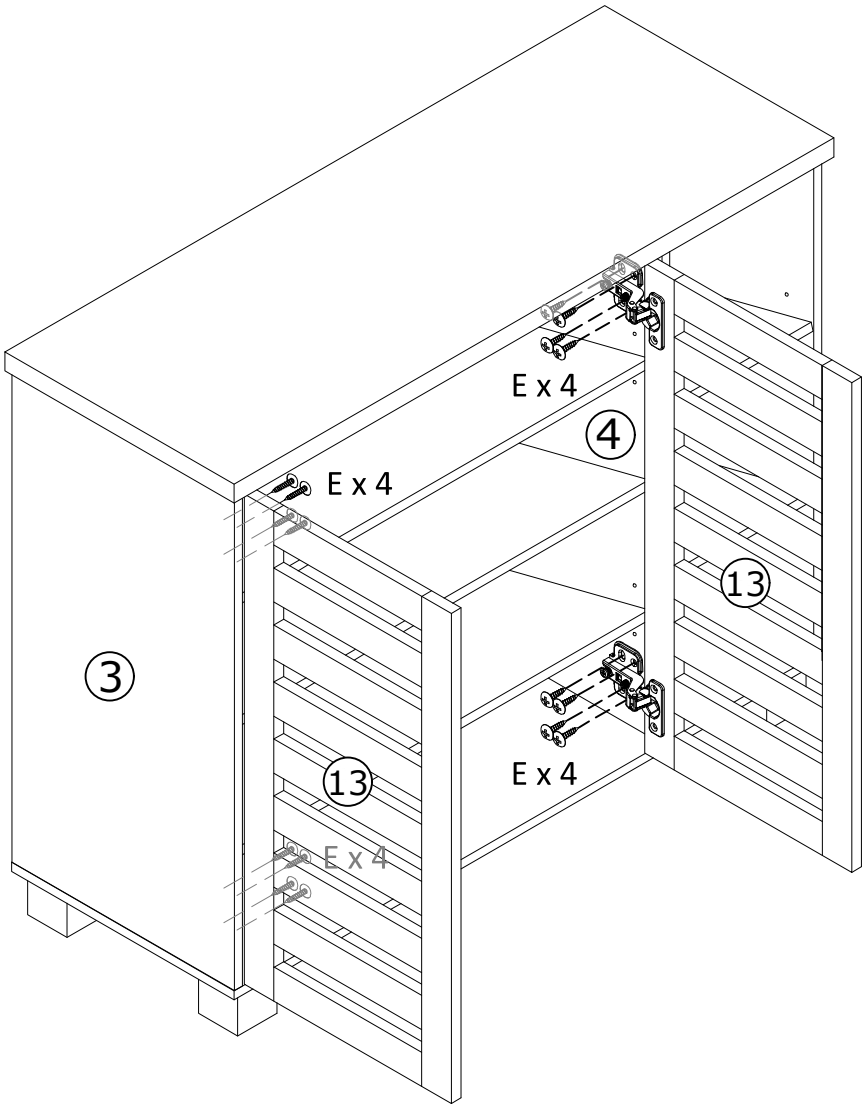
⑧ Adjustable short shelf ×2

J Shelf support pin ×16

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

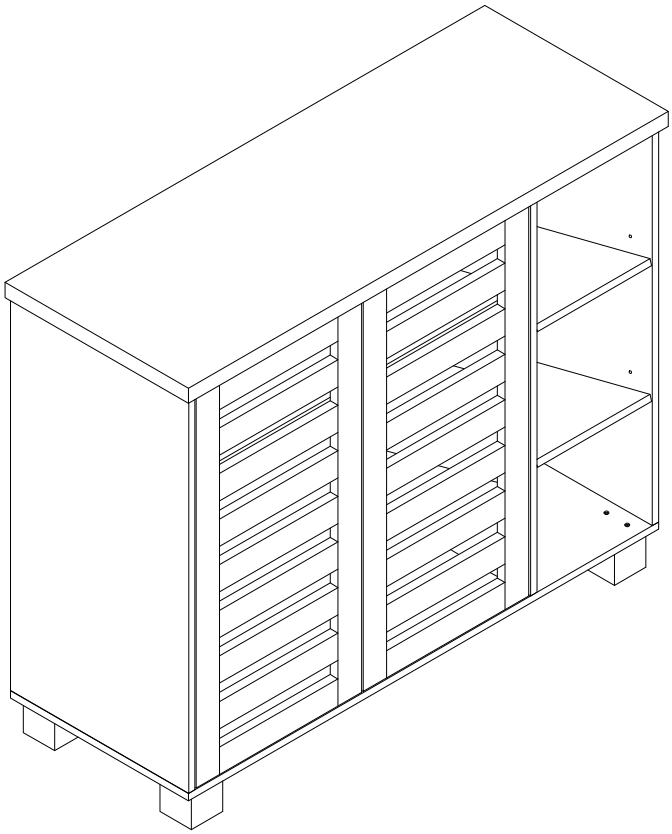
STEP 11	Parts Required
 	⑬ Door panel ×2 G Hinge ×4 E Screw（4x12mm）×8

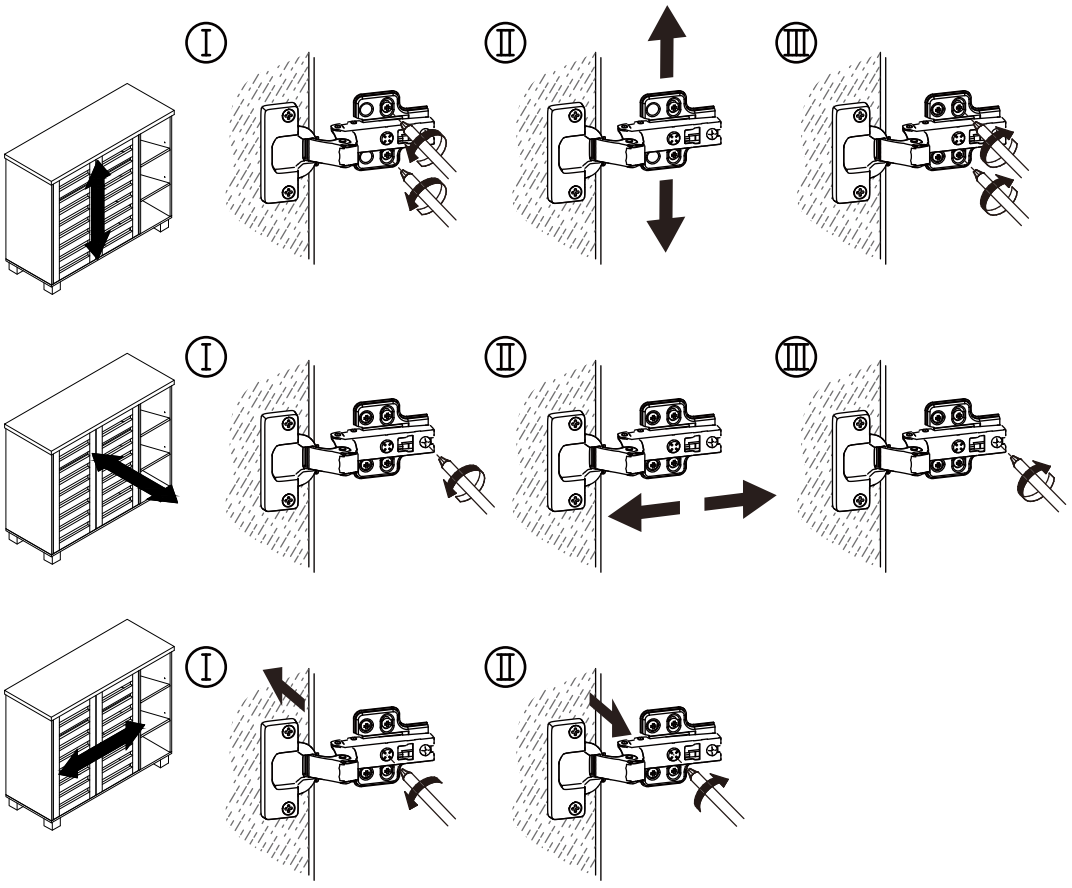
BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 12	Parts Required
	E Screw（4x12mm）×16

BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 13	Parts Required

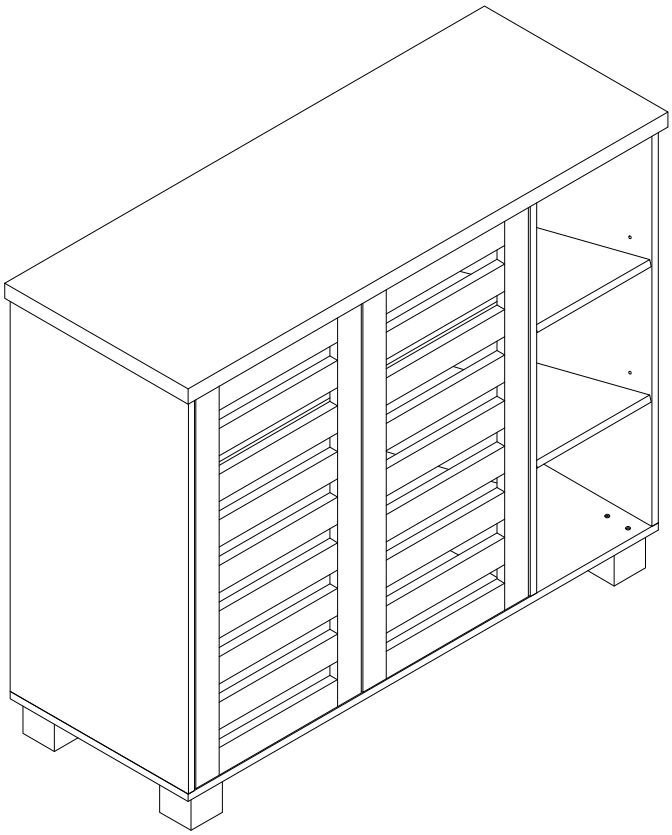




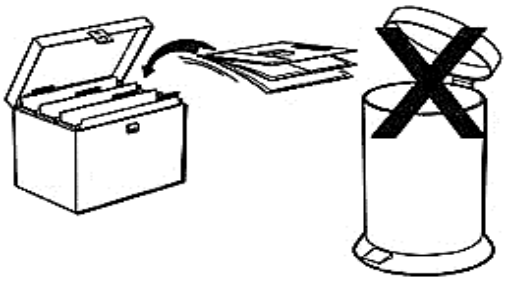
BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

Complete Assembly

Your BODIE SHOE CABINET is now completely assembled.
Periodically check that the components are in the correct position and free from damage.
Also make sure the connectors are tight and secure.



Keep instructions for future reference.



Supplied by : GFW THE FURNITURE WAREHOUSE
Waterside Distribution Centre
Waterside Business Park
Johnson Road
Lancashire
BB3 3RT
www.gfwlimited.co.uk

Represented by:
Authorised Rep Compliance Ltd 71
Lower Baggot Street
Dublin
D02 P593
Ireland
www.arccompliance.com

V1 4/25