



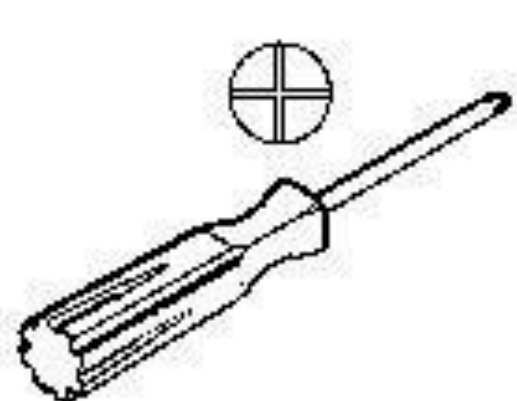


ASSEMBLY INSTRUCTIONS

KITCHEN WALL UNIT 1000MM


MODEL W1000

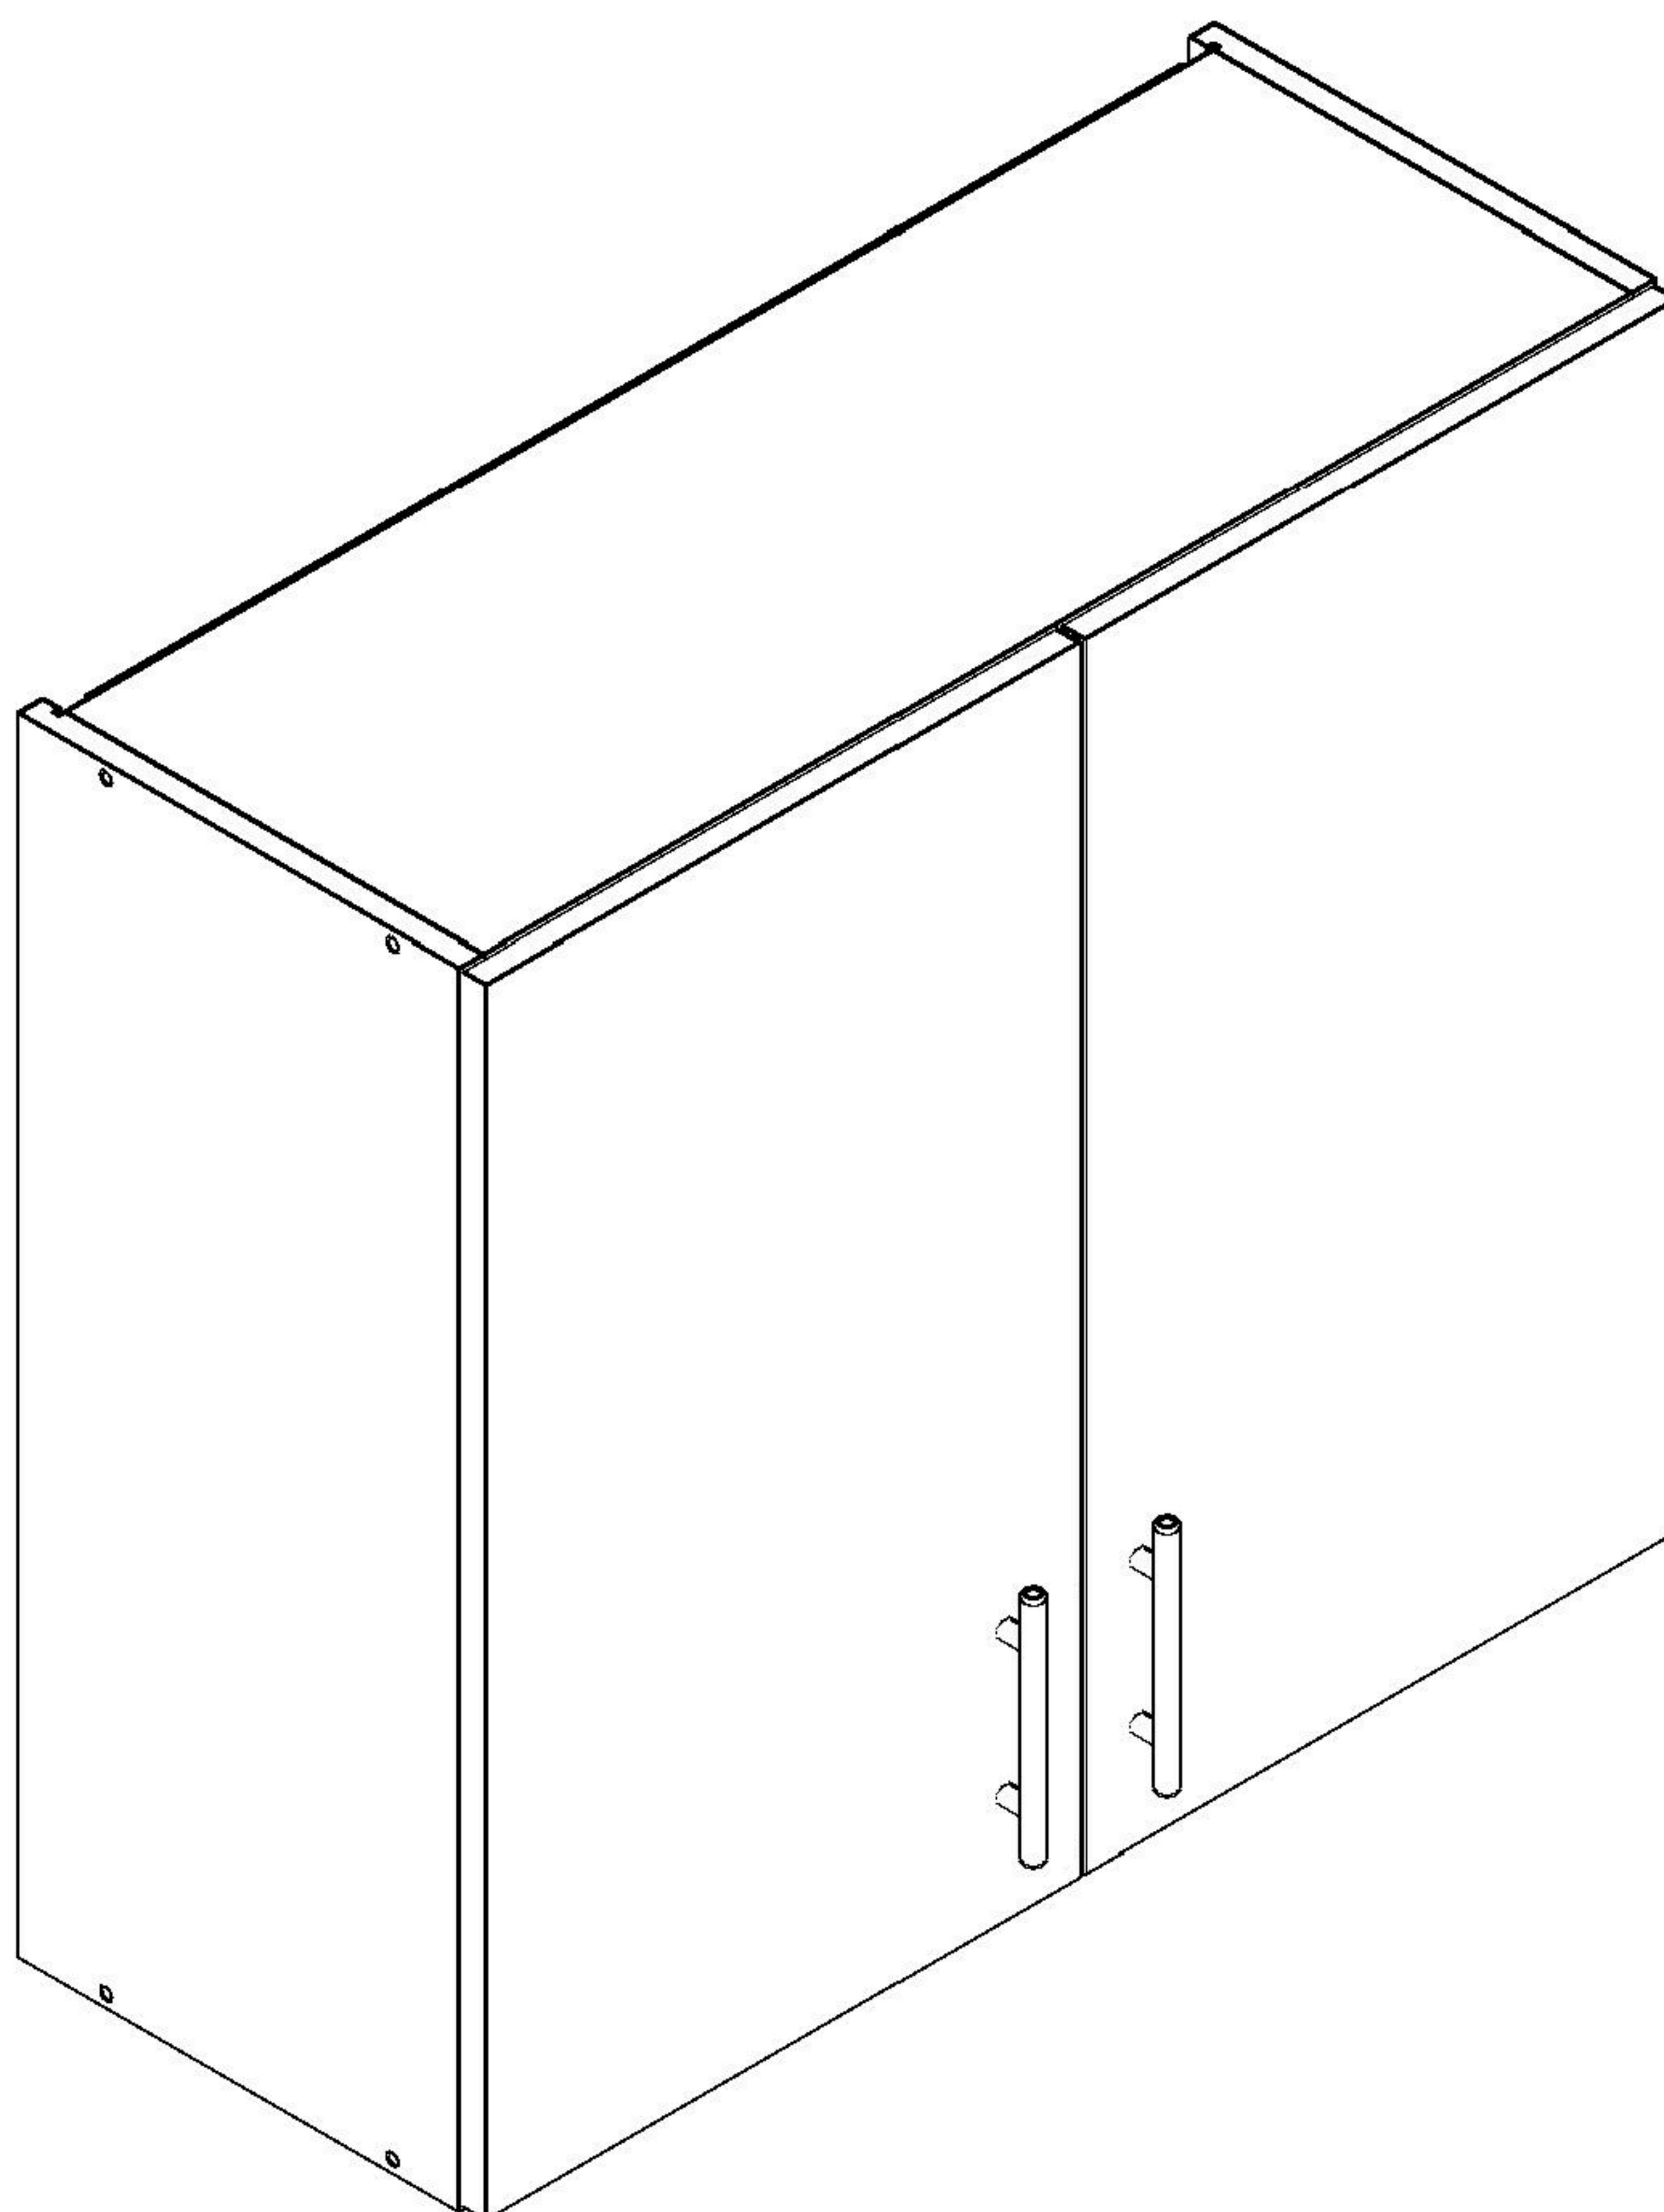


Cross-head
screwdriver

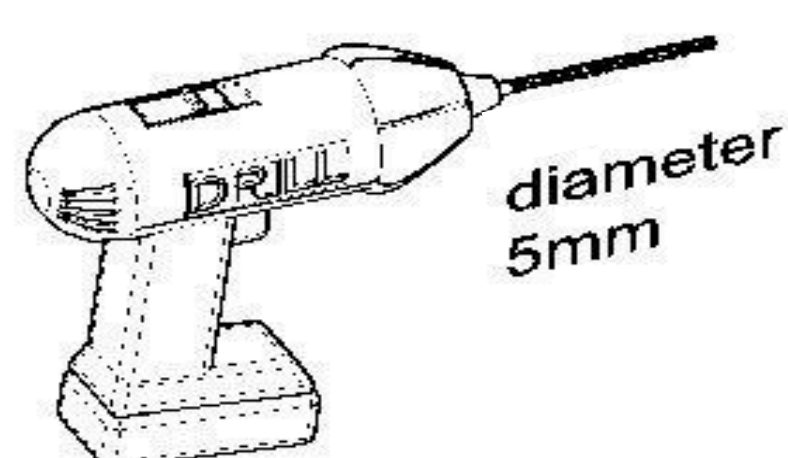

Electric
drill

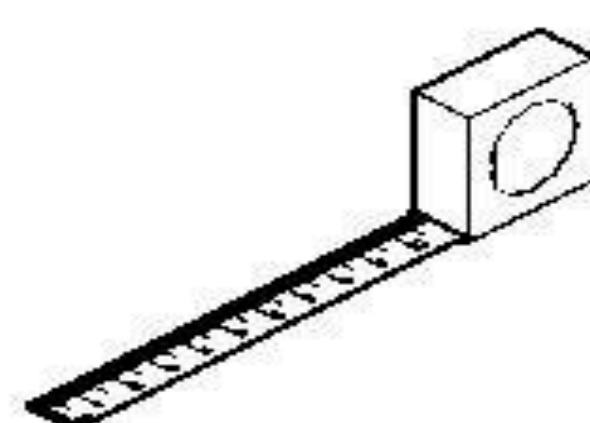

Rule

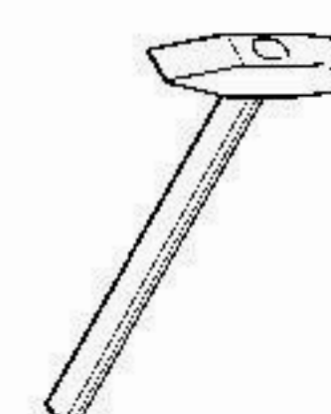

Hammer

**TOOLS
REQUIRED**

Important: Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, please contact us
info@jdfurniture.uk (quoting your order number) or call on: +448000025346

COMPONENTS - PANELS

Please check you have all the panels listed below


1

x1

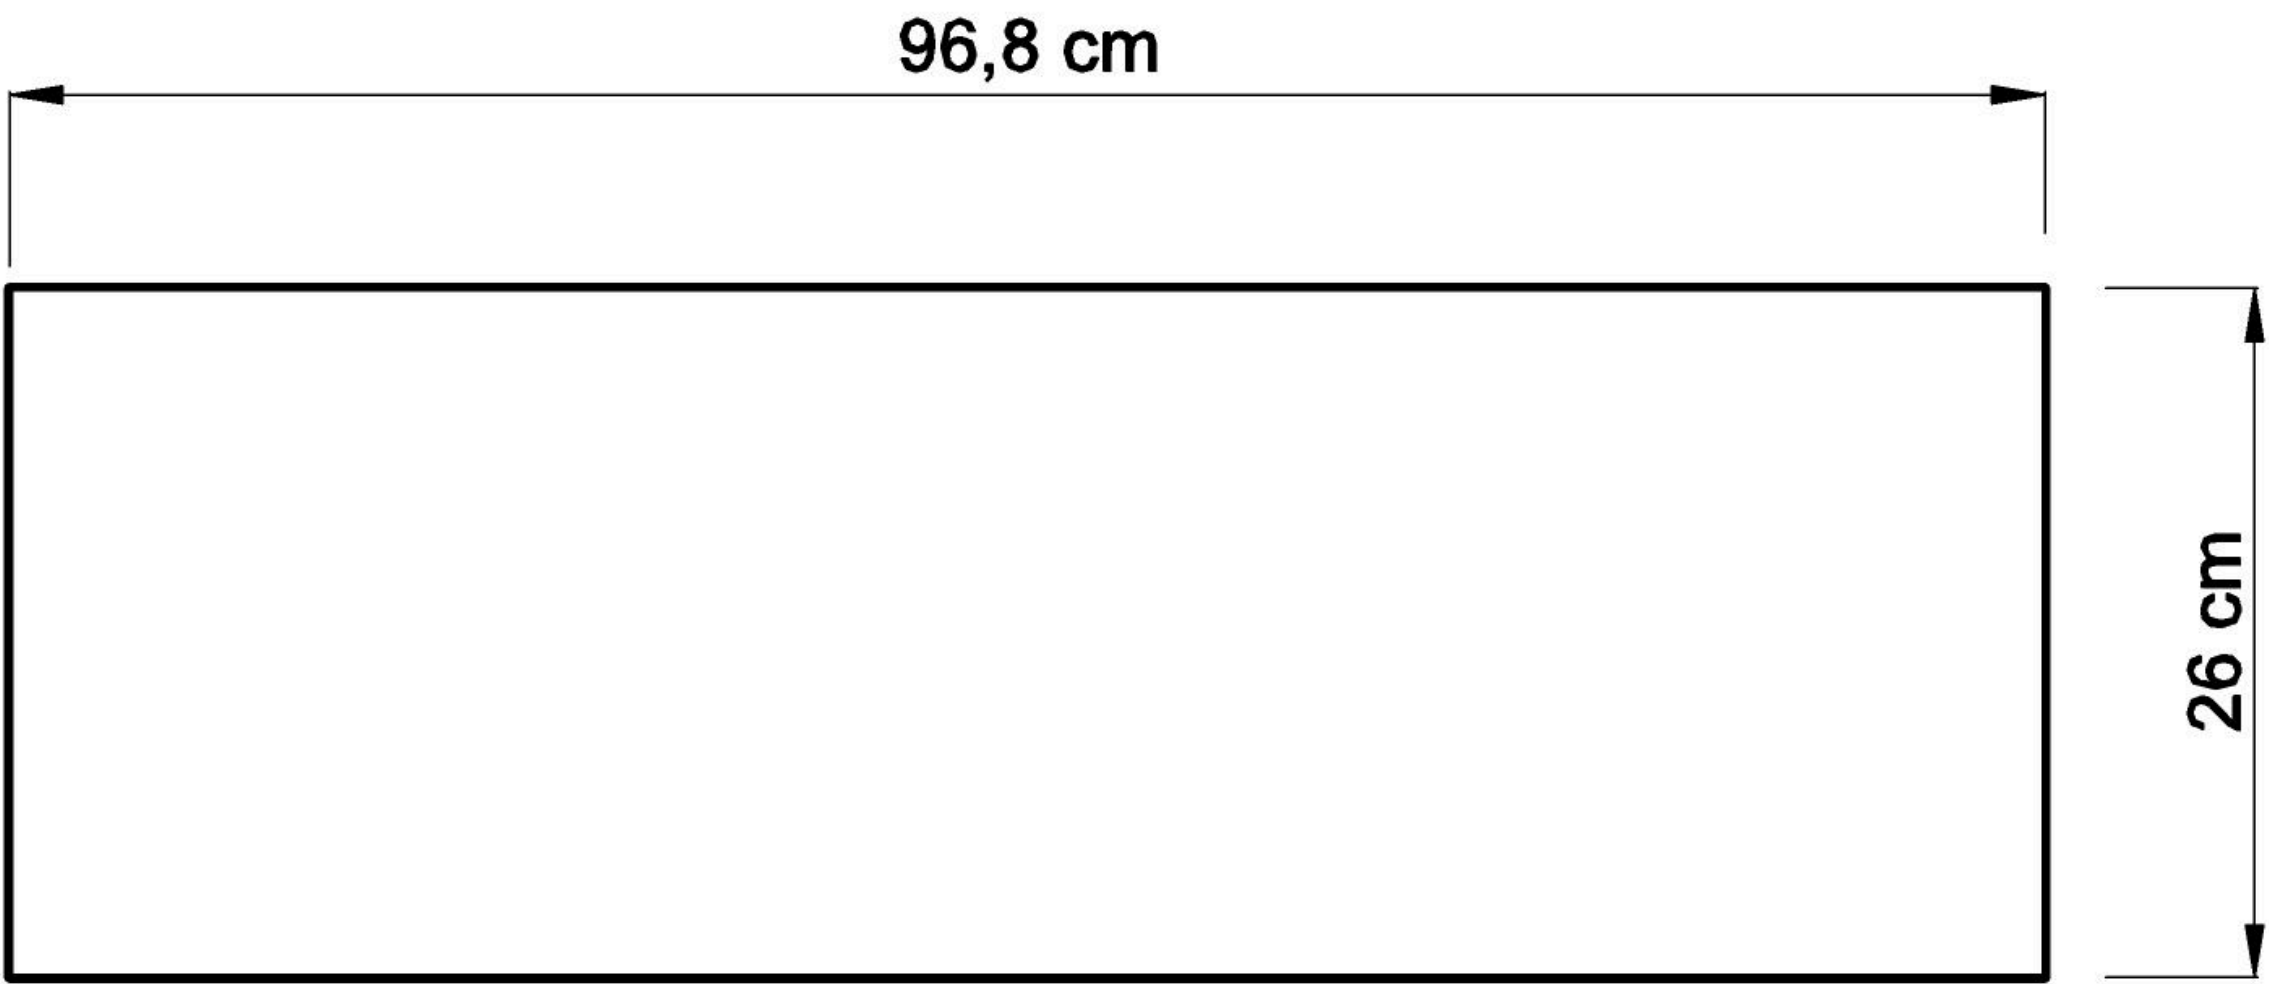


2

x2

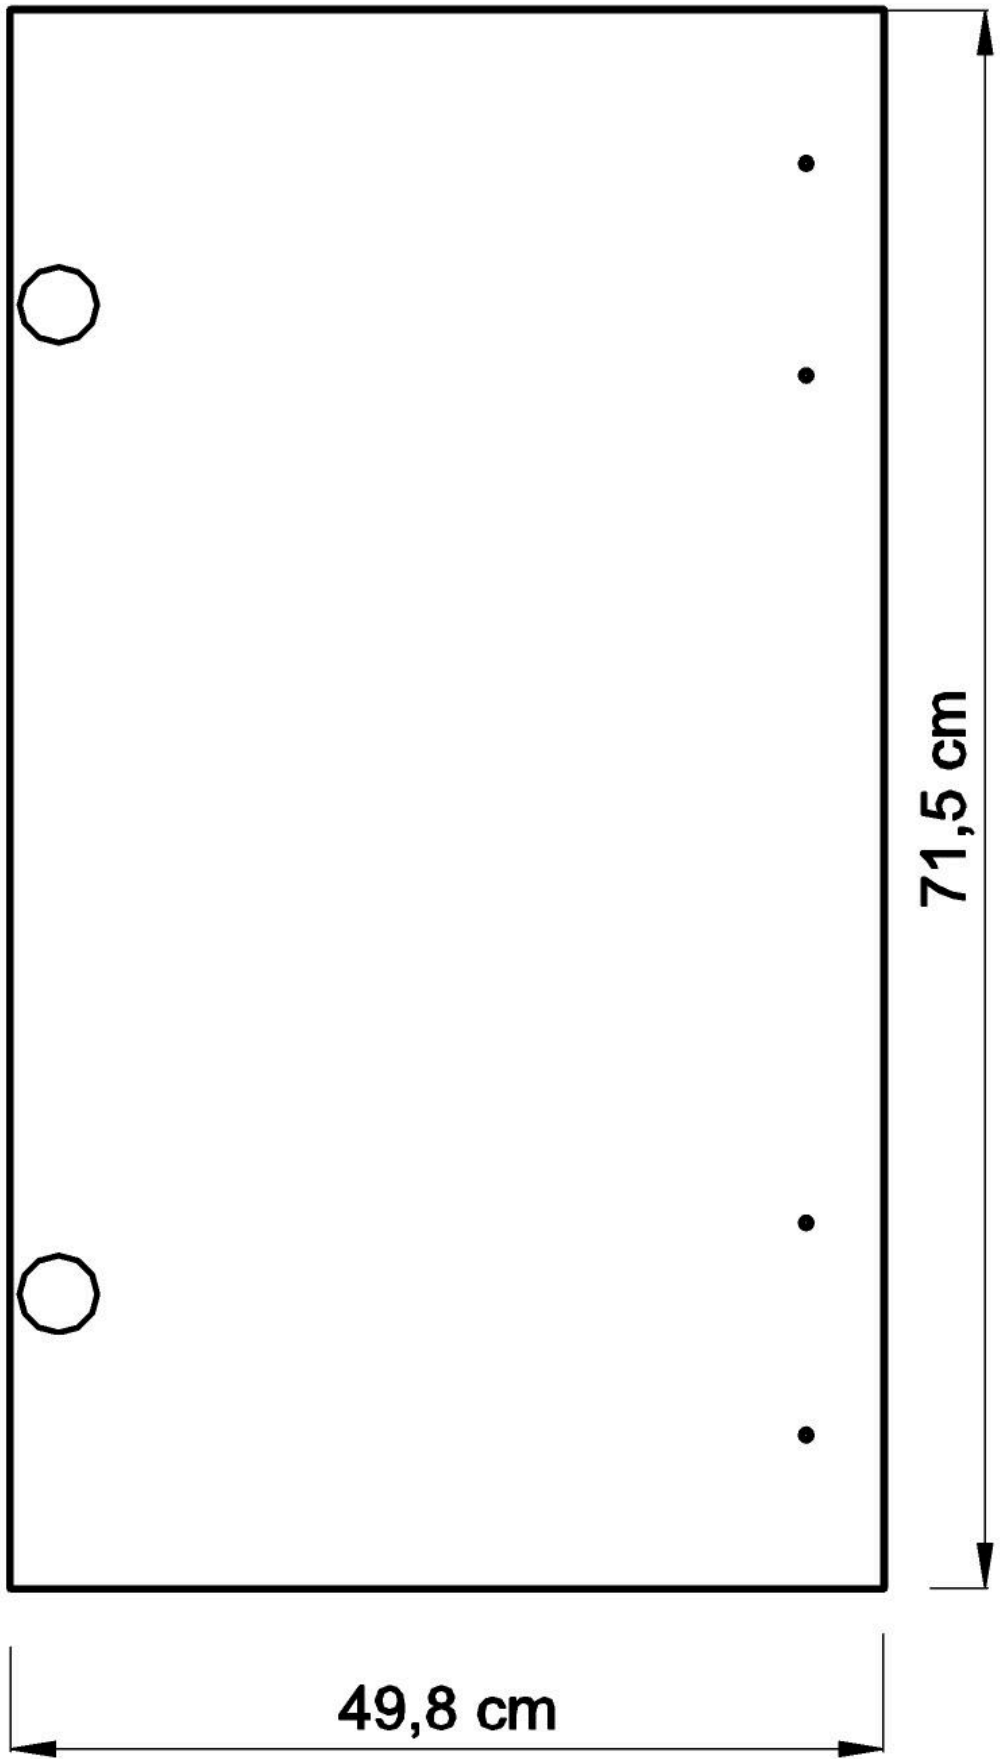


3

x2

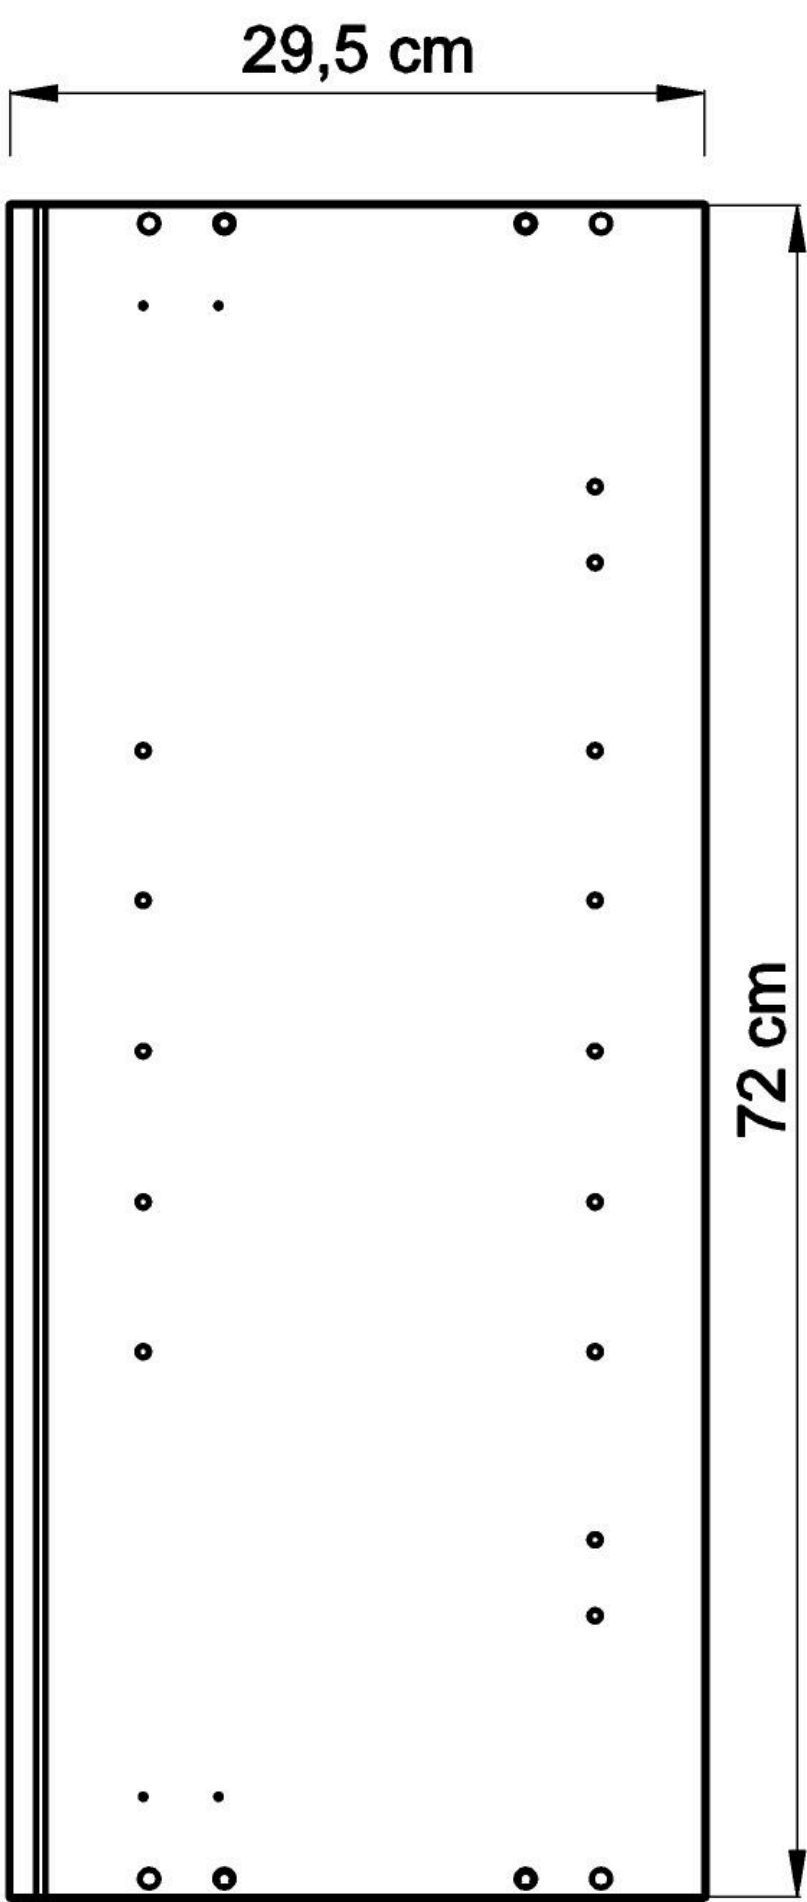


4

x1

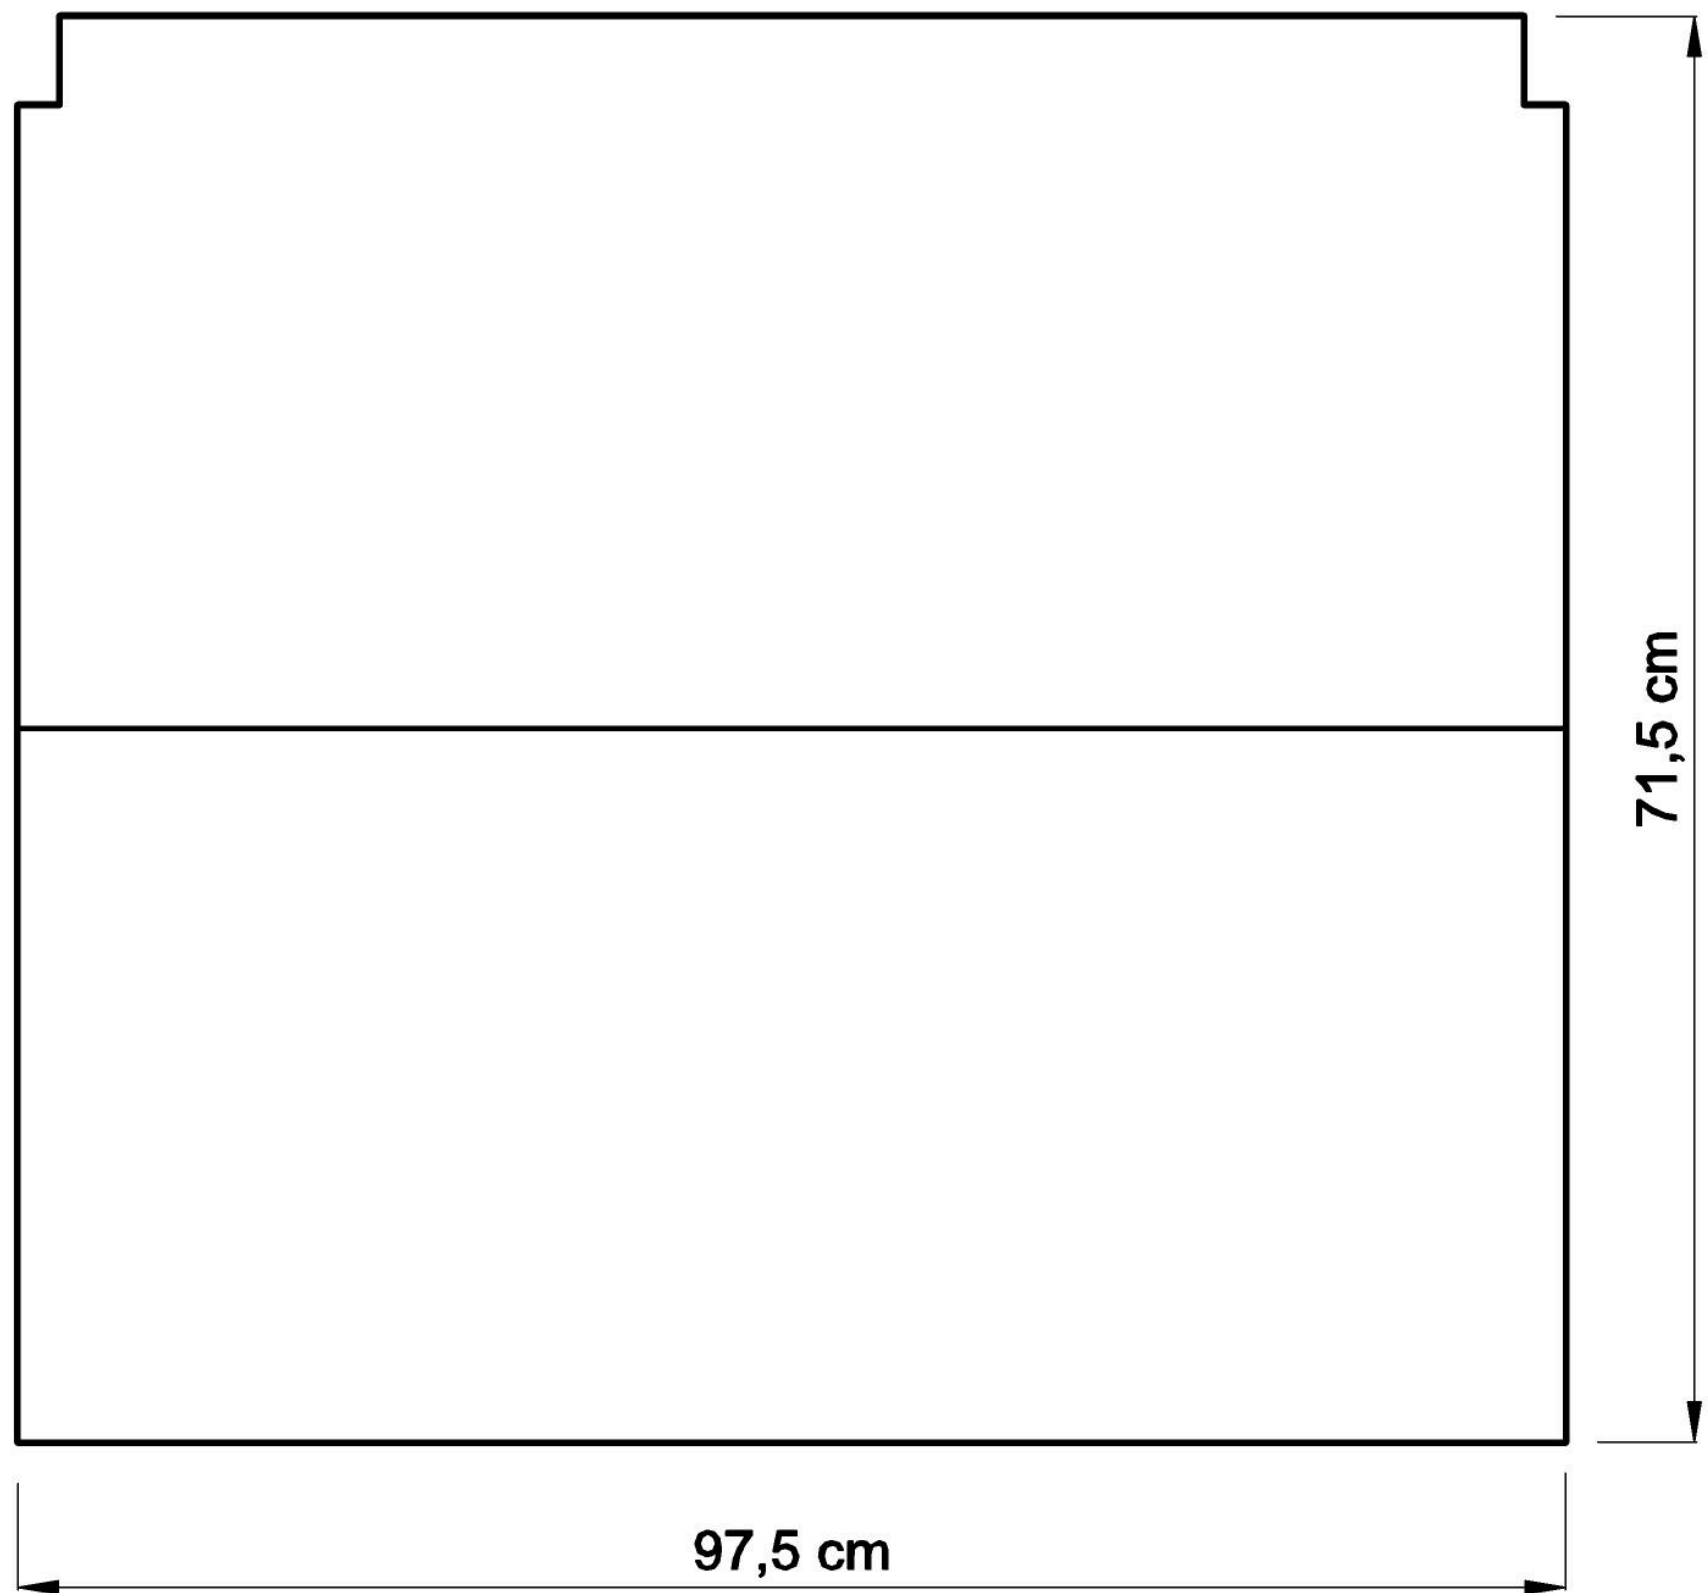


5

x2

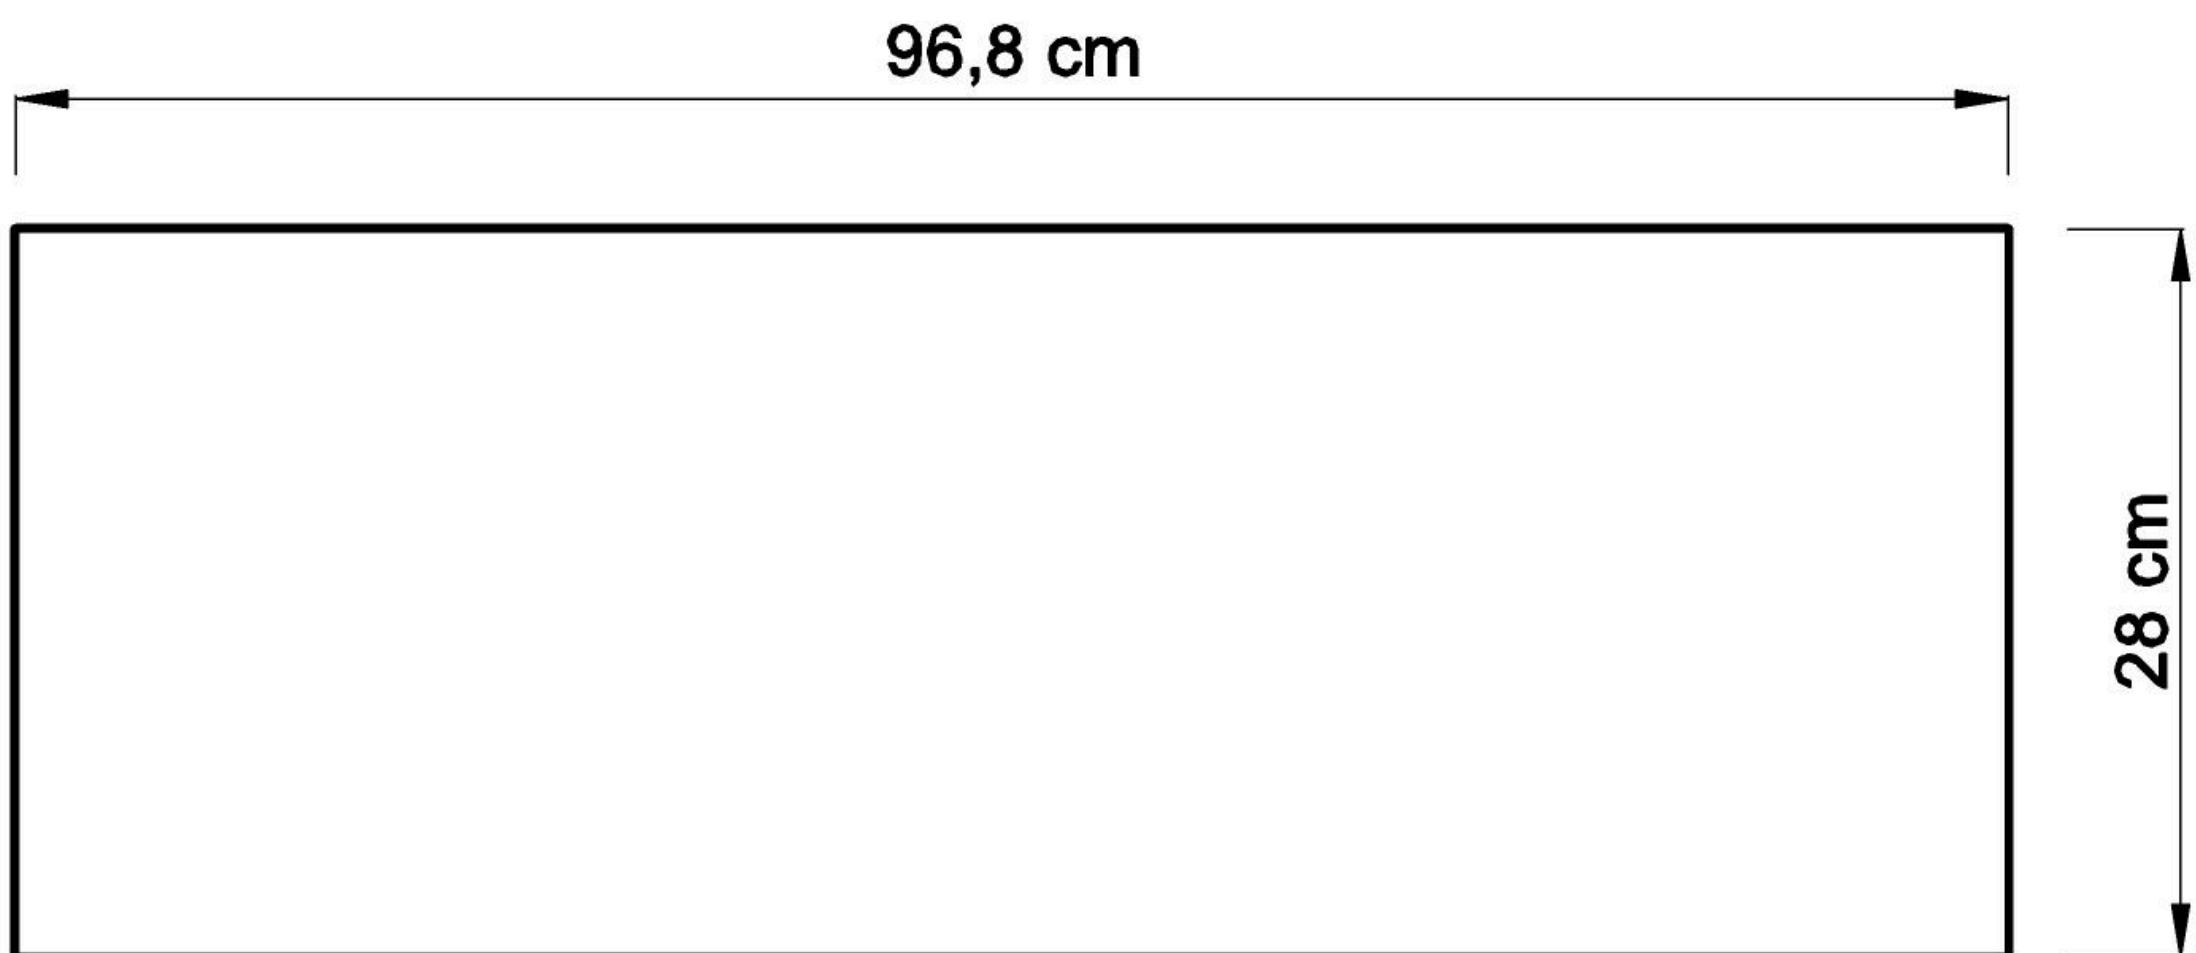










6

x1

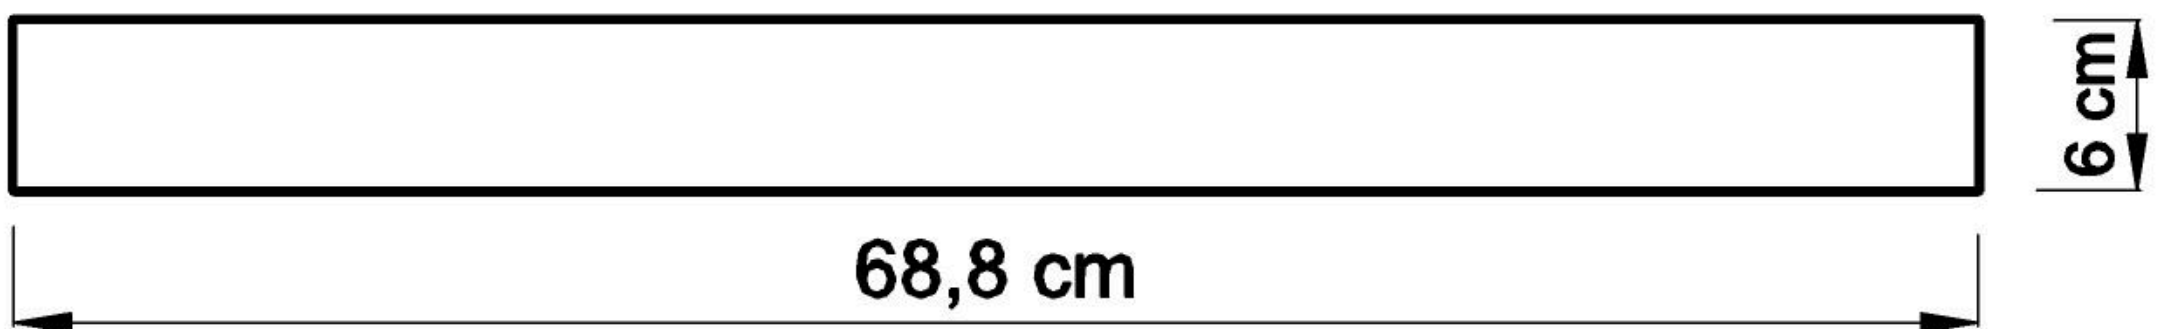

COMPONENTS - FITTINGS

Please check you have all the fittings listed below

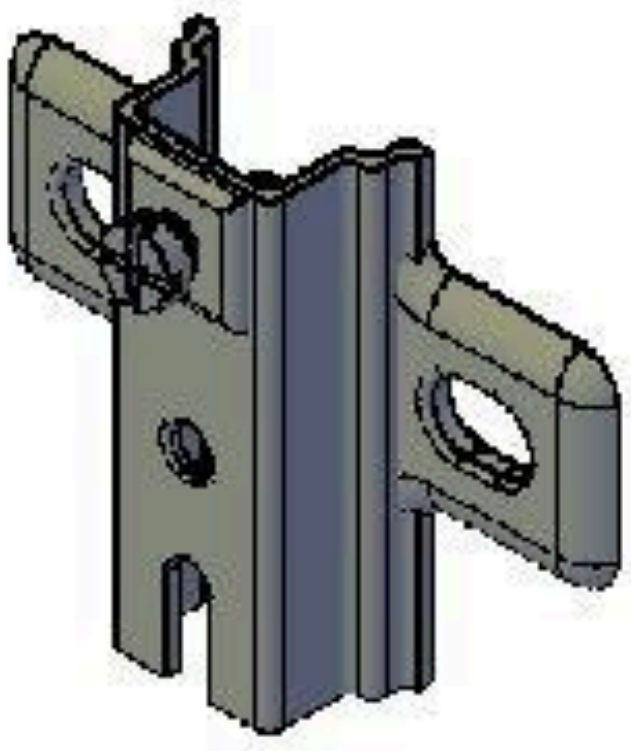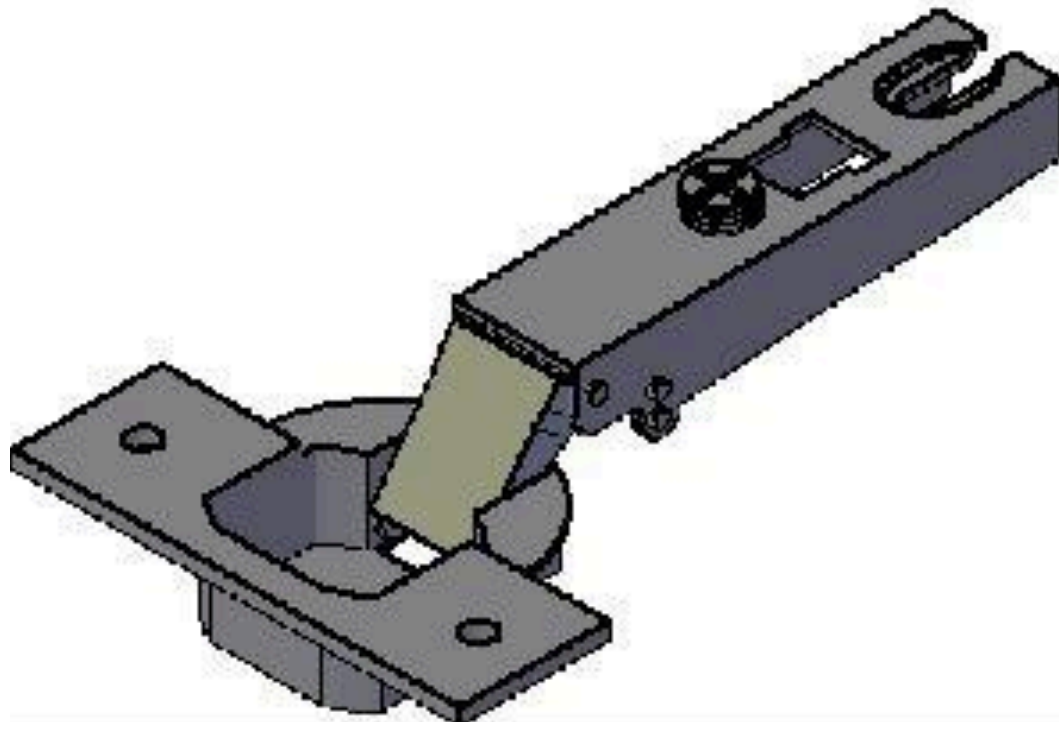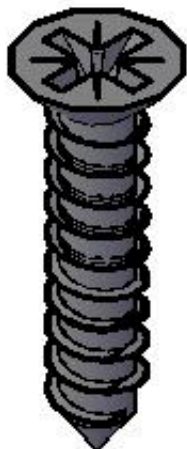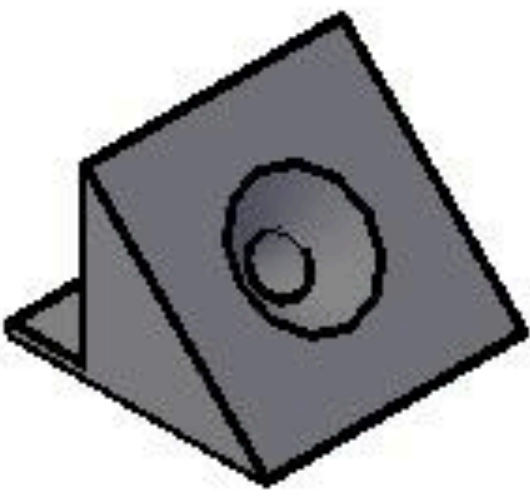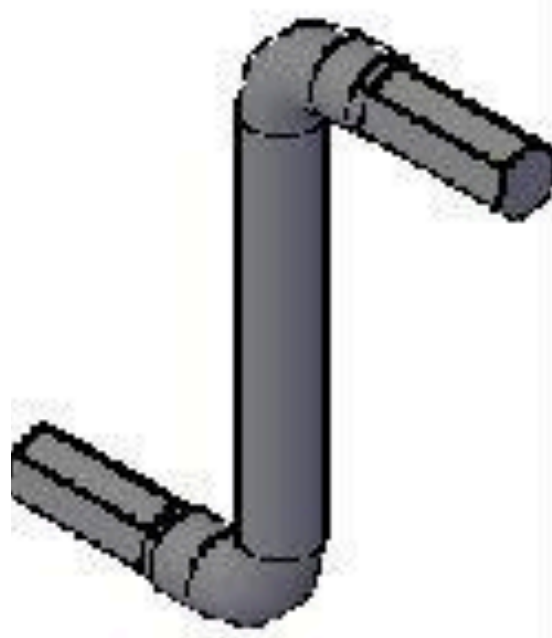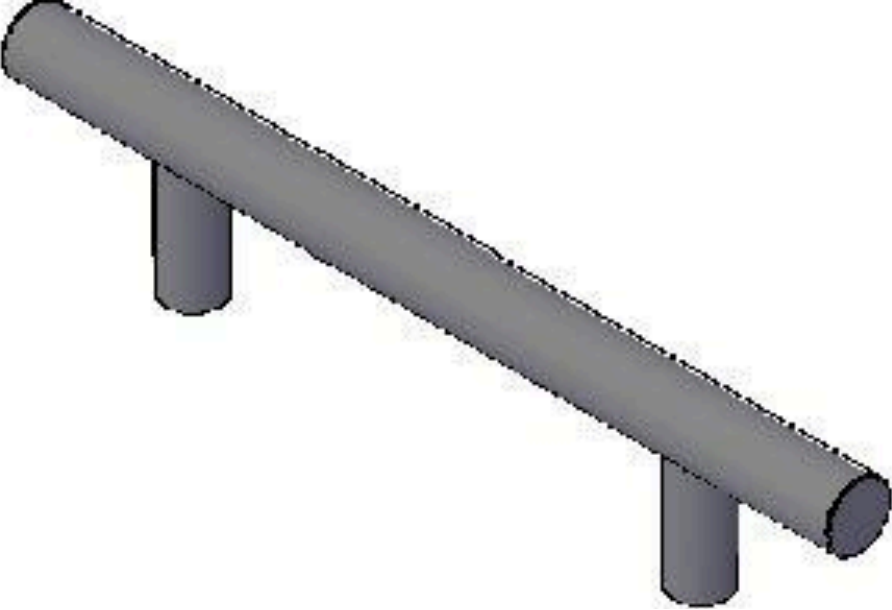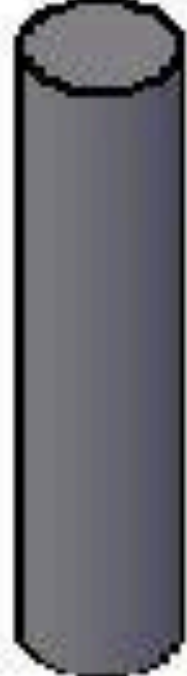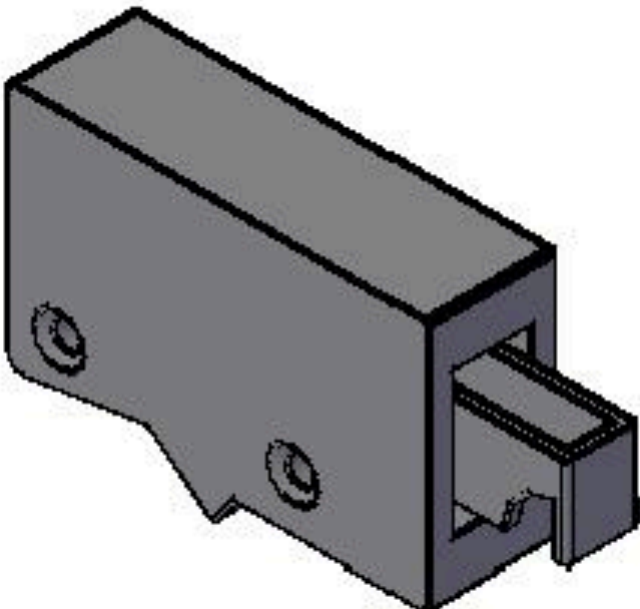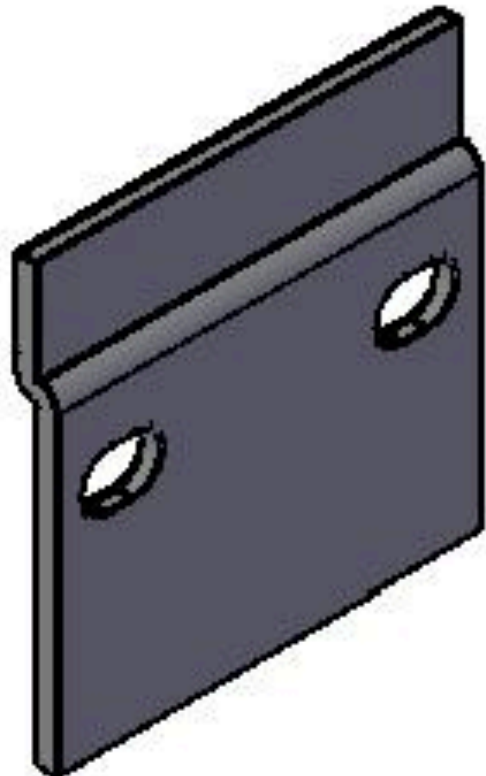
O x8  ⌀ 7x16	F x4 	G2 x4 	! PAY ATTENTION: O AND F ATTACHED TO G2
H3 x12  ⌀ 3x16	A4 x12 	Q7 x1 	C x12  ⌀ 7x50
S1 x12 	H9 x4 US 031.03  ⌀ 4x30	J9 x4  ⌀ 3x25	U7 x2 
H x8 US 031.03  ⌀ 3.5x13	W x16 	D8 x5 	A x8 
Z8 x2 		Z9 x2 	

STEP - 1

! PAY ATTENTION: O ATTACHED TO F

O x8


F x4

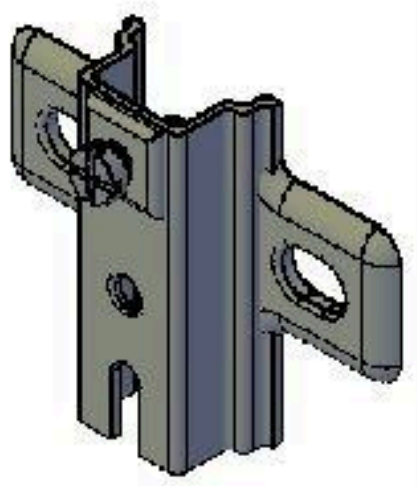

⌀7x16

Z8 x2

A x8

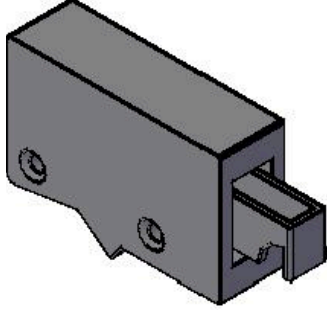


H9 x4 US 031.03

D8 x5




⌀4x30

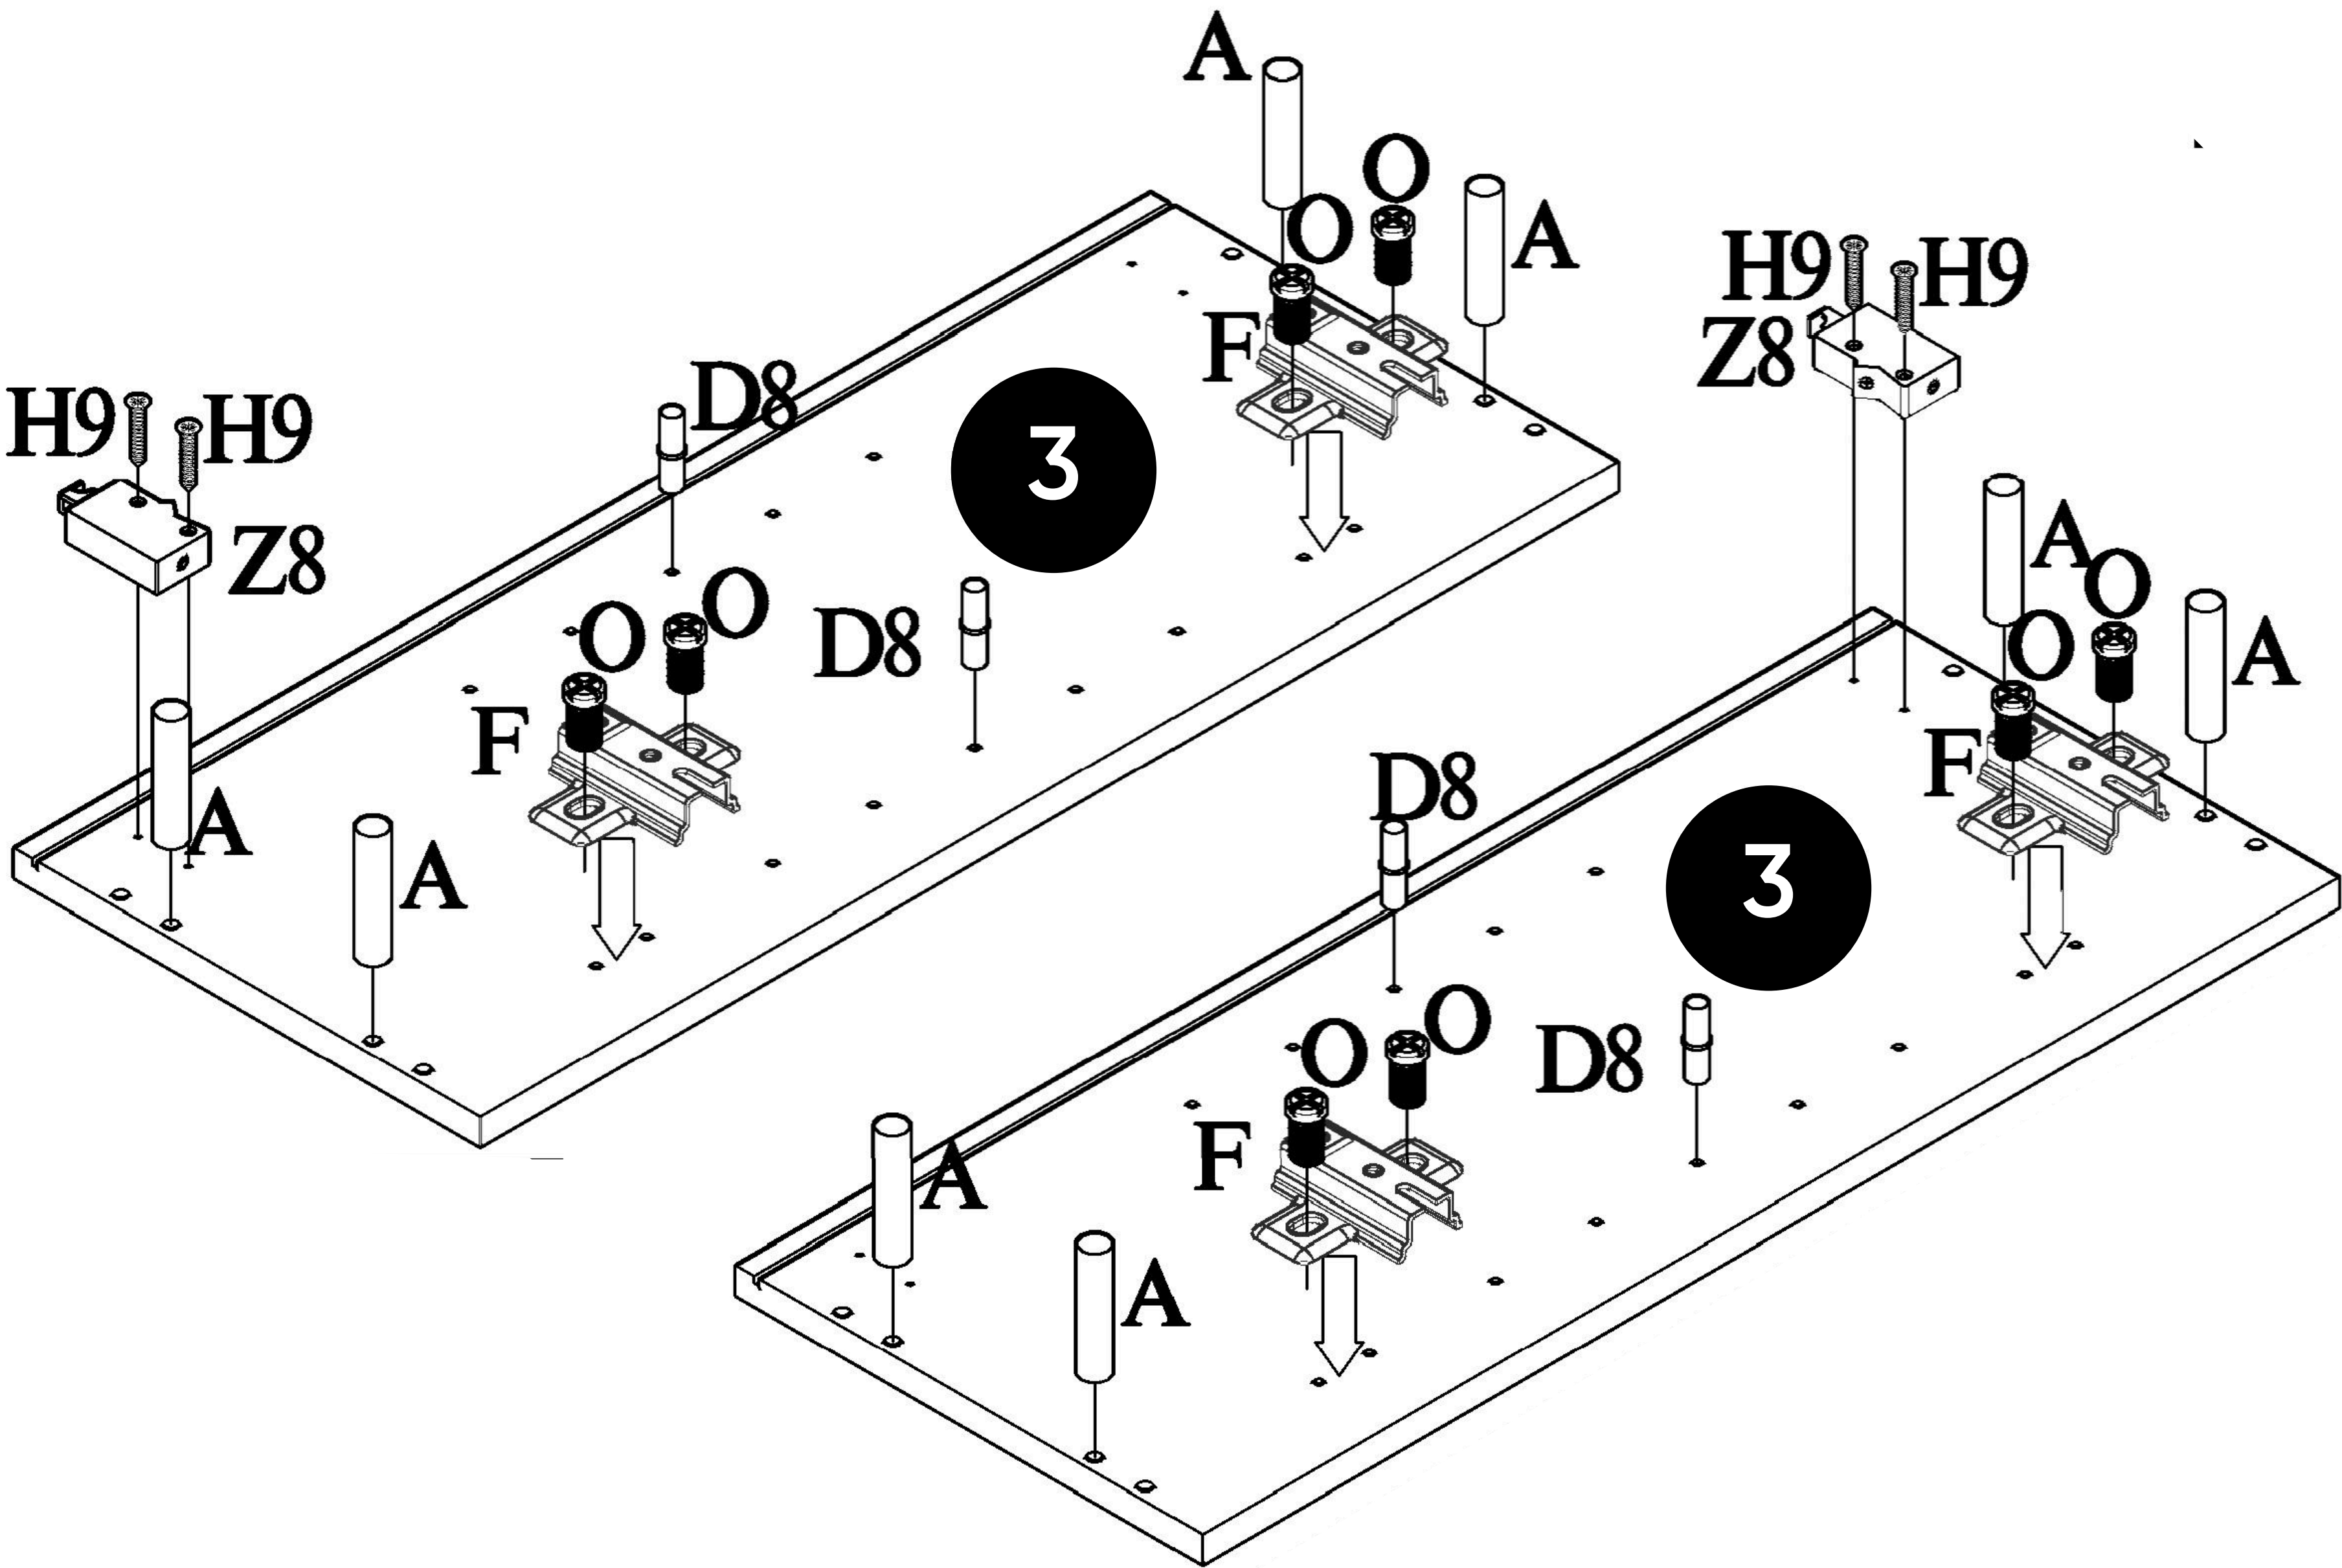


STEP - 2

Q7 x1

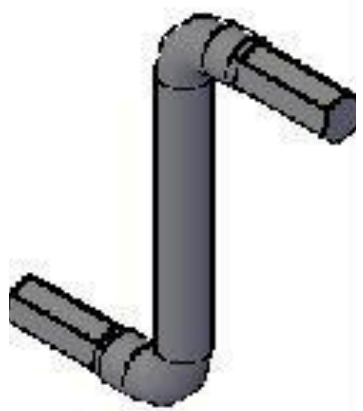


S1 x12

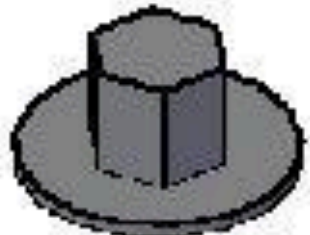


C x12





⌀7x50

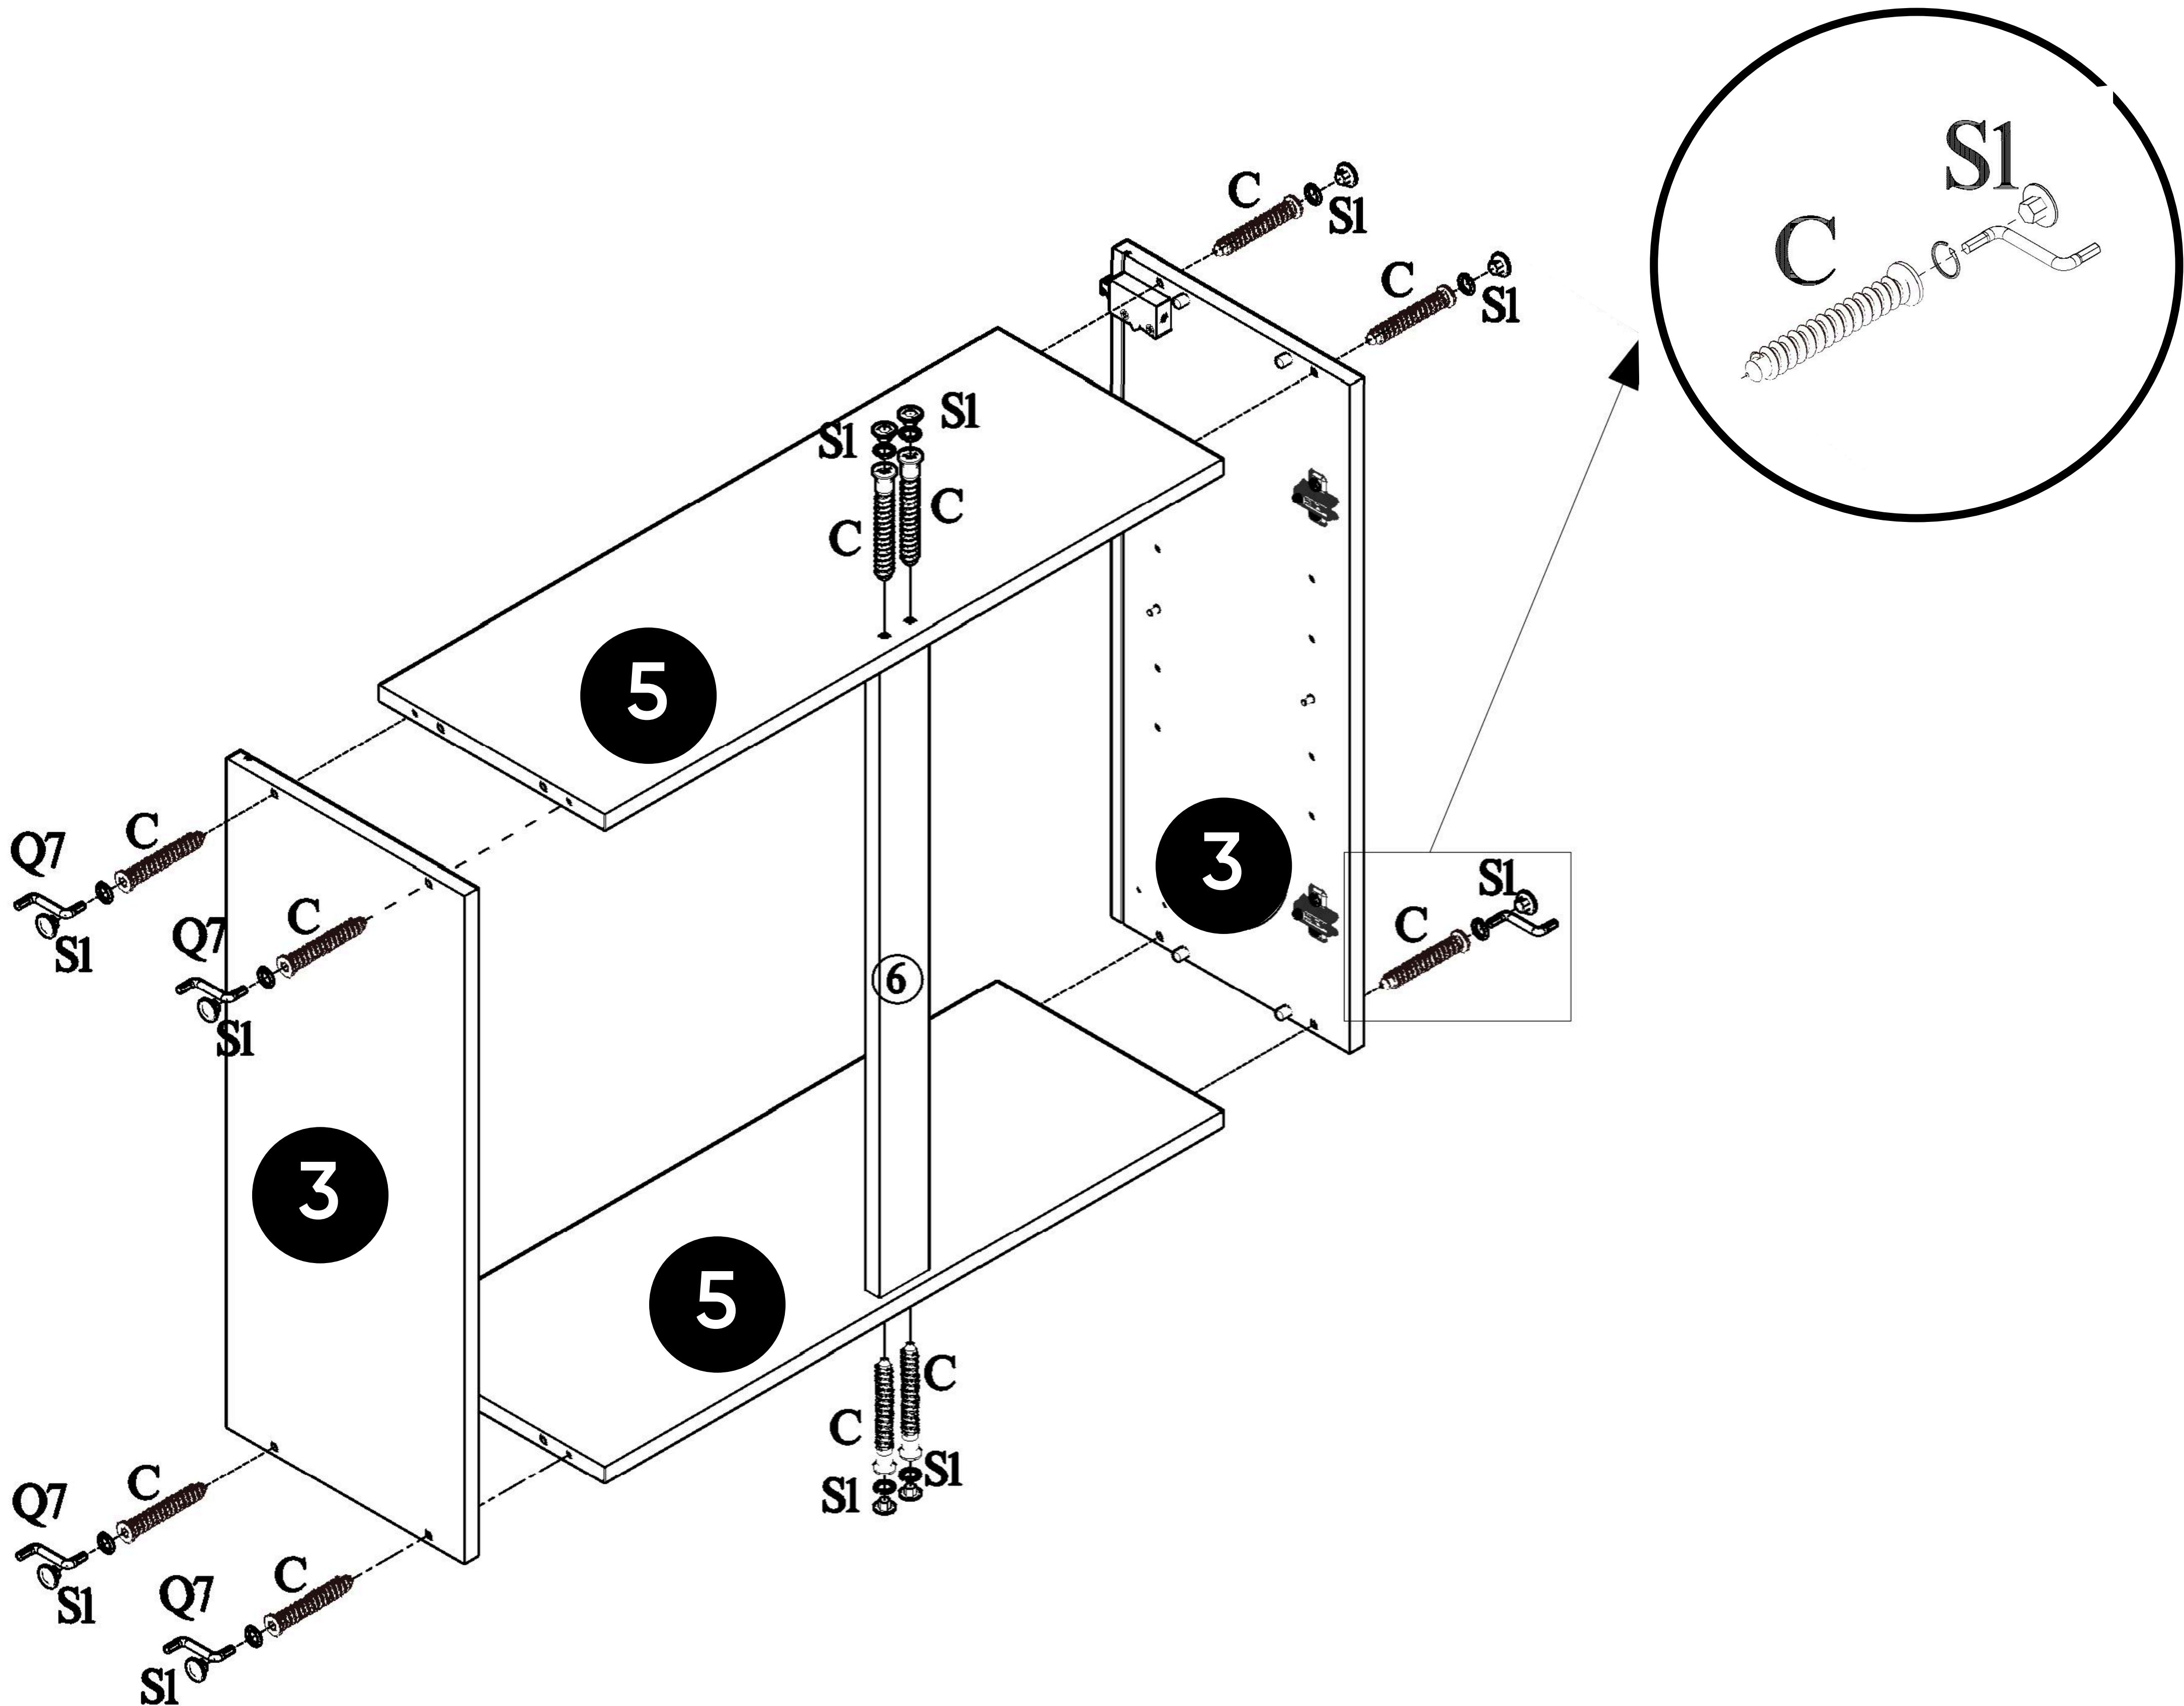

STEP - 3

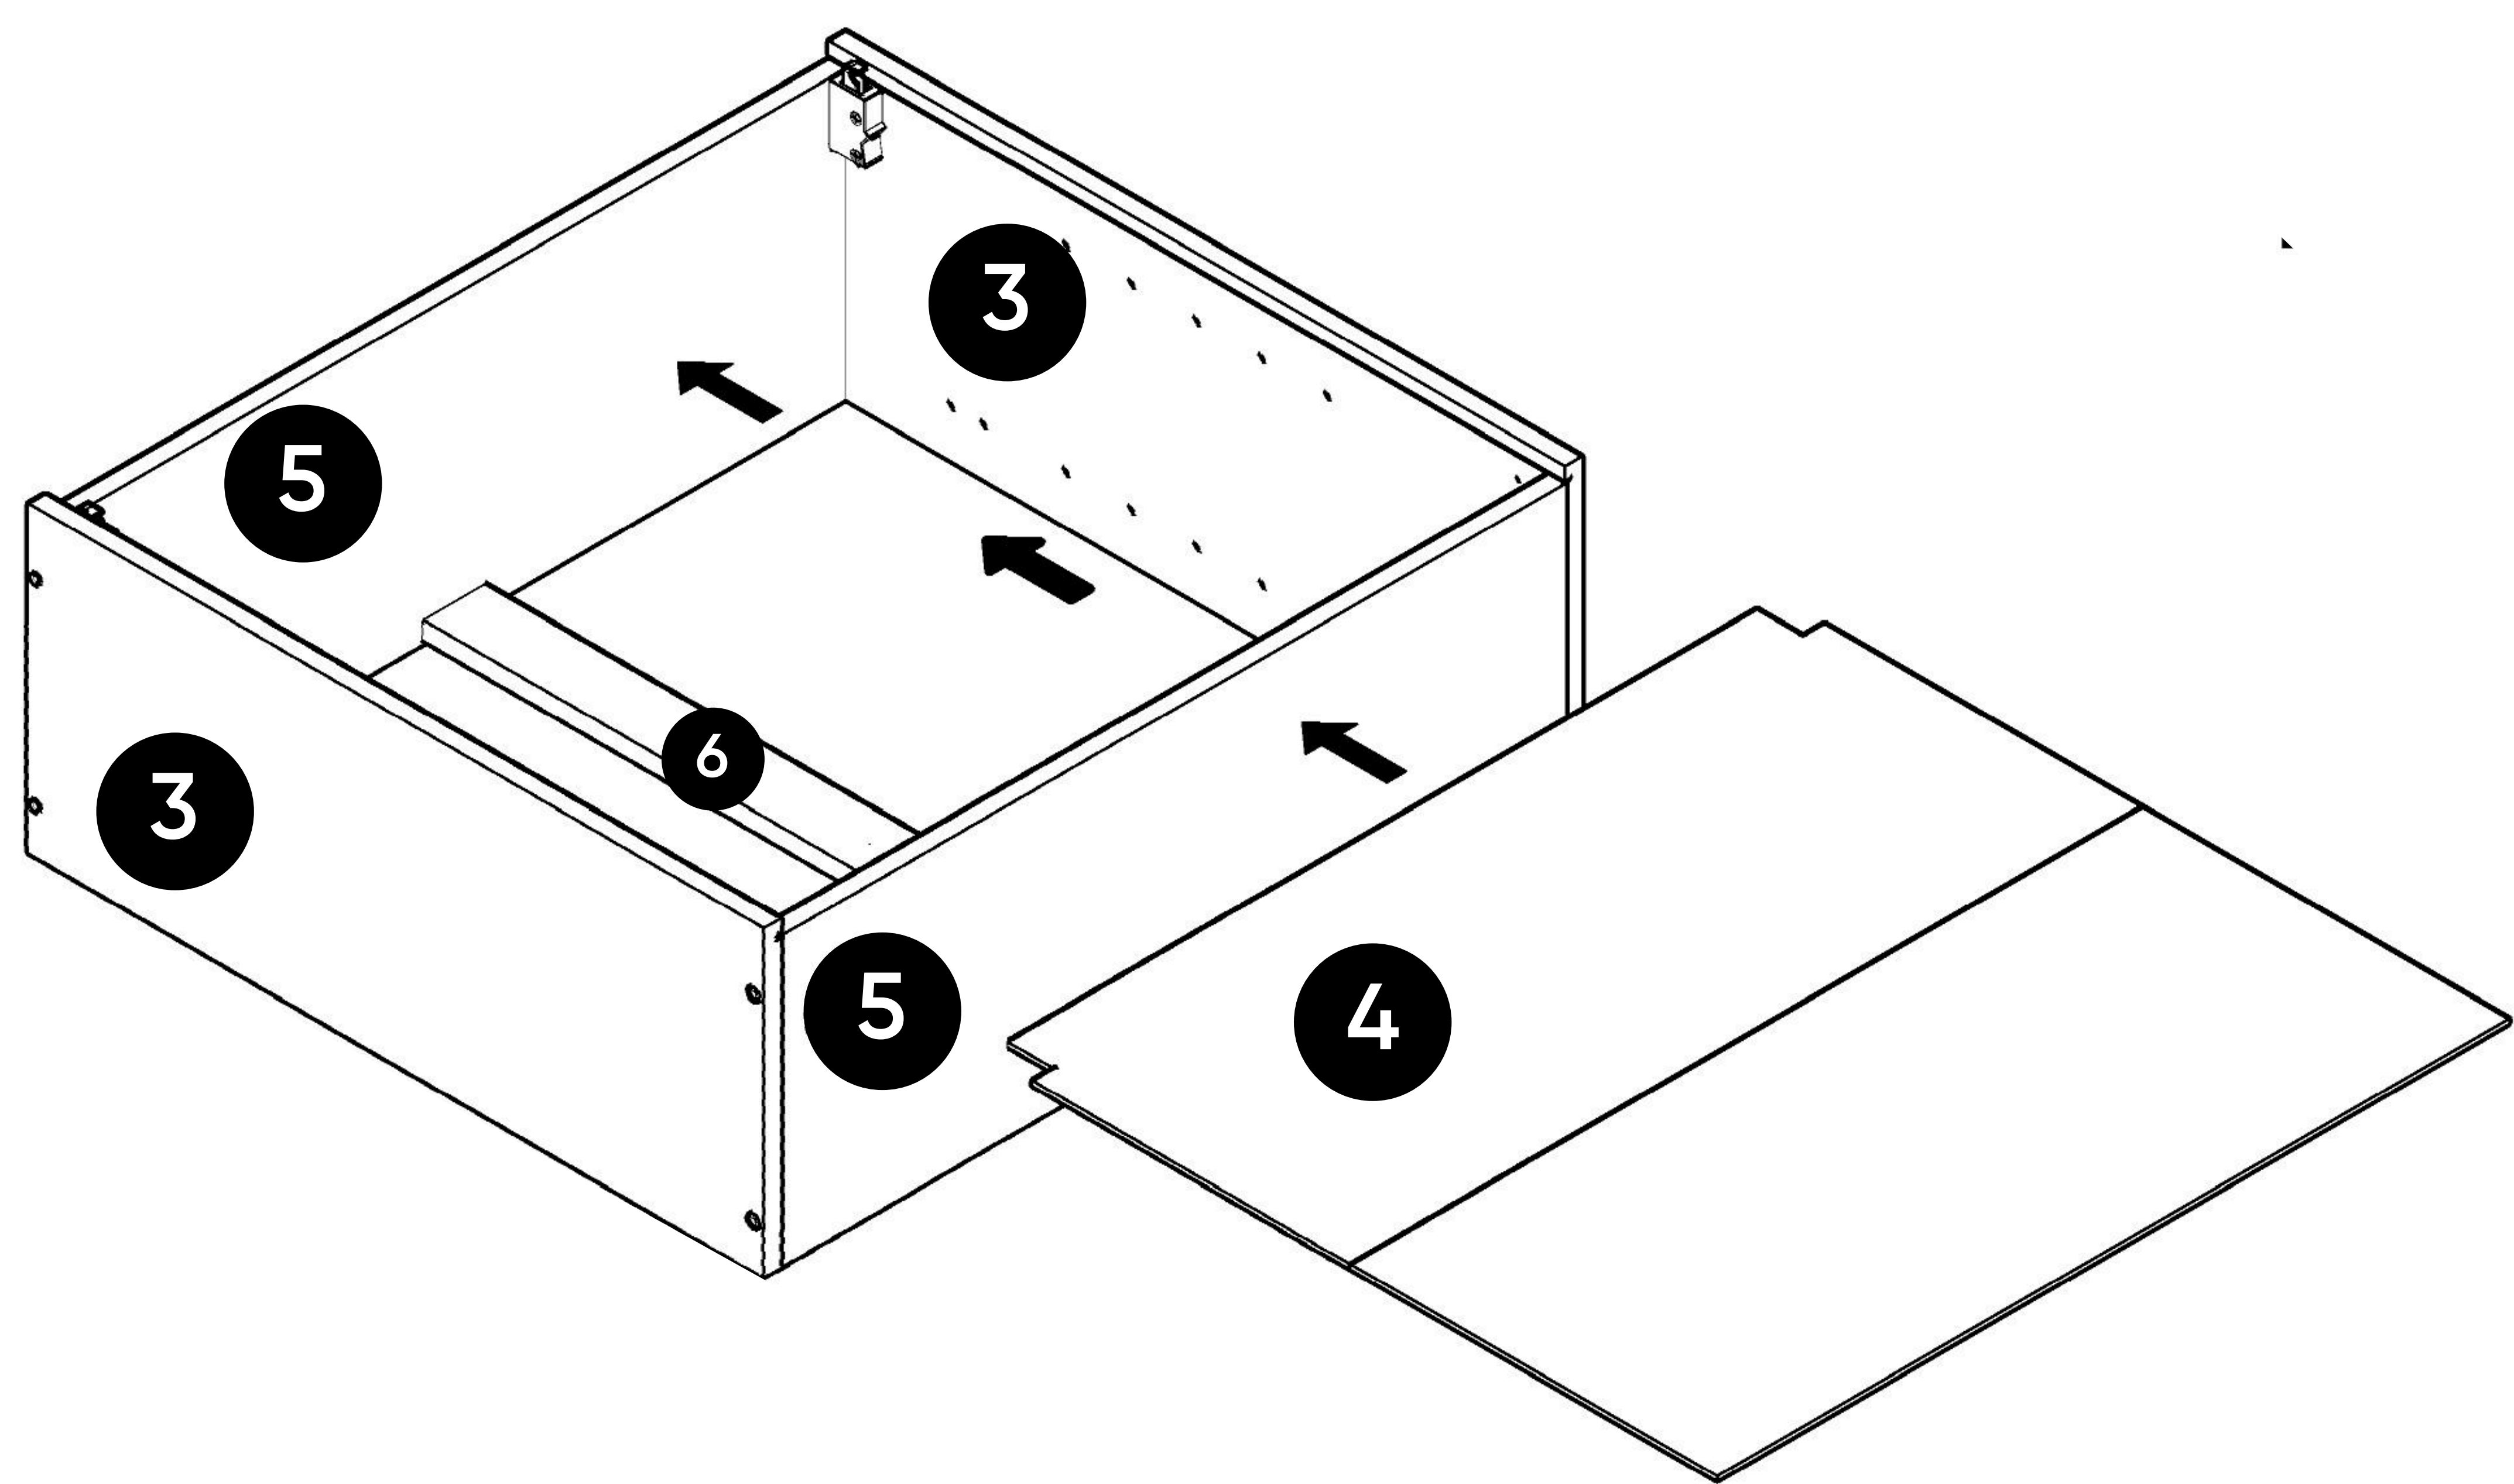


STEP - 4

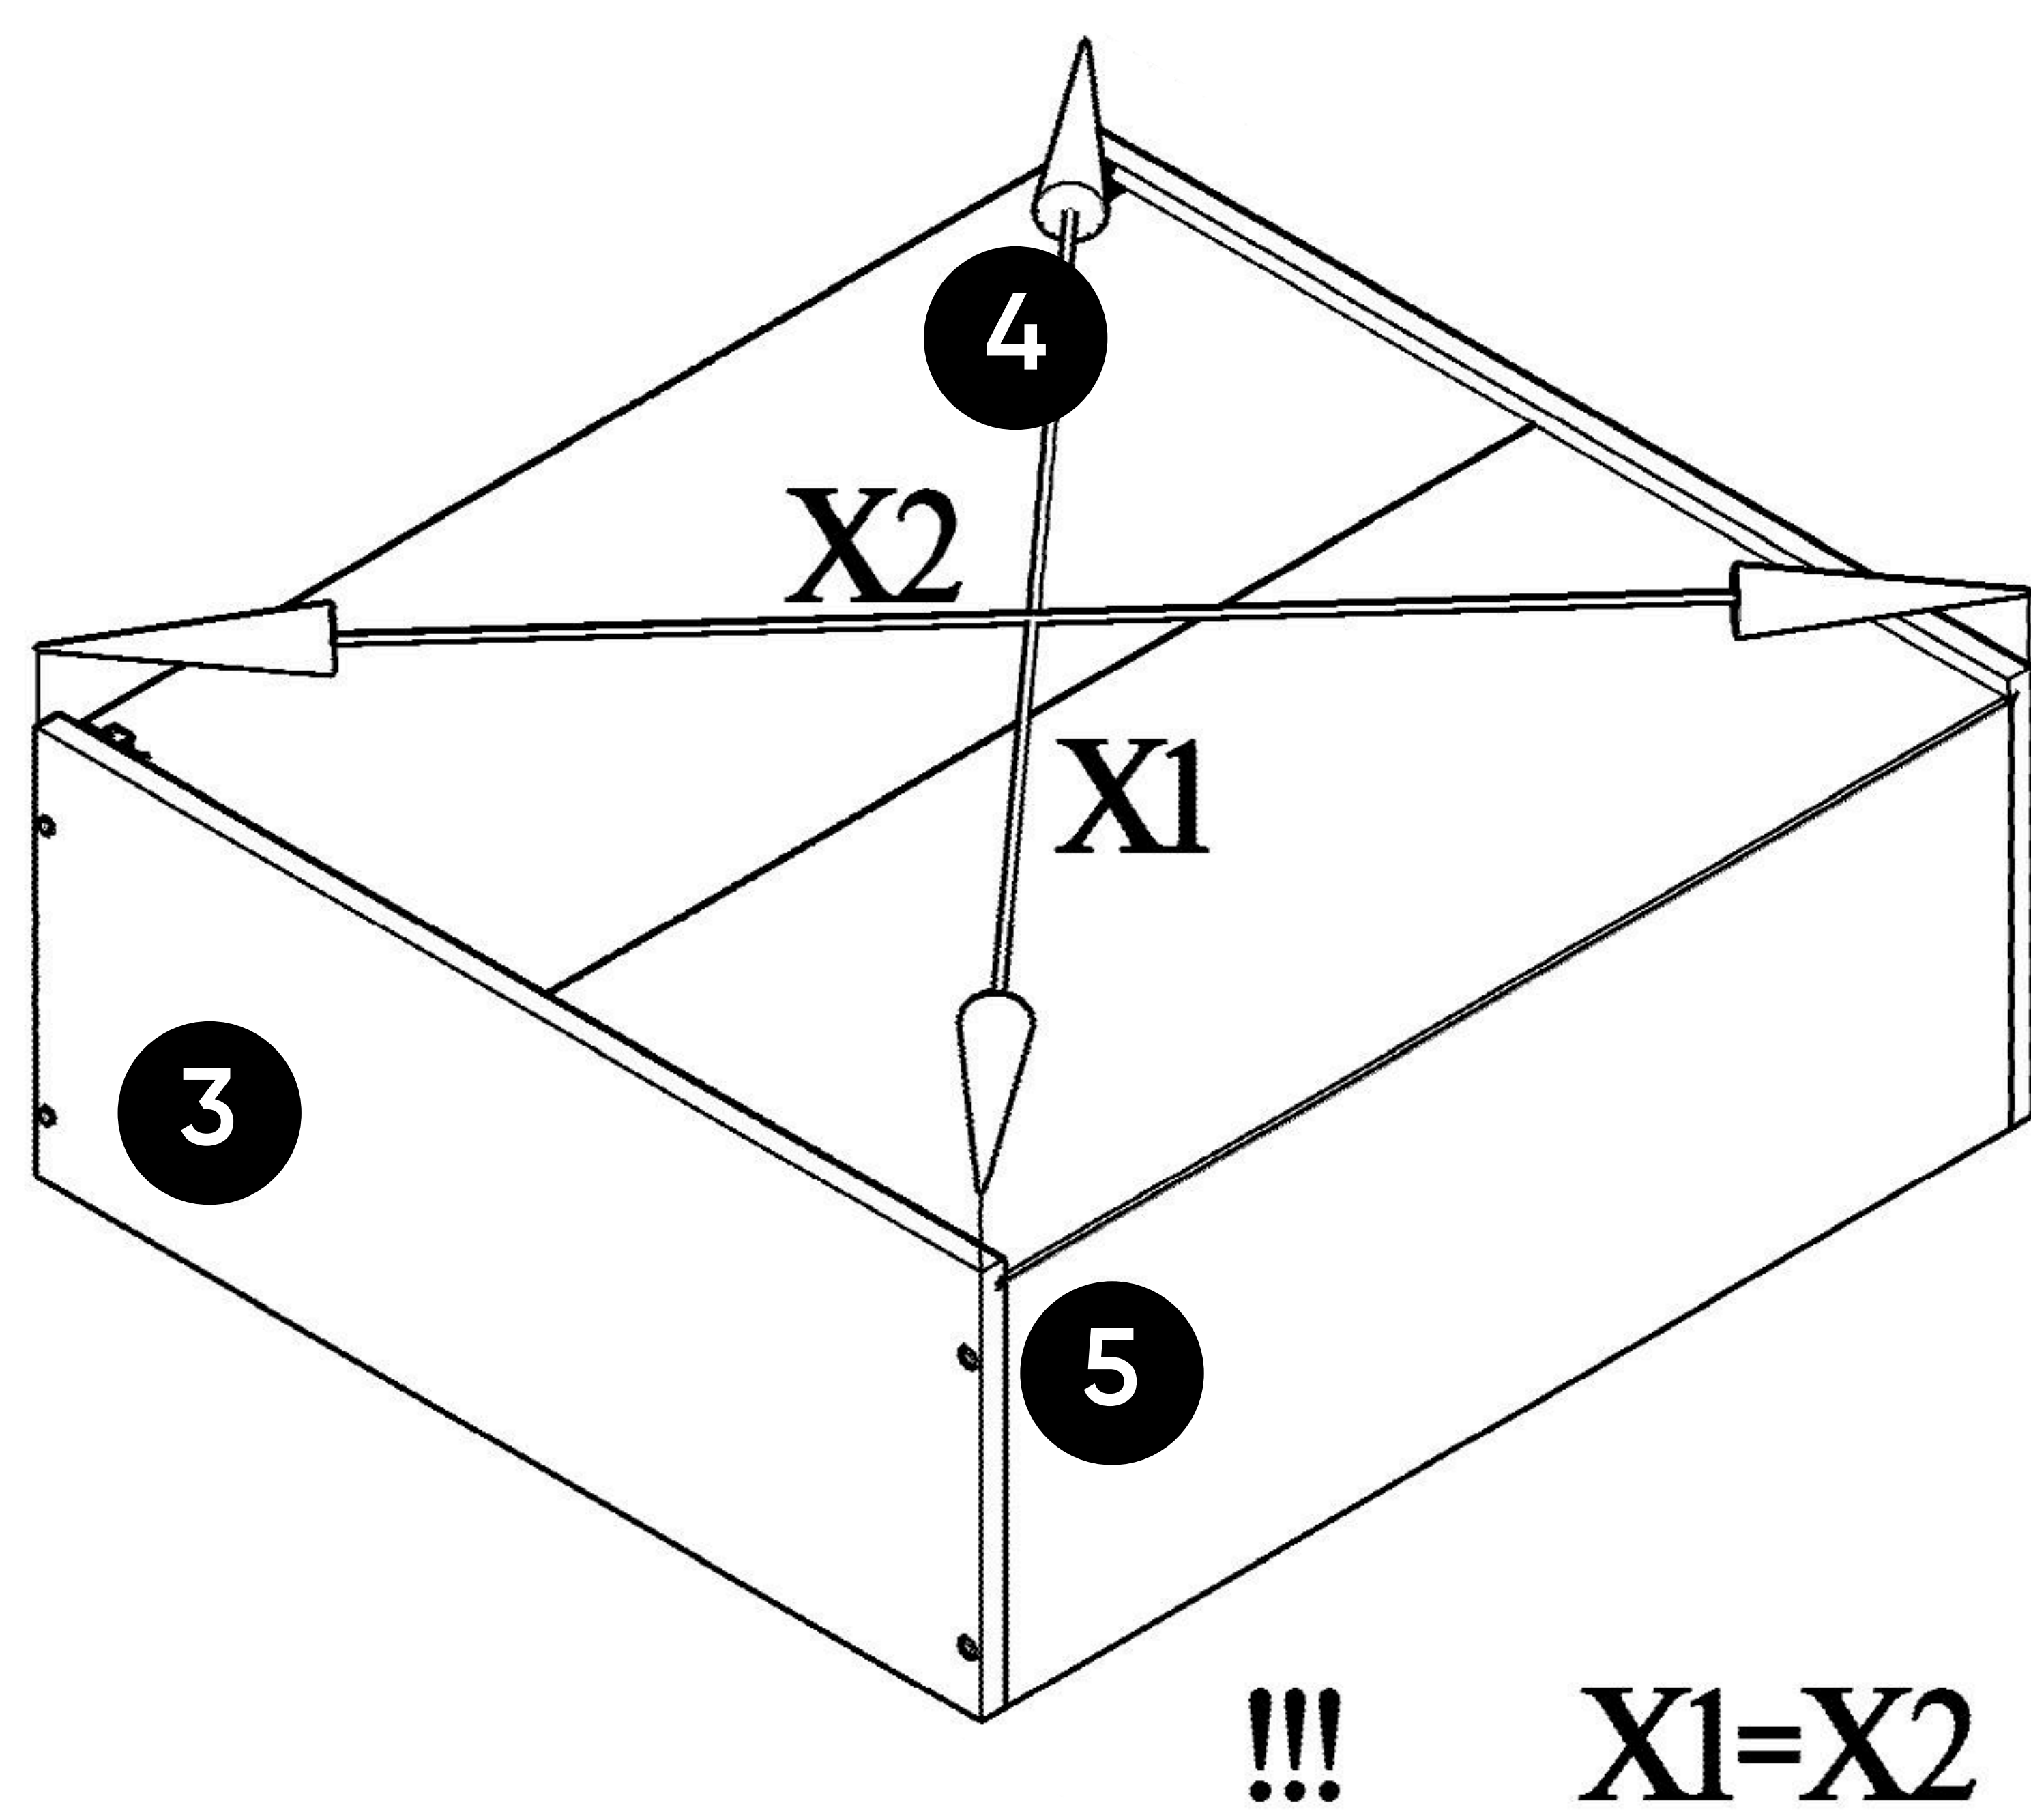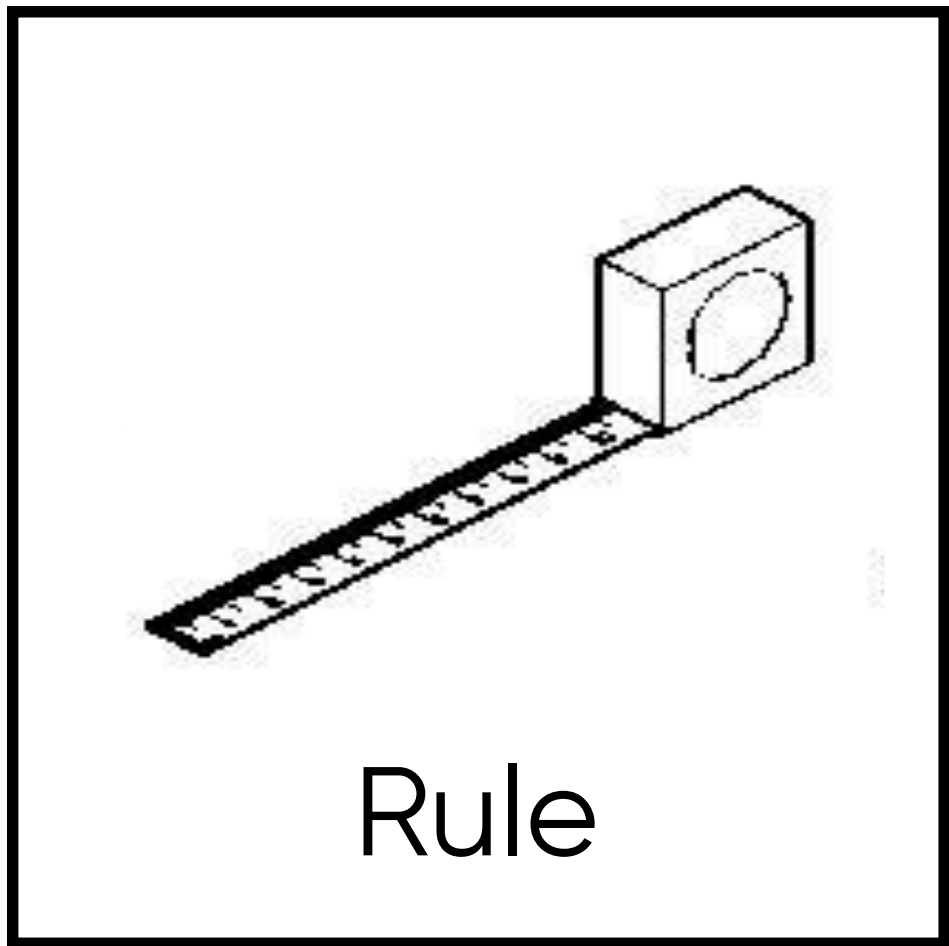

STEP - 5

H3 x12

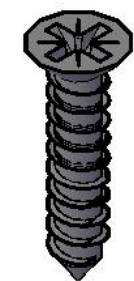



3x16

W x16




A4 x12

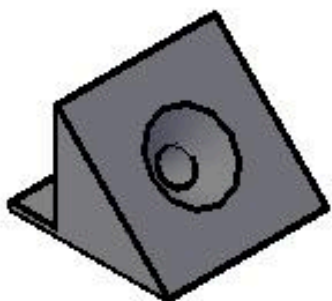

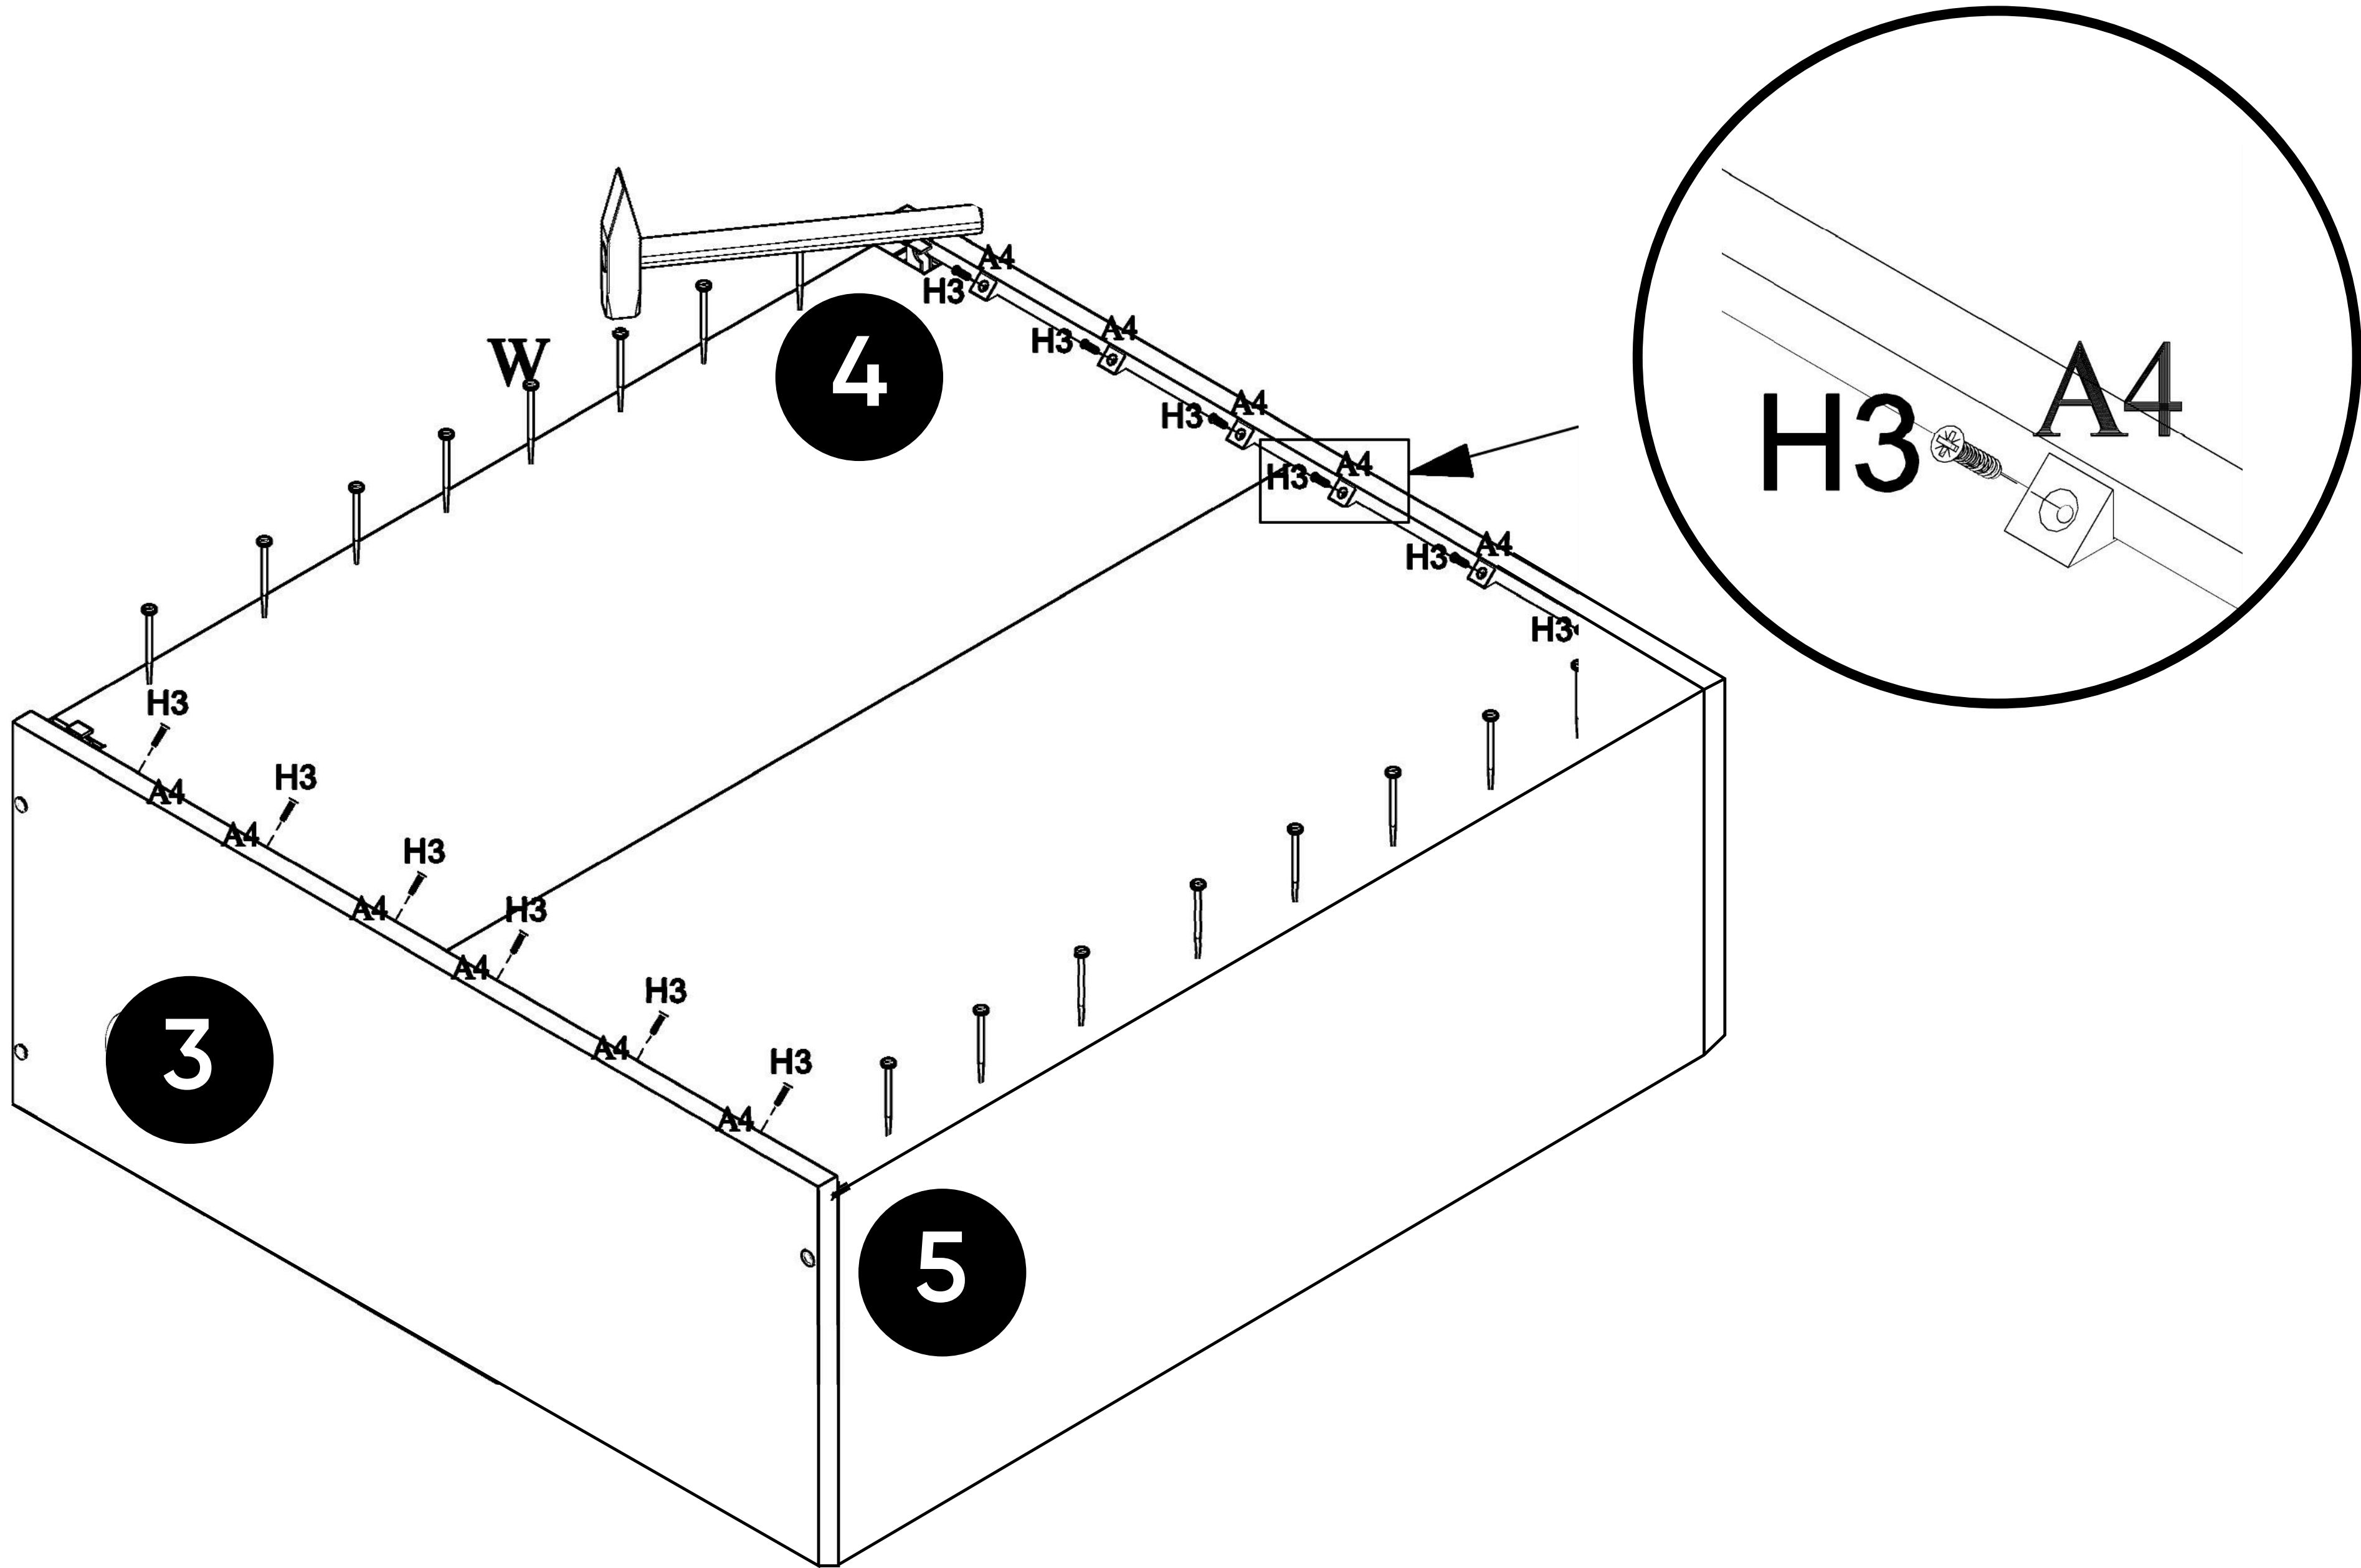

STEP - 6


G2 x4

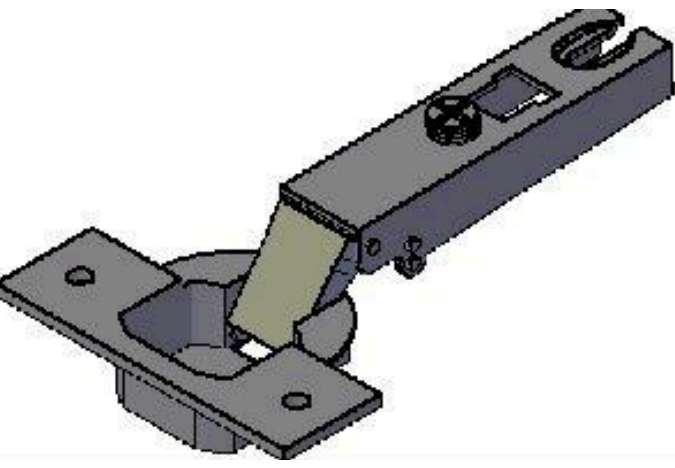



H x8 US 031.03







3.5x13

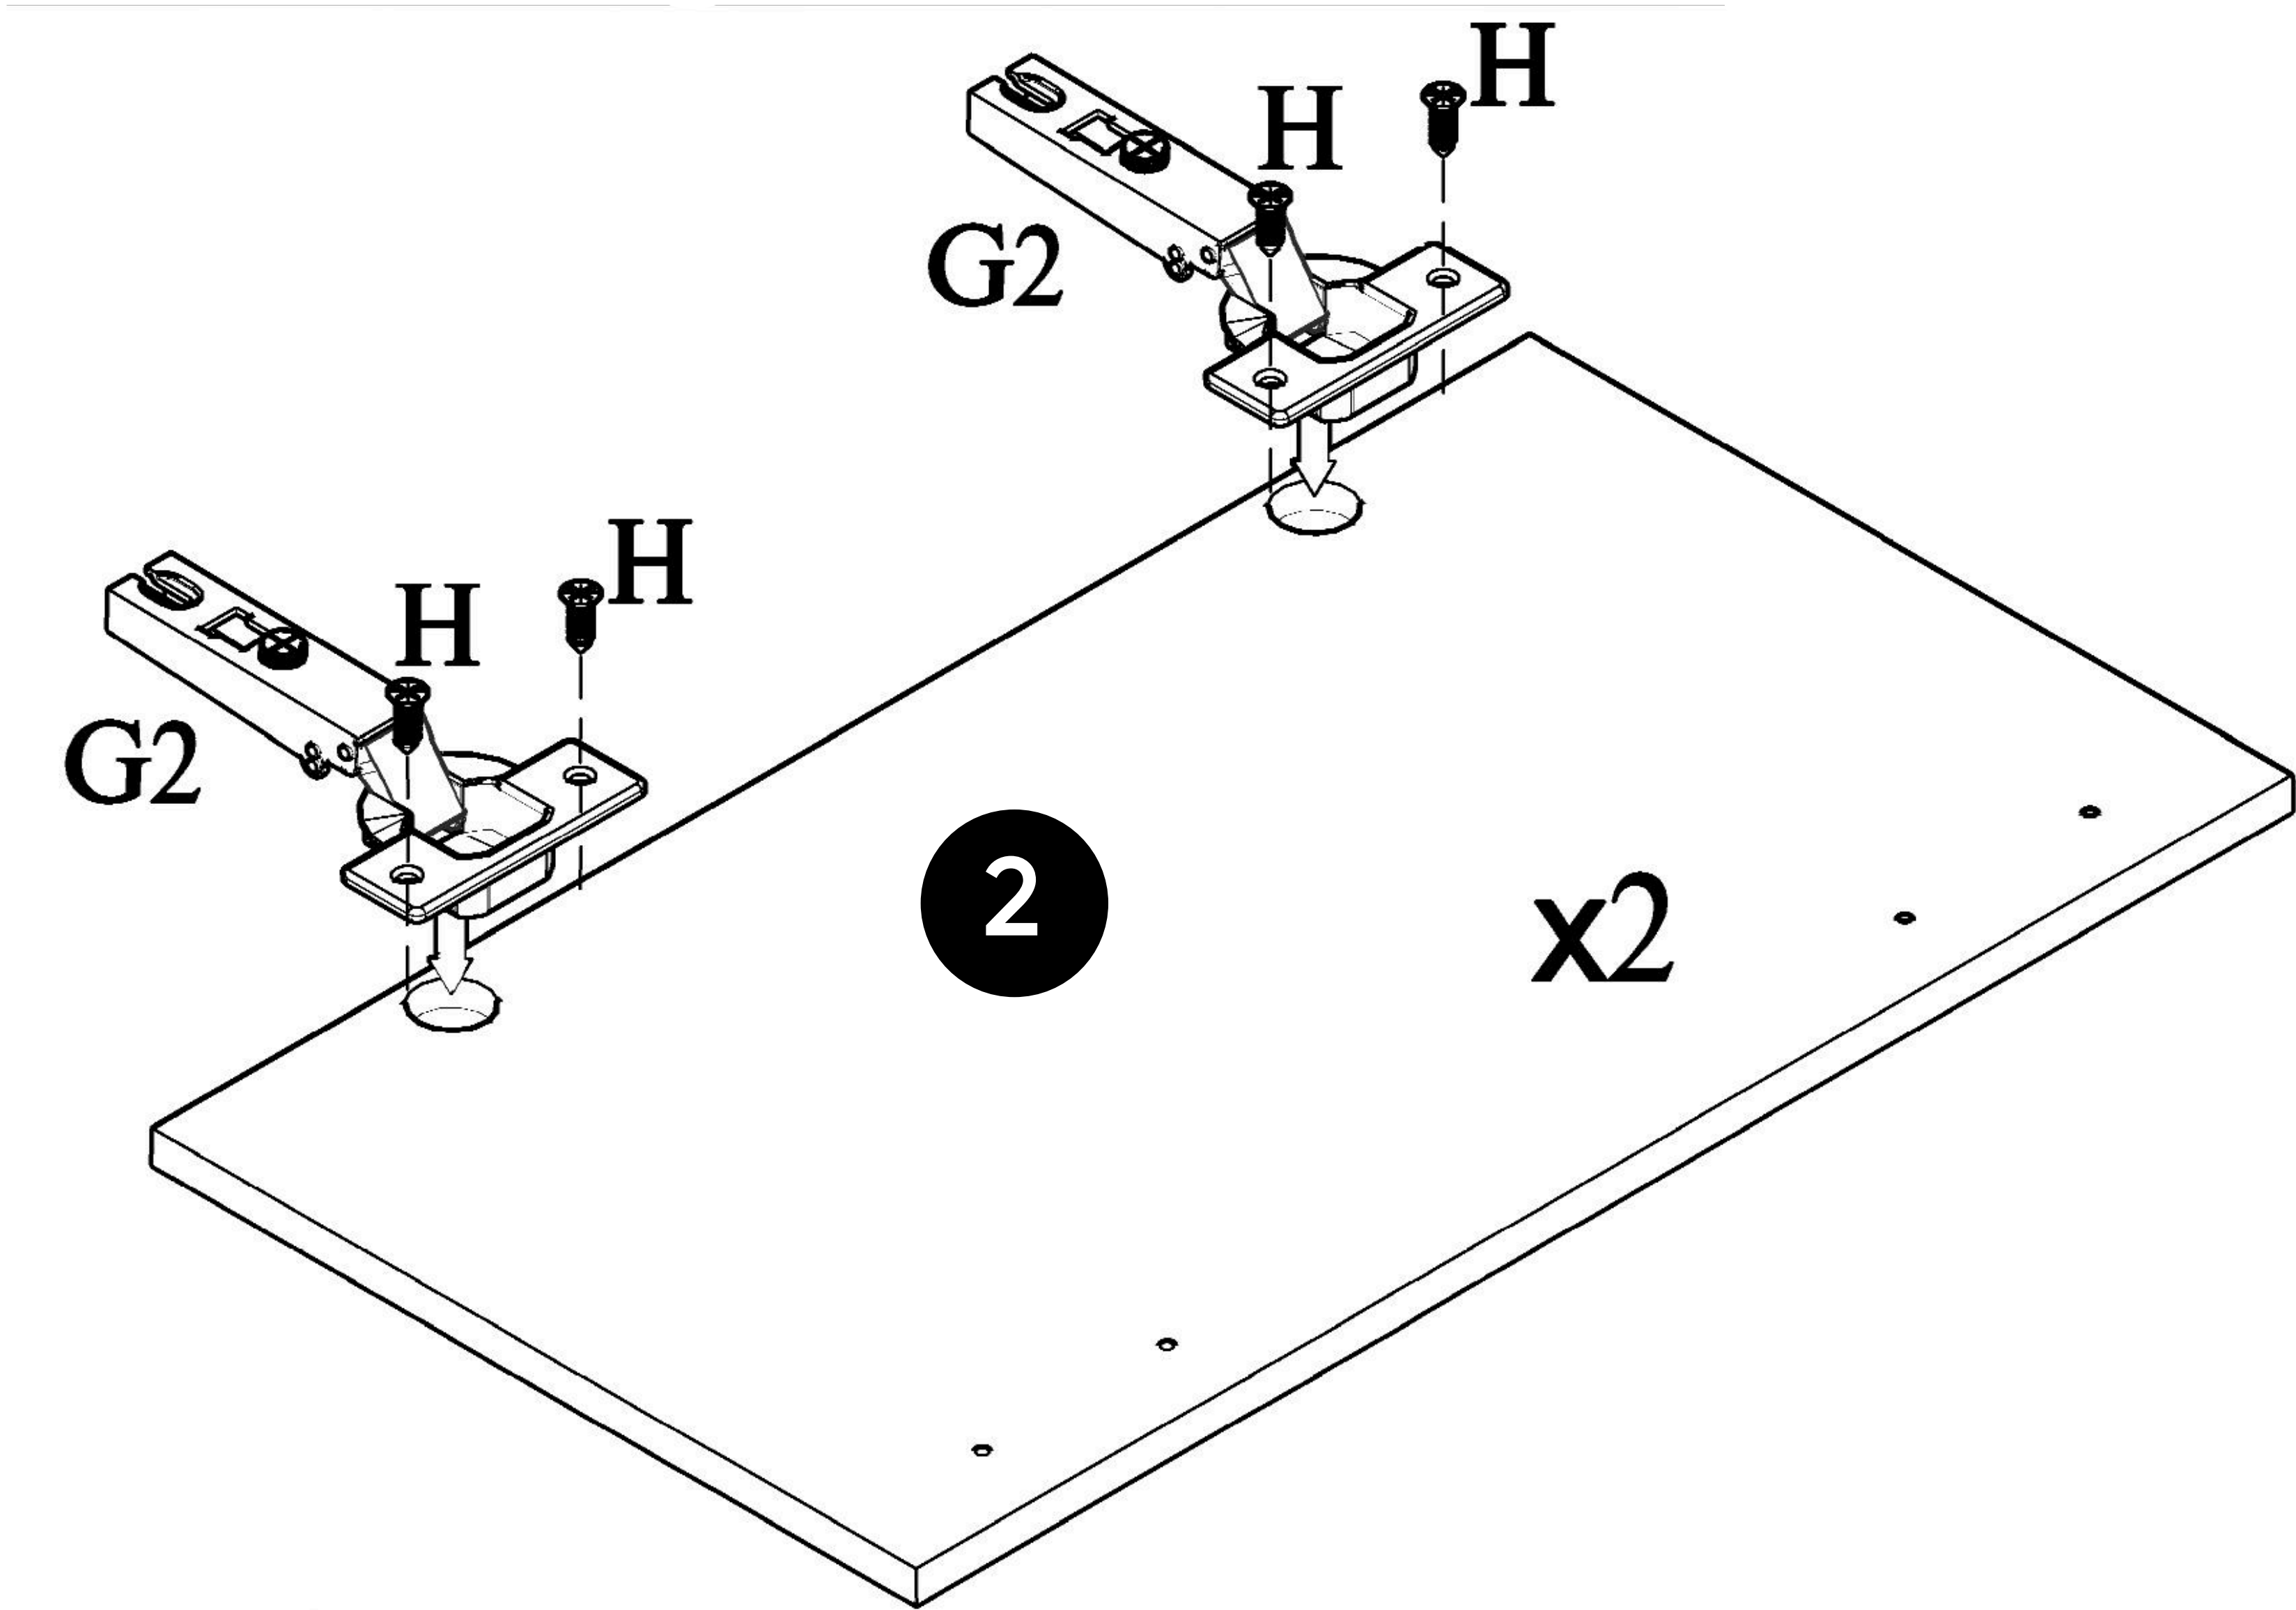


STEP - 7

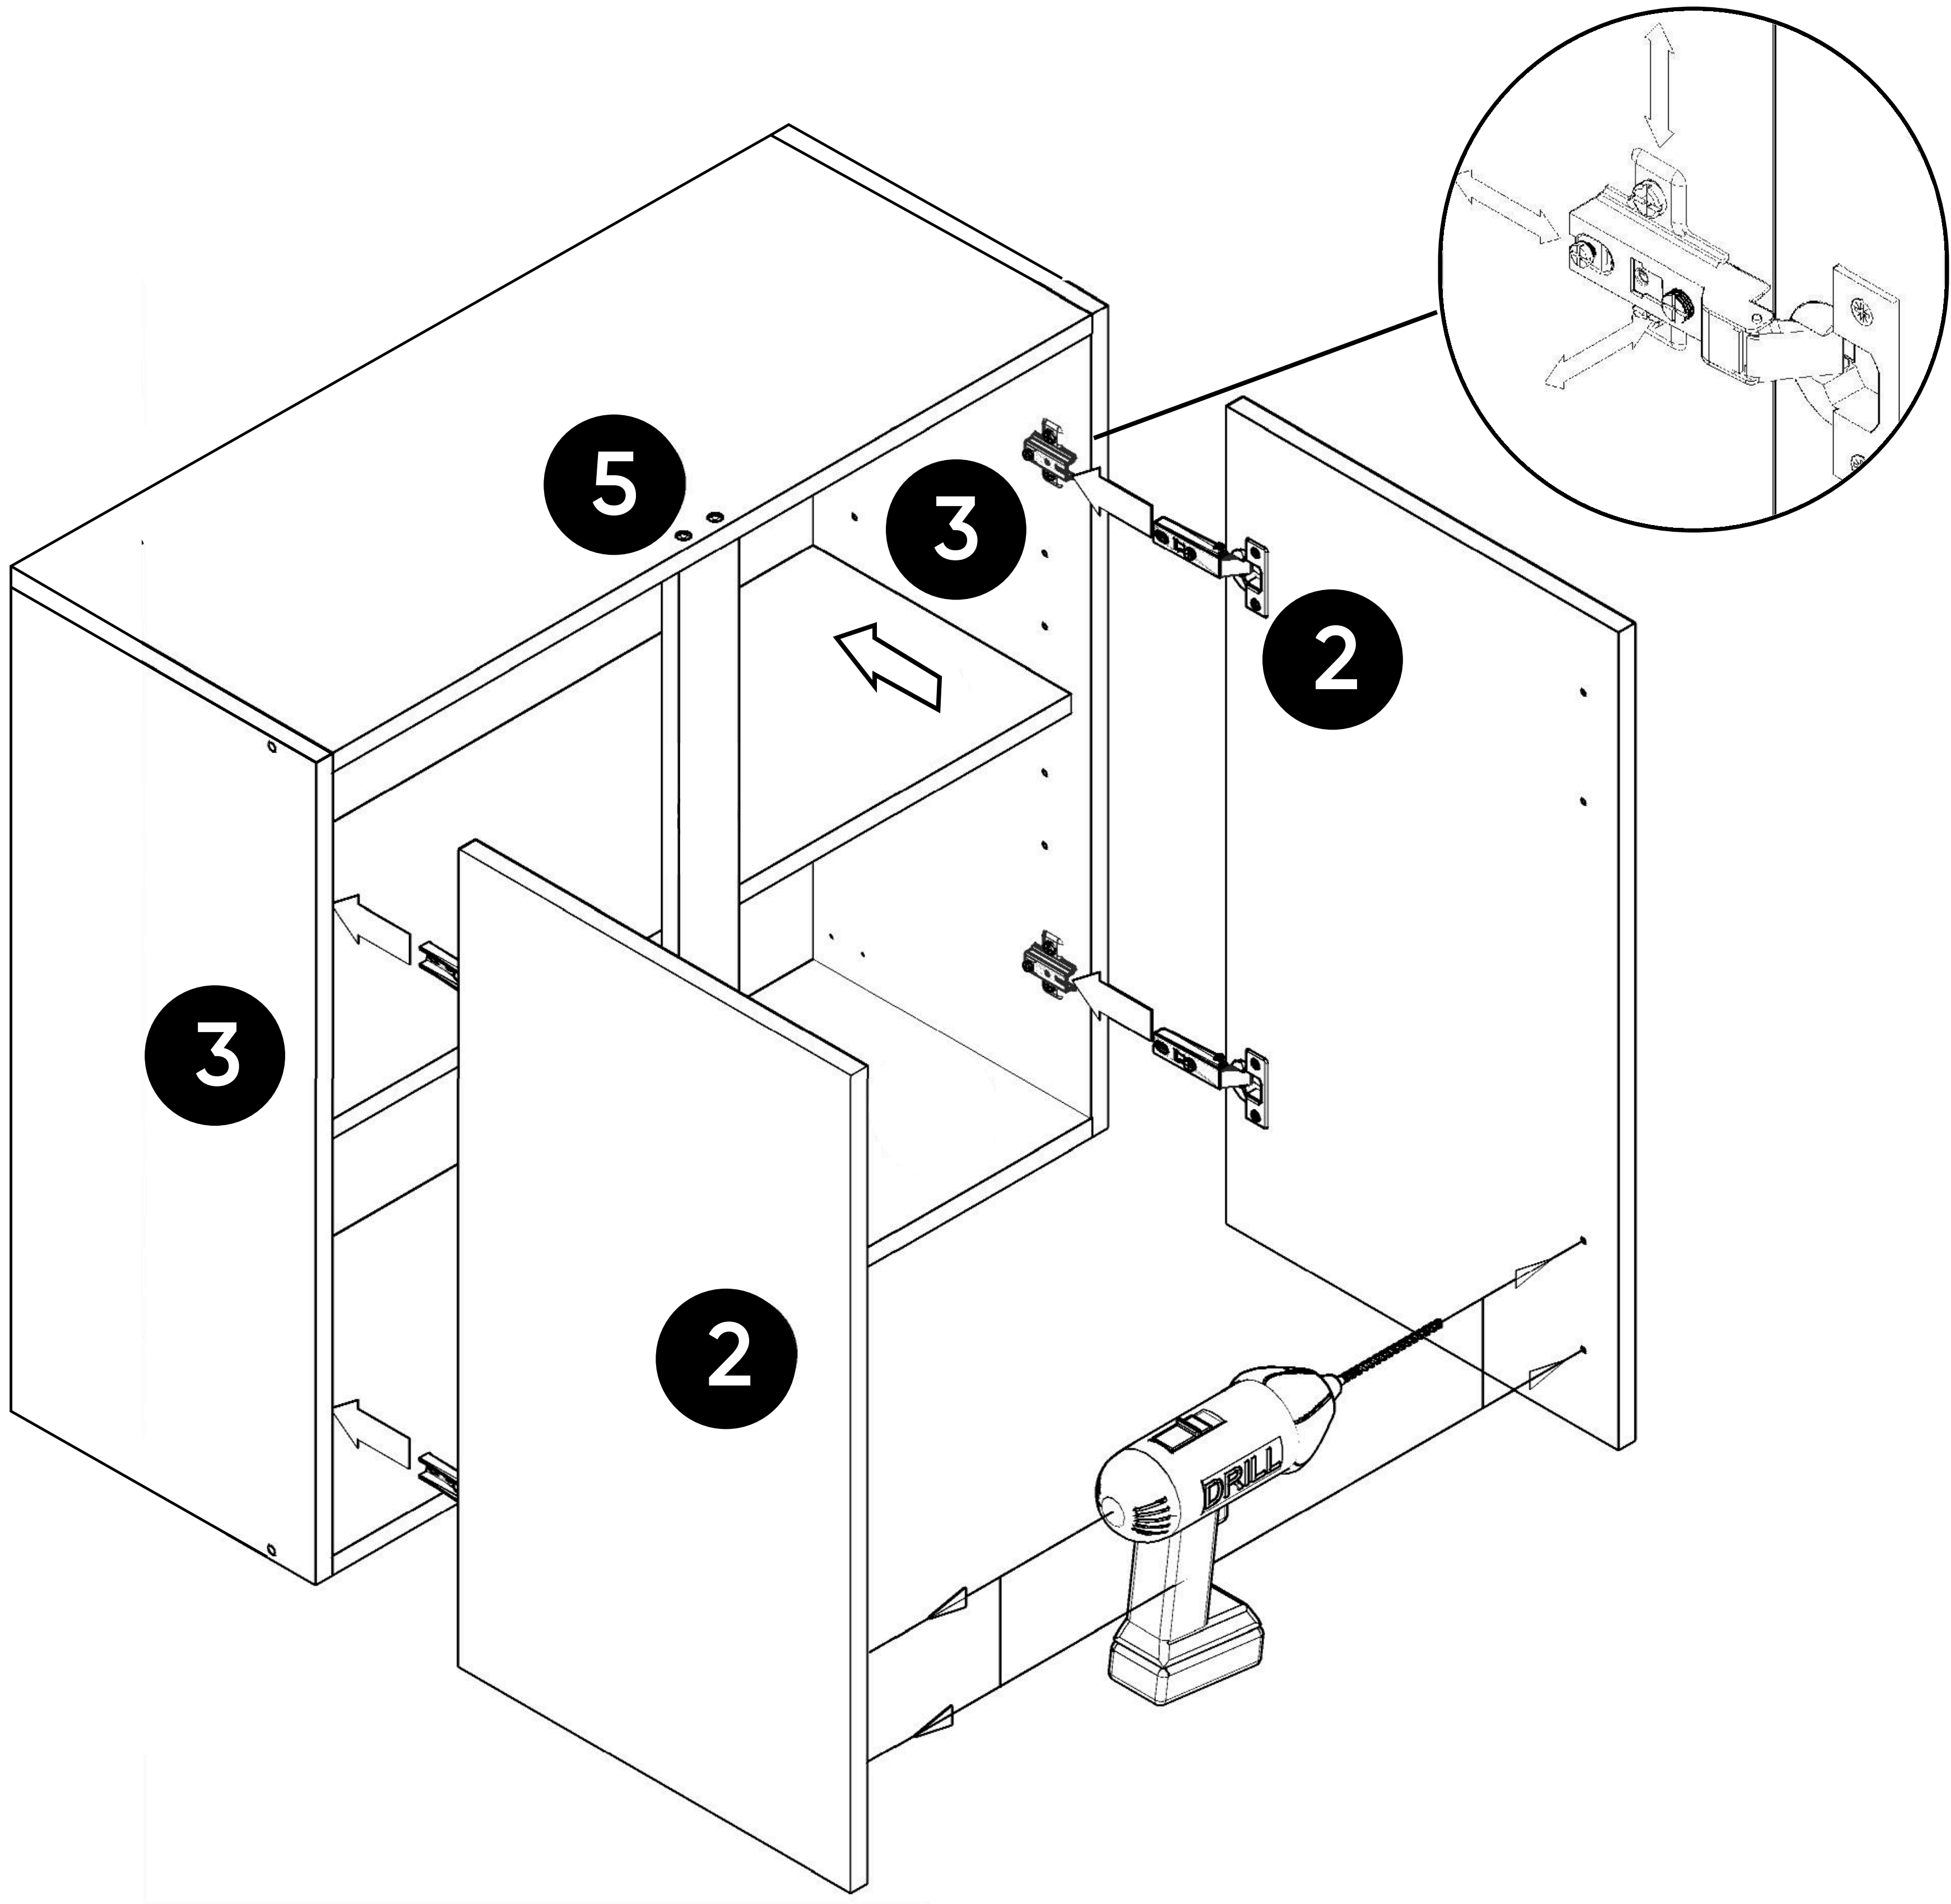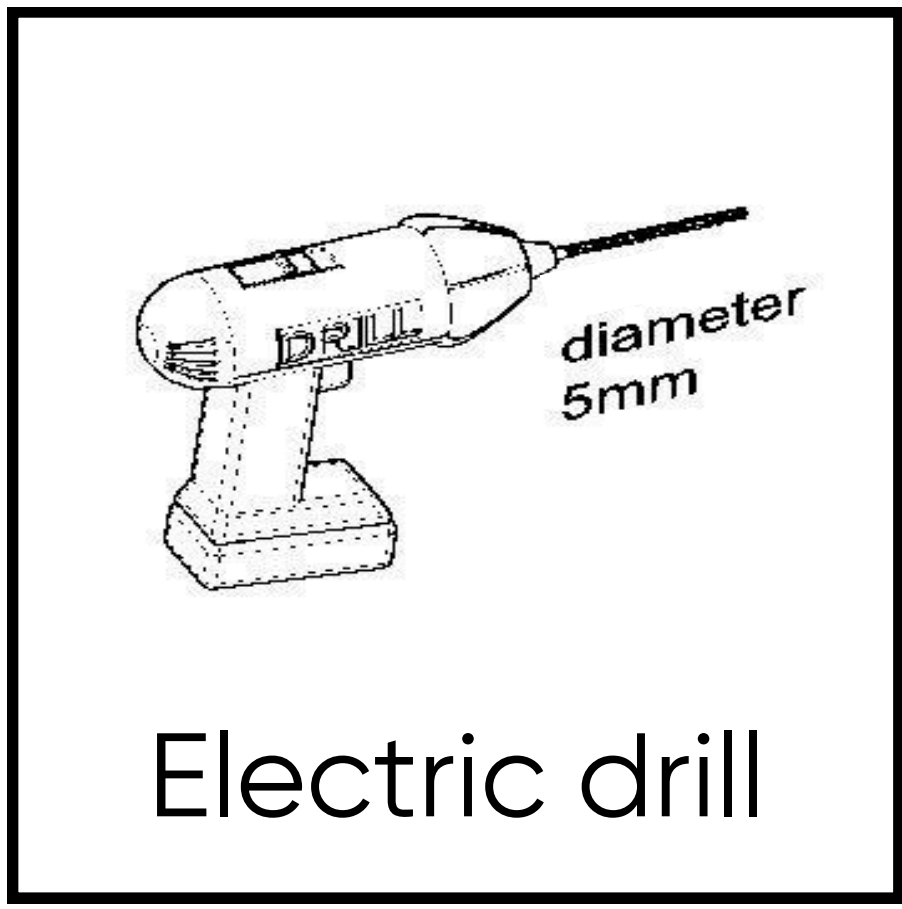


STEP - 8

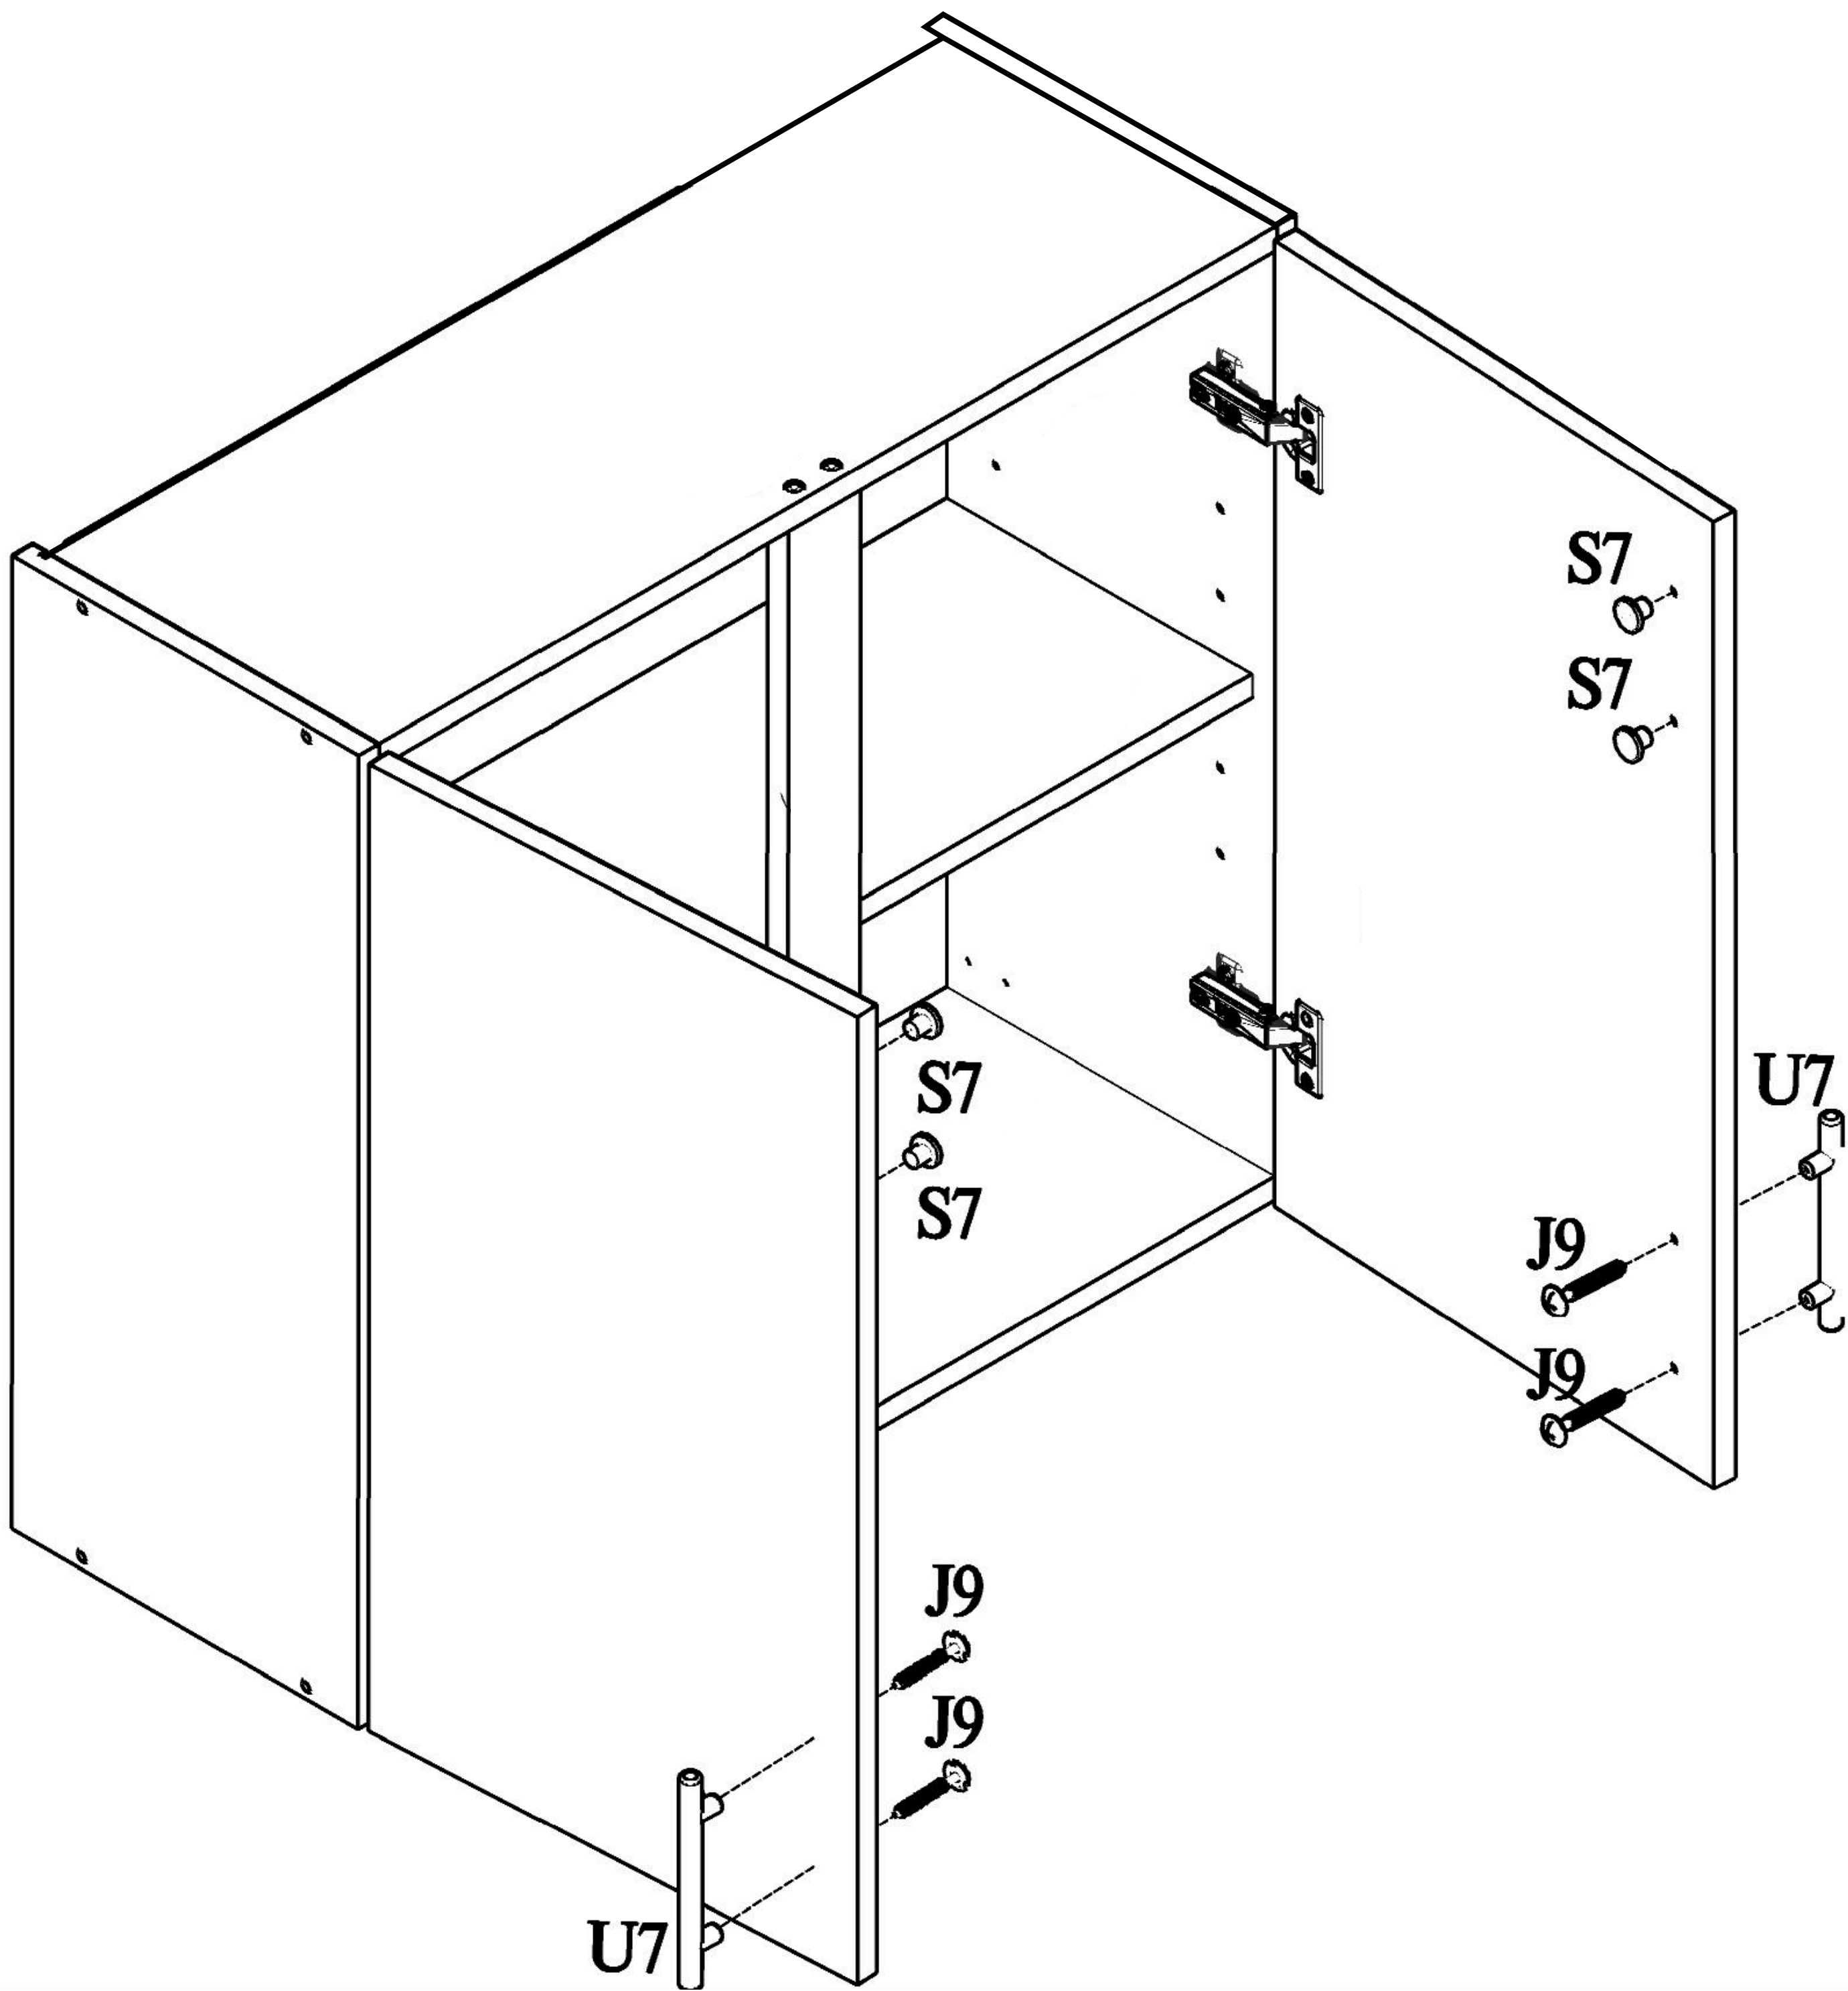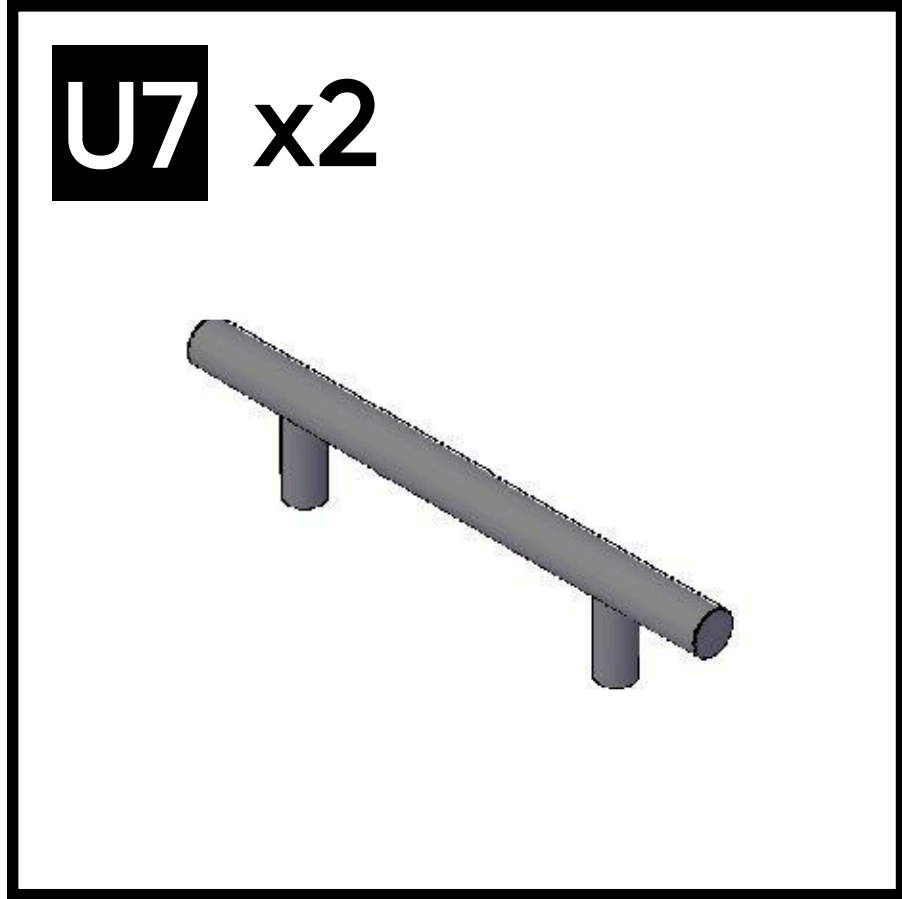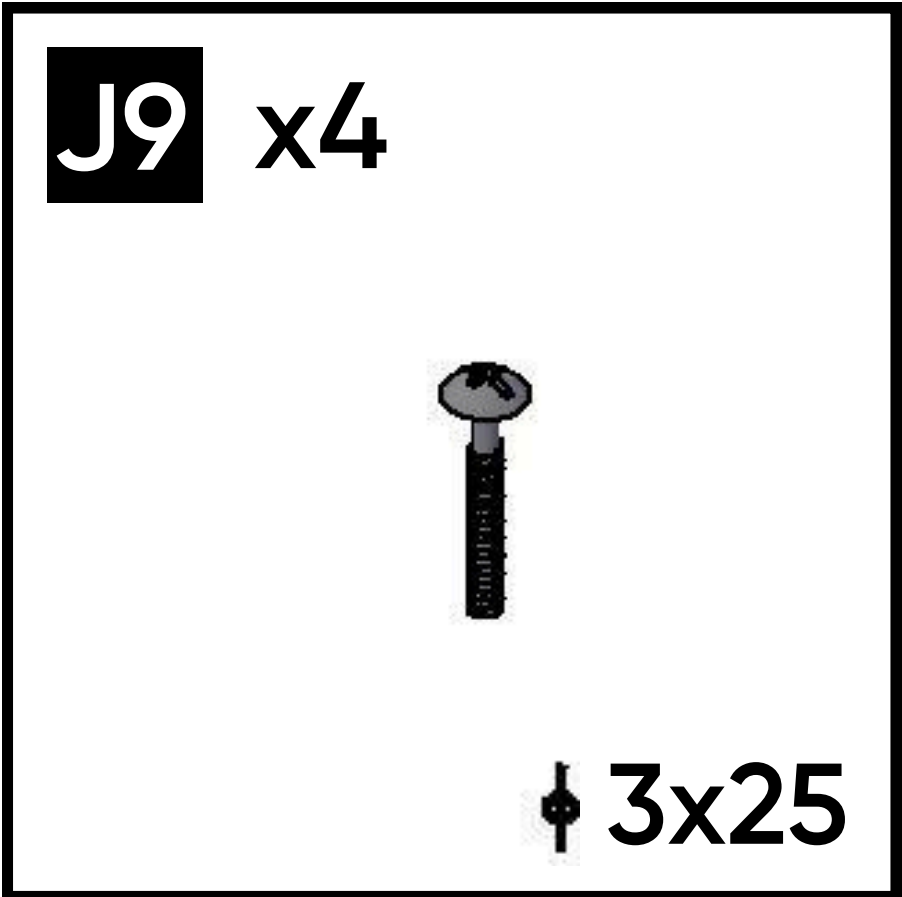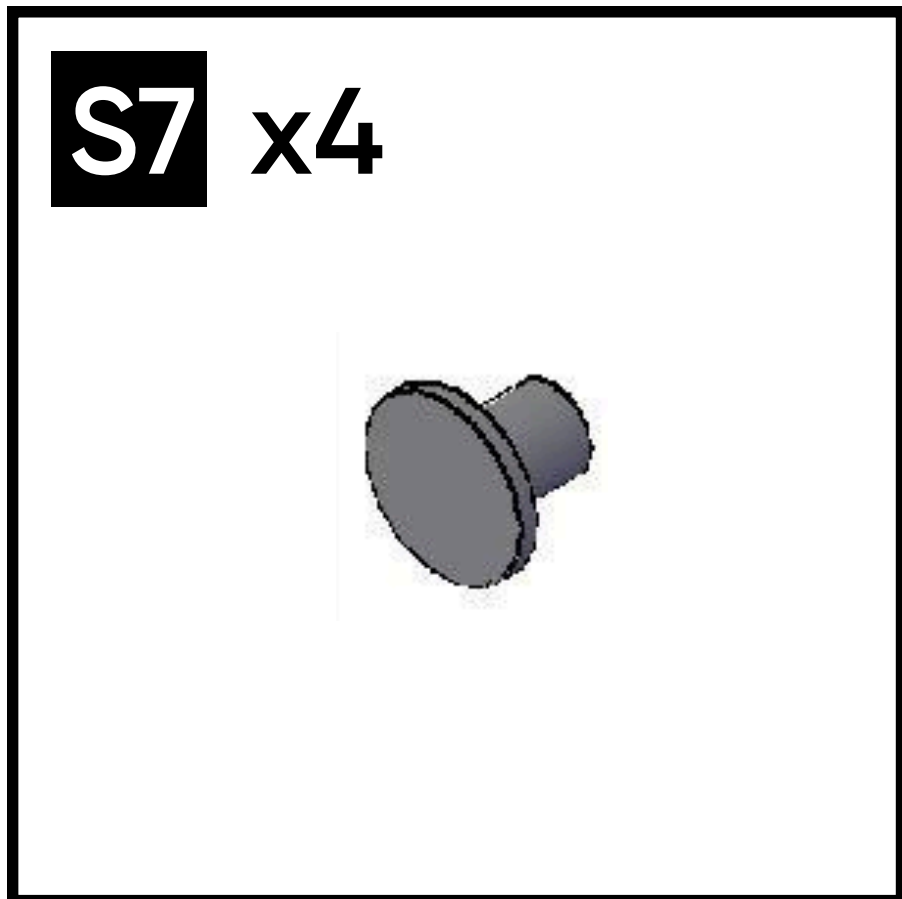

STEP - 9

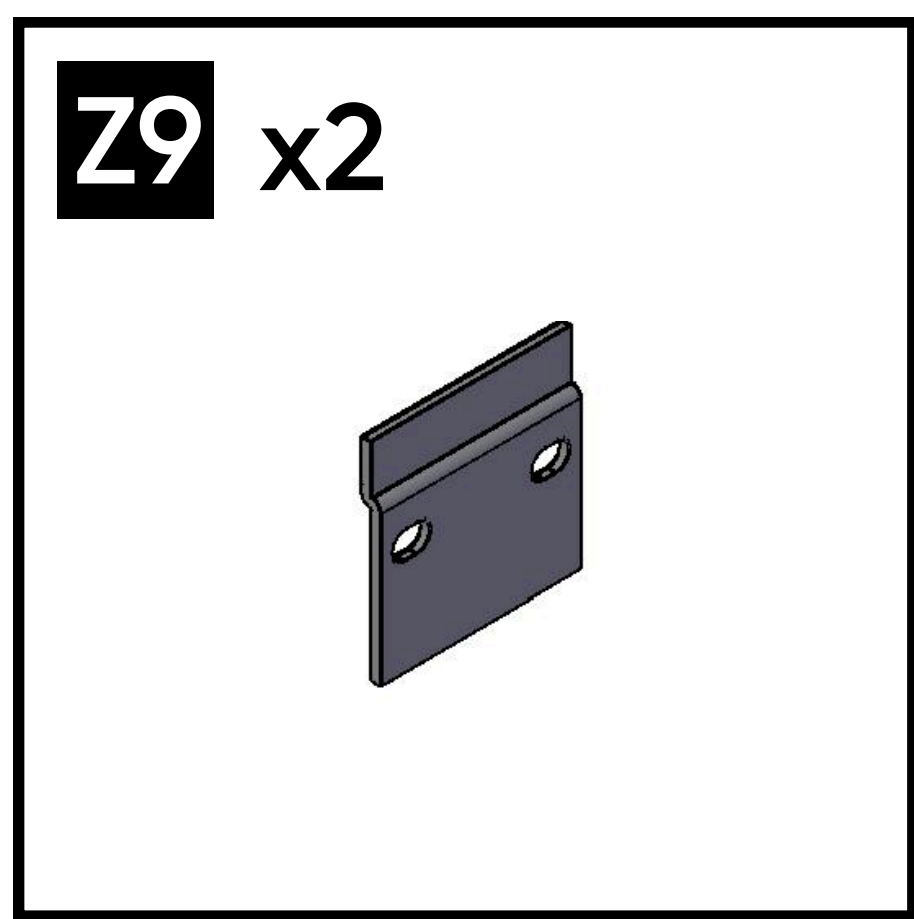

! Mounting the Z9 component to the wall

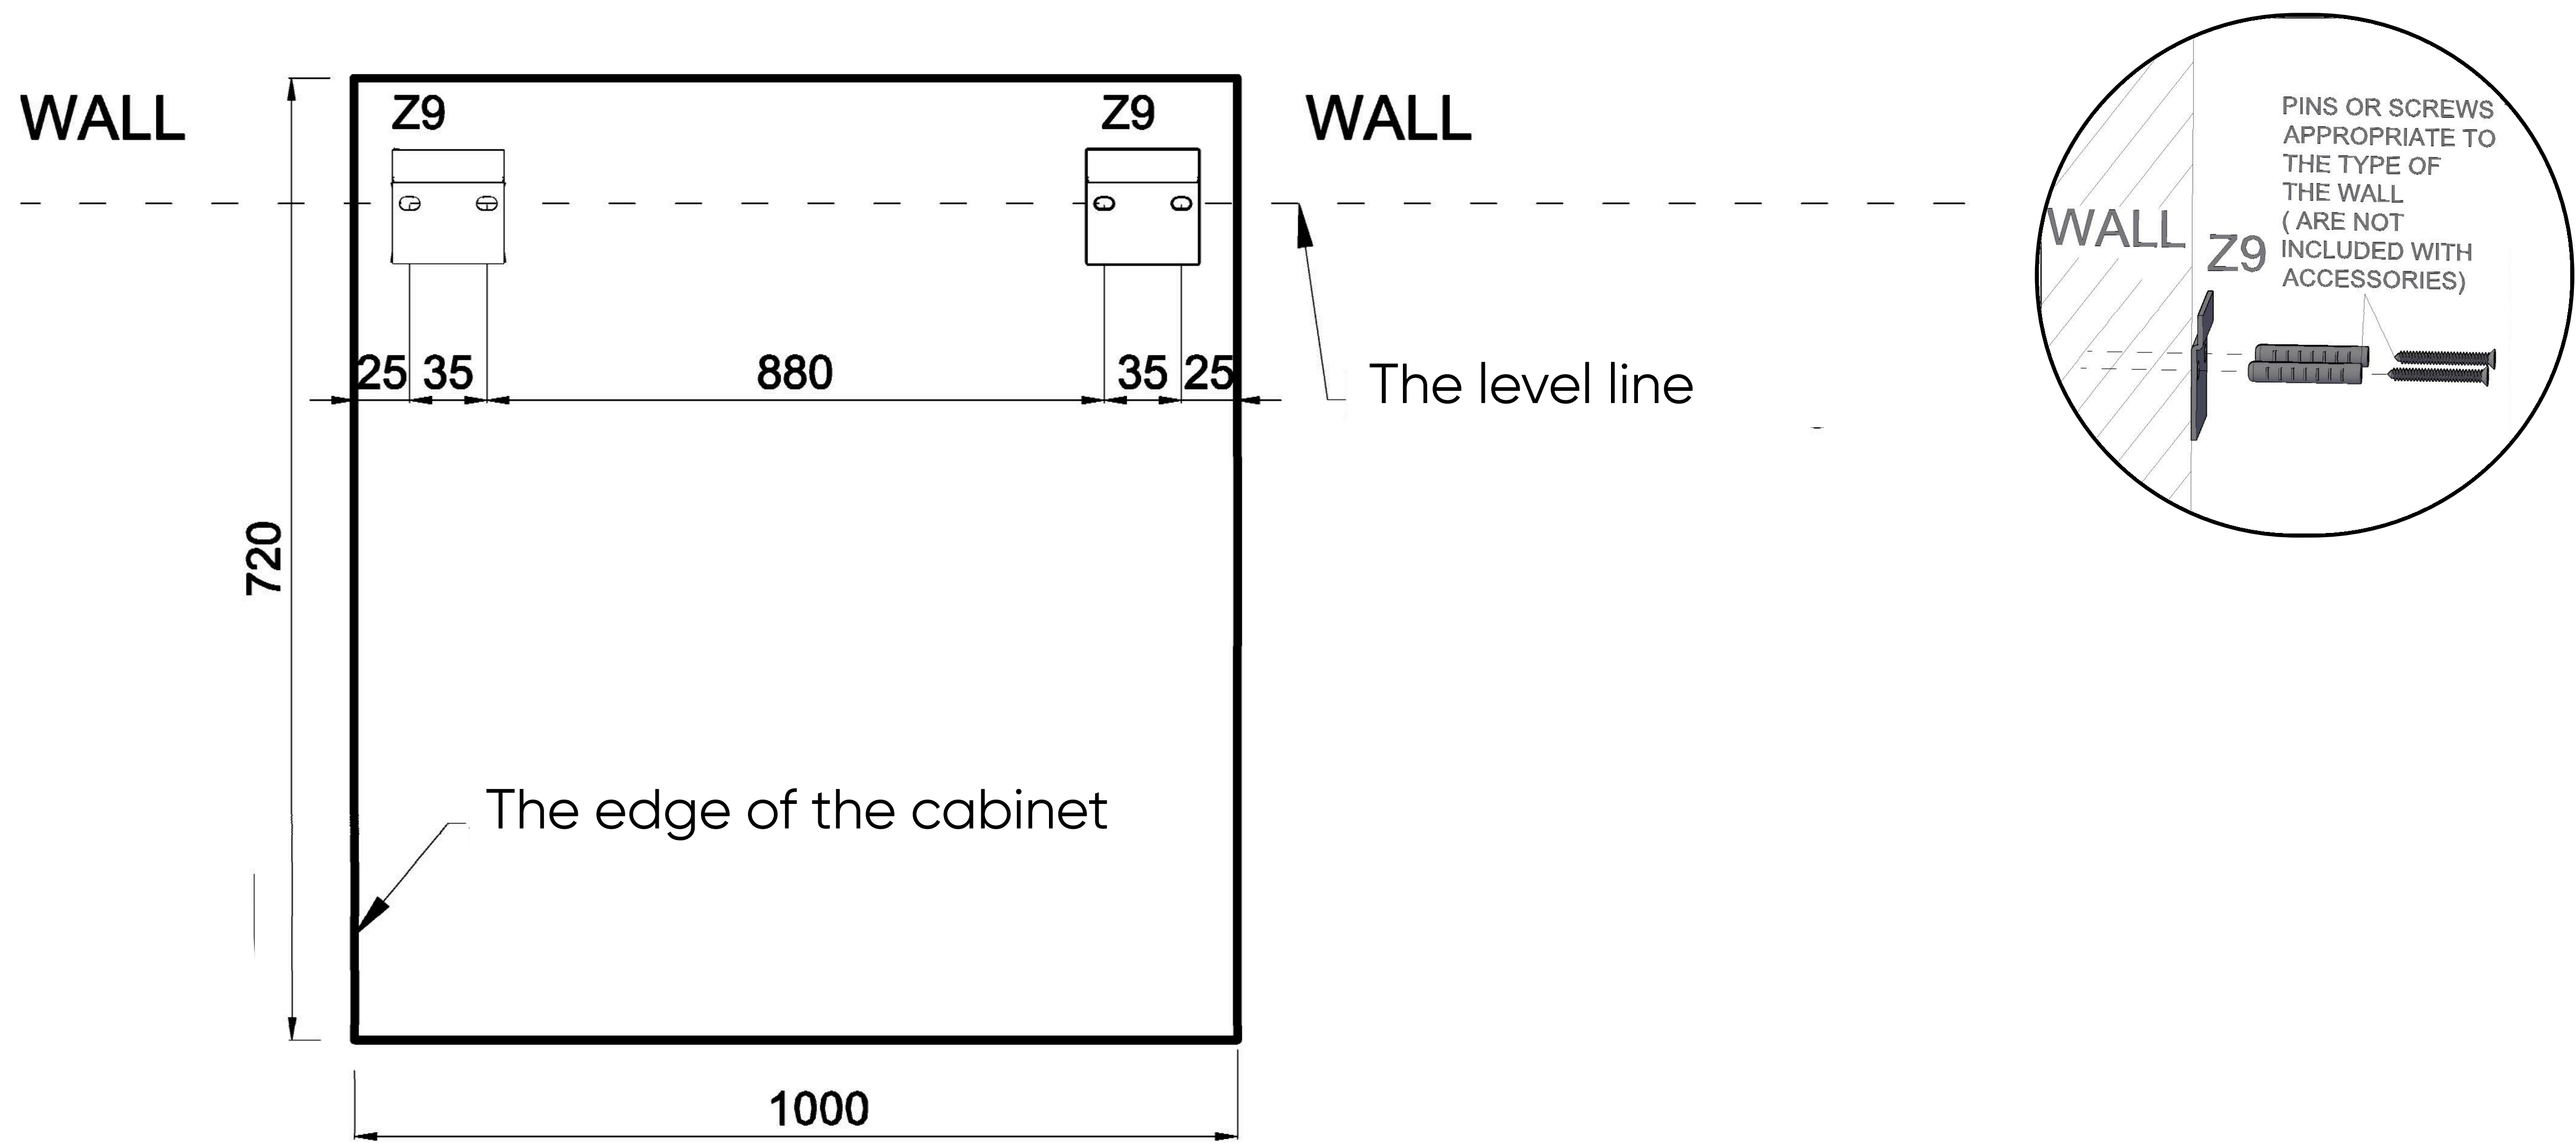

STEP - 10

