


JOSHUA

Riser rail assembly



88900024 / 88900025 / 88900026

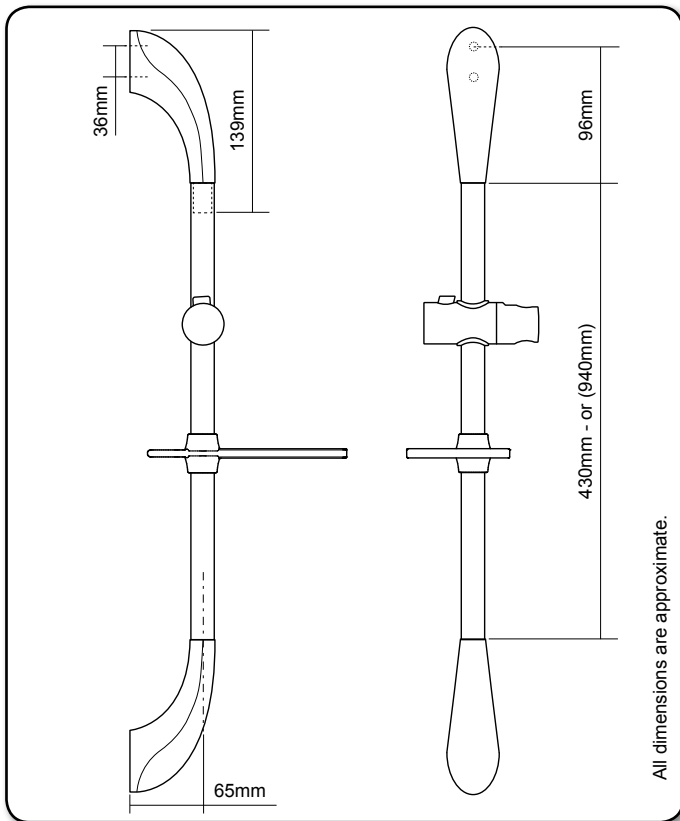

Installation Instructions

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

FITTING THE JOSHUA RISER RAIL ASSEMBLY

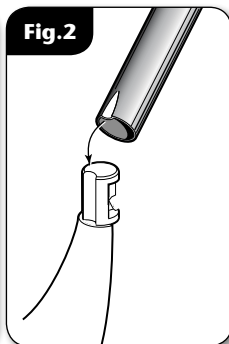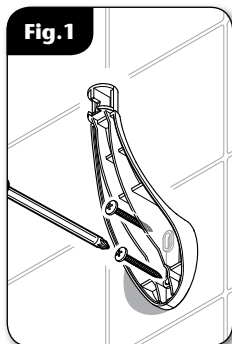


FITTING THE RISER RAIL

WARNING!

Check there are no hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended.

Decide on the position for the rail on the wall within the shower area. Proceed as follows:

- Offer one of the brackets to the wall for the lower position. Mark both holes.
- Drill and plug the wall. *(An appropriate drill bit should be used. If the wall is brick, plasterboard or a soft building block, appropriate wall plugs and screws should be fitted).*
- Replace the bracket to the wall and secure **(fig.1)**.
- Locate the rail onto this lower bracket, making sure the rail engages fully on the bracket. Check that the indent in the riser rail engages into the cut-out on the bracket end **(fig.2)**.
- Locate the second bracket on top of the rail. Check the rail is vertical then mark both holes. Remove the bracket and rail. Drill and plug the wall.
- Fit the slider/holder assembly and the soap dish onto the riser rail. The slider can be fitted with the shower head on either the left or right of the riser rail and the soap dish can be fitted either way up **(fig.3)**.

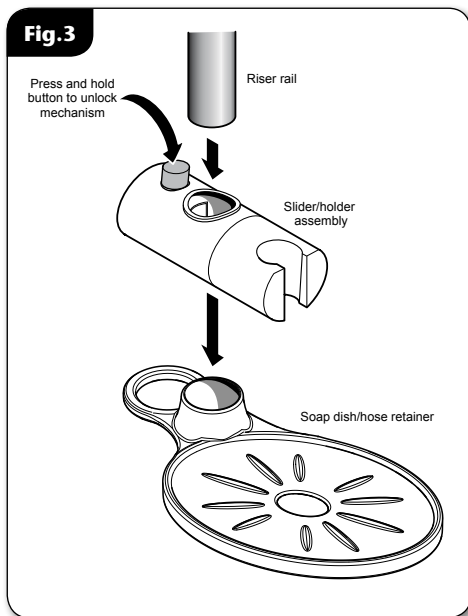

- Place the rail onto the installed lower bracket. Replace the upper bracket onto the rail and secure the bracket to the wall with the screws

FITTING THE JOSHUA RISER RAIL ASSEMBLY

supplied (**fig.4**).

- Place a trim cover onto each bracket. Make sure the large tab at the narrow end of the trim cover fits into the slot between the rail and bracket (**fig.5**) before pushing and clicking the other end into place.

Should the need arise, the trim covers can be removed by inserting a screwdriver into the slot and carefully levering off the trim.

FITTING THE HOSE AND SHOWER HEAD





- Feed the flexible hose through the appropriate soap dish opening (**fig.6**) so that the dish acts as a retaining ring (*The hose retainer **MUST** be used to comply with Water Regulations*).

Note: *The holder is slightly tapered and the shower head and hose will only fit from one direction.*

- Screw the flexible hose onto the shower outlet and shower head (**fig.7**), making sure the supplied washers are in place at both ends of the flexible hose.
- Place the shower head into the holder (**fig.8**) and check that it fits correctly.

IMPORTANT: This riser rail assembly is supplied with a hose retainer. Water Regulations require the fitting of a double check valve or similar device in the supply pipework to prevent backflow if the retainer is not used.

IMPORTANT: It is the conical end of the hose which grips into the holder. The shower head will not fit in the holder without the hose attached.

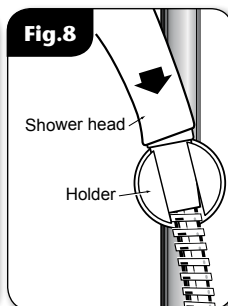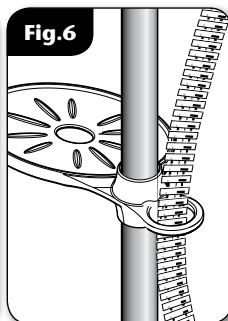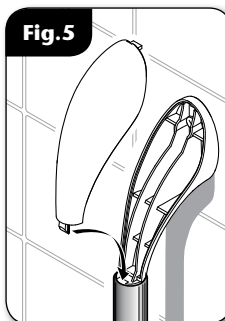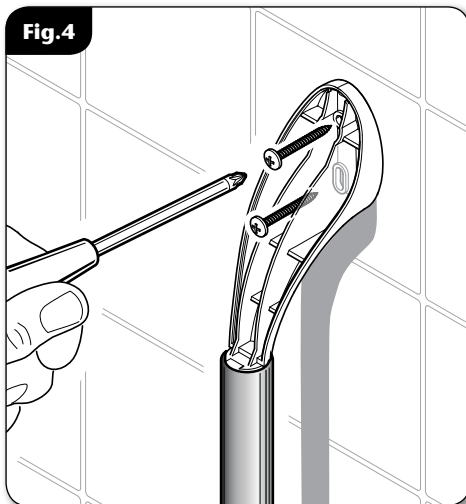


SPARE PARTS

Ref. Description	Part Number
------------------	-------------

- | | |
|------------------------------------|----------|
| 1. Brackets & trims | |
| white..... | 83315940 |
| satin..... | 83315950 |
| chrome..... | 83315960 |
| 2. Riser rail Ø22mm | |
| 430mm - polished | |
| stainless steel..... | 88800025 |
| 430mm - white..... | 88800030 |
| 430mm - chrome..... | 88800026 |
| 940mm - anodised..... | 88800027 |
| 3. Shower head holder Ø22mm | |
| white..... | 83313470 |
| satin..... | 83314200 |
| chrome..... | 83314210 |
| 4. Soap dish | |
| white..... | 7054123 |
| clear..... | 7054124 |

Flexible hoses available in the following sizes:

- 1.00 m in white, chrome and gold
- 1.25 m in white, chrome and gold
- 1.75 m in chrome only

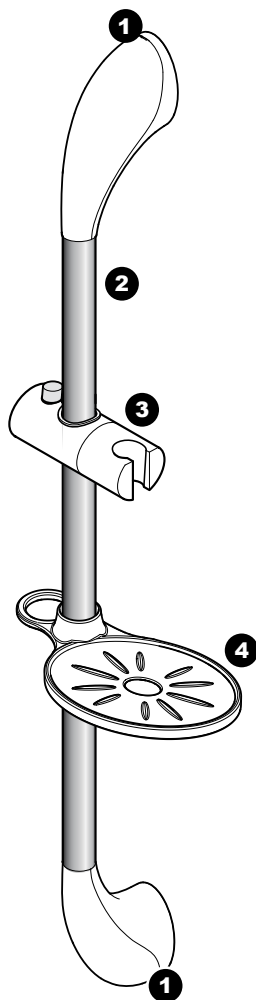

Please refer to shower installation and operating instructions for service details