


Mia 6 Drawer Chest - White

Assembly Instructions - Please keep for future reference

8573429

HOME

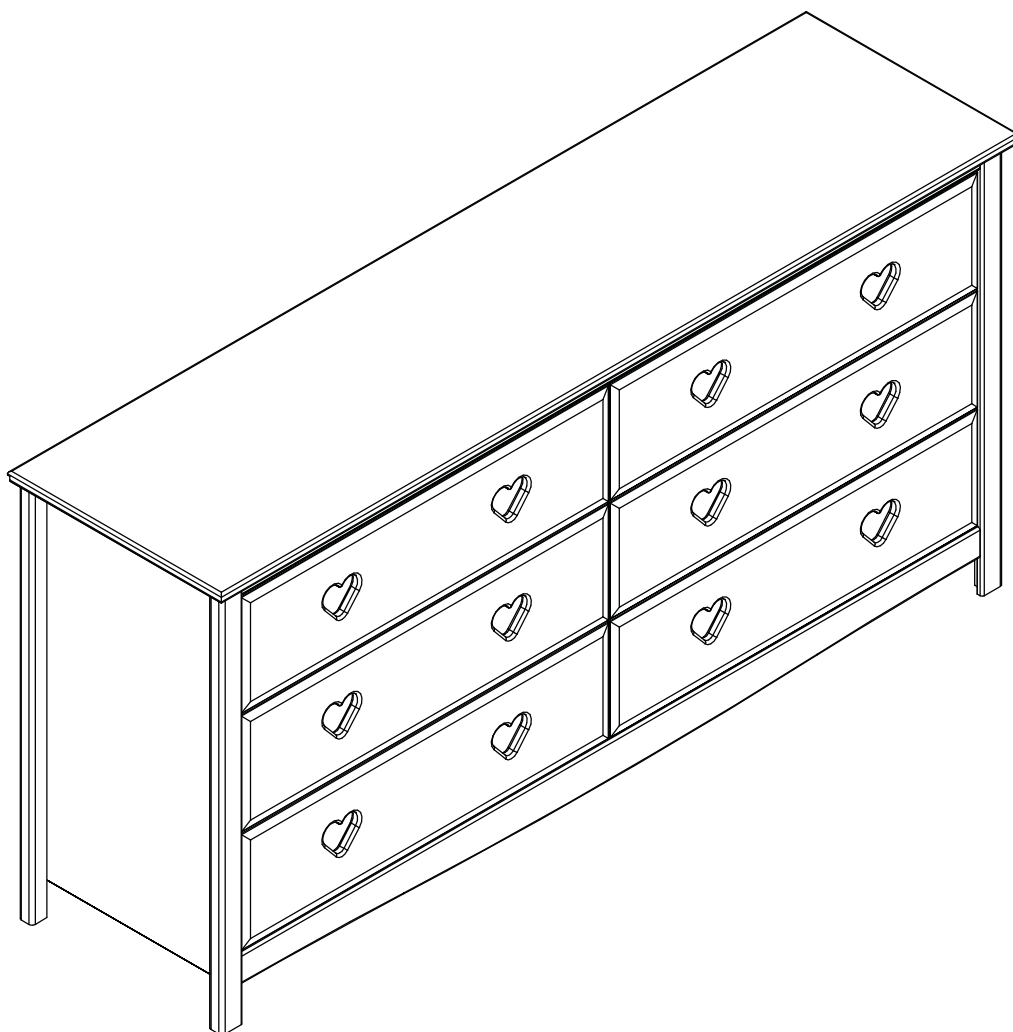

Dimensions

Length - 149.4cm

Depth - 40cm

Height - 73cm

Weight - 43kg

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**

0045 7668 8055 or e-mail: order@flexa.dk

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- During assembly children should be kept away from the product due to possible risk of injury.
- Make sure you have enough space to layout the parts before starting.
- This product is suitable for children in the age range 3 to adult

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Do not use this item if any components are missing or damaged



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Assembly to be carried out by a competent adult only.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Regularly check all fastenings to ensure that they properly tightened.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- This product is suitable for children in the age 4-12 years. Maximum load on chest 30 kg. Maximum load in each drawer 7 kg.


Components - Parts

If you have damaged or missing components,
call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

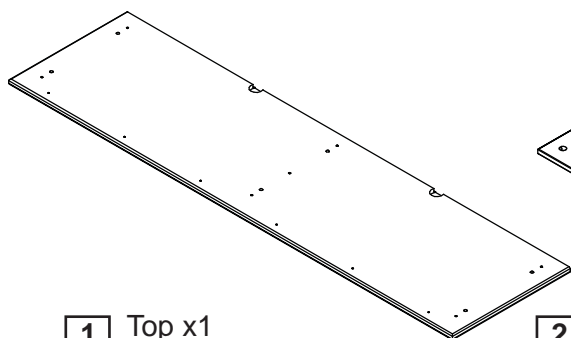


1 Top x1
(149.4x40.0x1.6cm)
No. 4301-1614941-40

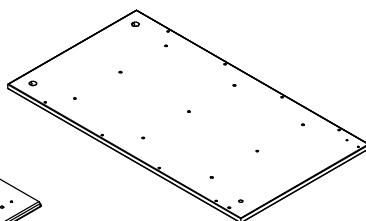


2 Side panel Right x1
(65.4x36.1x1.2cm)
No. 4301-1206541-40

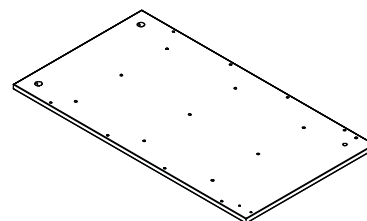


3 Side panel Left x1
(65.4x36.1x1.2cm)
No. 4301-1206542-40

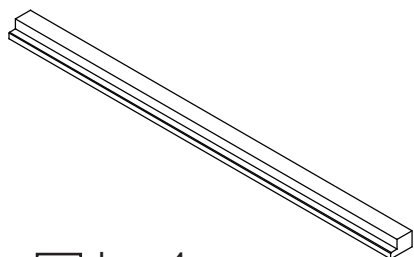


4 Leg x4
(71.4x4.0x2.6cm)
No. 12-02607141-20

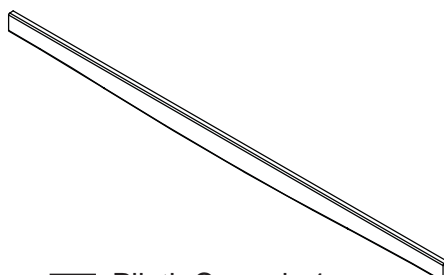


5 Plinth Curved x1
(138.2x6.5x1.5cm)
No. 12-01513821-40

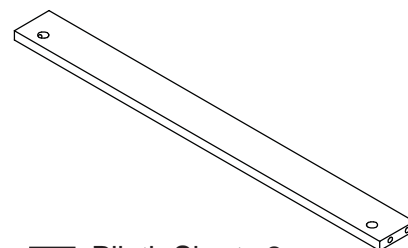


6 Plinth Short x2
(68.3x6.5x1.5cm)
No. 12-01506831

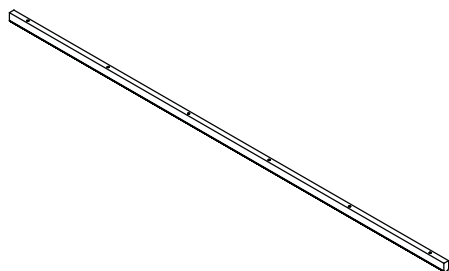


7 List Long x1
(138.2x2.5x1.5cm)
No. 12-01513822-40

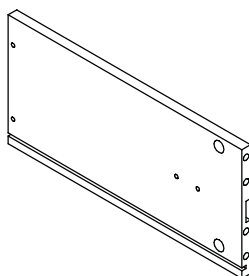


8 Drawer side Right x6
(35x16.7x1.3cm)
No. 15-01303503

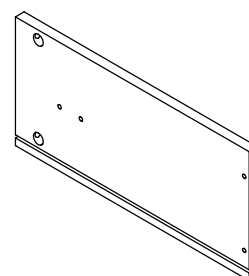


9 Drawer side Left x6
(35x16.7x1.3cm)
No. 15-01303504

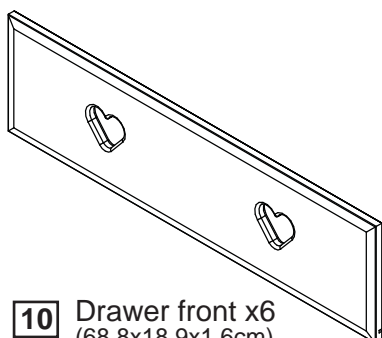


10 Drawer front x6
(68.8x18.9x1.6cm)
No. 4301-1606887-40

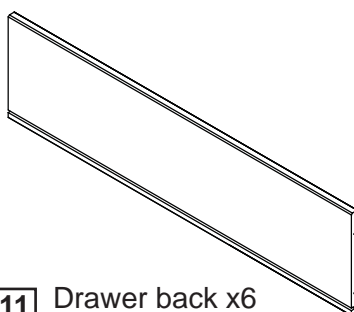


11 Drawer back x6
(64.2x16.7x1.3cm)
No. 15-01306421

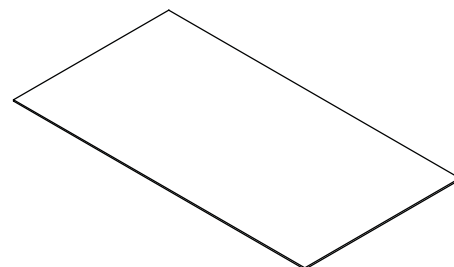

12 Drawer base x6
(65.4x34.8x0.3cm)
No. 4309-0306541

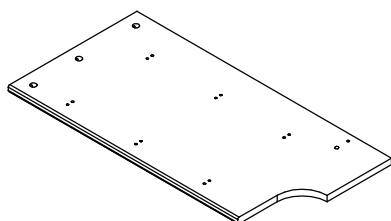

13 Partition x1
(71.4x36.1x1.6cm)
No. 4301-1607142-40

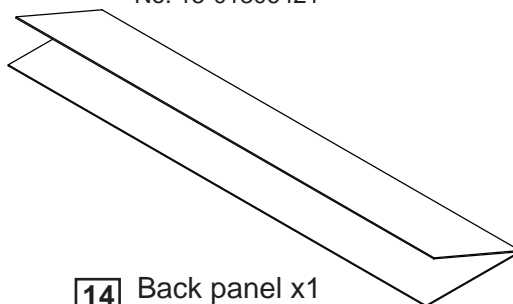


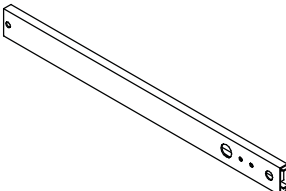















14 Back panel x1
(140.6x62.8/31.4x0.3cm)
No. 4309-0314061

Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



A  No. 4020-007 Ø7x34mm Minifix bolt x33	B  No. 3933-15010 Ø15x9.5mm Minifix cam x35	C  No. 3903-40030 4.0x30mm Chipboard screw x16
D  No. 4010-027 310x27x10mm Drawer slide x12	E  No. 3940-00009 Ø18/Ø6,5x9.0mm Spacer x18	F  No. 4022-004 1.6x16mm Nail square x48
	G  No. 4008-112 44x23x23 Angle x2	H  No. 3930-08030 Ø8x30mm Dowel x34
i  No. 3901-35035 3.5x35mm Chipboard screw x30	J  No. 3912-04009 Ø9.5/M4x9mm Machine screw x12	K  No. 3901-35012 3.5x12mm Chipboard screw x2
L  No. 41-00179 Overbalance protector x2	M  No. 3907-42010 Ø4.2x9.5mm Euro screw x8	N  No. 3907-58019 Ø5.8x19mm Euro screw x30
O  No. 3924-04015 Ø5/M4x15mm Sleeve connector x1	P  No. 4008-037 21x21x16mm Angle x1	Q  No. 4020-006 Ø7x34mm Minifix bolt x2

Tools required


Phillips
screwdriver
(medium)



Flatblade
screwdriver
(medium)

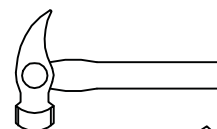

Small
hammer



Ruler/tape
measure



Eye protection
(when using a
hammer or glue)


Assembly Instructions

Step 1

Insert the dowels **H** into the holes in short plinths **6**.

It may be necessary to tap the dowels in very gently with a small hammer.


Attach minifix bolts **A** to top panel **1**.

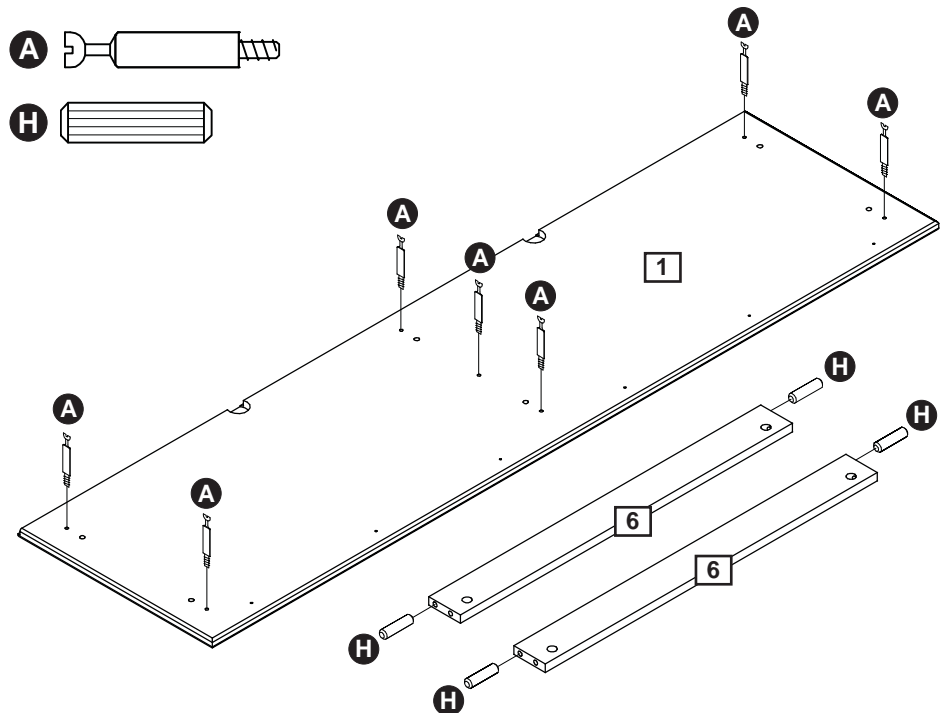

Step 2

Attach the side panels **2** and **3** to the legs **4** using screws **C**.

Make sure the top of the side panel is flush with the legs and there are no gaps between the side panel and the edge of the groove in the legs.

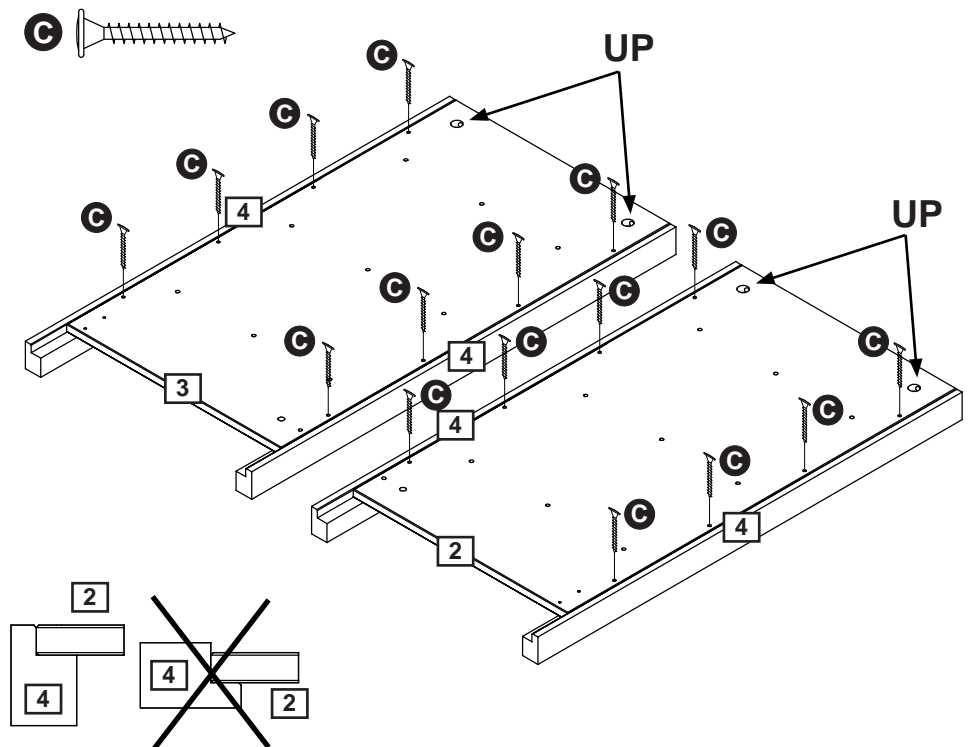

Assembly Instructions

Step 3


Insert the dowels **H** to the holes in the side panels **2** and **3**.

Attach minifix bolts **A** to the side panels **2** and **3**.

Attach the drawer runners **D** to the side panels **2** and **3** with euro screws **N**. Start from the third hole from the front of the metal runner **D** and align the rest as instructed on the pictures.

Note that the runners need to be attached with spacers **E** placed between the side panel and runner.

Be aware of the front edge!

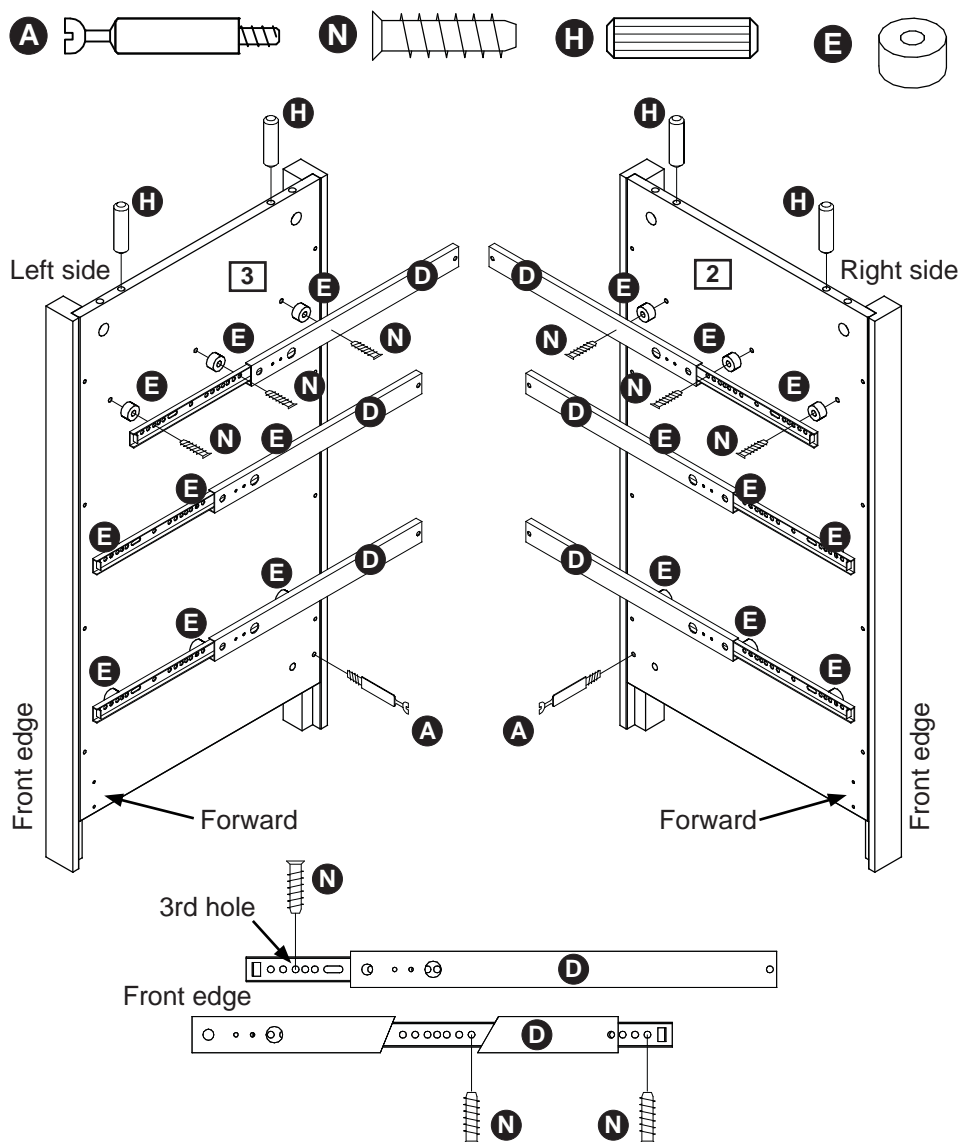


Step 4

Insert the dowels **H** into the holes in the partition **13**.

Attach drawer runners **D** to the partition **13** with euro screws **N**. Start from the fifth hole from the front of the metal runner **D** and align the rest as instructed on the pictures.

Be aware of the front edge! Note that the screws must be inserted from different holes in the runners!

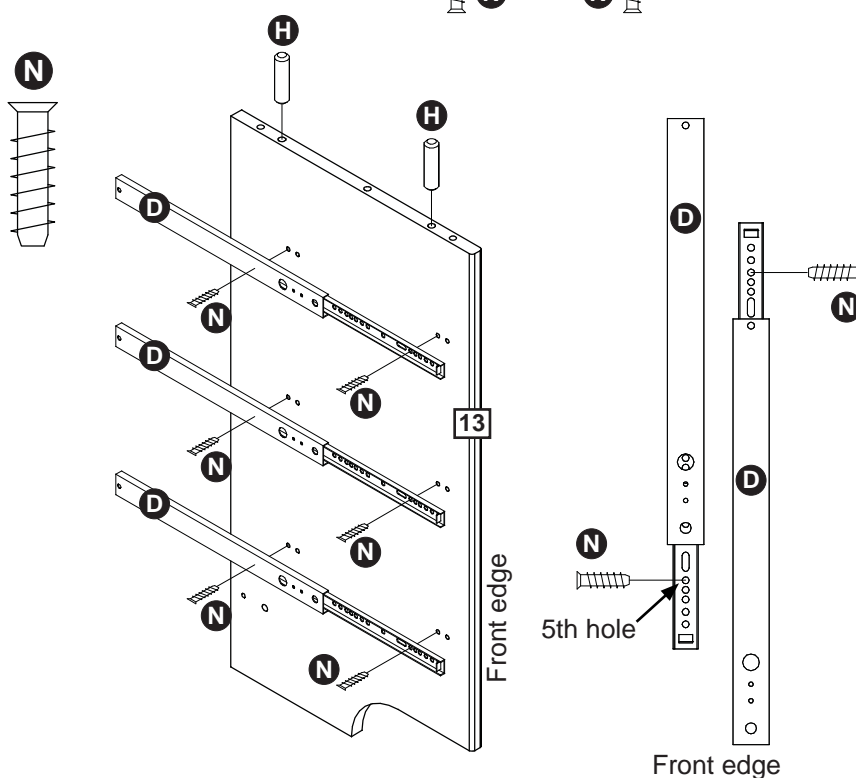


Assembly Instructions

Step 5

Attach second set of drawer runners **D** to the partition **13** with euro screws **N**. Start from the third hole from the front of the metal runner **D** and align the rest as instructed on the pictures.


Be aware of the front edge! Note that the drawer screws must be inserted from different holes in the runners!

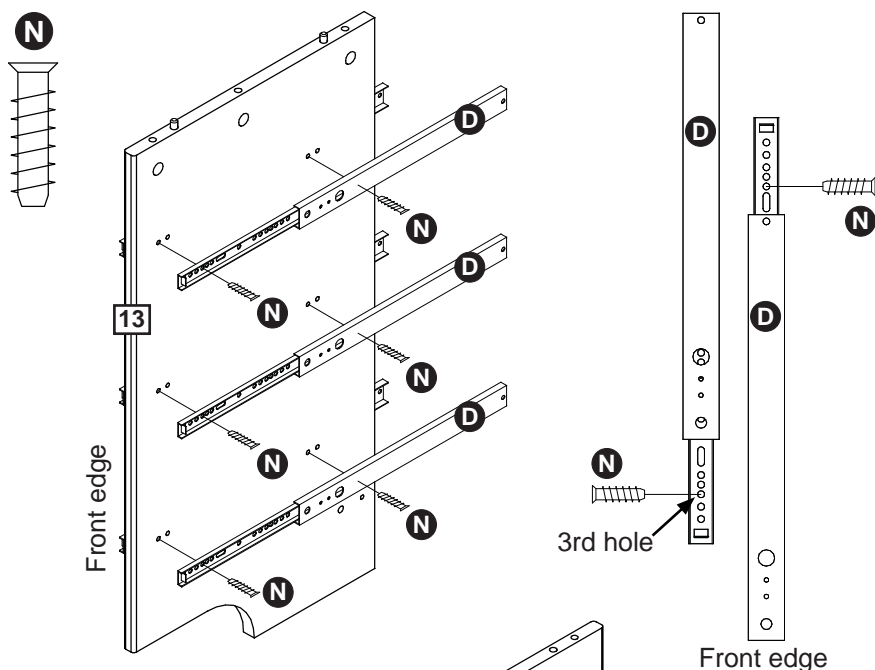

Step 6


Insert sleeve connector **O** into the hole inside partition **13**.

Attach minifix bolts **Q** to the sleeve connector **O** inside partition **13**.

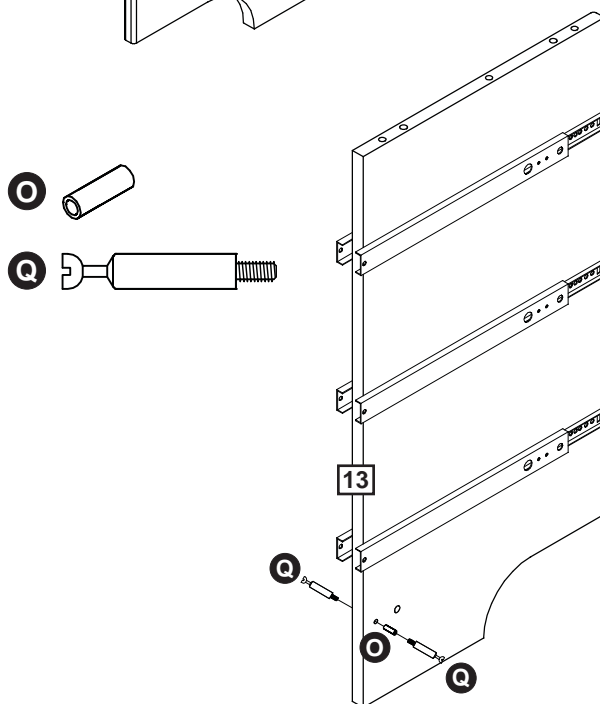

Step 7


Attach short plinths **6** to the side panels **2** and **3** and partition **13** with minifix cams **B**.

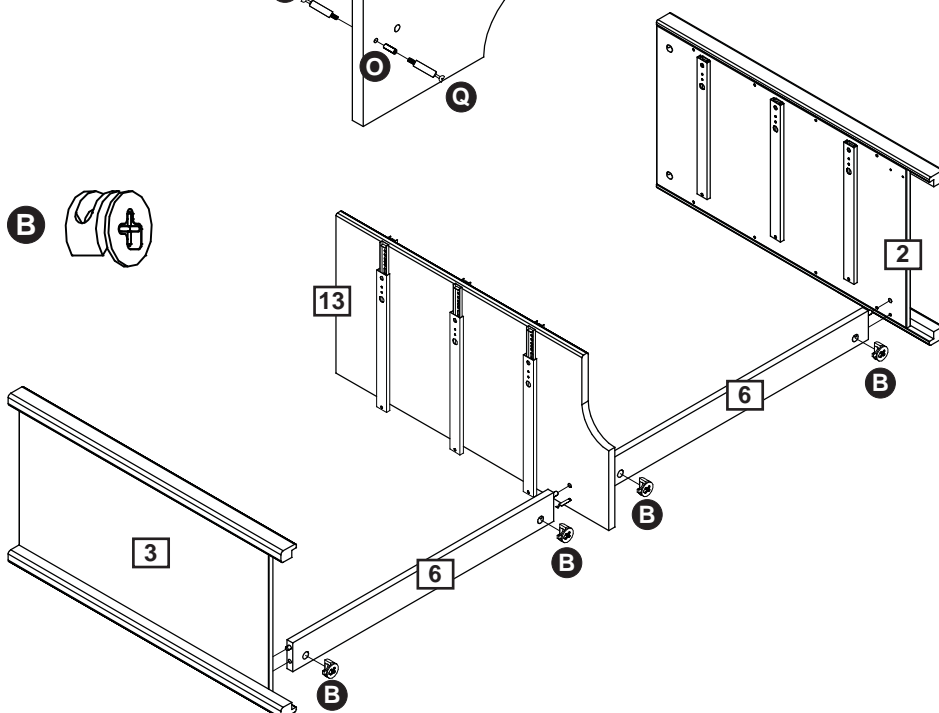

Assembly Instructions

Step 8


Attach the top **1** to the side panels **2** and **3** and partition **13** with the minifix cams **B**.

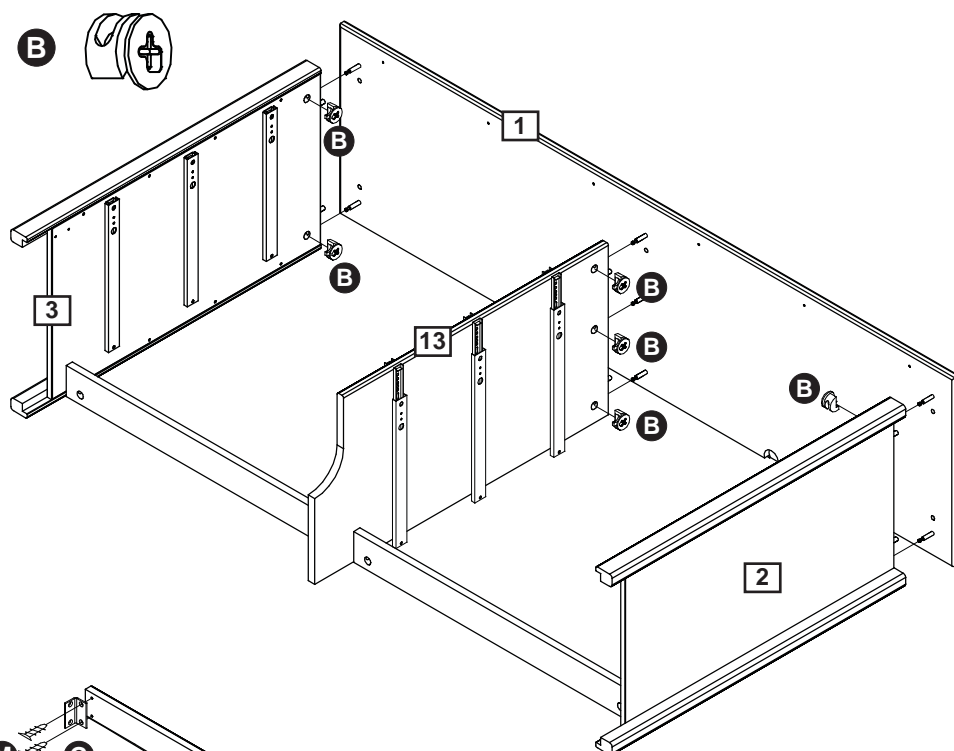

Step 9

Attach angles **G** to the long plinth **5** using screws **M**.

Attach plinth **5** to side panels **2** and **3** using screws **M**.

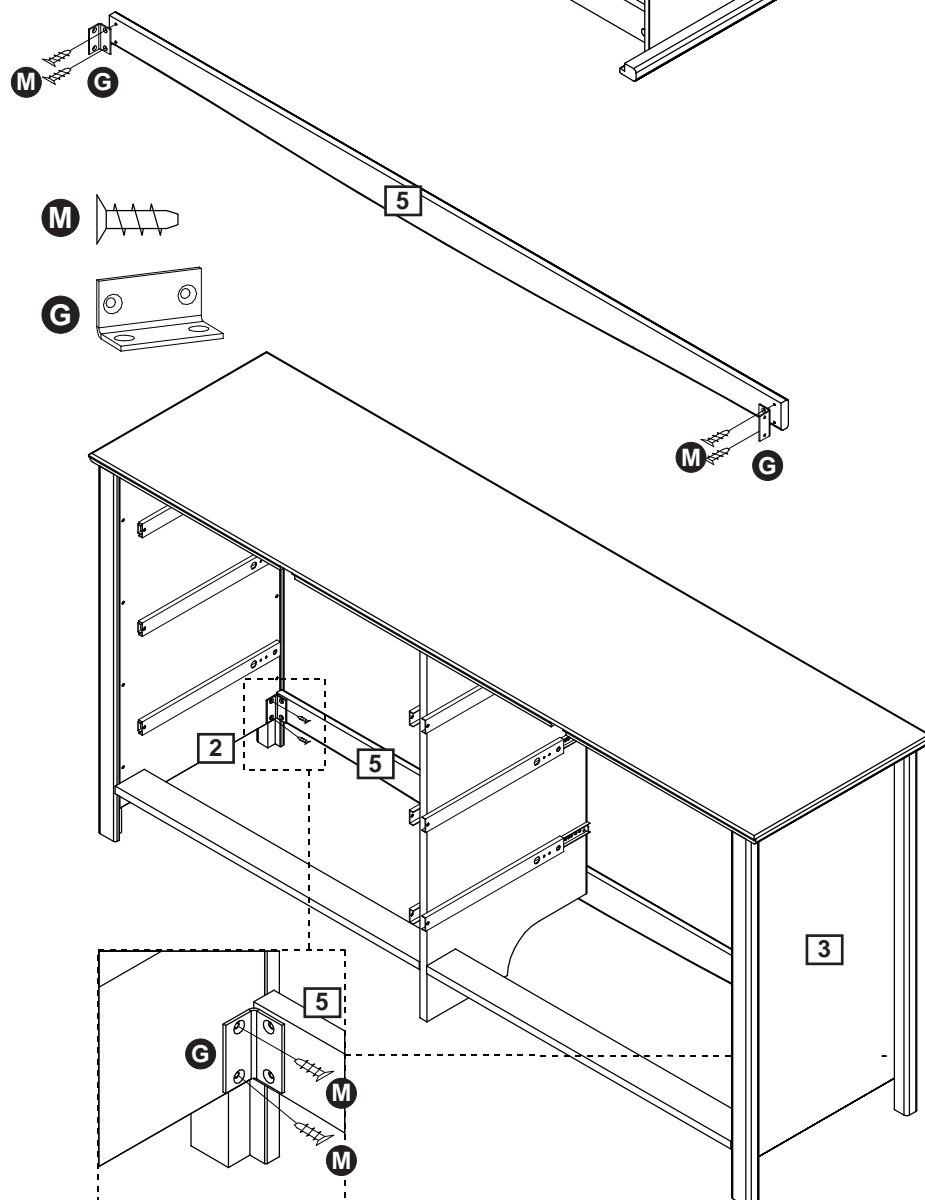


Assembly Instructions

Step 10

Fasten the list **7** to the top panel using screws **i**, placing the screws into the marking holes in top **1**.

Attach long plinth **5** to the partition **13** with angle **P** using screws **K**. Follow the marking holes.

Don't overtighten.

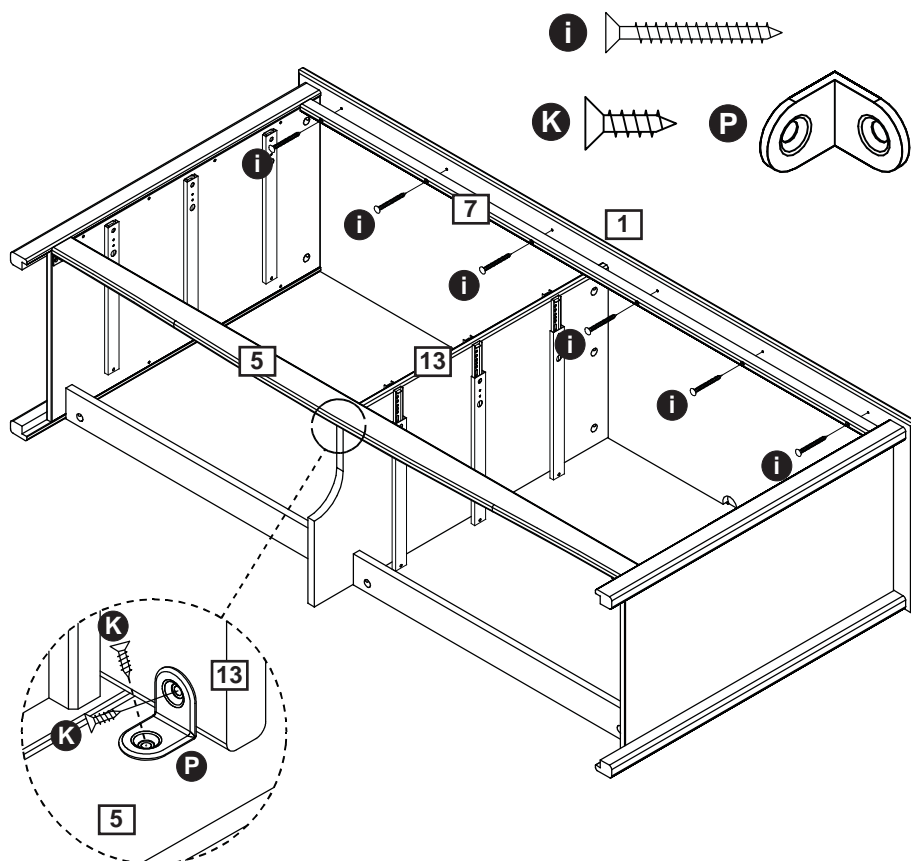


Step 11

Attach the back panel **14** with nails **F** to the back side of the chest.

Nail the back panel **14** to the carcass, ensuring that there are NO GAPS between the top **1** and the back panel **16**.

Follow the measurements.

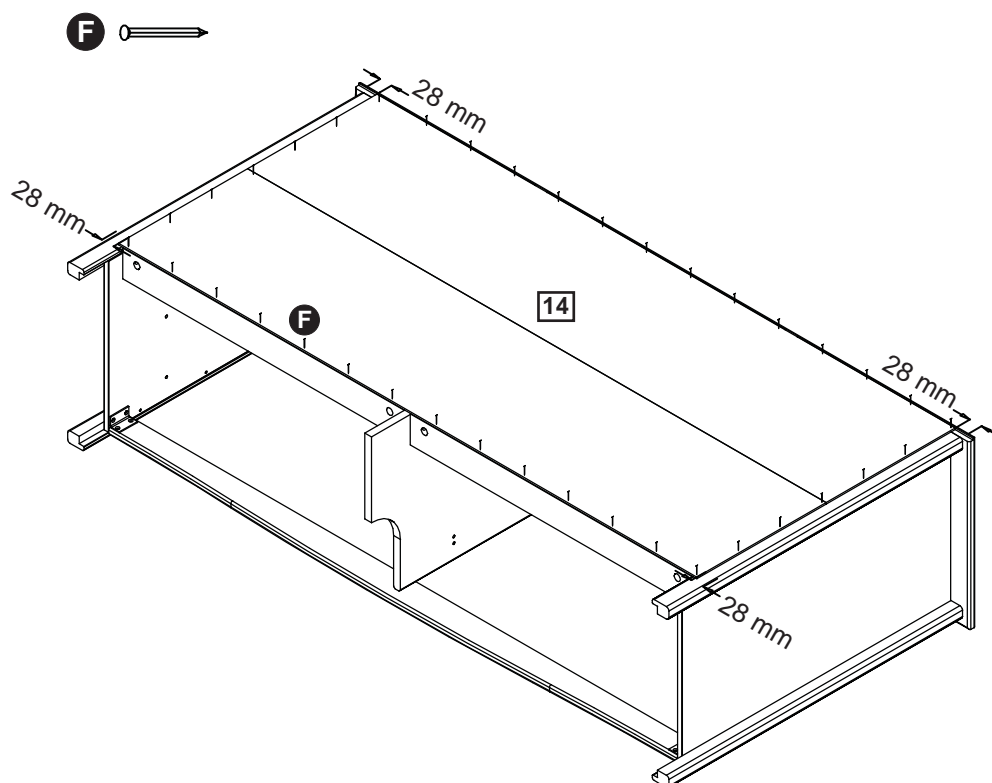


Assembly Instructions

Step 12a

Measure out the positions for the wall attachment straps. Drill two holes spaced as illustrated with the appropriate size for the wall attachment fitting (see next step).


Pull the two straps through the gaps in top plate **1**. Push the furniture against the wall and secure the strap under the top plate with washer and screw.

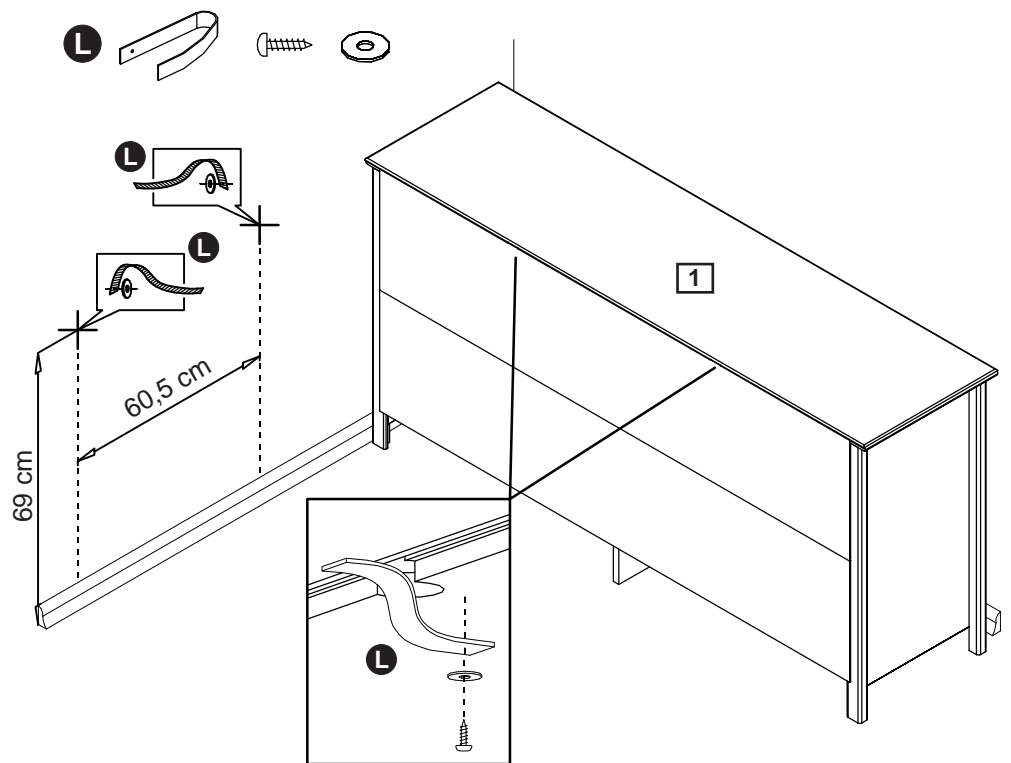


Step 12b

Different types of wall fittings. Contact your local DIY or hardware store for the wall plugs and screws.


Concrete/Brick wall

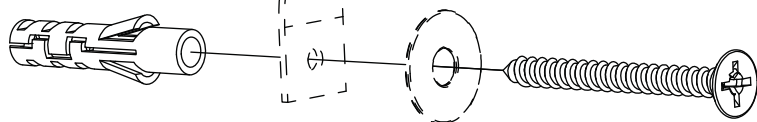

Plaster wall

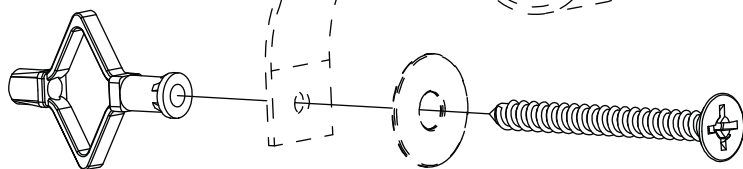

Wooden wall

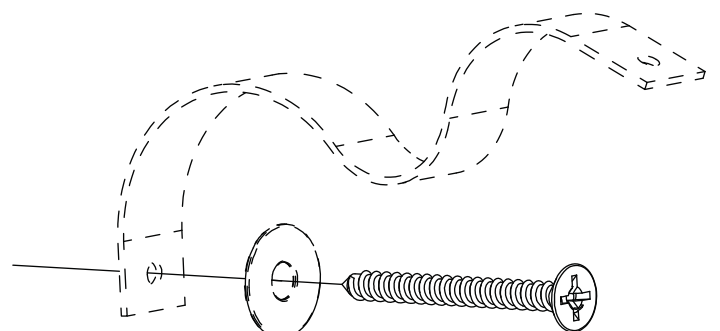


Assembly Instructions

Step 13

Insert the dowels **H** into the holes in the drawer sides **8** and **9**.

Attach the minifix bolts **A** to the drawer front **10**.


Repeat for all drawer sides and drawer fronts.

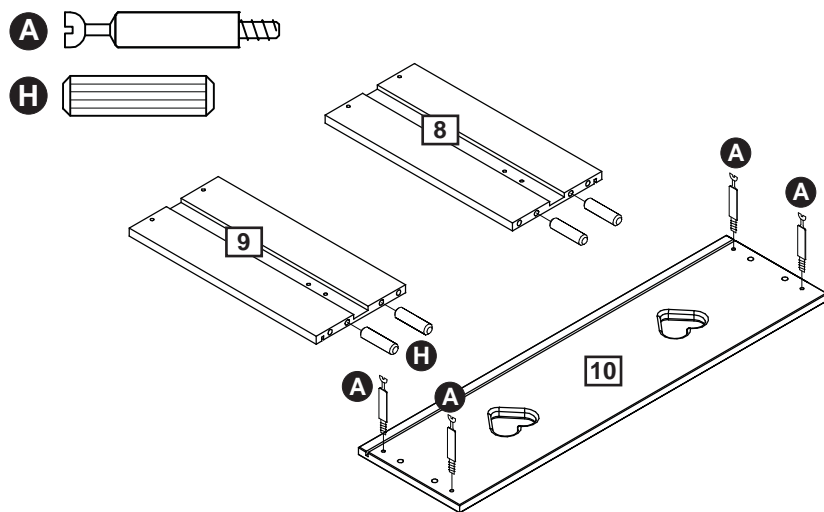

Step 14a

Attach the drawer sides **8** and **9** to the drawer front **10** with the minifix cams **B**.

Repeat for all drawers.

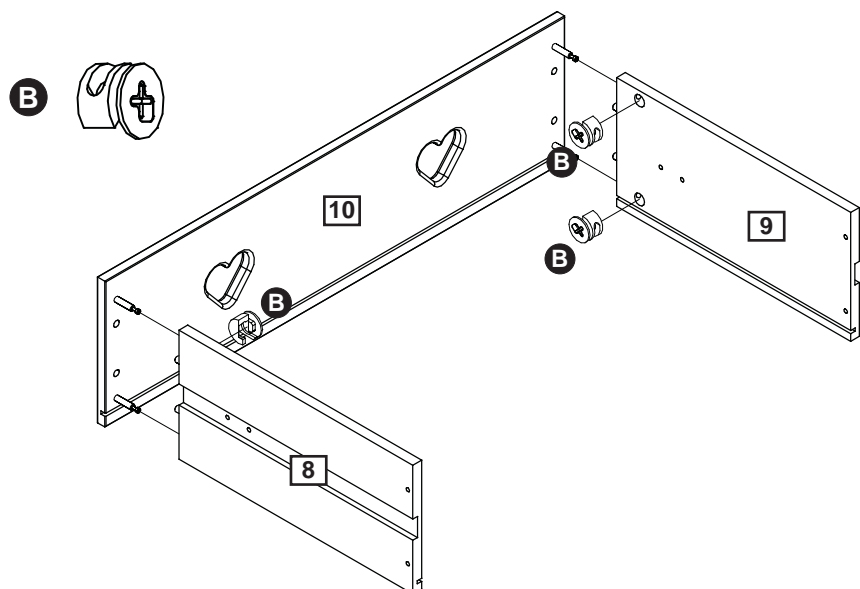


Step 14b

Push the drawer base **12** carefully into the drawer.

Attach the drawer back **11** to the drawer sides **8** and **9** with the screws **i**.

Repeat for all drawers.

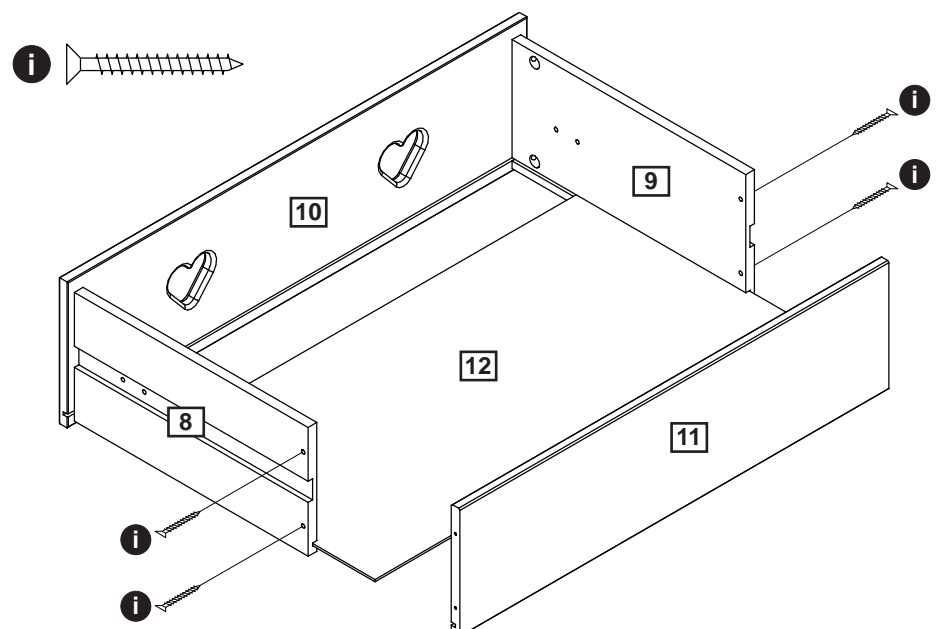


Assembly Instructions

Step 15

Place the assembled drawer between the drawer runners **D**.
Attach the drawer sides **8** and **9** to the runners using the screws **J**.

Repeat for all drawers.

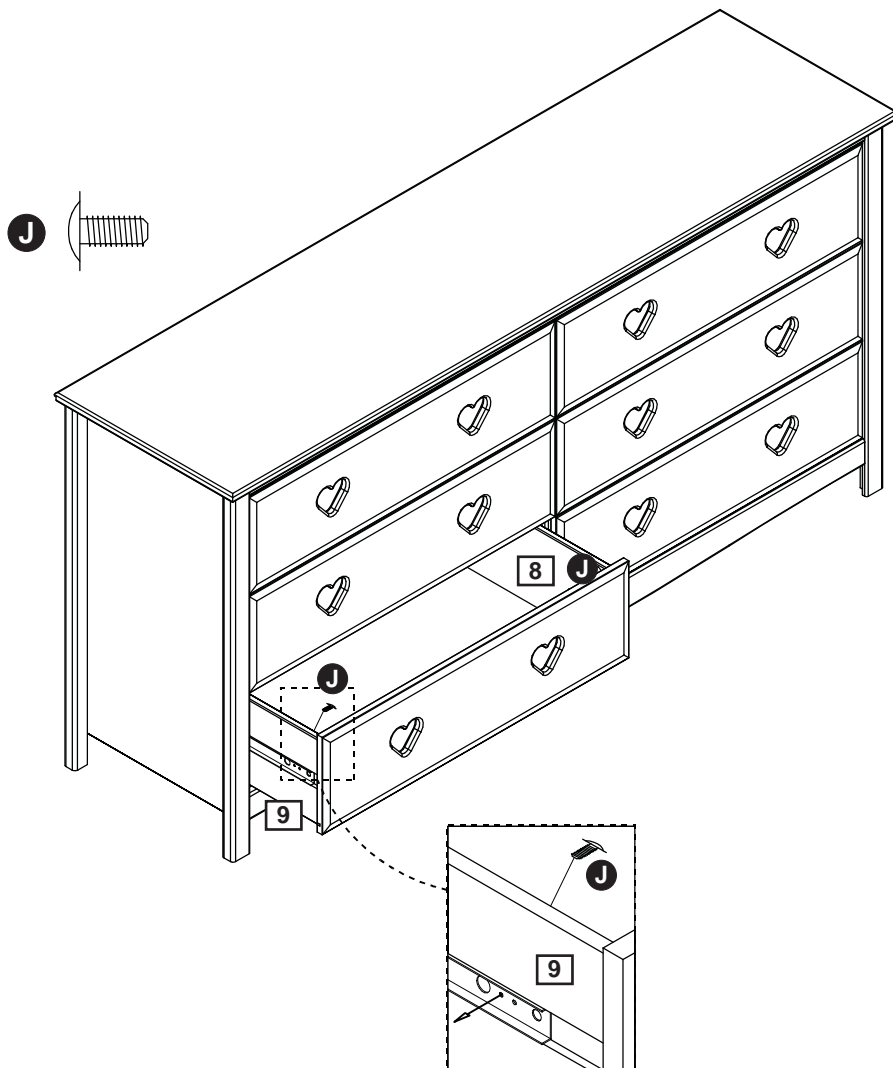

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**
E-mail: order@flexa.dk

Your 1 Year Guarantee

Peace Of Mind

Knowing Your Furniture Is Protected

Protection received within the Manufacturer's Guarantee	Optional Added Protection with Furniture Care
Covers you for manufacturing defects for 1 year.	Covers you for up to 2 years for specific structural defects following the expiry of the manufacturer's guarantee.
In the event of a problem within this time please call 0345 640 0800 , or visit an Argos store. Please retain your receipt and order number as proof of purchase.	Plus - covers you for accidental damage up to 3 years for incidents such as household spills, rips, tears and burns. Accidental damage cover begins from the moment your plan starts.
	If you want to purchase Furniture Care visit https://argos.productaftercare.co.uk or go into an Argos store.
<p>Key exclusions applying to both the Manufacturer's Guarantee and Furniture Care include where the fault is due to misuse, abuse, deliberate damage, wear and tear, neglect, use in contravention with the instructions, or if the product has been the subject of unauthorised alterations or commercial use (for full list of exclusions please visit https://argos.productaftercare.co.uk or visit an Argos store for more information).</p> <p>You have up to 45 days post purchase to take out Furniture Care.</p> <p>Terms and conditions apply. Your statutory rights remain unaffected.</p>	

Register

For Your Manufacturer's Guarantee

Thank you for choosing Argos Home.
We hope you love your shiny new things!

To provide you with the best possible after sales service, don't forget to visit **<https://argos.productaftercare.co.uk>** where you can **register** for your guarantee.

Once you've registered, you can upload your receipt to store safely online, alongside details of our after sales support service, ready at hand should you need it.

You can also take out Furniture Care which protects you against accidental damage, from the moment you take the plan out, to keep your new furniture looking newer for longer.

Register Today

<https://argos.productaftercare.co.uk>