

nuband

Activ +



NUBAND APP



Model: NU-G0002

www.nubandsports.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Getting to know your NuBand bracelet

Track your day

Counts your steps, calories burned, distance travelled.

Active minutes

Reminds you to move when you have been inactive for a long time.


Set daily goals

Motivates you to achieve your daily goals.
View your progress with data and progression charts.
Compare your results and share with your friends.



Track your night

Chart your quality and length of sleep.
Wakes you gently with silent "Buzz" alarm feature.
24 hour activity and sleep tracker chart.

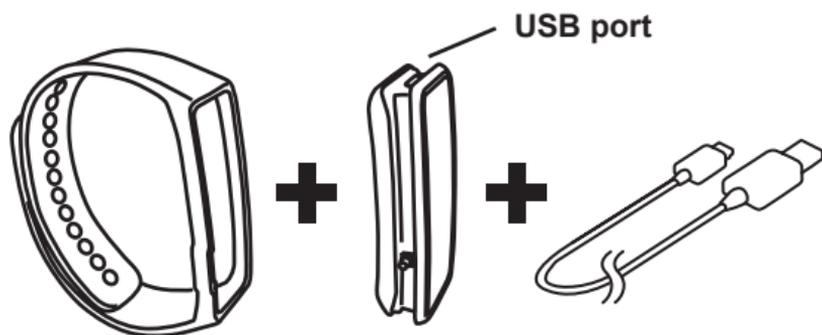

Starting A New and Easy Way to Get Fit

1) Download the APP


Download the free “Nuband” App from Apple or Google Play & install.



NUBAND APP

2) Charge your device

Using the supplied USB charging cable to charge for turning on the device.

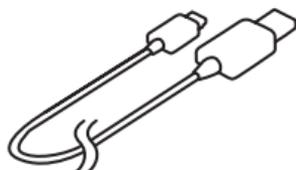

Note : For the first charge, please hold the button to wake up the NuBand.

3) Sync Nuband Activ + with your Smart device using the App

Turn on “Bluetooth” function on the phone. Click the button to light up the OLED display screen. Click the Apps Icon“  “ and illuminate your Nuband to pair wirelessly, then “Bluetooth connecting...” will show on the App. App will scan for 30 seconds Wireless connection is successful when “Bluetooth connection is successful” appears. Band will show “  ”, and then data will sync to App. The App will then display “Bluetooth disconnected” pairing is now complete and or stopped in order to preserve battery life.




4) Customize your NuBand Activ + bracelet

Click “Setting” and input your personal settings. Under “My Profile” it is important to record accurate information to ensure that the reading & outcome will be more beneficial to the user.



5) Set your daily workout goals

Click “Workout Goal” to set your daily goals. Choose the daily goal listed in the options and click “Save”.

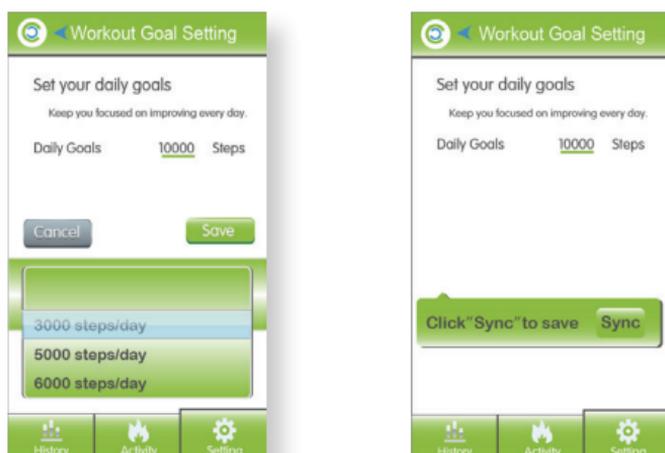

6) Reminder Setting

Click “Reminder Setting” to set activity reminder function. from anywhere between 15 mins and 2 hours, Nuband will vibrate to remind you to exercise.



7) Smart Alarm


Click “Smart Alarm” to enter alarm setting interface. After alarm setting, your Nuband will wake you up gently with a soft vibration.



TRACK YOUR ACTIVITY & SLEEP

Activity mode

1. Activity mode illustrates 6 kinds of data these are:

	Time/date/ battery life remaining
	Step taken
	Distance in km/miles
	Calories
	Percentage of daily goal achieved

2. Sync to App to check your daily activity or simply review on Nuband's screen with the touch of a button.

Sleep mode

Sleep mode is activated by clicking button twice on activity mode, the bracelet will vibrate and  will appear.

Place your Nuband into Sleep Mode when you are ready for bed.

1. In Activity mode, click the button twice to activate Sleep mode, Nuband will vibrate gently and  logo will appear.
2. In Sleep mode, you can still check the time. Simply click the button and  will appear.
3. Nuband will automatically set to activity mode once you are walking around over 15 minutes.
4. In order to track your sleep, simply sync Nuband to the App and data on previous night's sleep will appear. This can be tracked up to a month.

Note:

- If you forget to change mode on Nuband after waking up, it will automatically switch to sport mode after being active for over 15 minutes, up to each user's activity.
- Long press the button for 5 seconds,  /  , on /off



Note:

- Double click activates both Sleep and/or Activity modes.
- Nuband only saves 3 days of data, you need to synchronize the app at least once every 3 days.
- Do not charge the band at Midnight 12:00am. The band will automatic storage data at Midnight 12:00am and change it to 0. It will cause incorrect data on the band under charging condition at Midnight 12:00am.
- Long charge is not good for battery.

TECHNICAL SPECIFICATION

FEATURES

1. Nuband Activity and sleep tracker.
2. Offer healthy sports guides.
3. Track your sleep and wake up silently with a vibrating alarm 
4. Remind's you to exercise when you've been inactive for longer periods  by vibrating twice.
5. Pushes you to achieve your desired daily goals.
6. Bluetooth 4.0 sync with all the info is collected and stored in real time.
7. 3 Hour charge time lasts 5 ~ 7days.
8. Water resistant – splash proof only. Not suitable for swimming and showers.

COMPATIBILITY

- **BT 4.0 compatible with iOS 7.0 & Android 4.3 version and above**
- **Apple iOS Devices (iOS 7.0 version and above)**
iPhone 4S / 5 / 5S / 5C / 6 / 6 Plus, iPod touch5, iPad 4, iPad Mini, iPad Mini with Retina display, iPad Air, iPad Air 2.
- **Android Phones (Android 4.3 version and above)**
Samsung S3 / S4 / S5, Samsung Note 2, Note 3 or other smartphone
- Please check Android devices have up to date software.

POWER AND BATTERY

- 5 to 7 days of battery life.
- About 2 to 3 hours to fully charge.
- Built – in rechargeable Li-on polymer battery.
- Included USB to micro USB cable for charging 5v.
- 550mA Max 2.5W (included).
- Do not over charge.

NUBAND BRACELET

- SIZE: Screen 20*45mm / Band: 16mm
- Weight : 18.5g
- Screen : OLED
- Storage data : Sport data can be synchronized on the Nuband app and stored indefinitely
- Accessories : USB charging and instruction
- Software : Nuband iOS / Android

Nuband Activ + 12 month Warranty

Nuband prides ourselves in the quality of our products but every now and then there may be a bump in the road. We therefore Guarantee our products for 12 months (1 year) against defects in materials and workmanship under normal use.

If a hardware defect occurs within the warranty period of 12 months Nuband will either replace defective part or provide a replacement product, providing proof of purchase is sent with the item.

A replacement product or part assumes the remaining warranty of the original product or 12 months from the date of replacement or repair, whichever is longer.

When a product is exchanged or part of product is exchanged, any replacement becomes your property and replaced item becomes Nuband's property. Parts provided by Nuband in fulfilment of its warranty obligation must be used in products for which warranty service is claimed.

When returning product under warranty, item must be returned along with original packaging and retailer receipt. **Without the receipt, the warranty will be considered invalid.**

It is your responsibility to back any data up. If in repair or replacement, goal data is lost Nuband claim no responsibility for this.

Nuband is not responsible for product failure caused by none compliance with product instructions.

The warranty does not cover the cost of returning the product, this must be born by the customer.

No Nuband reseller, agent or employee is authorized to make any modification, extension or addition to this limited warranty. If any term is held to be illegal, or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Nuband Activ + Product Disclaimer

Nuband is a device developed to assist monitoring aspects of your health but should never replace the professional advice of your Doctor or Physician.

Nuband are not a licensed medical care provider and have no expertise in diagnosing, examining or treating medical conditions or any kind, or determining the effect of any specific exercise on a medical condition.

We strongly recommend that you should consult a Doctor or Physician before partaking in any type of physical exercise, fitness plan or diet.

Returns

If your Nuband should ever need to be replaced under warranty, send an £8.00 check or money order payable to Sprint Shift Ltd to cover costs of postage, and handling. Please send it to the following address:

Sprint Shift Ltd
17 Outram Road
Dukinfield, SK16 4XE
UK

Because of possible loss, we recommend insuring your Nuband, return receipt requested, when using the mail. If you do not obtain the proper receipt within a reasonable time, start a tracer through the originating post office. Please allow 2 to 3 weeks from the date we receive your package for your replacement Nuband to arrive.

iPhone®, iPod®, iPad®, iPad Mini®, iPad Air®, iOS®, Retina display®, Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android and Google Play are trademarks of Google Inc.

Samsung Galaxy S® and Samsung Galaxy Note® are trademarks of Samsung in the United States and other countries.

All other trademarks are property of their respective owners.

