

JOSHUA Riser rail assembly

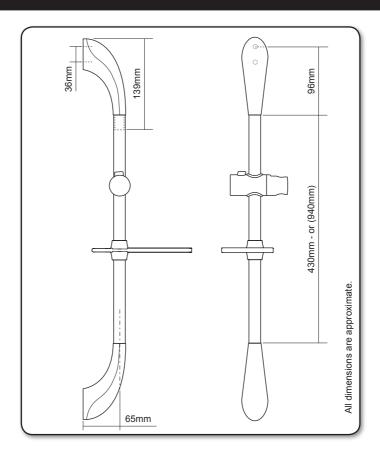


Installation Instructions

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

FITTING THE RISER RAIL ASSEMBLY

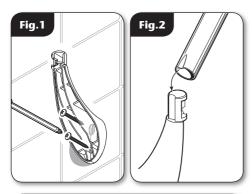

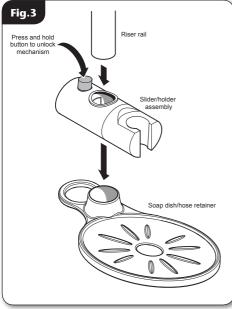

FITTING THE RISER RAIL

WARNING

Check there are no hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended.

Decide on the position for the rail on the wall within the shower area. Proceed as follows:

- Offer one of the brackets to the wall for the lower position only. Note there are three holes in the brackets but two screws will usually be enough. Mark the centre hole and one of the other two.
- Drill and plug the wall. (An appropriate drill bit should be used. If the wall is brick, plasterboard or a soft building block, appropriate wall plugs and screws should be fitted).
- Replace the bracket to the wall and secure (fig.1).
- Locate the rail onto this lower bracket, making sure the rail engages fully on the bracket. Check that the indent in the riser rail engages into the cut-out on the bracket end (fig.2).
- Locate the second bracket on top of the rail.
 Check the rail is vertical then mark the centre hole and of the other two holes. Remove the bracket and rail. Drill and plug the wall.
- Fit the slider/holder assembly and the soap dish onto the riser rail. The slider can be fitted with the showerhead on either the left or right of the riser rail and the soap dish can be fitted either way up (fig.3).

FITTING THE RISER RAIL ASSEMBLY

- Place the rail onto the installed lower bracket. Replace the upper bracket onto the rail and secure the bracket to the wall with the screws supplied (fig.4).
- Place a trim cover onto each bracket. Make sure the large tab at the narrow end of the trim cover fits into the slot between the rail and bracket (fig.5) before pushing and clicking the other end into place.

Should the need arise, the trim covers can be removed by inserting a screwdriver into the slot and carefully levering off the trim.

FITTING THE HOSE AND SHOWERHEAD


Feed the flexible hose through the appropriate soap dish opening (fig.6) so that the dish acts as a retaining ring (Water Regulations).


Note: The holder is slightly tapered and the showerhead and hose will only fit from one direction.

- Screw the flexible hose onto the shower outlet and showerhead (fig.7), making sure the supplied washers are in place at both ends of the flexible hose.
- Place the showerhead into the holder (fig.8) and check that it fits correctly.

IMPORTANT: This riser rail assembly is supplied with a hose retainer. Water Regulations require the fitting of a double check valve or similar device in the supply pipework to prevent backflow if the retainer is not used.


IMPORTANT: It is the conical end of the hose which grips into the holder. The showerhead will not fit in the holder without the hose attached.

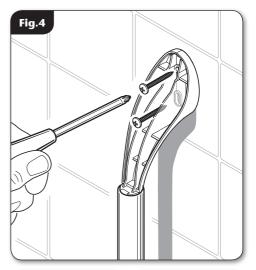

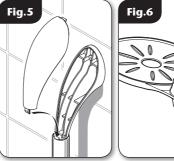





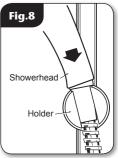

SPARE PARTS

| Ref. | Description | Part Numbe |
|------------|---|--|
| | Kit without riser rail White Satin grey Chrome | 88900024 88900025 88900026 |
| 1. | Bracket (single) White Chrome Satin | 7054060 7054064 7054062 |
| 2. | Bracket Cap (single) White Chrome Satin | 7054061 7054065 7054063 |
| 3. | Riser rail 430 mm - anodised 430 mm - white 430 mm - chrome 940 mm - anodised | 7042409 7042411 7042412 7042935 |
| 4. | Showerhead holder White Chrome Satin | 83313470 83314210 83314200 |
| 5 . | Soap dish - <i>white</i> Soap dish - <i>clear</i> | 7054123 7054124 |

Flexible hoses available in the following sizes:

1.00 m in white, chrome and gold 1.25 m in white, chrome and gold 1.75 m in chrome only

