

# 3' Lavendon End Opening Ottoman Bed

**Assembly Instructions** – Please keep for future reference

4158714


5748848

7096945

7208757

7349252

hygena

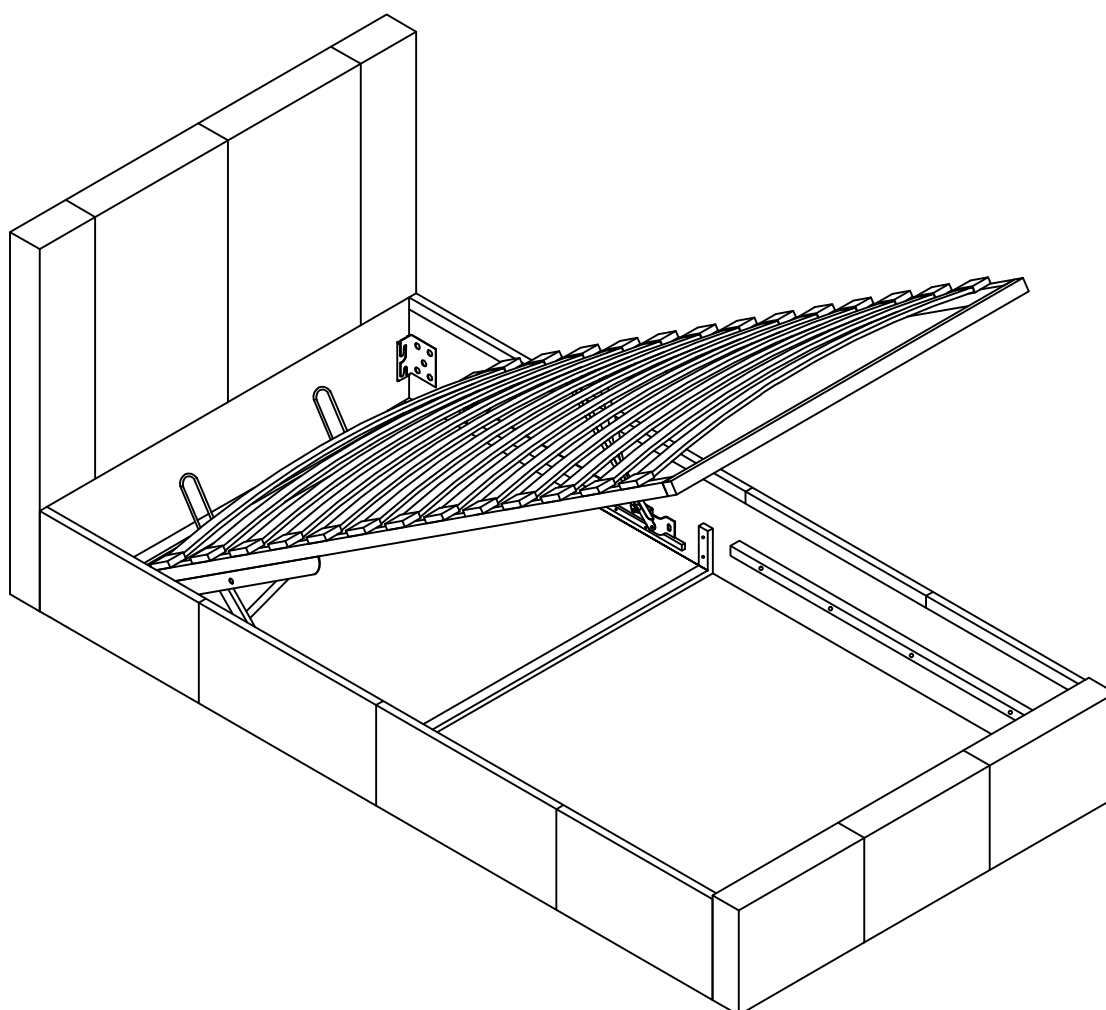

## Dimensions (3')

Length - 203cm

Width - 100cm

Height - 82cm

**Important** – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**



## Safety and Care Advice

### Important – Please read these instructions fully before starting assembly

Check you have all the components and tools listed on pages 2, 3 and 4.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Make sure you have enough space to layout the parts before starting.

Assemble the item as close to its final position (in the same room) as possible.

Assemble on a soft level surface to avoid damaging the unit or your floor.

Assembly requires 2 people.

Do not fully tighten bolts until the whole bed is assembled. Do not overtighten the nuts to avoid causing damage to the threads.



We do not recommend the use of power drill/drivers **for inserting screws,**

as this could damage the unit. Only use hand screwdrivers and Allen keys.

Dispose of all packaging carefully and responsibly.

### Cleaning Guidance

Minor stains and spillages should be removed immediately from cushion fabric, by wiping over lightly with a damp cloth and mild soapy water.

Light marking can also be removed using this method.

To remove more stubborn stains or marking, a good quality proprietary domestic fabric cleaner can be used, although it should first be tested on and inconspicuous area of the fabric.

### Care and maintenance

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

From time to time check that there are no loose screws on this unit.

This product should not be discarded with household waste. Take to your local authority waste disposal centre.

### Important Ottoman Safety Warnings


- Caution. This bed uses a pressurised mechanism.
- Use caution when operating - Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism - Failure to do so may result in injury.
- Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children or animals are left unattended when the frame is in the 'up' position.
- Do not remain on the bed whilst the lifting mechanism is in use.
- Beware of Entrapment - Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding - Except the fitted sheet.



# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400 800**


Please check you have all the parts listed below

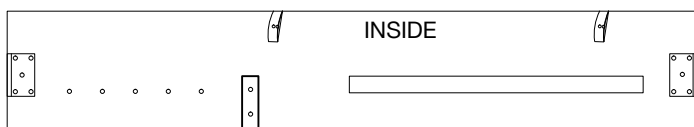

**1** Right side rail (1930 x 310mm)




**2** Left side rail (1930 x 310mm)

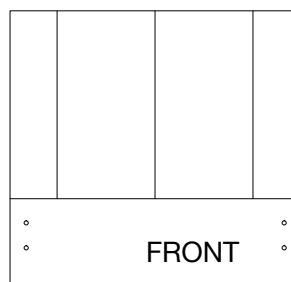

**3** Headboard (1000 x 810mm)




**4** Footboard (1000 x 310mm)

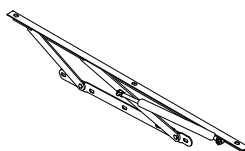

**5** Hinge Mechanism (x 1 pair)  
NOTE: PISTON ATTACHED




**6** Foot x 4 (Ø3.5\*15mm)

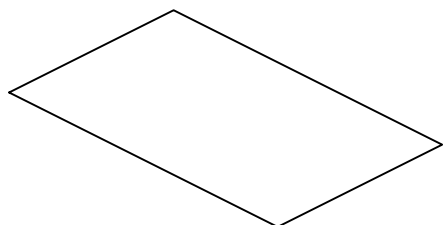


**7** Fabric base x 1  
(1960 x 970mm)



**8** Ottoman end frame (Footboard) x 1  
(910 x 118mm)



**9** Ottoman end frame (Headboard) x 1  
(910 x 118mm)  
NOTE: EXTRA HOLES



**10** Stretcher x 1  
(940 x 25mm)

# Components - Parts

If you have damaged or missing components,  
call the Customer Helpline: 0345 6400 800


Please check you have all the parts listed below



- 11** Ottoman frame (Sides) x 2  
(1822 x 30mm)




- 12** Bentwood slats x14(900\*9\*53mm)




- 13** Mattress support  
bracket x 2 (Ø10\*70mm)



- 14** Slat caps x 28 (5.5mm)



- 15** Ottoman frame support x 1  
(100 x 30mm)













- 16** Corner bracket x 4 (120 x 80mm)

# Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0345 6400 800**

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  45mm M8 Bolt x 8	<b>B</b>  25mm M8 Bolt x 12	<b>C</b>  30mm M8 Bolt x 18
<b>D</b>  50mm M5 Wood screw x 16	<b>E</b>  Nut x 6	<b>F</b>  17mm Flat washer x 38
<b>G</b>  12mm Spring washer x 16	<b>H</b>  5mm Allen key x 1	<b>J</b>  30mm M4 Wood screw x 4
<b>K</b>  Spanner x 1		

## Tools required



Ruler/tape  
measure




Phillips screwdriver  
(Not supplied)



PLIERS (Not  
supplied)

**Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1


### Preparing headboard and footboard

**a:** With help, carefully place headboard **3** and footboard **4** flat onto the floor with the fixing holes facing up as shown.

**Note:** Ensure the floor is suitably clean to protect the headboard and footboard from damage.


Loosely insert bolts **C** and fixings **G** and **F** into headboard **3** and footboard **4** as shown.

a:

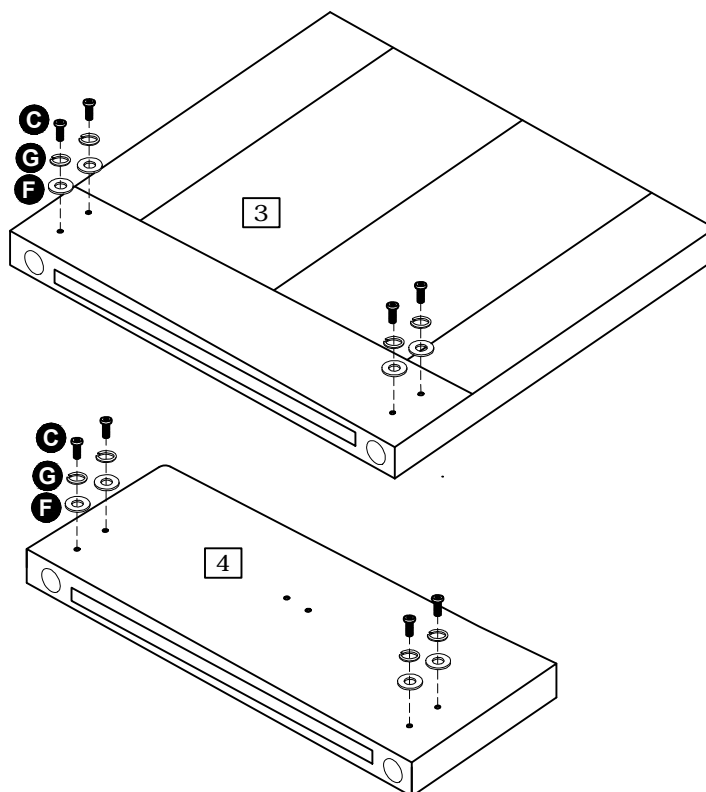

**b:** Attach ottoman frame support **15** to footboard **4** using fixings **A** and **F** as shown.

b:

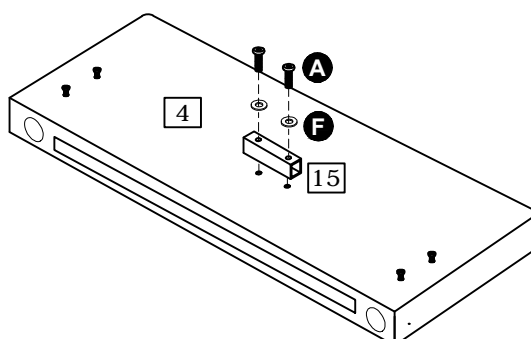

# Assembly Instructions

## Step 2

### Attaching side rails


With help, raise headboard into the [3] standing position.

Hang the metal brackets on the end of the side rails [1] and [2], over the bolts in the headboard [3].

**Note:** Ensure the holes on the inside of each side rail are located at the headboard end as shown.

**Note:** Do not fully tighten bolts **C** at this stage.  
**Finger tighten only.**

Repeat to assemble footboard [4].

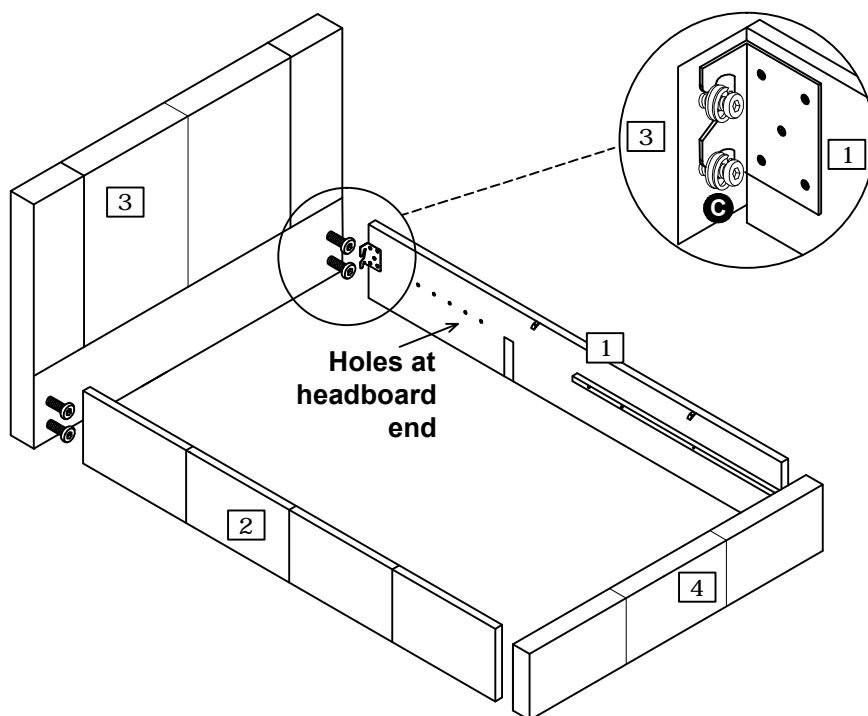

## Step 3

### Preparing base


Ensure the frame is straight and square.

Fully tighten bolts **C** from Step 2.

**a:** Assemble stretcher [10] in between side rails [1] and [2] using screws **D**.

**b:** Assemble corner brackets [16] in each corner using screws **D**.

**Note:** The positions should be outlined.

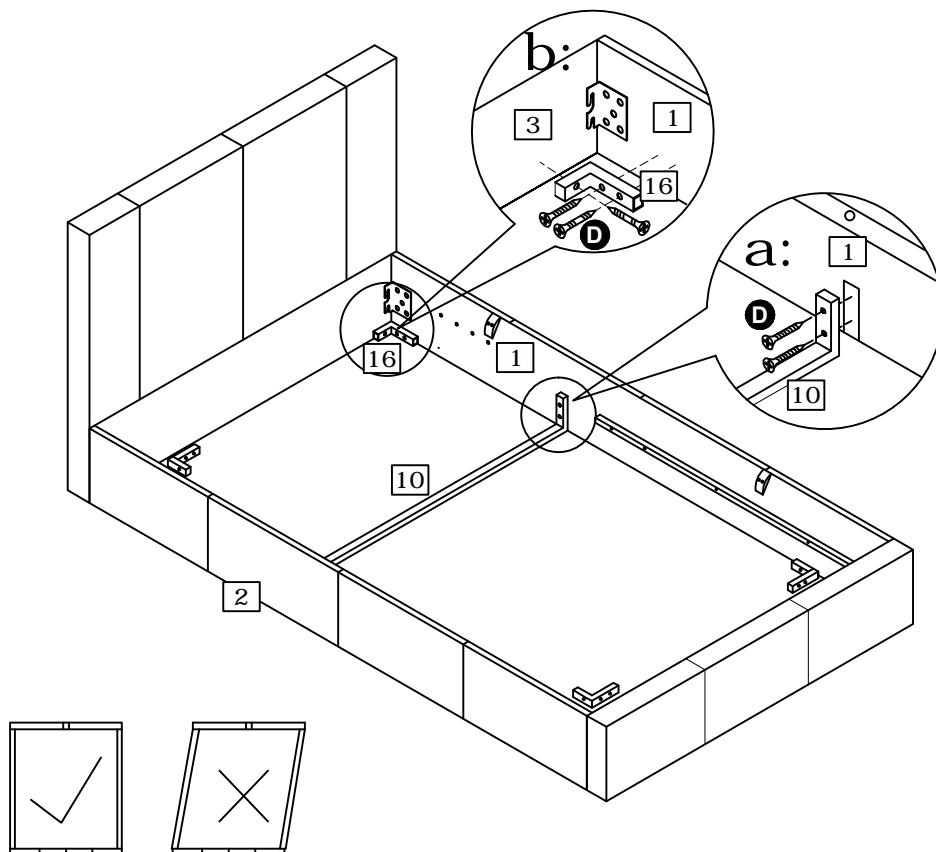

**Frame must be square**

# Assembly Instructions


## Step 4

### Attaching cover

With help, carefully turn the frame onto its side.

**⚠ Warning:** The frame is heavy. Lift with care.


Attach fabric base **7** to the underside of the frame using the velcro strips on all 4 sides.

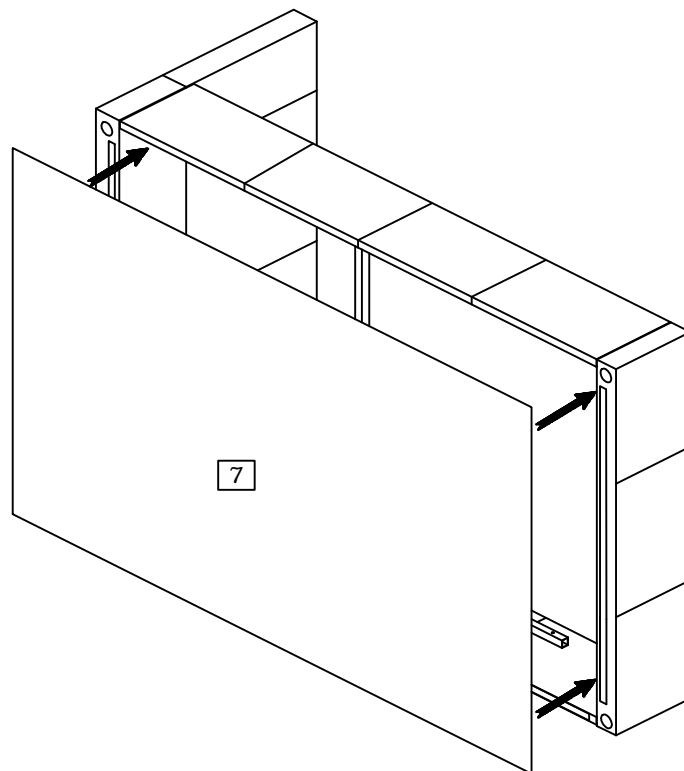

## Step 5

### Attaching feet

Assemble feet **6** to the underside of the headboard and footboard using screws **J**.

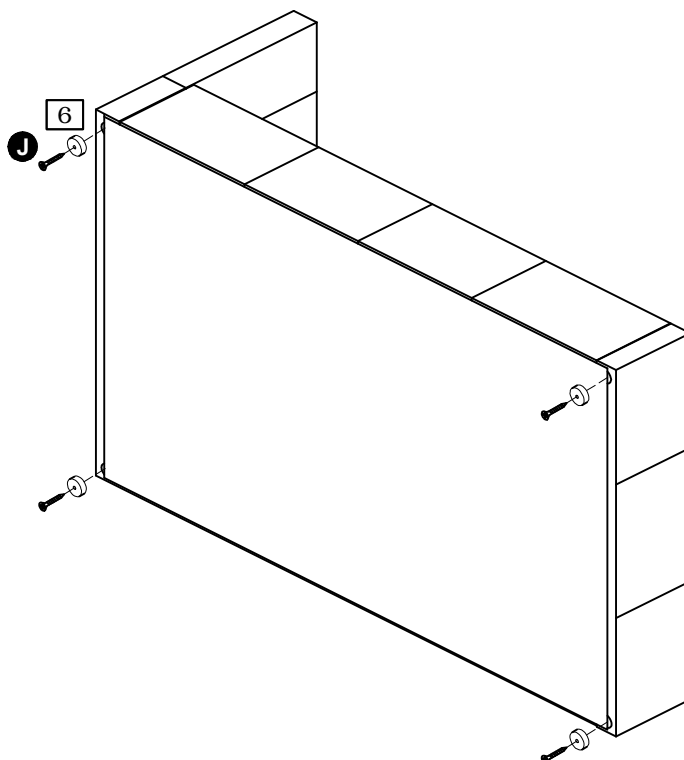



# Assembly Instructions


## Step 6

### Attaching folding hinges

With help, carefully return the frame to the standing position.

Secure hinges **5** to side rails **1** and **2** using fixings **C** and **F** as shown.

**Note:** Ensure the hinges are fitted the correct way around as shown.

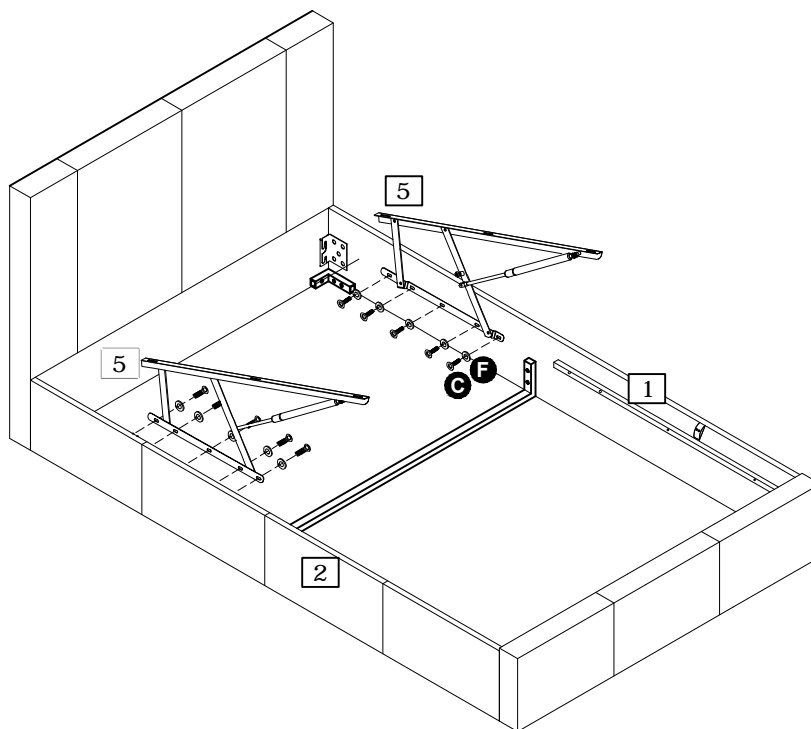

## Step 7

### Assembling ottoman frame

Loosely assemble ottoman frame components **8**, **9** and **11** together as shown.


Ottoman end frame **9** has extra holes as shown. This is the headboard end.

**Note:** Secure the assembly using fixings **B**, **G** and **F** as shown.

#### Important

Do not fully tighten screws **B** at this stage.

**Finger tighten only.**

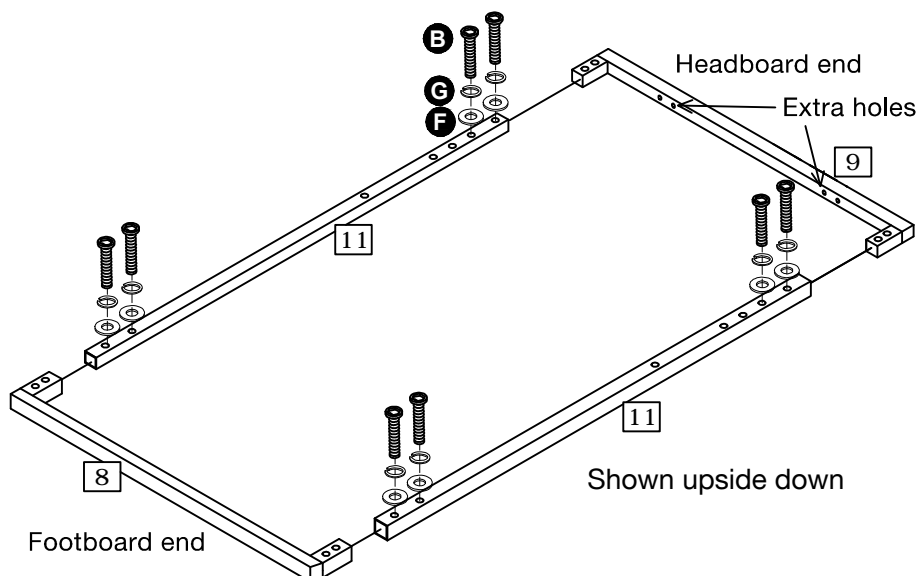

# Assembly Instructions


## Step 8

### Assembling ottoman frame

With help, carefully turn the frame over.

**Note:** The frame is heavy. Lift with care.

Assemble mattress support brackets **13** to end frame **9** (headboard end) using screws **B** and **F**.

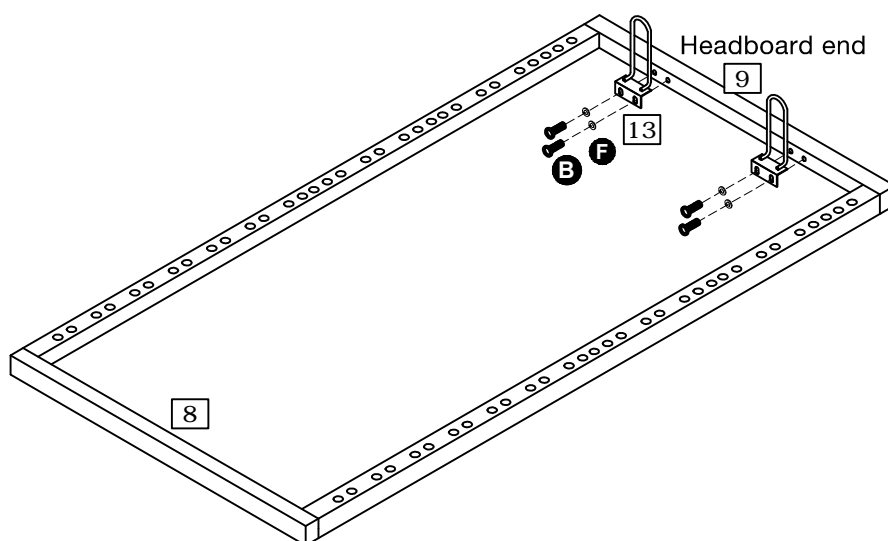

## Step 9

### Aligning ottoman frame

Ensure hinges **5** are folded flat as shown.

**Warning:** Keep hands clear of the folding areas at all times.



With help, lift the assembled ottoman frame into position, ensuring the mattress support brackets are correctly located at the headboard end.

Ensure the ottoman frame is aligned centrally with the bed frame, with even gaps on all 4 sides.

Once aligned, secure the ottoman frame to hinges **5** using fixings **A**, **E** and **F**.

Ensure the ottoman frame is straight and square.

Fully tighten all fixings on the ottoman frame.

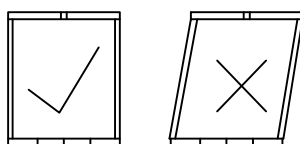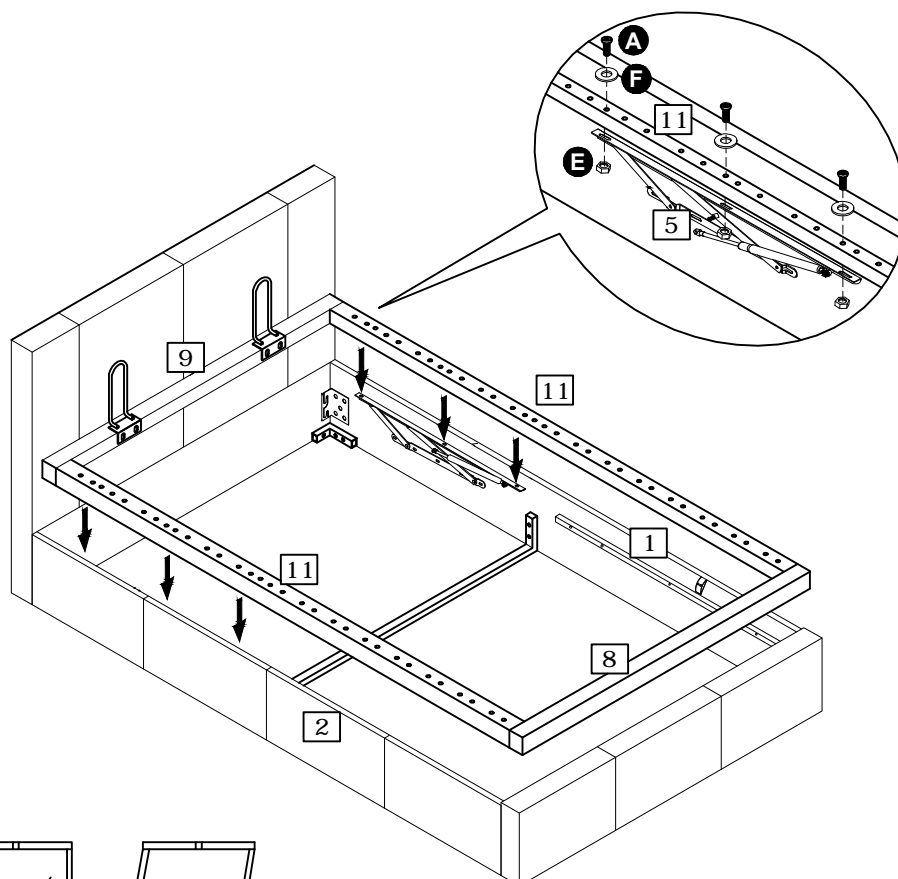

**Frame must be square**

# Assembly Instructions

## Step 10

### Connecting pistons


**⚠ Warning:** Two people will be required!

With the ottoman frame fully supported in the raised position, connect the loose end of the pistons to hinges **5**, using the nuts that are pre-assembled onto the hinges.

Repeat on both sides.

**⚠ Warning:** It is important the ottoman frame is supported whilst the pistons are connected.

Keep hands clear of the folding areas at all times.

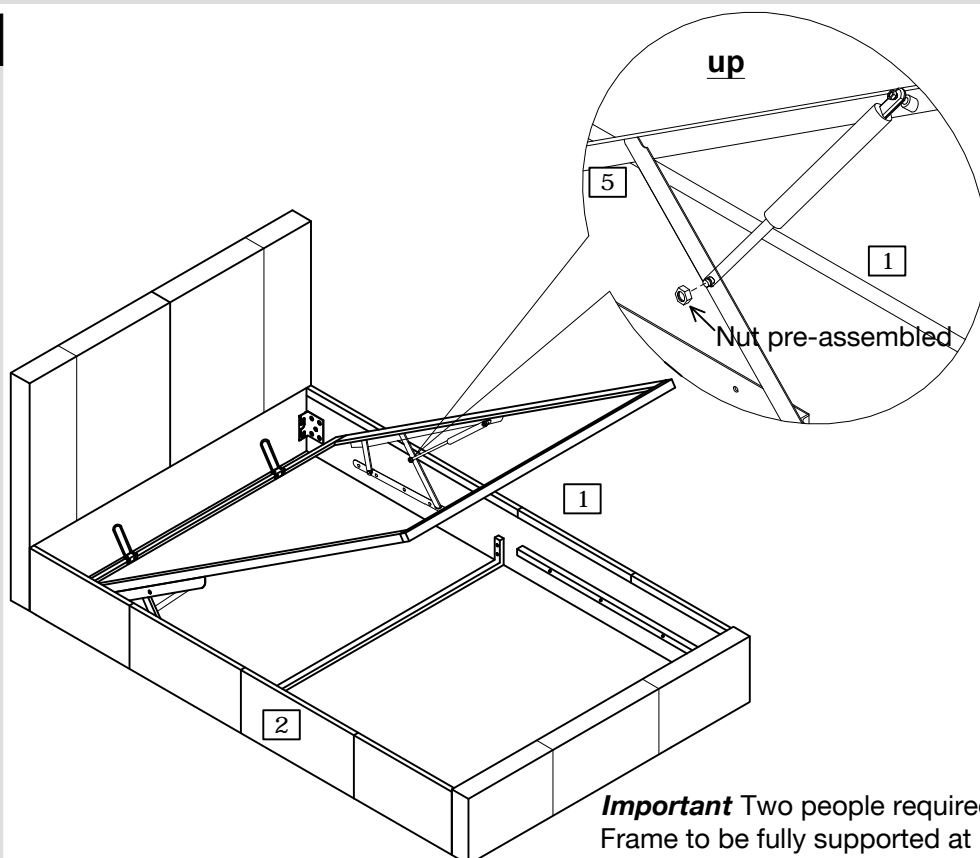


**Important** Two people required. Frame to be fully supported at all times!

## Step 11

### Attaching slats

**a:** Assemble slat caps **14** onto each end of bentwood slats **12**.

**b:** Fit bentwood slats **12** into the ottoman frame (sides) **11**, by locating single slat caps **14** into the holes.

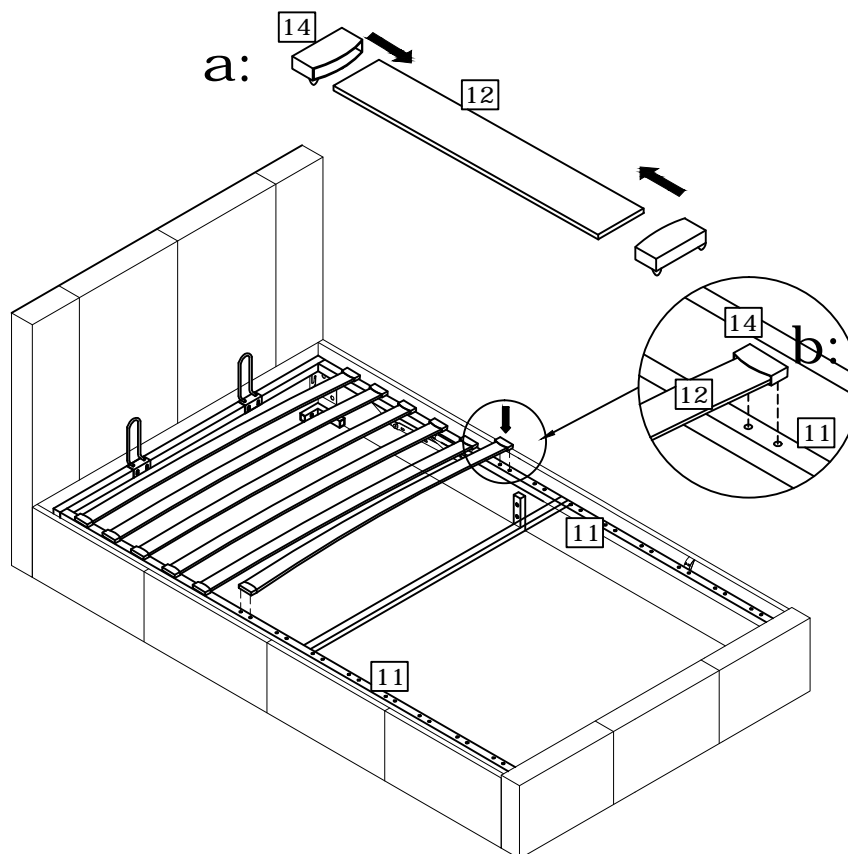

**Assembly is complete**

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**  
Home Retail Group. 489-499 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW