

BOSS
WATCHES &
JEWELRY

HUGO
WATCHES

HUGO BOSS WATCHES
OPERATING INSTRUCTIONS, CARE & MAINTENANCE,
AND WARRANTY & SERVICE INFORMATION

HUGO BOSS WATCHES

Hugo Boss has a unique heritage in the fashion market. Developed with the meticulous attention to function and detail, the water-resistant Hugo Boss watch collection offers easy, elegant designs that reflect Hugo Boss' style codes and trademark logo – one of the most recognized brand symbols in the world.

Congratulations on your purchase.

CONTENTS

OPERATING INSTRUCTIONS

- (1) 2- AND 3-HAND MODELS
- (2) DATE/DAY – DATE MODELS
- (3) DUAL TIME MODELS – With GMT 24-hour and minute hand
- (4) MULTI-EYE MODELS TYPE A – With day/date with or without 24-hour hand without pushers
- (5) MULTI-EYE MODELS TYPE B – With day/date with or without 24-hour hand with pushers
- (6) ANALOG CHRONOGRAPHS TYPE A – Analog chronograph minutes/seconds counters/24-hour hand/date
- (7) ANALOG CHRONOGRAPHS TYPE B – Analog Chronograph 1/10 Second
- (8) ANALOG CHRONOGRAPHS TYPE C – Analog chronograph with 30-minute counter and date
- (9) SPECIAL FEATURES
 - Screw Down Crown
 - Mesh Bracelet Sliding Clasp

CARE AND MAINTENANCE

WARRANTY

OBTAINING SERVICE

(1) 2- AND 3-HAND MODELS



Figure A



Figure C



Figure B

Legend

- 1, 2 – Crown positions
- H – Hour hand
- M – Minute hand
- S – Second hand

Crown Positions:

- Position 1 - Normal position. Crown pushed into case.
- Position 2 - To set TIME: Rotate crown in either direction.

NOTE: When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

Power depletion warning function: When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible. The watch remains accurate while the second hand is moving at two-second intervals.

(2) DATE/DAY-DATE MODELS



Figure A

CAUTION: Never set the date when the hands are between 9:00 PM and 3:00 AM. Doing so could damage the calendar mechanism.

NOTE: The functioning of the watch is not affected during date setting. When the watch is running, the date will change gradually during the period from 9:00 PM to 3:00 AM.

Power depletion warning function: When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible. The watch remains accurate while the second hand is moving at two-second intervals.



Figure B

Legend

- 1, 2, 3 – Crown positions
- H – Hour hand
- M – Minute hand
- S – Second hand
- K – Date window
- E – Day window

Crown Positions:

Position 1 - Normal position. Crown pushed into case.

Position 2 - To set DATE: Rotate crown clockwise.

NOTE: For models with DAY/DATE display(s):

Rotate crown clockwise to set DATE, and counterclockwise to set DAY.

Position 3 - To set TIME: Rotate crown in either direction.

(3) DUAL-TIME MODELS - TYPE A

With rotating reflecting, GMT 24-hour hand and date



Figure A

Legend

0, 1, 2, 3 – Crown positions

A – Push (-) button to set dual time

B – Push (+) button to set dual time

H – Hour hand

M – Minute hand

S – Second hand

F – Dual time hand (24 hrs)

J – 24 hours hand

Z – Time zone crown

Crown Positions:

Position 0 - Crown blocked and pushed into case. Turn unclockwise to liberate the crown in position 1. Push and turn clockwise to block the crown into case

Position 1 – Normal running position; crown liberated from the case.

Position 2 – To set DATE and DUAL TIME: Date setting and correction of dual time with the pushers.

Position 3 - To set TIME and DUAL TIME: Time setting and rapid correction of dual time with the pushers

Local time is indicated by the hour H, minute M and second S

hands, while left-mounted Dual time hand indicates dual time hours.

After changing the battery, before setting the time, check if the dual time hour hand and dual time minute hand are at «0» (12 o'clock position). If either the dual time hour hand or the dual time minute hand is not in the «0» position, reset it/them with the following procedure:

1. Pull crown out to position 2.
2. Keep the buttons **A** & **B** pressed at the same time for more than 2 seconds, then release the buttons (dual time hands move and return to where they were).
3. Press button **A** or **B** to reset the dual time hands to «0» position.
Button **A**: dual time hour hand move clockwise.
Button **B**: dual time minute hand move clockwise.
The dual time hands move quickly if the respective buttons are kept pressed.
4. Push crown back in to position 1.

To set the local time:

1. Pull crown out to position 3, watch stops.
2. Rotate crown in either direction to move hands to desired time.
3. Push crown back in to position 1; watch restarts, now set to correct time.

To set the date:

1. Pull crown out to position 2.
2. Turn the crown counterclockwise to set the date hand. Do not set the date hand between 9:00pm and 2:00am. The date hand will not move back by turning the crown clockwise.
3. Push crown back in to position 1; watch restarts, now set to correct date.

To set the dual time (in short push mode):

1. Crown should be in position 2.
2. Adjust the Dual time hand **F** by pushing button **A** to go back 1 hour per push or by pushing button **B** to advance 1 hour per push.
3. Push crown back into position 1; watch restarts, now set to correct time.

To set the dual time (in long push mode):

1. Crown should be in position 3.
2. Adjust the Dual time hand **F** by long pushing button **A** to go back until reaching the desired hour or by long pushing button **B** to advance until reaching the desired hour.
3. Push crown back into position 1; watch restarts, now set to correct time.

To set time zone reflecting:

- Rotate clockwise or unclockwise the crown **Z** to set the time zone.

(3) DUAL-TIME MODELS - TYPE B

Dual-Time with 24-hour hand and date



Figure A

Legend

0, 1, 2, 3 – Crown positions

A – Push (-) button to set dual time

B – Push (+) button to set dual time

H – Hour hand

M – Minute hand

S – Second hand

F – Dual time hour hand (12 hrs)

J – 24 hours hand

Z – Dual time minute hand (60 min)

K – Date window

Crown Positions:

Position 0 - Crown blocked and pushed into case. Turn counterclockwise to liberate the crown in position 1. Push and turn clockwise to block the crown into case

Position 1 – Normal running position; crown liberated from the case.

Position 2 – To set DATE and DUAL TIME: Date setting and correction of dual time with the pushers.

Position 3 - To set TIME and DUAL TIME: Time setting and rapid correction of dual time with the pushers

Local time is indicated by the hour H, minute M and second S

hands, while left-mounted Dual time hand indicates dual time hours.

After changing the battery, before setting the time, check if the dual time hour hand and dual time minute hand are at «0» (12 o'clock position). If either the dual time hour hand or the dual time minute hand is not in the «0» position, reset it/them with the following procedure:

1. Pull crown out to position 2.
2. Keep the buttons **A** & **B** pressed at the same time for more than 2 seconds, then release the buttons (dual time hands move and return to where they were).
3. Press button **A** or **B** to reset the dual time hands to «0» position.
Button **A**: dual time hour hand move clockwise.
Button **B**: dual time minute hand move clockwise.
The dual time hands move quickly if the respective buttons are kept pressed.
4. Push crown back in to position 1.

To set the local time:

1. Pull crown out to position 3, watch stops.
2. Rotate crown in either direction to move hands to desired time.
3. Push crown back in to position 1; watch restarts, now set to correct time.

Note :

The 24 hour hand **J** moves correspondingly with the hour hand.

To set the date:

1. Pull crown out to position 2.
2. Turn the crown counterclockwise to set the date window **K**. Do not set the date between 9:00pm and 2:00am. The date window will not move back by turning the crown clockwise.
3. Push crown back in to position 1; watch restarts, now set to correct date.

To set the dual time (Quick set):

1. Crown should be in position 1.
2. Adjust the Dual time hand **F** by pushing button **A** to go back 1 hour per push or by pushing button **B** to advance 1 hour per push.

To set the dual time (Precise adjustment):

1. Crown should be in position 3.
2. Adjust the Dual time hand **Z** by pushing button **A** to go back 1 minute per push or by pushing button **B** to advance 1 minute per push.
3. Push crown back into position 1; watch restarts, now set to correct time.

Note : The dual time minute hand **Z** rotates one revolution at every quarter (15 minutes). There is no problem as it is typical function of the movement.

(4) MULTI-EYE MODELS – TYPE A

With day/date with or without 24-hour hand without pushers



Figure A



Figure C



Figure B

Legend

- 1, 2, 3 – Crown positions
- H – Hour hand
- M – Minute hand
- S – Seconds hand
- J – 24 Hour hand
- T – Date hand
- D – Day hand

Crown positions:

- Position 1 – Normal running position; crown pushed into case.
- Position 2 – To set DATE: Rotate crown clockwise.
- Position 3 – To set TIME: Rotate crown in either direction.

To set the time:

1. Pull crown out to position 3 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown clockwise to advance the hour and minute hands until the day hand is set to the desired day of the week, if applicable for your model. The day hand will not move back by turning the crown counterclockwise.
3. Turn crown in either direction to move hands to desired time. The 24 hour hand J is moving correspondingly with the hour hand. When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
4. Push crown back in to position 1; watch restarts, now set to correct time.

To set the date:

1. Pull crown out to position 2.
2. Turn the crown counterclockwise to set the date hand. Do not set the date hand between 9:00pm and 2:00am. The date hand will not move back by turning the crown clockwise.
3. Push crown back in to position 1; watch restarts, now set to correct date.

(4) MULTI-EYE MODELS – TYPE B

With day/date with retrograde sub-eyes without pushers



Figure A

To set the time:

1. Pull crown out to position 3 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown clockwise to advance the hour and minute hands until the day hand is set to the desired day of the week, if applicable for your model. The day hand will not move back by turning the crown counterclockwise.
3. Turn crown in either direction to move hands to desired time. The 24 hour hand **J** is moving correspondingly with the hour hand. When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
4. Push crown back in to position 1; watch restarts, now set to correct time.

To set the date:

1. Pull crown out to position 2.
2. Turn the crown counterclockwise to set the date hand. Do not set the date hand between 9:00pm and 2:00am. The date hand will not move back by turning the crown clockwise.
3. Push crown back in to position 1; watch restarts, now set to correct date.



Figure B

Legend

- 1, 2, 3 – Crown positions
H – Hour hand
M – Minute hand
S – Seconds hand
J – 24 Hour hand
T – Date hand
D – Day hand

Crown positions:

- Position 1 – Normal running position; crown pushed into case.
 Position 2 – To set DATE: Rotate crown clockwise.
 Position 3 – To set TIME: Rotate crown in either direction.

(5) MULTI-EYE MODELS – TYPE C

With day/date with or without 24-hours hand with pushers



Figure A

Legend

- 1, 2 – Crown positions
- A – Push button to set the day
- B – Push button to set the date
- H – Hour hand
- M – Minute hand
- S – Second hand
- T – Date hand
- J – 24-hour hand
- D – Day hand

Crown Positions:

- Position 1 - Normal position. Crown pushed into case.
- Position 2 - To set TIME: Rotate crown in either direction.

To set the time:

1. As soon as the second hand reaches 12 o'clock, pull the crown out to position 2; watch will stop.
2. Turn crown in either direction to move hands to correct time, taking AM/PM into consideration (J).
3. Push crown back into position 1.

To set the day and the date:

1. Press pushbutton **A** to set the day. Each press and release will advance the Day hand by one day.
2. Press pushbutton **B** to set the date. Each press and release will advance Date hand by one number.

IMPORTANT: Never correct the Date when the time is between 9:00 PM and 4:00 AM when automatic calendar changes are in progress; doing so could damage the mechanism.

3. Following a month with fewer than 31 days, you will need to adjust the Date.

(6) ANALOG CHRONOGRAPHS – TYPE A

With day/date/24-hour hand



Figure A

Legend

1, 2, 3 – Crown positions

Button A – Start/Stop

Button B – Reset

H – Hour hand

M – Minute hand

S – Second hand

P – Chronograph Minutes Counter

Q – Chronograph Seconds Counter

J – 24-Hour hand

K – Date window

Crown Positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set TIME: if no date function.

To set DATE: applicable with date function.

Position 3 - To set TIME: applicable with date function.

The time measured indicated by the stopwatch hands is independent from the center hands.

The stopwatch can measure up to 30 minutes.

To set the time:

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.

2. Turn crown in either direction to move hands to desired time.

*If applicable for your model, make sure to respect AM/PM (J)

*Do not press any button, otherwise the chronograph hands will

move.

3. Push crown back in to position 1; watch restarts, now set to

correct time.

To set the date (if applicable):

If your watch has a date window, your crown will have 3 positions.

Position 2 is used to set the date:

1. Pull crown out to position 2.

2. Turn crown clockwise until the correct date appears.

Crown Position 3 is used to set the time as per above explanation.

Simple Chronograph Functions:

To measure the duration of a single, non-stop event (up to 60 minutes):

1. Press pushbutton A to start chronograph.

2. Press pushbutton A a second time to stop chronograph.

3. Press pushbutton B to reset chronograph hands to zero.

Measuring Cumulative Times:

1. Press pushbutton A to start chronograph.

2. Press pushbutton A to stop chronograph timing.

3. Press pushbutton A to restart.

4. Repeat steps 2 and 3 as many times as desired.

5. When through timing, press button B to reset chronograph hands to zero.

Measuring Split Times:

1. Press pushbutton A to start chronograph.

2. Press pushbutton B to momentarily stop chronograph and read an intermediate or split time.

3. Press pushbutton B to restart; chronograph hands will advance rapidly to catch up with ongoing event.

4. Repeat steps 2 and 3 to take as many intermediate or split times as desired.

5. Press pushbutton A to stop chronograph timing.

6. Press pushbutton B to reset chronograph hands to zero.

(6) ANALOG CHRONOGRAPHS – TYPE B

With day/date/24-hour hand and retrograde sub-eye



Figure A

Legend

1, 2, 3 – Crown positions

Button A – Start/Stop

Button B – Reset

H – Hour hand

M – Minute hand

S – Second hand

P – Chronograph Minutes Retrograde Counter

Q – Chronograph Seconds Counter

J – 24-Hour hand

K – Date window

Crown Positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set TIME: if no date function.

To set DATE: applicable with date function.

Position 3 - To set TIME: applicable with date function.

The time measured indicated by the stopwatch hands is independent from the center hands.

The stopwatch can measure up to 30 minutes.

To set the time:

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.

2. Turn crown in either direction to move hands to desired time.

*If applicable for your model, make sure to respect AM/PM (J)

*Do not press any button, otherwise the chronograph hands will

move.

3. Push crown back in to position 1; watch restarts, now set to

correct time.

To set the date (if applicable):

If your watch has a date window, your crown will have 3 positions.

Position 2 is used to set the date:

1. Pull crown out to position 2.
2. Turn crown clockwise until the correct date appears.

Crown Position 3 is used to set the time as per above explanation.

Simple Chronograph Functions:

To measure the duration of a single, non-stop event (up to 60 minutes):

1. Press pushbutton A to start chronograph.
2. Press pushbutton A a second time to stop chronograph.
3. Press pushbutton B to reset chronograph hands to zero.

Measuring Cumulative Times:

1. Press pushbutton A to start chronograph.
2. Press pushbutton A to stop chronograph timing.
3. Press pushbutton A to restart.
4. Repeat steps 2 and 3 as many times as desired.
5. When through timing, press button B to reset chronograph hands to zero.

Measuring Split Times:

1. Press pushbutton A to start chronograph.
2. Press pushbutton B to momentarily stop chronograph and read an intermediate or split time.
3. Press pushbutton B to restart; chronograph hands will advance rapidly to catch up with ongoing event.
4. Repeat steps 2 and 3 to take as many intermediate or split times as desired.
5. Press pushbutton A to stop chronograph timing.
6. Press pushbutton B to reset chronograph hands to zero.

(7) ANALOG CHRONOGRAPHS— TYPE C

Chronographs 1/10 Second



Figure A



Figure B

Legend

- 1, 2, 3 – Crown positions
 Button A – Start/Stop
 Button B – Reset
 H – Hour hand
 M – Minute hand
 S – Second hand
 P – Chronograph Minutes hand
 Q – Chronograph Seconds hand
 X – Chronograph 1/10-of-a-seconds Chronograph hand

Crown Positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set TIME: if no date function.

To set DATE: applicable with date function.

Position 3 - To set TIME: applicable with date function.

The time measured indicated by the stopwatch hands is independent from the center hands.

The stopwatch can measure up to 60 minutes.

The stopwatch measures in 1/10 second increments.

To set the time:

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown in either direction to move hands to desired time. If applicable for your model, make sure to respect **AM/PM**. Do not press any button, otherwise the chronograph hands will move.
3. Push crown back in to position 1; watch restarts, now set to correct time.

To set the date (if applicable):

If your watch has a date window, your crown will have 3 positions. Position 2 is used to set the date:

1. Pull crown out to position 2.
2. Turn crown clockwise until the correct date appears.

Crown Position 3 is used to set the time as per above explanation.

Simple Chronograph Functions:

To measure the duration of a single, non-stop event (up to 60 minutes):

1. Press pushbutton **A** to start chronograph.
2. Press pushbutton **A** a second time to stop chronograph.
3. Press pushbutton **B** to reset chronograph hands to zero.

Measuring Cumulative Times:

1. Press pushbutton **A** to start chronograph.
2. Press pushbutton **A** to stop chronograph timing.
3. Press pushbutton **A** to restart.
4. Repeat steps 2 and 3 as many times as desired.
5. When through timing, press button **B** to reset chronograph hands to zero.

Measuring Split Times:

1. Press pushbutton **A** to start chronograph.
2. Press pushbutton **B** to momentarily stop chronograph and read an intermediate or split time.
3. Press pushbutton **B** to restart; chronograph hands will advance rapidly to catch up with ongoing event.
4. Repeat steps 2 and 3 to take as many intermediate or split times as desired.
5. Press pushbutton **A** to stop chronograph timing.
6. Press pushbutton **B** to reset chronograph hands to zero.

(8) ANALOG CHRONOGRAPHS – TYPE C

Chronograph with minutes and seconds hands and date



Figure A

Legend

- 1, 2, 3 – Crown positions
- Button A – Start/Stop
- Button B – Reset
- H – Hour hand
- M – Minute hand
- S – Second hand
- P – Chronograph Minutes hand
- Q – Chronograph Seconds hand
- K – Date Window

Crown positions:

- Position 1 - Normal running position; crown pushed into case.
- Position 2 - To set DATE: Rotate crown clockwise.
- Position 3 - To set TIME: Rotate crown in either direction.

Setting the time:

1. Pull crown out to position 3. Watch will stop.
2. Turn crown in either direction to move hands to correct time.
3. Push crown back into position 1.

Setting the date:

1. Pull crown out to position 2.
2. Turn crown clockwise until the correct date.
IMPORTANT: Never correct date between 9:00 PM and 3:00 AM when automatic calendar changes are in progress; doing so could damage the mechanism.
3. Push crown back into position 1.

Chronograph Functions:

NOTE: After 2 hours of continuous running, the chronograph stops and resets automatically to save battery.

Measuring Cumulative Times:

To measure the combined time of a series of shorter events:

1. Press pushbutton A to start chronograph.
2. Press pushbutton A to stop chronograph and read elapsed time.

3. Press pushbutton A to resume measurement.
4. Repeat steps 2 and 3 to add each interval of time.
NOTE: Each time you stop chronograph, chronograph hands will indicate total accumulated time.
5. After final reading, push button B to reset chronograph hands.

Measuring Split Times:

To take intermediate time readings as an event progresses:

1. Push button A to start timing.
2. Push button B to stop chronograph and read split time.
NOTE: Chronograph continues to run in background.
3. Push button B to restart; chronograph hands to catch up with ongoing event.
4. Repeat steps 2 and 3 to take any additional split times.
5. Push button A to stop chronograph.
6. Push button B to reset chronograph hands.

(9) AUTOMATIC

With or without 24-hour hand



Figure A



Figure B

Legend

- 1, 2 – Crown positions
- H – Hour hand
- M – Minute hand
- S – Second hand
- J – 24 hours hand

Crown Positions:

- Position 1 - Normal position. Crown pushed into case.
- Position 2 - To set TIME: Rotate crown in either direction.

Automatic functioning:


NOTE: Automatic winding watch can also be hand wound by turning the crown clockwise in Normal position. Wind several times clockwise. It will start to move naturally.

To set the time:


1. Pull crown out to position 2.
 2. Turn crown in either direction to move hands to desired time.
 3. Push crown back in to position 1; watch restarts, now set to correct time.
- *(24-hour hand moves linked with the center Hour and Minute hand).

(9) SPECIAL FEATURES

SCREW DOWN CROWN

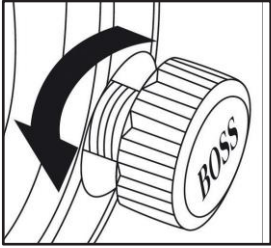

A

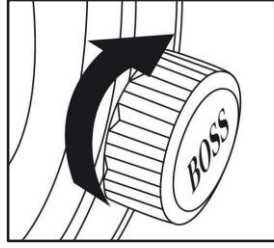

B

Some models are equipped with a special screw-down crown that helps seal the case against water and moisture. Before attempting to set the time or date, you must first unlock the screw-down crown by turning it counterclockwise until it loosens (approximately six rotations).

Unlocking is not required with standard crowns.

A To unlock the crown:

Rotate the crown counterclockwise (left) until it releases from the case.


B To re-lock the crown after time/date setting:

Rotate the crown clockwise (right) while pushing it in, and tighten firmly.

(9) SPECIAL FEATURES


MESH BRACELET SLIDING CLASP

The mesh bracelets found on select models feature a hooking jewelry clasp that allows you to size the bracelet by sliding the pin-bar half of the clasp along the bracelet to achieve a customized fit.

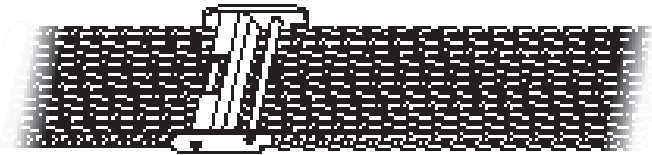

Above: Open mesh bracelet side with pin-bar half of sliding clasp locked in position.

To size the bracelet:

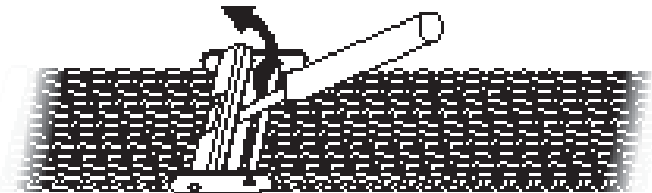

1. Use tool such as a small flat-head screwdriver to pop open metal plate on pin-bar half of clasp, releasing the clasp position locking mechanism.



2. Slide pin-bar half of clasp along the mesh bracelet in either direction to desired position.



3. Close metal plate, locking the pin-bar half of the clasp in new position on the bracelet.

CARE AND MAINTENANCE

Your HUGO BOSS WATCH has been developed with meticulous attention to quality, function and detail. Please read the following information and instructions carefully to learn about the features, proper care and operation of your new timepiece. For additional information on service and repairs, please see the Service and Warranty section.

Never open the watch yourself. If your watch needs repair or adjustment, take or mail it directly to an authorized Service Center. For a complete worldwide listing, visit us online at www.mgiservice.com

SHOCK

All of our watches have shock-resistant movements and are tested to meet international standards for shock resistance.

MAGNETISM

The exposure of a timepiece to a strong magnetic field will affect its time-keeping, and may cause it to stop. A quartz watch should resume working with its original accuracy when removed from the magnetic field; an automatic or hand-wound mechanical timepiece, however, may require demagnetization before it will operate again.

WATER RESISTANCE

All our watches are tested to meet international standards for water resistance. Most styles are water resistant to 3 bar (3ATM/30 meters/99 feet); certain models are water resistant to even greater pressures, as marked on the dial or case-back. These indications do not correspond to a diving depth but rather refer to the pressure at which the tests required to meet the international water resistance standard were conducted.

CAUTION: If the water resistance limit is not marked on your watch, do not subject it to a pressure/depth greater than 3 bar (3 ATM/30 meters/99 feet), or your watch could be damaged and your warranty will be voided. Do not operate the watch crown, push-buttons on a chronograph model, or any other pushers/ buttons when the timepiece is wet or under water.

Water resistance applies only to the watch case; some watch straps should not be worn under water or subjected to wet conditions. Please see **STRAP CARE**.

Avoid exposing your watch to sudden and excessive temperature variations.

Do not drop your watch or bang it against a hard surface. Water resistance must be rechecked after every violent shock.

Carefully wipe your watch using a soft cloth dampened with fresh water after exposure to chlorine or sea water.

OTHER PRECAUTIONS:

If your watch is equipped with a screw-down crown, be sure to screw it back down into the case after every operation.

STRAP CARE

While the life span of a watch strap depends on your care and wearing habits, as well as the climate in which you live, proper care will extend its life.

Leather strap should be kept dry. Exposure to water may cause a leather watch strap to become brittle and eventually break. To preserve the finish of the leather, contact with perfumes should be avoided. Following exposure to chlorinated or salt water, gently damp wipe your leather strap with fresh water, and air dry.

To help preserve the natural elasticity and quality of a silicone or rubber strap, rinse it using a soft cloth soaked in fresh water following exposure to salt water, chemicals or abrasive substances.

Use warm water and a neutral pH soap applied to a soft cloth to gently clean a white silicone or rubber strap; then wipe with a second clean cloth dipped in warm water, or rinse carefully under warm running water. Contact with acetone and ethyl alcohol should be avoided.

NOTE: Watch straps are not covered by the watch warranty.

BATTERY INFORMATION

Your quartz analog watch or chronograph has a battery specially designed for watches. It will last approximately 18-36 months under normal use.

CARE AND MAINTENANCE

NOTE: Frequent use of special functions, like the stopwatch timer on chronograph models, may shorten battery life.

End-of-life feature: The second hand on many models will start to move haltingly in 2 or 4 second increments when the battery is almost exhausted, signaling the need to have it replaced.

Battery replacement: Take or send your watch to an Authorized Service Center to have battery changed – your old battery will be disposed of/recycled properly. Do not attempt to change the battery yourself.



Collection and treatment of end of life quartz watches*

This product should not be discarded with household waste. To protect the environment and human health, it must be returned to a local authorized collection system for proper recycling.

*Valid in the EU member states and in any countries with corresponding legislation.

WARRANTY INFORMATION

WARRANTY INFORMATION

Not only is each Hugo Boss watch beautiful in design, it is crafted with quality materials and components to offer precise, reliable performance. We proudly stand behind every Hugo Boss watch we sell.

Hugo Boss Watches Limited Warranty

Hugo Boss Watches warrants to the original consumer that, for a period of two (2) years from the date of purchase, his/her watch will be free from defects in materials and workmanship that prevent the watch from functioning properly under normal use.

Our responsibility for defects covered by this warranty is limited to repairing or (at the sole discretion of Hugo Boss Watches) replacing the defective watch, free of charge.

This limited warranty does not cover batteries, straps, bracelets, crystals, gold- or ionic-plating or PVD finishing, cosmetic issues such as scratches or normal wear and tear, or any damage arising from accidents or misuse, or from any alteration, service or repair performed by any party other than a Hugo Boss Watches Authorized Service Center.

This warranty is void if the timepiece was not purchased from an Authorized Hugo Boss Watches Dealer, as evidenced by valid proof of purchase – a dated sales or gift receipt showing the name of the retailer and an identifying style number for the Hugo Boss watch.

Any other warranty provided by the retailer is entirely their responsibility. No person or company is authorized to change the terms of this warranty. This warranty gives the consumer specific legal rights. He/she may also have other statutory rights which may vary from state to state and country to country. However, to the extent not prohibited by law, this limited warranty is exclusive and in lieu of all other warranties, oral, written, statutory, express or implied (including without limitation the warranties of merchantability and fitness for a particular purpose), all of which are expressly disclaimed.

OBTAINING SERVICE

Should your HUGO BOSS watch require service or repair, you may take it to an Authorized HUGO BOSS Watches Dealer, or mail it directly to one of the HUGO BOSS Watches Authorized Service Centers found on this website – just return to the HUGO BOSS Watches service website home page and click on the Warranty and Service Information link.

Be sure to include your complete return address and phone number along with a brief note describing the problem with your watch and/or service needed.

NOTE: To obtain service under the HUGO BOSS Watches two-year limited warranty, you will be required to present dated proof of purchase.

See preceding Warranty Information section for requirements.

OUT OF WARRANTY

The Hugo Boss Watches Service Center can also perform repairs not covered by the Hugo Boss Watches warranty as well as service after the expiration of the warranty period. Should your watch require parts or service not covered under the terms of your warranty, a written estimate will be sent for your approval and payment before the work is undertaken. Please copy and use the form(s) from this file.

BATTERY REPLACEMENT

The Hugo boss Watches Service Center can also change the battery on your Hugo Boss watch, for a fee.

PACKING YOUR WATCH

When mailing your watch, it should be packed securely in padded wrapping materials (for protection against shock) in a sturdy box sealed with tape.

CAUTION: Do not use the gift box your watch came in. It was not designed to withstand shipping, and your watch could be damaged in transit. We recommend that you use registered mail and insure your watch for its full replacement value.

INSURING YOUR WATCH

We recommend that you use registered mail and insure your watch for its full replacement value.

ADDITIONAL INSTRUCTIONS

Charges will be made for all repairs unless the original dated purchase or gift receipt showing the name of the retailer and an identifying watch style number is returned with the product, and repairs are covered under terms of warranty.

Authorized Service Center locations can be accessed from the link on the www.mgiservice.com/hugoboss homepage.