


White Wooden Corner Cabinet

Assembly Instructions – Please keep for future reference

833/4792

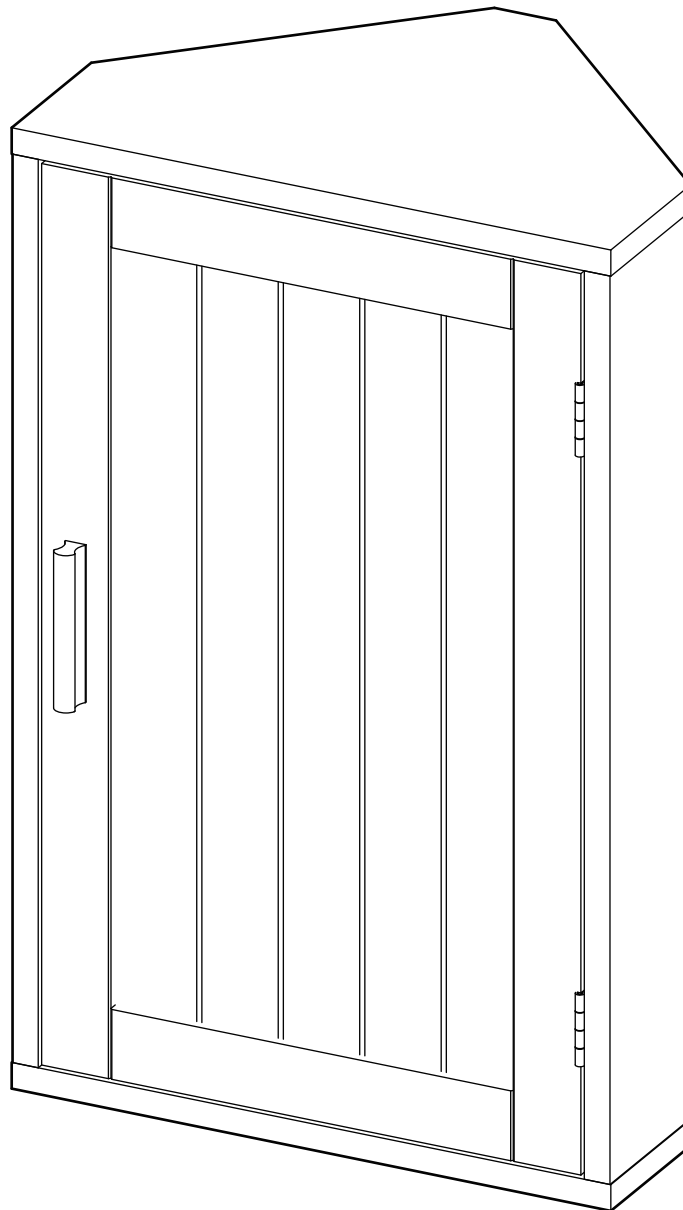

Dimensions

Width - 35cm

Depth - 25cm

Height - 55cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and care advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the panels, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

• **Note:** Only apply the glue once you are sure of the assembly.

- The wall plugs supplied are suitable for solid walls only. It is important that the correct type of fixing is used for your wall, seek professional advice if in doubt.

- Parts of the assembly will be easier with 2 people.

- If using power tools, please follow the safety instructions supplied with the tools.



- We do not recommend the use of power drill/ drivers for inserting screws, as this could damage

the unit. Only use hand screwdrivers.

- **Warning:** Before drilling, check the wall for hidden pipes and cables.

- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately. If possible show product information or label to the medical advisor.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as a reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components,
call the Customer Helpline: 08456 400800


Please check you have all the panels listed below

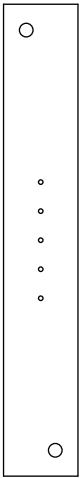


1 Middle back Panel

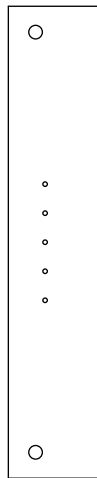


2 Left side Panel

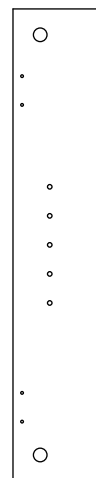


3 Right side Panel

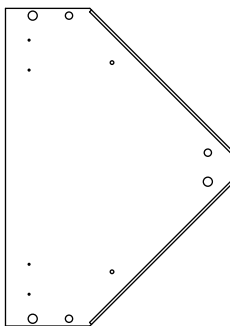


4 Top Panel

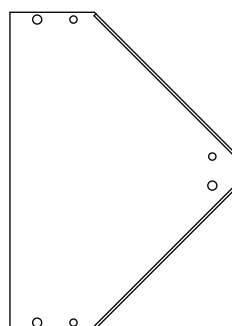


5 Bottom Panel

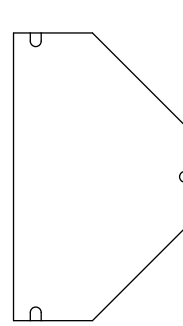

6 Adjustable shelf

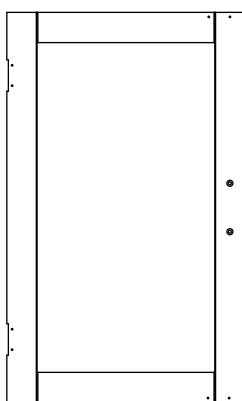

7 Door Panel

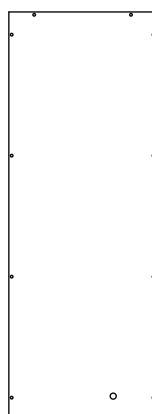















8 Left & Right back Panel x 2


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel x 6	B  Locking Pin x 6	C  Locking Nut x 6
D  Hinge x 2	E  Magnetic Catch x 1	F  Strike Plate x 1
G  30mm Screw x 2	H  12mm Screw x 12	I  10mm Screw x 26
J  Wall plug(for solidwalls only) x 2	K  35mm Screw x 2	L  Wooden Handle x 1
M  Plastic Support x 3	N  Hanger Bracket x 2	

Tools required




Phillips screwdriver
(medium & large)



Flatblade screwdriver
(medium)



7mm Suitable drill bit
(for use with wall plug)

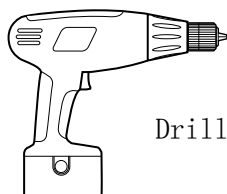

Drill



Small
hammer



Ruler/tape
measure



Eye protection
(when using a
hammer or glue)

Ruler – Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1




Assembling bottom and middle back panel

a: Insert dowels **A** and locking pins **B** into bottom panel **5**.



b: Insert locking nut **C** into middle back panel **1** and attach it onto the bottom panel **5**.

Tighten the locking nut **C** to secure the unit.

a:

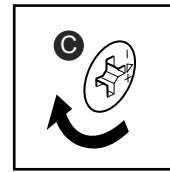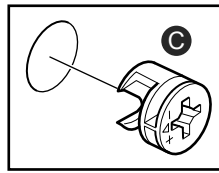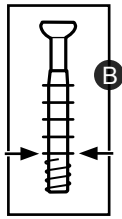

b:

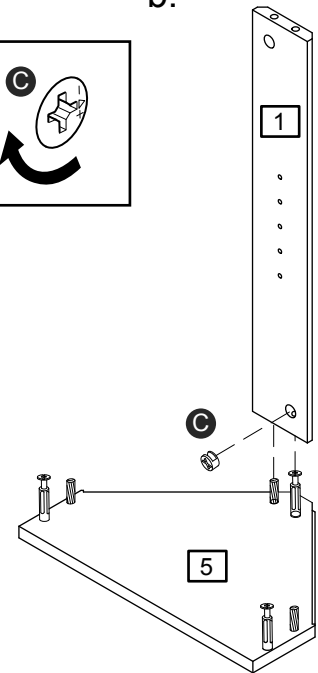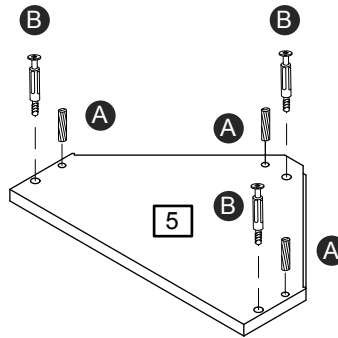

Step 2

Assembling left and right side panels


Insert locking nut **C** into left side panel **2** and right side panel **3**.

NOTE: Pls follow option 1 if you want to open door from left, or follow option 2 if you want to open door from right.




Attach left and right side panels **2** **3** onto the bottom panel **5**.

Tighten the locking nuts **C** to secure the unit.

Option 1

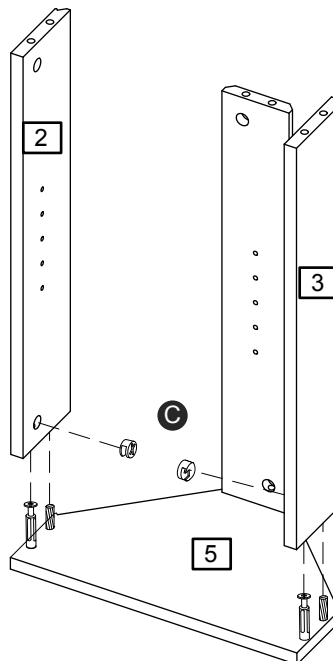

Option 2

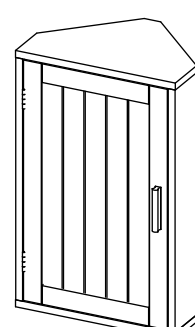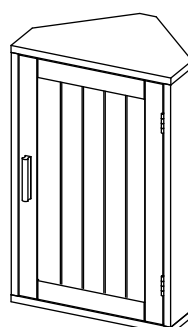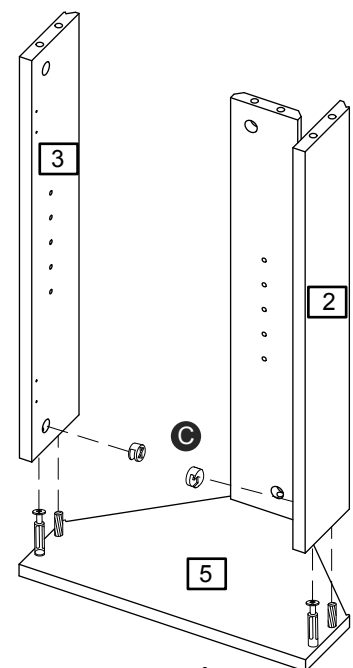

Assembly Instructions

Step 3

Assembling top panel


a: Screw locking pins **B** into top panel **4**.

Using 10mm screws **I** to fix hanger brackets **N** onto top panel.

b: Insert dowels **A** and locking nuts **C** into middle back panel **1** and side panels **2** **3**.

Carefully attach top panel **4** to the unit.

Tighten the locking nuts **C** to secure the unit.

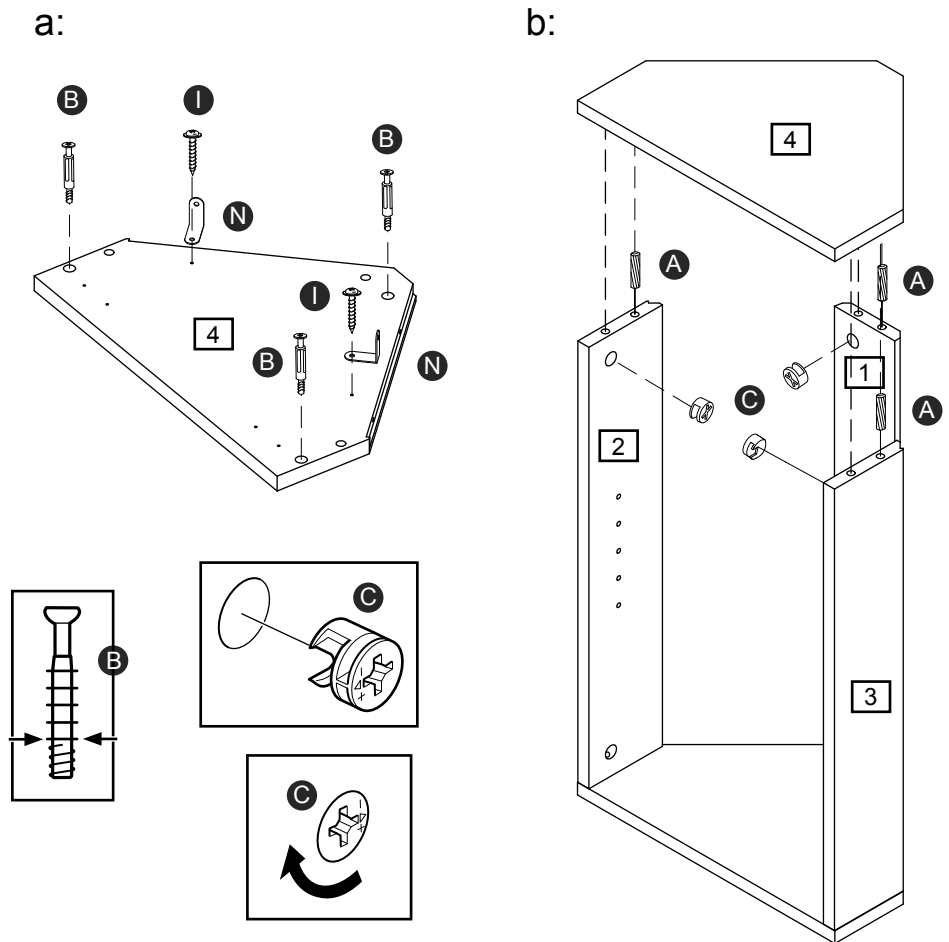


Step 4

Assembling left and right back panels

Using 10 screws **I** to attach left & right back panels **8** onto the unit.

NOTE: Pls make sure the hole in left & right back panel match the hanger bracket.

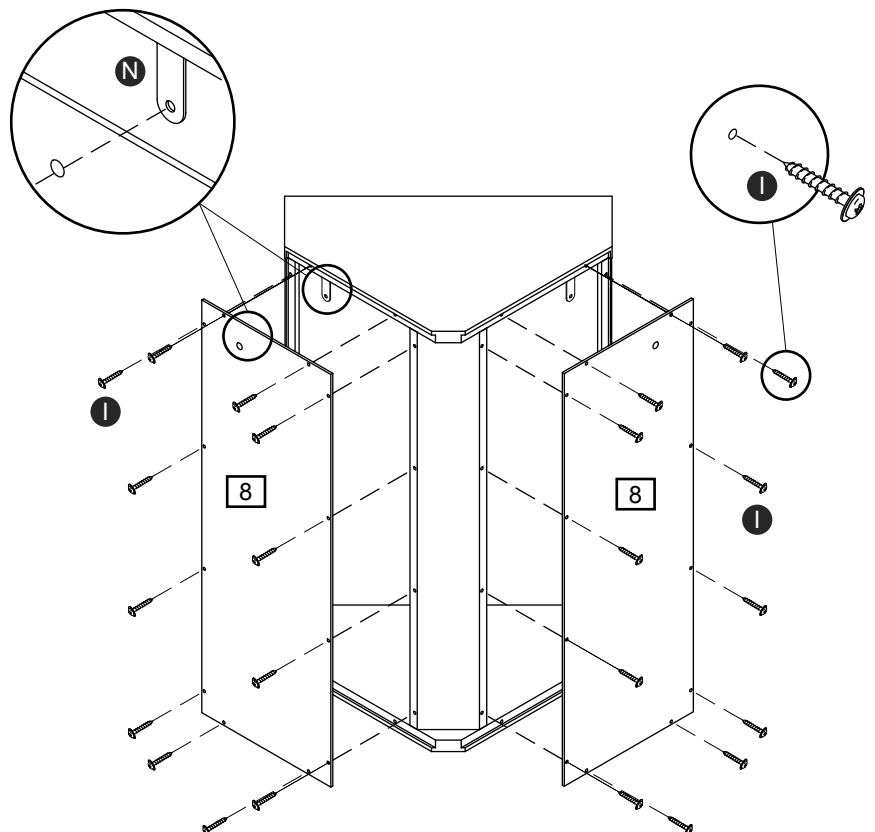

Assembly Instructions


Step 5

Assembling door panel

NOTE: It would be useful to ask someone to help you at this stage.

a: Use 12mm screws **H** to fix hinges **D** onto the door panel **7**.


Use 30mm screws **G** to fix wooden handle **L** onto door panel **7**.

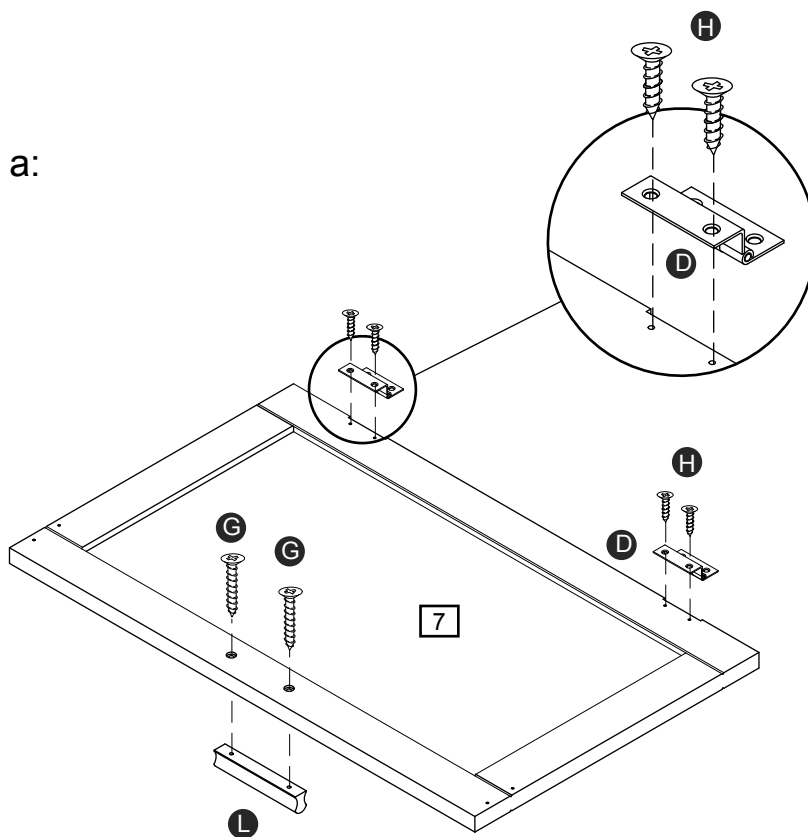

b: Carefully use 12mm screws **H** to fix hinges **D** onto the right side panel **3**.

Use 12mm screws **H** to fix strike plate **F** onto the door panel **7**.

Use 12mm screws **H** to fix magnetic catch **E** onto the top panel **4**.

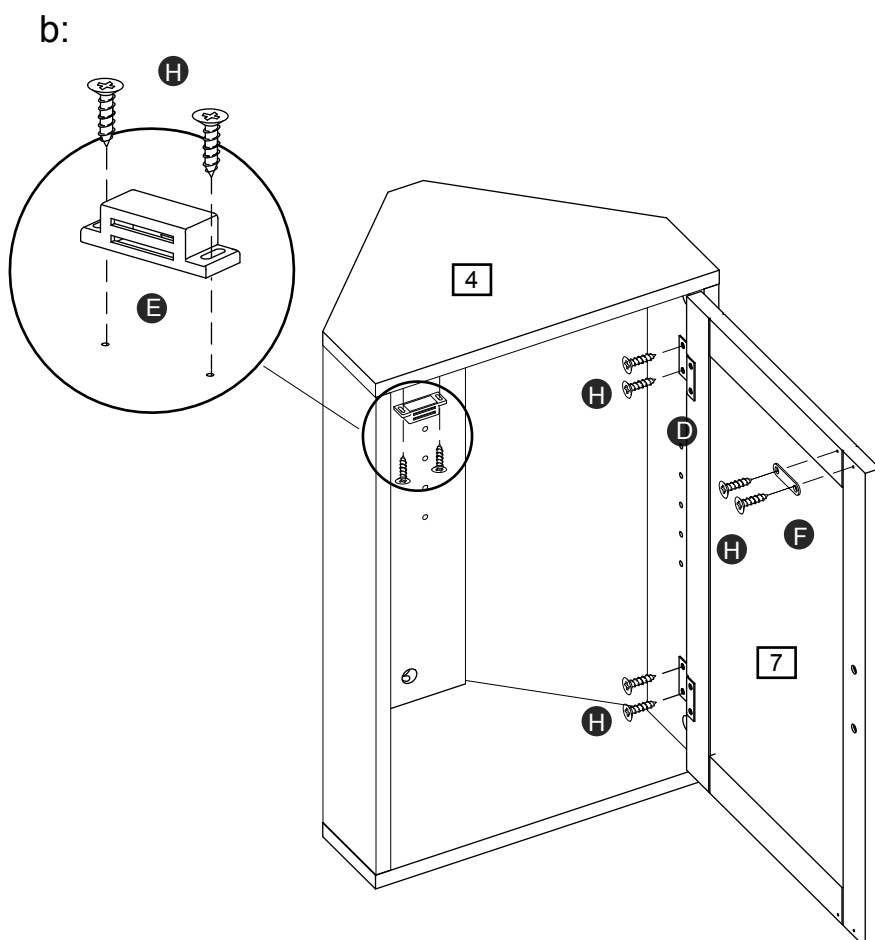


Assembly Instructions

Step 6

Fixing to the wall

NOTE: It would be useful to ask someone to help you at this stage.

Use 35mm screws **K** and wall plugs **J** to fix the unit on the wall.

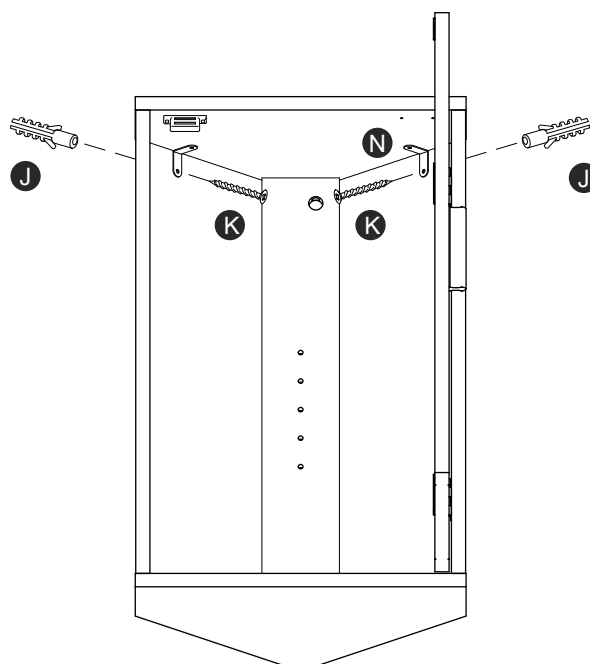


Step 7

Assembling adjustable shelf panel

NOTE: It would be useful to ask someone to help you at this stage.

Insert plastic supports **M** into side panels **2** **3** and middle back panel **1**.

Carefully put the adjustable shelf panel **6** on it.

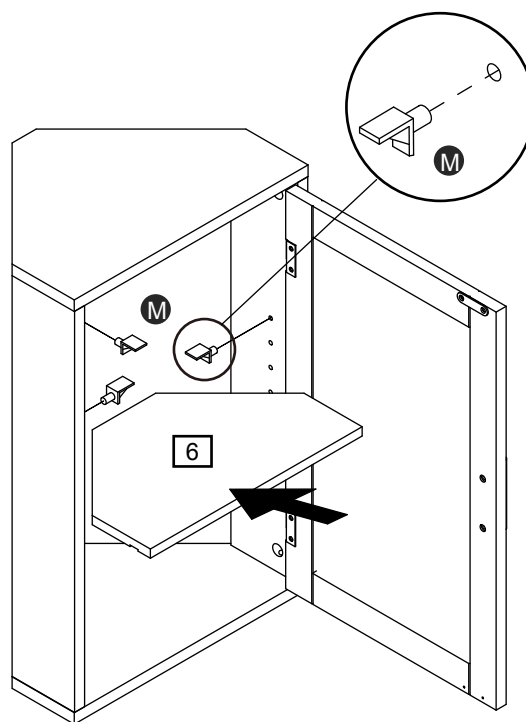

NOTE: Please make sure the unit is secure before use.

The assembly is now complete.

NOTE: If you have damaged or missing components, call the Customer Helpline: 08456 400800
Argos LTD, 489-499 Avebury Boulevard,
Central Milton Keynes, MK9 2NW

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

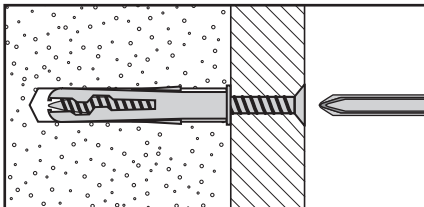


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

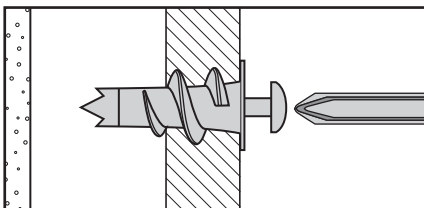


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

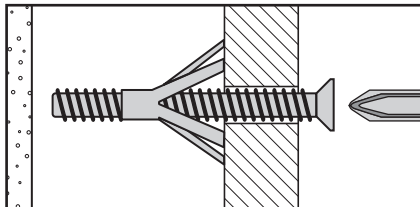


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

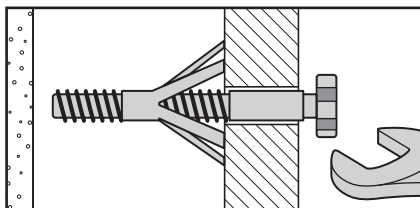


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

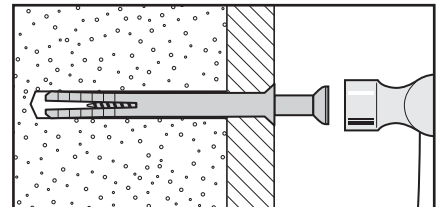

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

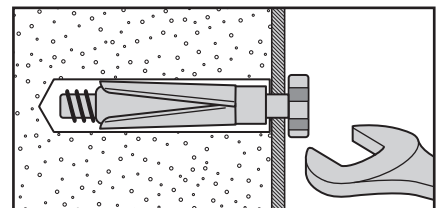

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.