

ZINC[®]



PROTECTION PAD SET

READ THIS MANUAL CAREFULLY AND FOLLOW THE INSTRUCTIONS COMPLETELY


Complies with EN 14120:2003+A1:2007
Users of body mass more than 25kg to 50kg

FITTING YOUR PROTECTION PADS

FITTING TO BE SUPERVISED BY AN ADULT.

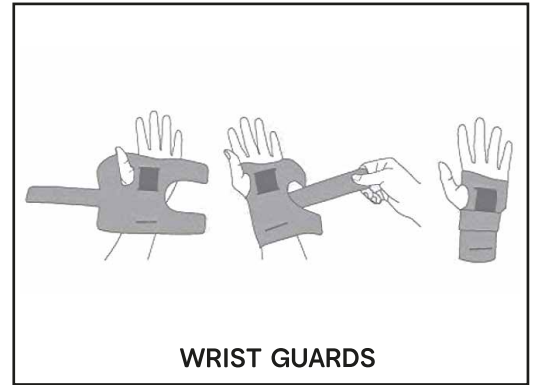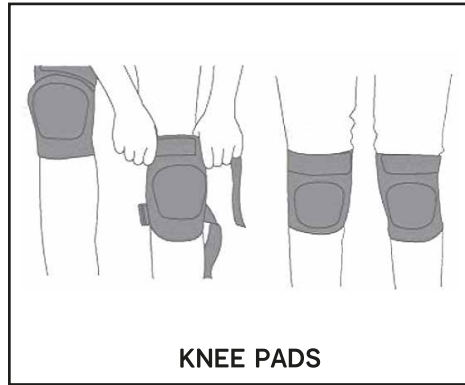

1. Select the correct pad - pay attention to the left / right markings on the labels. Place against your elbow or knee to ensure it is the correct size.
2. Use the hook and loop closure on the straps, fastening them securely around your knees or elbows. Attach securely but do not restrict blood circulation.
3. For the wrist guards - slip your hand through the straps so the flat side faces outwards. Attach securely but do not restrict blood circulation.
4. Ensure the protection pads stay secure whilst playing. Reattach the restraining straps if necessary, ensuring a secure and snug fit.

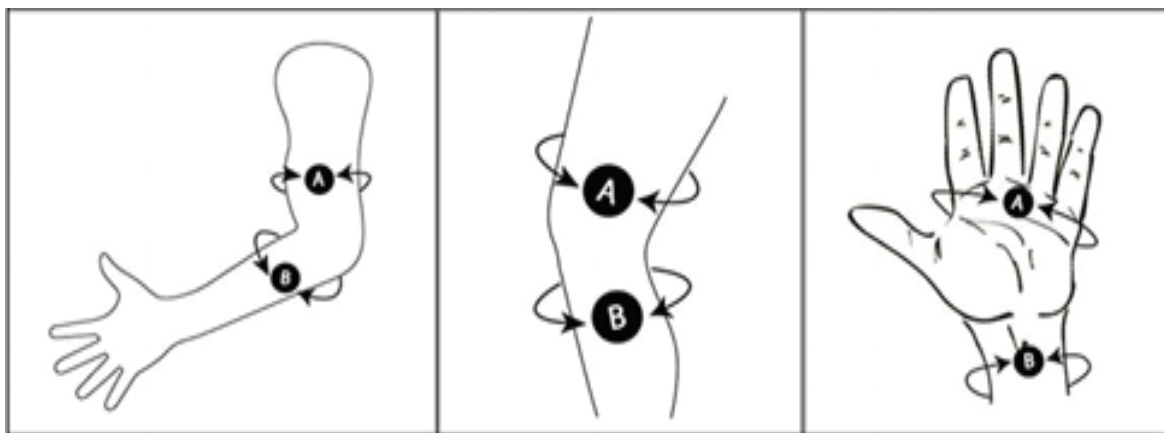

Size	Body Mass	Circumference	Elbow		Knee		Wrist	
L	25-50kg / 55-110lbs	A	26-30 cm	10-12 in	26-30cm	10-12 in	14-16.5cm	30.8-36.4in
		B	23-28 cm	9-11 in	23-28cm	9-11 in	12-16cm	4.7-6.3in

CLEANING YOUR PROTECTION PADS

Surface wipe clean only. Do not use bleach. Do not machine wash.
Dry at room temperature, away from heat sources.

Material:

5% Polyester / 25% Nylon / 20% EVA foam /
15% PP / 25% Inner cloth / 10% PVC.



DO NOT
WASH!



DO NOT
BLEACH!



DO NOT
DRY CLEAN!



DO NOT
IRON!



DO NOT
TUMBLE DRY!

SAFETY INFORMATION

INSPECTION:

Carefully inspect the protection pads before each use. If they no longer feel secure or are showing signs of wear or damage, please discard them - as their performance may be reduced.

WARNING:

The protectors are not intended to provide protection in the event of a serious fall, when travelling at speeds in excess of 12kph or 7.46mph.

These protectors help protect against superficial grazing and minor impact.

Do not store in direct sunlight.

Adult supervision is recommended during fitting.

Please be aware that changes in environmental conditions such as temperature can significantly reduce the performance of the protection pads.

Please use the product in the manner it was intended. Any contamination, alteration to the protector, or misuse would dangerously reduce the performance of the protection pads.

Please fit the protective pads so the adjustable straps provide a comfortable but secure fit. Please note that no protection can offer full protection against injury. The expected service life of the protectors is 2 years! After this period, the protectors must be replaced because it might no longer perform adequately.

Performance levels

Level 1: Protectors intended to be suitable for normal roller sports.

Level 2: Protectors intended to be suitable for use in acrobatic roller sports.

3 ranges of body mass as follows:

Range A: Users of up to 25 kg body mass;

Range B: Users of body mass more than 25 kg to 50 kg;

Range C: Users of body mass above 50 kg.

Item: ZC92211, Level 1, Size L Range B
Manufacture year: 2021

CUSTOMER HELPLINE

Hy-Pro advise you to contact us directly and not to return this item to the place of purchase. Hy-Pro has taken great care to ensure this item has reached you in good condition, should you have a query please ring our helpline +44 (0) 800 731 0006 where your call will be dealt with promptly. Alternatively, please email: customerservices@zinchq.com.

REMOVE ALL THE PACKAGING BEFORE GIVING TO A CHILD.

- PLEASE RETAIN PACKAGING AND MANUAL FOR FUTURE REFERENCE
- COLOUR & CONTENTS MAY VARY FROM THOSE SHOWN ON PACKAGING

www.hy-pro.co.uk www.zinchsports.com

(Declaration of conformity can be found on this website)

Protection pads are designed to protect impact cause by collision of part of the body with an obstacle while doing roller sports. It has passed EN14120:2003+A1:2007 to show conformity to the EHSR of EU 2016/425.

EU Type examination conducted by: SGS Fimko Oy, Takomotie 8,
FI-00380 Helsinki, Finland. Notified Body No: 0598.

HY-PRO[®]
LU5 5BN, UK

Hy-Pro House, Centrus Park, Arenson Way,
LU5 5BN, Dunstable, Bedfordshire, United Kingdom.
Cube Building, Monahan Road, Cork,
T12H1XY - Republic of Ireland.
Hy-Pro Asia - Room 1011, 10/F, Peninsula Centre,
67 Mody Road, Kowloon, Hong Kong.

