


# BabyStart Double Bed Rail

IMPORTANT! PLEASE KEEP FOR FUTURE REFERENCE

227/9358

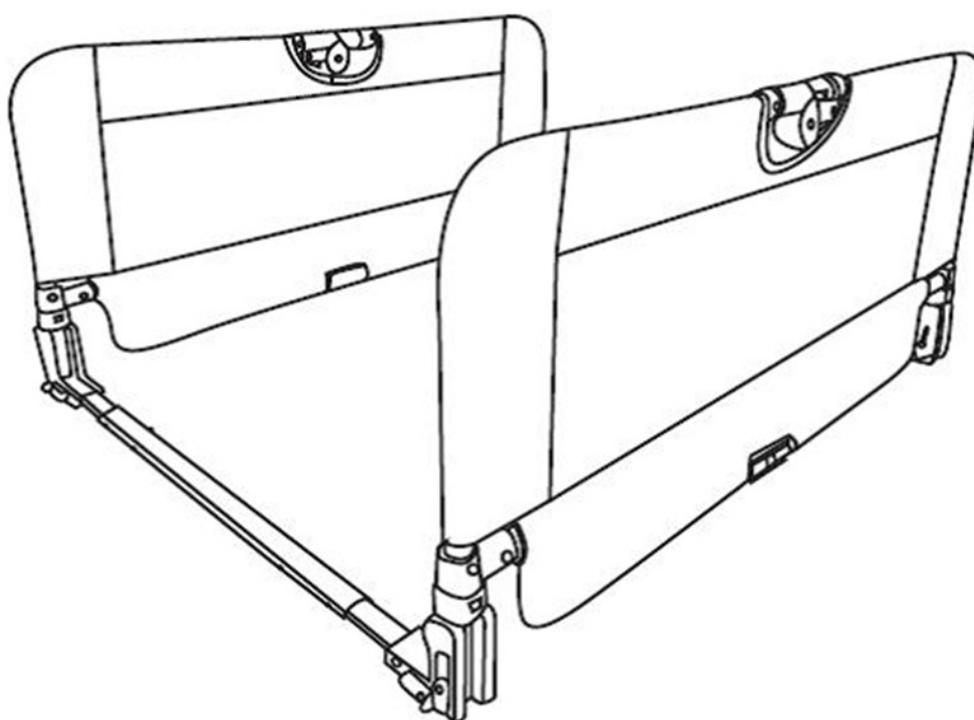

Unfolded Size: L920mm\*W950mm\*H443mm

Folded Size: L495mm\* W438mm\* H75mm

Suitable from 18 months to 5 years


**Important --Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800

# Parts

If you have damaged or missing parts,  
call the **Customer Helpline: 03456 400 800.**

Please check you have all the parts listed below:

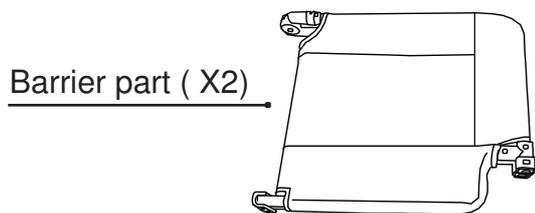

Restrain part (x4)



Link bar (x2)



## Safety instructions

**IMPORTANT: KEEP FOR FUTURE REFERENCE**

### Safety notice:

- It is recommended only to use the bed rail for children between 18 months and 5 years.
- Only use the bed rail when the child is able to climb in and out of the bed unaided.
- The bed rail must not be used as a substitute for a cot, as it cannot provide the same level of safety.
- Do not use the bed rail in cribs or on sleeping surfaces more than 60 cm above the floor.
- The bed rail must only be used on a mattress with a thickness between 80-230 millimeter.
- Do not use the bed rail unless the fixings are in place.
- Secure check carefully all locking mechanisms and fixings.
- Periodically check all locking mechanisms and fixings.
- Always make sure to fit the bed rail so that it touches the side of the mattress when in the locked position or when placed in the fitted position.
- Make sure child's fingers/toes are clear away when in use to avoid potential pinching.
- Do not use this product if any parts damaged.
- Only order additional or replacement parts from manufacturer.
- The bed rail is made in conformity with the requirements: BS 7972:2001+A1:2009.

### Warning:


- To prevent the risk of strangulation it is essential to ensure that the bed rail is fitted correctly into position. There must be a gap of at least 25 cm (10 inches) between each end of the bed and the corresponding end of the bed rail.
- The length of the mattress must be between 150-200cm with the width being 75 or 90cm.

# Parts

If you have damaged or missing parts,  
call the **Customer Helpline: 03456 400 800.**

## Step 1






Unfold the two bed barriers and lock in place.

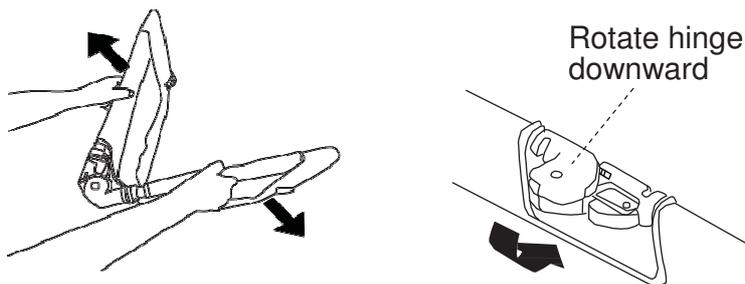

## Step 2

Check your mattress width before assembly. This bed rail must only be used on a mattress with width being 75cm or 90cm.

- 1) Assemble the restrain parts and attach to bed barriers.
- 2) Insert the link bar into correct hole of the restrain part, until the spring pins click into the hole.
- 3) According to the width of your mattress. You can adjust the bed rail. Slide the spring pins into one of the holes to fit your mattress width.

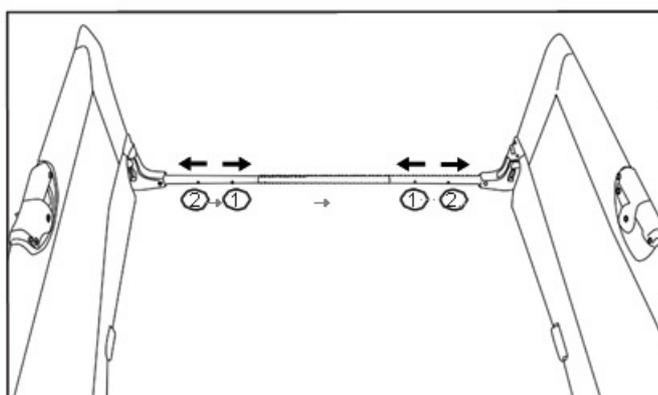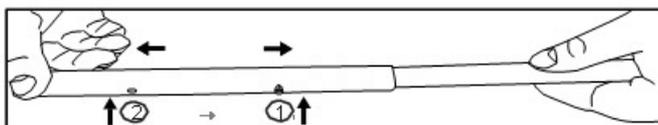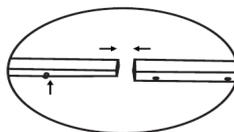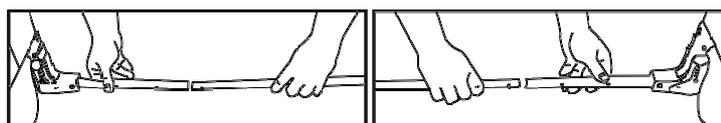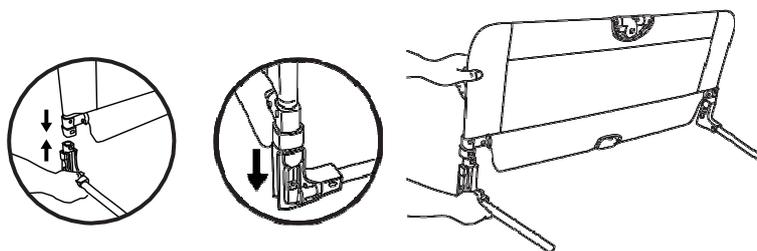

Press the spring pins and slide it into hole 1, repeat both sides. It fits 75cm width mattress.

Press the spring pins and slide it into hole 2, repeat both sides. It fits 90cm width mattress.

If one spring pin slides into hole 1 and the other side slides into hole 2, this size cannot fit the mattress.

Make sure they are locked in place before continue next steps.

## Step 3

### Bed rail installation

#### Attention:



This step is very important and related to use the bed rail in safe condition, please follow the instruction strictly. After finishing, you need verify the bed rail has been installed securely.

Take away the mattress from the bed, position the assembled bed rail in place according to the right drawing.

There must be a gap of at least 25 cm (10 inches) between each end of the bed and the corresponding end of the bed rail.

Put on the mattress.

Please ensure that the two barrier parts are tightly against the mattress when in place.

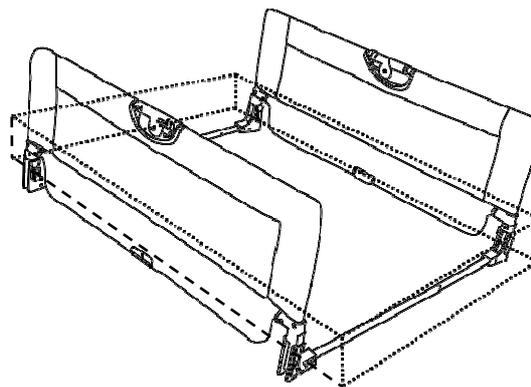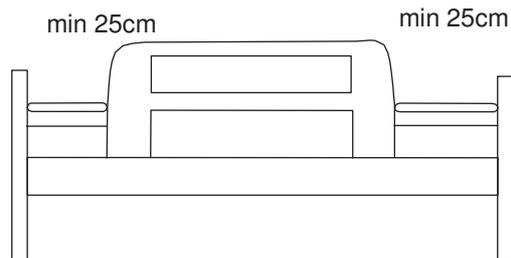





## Step 4

### Bed rail operation

- 1). Lay down the bed barrier to unlock: push the button and lift the tube at the same time. Lay down the barrier while both locking pins coming out of their sockets.
- 2). Set up the bed barrier: push the button and lift the tube to center the locking pin in place.

Make sure the tube is lifted to the top before lifting or laying down the barrier. Don't use the bed rail when one bed barrier is set up only.




Make sure the barriers are set up securely before use.

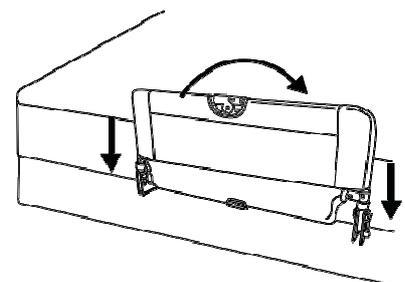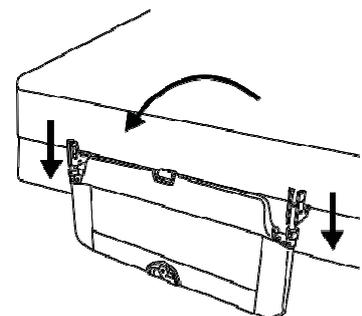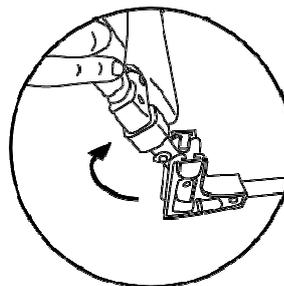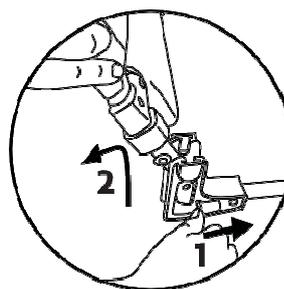

## Step 5

### Folding the bed rail for storing

- 1). Take off the bed rail from the bed.
- 2). Reversely operate according to step 2.

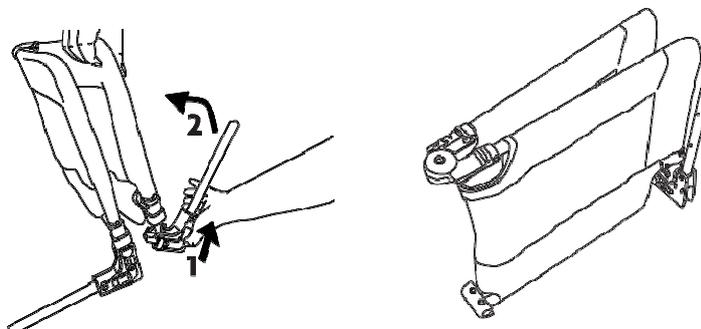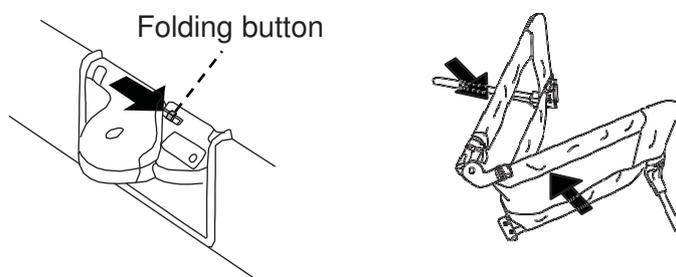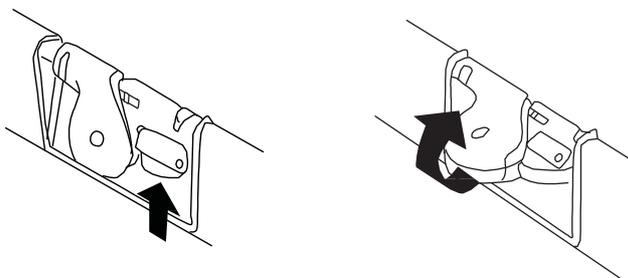

## Care & Maintenance

- Fabric composition: 100% Polyester.
- Do not remove the cover from frame.
- Clean with mild soap damp sponge.
- Cold water rinse and air dry.
- Never clean with abrasives, ammonia based, bleach based or spirit type cleaners.
- Make sure it is dry and clean storing.

**ARGOS LTD**  
**489-499 Avebury Boulevard.**  
**Central Milton Keynes MK9 2 NW.**

Please keep all the relevant information for future reference.