

RapidSterilise™

by Nuby

UV steriliser



PRODUCT WARNINGS:

- This is not a toy. Adult use only.
- This appliance is for domestic use only.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.
- This appliance uses ultraviolet light, which may harm your eyes and skin. Please avoid staring at the light source while the product is in operation.
- This appliance is equipped with sensors that reduces the risk of excessive ultraviolet radiation. Please do not tamper with its functionality or attempt self-repair.
- Do not expose/submerge the appliance to water and other liquids.
- Do not open, crush or expose the appliance to fire or excessive temperature. Exposure to fire or temperature above 212° F (100° C) may cause an explosion.
- If smoke comes from the appliance, disconnect charger, isolate the appliance and contact customer support as soon as possible.
- Please charge the appliance if it has not been used for more than 3 months.
- Do not attempt to disassemble, repair or modify the appliance - doing so voids your warranty.

CLEANING AND MAINTENANCE:

Wipe clean with a damp cloth only and leave open to dry. Do not soak or submerge in liquid. Do not use bleach or harsh cleaning agents.

USER INSTRUCTIONS:

1. Always clean before use.
2. Remove the two lids of this steriliser separately, then open the lid of the "RapidCool" flask.
3. Insert the RapidCool lid into the **lid sterilisation chamber**, ensuring the edge of the lid presses against sensor 1.
4. Cover the neck of the RapidCool flask with the **flask sterilisation chamber**, so that it encloses the neck of the flask. The neck of the flask should be placed in the middle of sensor 2.
5. Press the button, the blue light will flash and sterilisation will start.
6. The steriliser will auto shut-off after 1 minute of sterilisation, you can also press the button again to shut down immediately.
7. When the lid or flask is removed whilst working, the corresponding sterilisation chamber will automatically shut off. Placing the lid or flask back will resume sterilising of the corresponding chamber. If the lid and flask are not detected for more than 3 minutes, the steriliser will stop working.



TROUBLE SHOOTING GUIDE

When the indicator light flashes and stays on, it means the RapidCool has not been detected in both sterilisation chambers. Please re position RapidCool or press the button to switch off. Ensure steriliser chambers are inserted in the correct way. See product drawings for reference.

INDICATOR

- While Working**
- Blue light flashes : Sterilising
 - Red light quickly flashes then off : Needs charging
 - Blue light quickly flashes then stays on : No item detected for sterilising


- While Charging**
- Red light : Charging
 - Blue light : Sterilising
 - Blue light stays on : Fully charged

This steriliser will work whilst charging.

CONTENTS:

- 1 x UV steriliser
- 1 x USB cable

YOUR RAPIDSTERILISE

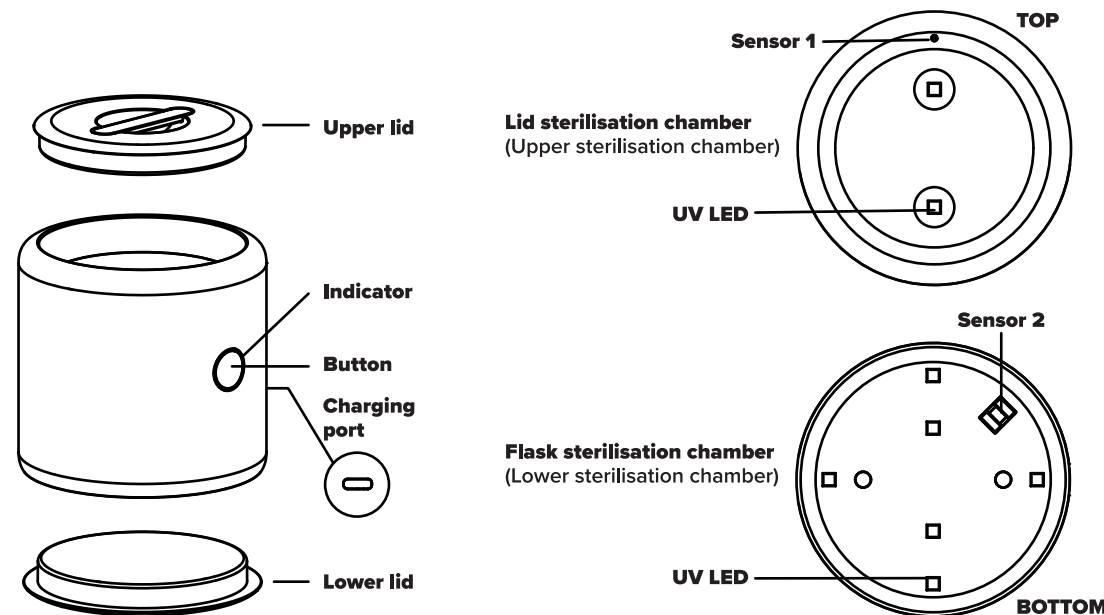

INTRODUCTION

The Nuby RapidSterilise combines the latest technology with style and portability. Using highly specialised LED bulbs, the UV steriliser destroys microorganism DNA and prevents any further growth. The compact size and portability is perfect for on-the-go feeding, and with a 1 minute cycle is quick and effective. As it uses light and not steam to sterilise, there's also no risk of burning, making it a safer alternative to traditional steam sterilisation.

This product is designed for the sterilisation of the RapidCool only.

FEATURES:

- Rapid Sterilisation process; **1 minute cycle**
- Small and portable sterilisation
- Rechargeable; **last up to 70 cycles**
- No water, no chemicals, no microwave required

PRODUCT SPECIFICATION:

Item number	30205
UVC Wavelength	260-280 NM
Input	5V/1A
Working Temperature	0 - 40 degrees C
Battery	700 mAh
Size	78*78mm
Charging Port	USB Type - C
Material	ABS, Silica - Gel
N.Weight (product+USB only)	185 G

WARRANTY

Nuby's "RapidSterilise UV steriliser" includes a one-year limited warranty against defects from the date of purchase. In the event of a malfunction or defect during the in-warranty period, Talbot's UK, at its discretion, will replace or repair the product under warranty. Upon receipt of the product and the proof of purchase with a valid date of purchase, the defective part will be immediately repaired or replaced and returned to you free of charge. Please send defective unit, proof of purchase with valid date of purchase, and a description of the problem you have encountered to:

Talbot's UK LLP, 13 Burford Way, Boldon Business Park,
Boldon Colliery, Newcastle upon Tyne, NE35 9PZ

NOTE: No warranty extends to any problem that is caused by conditions, malfunctions, or damage not resulting from defects in material or workmanship.

Freephone Number: 0800 334 5844
enquiries-uk@drtalbots.com
www.nuby.com



Design and specifications are subject to change without prior notice.